


# Dodge Dakota 1991 – 1996 fuse box diagram

## Passenger Compartment Fuse Box

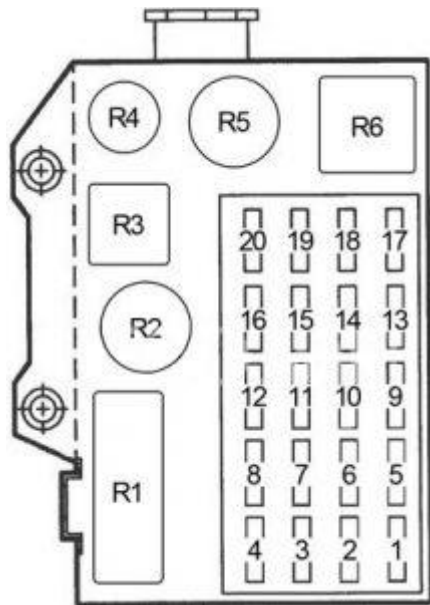

Dodge Dakota – fuse box diagram – passenger

compartment

| No. | A  | Protected Component                                                                                                                                        |
|-----|----|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | 30 | Blower Motor                                                                                                                                               |
| 2   | 30 | <i>Circuit Breaker:</i> Power Window                                                                                                                       |
| 3   | 15 | Airbag Control Module, Overhead Console, Automatic Day/Night Mirror, Back-Up Lamp Switch, Powertrain Control Module (2.5 L.), Park/Neutral Position Switch |
| 4   | 5  | ABS Warning Lamp Relay (ABS Control Module, ABS Power Relay)                                                                                               |
| 5   | 20 | Door Lock Switch                                                                                                                                           |
| 6   | 20 | Radio Choke Relay, Horn Relay, Instrument Cluster                                                                                                          |

|       |    |                                                                                                                                |
|-------|----|--------------------------------------------------------------------------------------------------------------------------------|
| 7     | 10 | Combination Buzzer, Stop Lamp Switch, Rear Wheel Anti-Lock Control Module                                                      |
| 8     | 20 | Headlamp Switch                                                                                                                |
| 9     | 15 | Cigar Lighter                                                                                                                  |
| 10    | 20 | Intermittent Wiper Control Module, Wiper Switch, Windshield Wiper Motor                                                        |
| 11    | 20 | Rear Wheel Anti-Lock Control Module, Turn Signal Flasher                                                                       |
| 12    | 10 | Radio                                                                                                                          |
| 13    | 4  | Instrument Cluster, Transmission Overdrive Switch, Overhead Console, Radio, Cigar Lighter Lamp, ASH Raceiver Lamp, HVAC Switch |
| 14    | 15 | Instrument Cluster, Airbag Control Module                                                                                      |
| 15    | 2  | Vehicle Speed Control Switch                                                                                                   |
| 16    | 5  | Combination Buzzer, 4WD Indicator Lamp, Transmission Oil Temperature Lamp, Transmission Overdrive Switch                       |
| 17    | –  | –                                                                                                                              |
| 18    | –  | –                                                                                                                              |
| 19    | –  | –                                                                                                                              |
| 20    | 25 | Off-Road Lamp Switch, Park Lamp Relay                                                                                          |
| Relay |    |                                                                                                                                |

|    |                     |
|----|---------------------|
| R1 | Combination Buzzer  |
| R2 | Hazard Flasher      |
| R3 | Horn                |
| R4 | Time Delay          |
| R5 | Turn Signal Flasher |
| R6 | ABS Warning Lamp    |

#### Engine Compartment Fuse Box



Dodge Dakota – fuse box diagram –

#### engine compartment

| No. | A  | Protected Component                                                                       |
|-----|----|-------------------------------------------------------------------------------------------|
| F1  | 20 | Hazard Flasher                                                                            |
| F2  | 5  | Time Delay Relay, Underhood Lamp                                                          |
| A   | 40 | ABS Power Relay                                                                           |
| B   | 30 | Starter Relay, Radiator Fan Control Relay (2.5L), Air Conditioner Compressor Clutch Relay |

|       |                                   |                                                                                                                                                                                                                                                 |
|-------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| C     | 40                                | Ignition Switch (Fuse (Passenger Compartment): "14", "15", "15")                                                                                                                                                                                |
| D     | 30                                | Auto Shut Down Relay, Powertrain Control Module, Fuel Pump Relay (3.9L, 5.7L)                                                                                                                                                                   |
| E     | 50                                | Ignition Switch (Fuse (Passenger Compartment): "1", "2", "3", "4"), Clutch Pedal Position Switch, Fuel Pump Relay (3.9L, 5.7L), Auto Shut Down Relay, Radiator Fan Control Relay (2.5L), Air Conditioner Compressor Clutch Relay, Starter Relay |
| F     | 20                                | Fuse: "F2"                                                                                                                                                                                                                                      |
| G     | 50                                | Headlamp Switch, Fuse (Passenger Compartment): "5", "6", "7", "8", "20"                                                                                                                                                                         |
| H     | –                                 | –                                                                                                                                                                                                                                               |
| Relay |                                   |                                                                                                                                                                                                                                                 |
| R1    | Starter                           |                                                                                                                                                                                                                                                 |
| R2    | Air Conditioner Compressor Clutch |                                                                                                                                                                                                                                                 |
| R3    | Auto Shut Down                    |                                                                                                                                                                                                                                                 |
| R4    | 2.5 L: Radiator Fan Control       |                                                                                                                                                                                                                                                 |
| R5    | 3.9 L, 5.2 L: Fuel Pump           |                                                                                                                                                                                                                                                 |
| R6    | ABS Power                         |                                                                                                                                                                                                                                                 |