


Power Outlet (115V)

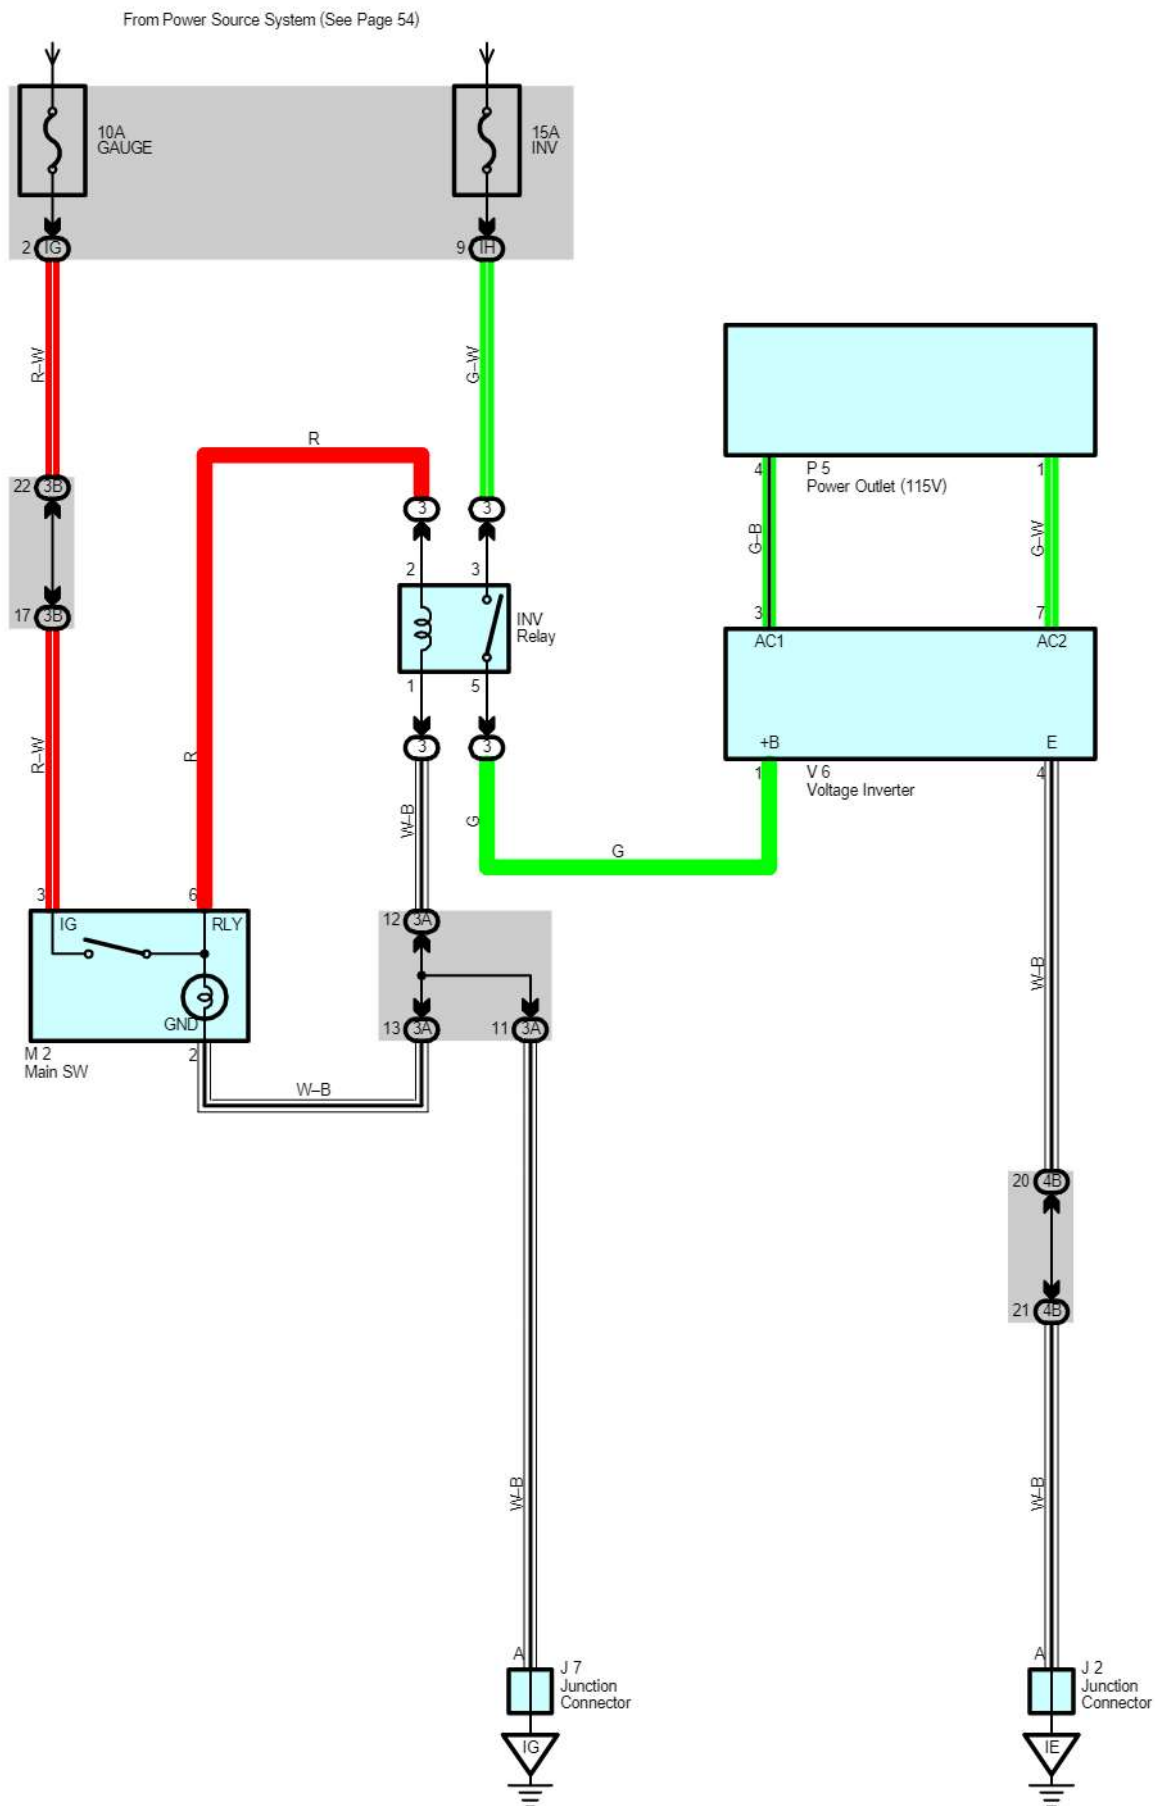

Service Hints

INV Relay

3-5 : Closed with ignition SW at ON position and Main SW at on

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J2	39	M2	39	V6	39
J7	39	P5	39		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	28	RH R/B (Right Side of the Instrument Panel Reinforcement)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

: Ground Points

Code	See Page	Ground Points Location
IE	46	Behind Combination Meter
IG	46	Right Kick Panel