


Oldsmobile Cutlass 1978 – 1981 fuse box diagram

Fuse box diagram

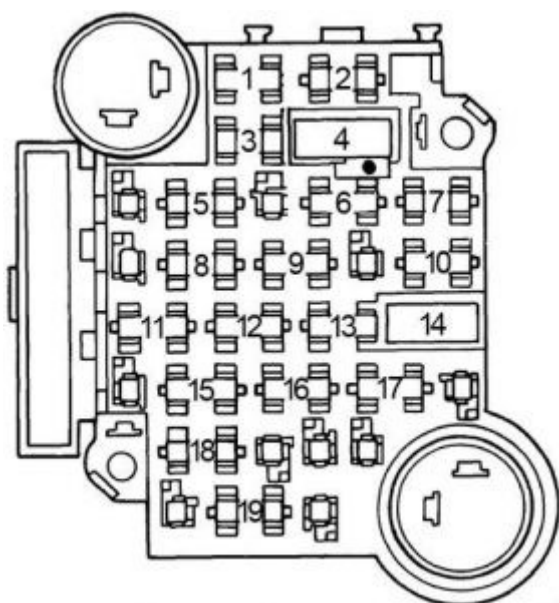

Oldsmobile Cutlass – fuse box diagram

No.	A	Circuit Protected
1	5	Instrument panel lights
2	20	Choke heater
3	—	—
4	30	Circuit breaker: Power sun roof, power windows and power tailgate (wagon)
5	—	—
6	25	Air conditioning, heater, trunk and tailgate release
7	—	—
8	5	Diesel controls
	10	Glow plugs
9	25	Windshield wiper/washer and intermittent wiper/washer
10	20	Stop and hazard warning lights
11	20	Computer command control, rear window detogger, gauges, warning indicators, reminder package, seat belt warning, cruise control, torque converter clutch and brake warning indicator
12	20	Front parking and marker lights, rear parking and marker lights, license light, engine compartment light, reminder package, glove box, stop and turn signal lights
13	10	Radio and tape player
14	30	Circuit breaker: Power door locks, seats and rear window defogger
15	20	Turn signal and backup lights
16	20	Clock, key warning, power antenna, reminder package, cigar lighter and radio
17	20	Courtesy lights, power door locks, radio capacitor, clock
18	—	—

Circuit Breaker:

- Headlights — Circuit breaker is located in headlight switch.
- Windshield Wipers — Circuit breaker is located in wiper motor.

Fusible Links:

- All Models – Two fusible links are located at the starter solenoid terminal to protect the electrical system.