


Mercury Sable 2008 – 2009 fuse box diagram

Passenger compartment fuse panel

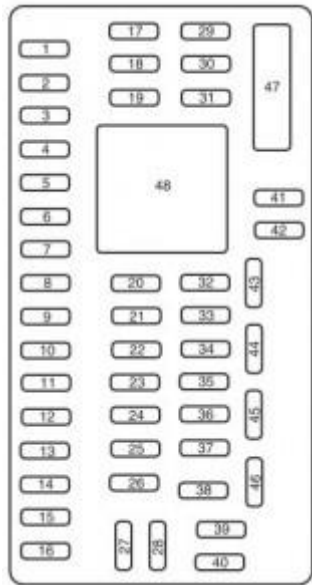

Mercury Sable 5th Generation – fuse box – instrument panel

The fuse panel is located under the instrument panel to the left of the steering wheel.

Fuse/relay	Ampere rating [A]	Description

1	30	Smart window motor
2	15	Brake on/off switch, High-mounted brake lamp
3	15	SDARS, Bluetooth, Family entertainment system (FES)/Rear seat control
4	30	Spare
5	10	SPDJB logic power
6	20	Turn signals
7	10	Low beam headlamps (left)
8	10	Low beam headlamps (right)
9	15	Interior lights, Cargo lamps

10	15	Backlighting, Puddle lamps
11	10	All wheel drive
12	7,5	Memory seat/mirror switches, Memory module
13	5	FEPS module
14	10	Analog clock
15	10	Climate control
16	15	Spare
17	20	All power lock motor feeds, Decklid release
18	20	Spare


19	25	Moon roof
20	15	OBDII connector
21	15	Fog lamps
22	15	Park lamps, License lamps
23	15	High beam headlamps
24	20	Horn relay
25	10	Demand lamps/Interior lamps
26	10	Instrument panel cluster
27	20	Adjustable pedal switch

28	5	Radio, Radio start signal
29	5	Instrument panel cluster
30	5	Overdrive cancel switch
31	10	Compass, Automatic dimming rear view mirror
32	10	Restraint control module
33	10	Spare
34	5	AWD module
35	10	Steering rotation sensor, FEPS, Rear park assist, Heated seat modules
36	5	PATS module

37	10	Climate control
38	20	Subwoofer (Audiophile radio)
39	20	Radio
40	20	Spare
41	15	Mic mirror, Moon roof, Front lock switches, Radio
42	10	Spare
43	10	Spare
44	10	Spare
45	5	Relay coils: PDB, Auxiliary A/C, Front and rear wipers, Front blower motor

46	5	Occupant Classification Sensor (OCS), Passenger Airbag Deactivation Indicator (PADI)
47	30 Circuit Breaker	Power windows
48	—	Delayed accessory relay

Power distribution box

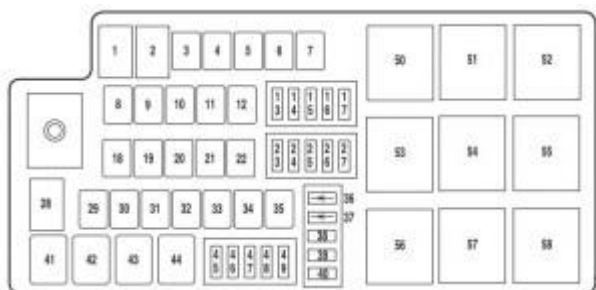

Mercury Sable 5th Generation – fuse box – power distribution box

The power distribution box is located in the engine compartment

Fuse/relay	Ampere rating [A]	description

1	80*	SPDJB power
2	80*	SPDJB power
3	30*	Front wipers
4	—	Not used
5	20	Spare
6	—	Not used
7	50*	Engine cooling fan
8	—	Not used
9	40*	Anti-lock Brake System (ABS)/AdvanceTrac pump

10	30*	Starter
11	50*	Powertrain Control Module (PCM) relay
12	20*	ABS/AdvanceTrac valve
13	20**	Power point (instrument panel)
14	20**	Power point (2nd row)
15	20	Spare
16	20**	Power point (console)
17	10**	Alternator
18	—	Not used

19	—	Not used
20	40*	Rear defroster
21	30*	Power seat motors (passenger)
22	20*	Heated seat module
23	10*	PCM Keep alive power, Canister vent
24	10**	A/C clutch relay
25	25	Spare
26	20**	Backup relay
27	15**	Fuel relay (Fuel pump driver module, Fuel pump)

28	—	Not used
29	30	Spare
30	—	Not used
31	30*	Spare
32	30*	Driver seat motors, Memory module
33	20*	Ignition switch (to SJB)
34	—	Not used
35	40*	Front A/C blower motor
36	1A Diode	One-touch start

37	1A Diode	Fuel pump
38	10**	IVD, Yaw rate sensor
39	10**	Fuel diode, PCM
40	—	Not used
41	G8VA relay	A/C clutch
42	G8VA relay	Fuel pump
43	G8VA relay	Backup
44	—	Not used
45	10**	Speed control deactivate switch, Mass air flow sensor, Inline module VPWR2

46	10**	A/C clutch relay, VPWR3
47	15**	PCM VPWR1
48	15**	PCM VPWR4
49	15**	Heated mirrors
50	Full ISO relay	PCM relay
51	—	Not used
52	—	Not used
53	Full ISO relay	Rear defrost relay
54	Full ISO relay	Blower motor relay

55	Full ISO relay	Starter relay
56	—	Not used
57	Full ISO relay	Front wiper relay
58	—	Not used
* Cartridge Fuses ** Mini Fuses		