


Chevrolet Monte Carlo 2001 – 2003 fuse box diagram

Driver's Side Instrument Panel Fuse Block

Some fuses are in a fuse block on the driver's side of the instrument panel.

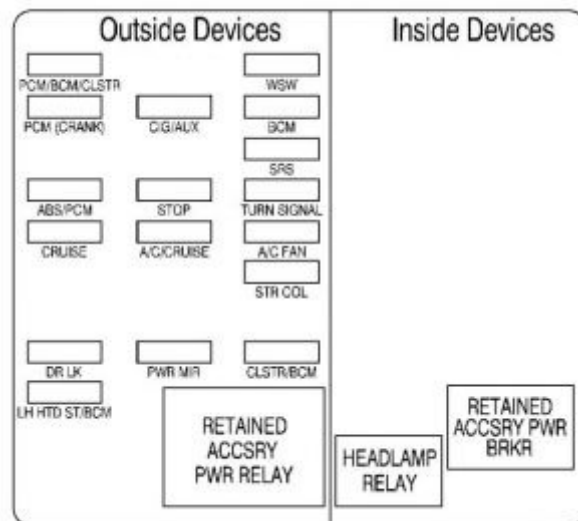


Chevrolet Monte Carlo – fuse box – driver's side instrument panel

Circuit Breaker		Description
RETAINED ACCESSORY PWR RELAY		Power Window, Sunroof Breaker
HEADLAMP RELAY		Headlamp Relay
RETAINED ACCESSORY PWR BRKR		Power Window, Sunroof Breaker
Mini Fuse	Description	
PCM/BCM/CLS TR	Powertrain Control Module, Body Control Module, Cluster (Ignition 0)	
WSW	Windshield Wipers, Windshield Washer	
PCM (CRANK)	Powertrain Control Module (Crank)	
CIG/AUX	Accommodated Device (Accessory)	
BCM	Body Control Module (Accessory)	
SRS	Supplemental Restraint System	
ABS/PCM	Anti-Lock Brake System, Powertrain Control Module, Brake Switch, Crank Relay, Canister Vent Solenoid (Run, Crank)	
STOP	Brake Lamps, Body Control Module (Run, Crank)	

TURN SIGNAL	Turn Signal Flashers
CRUISE	Cruise Control Steering Column Controls
A/C/CRUISE	HVAC Temp Door Motors & Module, Cruise Control Module
A/C FAN	HVAC Blower
STR COL	Steering Wheel Lighting
DR LK	Body Control Module, Door Lock Controls
PWR MIR	Power Mirrors
CLSTR/BCM	Cluster, Body Control Module, Data Link Connector (Battery)
LH HTD ST/BCM	Driver's Heated Seat, Body Control Module, Battery Controlled Loads

Passenger's Side Instrument Panel Fuse Block

Some fuses are in a fuse block on the passenger's side of the instrument panel.

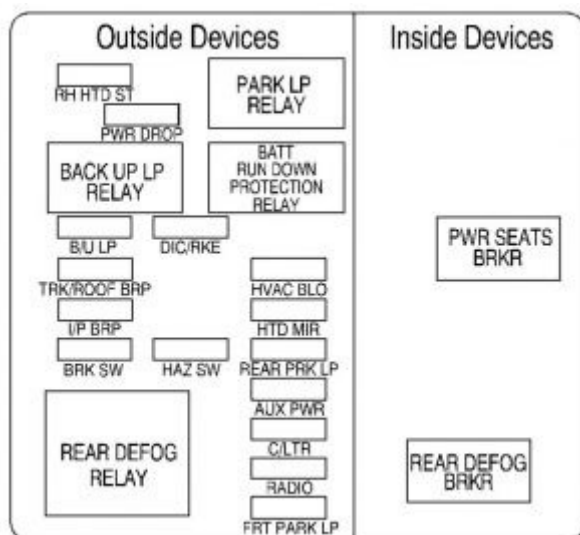

Chevrolet Monte Carlo – fuse box – passenger's side

instrument panel

Circuit Relay	Description
PARK LP RELAY	Parking Lamp Relay


BACKUP LP RELAY	Back-up Lamps Relay
BATT RUN DOWN PROTECTION RELAY	Battery Run Down Protection Relay
REAR DEFOG RELAY	Rear Defog Relay, Heated Mirror Relay

Circuit Breaker	Description
POWER SEATS BRKR	Power Seat Circuit Breaker
REAR DEFOG BRKR	Rear Defog Breaker

Mini Fuse	Description
RH HTD ST	Passenger Heated Seat
PWR DROP	Accommodated Device
B/U LP	Back-Up Lamps
DIC/RKE	Driver Information Center, Remote Keyless Entry, HVAC
TRK/ROOF BRP	Trunk Lamps, Headliner Lamps
HVAC BLO	HVAC Blower Relay
I/P BRP	Instrument Panel Footwell Lamps, Glovebox Lamps
HTD MIR	Heated Mirrors
BRK SW	Brake Switch
HAZ SW	Hazard Switch
REAR PRK LP	Rear Parking Lamps
AUX PWR	Accessory Power Outlet (Battery)
C/LTR	Cigarette Lighter
RADIO	Radio, Radio Amplifier
FRT PARK LP	Front Parking Lamps, Instrumentation Lighting

Underhood Fuse Block (Upper)

Some fuses are in a fuse block on the passenger's side of the engine compartment.

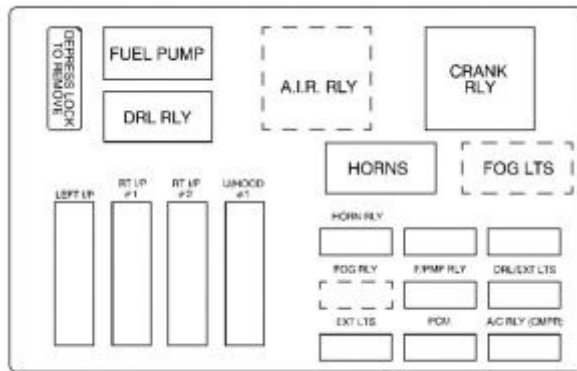

Chevrolet Monte Carlo – fuse box – underhood

fuse block (upper)

Circuit Relay	Usage
FUEL PUMP	Fuel Pump
DRL RELAY	Daytime Running Lamps
A.I.R. RELAY	Air Induction Reaction Relay
CRANK RLY	Starter (Crank) Relay
HORNS	Horn
FOG LTS	Fog Lamps


Maxi Fuses	Description
LEFT I/P	Left Bussed Electrical Center (Battery)
RT I/P #1	Right Bussed Electrical Center (Battery)
RT I/P #2	Right Bussed Electrical Center (Battery)
U/HOOD #1	Underhood (Top) Electrical Center

Mini Fuses	Description
HORN RLY	Horn Relay
BLANK	Blank
BLANK	Blank
FOG RLY	Fog Lamp Relay
F/PMP RLY	Fuel Pump Relay
DRL/EXIT LTS	Low (Left Front) & High (Left Front) Headlamps

EXT LTS	Low (Right Front) & High (Right Front) Headlamps
PCM	PCM Battery
A/C RLY (CMPR)	HVAC Compressor Relay & Generator

Underhood Fuse Block (Lower)

Some fuses are in a fuse block on the passenger's side of the engine compartment.

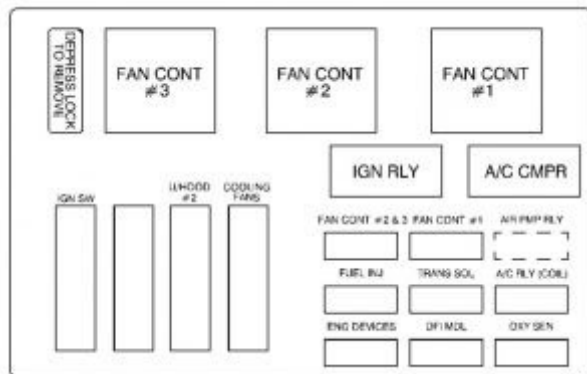

Chevrolet Monte Carlo – fuse box – underhood

fuse block (lower)

Circuit Relay	Usage
FAN CONT #3	Secondary Cooling Fan (Passenger's Side)
FAN CONT #2	Cooling Fan Control Relay
FAN CONT #1	Primary Cooling Fan (Driver's Side)
IGN RELAY	Ignition Relay
A/C CMPR	HVAC Compressor
Maxi Fuses	Usage
IGN SW	Ignition Switch
BLANK	Blank
U/HOOD #2	Ignition Relay, AIR Pump
COOLING FANS	Cooling Fans (Battery)

Mini Fuses	Usage
FAN CONT #2 & #3	Cooling Fan Control Relays #2 & #3
FAN CONT #1	Cooling Fan Control Relays #1

AIR PMP RLY	Air Induction Reaction Pump Relay (Battery)
FUEL INJ	Fuel Injectors
TRANS SOL	Transmission Solenoids
A/C RLY (COIL)	HVAC Control Relay
ENG DEVICES	Canister Purge Solenoid, Mass Air Flow Sensor (MAF), AIR Pump Relay & Valve Control
DFI MDL	Direct Fire Ignition Module
OXY SEN	Oxygen Sensors (Pre and Post Converter)