

WHEEL AND TIRE SYSTEM INSPECTION


28009-02

1. INSPECT TIRE

- (a) Check the tires for wear and proper inflation pressure.

Cold tire inflation pressure:


Tire size	Front, Rear kPa (kgf/cm ² , psi)
P205/65R15 92T P205/65R15 92H 205/65R15 94V P215/60R16 94V	200 (2.0, 29)

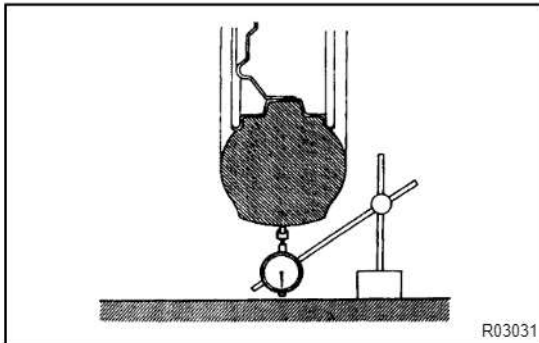

R03031

- (b) Using a dial indicator, check the tire runout.

Tire runout: 1.0 mm (0.039 in.) or less

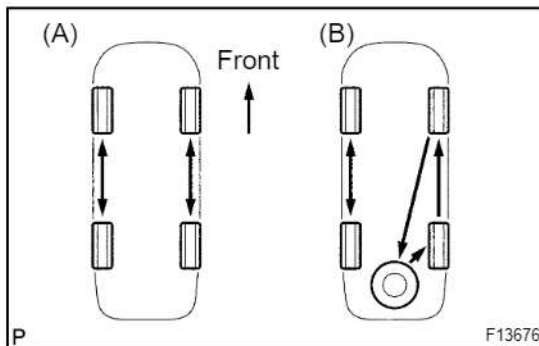


F13676

2. ROTATE TIRE

HINT:

- Rotate tires as shown in the illustration.
- Rotate as shown in (B) if the spare tire is included in the rotation.

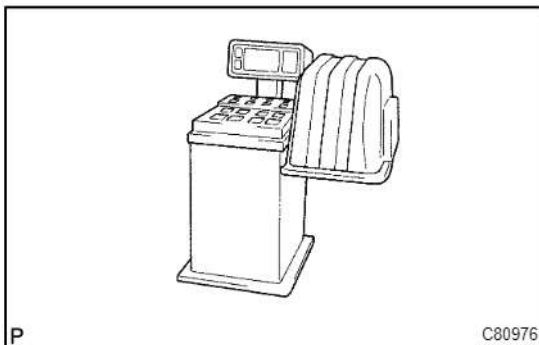

C80976

3. INSPECT WHEEL BALANCE

- (a) Check and adjust the Off-the-car balance.
(b) If necessary, check and adjust the On-the-car balance.

Imbalance after adjustment: 8.0 g (0.018 lb) or less

4. INSPECT BEARING BACKLASH(See page 30-2)
5. INSPECT BEARING BACKLASH(See page 30-2)
6. INSPECT AXLE HUB DEVIATION(See page 30-2)
7. INSPECT AXLE HUB DEVIATION(See page 30-2)