


# Chevrolet Corvette C6 2005 – 2013 fuse box diagram

## Instrument panel fuse block

The instrument panel fuse block is located on the passenger side of the vehicle, under the instrument panel and under the toe-board.

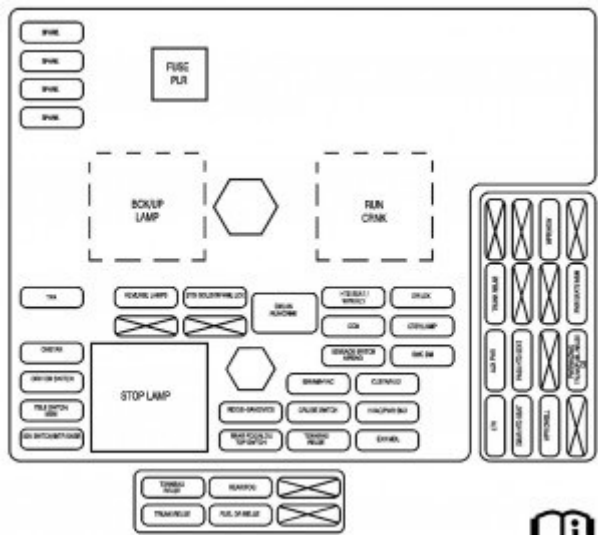

Chevrolet Corvette C6 -fuse box – instrument


panel

| Fuses                   | Usage                                                                          |
|-------------------------|--------------------------------------------------------------------------------|
| SPARE                   | Spare Fuse                                                                     |
| SPARE                   | Spare Fuse                                                                     |
| SPARE                   | Spare Fuse                                                                     |
| SPARE                   | Spare Fuse                                                                     |
| TPA                     | Tonneau Pulldown Actuator                                                      |
| ONSTAR                  | OnStar®                                                                        |
| DRIV DR SWITCH          | Driver Door Switch                                                             |
| TELE SWCH/MSM           | Telescope Switch, Memory Seat Module                                           |
| IGN SWCH/ INTR SNSR     | Ignition Switch, Intrusion Sensor                                              |
| BCK/UP LAMP             | Reverse Lamps                                                                  |
| REVERSE LAMPS           | Reverse Lamps                                                                  |
| Blank                   | Not Used                                                                       |
| STOP LAMP               | Stop Lamp                                                                      |
| BTSI SOL/STR WHL LCK    | Brake Transmission Shift Interlock, Steering Wheel Column Lock                 |
| BLANK                   | Not Used                                                                       |
| RDO/S-BAND/ VICS        | Radio, S-Band, VICS                                                            |
| REAR FOG/ ALDL/TOP SWCH | Rear Fog Lamp, Assembly Line Diagnostic Link Connector, Convertible Top Switch |
| GM LAN RUN/CRNK         | GM LAN Devices                                                                 |

|                                 |                                                                          |
|---------------------------------|--------------------------------------------------------------------------|
| ISRVM/ HVAC                     | Electric Inside Rearview Mirror, Heating Ventilation, Air Conditioning   |
| CRUISE SWTCH                    | Cruise Control Switch                                                    |
| TONNEAU RELSE                   | Tonneau Release                                                          |
| RUN CRNK                        | Run/Crank Relay                                                          |
| HTD SEAT/ WPR RLY               | Heated Seat, Wiper Relays                                                |
| ECM                             | Engine Control Module                                                    |
| SDM/AOS SWTCH AIRBAG            | Sensing and Diagnostic Module, Automatic Occupant Sensing Module, Airbag |
| CLSTR/HUD                       | Cluster, Heads-Up Display                                                |
| HVAC/ PWR SND                   | Heating, Ventilation/Air Conditioning, Power Sounder                     |
| EXH MDL                         | Exhaust Module (Z06); Spare (Coupe and Convertible)                      |
| DR LCK                          | Door Locks                                                               |
| CTSY/LAMP                       | Courtesy Lamp                                                            |
| SWC DM                          | Steering Wheel Dimming                                                   |
| TONNEAU RELSE                   | Tonneau Release                                                          |
| TRUNK RELSE                     | Trunk Release                                                            |
| REAR/FOG                        | Rear Fog Lamps                                                           |
| FUEL DR RELSE                   | Fuel Door Release                                                        |
| BLANK                           | Not Used                                                                 |
| BLANK                           | Not Used                                                                 |
| LTR                             | Cigarette Lighter                                                        |
| DRVR HTD SEAT                   | Driver Heated Seat                                                       |
| WPR DWELL                       | Wiper Dwell                                                              |
| BLANK                           | Not Used                                                                 |
| AUX PWR                         | Auxiliary Power                                                          |
| PASS HTD SEAT                   | Passenger Heated Seat                                                    |
| BLANK                           | Not Used                                                                 |
| PWR/ WNDWS/<br>TRUNK/FUEL RELSE | Power Windows, Trunk, Fuel Door Release                                  |
| TRUNK RELSE                     | Trunk Release                                                            |
| BLANK                           | Not Used                                                                 |
| BLANK                           | Not Used                                                                 |
| PWR SEATS MSM                   | Power Seats, Memory Seat Module                                          |
| BLANK                           | Not Used                                                                 |
| BLANK                           | Not Used                                                                 |
| WPR/WSW                         | Windshield Wiper/Washer                                                  |
| BLANK                           | Not Used                                                                 |

Engine compartment fuse block

Fuse block k in the engine compartment located on the passenger side of the vehicle.

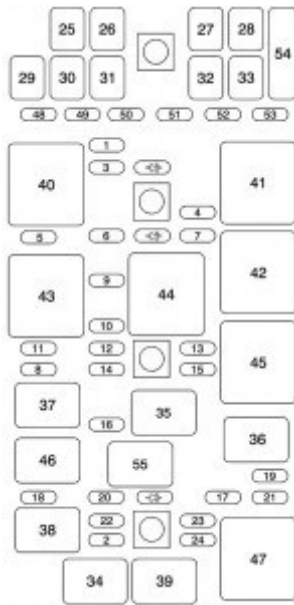

Chevrolet Corvette C6 – fuse box – engine compartment

| Fuse | Usage                                                             |
|------|-------------------------------------------------------------------|
| 1    | Transmission Control Module/ Transmission                         |
| 2    | Horn, Alternator Sense                                            |
| 3    | Antilock Brakes/Real Time Damping                                 |
| 4    | Wiper                                                             |
| 5    | Stoplamps/Back-Up Lamps                                           |
| 6    | O2 Sensor                                                         |
| 7    | Battery Main 5                                                    |
| 8    | Park Lamps                                                        |
| 9    | Powertrain Relay Input/Electronic Throttle Control                |
| 10   | Manual Transmission Solenoids                                     |
| 11   | Engine Control Module/Transmission Control Module/Easy Key Module |
| 12   | Odd Numbered Fuel Injectors                                       |
| 13   | Electronic Suspension Control (Option)                            |
| 14   | Canister Purge Solenoid, Mass Air Flow Sensor                     |
| 15   | Air Conditioner Compressor                                        |
| 16   | Even Numbered Fuel Injectors                                      |
| 17   | Windshield Washer                                                 |
| 18   | Headlamp Washer                                                   |
| 19   | Passenger Side Low-Beam Headlamp                                  |
| 20   | Fuel Pump                                                         |
| 21   | Driver Side Low-Beam Headlamp                                     |
| 22   | Front Fog Lamp                                                    |
| 23   | Passenger Side High-Beam Headlamp                                 |
| 24   | Driver Side High-Beam Headlamp                                    |

| J-Style fuses | Usage                                       |
|---------------|---------------------------------------------|
| 25            | Cooling Fan                                 |
| 26            | Battery Main 3                              |
| 27            | Antilock Brake System                       |
| 28            | Heating/Ventilation/Air Conditioning Blower |
| 29            | Battery Main 2                              |
| 30            | Starter                                     |
| 31            | Audio Amplifier                             |
| 32            | Blank                                       |
| 33            | Battery Main 1                              |

| Micro-Relays | Usage                       |
|--------------|-----------------------------|
| 34           | Horn                        |
| 35           | Air Conditioning Compressor |
| 36           | Windshield Washer           |
| 37           | Park, Position Lamps        |
| 38           | Front Fog Lamp              |
| 39           | High-Beam Headlamp          |
| 46           | Headlamp Washer             |
| 55           | Fuel Pump                   |

| Mini-Relays | Usage                          |
|-------------|--------------------------------|
| 40          | Rear Defog                     |
| 41          | Windshield Wiper High/Low      |
| 42          | Windshield Wiper Run/Accessory |
| 43          | Crank                          |
| 44          | Powertrain Ignition 1          |
| 45          | Windshield Wiper On/Of         |
| 47          | Low-Beam Headlamp              |

| Spare Fuses | Usage |
|-------------|-------|
| 48          | Spare |
| 49          | Spare |
| 50          | Spare |
| 51          | Spare |
| 52          | Spare |

|    |             |
|----|-------------|
| 53 | Spare       |
| 54 | Fuse Puller |

|                                                                                   |         |
|-----------------------------------------------------------------------------------|---------|
| Diodes                                                                            | Usage   |
|  | Diode 1 |
|  | Wiper   |
|  | Diode 2 |