


Dodge Dakota 1997 – 2000 fuse box diagram

Passenger Compartment Fuse Box

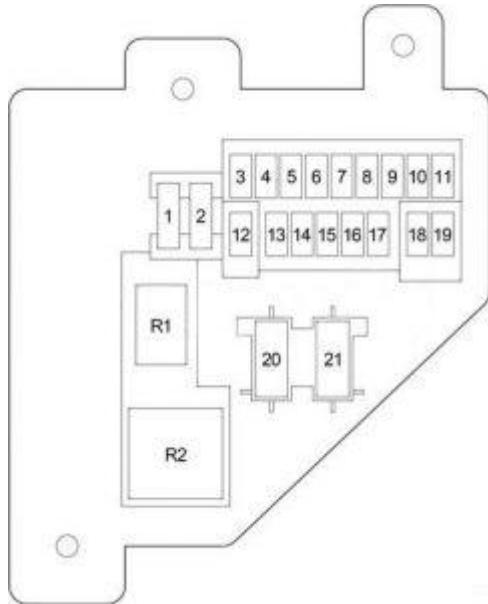


Dodge Dakota – fuse box diagram – passenger compartment

No.	A	Protected Component
1	20	Headlamp Flasher Relay, Air Conditioner Compressor Clutch Relay, Horn Relay, Central Timer Module (VTSS)
2	15	Park/Neutral Position Switch (Automatic Transmission), Back-Up Lamp Switch (Manual Transmission)
3	10	ABS
4	15	Instrument Cluster
5	5	A/C Heater Control, Heater Control (except A/C), Ash Receiver Lamp, Radio, Instrument Cluster
6	20	Wiper Relay, Multi-Function Switch, Central Timer Module, Wiper Motor

7	15	Blower Motor Relay, Air Conditioner Compressor Clutch Relay
8	10	Radio
9	10	Diesel: Engine Control Module, Fuel Heater Relay
	10	Gasoline: Powertrain Control Module, Fuel Pump Relay, Automatic Shut Down Relay, Radiator Fan Relay
10	15	Combination Flasher
11	10	EVAP/Purge Solenoid, Overhead Console, Central Timer Module
12	15	Glove Box Lamp, Radio, Data Link Connector, Underhood Lamp/Switch, Dome Lamp, Overhead Console, Power Mirror Switch
13	20	Central Timer Switch, Power Window/Door Lock Switch
14	15	Headlamp Switch (City Lamp, Tail/Stop Lamp, License Lamp, A/C Heater Control, Heater Control (except A/C), Ash Receiver Lamp, Radio, Instrument Cluster)
15	15	Cigar Lighter
16	–	–
17	10	Instrument Cluster
18	10	Airbag Control Module
19	10	Airbag Control Module, Passenger Airbag On/Off Switch

Circuit Breaker		
20	25	Power Window/Door Lock Switch
21	–	–
Relay		
R1	Horn	
R2	Combination Flasher	

Engine Compartment Fuse Box

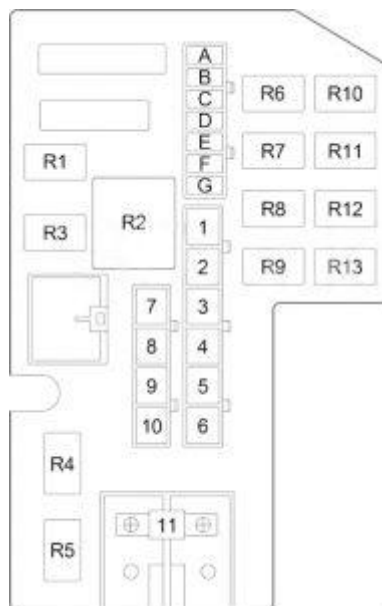

Dodge Dakota – fuse box diagram – engine

compartment


No.	A	Protected Component
A	25	Diesel: Air Conditioner Compressor Clutch Relay, Engine Control Module, Powertrain Control Module, Electric Vacuum Modulator
	15	Gasoline: Oxygen Sensor

B	15	Left Headlamp
C	20	Fog Lamp Relay
D	25	Combination Flasher
E	20	Stop Lamp Switch
F	10	Diesel: Automatic Shut Down Relay, Powertrain Control Module
	20	Gasoline: Transmission Control Relay
G	15	Right Headlamp
1	50	Diesel: Fuel Heater Relay
	20	Gasoline: Powertrain Control Module, Fuel Pump Relay
2	20	Diesel: Power Outlet
	30	Gasoline: Radiator Fan Relay
3	50	Diesel: Automatic Shut Down Relay (Fuel Injection Pump, Glow Plug Relay, Fuse: "A")
	30	Gasoline: Automatic Shut Down Relay (Fuel Injector, Ignition Coil, Powertrain Control Module, Fuse: "A")
4	50	Diesel: Glow Plug Relay
	20	Gasoline: Power Outlet

5	40	Blower Motor Relay
6	50	Diesel: Glow Plug Relay
7	50	Fuse (Passenger Compartment): "1", "4", "12", "13", "14", "21"
8	30	ABS
9	40	Starter Relay, Ignition Switch (Fuse (Passenger Compartment): "2", "3", "7", "18", "20"), Radiator Fan Relay, Fuel Pump Relay, Automatic Shut Down Relay
10	40	Ignition Switch (Starter Relay, Fuse (Passenger Compartment): "6", "8", "9", "10", "11", "15", "16", "17", "19")
11	14 0	Generator
Relay		
R1	Wiper	
R2	Blower Motor	
R3	Starter	
R4	–	
R5	Fog Lamp	
R6	–	
R7	Gasoline: Transmission Control	

R8	Air Conditioner Compressor Clutch
R9	Automatic Shut Down
R10	–
R11	Gasoline: Radiator Fan
R12	Headlamp Flasher
R13	Gasoline: Fuel Pump

Engine Compartment Relay Box

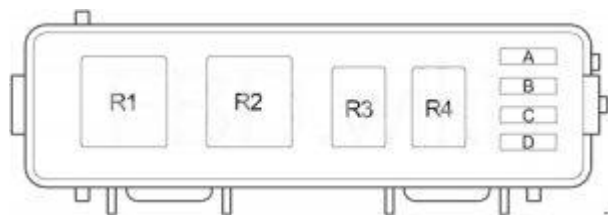

.Dodge Dakota – fuse box diagram –

engine relay box

No.	A	Protected Component
1	–	–
2	–	–
3	–	–
4	–	–
Relay		

R1	–
R2	Fuel Heater Relay
R3	–
R4	–