


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1ZZ-FE, 3ZZ-FE]

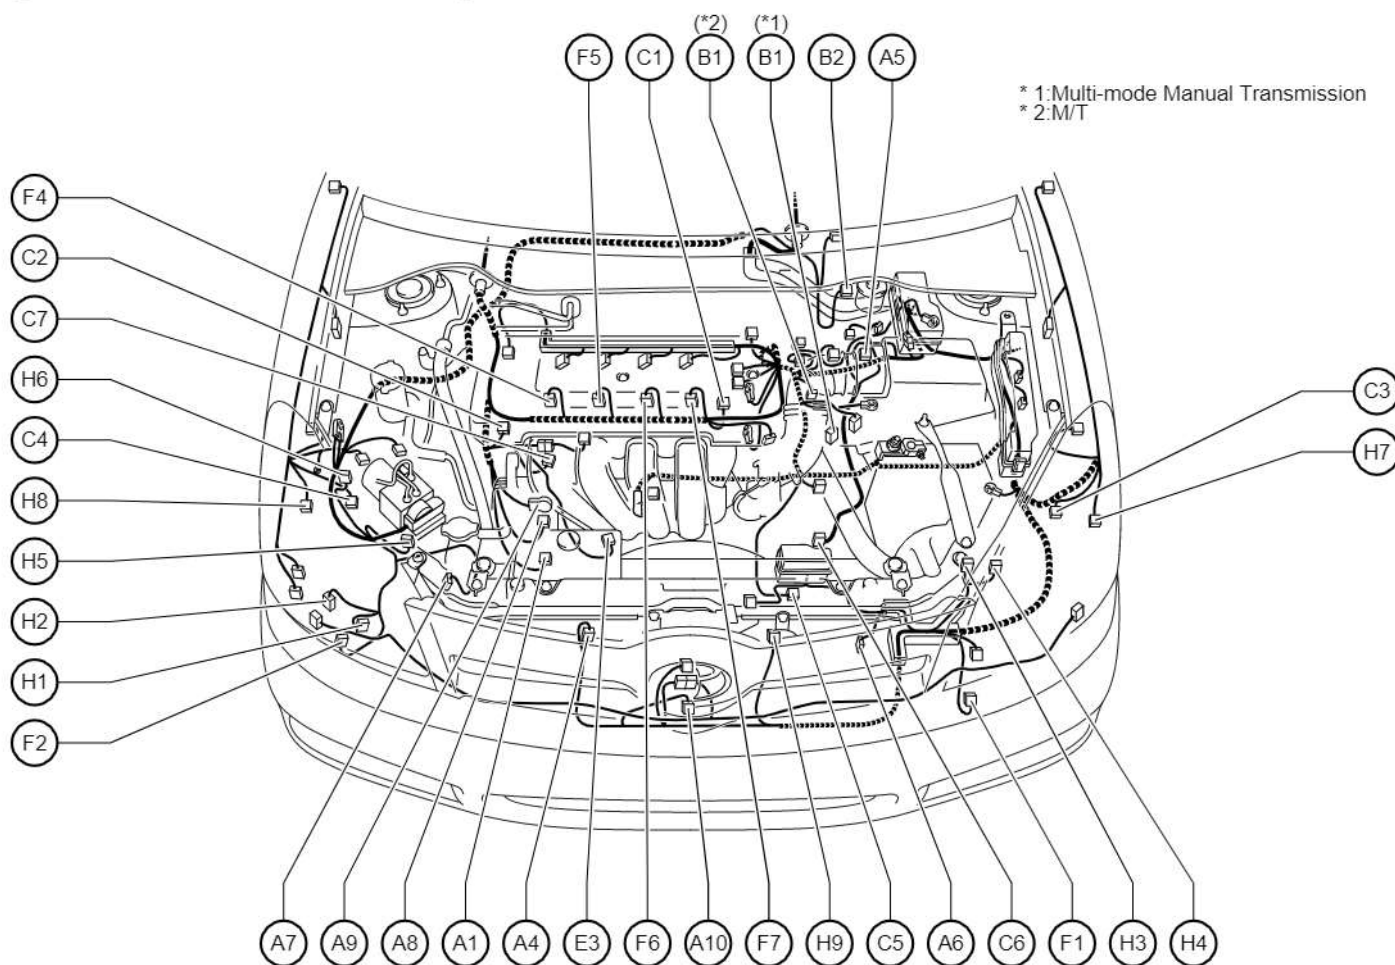

A 1 A/C Compressor
A 4 A/C Pressure Sensor
A 5 Air Flow Meter
A 6 Airbag Sensor (Front LH)
A 7 Airbag Sensor (Front RH)
A 8 Alternator
A 9 Alternator
A 10 Ambient Temp. Sensor

B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Clearance Lamp (Front LH)
C 4 Clearance Lamp (Front RH)
C 5 Clutch Actuator
C 6 Clutch Stroke Sensor
C 7 Crankshaft Position Sensor


E 3 Engine Oil Pressure SW

F 1 Fog Lamp (Front LH)
F 2 Fog Lamp (Front RH)
F 4 Fuel Injector (No.1)
F 5 Fuel Injector (No.2)
F 6 Fuel Injector (No.3)
F 7 Fuel Injector (No.4)

H 1 Headlamp Cleaner Control Relay
H 2 Headlamp Cleaner Motor
H 3 Headlamp (LH High)
H 4 Headlamp (LH Low)
H 5 Headlamp (RH High)
H 6 Headlamp (RH Low)
H 7 Headlamp Leveling Motor (LH)
H 8 Headlamp Leveling Motor (RH)
H 9 Horn

Position of Parts in Engine Compartment

[LHD : 1ZZ-FE, 3ZZ-FE]

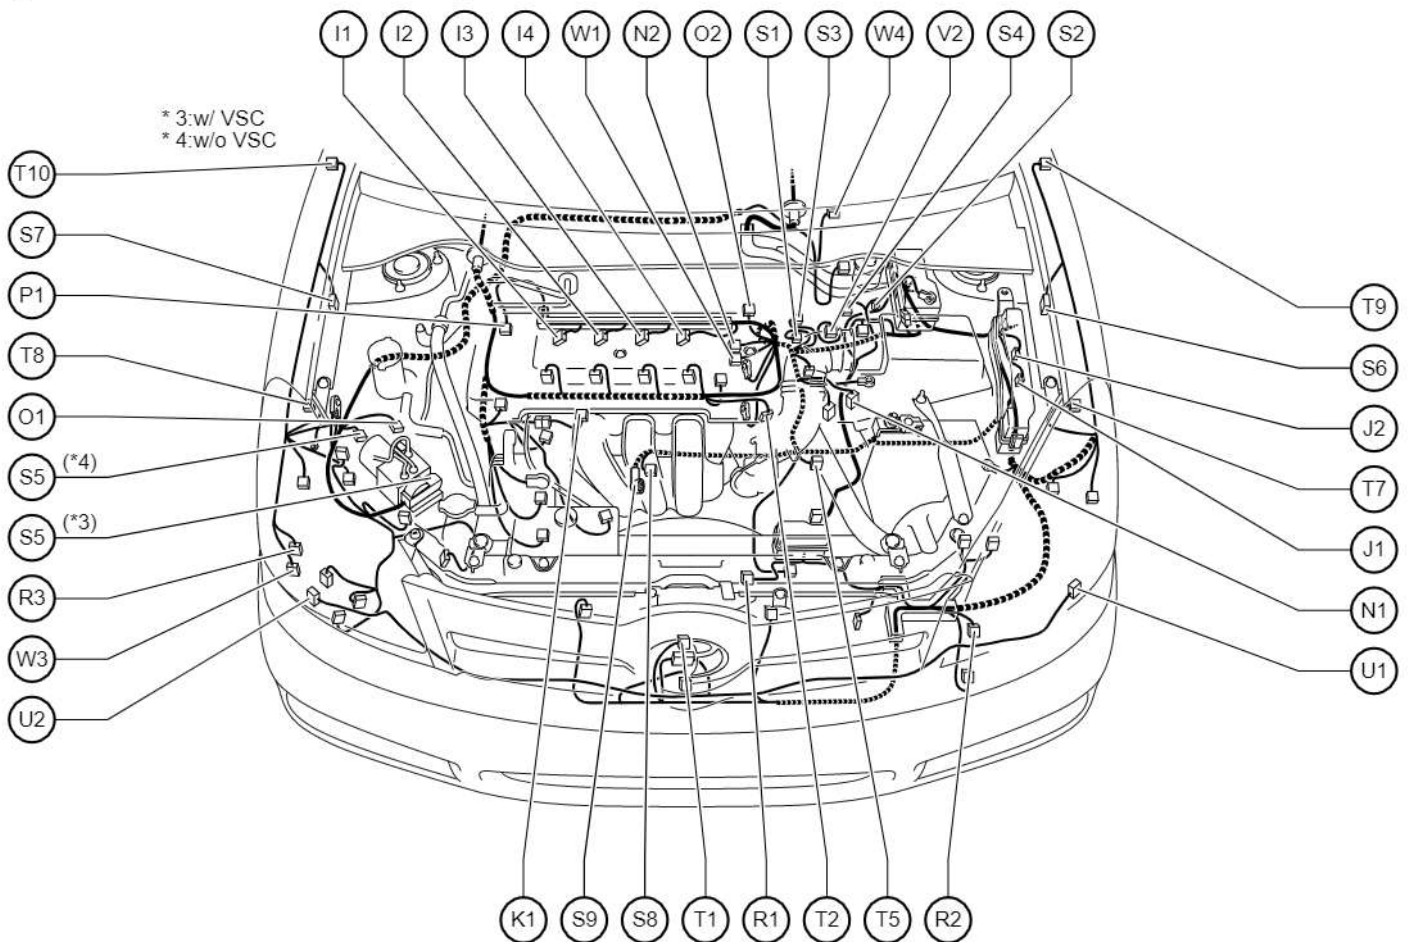

I 1 Ignition Coil (No.1)
I 2 Ignition Coil (No.2)
I 3 Ignition Coil (No.3)
I 4 Ignition Coil (No.4)

J 1 Junction Connector
J 2 Junction Connector

K 1 Knock Control Sensor

N 1 Neutral Start SW
N 2 Noise Filter (Ignition)

O 1 Oil Pressure Sensor
O 2 Oxygen Sensor (Bank 1 Sensor 1)

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor
R 2 Radiator Fan Resistor
R 3 Rear Washer Motor

S 1 Select Actuator
S 2 Select Stroke Sensor
S 3 Shift Actuator
S 4 Shift Stroke Sensor
S 5 Skid Control ECU with Actuator
S 6 Speed Sensor (Front LH)
S 7 Speed Sensor (Front RH)
S 8 Starter
S 9 Starter

T 1 Television Camera (Front)
T 2 Throttle Body Assembly
T 5 Transmission Revolution Sensor
T 7 Turn Signal Lamp (Front LH)
T 8 Turn Signal Lamp (Front RH)
T 9 Turn Signal Lamp (Front Side LH)
T 10 Turn Signal Lamp (Front Side RH)

U 1 Ultrasonic Sensor No.1 (Front LH)
U 2 Ultrasonic Sensor No.1 (Front RH)


V 2 VSV (EVAP)

W 1 Water Temp. Sensor
W 3 Windshield Washer Motor
W 4 Windshield Wiper Motor

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

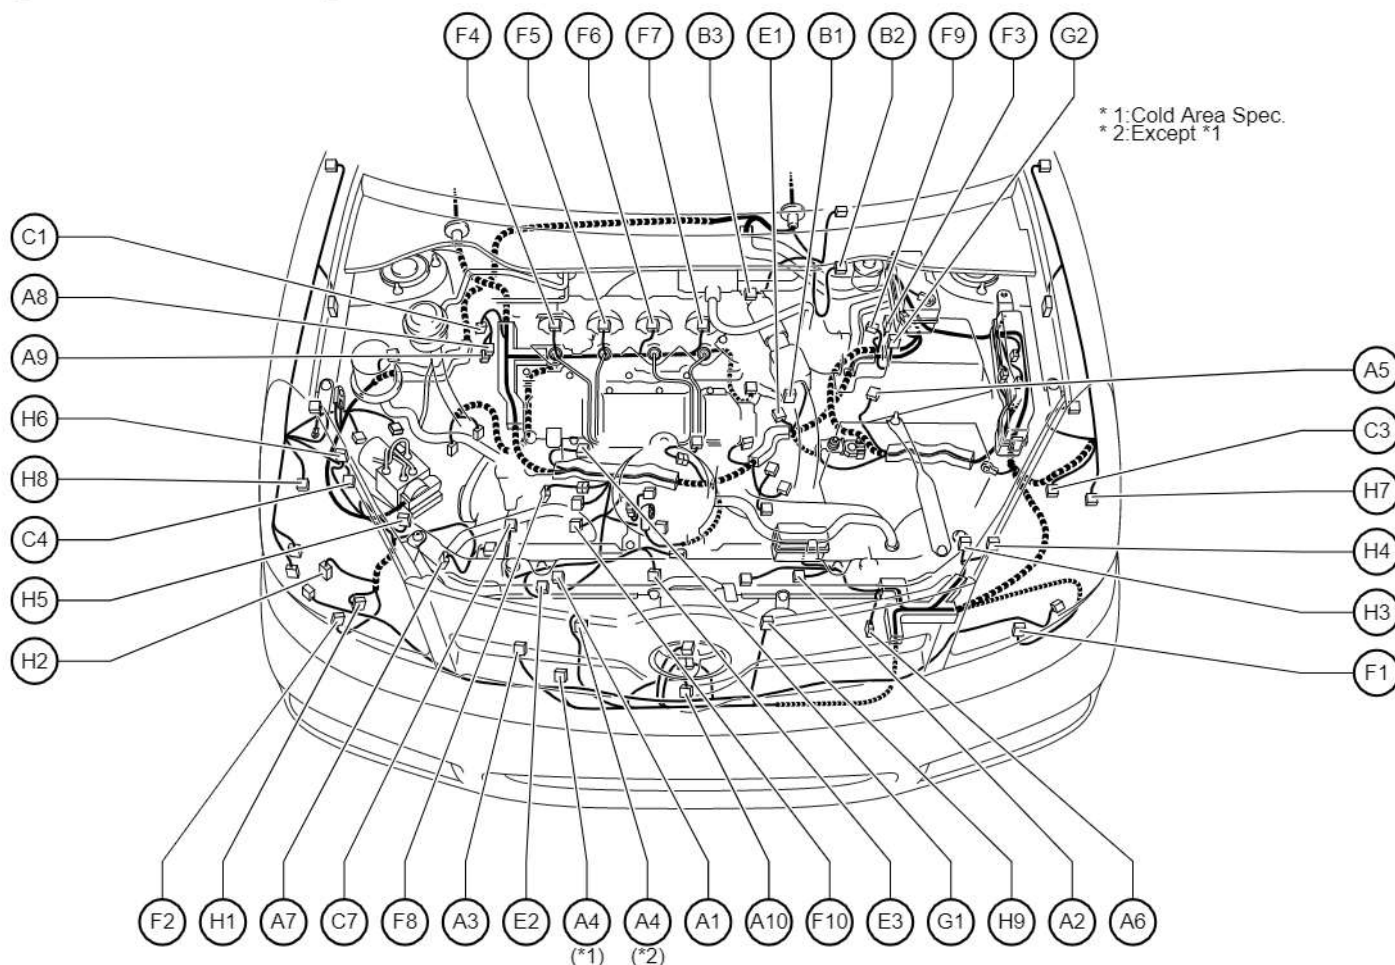

A 1 A/C Compressor
A 2 A/C Condenser Fan Motor
A 3 A/C Magnetic Valve
A 4 A/C Pressure Sensor
A 5 Air Flow Meter
A 6 Airbag Sensor (Front LH)
A 7 Airbag Sensor (Front RH)
A 8 Alternator
A 9 Alternator
A 10 Ambient Temp. Sensor

B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
C 3 Clearance Lamp (Front LH)
C 4 Clearance Lamp (Front RH)
C 7 Crankshaft Position Sensor

E 1 EGR Valve Control Motor
E 2 Engine Oil Level Sensor
E 3 Engine Oil Pressure SW


F 1 Fog Lamp (Front LH)
F 2 Fog Lamp (Front RH)
F 3 Fuel Heater
F 4 Fuel Injector (No.1)
F 5 Fuel Injector (No.2)
F 6 Fuel Injector (No.3)
F 7 Fuel Injector (No.4)
F 8 Fuel Pressure Sensor
F 9 Fuel Sedimentary Level Warning SW
F 10 Fuel Temp. Sensor

G 1 Glow Plug
G 2 Glow Plug Relay

H 1 Headlamp Cleaner Control Relay
H 2 Headlamp Cleaner Motor
H 3 Headlamp (LH High)
H 4 Headlamp (LH Low)
H 5 Headlamp (RH High)
H 6 Headlamp (RH Low)
H 7 Headlamp Leveling Motor (LH)
H 8 Headlamp Leveling Motor (RH)
H 9 Horn

Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

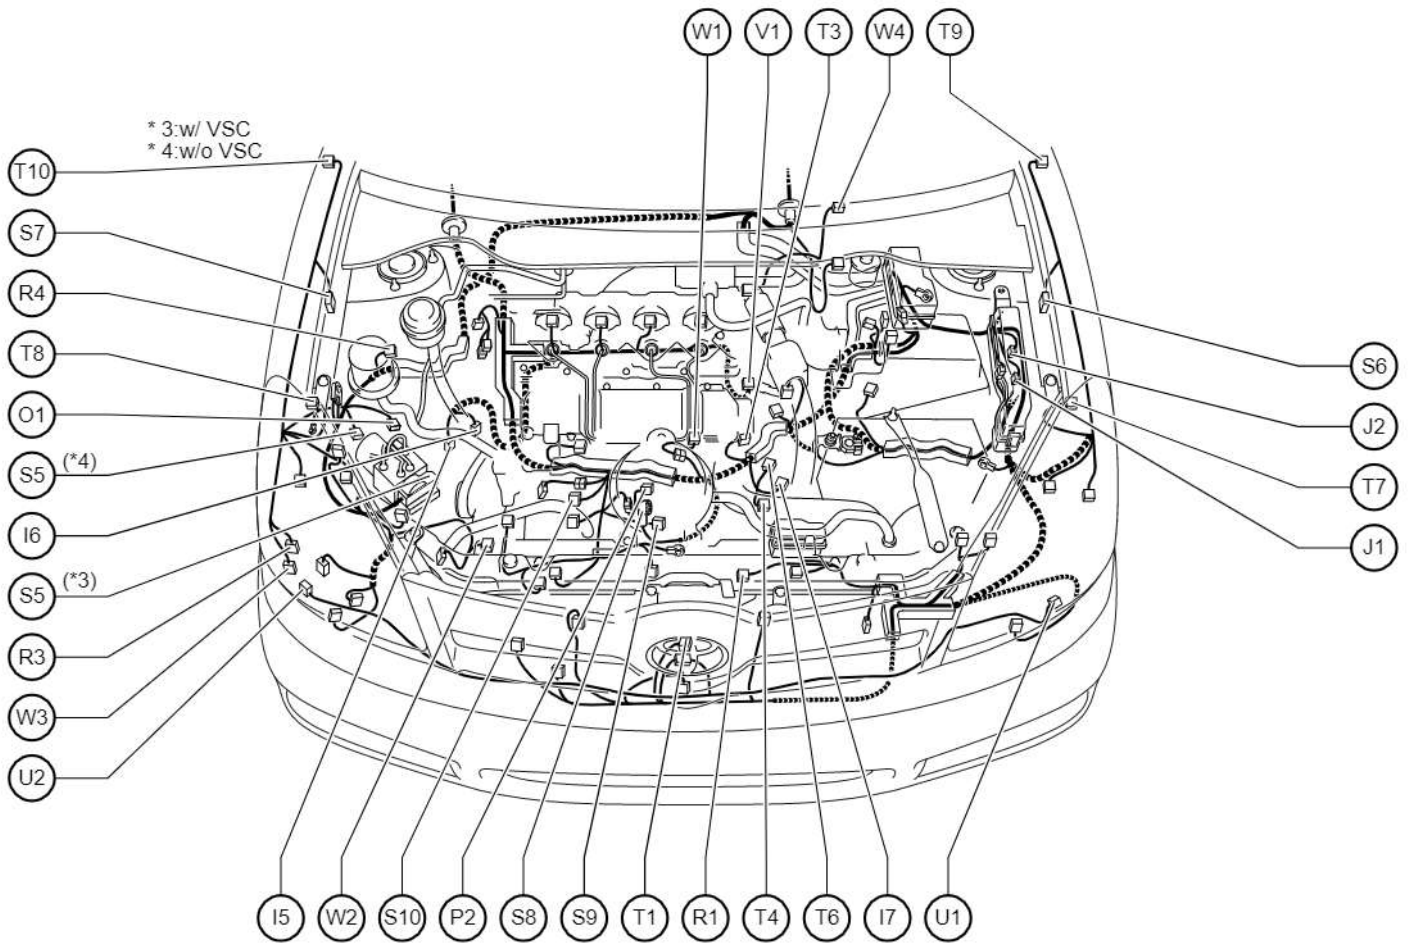

I 5 Injector Driver (EDU)
I 6 Injector Driver (EDU)
I 7 Inlet Air Temp. Sensor

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure Sensor

P 2 Pressure Discharge Valve

R 1 Radiator Fan Motor
R 3 Rear Washer Motor
R 4 Refrigerant Heater

S 5 Skid Control ECU with Actuator
S 6 Speed Sensor (Front LH)
S 7 Speed Sensor (Front RH)
S 8 Starter
S 9 Starter
S10 Suction Control Valve

T 1 Television Camera (Front)
T 3 Throttle Control Motor
T 4 Throttle Position SW
T 6 Turbo Pressure Sensor
T 7 Turn Signal Lamp (Front LH)
T 8 Turn Signal Lamp (Front RH)
T 9 Turn Signal Lamp (Front Side LH)
T10 Turn Signal Lamp (Front Side RH)

U 1 Ultrasonic Sensor No.1 (Front LH)
U 2 Ultrasonic Sensor No.1 (Front RH)


V 1 VRV (EGR)

W 1 Water Temp. Sensor
W 2 Water Temp. SW
W 3 Windshield Washer Motor
W 4 Windshield Wiper Motor

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

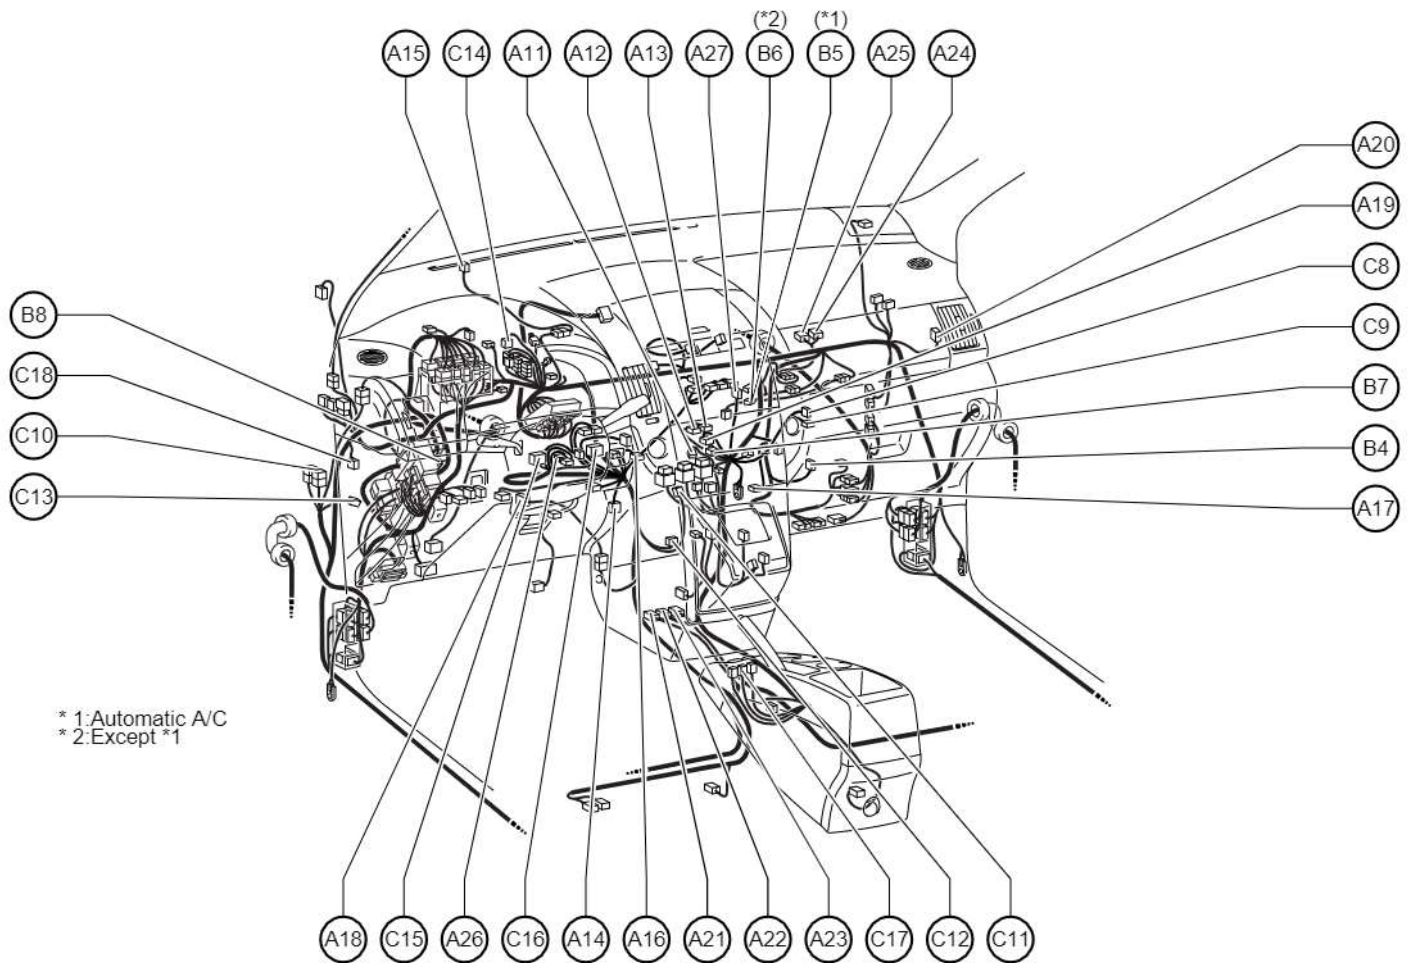


* 1:Automatic A/C
* 2:Except *1

A 11 A/C Amplifier	B 4 Blower Motor
A 12 A/C Control Assembly	B 5 Blower Motor Control
A 13 A/C Control Assembly	B 6 Blower Resistor
A 14 A/C Room Temp. Sensor	B 7 Blower SW
A 15 A/C Solar Sensor	B 8 Body ECU
A 16 A/C SW	
A 17 A/C Thermistor No.1	C 8 Cigarette Lighter
A 18 Accelerator Position Sensor	C 9 Cigarette Lighter Illumination
A 19 Air Inlet Control SW	C 10 Circuit Opening Relay
A 20 Airbag Cut Off SW	C 11 Clearance Warning Buzzer
A 21 Airbag Sensor Assembly Center	C 12 Clearance Warning ECU
A 22 Airbag Sensor Assembly Center	C 13 Clutch Start SW
A 23 Airbag Sensor Assembly Center	C 14 Combination Meter
A 24 Airbag Squib (Front Passenger's Airbag Assembly)	C 15 Combination SW
A 25 Airbag Squib (Front Passenger's Airbag Assembly)	C 16 Combination SW
A 26 Airbag Squib (Steering Wheel Pad)	C 17 Cornering Assist Monitor Main SW
A 27 Antenna Amplifier	C 18 Cruise Control Clutch SW

Position of Parts in Instrument Panel

[LHD]

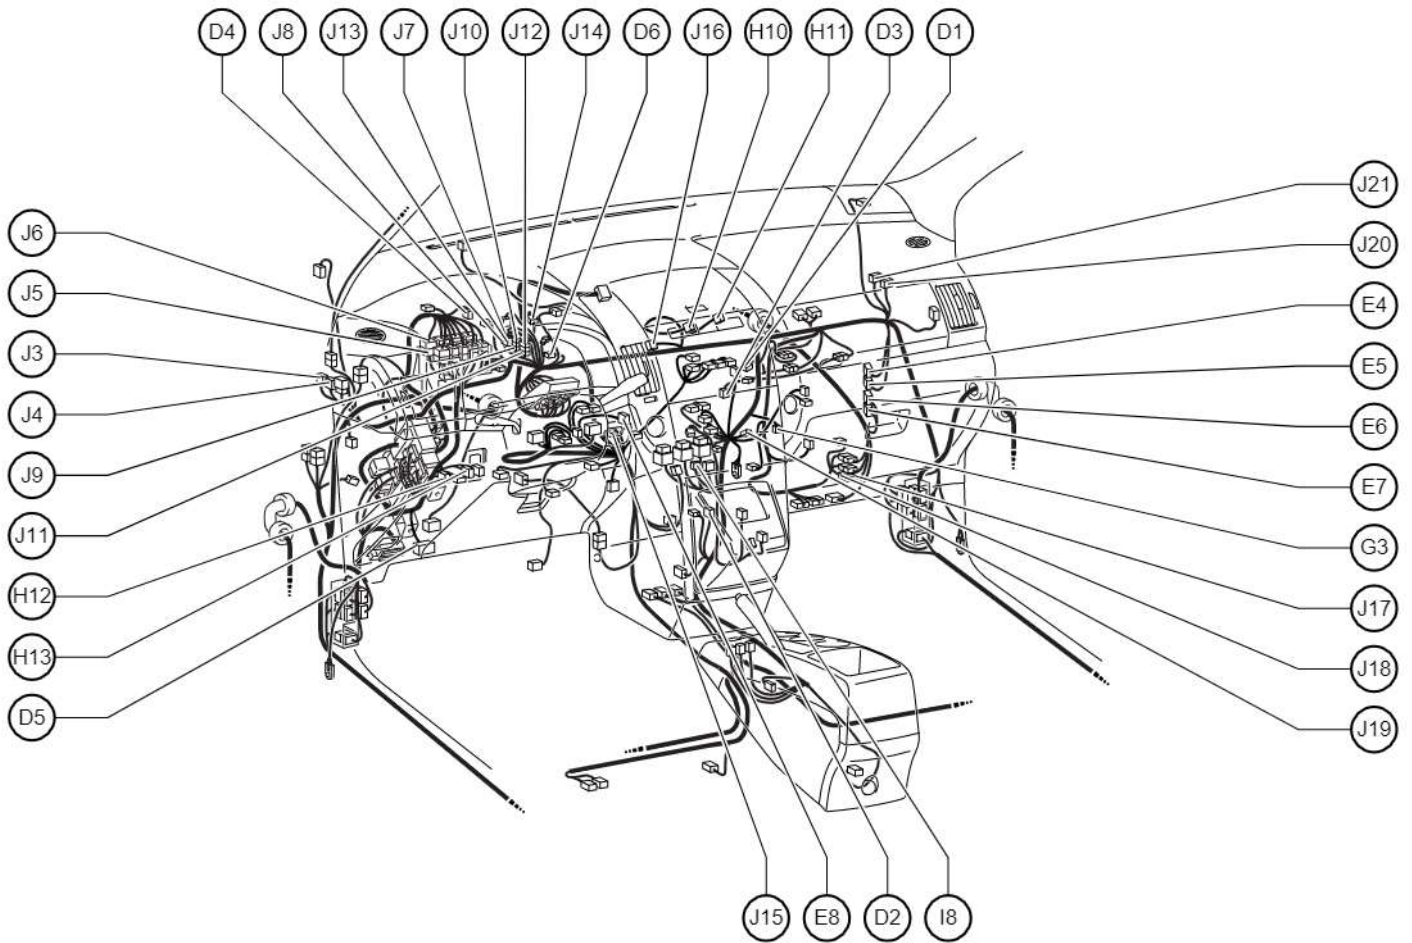

D 1 Damper Servo Motor (Air Inlet)
 D 2 Damper Servo Motor (Air Mix)
 D 3 Damper Servo Motor (Air Vent Mode)
 D 4 Diode (Fan)
 D 5 DLC3
 D 6 Door Control Receiver

E 4 Engine ECU
 E 5 Engine ECU
 E 6 Engine ECU
 E 7 Engine ECU
 E 8 Engine Start/Stop SW

G 3 Glove Box Lamp

H10 Hazard Warning Signal SW Assembly
 H11 Hazard Warning Signal SW Assembly
 H12 Headlamp Cleaner SW
 H13 Headlamp Leveling SW


I 8 Ignition Control ECU

J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 9 Junction Connector
 J10 Junction Connector
 J11 Junction Connector
 J12 Junction Connector
 J13 Junction Connector
 J14 Junction Connector
 J15 Junction Connector
 J16 Junction Connector
 J17 Junction Connector
 J18 Junction Connector
 J19 Junction Connector
 J20 Junction Connector
 J21 Junction Connector

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

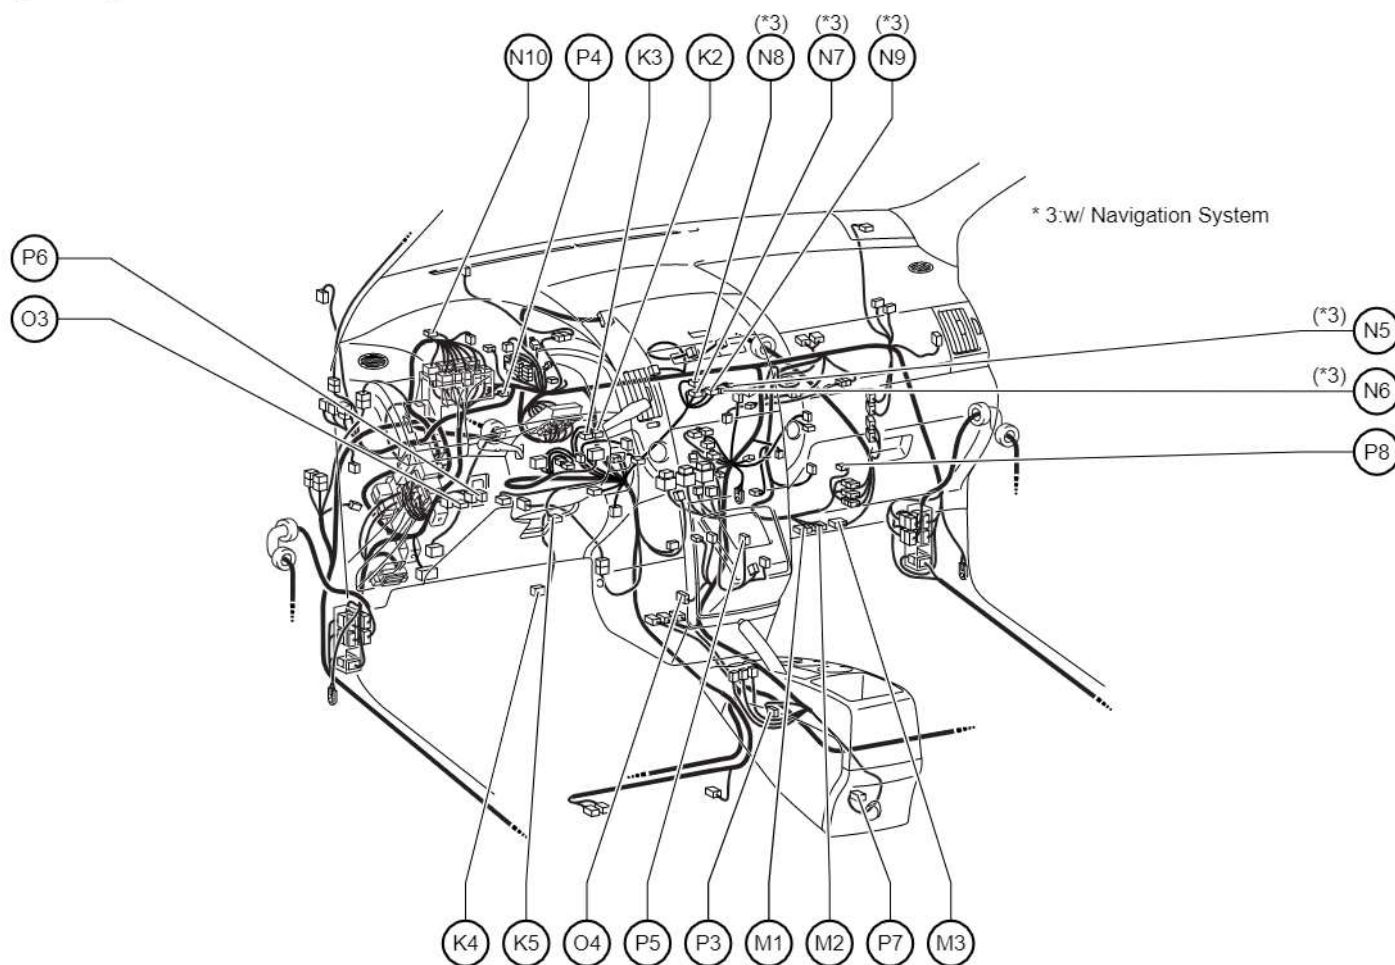

K 2 Key Slot
K 3 Key Slot
K 4 Kick Down SW
K 5 Knee Airbag Squib

M 1 Multi-mode Manual Transmission ECU
M 2 Multi-mode Manual Transmission ECU
M 3 Multi-mode Manual Transmission ECU


N 5 Navigation Receiver Assembly
N 6 Navigation Receiver Assembly
N 7 Navigation Receiver Assembly
N 8 Navigation Receiver Assembly
N 9 Navigation Receiver Assembly
N10 Noise Filter (Rear Window Defogger No.1)

O 3 Outer Mirror SW
O 4 Oxygen Sensor (Bank 1 Sensor 2)

P 3 Parking Brake SW
P 4 Parking Brake SW Resistor
P 5 Pattern Select SW
P 6 Power Heater SW
P 7 Power Point Socket
P 8 PTC Heater

Position of Parts in Instrument Panel

[LHD]

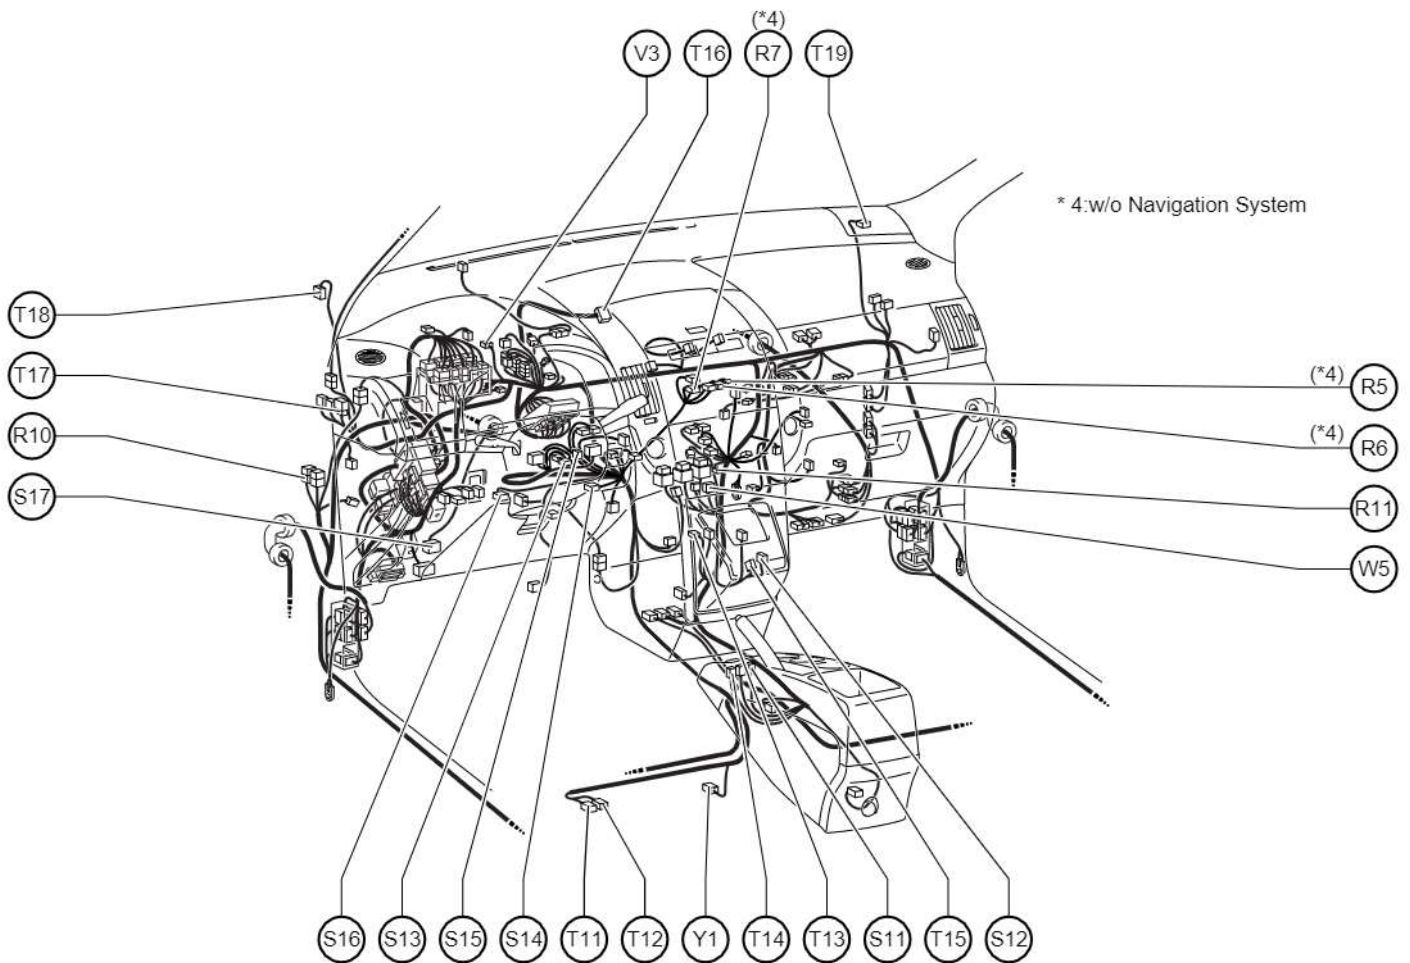

R 5 Radio Receiver Assembly
 R 6 Radio Receiver Assembly
 R 7 Radio Receiver Assembly
 R10 Rear Window Defogger Relay
 R11 Rear Window Defogger SW

S 11 Seat Heater SW
 S12 Shift Lever Position Sensor
 S13 Spiral Cable
 S14 Steering Lock Actuator
 S15 Steering Sensor (Back Guide Monitor)
 S16 Steering Sensor (VSC)
 S17 Stop Lamp SW

T 11 Television Camera Controller
 T12 Television Camera Controller
 T13 Temp. Control SW (Max Hot)
 T14 Traction Control SW
 T15 Transmission Shift Main SW
 T16 Transponder Key ECU
 T17 Turn Signal Flasher
 T18 Tweeter (LH)
 T19 Tweeter (RH)

V 3 VSC Warning Buzzer


W 5 Windshield Wiper Relay

Y 1 Yaw Rate Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

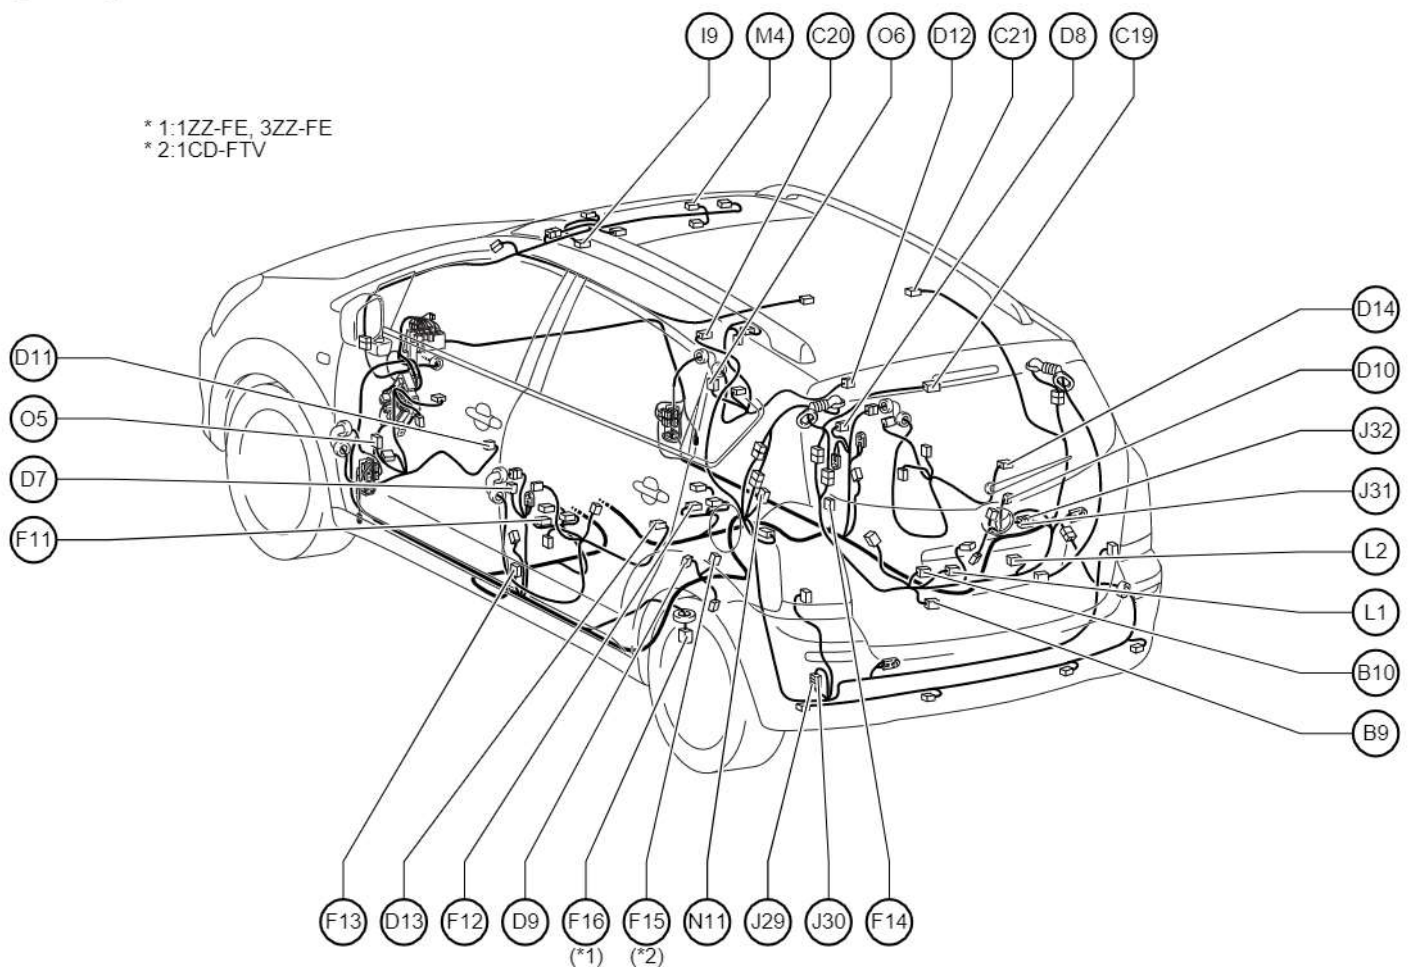

B 9 Back Door Lock Assembly

B10 Back Door Opener SW

C19 Center Stop Lamp

C20 Curtain Shield Airbag Squib (LH)

C21 Curtain Shield Airbag Squib (RH)

D 7 Door Courtesy SW (Driver's Side)

D 8 Door Courtesy SW (Front Passenger's Side)

D 9 Door Courtesy SW (Rear LH)

D10 Door Courtesy SW (Rear RH)

D11 Door Lock Assembly (Driver's Side)

D12 Door Lock Assembly (Front Passenger's Side)

D13 Door Lock Assembly (Rear LH)

D14 Door Lock Assembly (Rear RH)

F 11 Front Seat Inner Belt (Driver's Side)

F 12 Front Seat Inner Belt (Front Passenger's Side)

F 13 Front Seat Outer Belt (LH)

F 14 Front Seat Outer Belt (RH)

F 15 Fuel Sender Gage

F 16 Fuel Suction Pump and Gage Assembly

I 9 Inner Rear View Mirror

J 29 Junction Connector

J 30 Junction Connector

J 31 Junction Connector

J 32 Junction Connector

L 1 License Plate Lamp (LH)

L 2 License Plate Lamp (RH)

M 4 Map Lamp


N 11 Noise Filter (Rear Window Defogger No.2)

O 5 Outer Rear View Mirror (LH)

O 6 Outer Rear View Mirror (RH)

Position of Parts in Body

[LHD]

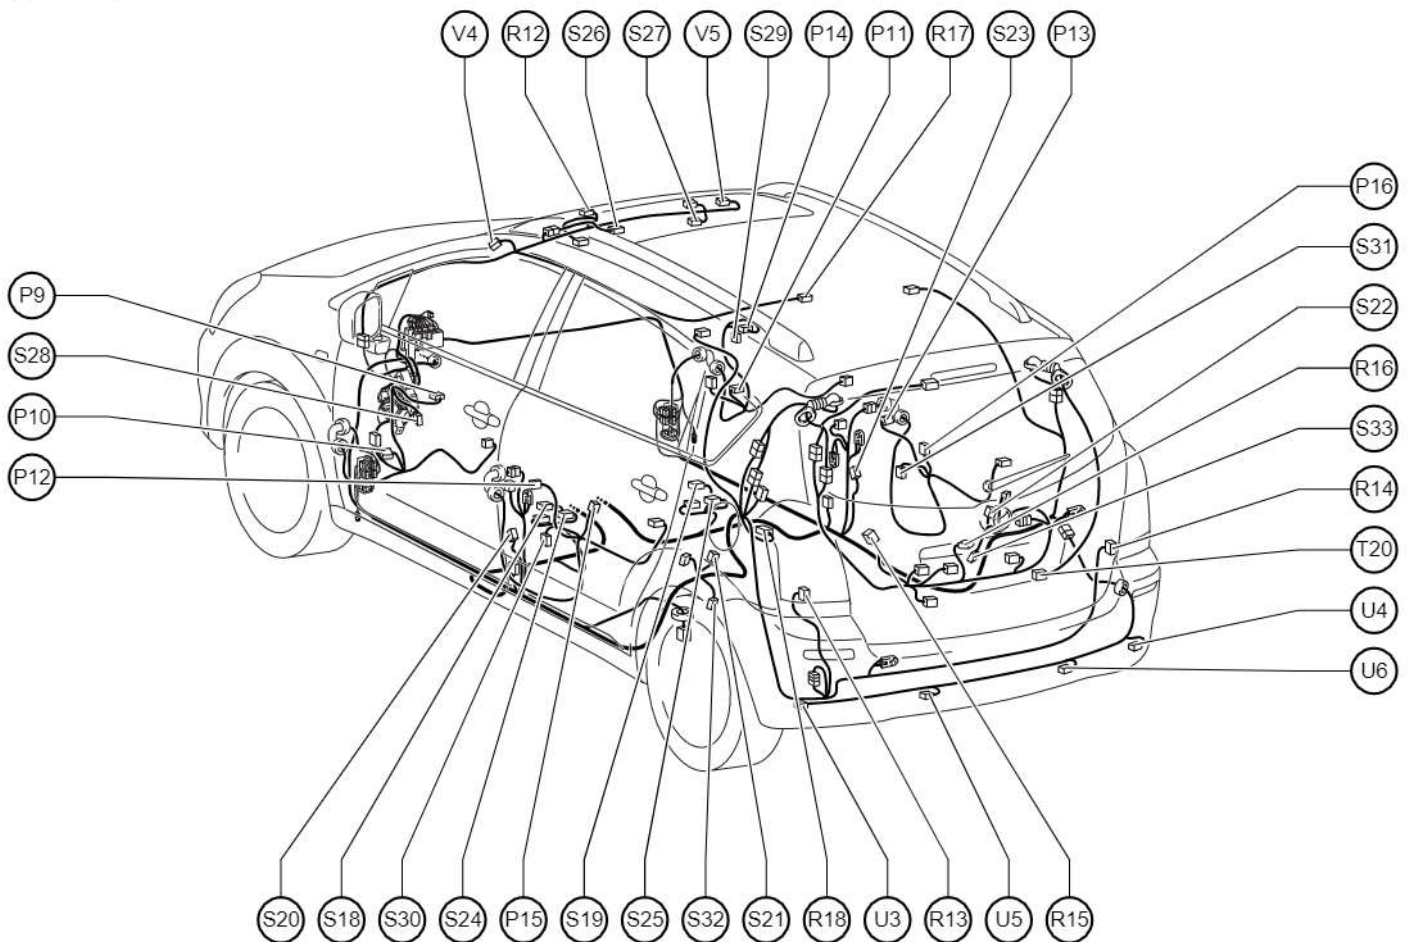

P 9 Power Window Master SW
 P10 Power Window Regulator Motor (Front LH)
 P11 Power Window Regulator Motor (Front RH)
 P12 Power Window Regulator Motor (Rear LH)
 P13 Power Window Regulator Motor (Rear RH)
 P14 Power Window SW (Front Passenger's Side)
 P15 Power Window SW (Rear LH)
 P16 Power Window SW (Rear RH)

R12 Rain Sensor
 R13 Rear Combination Lamp (LH)
 R14 Rear Combination Lamp (RH)
 R15 Rear Window Defogger
 R16 Rear Wiper Motor Assembly
 R17 Room Lamp (Center)
 R18 Room Lamp (Luggage)

S18 Seat Heater (LH)
 S19 Seat Heater (RH)
 S20 Side Airbag Sensor (LH)
 S21 Side Airbag Sensor (Rear LH)
 S22 Side Airbag Sensor (Rear RH)

S23 Side Airbag Sensor (RH)
 S24 Side Airbag Squib (LH)
 S25 Side Airbag Squib (RH)
 S26 Sliding Roof Control ECU
 S27 Sliding Roof SW
 S28 Speaker (Front Door LH)
 S29 Speaker (Front Door RH)
 S30 Speaker (Rear Door LH)
 S31 Speaker (Rear Door RH)
 S32 Speed Sensor (Rear LH)
 S33 Speed Sensor (Rear RH)

T20 Television Camera (Rear)


U 3 Ultrasonic Sensor No.1 (Rear LH)
 U 4 Ultrasonic Sensor No.1 (Rear RH)
 U 5 Ultrasonic Sensor No.2 (LH)
 U 6 Ultrasonic Sensor No.2 (RH)

V 4 Vanity Lamp (LH)
 V 5 Vanity Lamp (RH)

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1ZZ-FE, 3ZZ-FE]

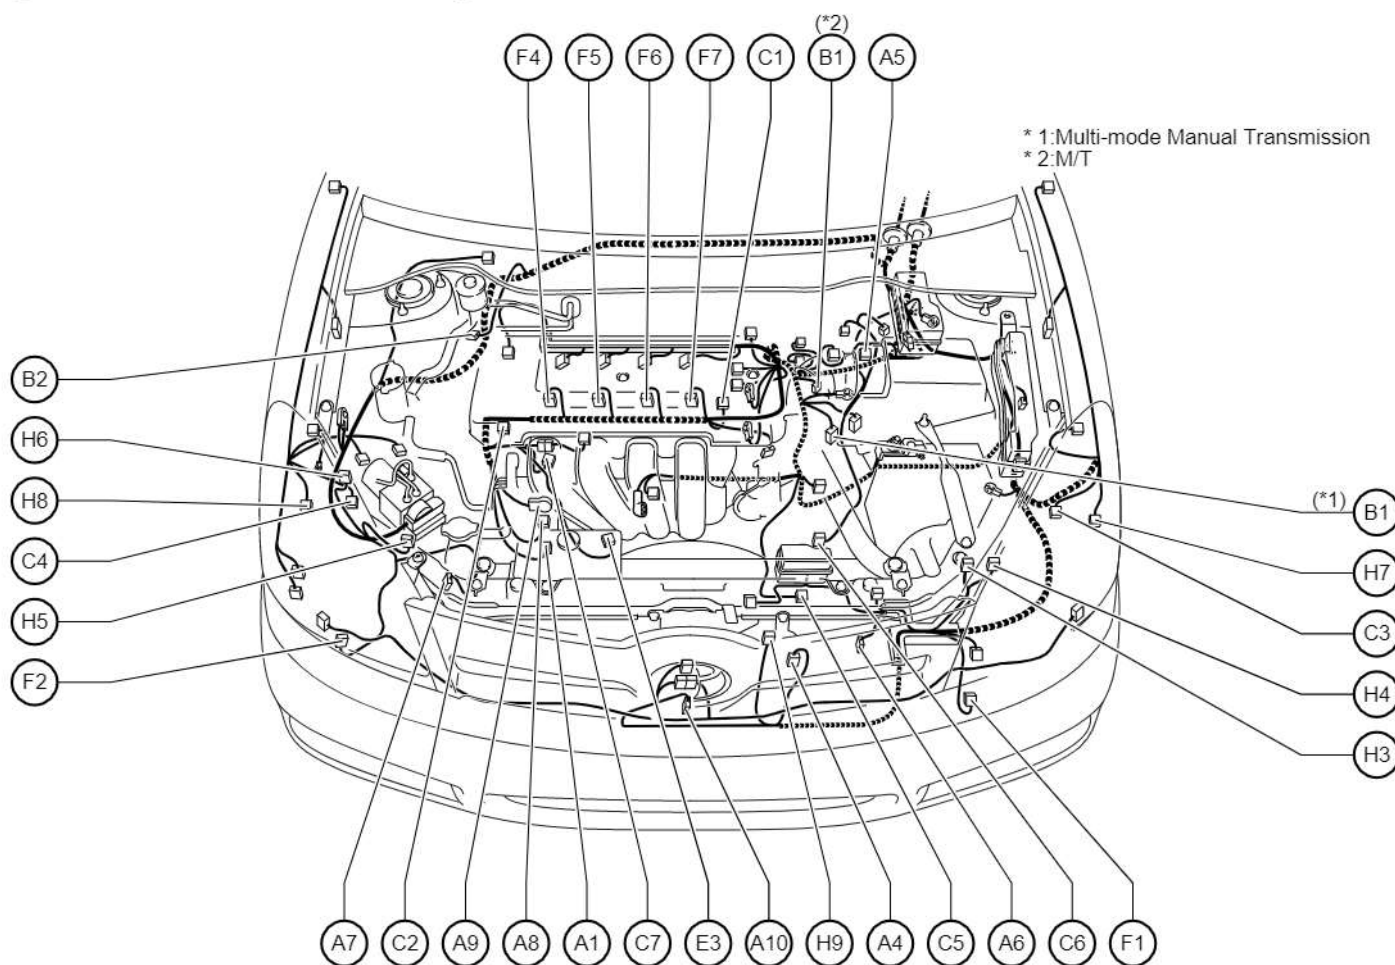

A 1 A/C Compressor
A 4 A/C Pressure Sensor
A 5 Air Flow Meter
A 6 Airbag Sensor (Front LH)
A 7 Airbag Sensor (Front RH)
A 8 Alternator
A 9 Alternator
A10 Ambient Temp. Sensor

B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
C 2 Camshaft Timing Oil Control Valve
C 3 Clearance Lamp (Front LH)
C 4 Clearance Lamp (Front RH)
C 5 Clutch Actuator
C 6 Clutch Stroke Sensor
C 7 Crankshaft Position Sensor


E 3 Engine Oil Pressure SW

F 1 Fog Lamp (Front LH)
F 2 Fog Lamp (Front RH)
F 4 Fuel Injector (No.1)
F 5 Fuel Injector (No.2)
F 6 Fuel Injector (No.3)
F 7 Fuel Injector (No.4)

H 3 Headlamp (LH High)
H 4 Headlamp (LH Low)
H 5 Headlamp (RH High)
H 6 Headlamp (RH Low)
H 7 Headlamp Leveling Motor (LH)
H 8 Headlamp Leveling Motor (RH)
H 9 Horn

Position of Parts in Engine Compartment

[RHD : 1ZZ-FE, 3ZZ-FE]

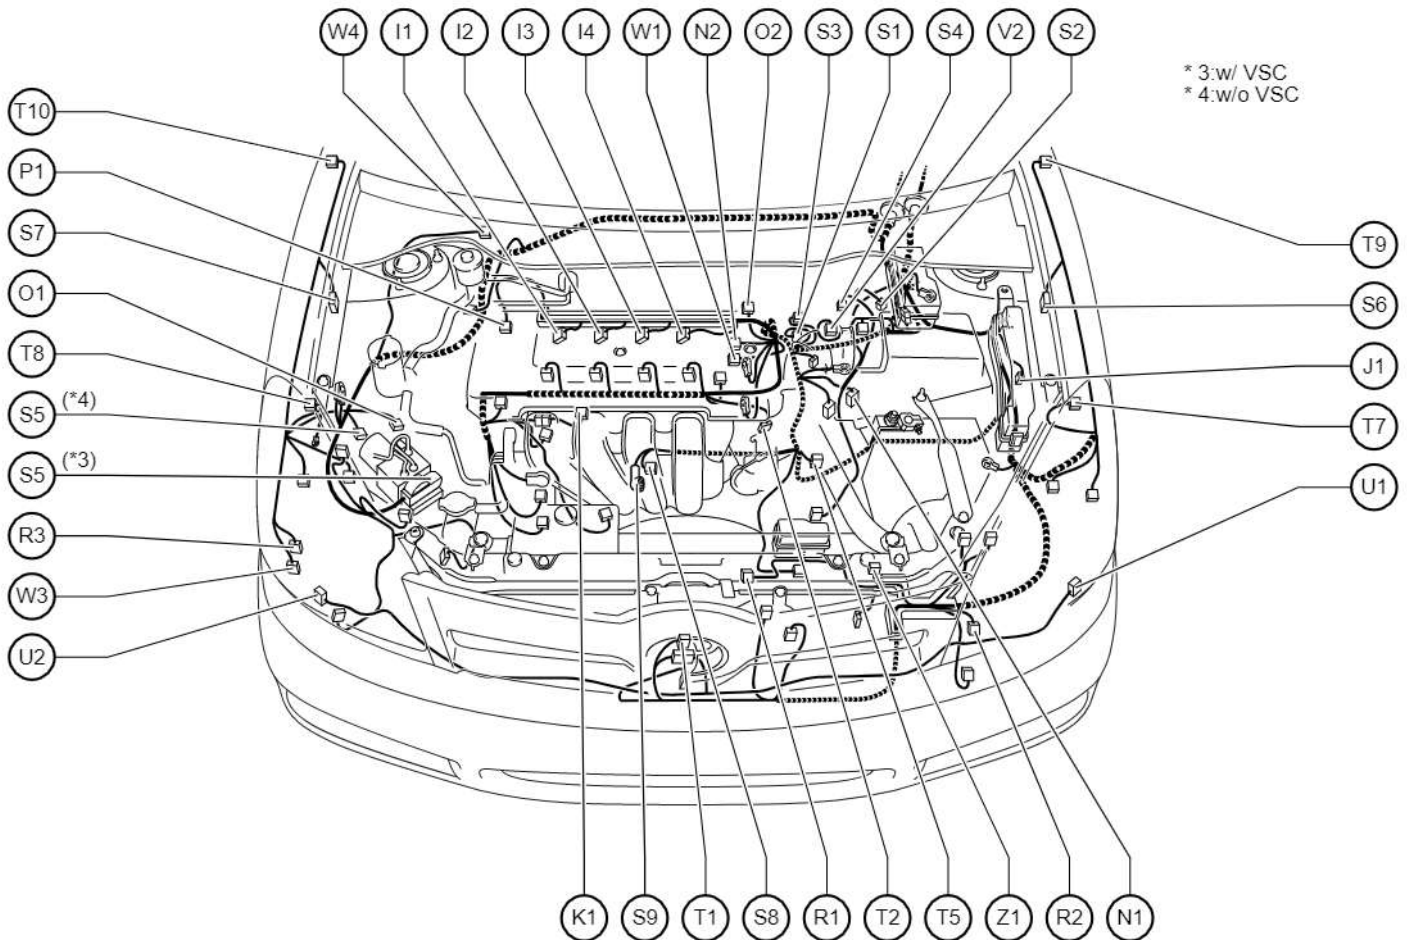

* 3:w/ VSC
* 4:w/o VSC

I 1 Ignition Coil (No.1)
I 2 Ignition Coil (No.2)
I 3 Ignition Coil (No.3)
I 4 Ignition Coil (No.4)

J 1 Junction Connector

K 1 Knock Control Sensor

N 1 Neutral Start SW
N 2 Noise Filter (Ignition)

O 1 Oil Pressure Sensor
O 2 Oxygen Sensor (Bank 1 Sensor 1)

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor
R 2 Radiator Fan Resistor
R 3 Rear Washer Motor

S 1 Select Actuator
S 2 Select Stroke Sensor
S 3 Shift Actuator
S 4 Shift Stroke Sensor

S 5 Skid Control ECU with Actuator
S 6 Speed Sensor (Front LH)
S 7 Speed Sensor (Front RH)
S 8 Starter
S 9 Starter

T 1 Television Camera (Front)
T 2 Throttle Body Assembly
T 5 Transmission Revolution Sensor
T 7 Turn Signal Lamp (Front LH)
T 8 Turn Signal Lamp (Front RH)
T 9 Turn Signal Lamp (Front Side LH)
T 10 Turn Signal Lamp (Front Side RH)

U 1 Ultrasonic Sensor No.1 (Front LH)
U 2 Ultrasonic Sensor No.1 (Front RH)

V 2 VSV (EVAP)


W 1 Water Temp. Sensor
W 3 Windshield Washer Motor
W 4 Windshield Wiper Motor

Z 1 Option Connector (Engine Hood Courtesy SW)

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1CD-FTV]

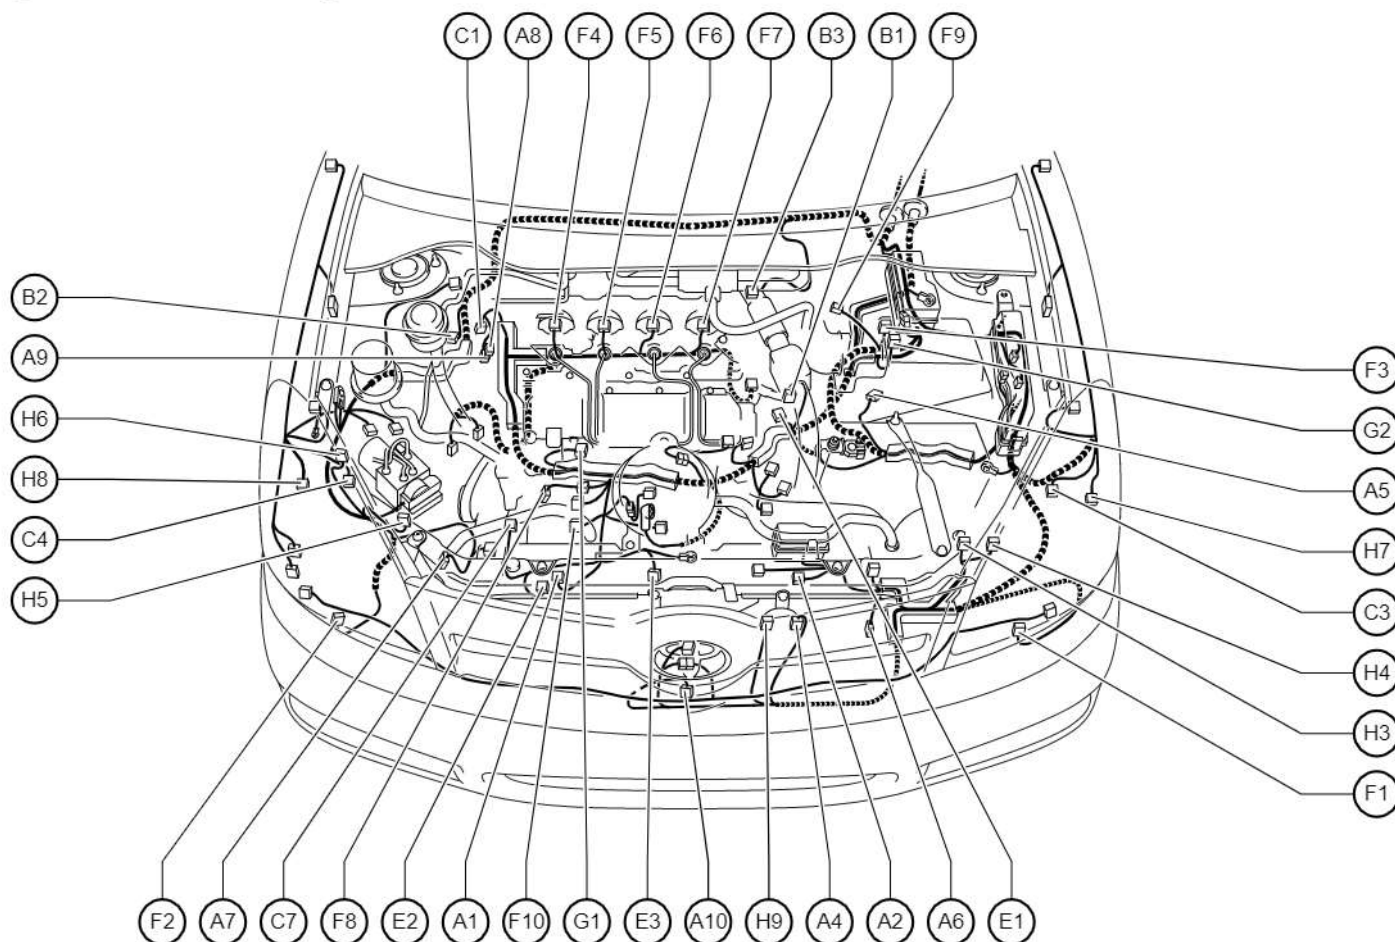

A 1 A/C Compressor
A 2 A/C Condenser Fan Motor
A 4 A/C Pressure Sensor
A 5 Air Flow Meter
A 6 Airbag Sensor (Front LH)
A 7 Airbag Sensor (Front RH)
A 8 Alternator
A 9 Alternator
A 10 Ambient Temp. Sensor

B 1 Back-Up Lamp SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
C 3 Clearance Lamp (Front LH)
C 4 Clearance Lamp (Front RH)
C 7 Crankshaft Position Sensor

E 1 EGR Valve Control Motor
E 2 Engine Oil Level Sensor
E 3 Engine Oil Pressure SW


F 1 Fog Lamp (Front LH)
F 2 Fog Lamp (Front RH)
F 3 Fuel Heater
F 4 Fuel Injector (No.1)
F 5 Fuel Injector (No.2)
F 6 Fuel Injector (No.3)
F 7 Fuel Injector (No.4)
F 8 Fuel Pressure Sensor
F 9 Fuel Sedimentary Level Warning SW
F 10 Fuel Temp. Sensor

G 1 Glow Plug
G 2 Glow Plug Relay

H 3 Headlamp (LH High)
H 4 Headlamp (LH Low)
H 5 Headlamp (RH High)
H 6 Headlamp (RH Low)
H 7 Headlamp Leveling Motor (LH)
H 8 Headlamp Leveling Motor (RH)
H 9 Horn

Position of Parts in Engine Compartment

[RHD : 1CD-FTV]

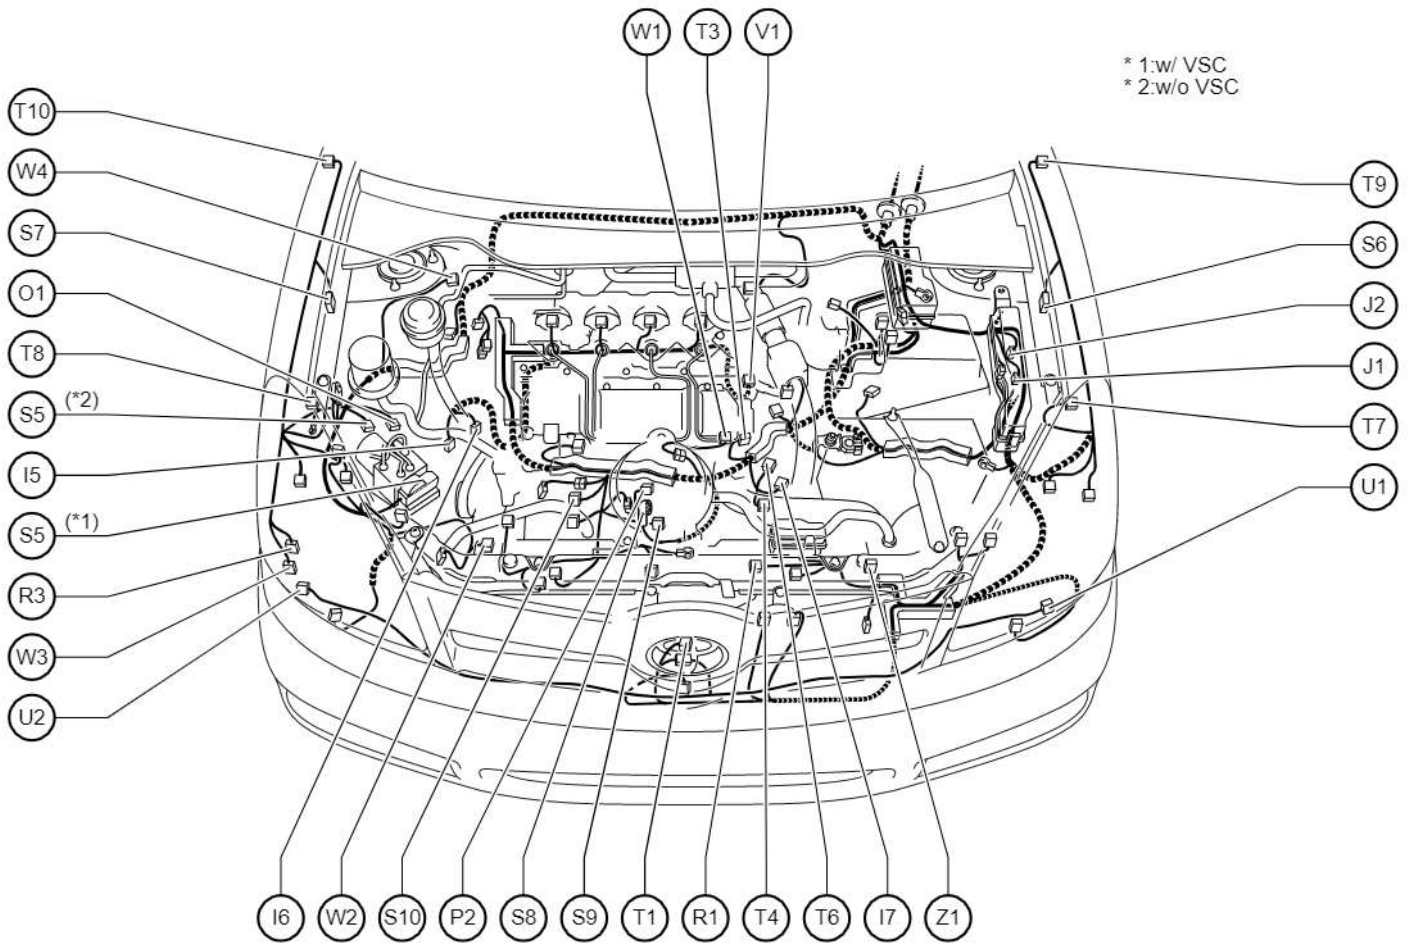

I 5 Injector Driver (EDU)
I 6 Injector Driver (EDU)
I 7 Inlet Air Temp. Sensor

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure Sensor

P 2 Pressure Discharge Valve

R 1 Radiator Fan Motor
R 3 Rear Washer Motor

S 5 Skid Control ECU with Actuator
S 6 Speed Sensor (Front LH)
S 7 Speed Sensor (Front RH)
S 8 Starter
S 9 Starter
S10 Suction Control Valve

T 1 Television Camera (Front)
T 3 Throttle Control Motor
T 4 Throttle Position SW
T 6 Turbo Pressure Sensor
T 7 Turn Signal Lamp (Front LH)
T 8 Turn Signal Lamp (Front RH)
T 9 Turn Signal Lamp (Front Side LH)
T10 Turn Signal Lamp (Front Side RH)

U 1 Ultrasonic Sensor No.1 (Front LH)
U 2 Ultrasonic Sensor No.1 (Front RH)

V 1 VRV (EGR)


W 1 Water Temp. Sensor
W 2 Water Temp. SW
W 3 Windshield Washer Motor
W 4 Windshield Wiper Motor

Z 1 Option Connector (Engine Hood Courtesy SW)

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

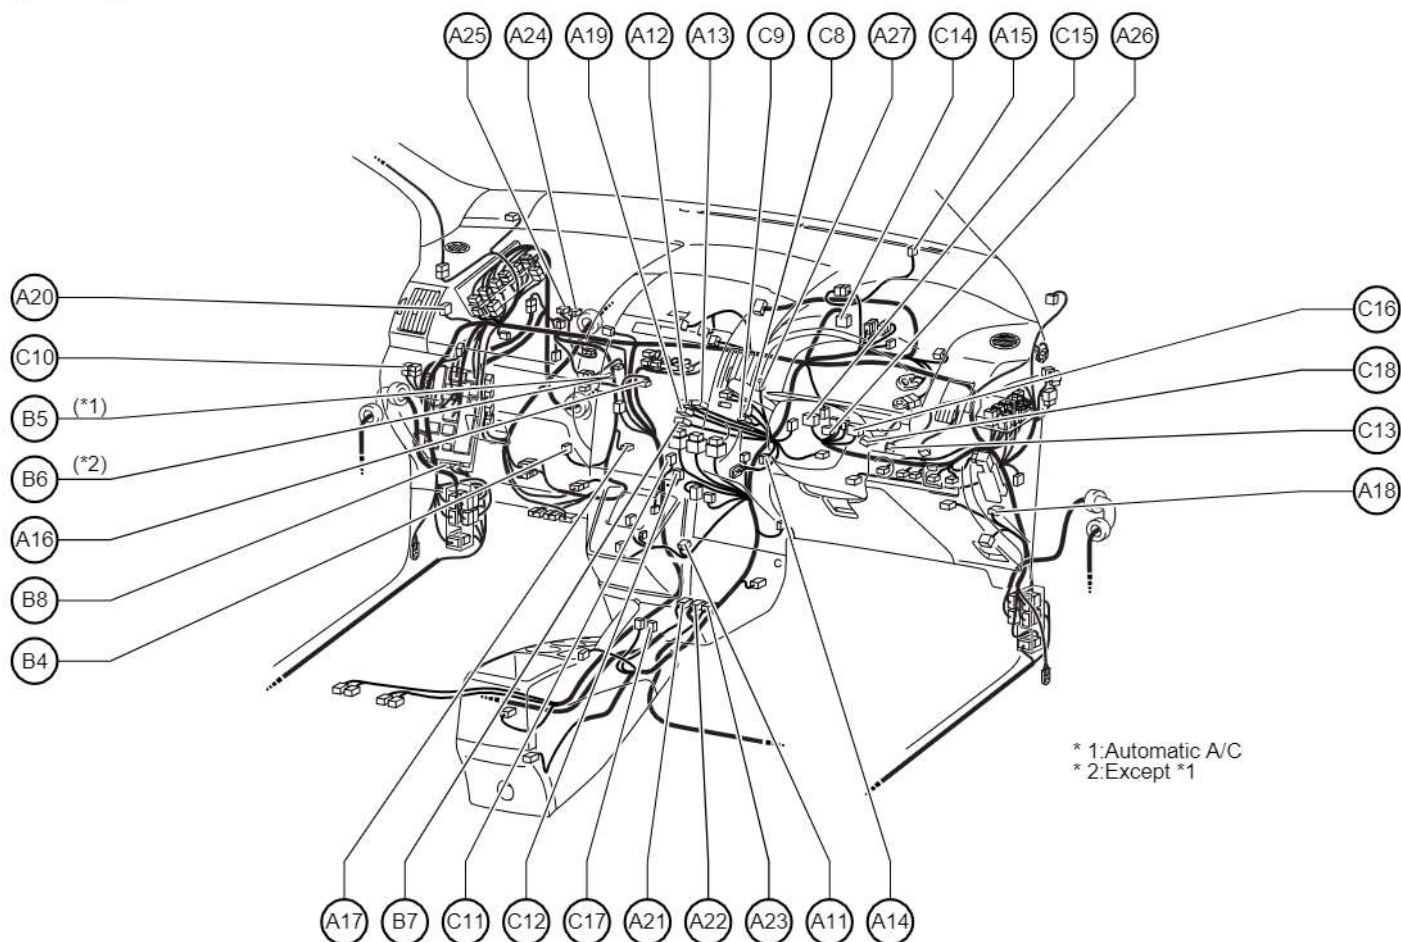

* 1:Automatic A/C
* 2:Except *1


A 11 A/C Amplifier
A 12 A/C Control Assembly
A 13 A/C Control Assembly
A 14 A/C Room Temp. Sensor
A 15 A/C Solar Sensor
A 16 A/C SW
A 17 A/C Thermistor No.1
A 18 Accelerator Position Sensor
A 19 Air Inlet Control SW
A 20 Airbag Cut Off SW
A 21 Airbag Sensor Assembly Center
A 22 Airbag Sensor Assembly Center
A 23 Airbag Sensor Assembly Center
A 24 Airbag Squib (Front Passenger's Airbag Assembly)
A 25 Airbag Squib (Front Passenger's Airbag Assembly)
A 26 Airbag Squib (Steering Wheel Pad)
A 27 Antenna Amplifier

B 4 Blower Motor
B 5 Blower Motor Control
B 6 Blower Resistor
B 7 Blower SW
B 8 Body ECU

C 8 Cigarette Lighter
C 9 Cigarette Lighter Illumination
C 10 Circuit Opening Relay
C 11 Clearance Warning Buzzer
C 12 Clearance Warning ECU
C 13 Clutch Start SW
C 14 Combination Meter
C 15 Combination SW
C 16 Combination SW
C 17 Cornering Assist Monitor Main SW
C 18 Cruise Control Clutch SW

Position of Parts in Instrument Panel

[RHD]

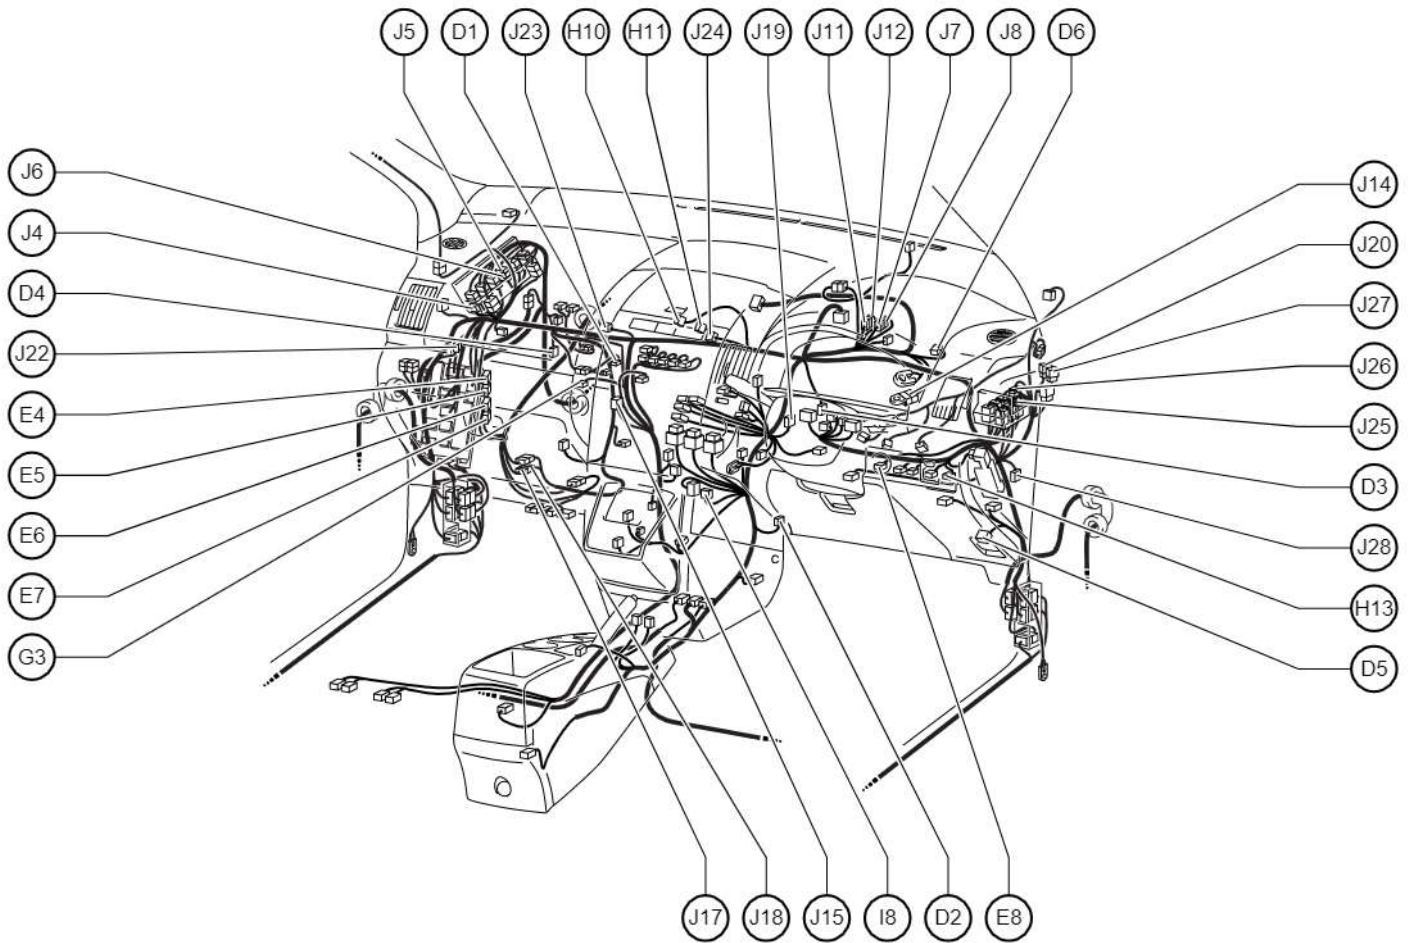

D 1 Damper Servo Motor (Air Inlet)
 D 2 Damper Servo Motor (Air Mix)
 D 3 Damper Servo Motor (Air Vent Mode)
 D 4 Diode (Fan)
 D 5 DLC3
 D 6 Door Control Receiver

E 4 Engine ECU
 E 5 Engine ECU
 E 6 Engine ECU
 E 7 Engine ECU
 E 8 Engine Start/Stop SW

G 3 Glove Box Lamp

H10 Hazard Warning Signal SW Assembly
 H11 Hazard Warning Signal SW Assembly
 H13 Headlamp Leveling SW


I 8 Ignition Control ECU

J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 11 Junction Connector
 J 12 Junction Connector
 J 14 Junction Connector
 J 15 Junction Connector
 J 17 Junction Connector
 J 18 Junction Connector
 J 19 Junction Connector
 J 20 Junction Connector
 J 22 Junction Connector
 J 23 Junction Connector
 J 24 Junction Connector
 J 25 Junction Connector
 J 26 Junction Connector
 J 27 Junction Connector
 J 28 Junction Connector

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

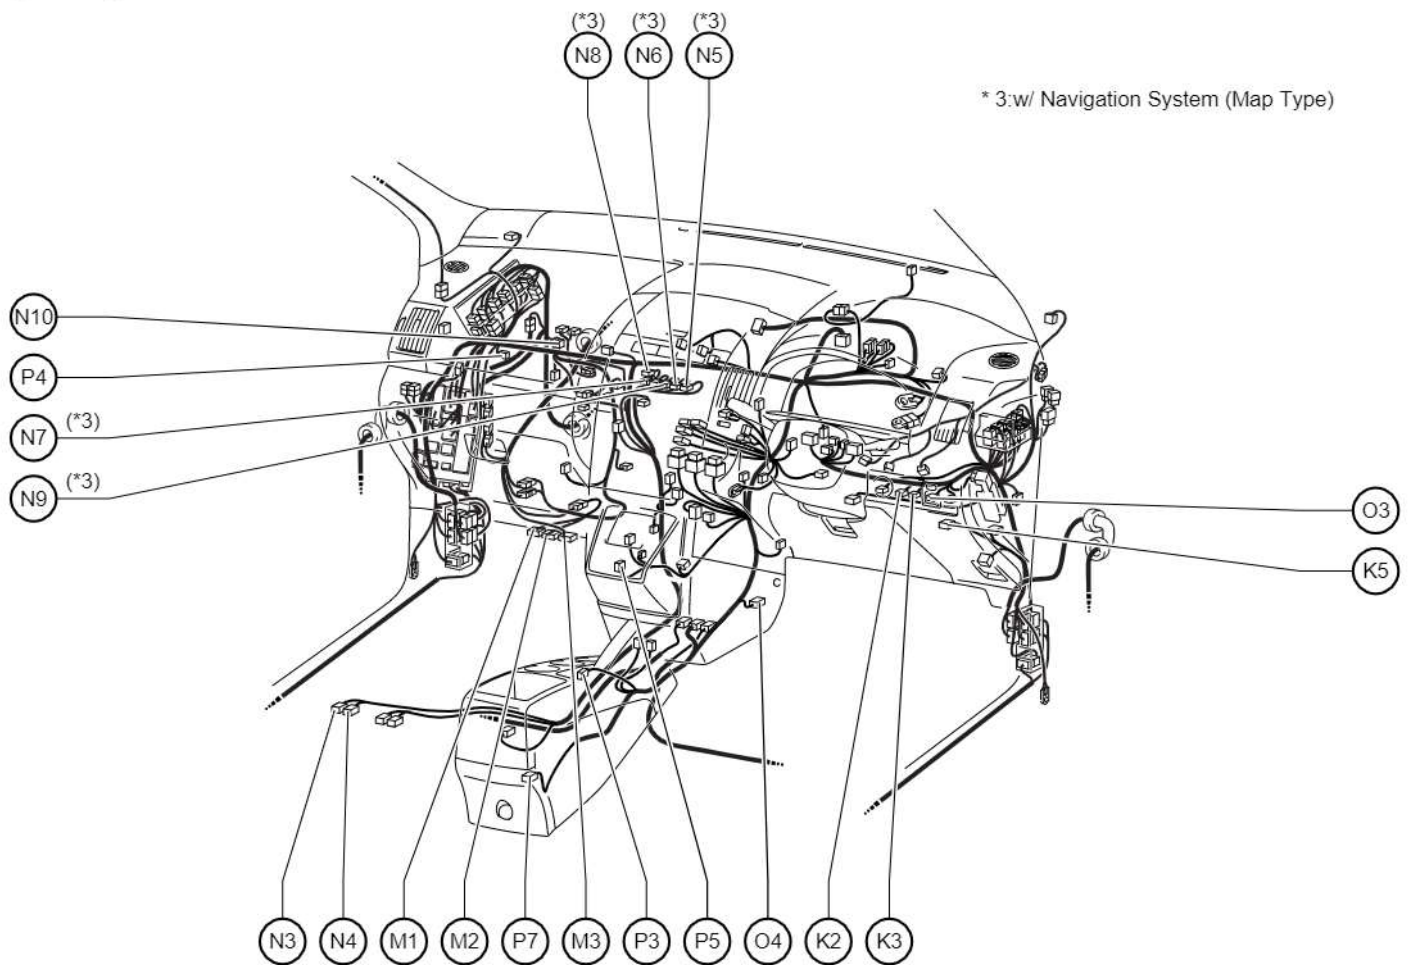

K 2 Key Slot
K 3 Key Slot
K 5 Knee Airbag Squib

M 1 Multi-mode Manual Transmission ECU
M 2 Multi-mode Manual Transmission ECU
M 3 Multi-mode Manual Transmission ECU


N 3 Navigation ECU
N 4 Navigation ECU
N 5 Navigation Receiver Assembly
N 6 Navigation Receiver Assembly
N 7 Navigation Receiver Assembly
N 8 Navigation Receiver Assembly
N 9 Navigation Receiver Assembly
N10 Noise Filter (Rear Window Defogger No.1)

O 3 Outer Mirror SW
O 4 Oxygen Sensor (Bank 1 Sensor 2)

P 3 Parking Brake SW
P 4 Parking Brake SW Resistor
P 5 Pattern Select SW
P 7 Power Point Socket

Position of Parts in Instrument Panel

[RHD]

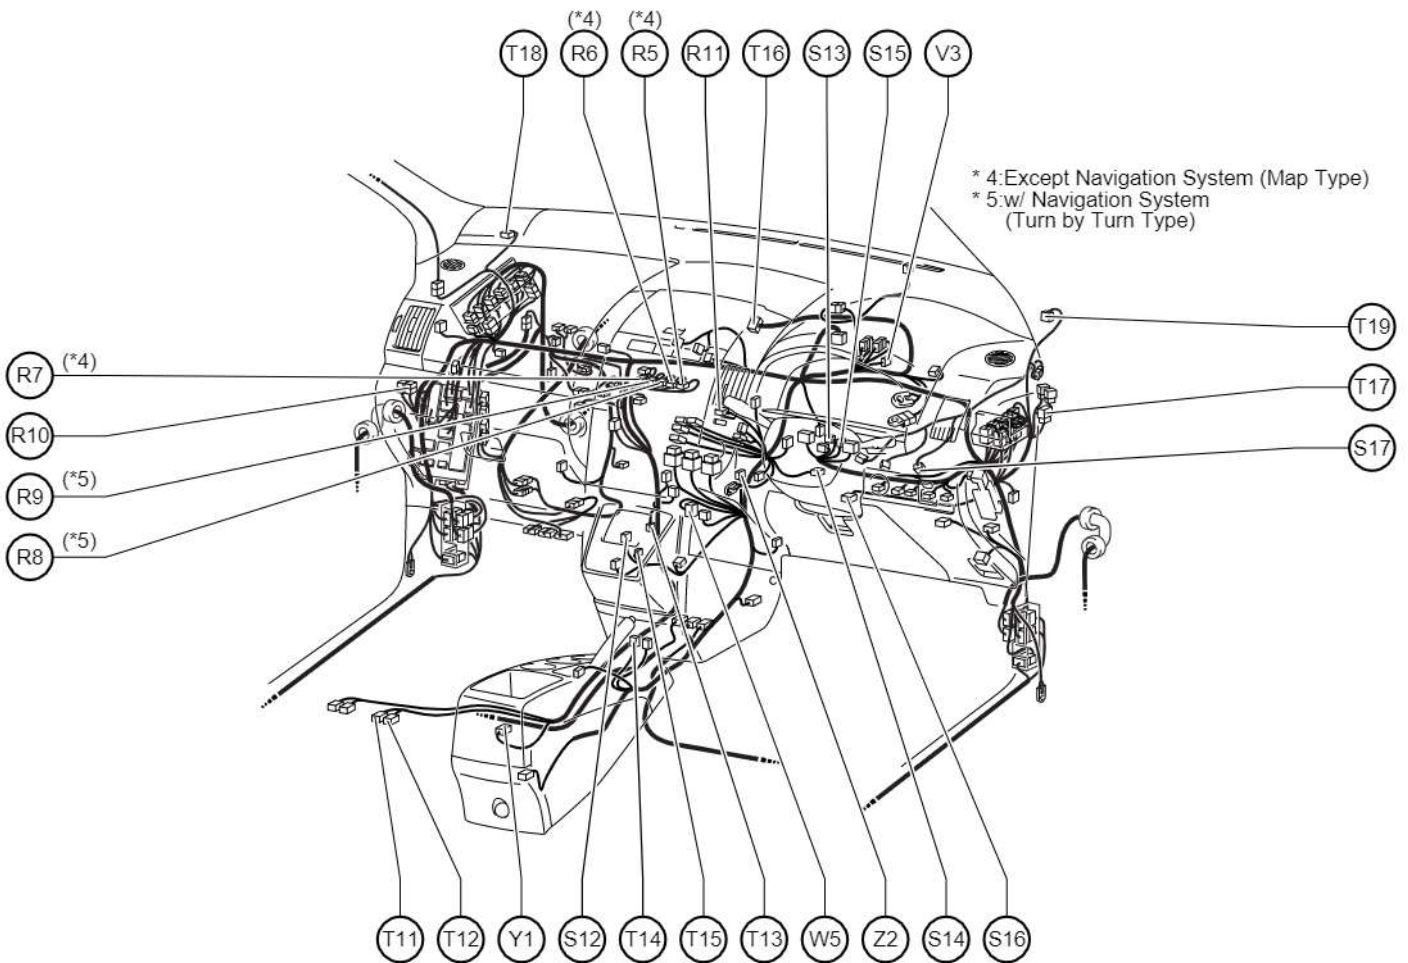

* 4: Except Navigation System (Map Type)
* 5: w/ Navigation System (Turn by Turn Type)

R 5 Radio Receiver Assembly
R 6 Radio Receiver Assembly
R 7 Radio Receiver Assembly
R 8 Radio Receiver Assembly
R 9 Radio Receiver Assembly
R10 Rear Window Defogger Relay
R11 Rear Window Defogger SW

S12 Shift Lever Position Sensor
S13 Spiral Cable
S14 Steering Lock Actuator
S15 Steering Sensor (Back Guide Monitor)
S16 Steering Sensor (VSC)
S17 Stop Lamp SW

T11 Television Camera Controller
T12 Television Camera Controller
T13 Temp. Control SW (Max Hot)
T14 Traction Control SW
T15 Transmission Shift Main SW
T16 Transponder Key ECU
T17 Turn Signal Flasher
T18 Tweeter (LH)
T19 Tweeter (RH)

V 3 VSC Warning Buzzer

W 5 Windshield Wiper Relay


Y 1 Yaw Rate Sensor

Z 2 Option Connector (TVSS ECU)

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

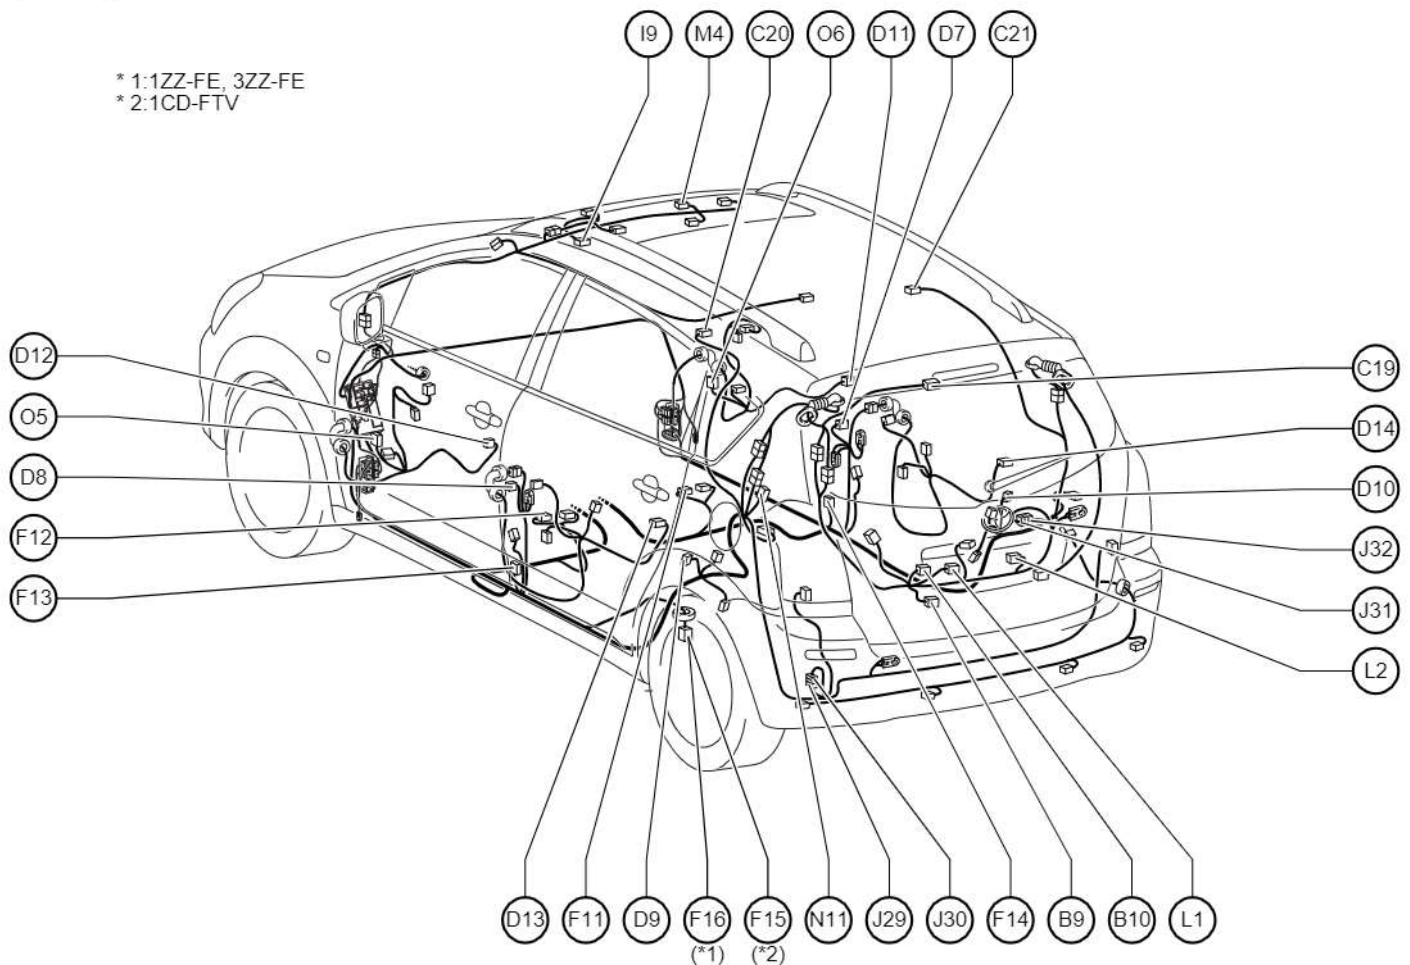

B 9 Back Door Lock Assembly
B10 Back Door Opener SW

C19 Center Stop Lamp
C20 Curtain Shield Airbag Squib (LH)
C21 Curtain Shield Airbag Squib (RH)

D 7 Door Courtesy SW (Driver's Side)
D 8 Door Courtesy SW (Front Passenger's Side)
D 9 Door Courtesy SW (Rear LH)
D10 Door Courtesy SW (Rear RH)
D11 Door Lock Assembly (Driver's Side)
D12 Door Lock Assembly (Front Passenger's Side)
D13 Door Lock Assembly (Rear LH)
D14 Door Lock Assembly (Rear RH)

F 11 Front Seat Inner Belt (Driver's Side)
F 12 Front Seat Inner Belt (Front Passenger's Side)
F 13 Front Seat Outer Belt (LH)
F 14 Front Seat Outer Belt (RH)
F 15 Fuel Sender Gage
F 16 Fuel Suction Pump and Gage Assembly

I 9 Inner Rear View Mirror

J 29 Junction Connector
J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector

L 1 License Plate Lamp (LH)
L 2 License Plate Lamp (RH)


M 4 Map Lamp

N 11 Noise Filter (Rear Window Defogger No.2)

O 5 Outer Rear View Mirror (LH)
O 6 Outer Rear View Mirror (RH)

Position of Parts in Body

[RHD]

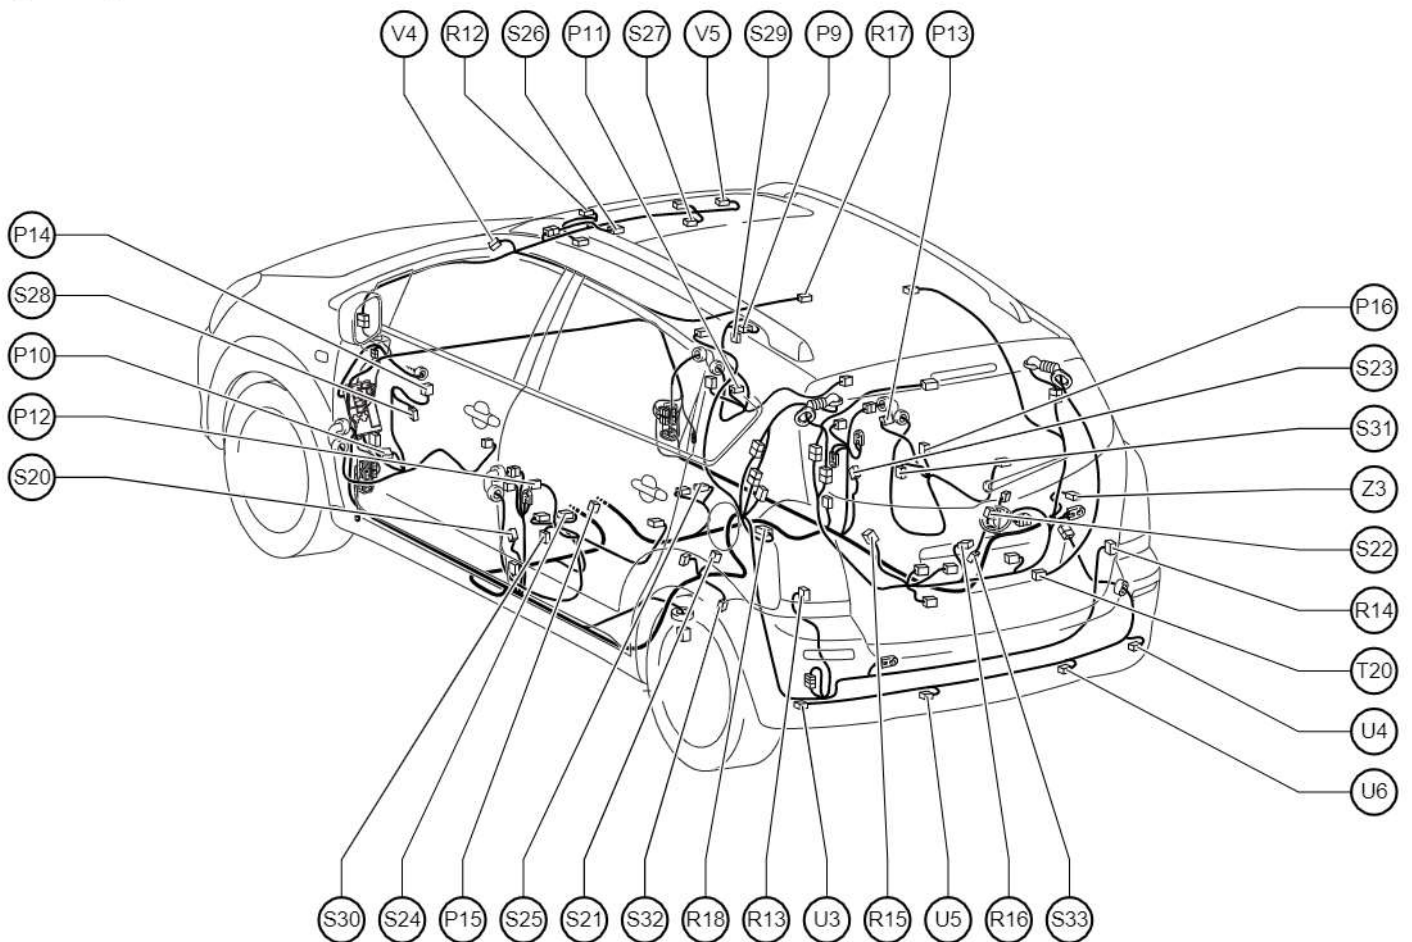

P 9 Power Window Master SW
 P10 Power Window Regulator Motor (Front LH)
 P11 Power Window Regulator Motor (Front RH)
 P12 Power Window Regulator Motor (Rear LH)
 P13 Power Window Regulator Motor (Rear RH)
 P14 Power Window SW (Front Passenger's Side)
 P15 Power Window SW (Rear LH)
 P16 Power Window SW (Rear RH)

R12 Rain Sensor
 R13 Rear Combination Lamp (LH)
 R14 Rear Combination Lamp (RH)
 R15 Rear Window Defogger
 R16 Rear Wiper Motor Assembly
 R17 Room Lamp (Center)
 R18 Room Lamp (Luggage)

S20 Side Airbag Sensor (LH)
 S21 Side Airbag Sensor (Rear LH)
 S22 Side Airbag Sensor (Rear RH)
 S23 Side Airbag Sensor (RH)
 S24 Side Airbag Squib (LH)

S25 Side Airbag Squib (RH)
 S26 Sliding Roof Control ECU
 S27 Sliding Roof SW
 S28 Speaker (Front Door LH)
 S29 Speaker (Front Door RH)
 S30 Speaker (Rear Door LH)
 S31 Speaker (Rear Door RH)
 S32 Speed Sensor (Rear LH)
 S33 Speed Sensor (Rear RH)

T20 Television Camera (Rear)

U 3 Ultrasonic Sensor No.1 (Rear LH)
 U 4 Ultrasonic Sensor No.1 (Rear RH)
 U 5 Ultrasonic Sensor No.2 (LH)
 U 6 Ultrasonic Sensor No.2 (RH)

V 4 Vanity Lamp (LH)
 V 5 Vanity Lamp (RH)


Z 3 Option Connector (TVSS Siren)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[LHD : 1ZZ-FE, 3ZZ-FE]

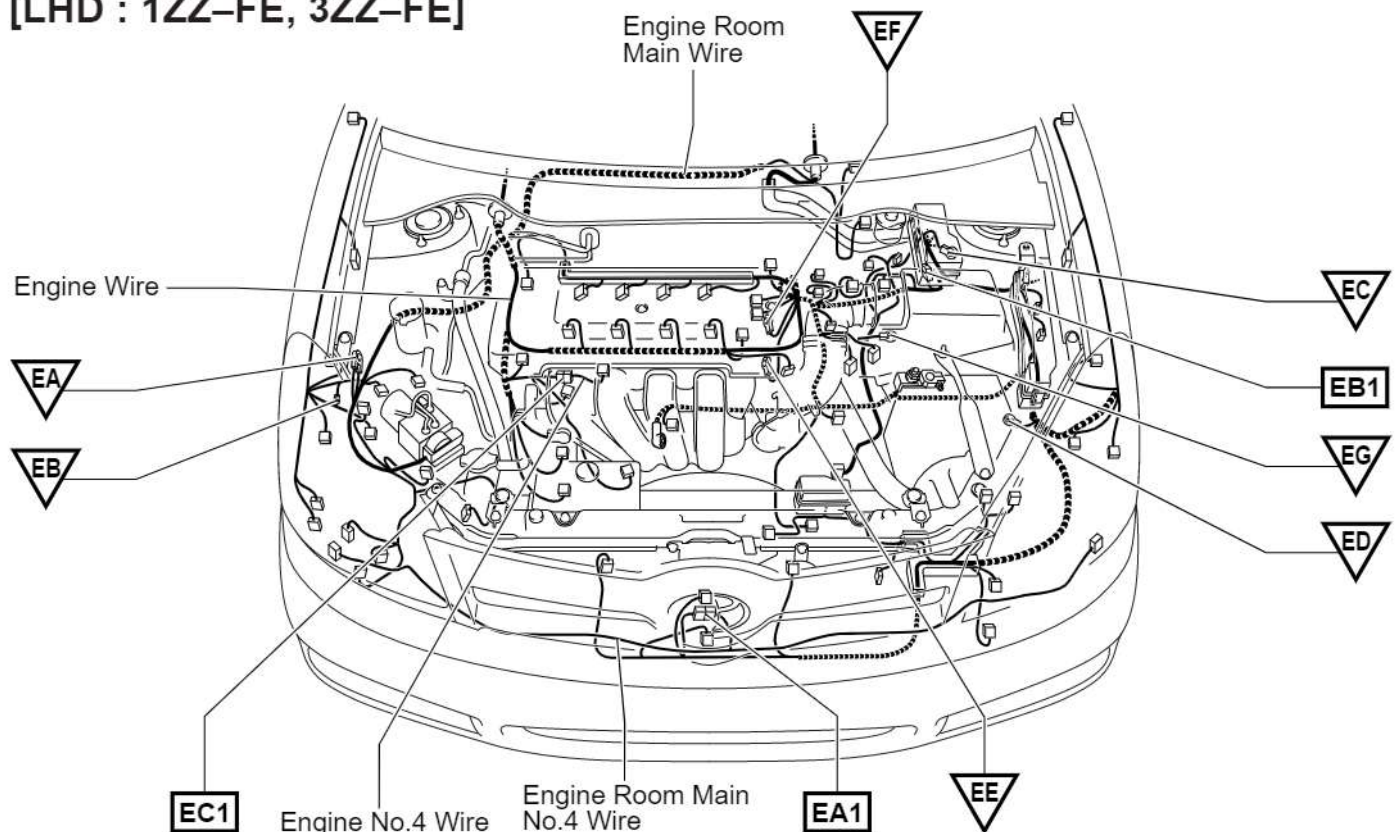

○ : Location of Splice Points

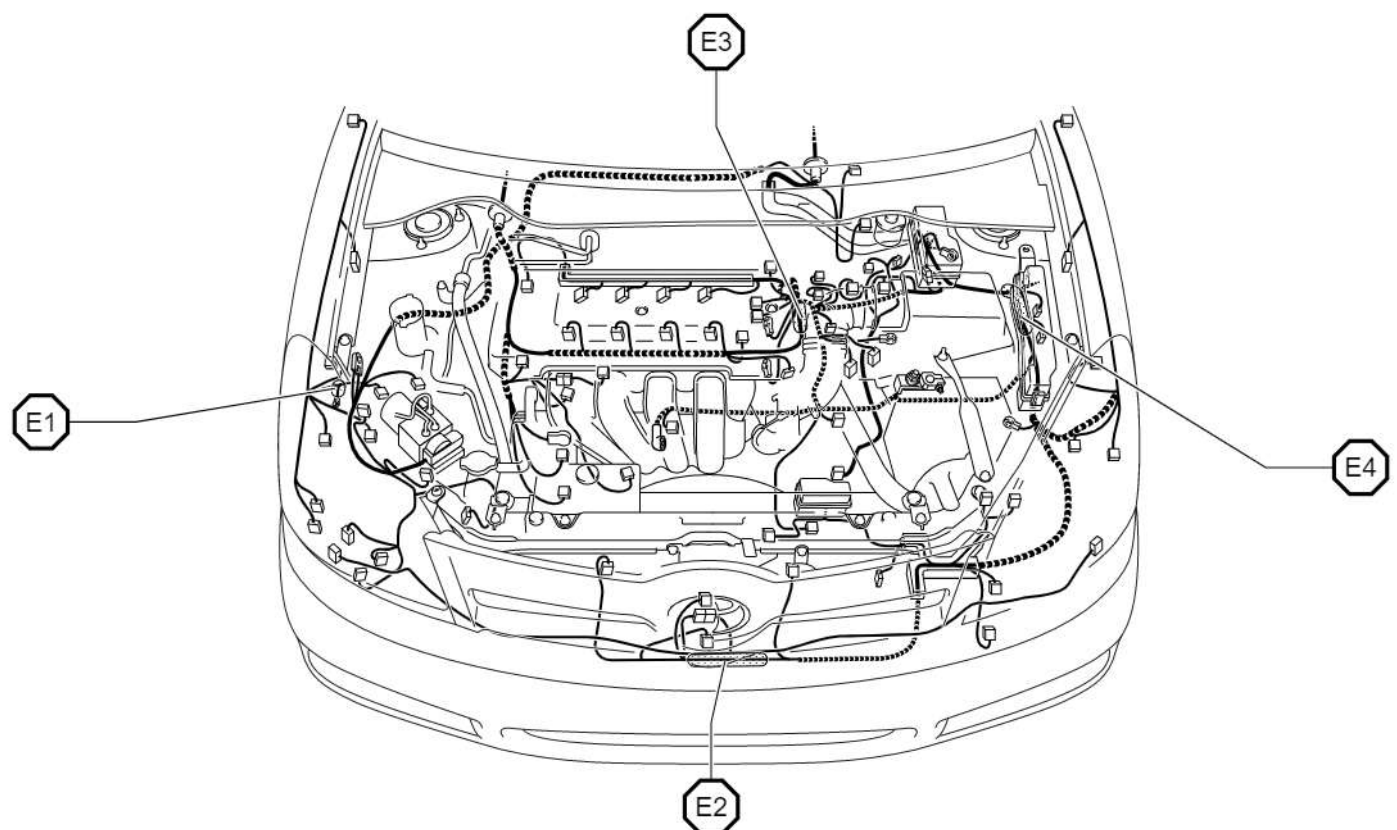

Connector Joining Wire Harness and Wire Harness

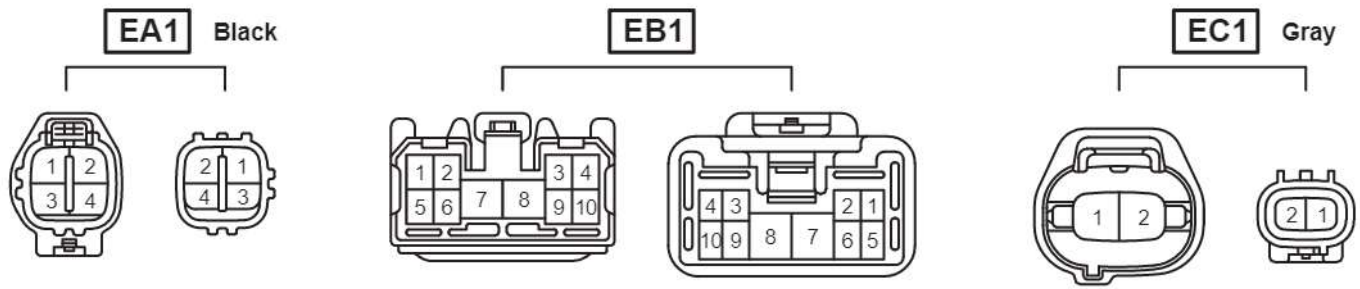


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room Main No.4 Wire (Near the Radiator Fan)
EB1	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
EC1	Engine Wire and Engine No.4 Wire (Near the Alternator)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[LHD : 1CD-FTV]

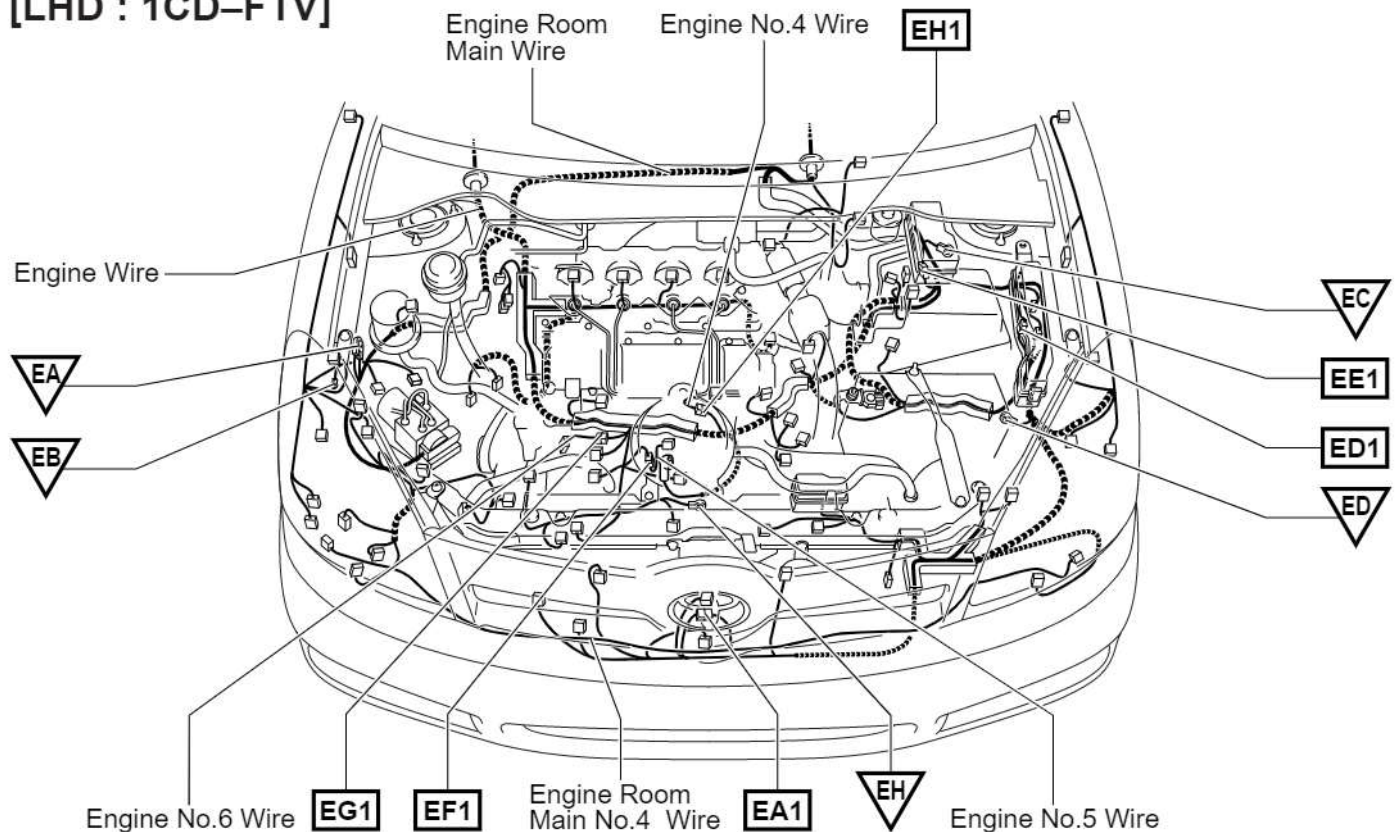

○ : Location of Splice Points

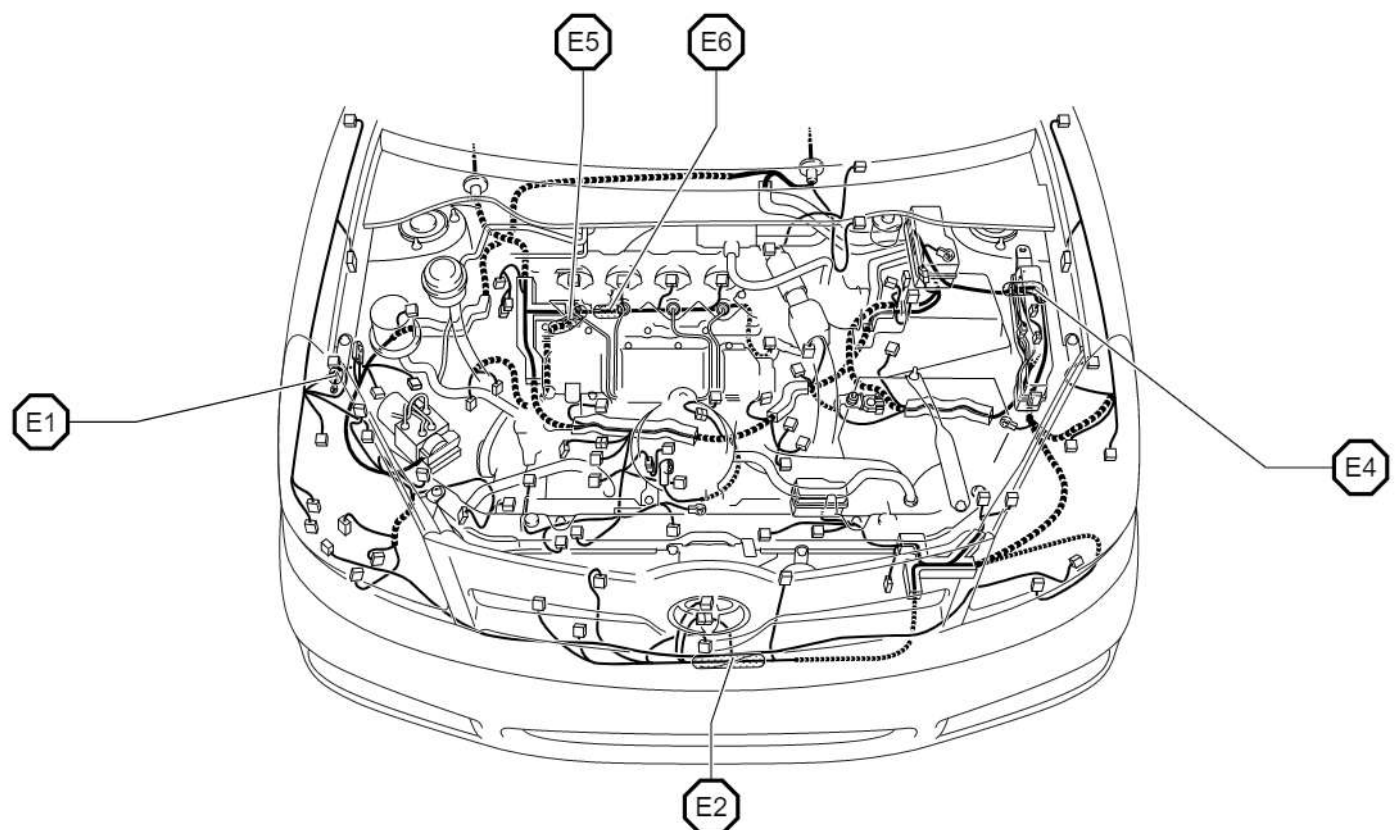

Connector Joining Wire Harness and Wire Harness

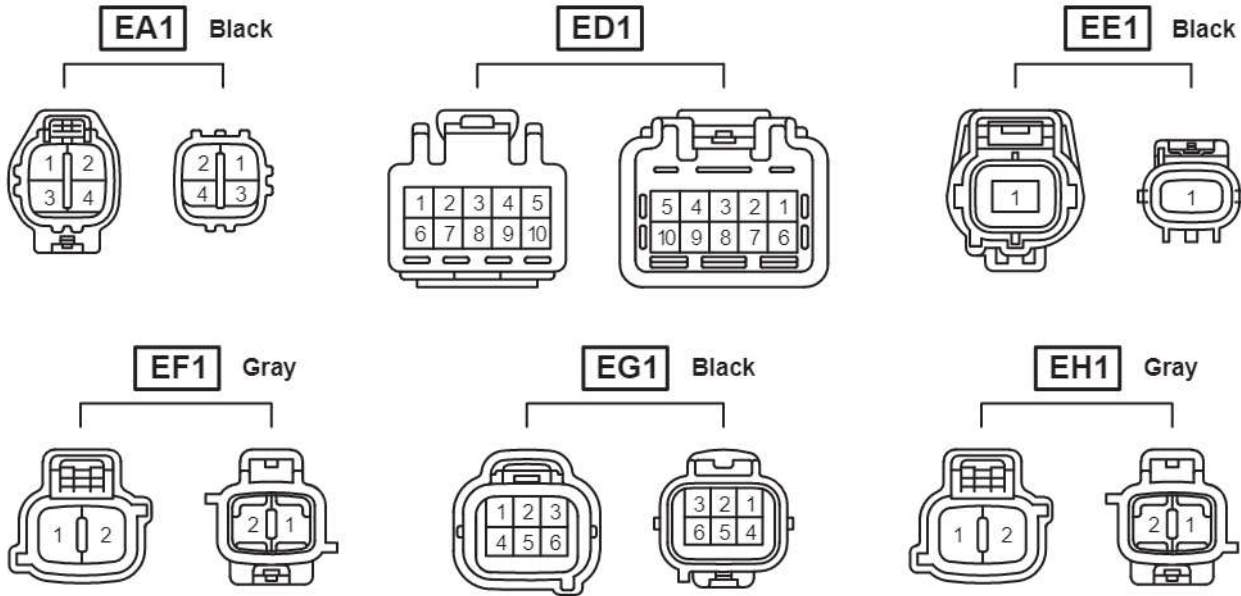


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room Main No.4 Wire (Near the Radiator Fan)
ED1	Engine Wire and Engine Room Main Wire (Engine Compartment Left)
EE1	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
EF1	Engine Wire and Engine No.5 Wire (Near the Starter)
EG1	Engine Wire and Engine No.6 Wire (Near the Starter)
EH1	Engine Wire and Engine No.4 Wire (Near the Starter)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[LHD]

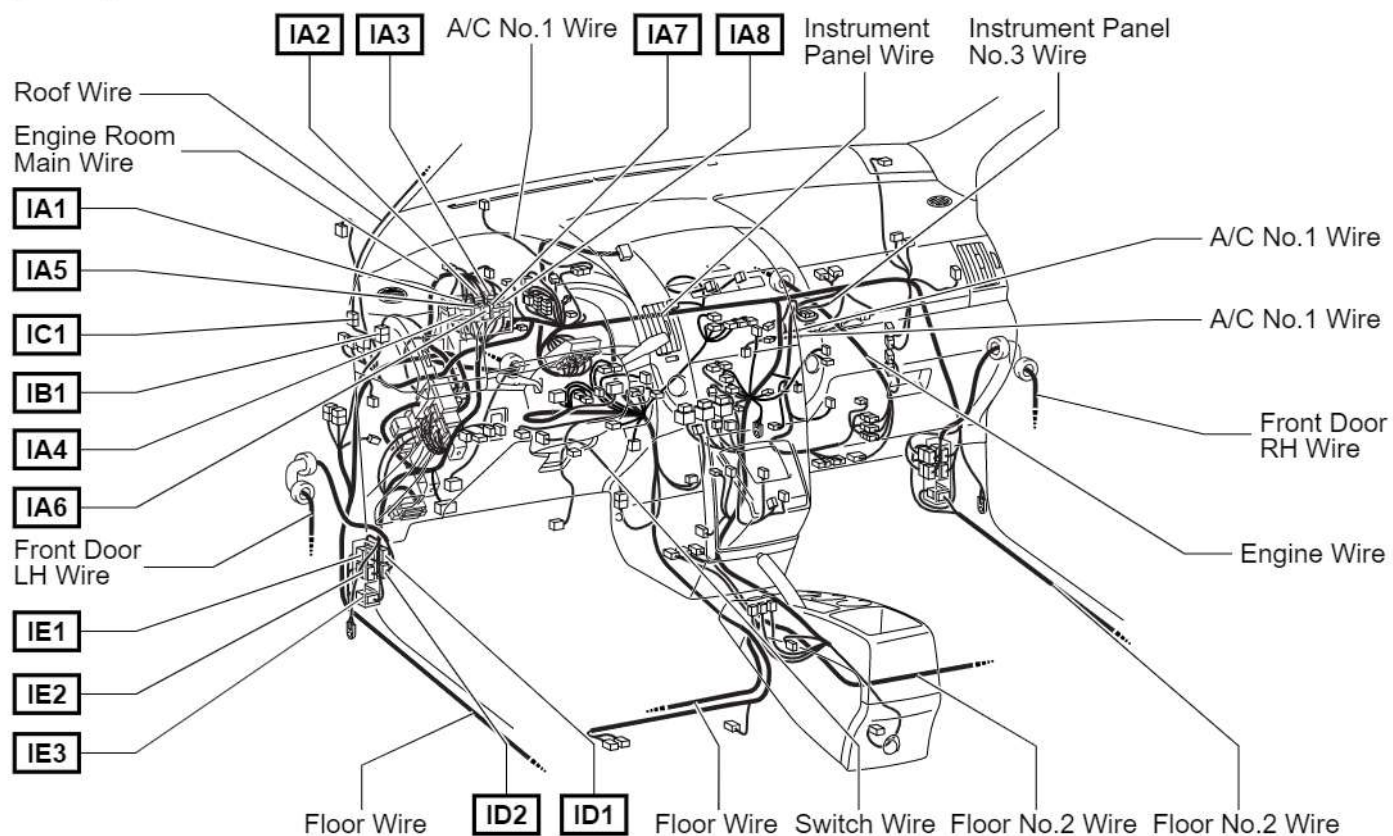

▽ : Location of Ground Points

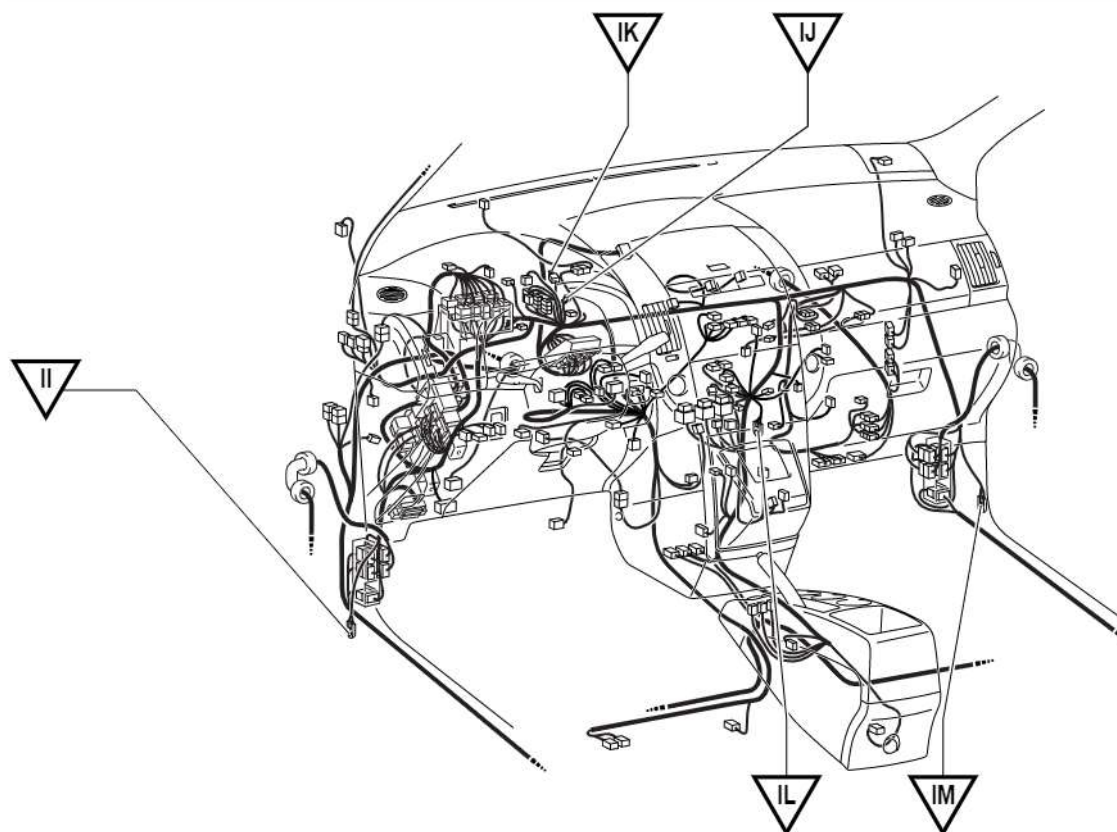

Connector Joining Wire Harness and Wire Harness

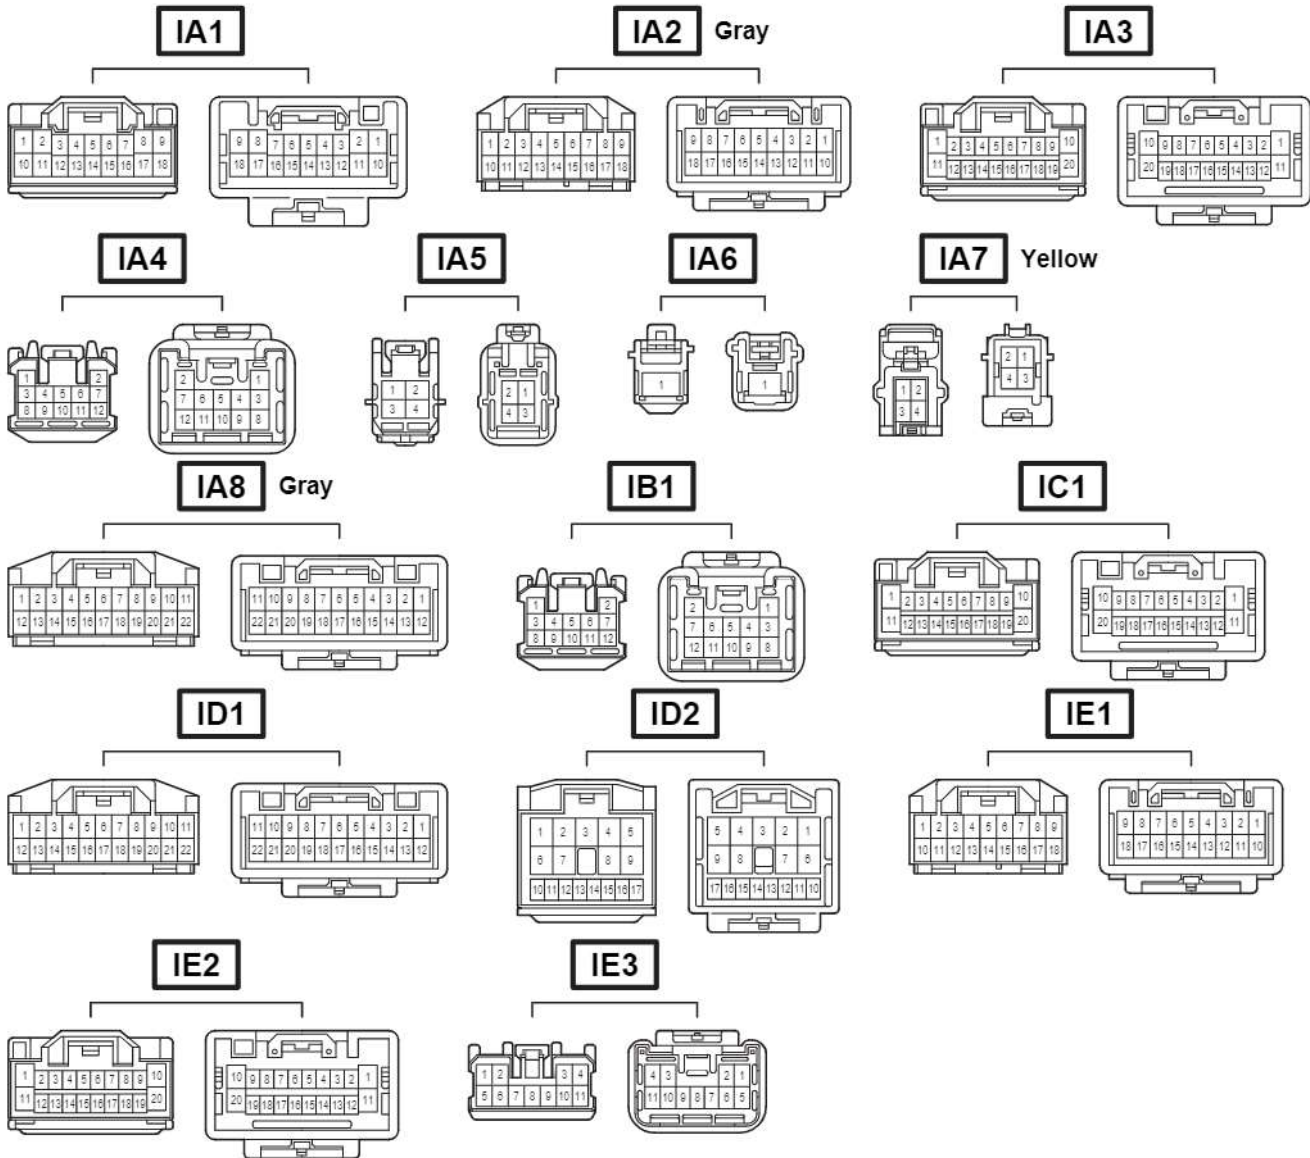


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Instrument Panel Wire (Behind the Combination Meter)
IA2	
IA3	
IA4	
IA5	
IA6	
IA7	
IA8	
IB1	Engine Room Main Wire and Floor Wire (Left Side of the Instrument Panel)
IC1	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
ID1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID2	
IE1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2	
IE3	


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[LHD]

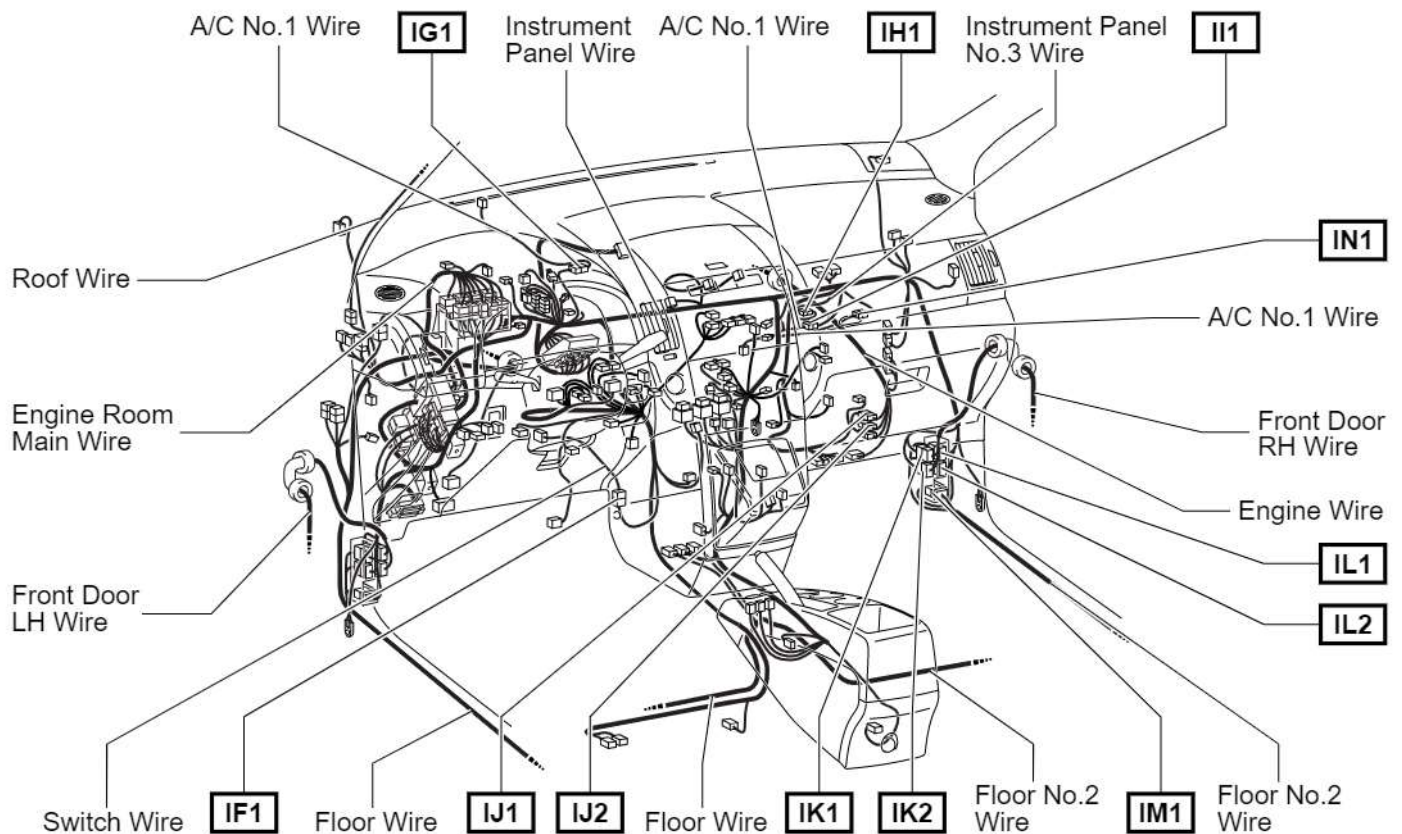

○ : Location of Splice Points

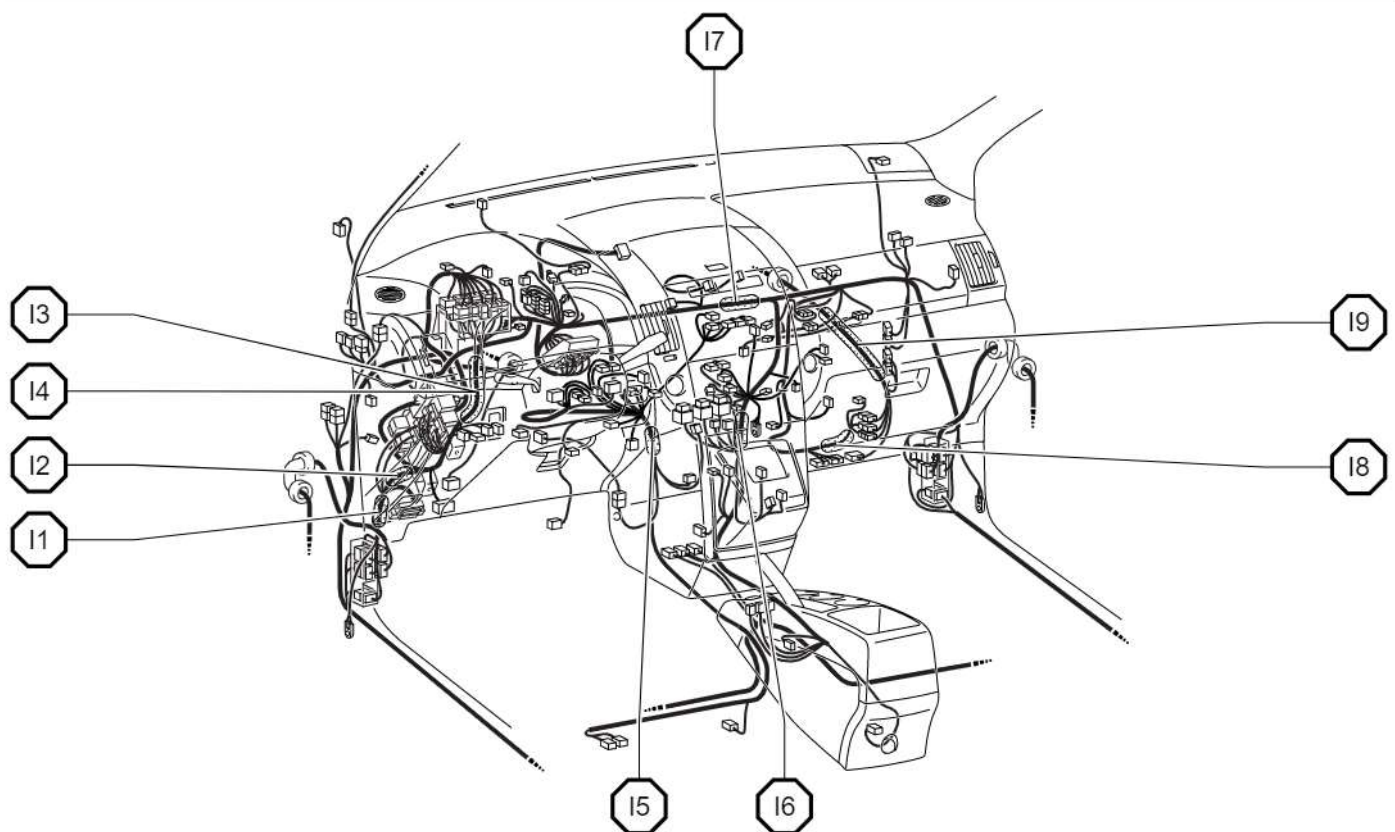

Connector Joining Wire Harness and Wire Harness

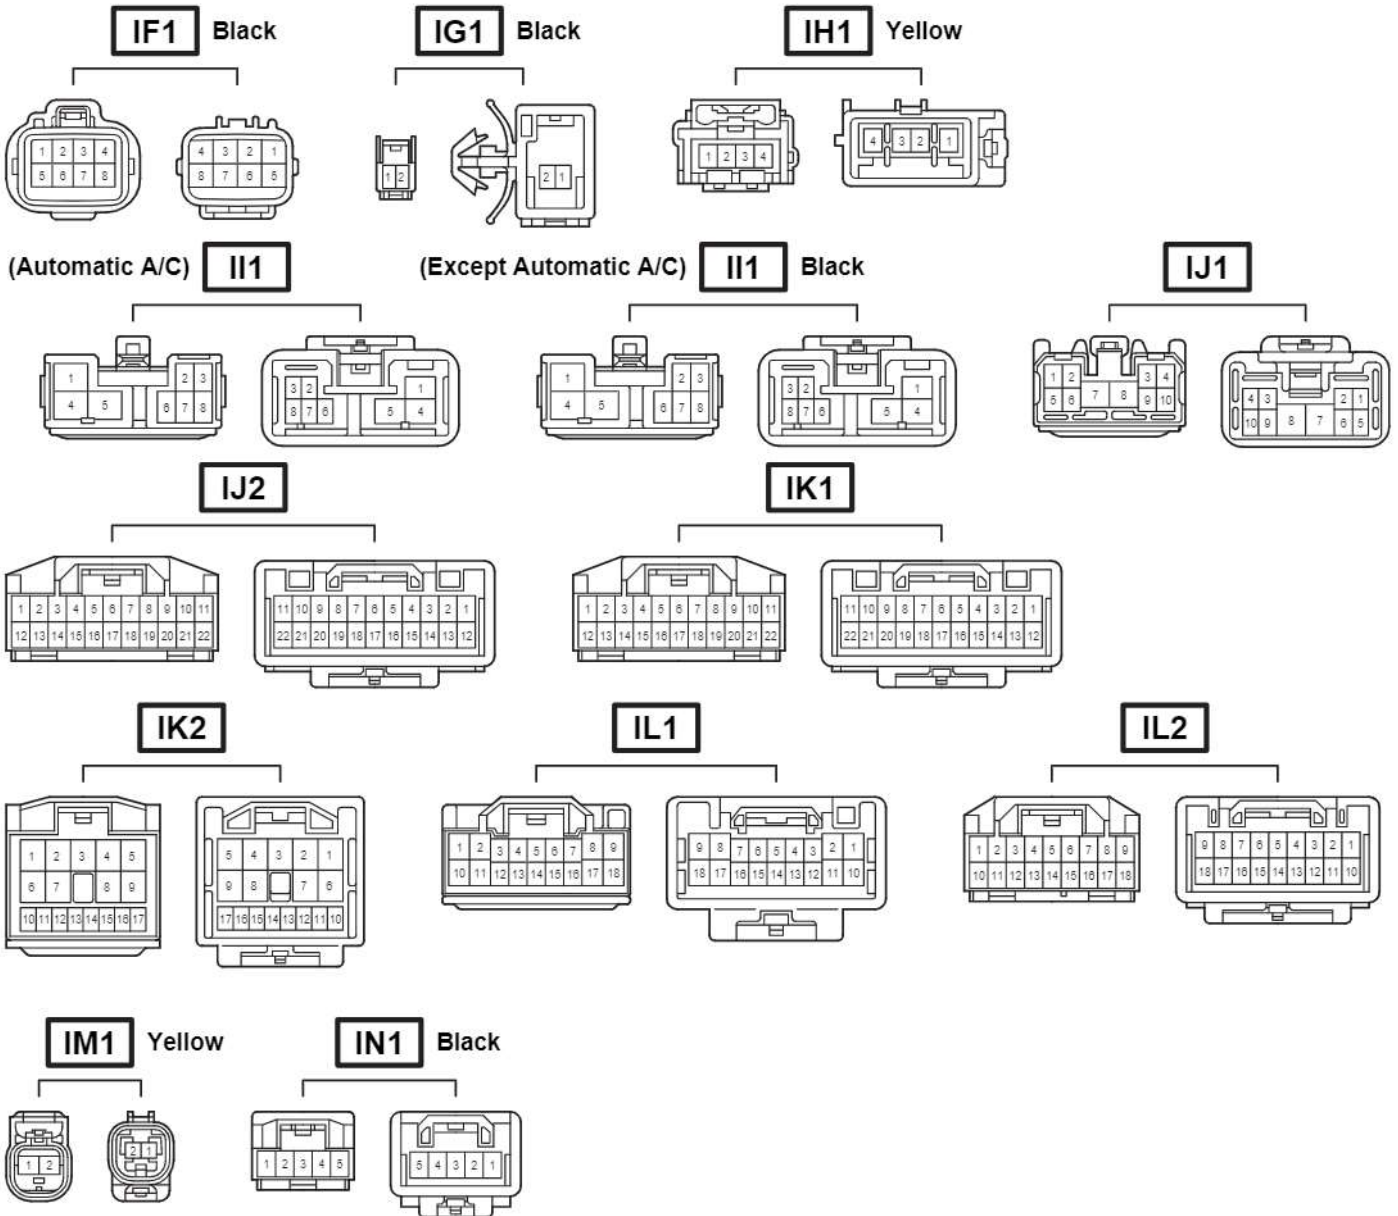


Code	Joining Wire Harness and Wire Harness (Connector Location)
IF1	Instrument Panel Wire and Switch Wire (Instrument Panel Brace LH)
IG1	Instrument Panel Wire and A/C No.1 Wire (Behind the Combination Meter)
IH1	Instrument Panel Wire and Instrument Panel No.3 Wire (Near the Front Passenger's Airbag Assembly)
II1	Instrument Panel Wire and A/C No.1 Wire (Near the A/C Unit)
IJ1	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ2	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IL2	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM1	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IN1	Instrument Panel Wire and A/C No.1 Wire (Near the A/C Unit)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[LHD]

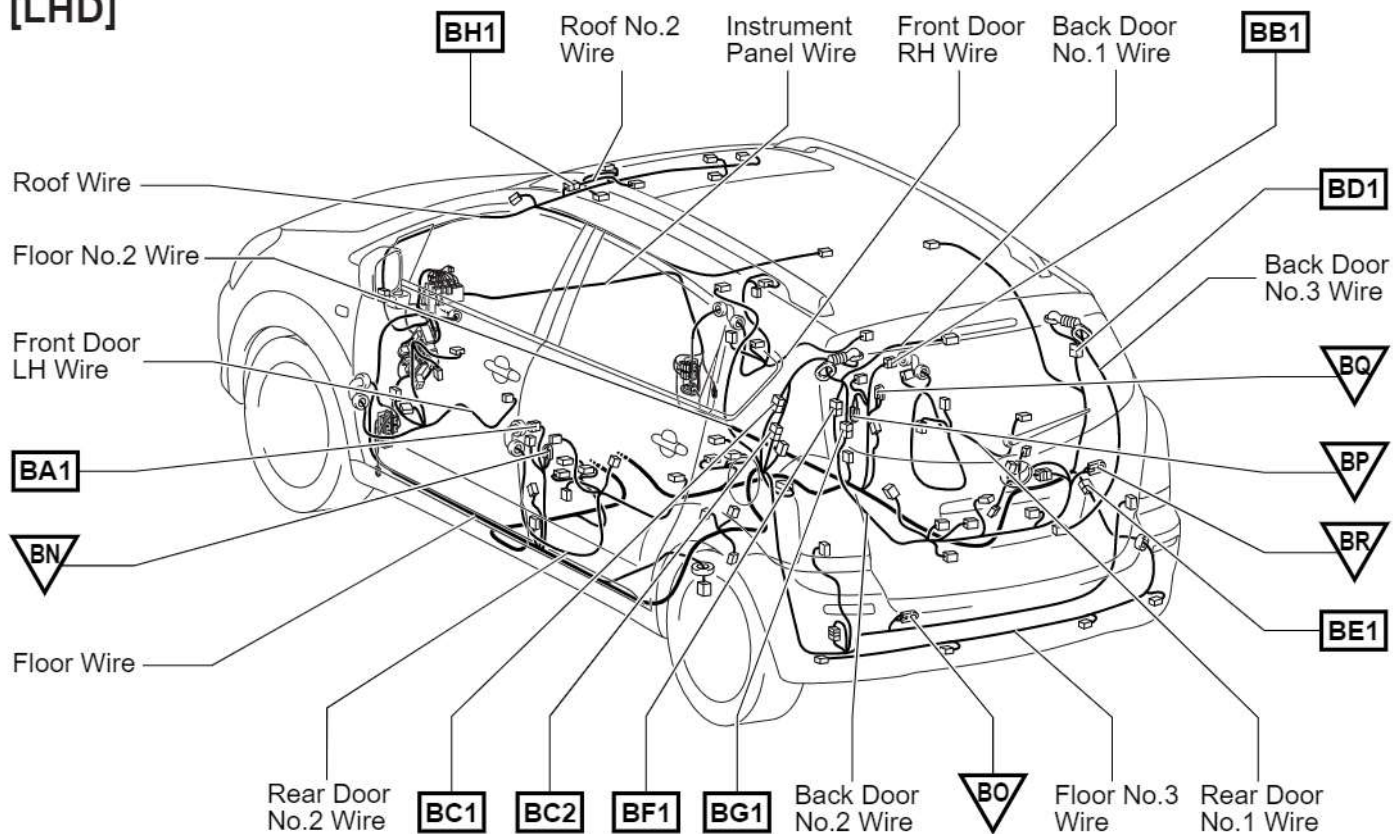

○ : Location of Splice Points

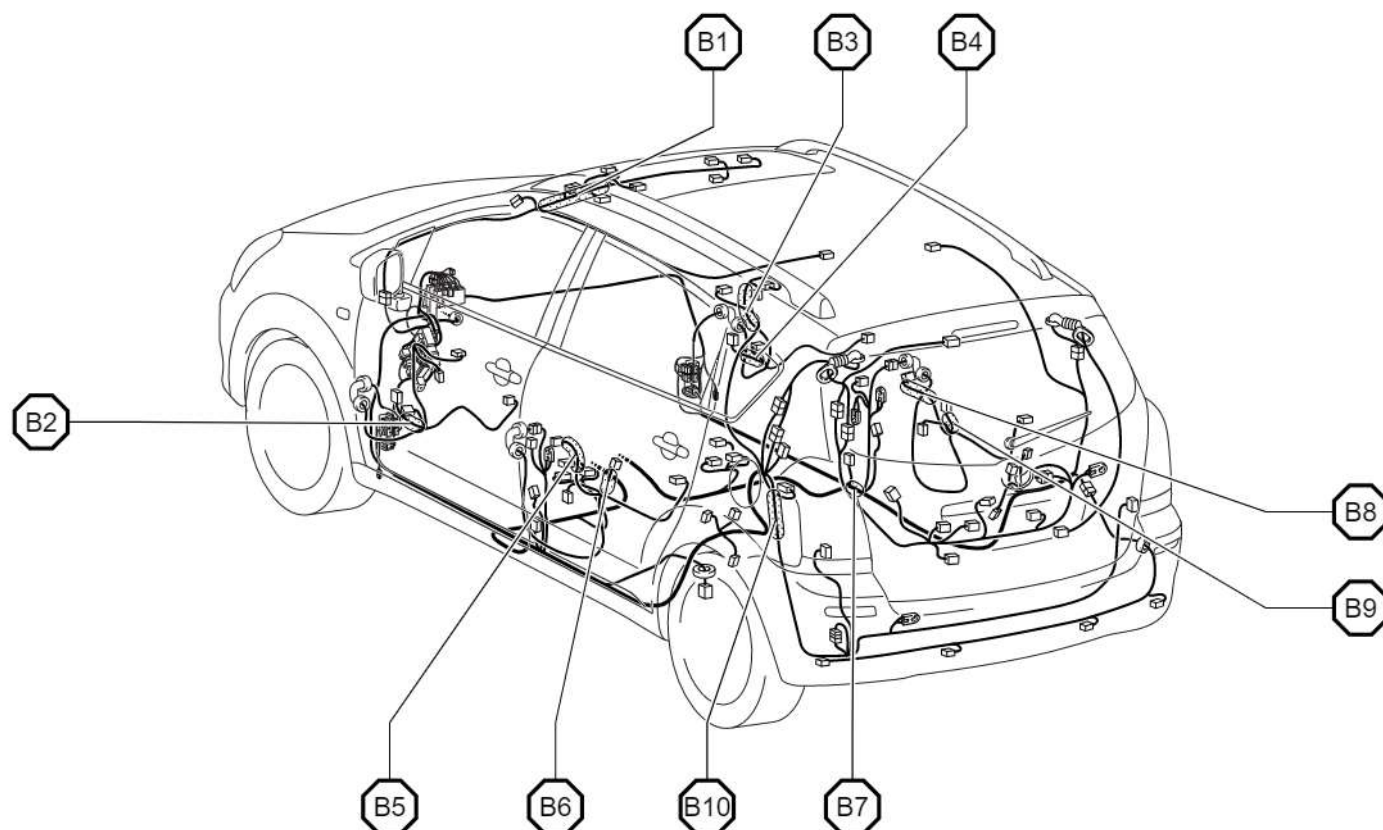

Connector Joining Wire Harness and Wire Harness

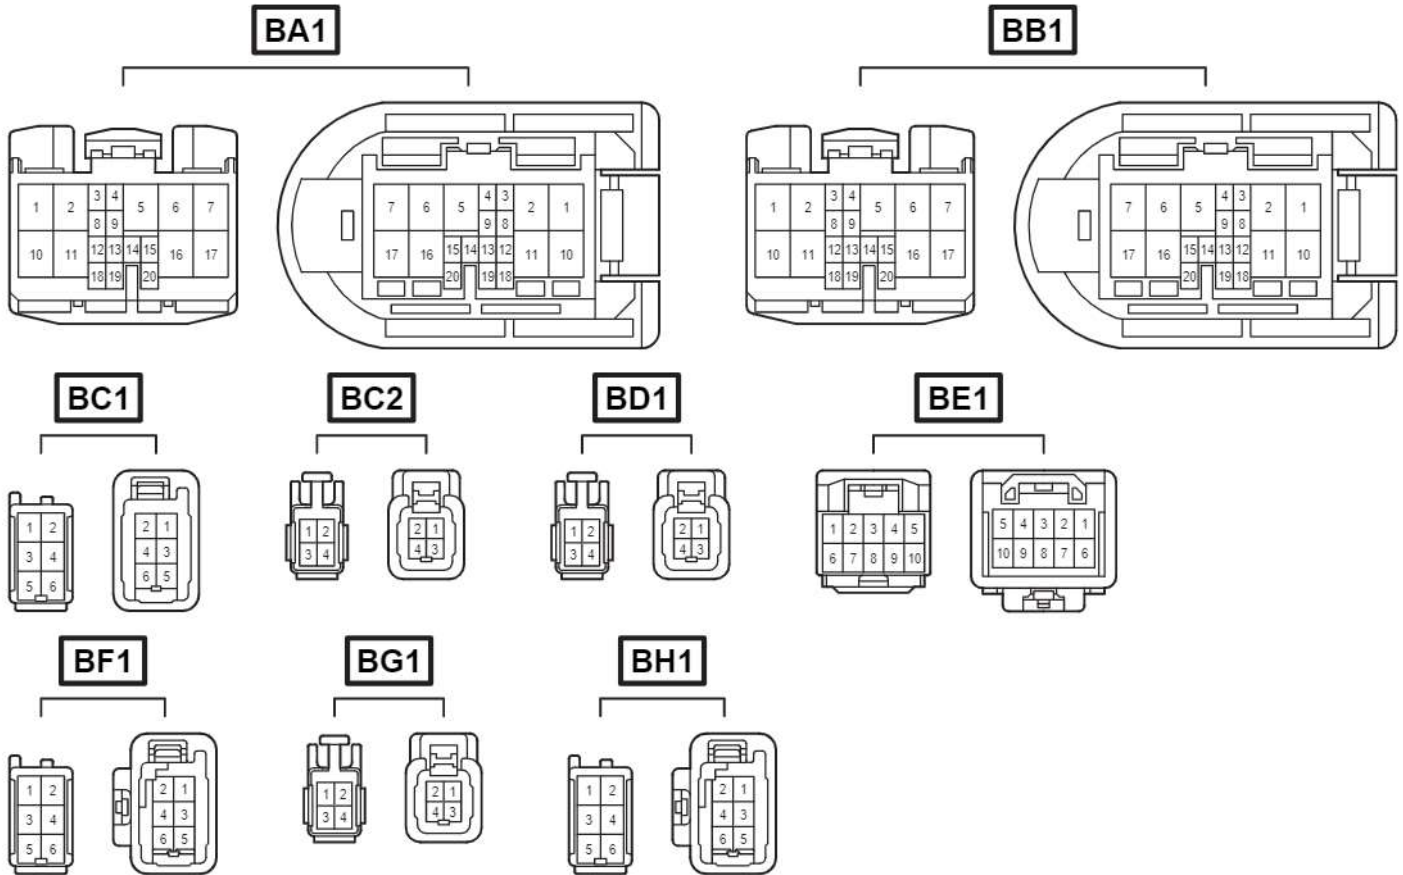


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BB1	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BC1	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BC2	
BD1	Back Door No.3 Wire and Floor No.2 Wire (Right Quarter Panel)
BE1	Floor No.3 Wire and Floor No.2 Wire (Right Quarter Panel)
BF1	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Left)
BG1	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)
BH1	Roof Wire and Roof No.2 Wire (Front Side of the Roof)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[RHD : 1ZZ-FE, 3ZZ-FE]

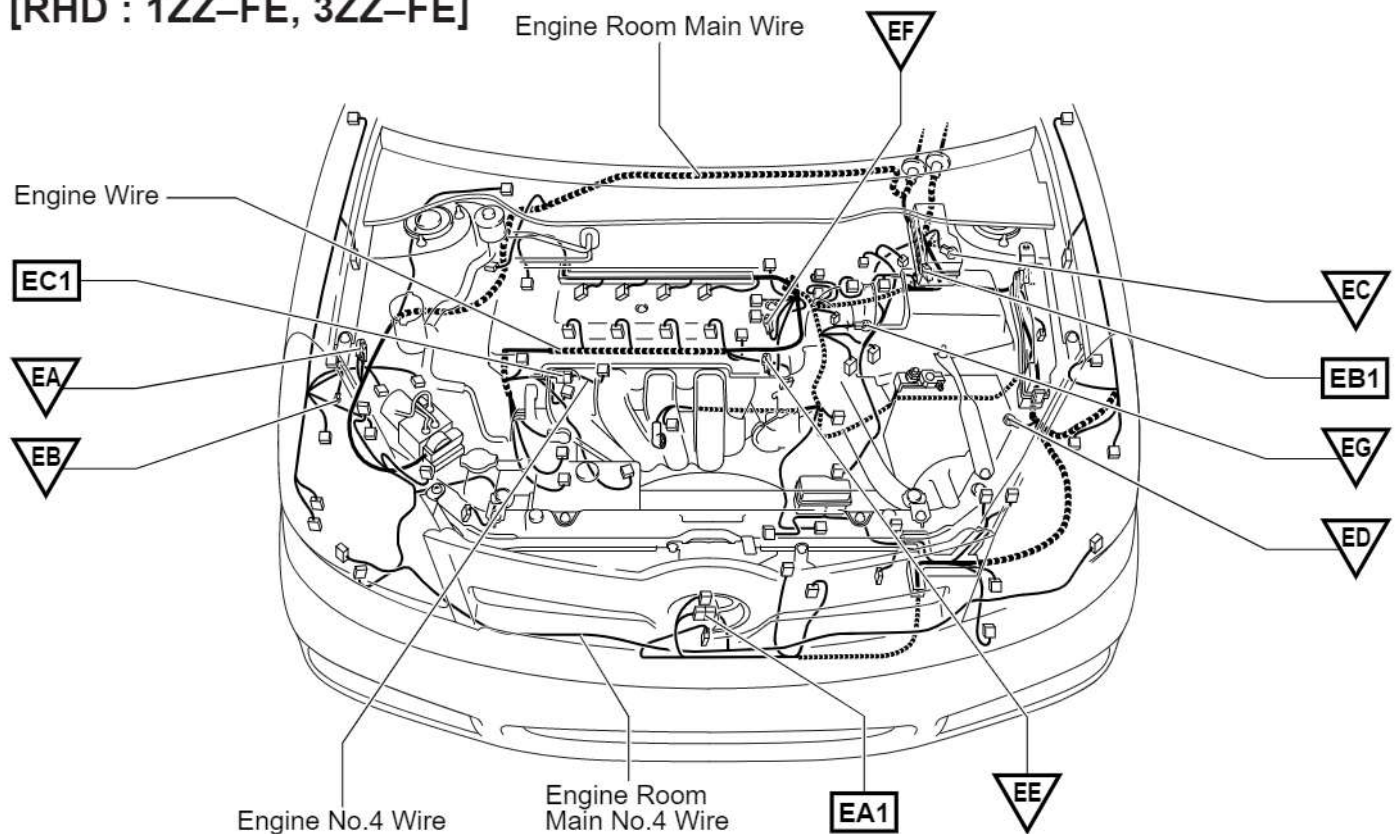

○ : Location of Splice Points

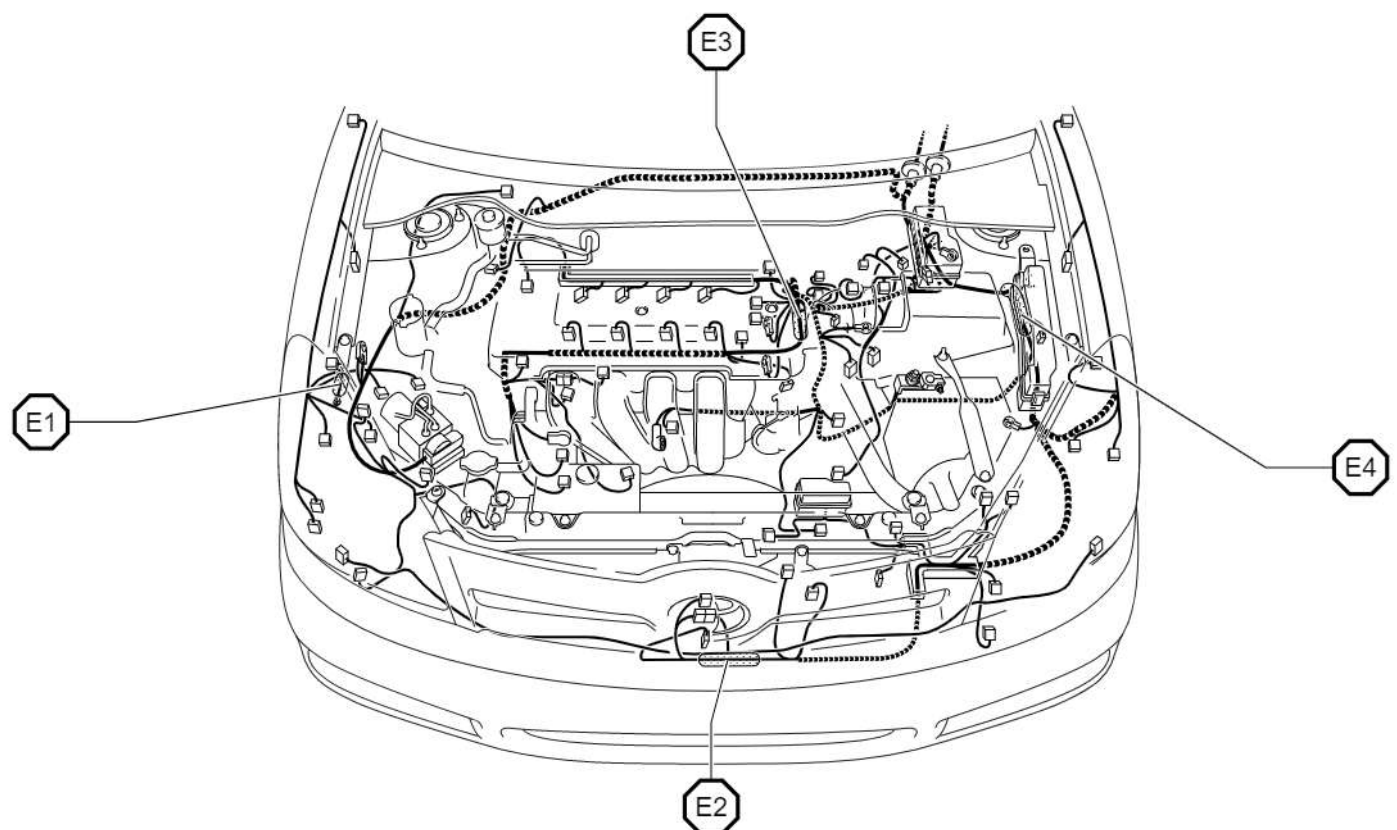

Connector Joining Wire Harness and Wire Harness

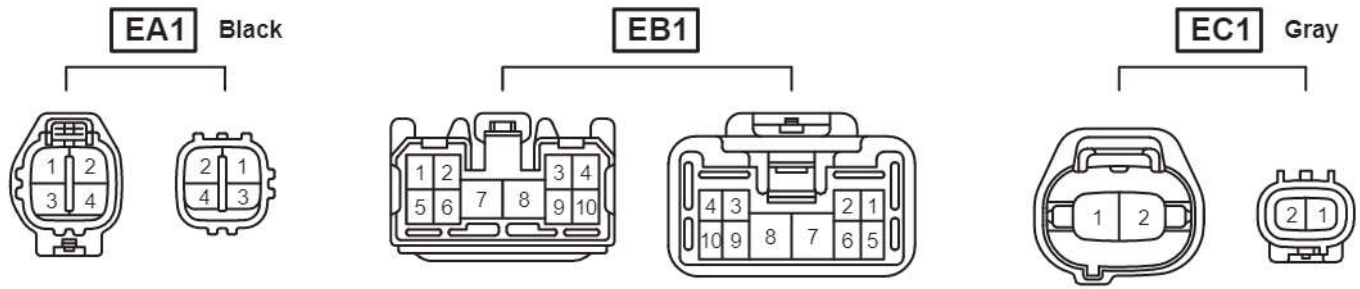


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room Main No.4 Wire (Near the Radiator Fan)
EB1	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
EC1	Engine Wire and Engine No.4 Wire (Near the Alternator)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[RHD : 1CD-FTV]

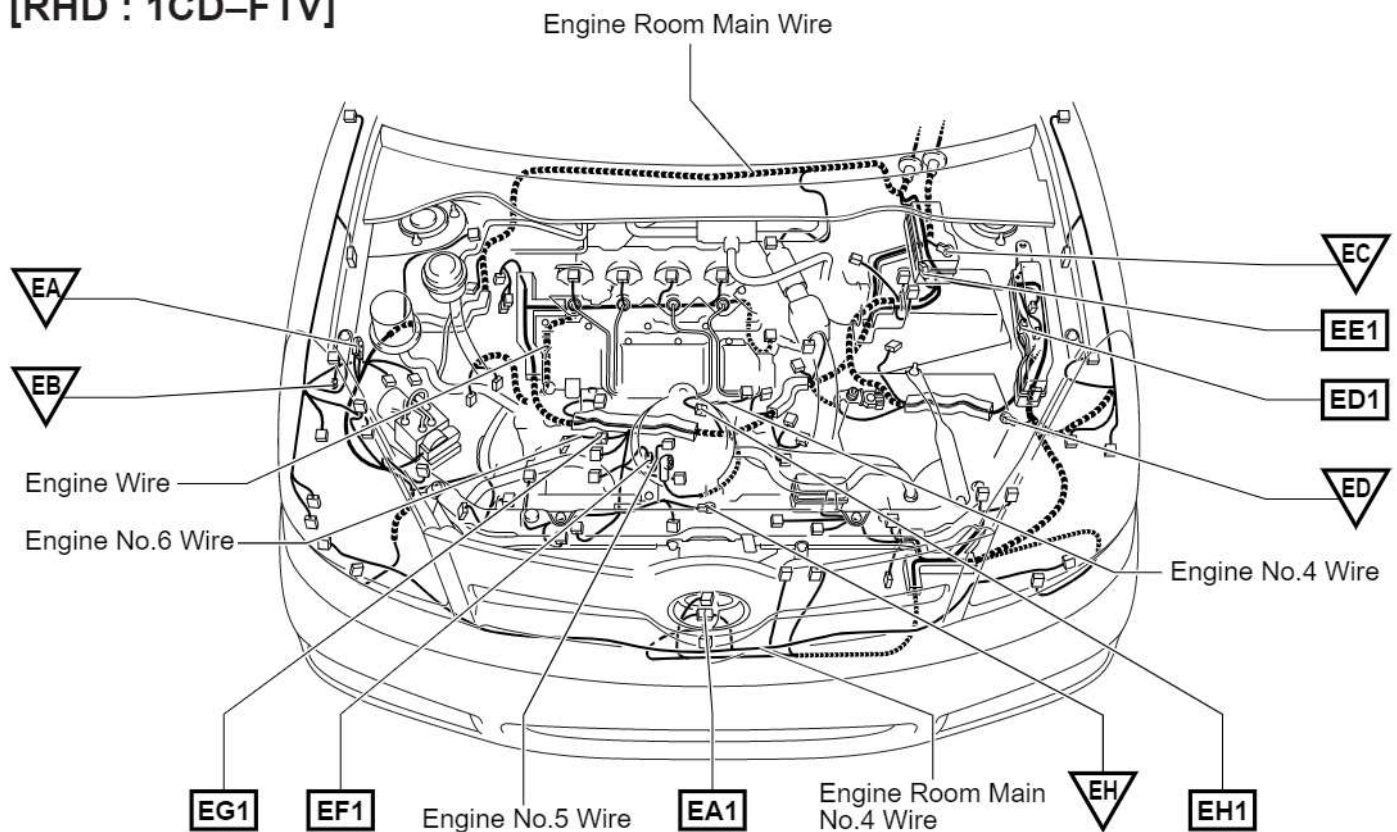

○ : Location of Splice Points

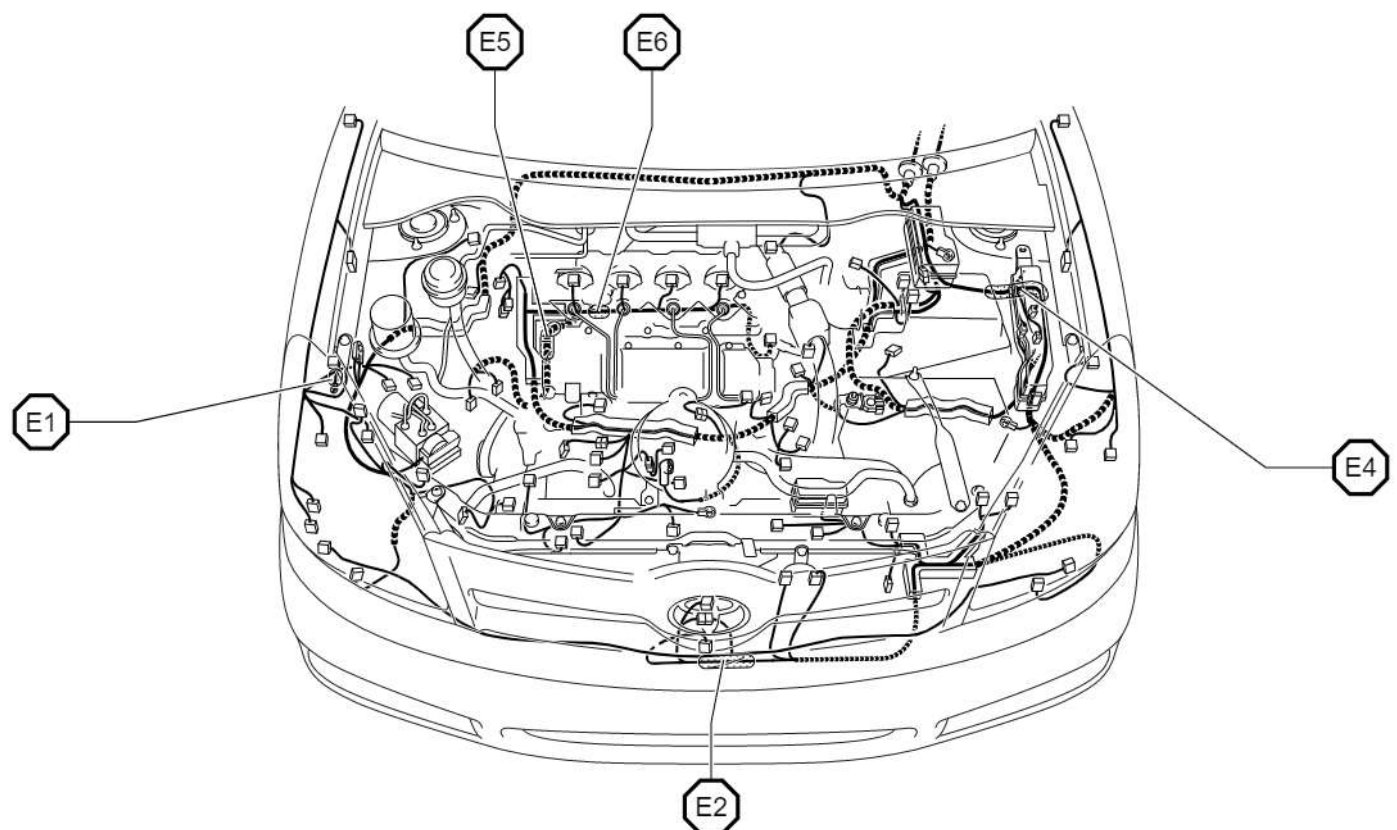

Connector Joining Wire Harness and Wire Harness

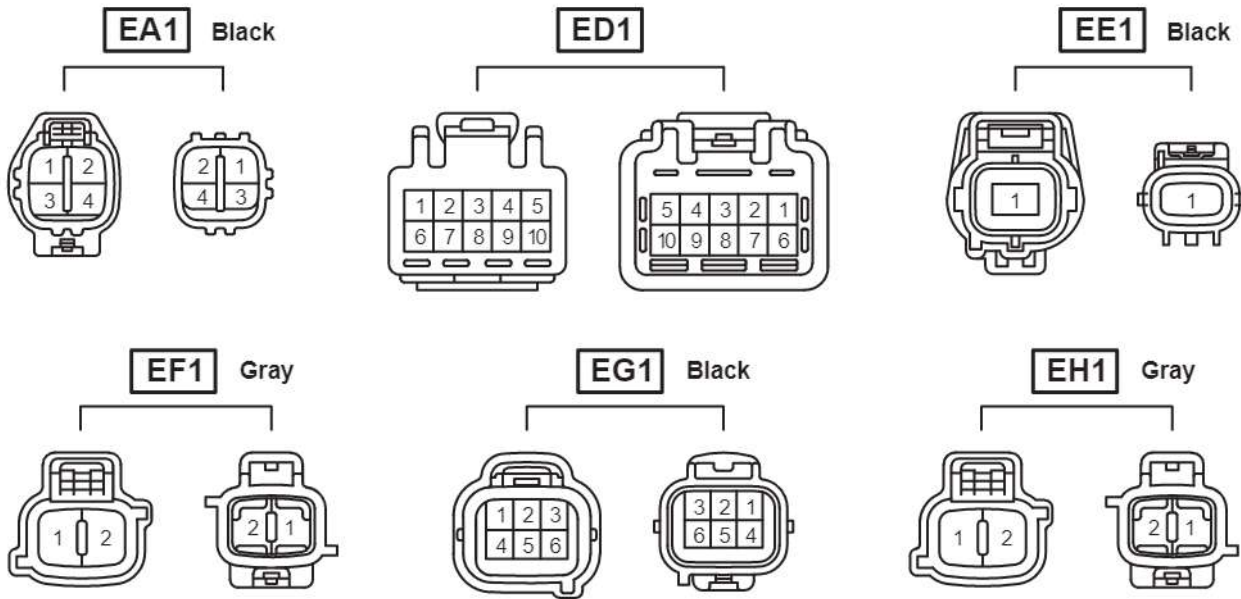


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room Main No.4 Wire (Near the Radiator Fan)
ED1	Engine Wire and Engine Room Main Wire (Engine Compartment Left)
EE1	Engine Wire and Engine Room Main Wire (Left Side of the Suspension Tower)
EF1	Engine Wire and Engine No.5 Wire (Near the Starter)
EG1	Engine Wire and Engine No.6 Wire (Near the Starter)
EH1	Engine Wire and Engine No.4 Wire (Near the Starter)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[RHD]

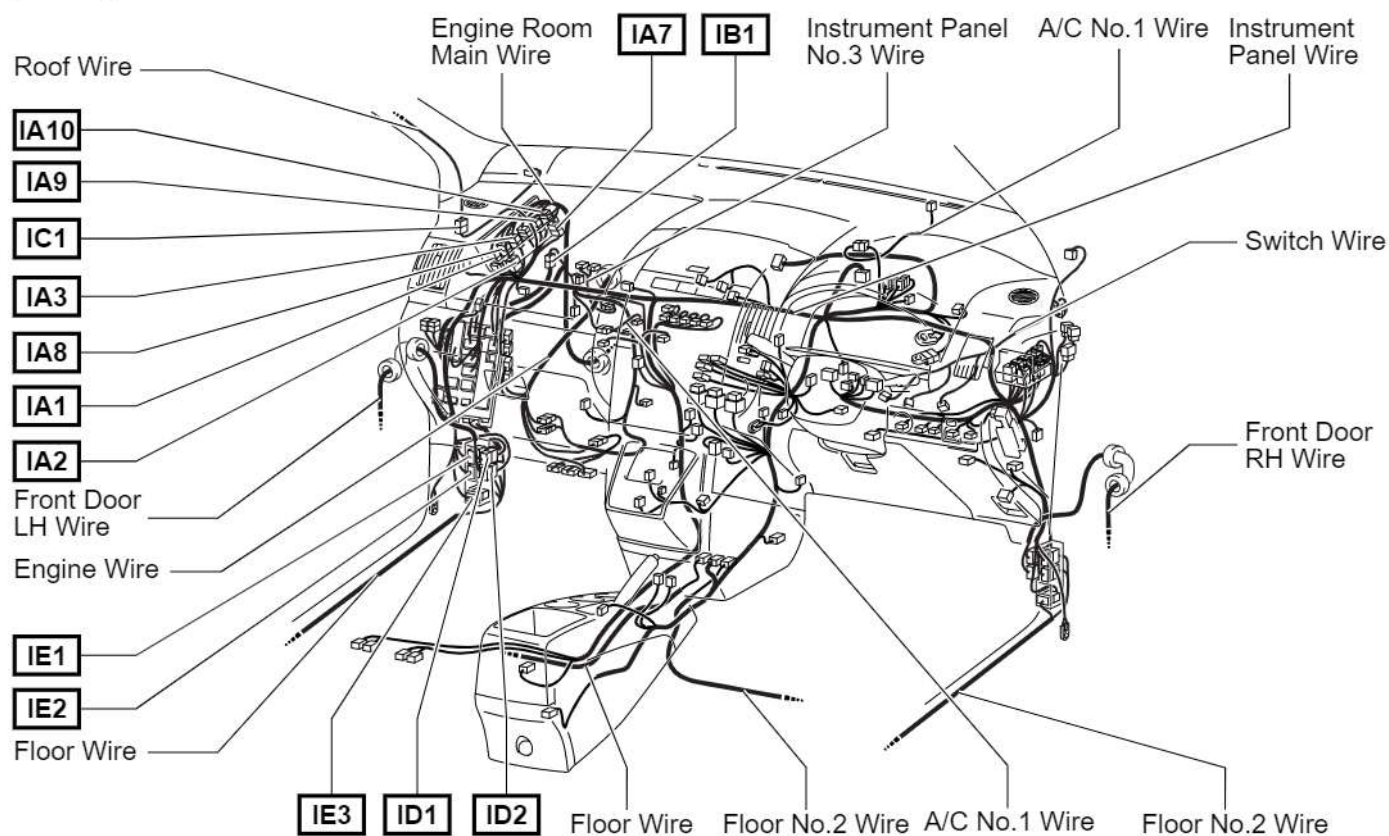

▽ : Location of Ground Points

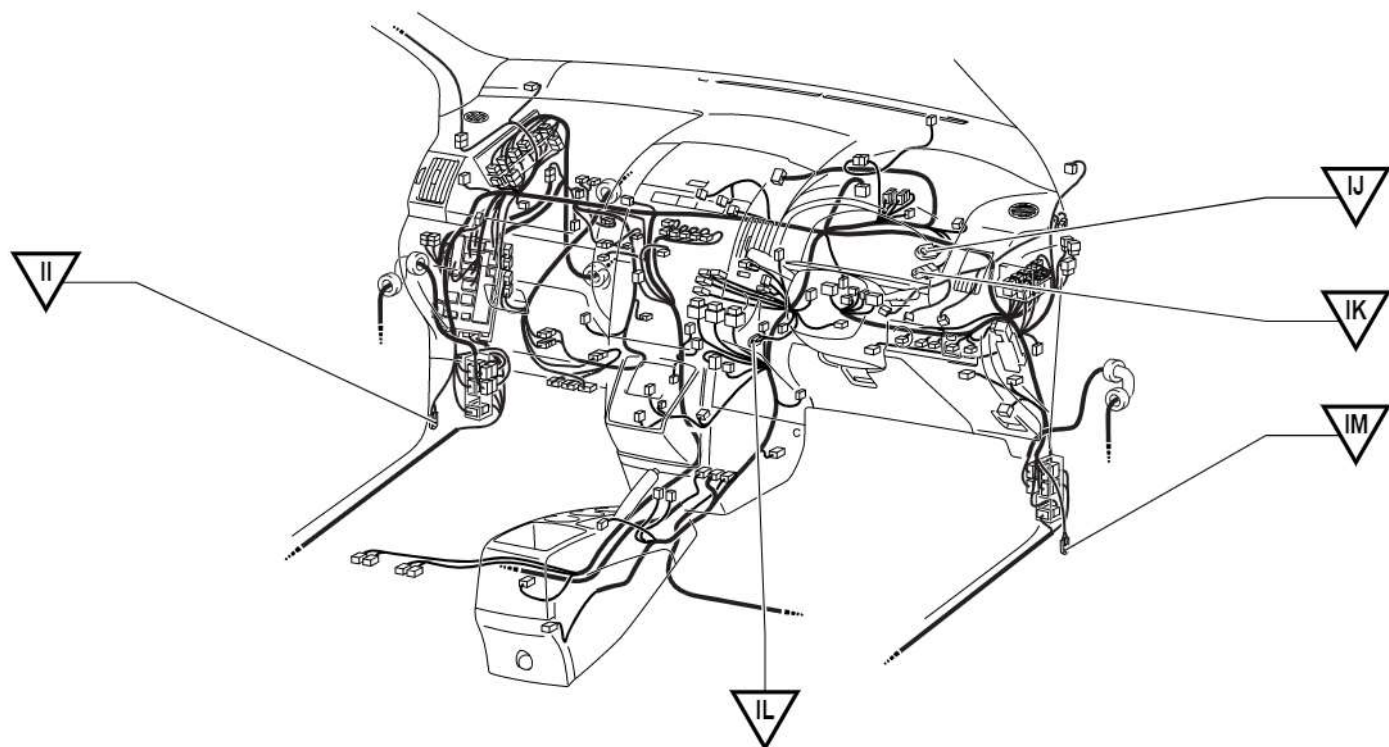

Connector Joining Wire Harness and Wire Harness

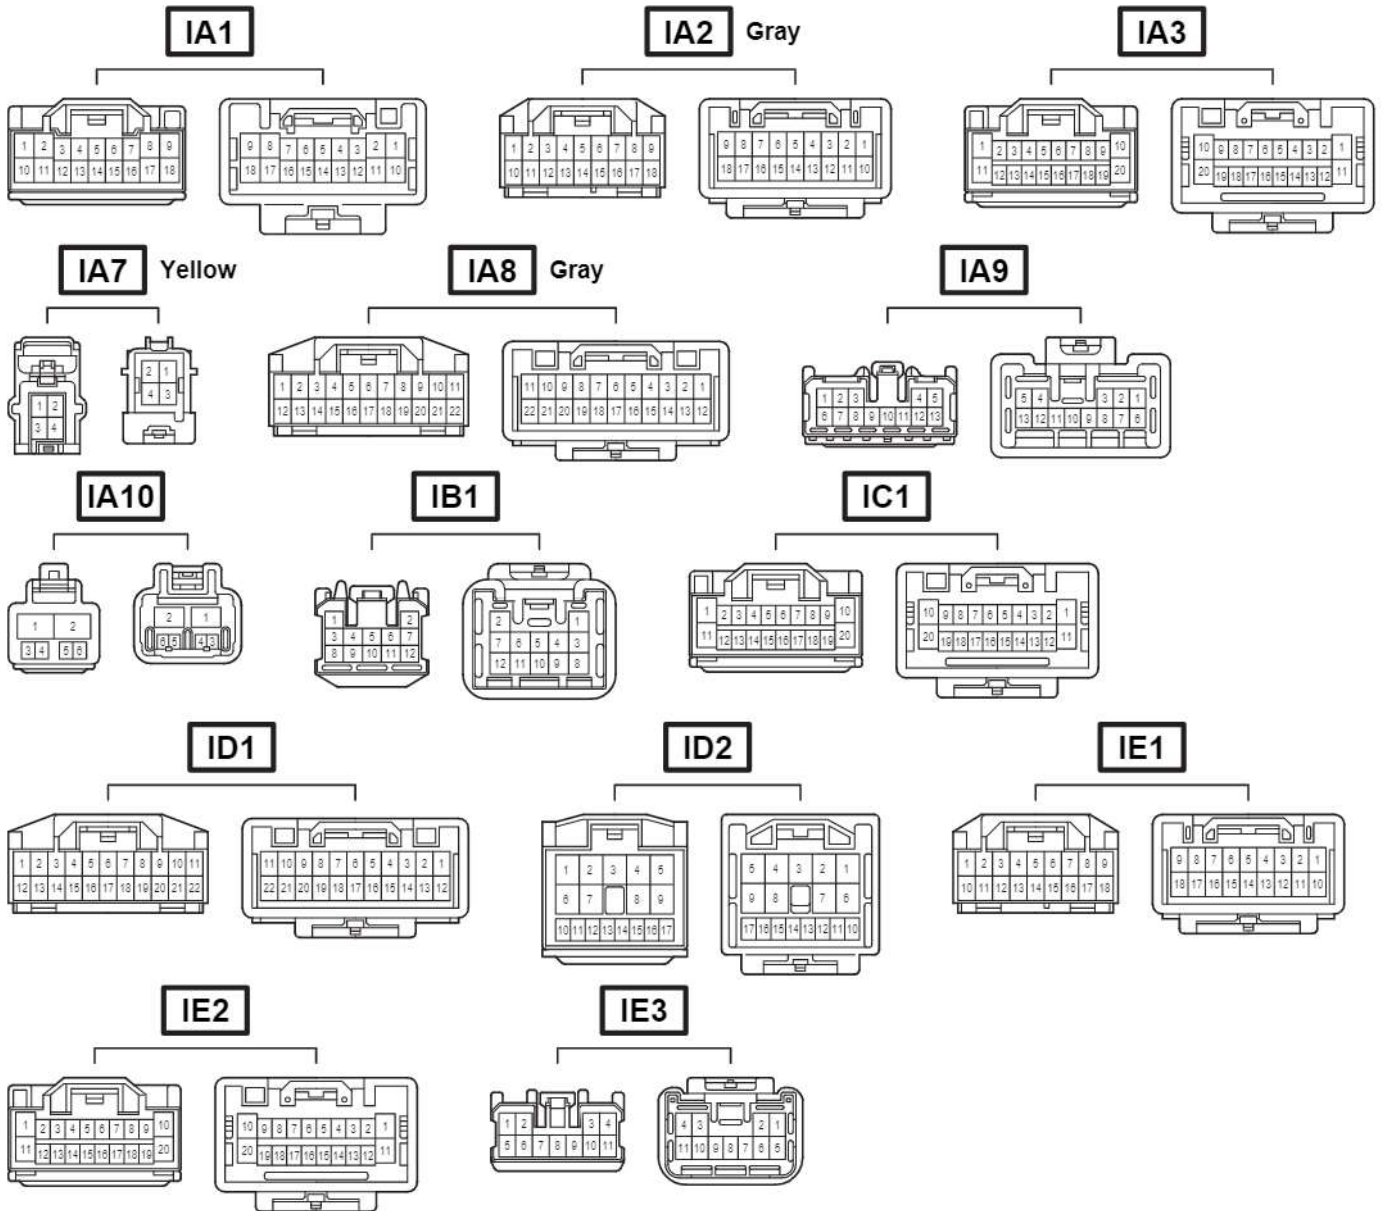


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
IA2	
IA3	
IA7	
IA8	
IA9	
IA10	
IB1	Engine Room Main Wire and Floor Wire (Left Side of the Instrument Panel)
IC1	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
ID1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID2	
IE1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2	
IE3	


G ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness


[RHD]

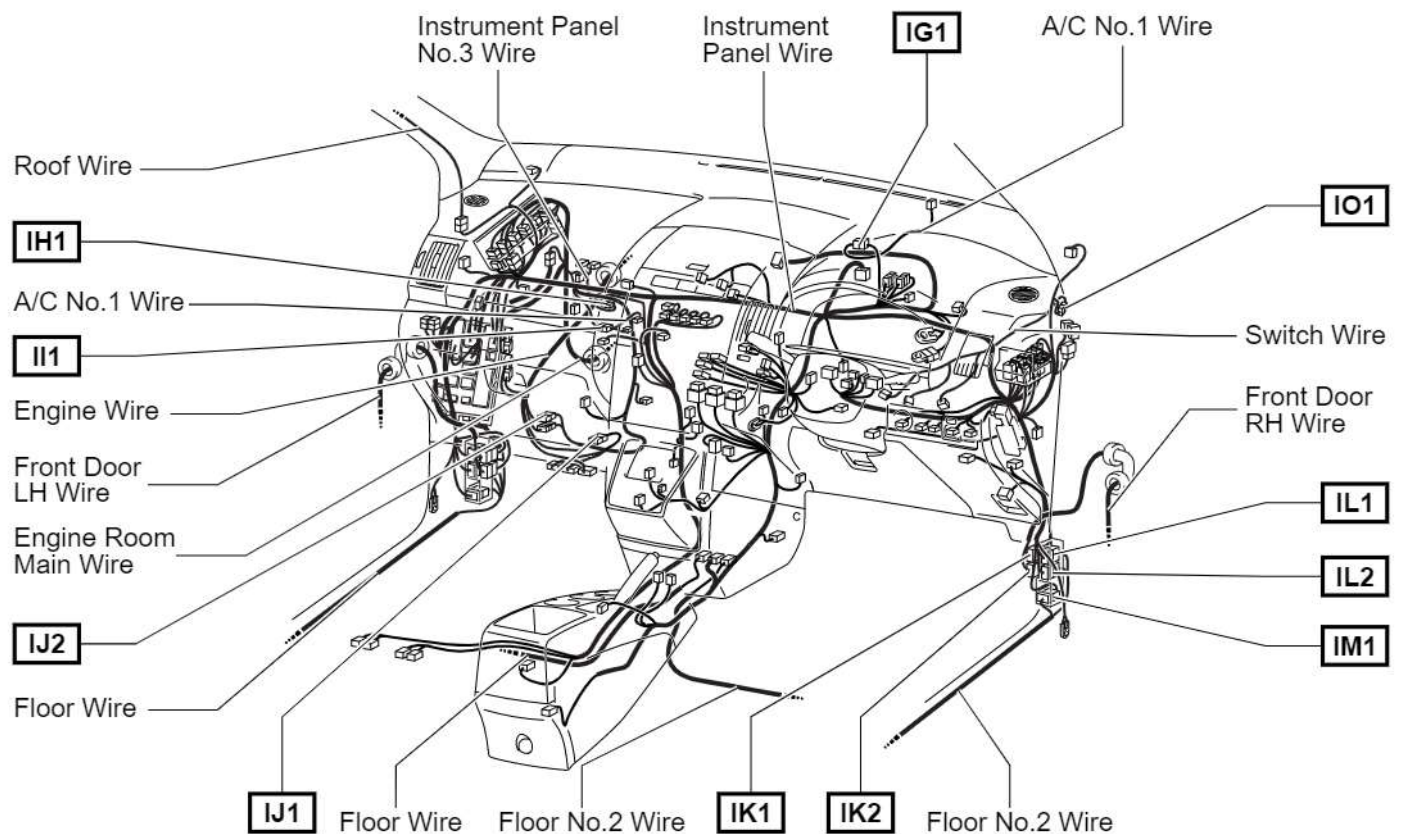

 : Location of Splice Points

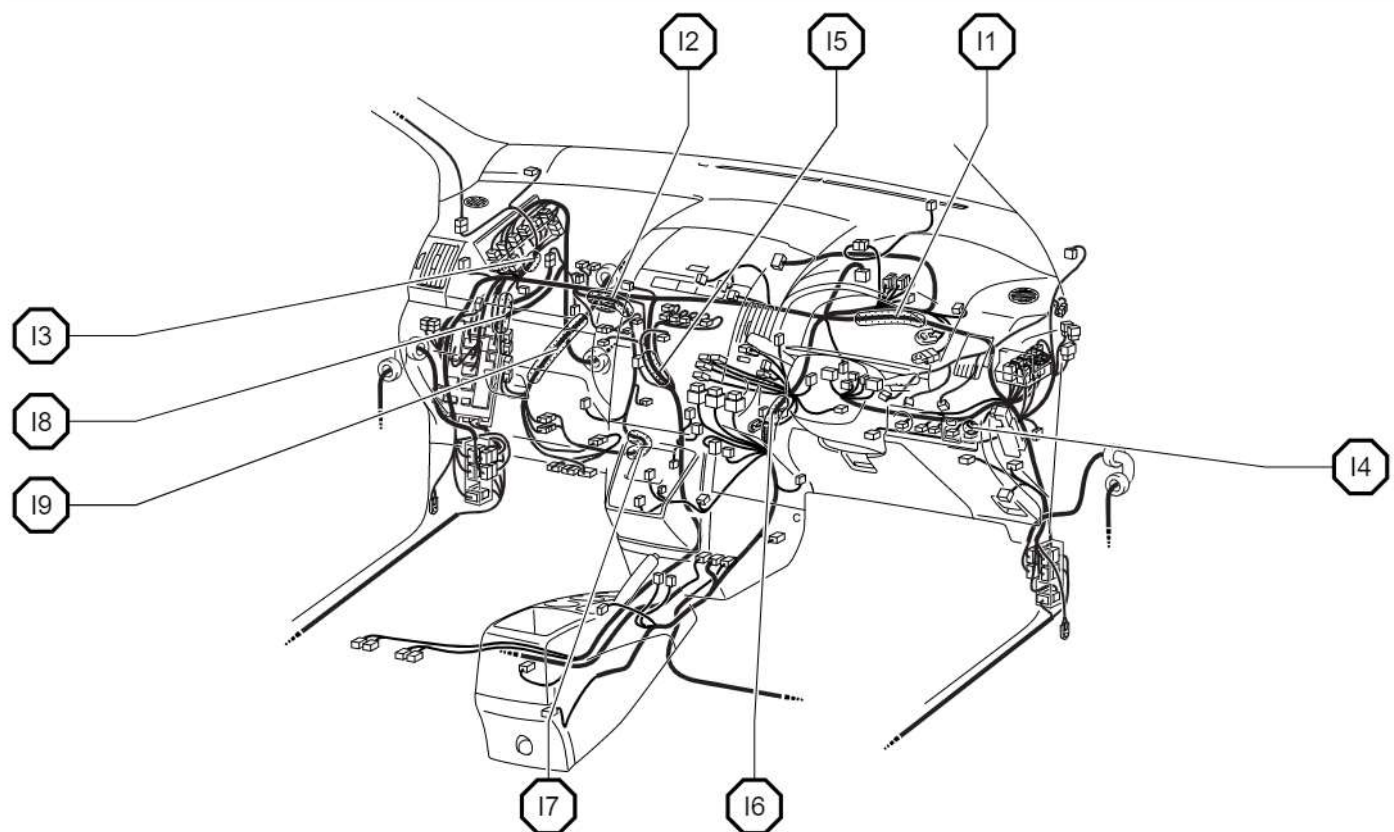

Connector Joining Wire Harness and Wire Harness

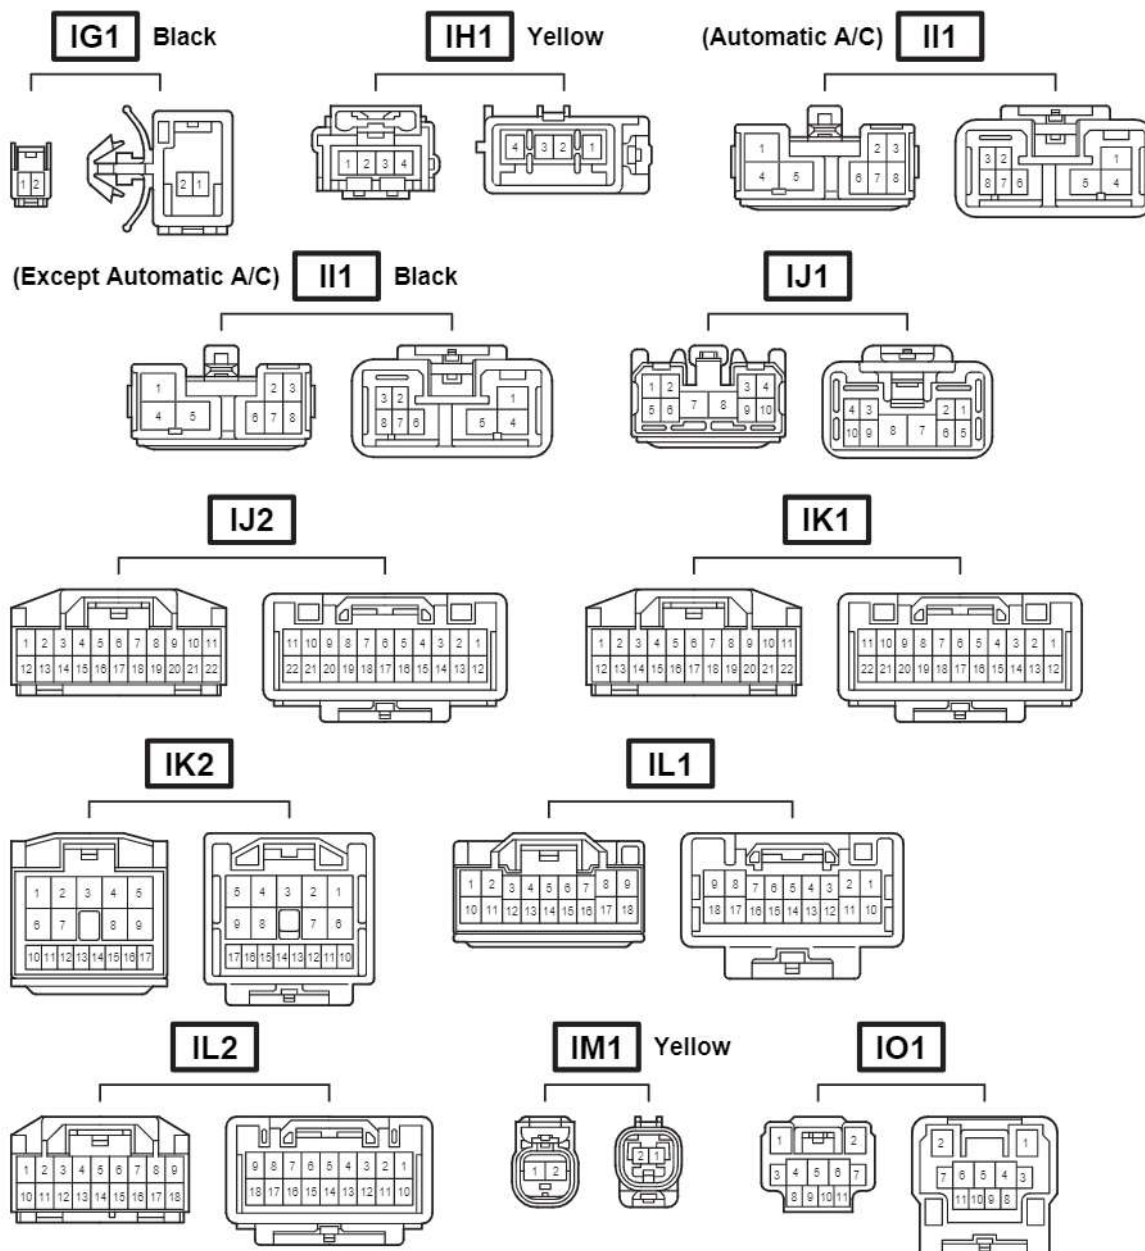


Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and A/C No.1 Wire (Behind the Combination Meter)
IH1	Instrument Panel Wire and Instrument Panel No.3 Wire (Near the Front Passenger's Airbag Assembly)
II1	Instrument Panel Wire and A/C No.1 Wire (Near the A/C Unit)
IJ1	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ2	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IL2	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM1	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IO1	Instrument Panel Wire and Switch Wire (Right Side of the Instrument Panel)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[RHD]

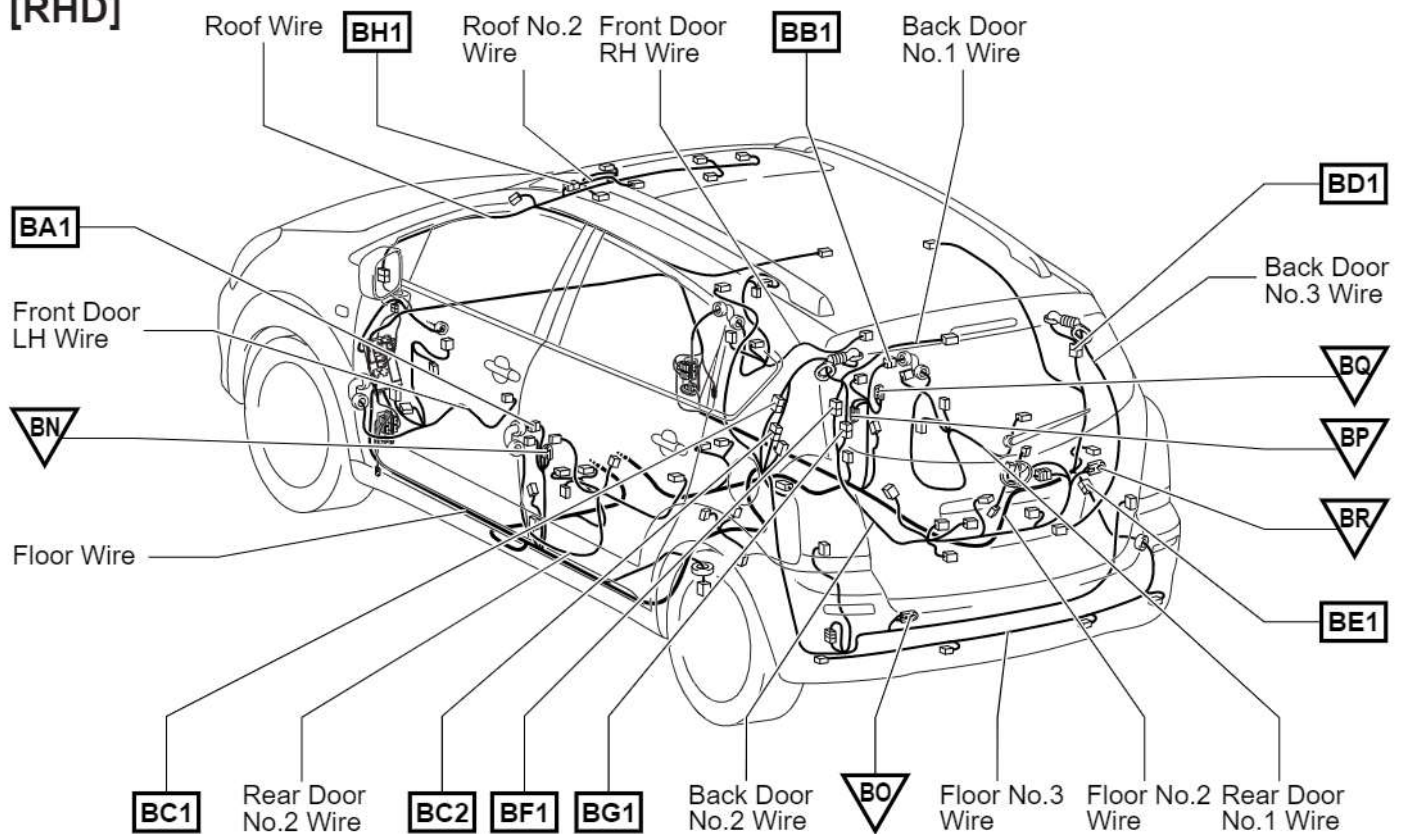

○ : Location of Splice Points

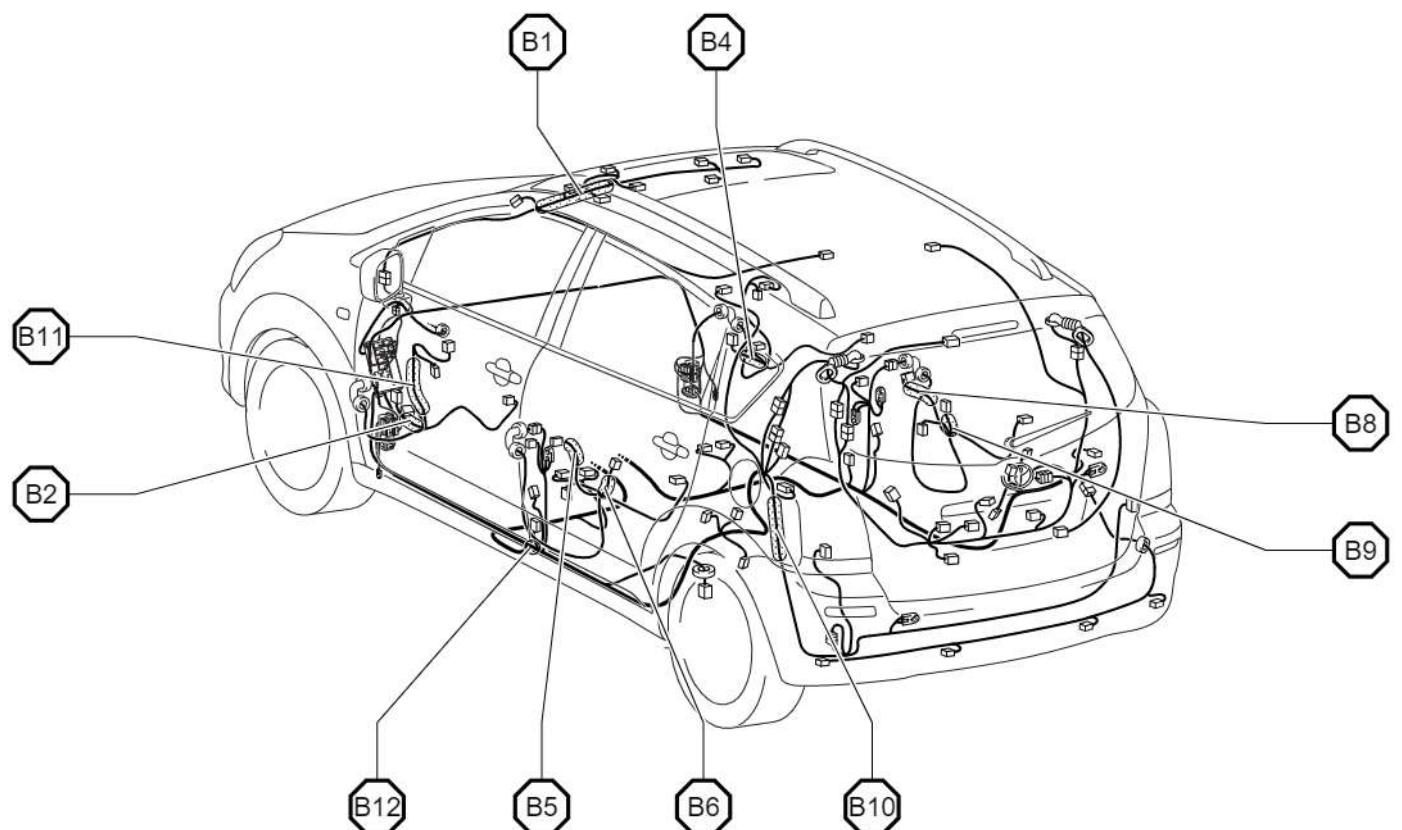

Connector Joining Wire Harness and Wire Harness

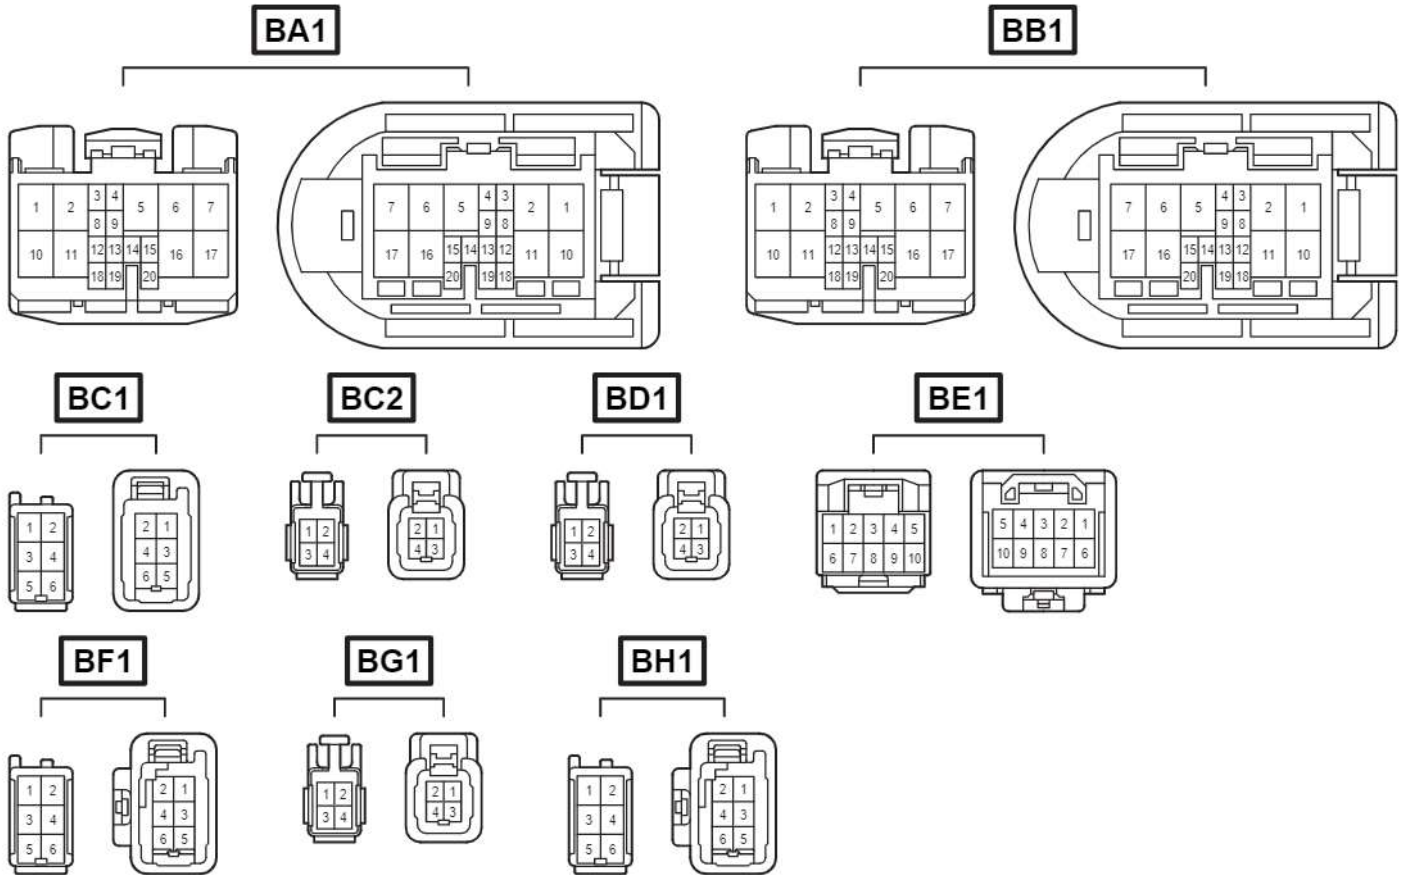

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BB1	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BC1	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BC2	
BD1	Back Door No.3 Wire and Floor No.2 Wire (Right Quarter Panel)
BE1	Floor No.3 Wire and Floor No.2 Wire (Right Quarter Panel)
BF1	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Left)
BG1	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)
BH1	Roof Wire and Roof No.2 Wire (Front Side of the Roof)