


Toyota Passo 2005 – 2010 fuse box diagrams

Year of production: 2005, 2006, 2007, 2008, 2009, 2010

Engine Compartment Fuse Box

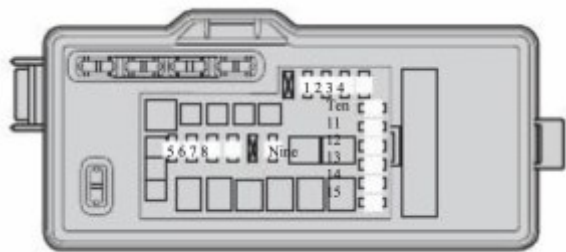


Toyota Passo – fuse box diagram – engine

compartment

No.	A	Circuit Protected
1	10	Automatic transmission system
2	10	Air conditioning
3	20	Front Wind encounter Sir
4	20	ABS, VSC
5	10	Headlight high beam (right)
6	10	Headlight high beam (left)
7	10	Low beam headlight (right) /High Beam (halogen)
	15	Low beam headlight (right)((HID)
8	10	Łów beam headlight (left) /High Beam (halogen)
	15	Łów beam headlights (left) (HID)
9	7,5	Starter
10	7,5	Brake light, ABS, VCS, EFI Computing Target
11	7,5	Rear fog light
12	7,5	Interior light
13	15	EFI Computer
14	30	Starter
15	15	Audio, key-free system, Meter, Stop & Start System

Foot passenger seat

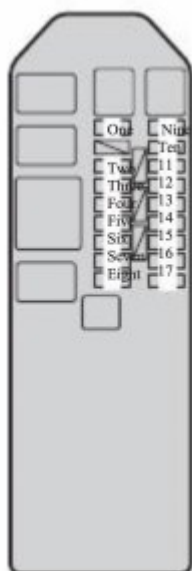

Toyota Passo – fuse box diagram – foot passenger seat

No.	A	Load Circuit
1	7,5	Audio, electric retractable door mirrors, Key-free system
2	7,5	Air bag, ABS, VCS, Electric performance Power steering, auto leveling System
3	7,5	Horn, light flashing very key free system System
4	10	
5	15	Keyless entry system, key system free system
6	15	
7	10	Taillight, light vehicle width
8	10	EFI Computer
9	20	Front wiper, front Wagga Shah
10	15	Rear wiper, rear washer
11	7,5	Front fog light (right)
12	20	Front Winf Defogga
13	7,5	Front fog light (left)
14	15	Accessory socket
15	10	Ignition system, EFI Computer
16	7,5	EFI Computer, automatic Transmission system, Stop & Start System
17	7,5	Air conditioning, heating control, after Light leaving

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.