


### 4. Engine Oil Filter

#### A: REPLACEMENT


##### CAUTION:

**Be careful not to spill the engine oil on exhaust pipe to prevent it from emitting smoke or fire. If engine oil adheres, wipe it off completely.**


- 1) Lift up the vehicle.
- 2) Drain the engine oil. <Ref. to LU(H6DO)-10, REPLACEMENT, Engine Oil.>
- 3) Remove the service hole cover clip.

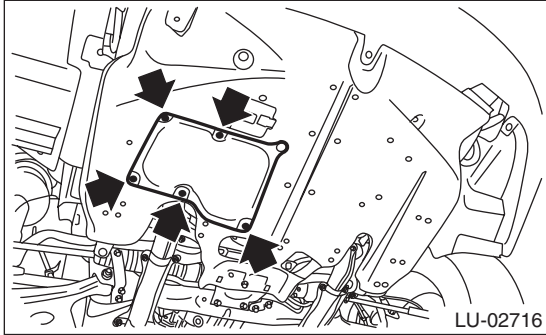

- 4) Rotate the service hole cover in the arrow direction.

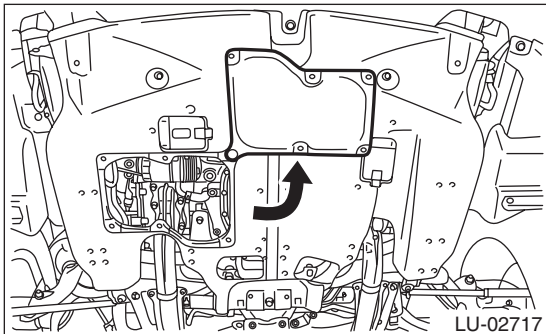

- 5) Remove the oil filter using ST.  
ST 18332AA020 OIL FILTER WRENCH

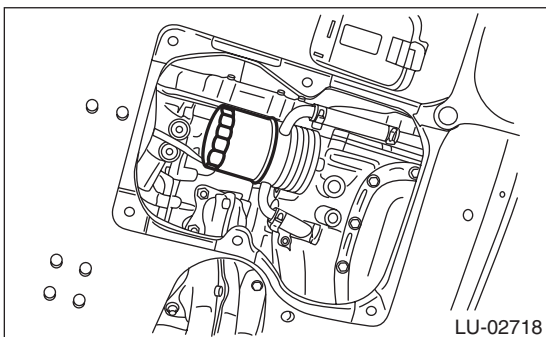

- 6) Clean the oil filter installation surface of the oil cooler.
- 7) Obtain a new oil filter and apply a thin coat of engine oil to the seal rubber.
- 8) Install the oil filter turning it by hand, being careful not to damage the seal rubber.

- 9) Tighten more (approx. 3/4 turn) after the seal rubber contacts the oil cooler. When using a torque wrench, tighten to 14 N·m (1.4 kgf-m, 10.3 ft-lb).
- 10) Install the service hole cover.
- 11) Lower the vehicle.
- 12) Refill the engine oil. <Ref. to LU(H6DO)-10, INSPECTION, Engine Oil.>
- 13) After installing the oil filter, run the engine and check for oil leakage around seal rubber.

##### NOTE:

The filter element and filter case are permanently jointed; therefore, interior cleaning is not necessary.

- 14) Check the engine oil level. <Ref. to LU(H6DO)-10, INSPECTION, Engine Oil.>