


Chevrolet Astro 1997 fuse box diagram

Instrument Panel Fuse Block

The fuse block is located on the lower portion of the instrument panel on the driver's side.

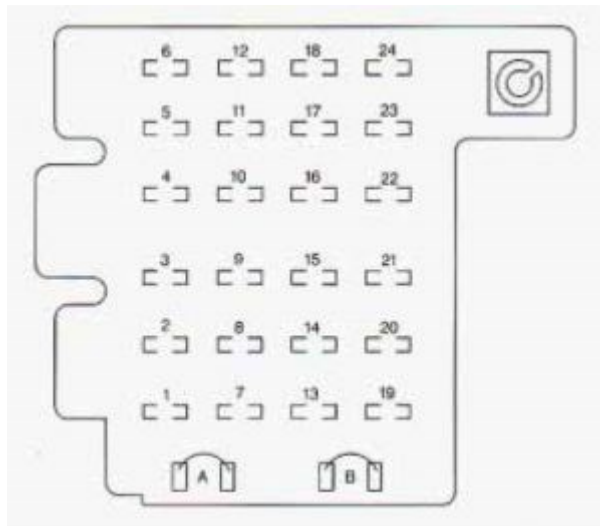

Chevrolet Astro – fuse box – instrument panel

Fuses/Circuit Breaker	Usage
1	Stop/Tum/Hazard Lamps, CHMSL, Chime Module
2	—
3	Courtesy Lamps, Power Outside Mirrors, Glove Box Lamp, Dome Reading Lamps, Vanity Mirror Lamps
4	DRL Relay, DRL Module, Chime Headlamp Switch, Keyless Entry, Cluster, Overhead Console, EVO Module, Interior Lamps Module
5	—
6	Cruise Module, Cruise Activator Switch
7	Power Outlets, DLC, Subwoofer Amplifier
8	Starter Enable Relay
9	License Plate Lamp, Taillamps, Parking Lamps, Ashtray Lamp, Panel Lights, Trailer Taillamps, Front and Rear Sidemarkers Lamps, Door Switch Illumination, Headlamp Switch Illumination, Rear Seat Audio Illumination
10	Air Bag System
11	Wiper Motor, Washer Pump, Upfitter Relay Coil
12	L, M1, M2 Blower Motor, Rear A/C Relay Coil, Front Cont. Temp. Door Motor, Hi Blower Relay, Defogger Timer Coil
13	Cigarette Lighter, Door Lock Switches

Relays	
A/C Relay	
IGN Relay	
Starter Enable Relay	
A/C Enable Relay	
Empty Relay	
Fuel Pump Relay	
Fuse/Circuit Breaker	Usage
UPFITTER-BATT	Upfitter Battery Power Stud, Trailer Wiring Harness
UPFITTER-ACCY	Upfitter Accessory Relay
Spare	—
Fuse Puller*	
Spare	—
Spare	—
ECM-B	Fuel Pump Relay, VCM, Oil Pressure Switch/Sender
HORN	Horn Relay
A/C COMP	A/C Enable Relay
RR DEFOG	Heater-A/C Control Selector Switch
ENG-I	Oxygen Sensors 1-4, Camshaft Position Sensor, Mass Air Flow Sensor, Evaporative Emission Canister Purge Solenoid Valve, Linear EGR Valve Solenoid, VCM
IGN-E	A/C Enable Relay
ECM-I	Fuel Injectors 1-6, Crankshaft Position Sensor, VCM, Distributor Ignition Control Module
LIGHTING	Park Lamps Fuse, DRL Fuse, Headlamp and Panel Dimmer Switch
BATT	I/P Fuse Block Fuses, Power Seat CB, Stop/Hazard Fuse, Auxiliary Power Fuse, Cigarette Lighter Fuse, Radio, Battery Fuse
IGN A	Starter Relay, Ignition Switch
IGN B	Ignition Switch
ABS	Brake Pressure Module Valve
A/C	Blower Motor Resistor, Blower Relay
RR HTR/AC	Auxiliary Heater A/C Relay
Spare	Not Used
* A fuse puller is included in the underhood electrical center. You will also find spare fuses.	