

Rear Wiring Harness RH

WIRING SYSTEM

72.Rear Wiring Harness RH

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	14	★	B-2	B97	Bulkhead wiring harness
R2	18	★	B-2	B98	
R12	3	★	B-4		Front door switch RH
R13	8	★	B-4	D28	Rear door cord RH (without audio amplifier)
	10	★	B-4	D28	Rear door cord RH (with audio amplifier)
R44	4	★	B-4		Seat heater RH
R45	6	BR	C-4		Seat heater switch RH
R82	18	★	C-4	R81	Rear wiring harness LH
R98	16	★	B-3	i53	Instrument panel wiring harness
R124	2	★	B-3	AB63	Airbag wiring harness
R284	6	★	C-4		AUX input terminal
R311	2	★	C-4		Rear accessory power supply socket (console)
R382	22	★	B-3	i95	Instrument panel wiring harness
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB18	24	Y	C-3		Airbag CM
AB24	4	Y	B-4		Side airbag module RH
AB26	2	B	B-4		Pretensioner RH
AB28	4	Y	B-4		Side airbag sensor RH
AB30	2	Y	B-4		Lap seat belt pretensioner RH
AB53	3	GR	B-4		Occupant detection control module



Rear Wiring Harness RH

WIRING SYSTEM

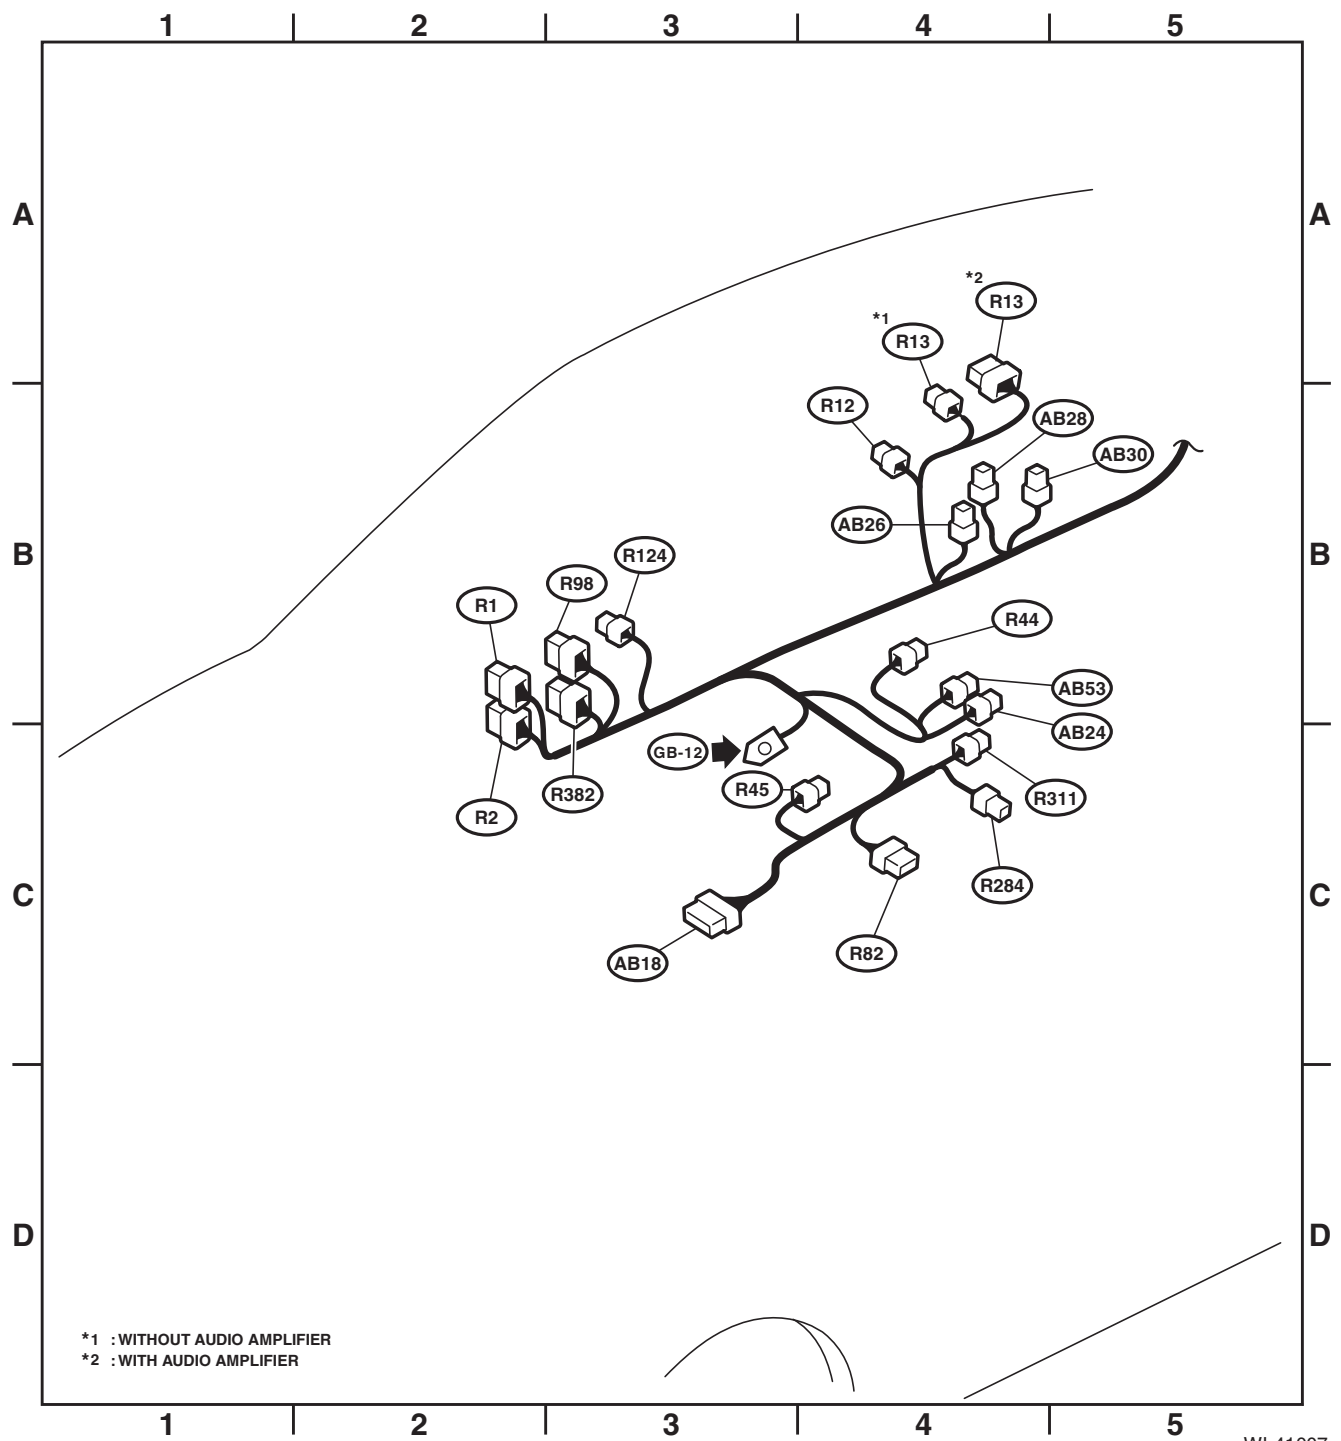

Rear Wiring Harness LH

WIRING SYSTEM

73.Rear Wiring Harness LH


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R3	14	★	C-2	B99	Bulkhead wiring harness
R4	1	B	C-3		Parking switch
R9	3	★	C-4		Front door switch LH
R10	8	★	C-4	D22	Rear door cord LH (without audio amplifier)
	10	★	C-4	D22	Rear door cord LH (with audio amplifier)
R41	4	★	C-4		Seat heater LH
R42	6	★	C-3		Seat heater switch LH
R81	18	★	C-2	R82	Rear wiring harness RH
R108	2	★	C-4		Seat belt switch LH
R110	2	B	C-4		Power seat LH
R123	2	★	D-3	AB62	Airbag wiring harness
R167	19	★	D-3	i102	Instrument panel wiring harness
R168	20	★	D-2		F/B
R315	12	★	C-3		Audio amplifier
R339	14	★	D-3	i2	Instrument panel wiring harness
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	24	Y	C-2		Airbag CM
AB19	4	Y	C-4		Side airbag module LH
AB21	2	B	C-4		Pretensioner LH
AB23	4	Y	C-4		Side airbag sensor LH
AB35	2	B	D-2		F/B

Rear Wiring Harness LH

WIRING SYSTEM

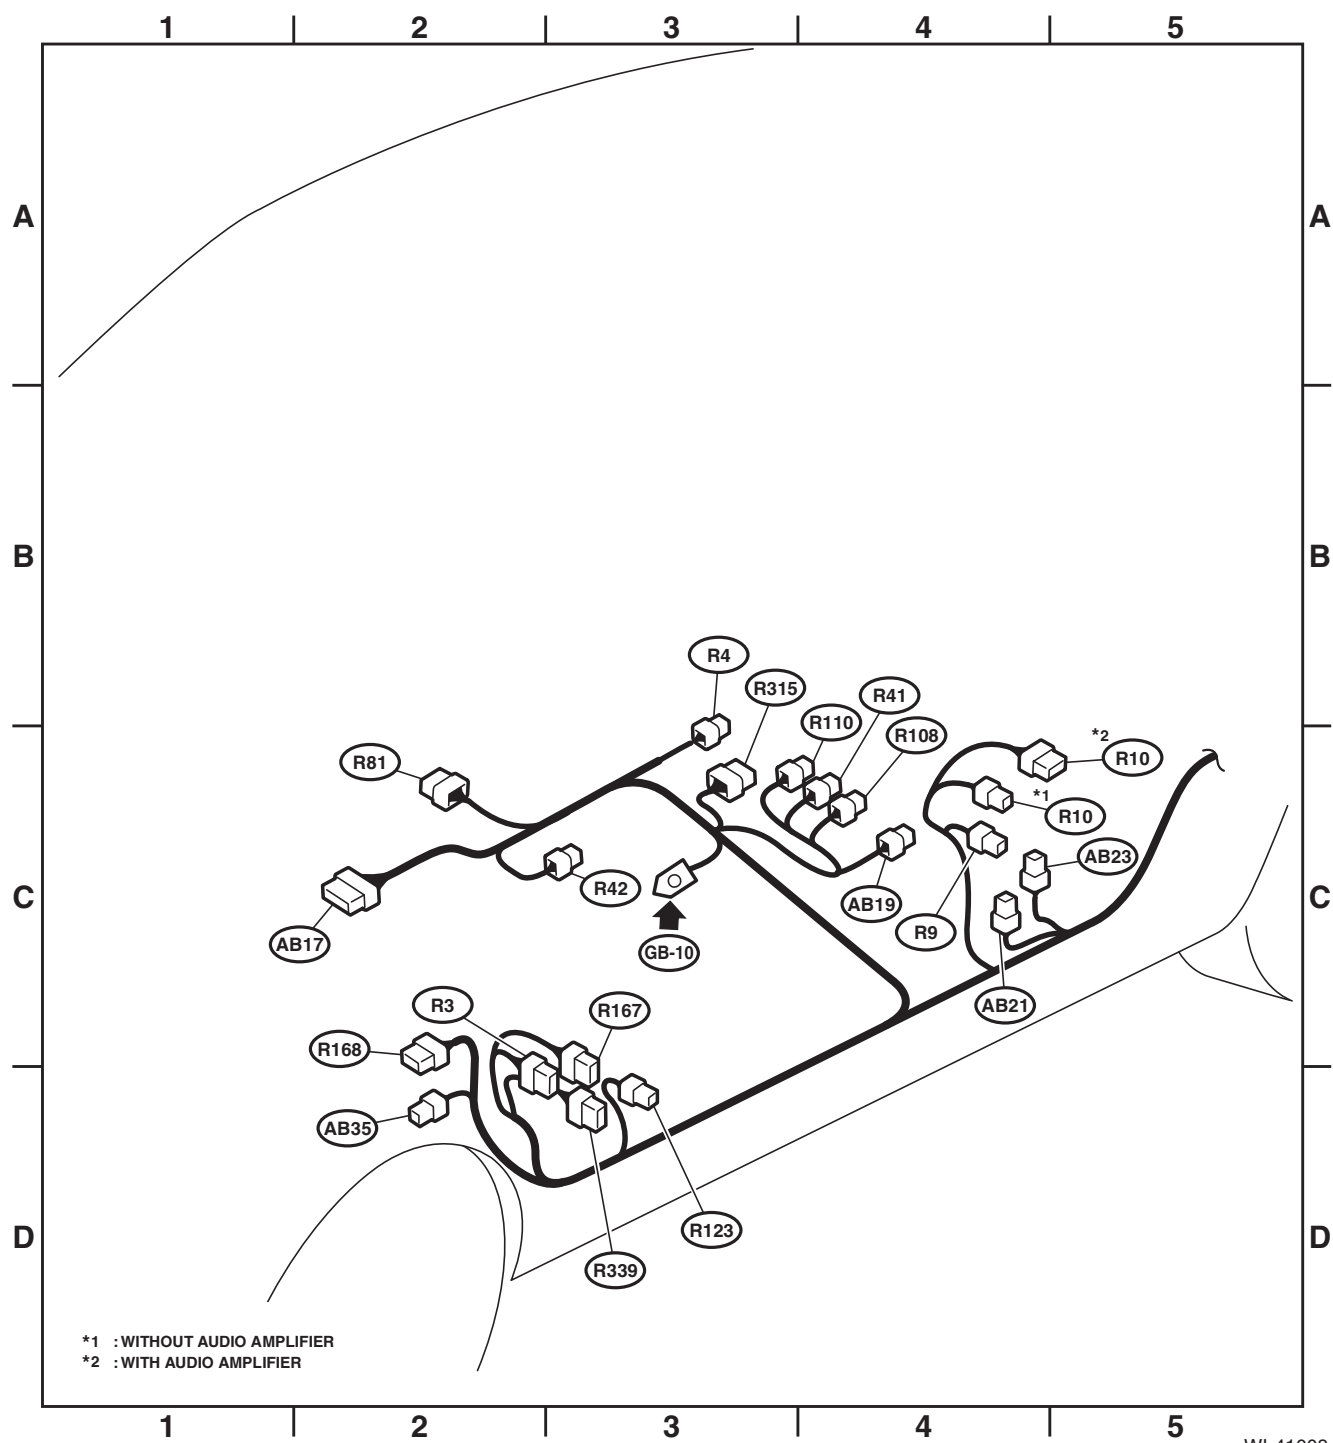

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM

76.Rear Wiring Harness and Rear Gate Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R16	3	★	C-3		Rear door switch RH
R22	3	★	C-1		Rear door switch LH
R26	6	GR	C-5		Rear combination light RH
R28	6	GR	C-3		Rear combination light LH
R29	3	GR	D-2		Rear vehicle height sensor
R32	2	★	C-2		Rear accessory power supply socket (cargo room)
R38	18	★	B-4	D34	Rear gate cord
R39	11	★	B-3	D35	
R58	4	★	D-3		Fuel pump assembly
R59	2	★	D-2		Fuel sub level sensor
R72	2	GR	C-4		Rear ABS wheel speed sensor RH
R73	2	GR	C-2		Rear ABS wheel speed sensor LH
R79	8	★	C-2		Trailer connector
R80	8	★	C-4		Keyless entry CM (without push button start)
R97	1	★	B-2		Antenna
R122	6	★	C-4		Fuel pump CM
R141	2	GR	C-4		Luggage room light
R170	2	★	C-3		Remote control back rest actuator RH
R171	2	★	D-1		Remote control back rest actuator LH
R172	5	★	C-4		Remote control back rest switch RH
R173	5	★	C-2		Remote control back rest switch LH
R221	12	★	C-4		TPMS & keyless entry CM
R296	5	★	C-4		Receiver (with push button start)
R297	3	★	D-3		Keyless access interior antenna (rear)
R298	3	★	D-3		Keyless access interior antenna (center)
R400	8	★	C-3		ELCM
R421	14	★	C-1		Power rear gate drive unit
R422	16	GR	C-1		Power rear gate CM
R423	20	GR	C-1		

★ : White or natural color

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D34	18	★	B-4	R38	Rear wiring harness
D35	11	★	B-3	R39	
D39	2	★	B-3		High-mounted stop light
D43	4	★	A-4		Rear wiper motor
D44	2	★	A-4		License plate light RH
D46	4	★	A-4		Rear gate lock actuator & latch switch
D47	2	BR	A-4		Rear gate opener button (without push button start)
D48	1	★	A-3		Rear defogger
D77	6	★	A-4		Rear lock button & rear gate opener button & keyless access interior antenna (rear)
D80	18	★	A-5	D81	Rear gate cord (LWR)
D81	18	★	A-5	D80	Rear gate cord (UPR)
D85	4	★	A-3		Rearview camera
D89	1	★	B-5		Rear defogger
D137	2	★	A-4		License plate light LH
D150	2	★	A-3		Power rear gate touch sensor LH
D151	2	★	A-5		Power rear gate touch sensor RH
D152	2	B	A-4		Power rear gate buzzer
D153	6	★	A-4		Power rear gate auto closer
D154	6	★	A-5		Power rear gate inner switch
D155	11	★	A-5	D156	Rear gate cord (LWR)
D156	11	★	A-5	D155	Rear gate cord (UPR)

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	B	B-1		Curtain airbag module LH
AB32	4	Y	C-1		Curtain airbag sensor LH
AB33	2	B	B-3		Curtain airbag module RH
AB34	4	Y	C-3		Curtain airbag sensor RH
AB41	2	Y	C-2		Satellite safing sensor

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM

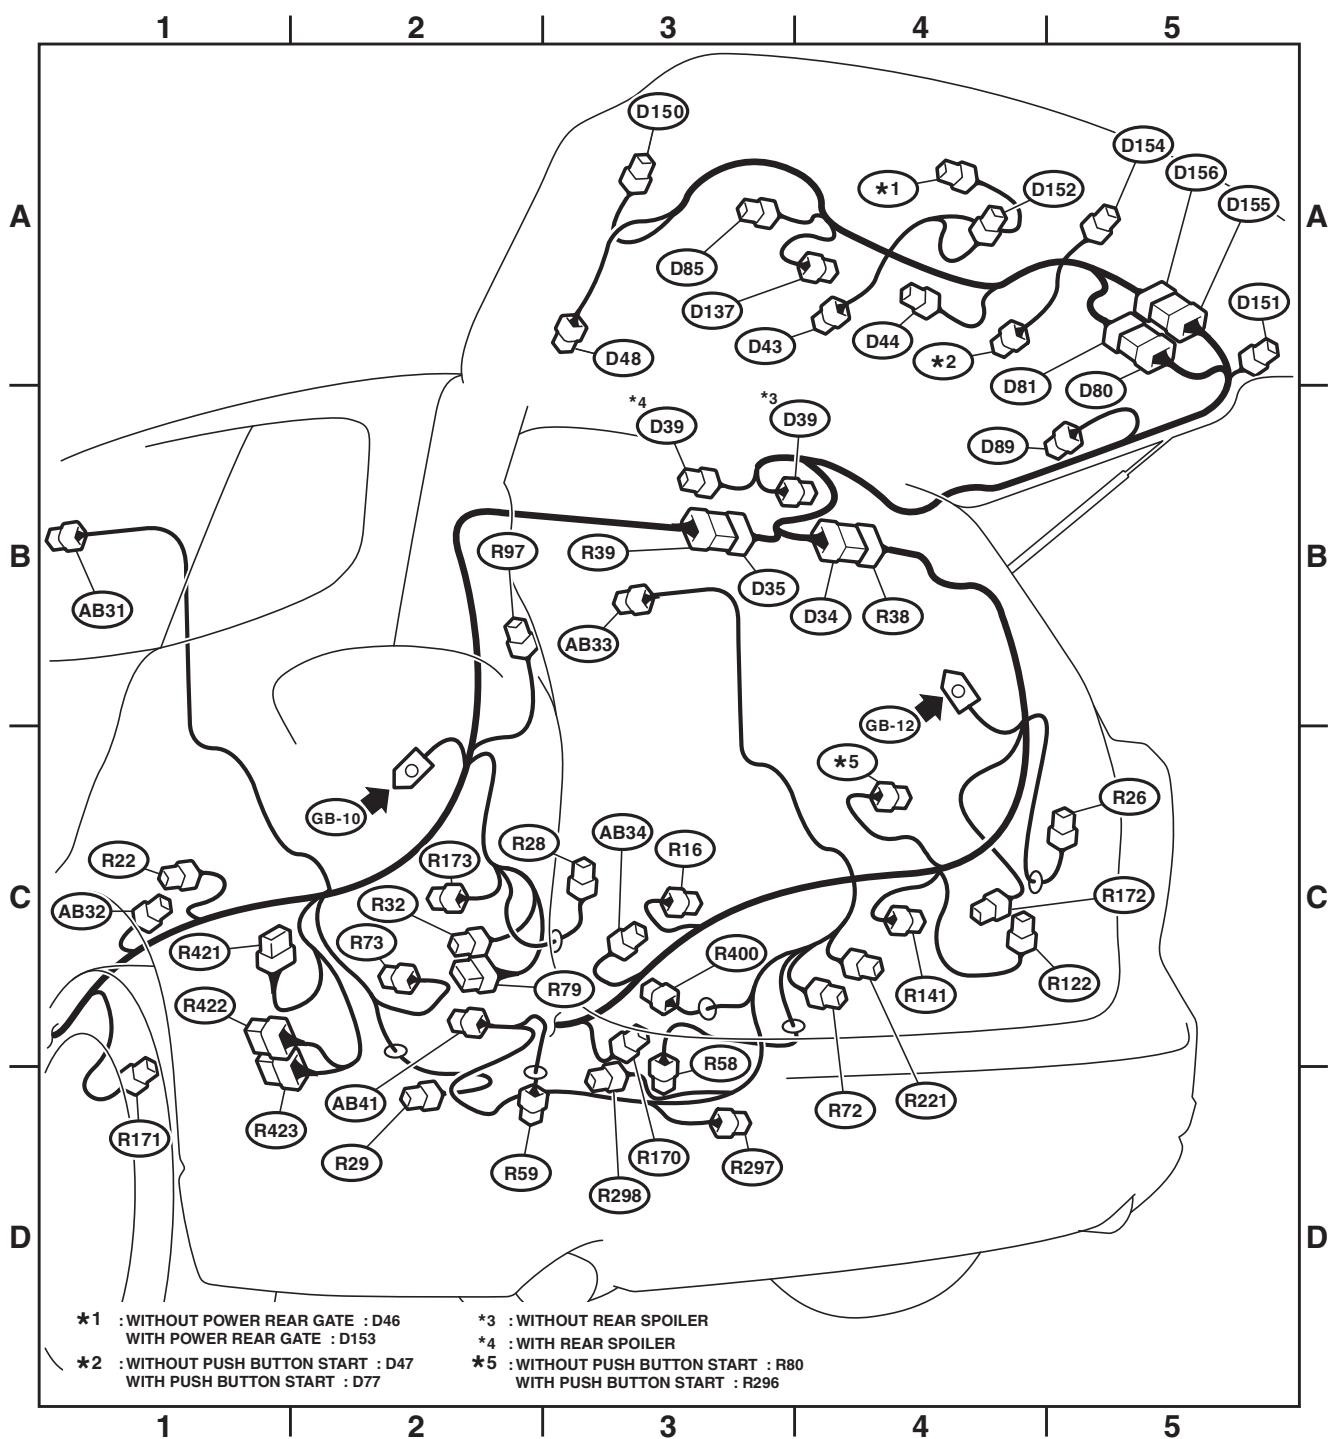

WI-41011

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM

