


VEHICLE IDENTIFICATION AND SERIAL NUMBERS

1. VEHICLE IDENTIFICATION NUMBER




(a) The vehicle identification number is stamped on the vehicle body and on the certification label as shown in the illustration.

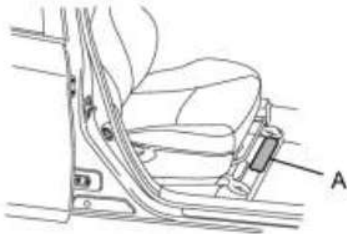

A:

Vehicle Identification Number

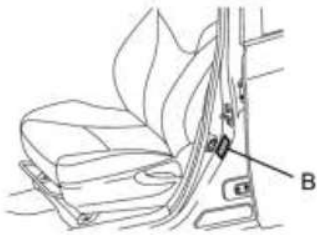

B:

Certification Label


c

2. ENGINE SERIAL NUMBER AND TRANSAXLE SERIAL NUMBER


(a) The engine serial number is stamped on the cylinder block of the engine as shown in the illustration.

A:

2ZR-FXE Engine Serial Number

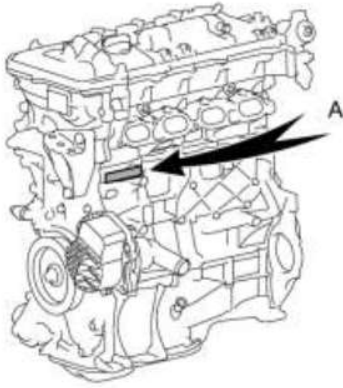

c

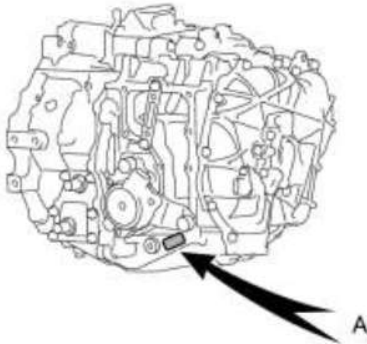

c

(b) The transaxle code is stamped on the case as shown in the illustration.

A:

P410 Transaxle Code