


Chevrolet Astro 1998 fuse box diagram

Instrument Panel Fuse Block

The fuse block is located on the lower portion of the instrument panel on the driver's side.

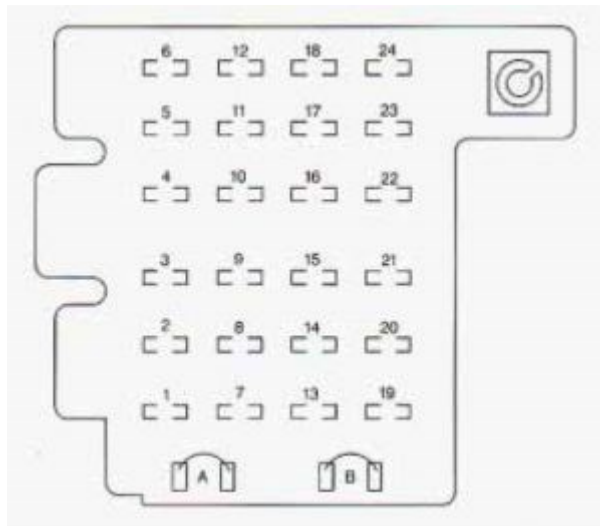


Chevrolet Astro – fuse box – instrument panel

Fuses/Circuit Breaker	Usage
1	Stop/Tum/Hazard Lamps, CHMSL, Chime Module
2	—
3	Courtesy Lamps, Power Outside Mirrors, Glove Box Lamp, Dome Reading Lamps, Vanity Mirror Lamps
4	DRL Relay, DRL Module, Chime Headlamp Switch, Keyless Entry, Cluster, Overhead Console, EVO Module, Interior Lamps Module
5	—
6	Cruise Module, Cruise Control Switch
7	Power Outlets, DLC, Subwoofer Amplifier
8	Starter Enable Relay
9	License Plate Lamp, Taillamps, Parking Lamps, Ashtray Lamp, Panel Lights, Trailer Taillamps, Front and Rear Sidemarkers Lamps, Door Switch Illumination, Headlamp Switch Illumination, Rear Seat Audio Illumination
10	Air Bag System
11	Wiper Motor, Washer Pump, Upfitter Relay Coil
12	L, M1, M2 Blower Motor, Rear A/C Relay Coil, Front Cont. Temp. Door Motor, Hi Blower Relay, Defogger Timer Coil
13	Cigar Lighter, Door Lock Switches, Dutch Door Release Module

14	Cluster Illum, HVAC Controls, Chime Module, Radio Illumination, Rear Heat Switch Illumination, Rear Wiper/Washer Switch Illumination, Rear Liftgate Switch Illumination, Remote Cassette Illumination, O/H Console
15	DRL Diode
16	Front Turn Signals, Rear Turn Signals, Trailer Turn Signals, Back-up Lamps, BTSI Solenoid
17	Radio: ATC (Standby), 2000 Series (Main Feed), Rear Seat Audio Controls
18	VCM-Ign 3, VCM- Brake, 4WAL, Cruise Stepper Motor
19	Radio: ATC (Main Feed), 2000 Series (Standby)
20	PRNDLI Odometer, TCC Enable and PWM Solenoids, Shift A and Shift B Solenoids, 3-2 Downshift Solenoids
21	—
22	Security/Steering Module
23	Rear Wiper, Rear Washer Pump
24	—
A	(Circuit Breaker) Power Door Lock Relay, 6-way Power Seat, Remote Control Door Lock Receiver, Dutch Door Module, Dutch Door Release
B	(Circuit Breaker) Power Windows

Underhood Fuse Block

The underhood fuse block is located toward the rear of the engine compartment on the driver's side of the vehicle.

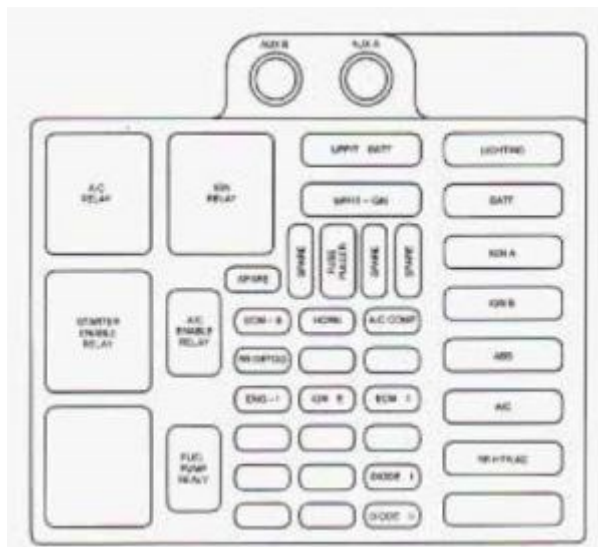

Chevrolet Astro – fuse box – under hood panel

Feef	Usage
AUX B	Upfitter Battery Feed
AUX A	Upfitter Accessory Feed

Relays	
A/C Relay (Rear Heat and A/C)	
Upfitter Accessory Relay	
Starter Enable Relay	
A/C Enable Relay	
Export Only Relay	
Fuel Pump Relay	
Fuse/Circuit Breaker	Usage
UPFITTER-BATT	Upfitter Battery Power Stud, Trailer Wiring Harness
UPFITTER-ACCY	Upfitter Accessory Relay
Spare	—
Fuse Puller*	
Spare	—
Spare	—
ECM-B	Fuel Pump Relay, VCM, Oil Pressure Switch/Sender
HORN	Horn Relay and Horn
A/C COMP	A/C Enable Relay and Compressor
RR DEFOG	Heater-A/C Control Selector Switch, Rear Window Defogger
ENG-I	Oxygen Sensors, Camshaft Position Sensor, Mass Air Flow Sensor, Evaporative Emission Canister Purge Solenoid, Linear EGR Valve Solenoid, VCM EGR HI
IGN-E	A/C Enable Relay Coil
ECM-I	Fuel Injectors 1-6, Crankshaft Position Sensor, VCM, Coil Driver Module (EST)
LIGHTING	Park Lamps Fuse, DRL Fuse, Headlamp and Panel Dimmer Switch
BATT	Steering Security Fuse, Courtesy Fuse, ACSY CB, Stop/Hazard Fuse, Auxiliary Power Fuse, Cigar Lighter Fuse, Radio Battery Fuse
IGN A	Starter Relay, Ignition Switch
IGN B	Ignition Switch
ABS	Electronic Brake Control Module
A/C	Blower Motor Resistor, Blower Relay
RR HTR/AC	Auxiliary Heater A/C Relay
Spare	Not Used
* A fuse puller is included in the underhood electrical center. You will also find spare fuses.	