


Land Rover Discovery 2009 – 2016fuse box diagrams

Fuse box locations

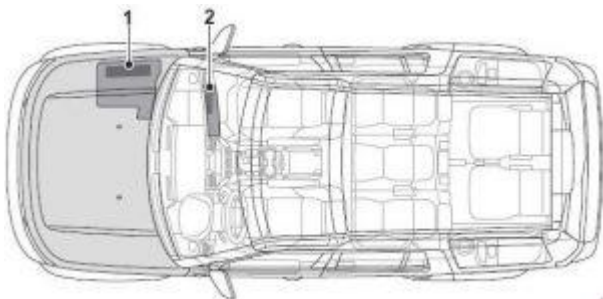


Land Rover Discovery – fuse box diagram

– location

- 1. Engine compartment fuse box
- 2. Passenger compartment fuse box

Engine compartment fuse box

The passenger compartment fuse box is fitted behind the glove box.

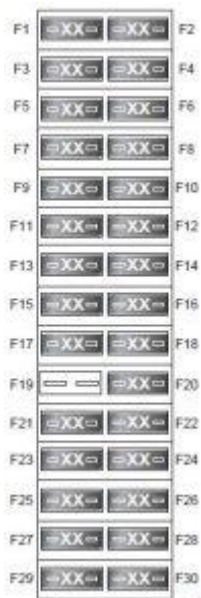

Land Rover Discover – fuse box diagram – engine compartment


No.	A	Circuits protected
1	25	Fuel pump

2	5	up to 2014: Petrol – EMS (MAF, oil sensor) Diesel – fuel burning heater
2	10	from 2014: Engine management system (petrol only). Fuel burning heater (diesel only).
3	5	Air suspension ECU
4	25	EMS (ECM, fuel pump relay control)
5	15	EMS
6	15	Petrol – EMS (ignition coils) Diesel – EMS (sensors, glow plug relay control)
7	10	from 2015: Adaptive Cruise Control (ACC).
8	25	Rear seat heater
9	–	–
10	10	up to 2014: Petrol – EMS (throttle motor) from 2009: Diesel – EMS
11	15	up to 2014: Petrol – EMS (oxygen sensors) Diesel 3.0L – A/C compressor clutch
11	20	from 2014: Engine management system (petrol only). Diesel Exhaust Fluid (DEF) (diesel only).
12	10	Heated washer jets

13	15	EMS
14	15	Petrol – EMS (oxygen sensors)
15	30	up to 2014: Heated front screen
15	10	from 2015: Rear-view mirror. Rear cameras. Adaptive Front lighting System (AFS). Headlamp control module.
15	5	from 2014: Rear view mirror, Rear view camera, High line camera.
16	15	up to 2014: Rear wiper
16	5	from 2014: Blind Spot Monitor (BSM), Wade sensing.
17	10	up to 2012: Petrol V6 – EMS (EGR, purge valve), E-box fan Diesel 3.0L – EMS (MAF, EGR)
17	10	Engine management system (diesel only).
17	20	from 2014: Engine management system (petrol only).
18	30	up to 2012: Heated front screen 2012-2014: Headlamp power wash
18	5	from 2014: Engine management system.

19	–	–
20	5	up to 2014: Alternator
20	30	from 2014: Headlamp power wash.
21	5	Dynamic Stability Control (DSC), Anti-lock Braking System (ABS)
22	30	Rear blower
23	25	Traction control
24	25	Front seat heaters
25	15	Horn
26	20	Air suspension ECU
27	5	up to 2014: Engine Control Module (ECM)
27	15	from 2014: Air conditioning.
28	20	up to 2016: Petrol V8 SC – intercooler water pump up to 2012: Petrol V6 – Brake boost pump up to 2014: Diesel – auxiliary heater
29	30	Front wipers
30	10	Auto transmission ECU

Passenger compartment fuse box

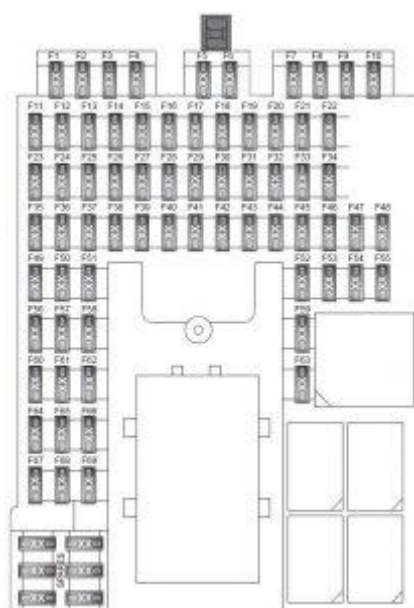

Land Rover Discover – fuse box diagram – passenger

compartment

No.	A	Circuits protected
1	5	Radio frequency receiver, TPM system
2	–	–
3	10	Front fog lamps
4	5	up to 2014: Automatic dimming interior mirror, up to 2011: Automatic head lamp high beam from 2014: –
5	5	Dynamic Stability Control (DSC), Anti-lock Braking System (ABS), steering angle sensor
6	5	from 2015: Adaptive Cruise Control (ACC).
7	–	–

8	–	–
9	5	Electric Parking Brake (EPB)
10	5	Air suspension ECU
11	10	Trailer reverse lamps
12	5	Reverse lamps
13	–	–
14	5	up to 2014: Brake lamps, brake switch from 2014: Brake pedal switch.
15	30	Heated rear window
16	10	Cubby box cooler
17	5	Keyless entry/start, central door locking
18	15	up to 2014: – from 2014: Rear wiper.
19	5	Engine Control Module (ECM)
20	10	Heated steering wheel


21	10	up to 2014: Centre console switches (transfer box, HDC, DSC), headlamp levelling, rear climate control, smog sensor. from 2014: Centre console switches, Rear climate control.
22	5	Automatic transmission, transfer box, rear differential
23	5	up to 2014: Headlamp levelling from 2014: –
24	10	Right-hand side lamps & tail lamps
25	10	Left-hand side lamps & tail lamps
26	–	–
27	10	Trailer side lamps
28	–	–
29	–	–
30	25	Front passenger window, central door locking
31	5	up to 2014: Rain sensor, rear view camera from 2014: Rain sensor, Auxiliary lamp switch.
32	25	Driver's window, exterior mirrors, central door locking

33	–	–
34	10	Electric fuel flap actuator
35	–	–
36	5	Battery back-up sounder
37	20	Keyless entry, central door locking
38	15	Front screen washer
39	25	Rear left-hand window, central door locking
40	5	Seat memory, clock, driver's door switchpack (exterior mirrors, windows)
41	–	2009-2012: – 2012-2014: Power amplifier from 2014: Gateway module.
42	30	Driver's electric seat
43	15	Rear screen washer
44	25	Rear right-hand window, central door locking
45	30	Passenger electric seat
46	–	–

47	20	Sunroof
48	30	up to 2014: Trailer connector (battery feed)
48	15	from 2014: Trailer connector (battery feed)
49	5	Adaptive front lighting (right-hand unit)
50	5	Adaptive front lighting (left-hand unit)
51	5	Steering wheel switches
52	–	–
53	20	Cigar lighter
54	15	Trailer connector (ignition feed)
55	20	Auxiliary power socket – centre and rear
56	10	Airbag SRS
57	10	Interior lamps
58	–	–
59	–	–
60	–	–

61	10	Instrument pack, message centre
62	10	Climate control ECU
63	20	Auxiliary power socket – front
64	15	up to 2014: Audio unit, DVD player
64	5	from 2014: Engine Control Module (ECM).
65	5	up to 2014: Surround camera system from 2014: –
66	5	Diagnostic socket
67	15	up to 2014: Rear seat entertainment module from 2014: –
68	10	up to 2014: Touch screen display, multi-media module, radio, telephone from 2014: –
69	–	–

Passenger compartment fuse upper box

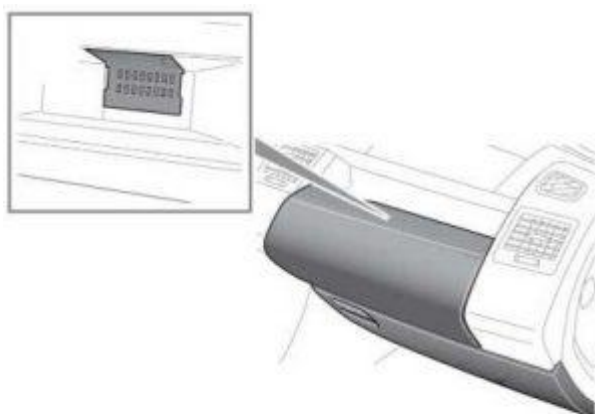

. Land Rover Discover – fuse box diagram

– passenger compartment upper box

No.	A	Circuits protected
1	15	Touch screen, Front integrated control panel.
2	10	Audio amplifier.
3	–	–
4	10	Navigation, Television tuner.
5	15	Audio head unit.
6	15	Audio video input/output panel.
7	–	–
8	–	–
9	–	–

10	–	–
11	–	–
12	–	–
13	–	–
14	–	–
15	15	Front and rear integrated control panel – Heating and ventilation.
16	20	Fuel-fired booster heater.

Any electrical equipment other than Land Rover approved accessories must be connected to the spare terminal (F6) only. The additional electrical equipment should be protected with an appropriate fuse not exceeding 30 amps.