



F RELAY LOCATIONS


[Engine Compartment]

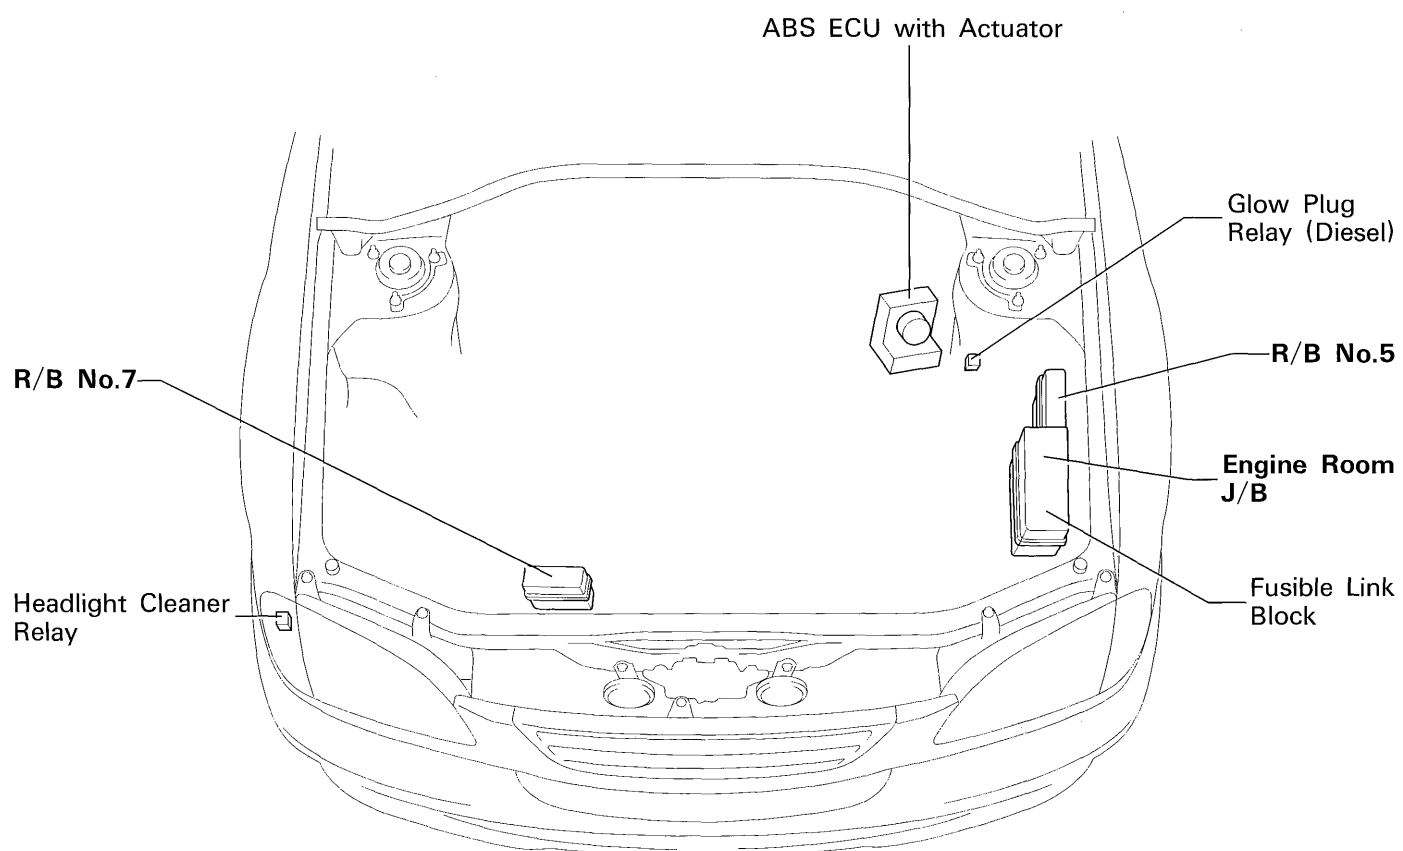

[Instrument Panel] (LHD)

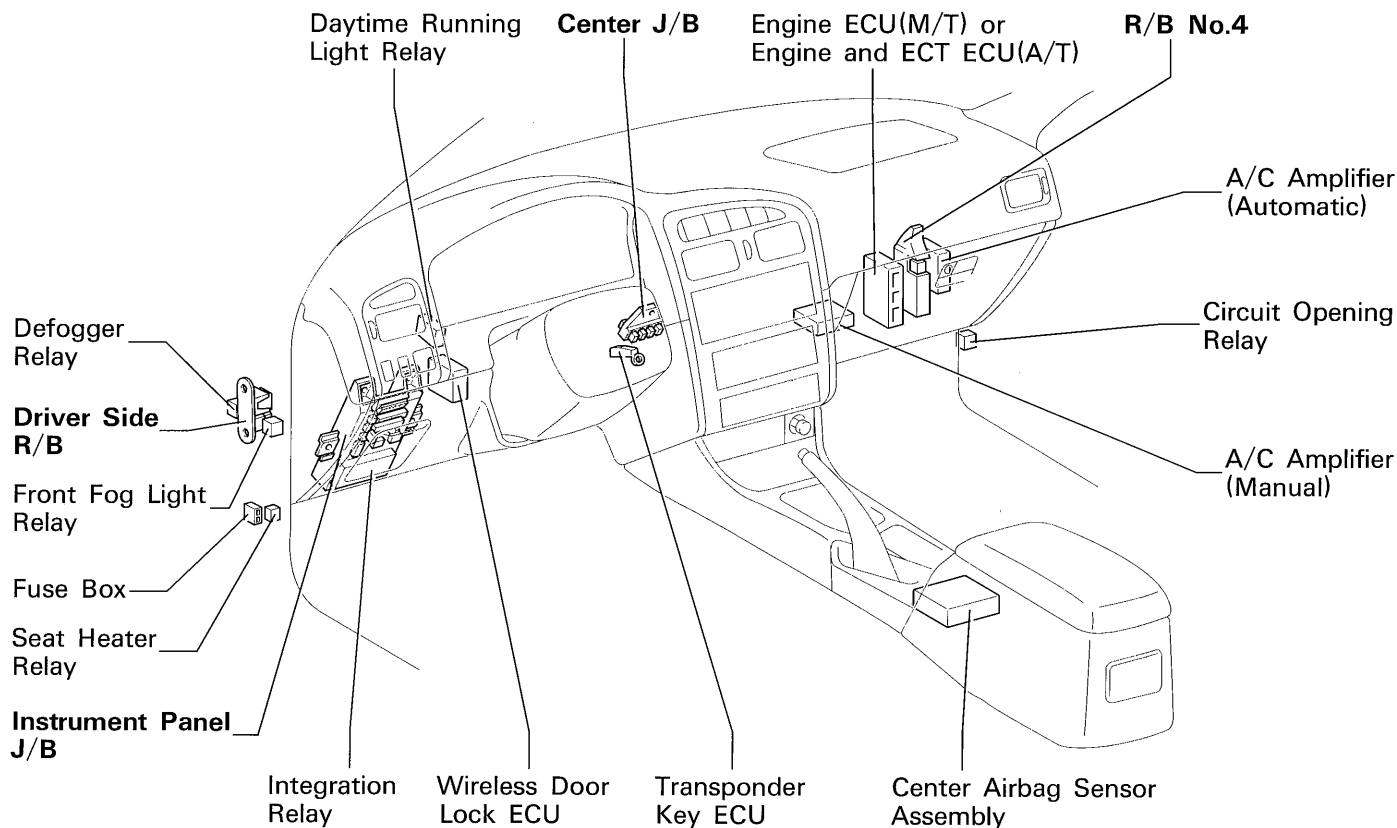


(RHD)

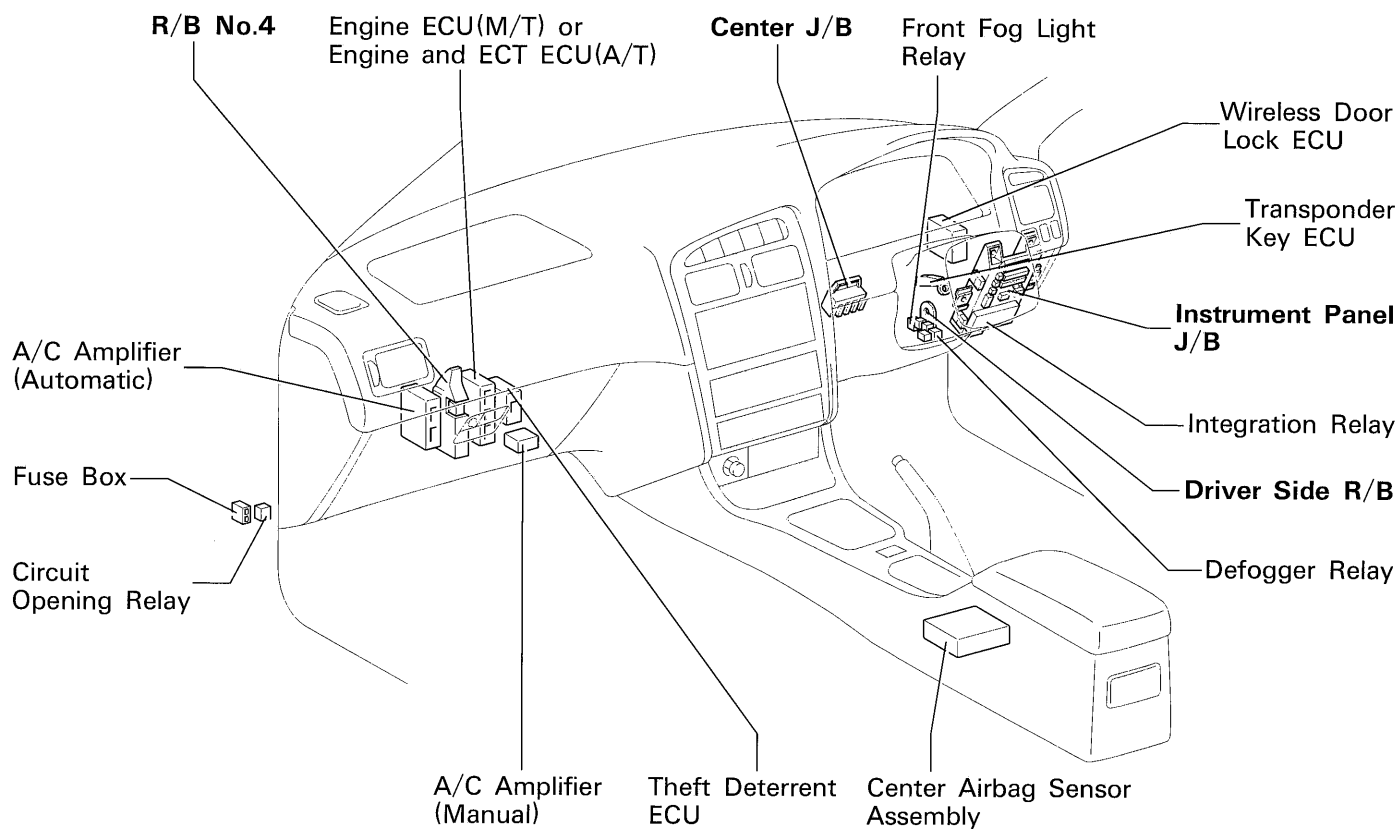


F RELAY LOCATIONS


[Body]
(S/D)

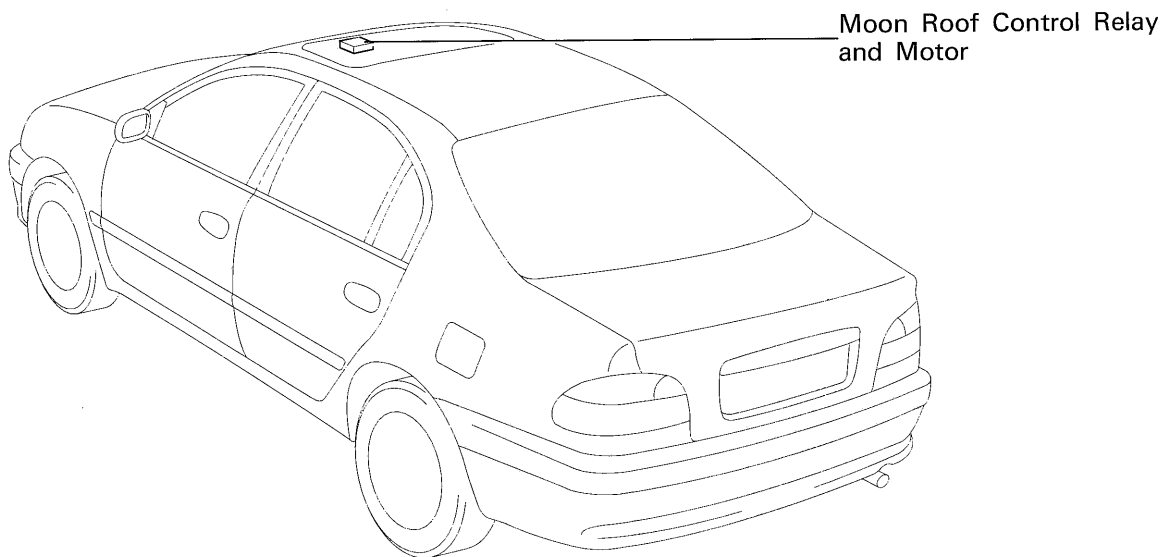

(L/B)

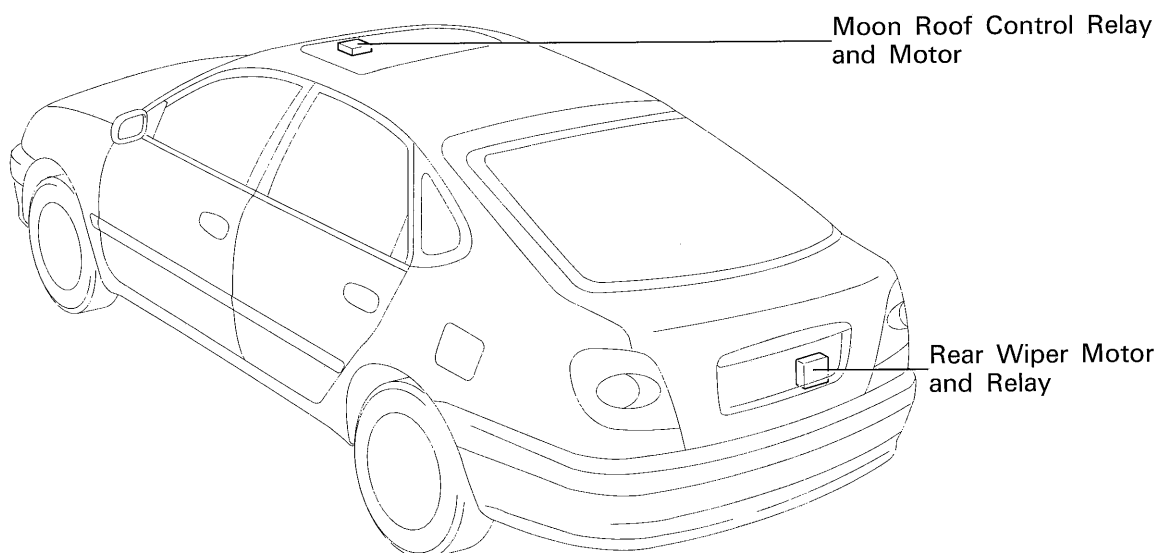


(W/G)

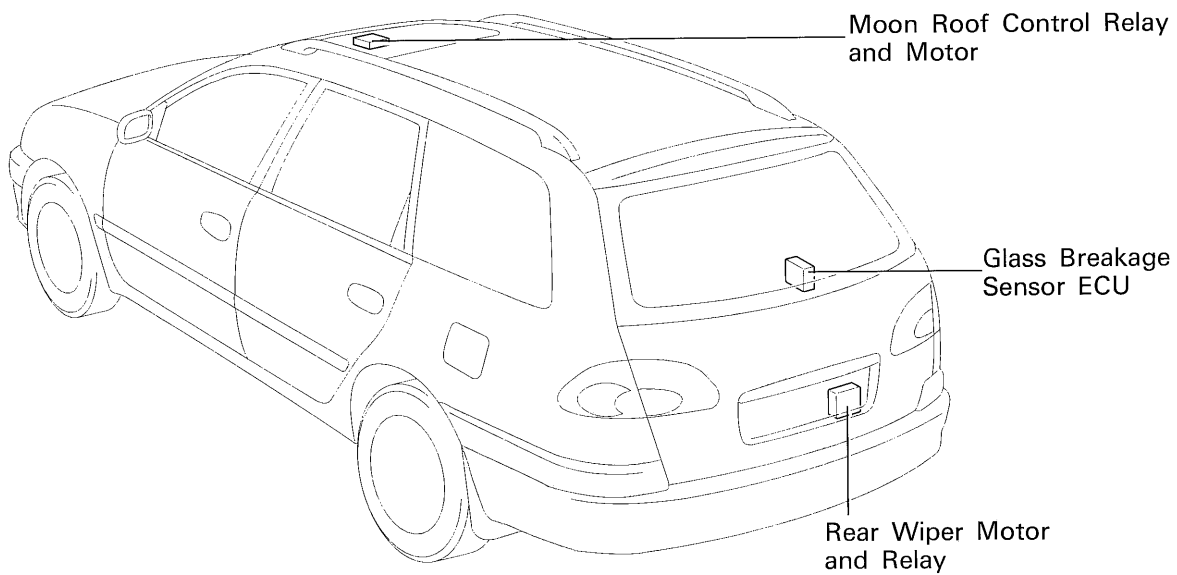

① : Driver Side R/B


LHD : Left Kick Panel (See Page 51)

RHD : Right Kick Panel (See Page 51)

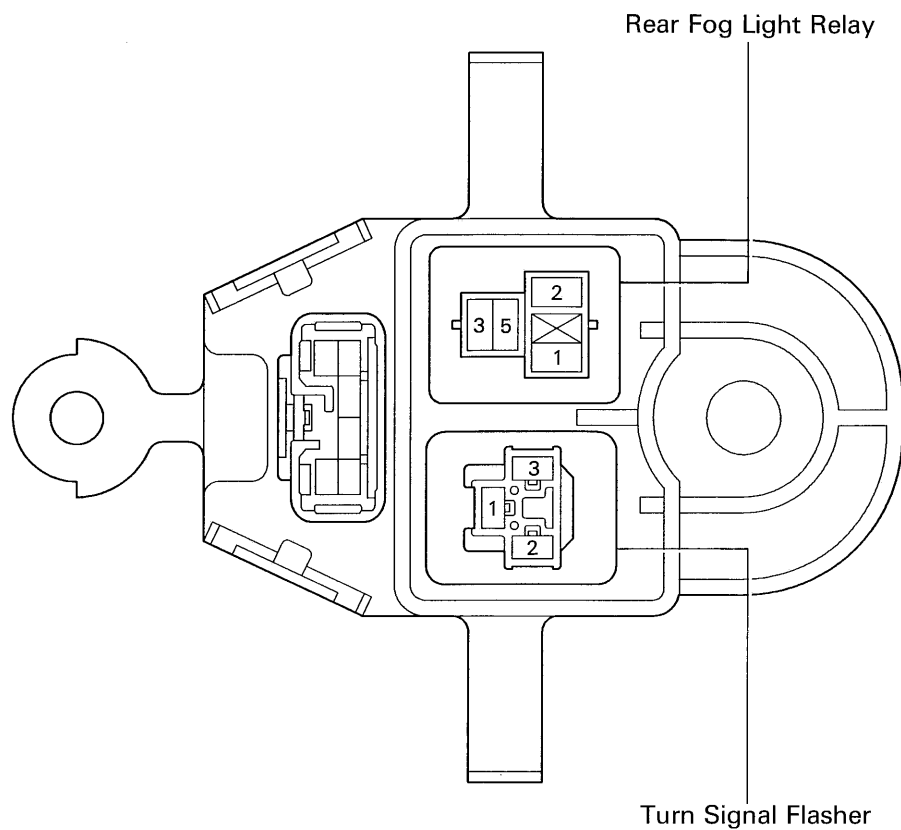


④ : R/B No.4

Passenger Side Dash Panel (See Page 51)

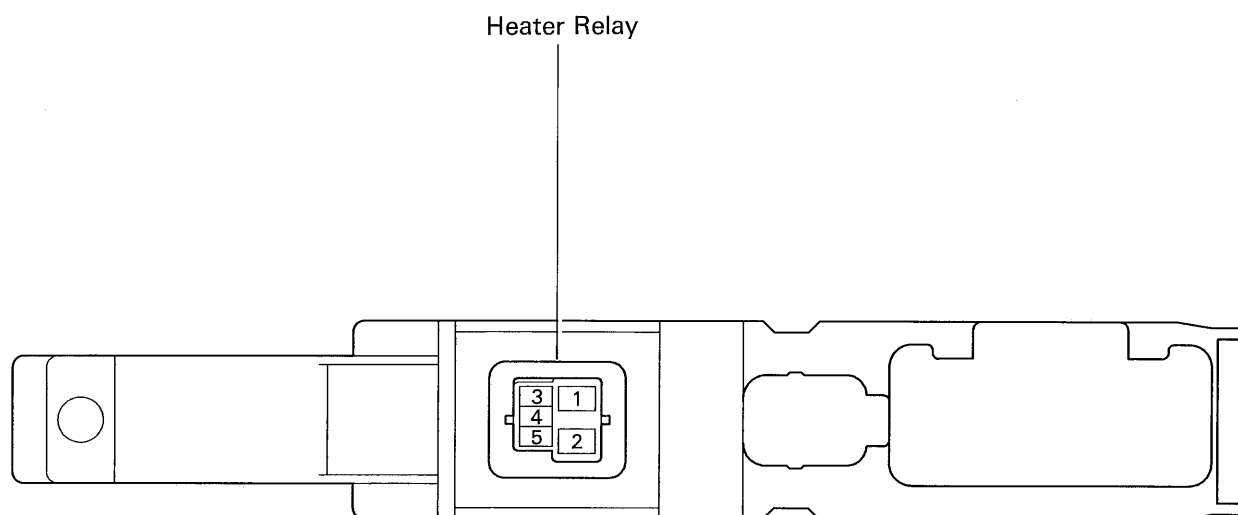


F RELAY LOCATIONS


⑤ : Engine Room R/B	Engine Compartment Left (See Page 50)
	(Inside Engine Room J/B)

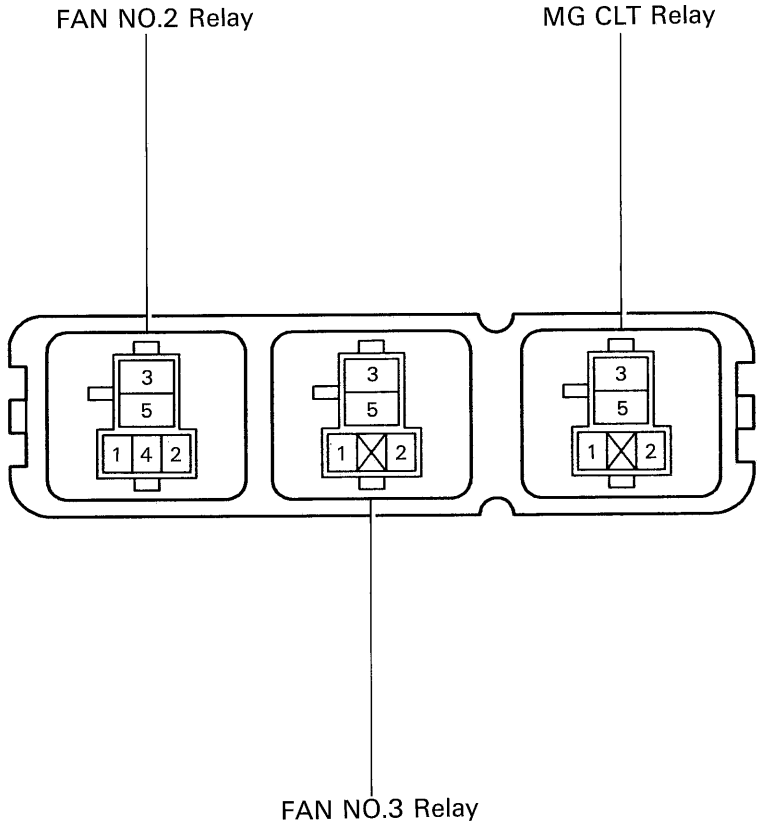

⑦ : R/B No.7	Radiator Upper Support RH (See Page 50)
--------------	---


(w/ Daytime Running Light)

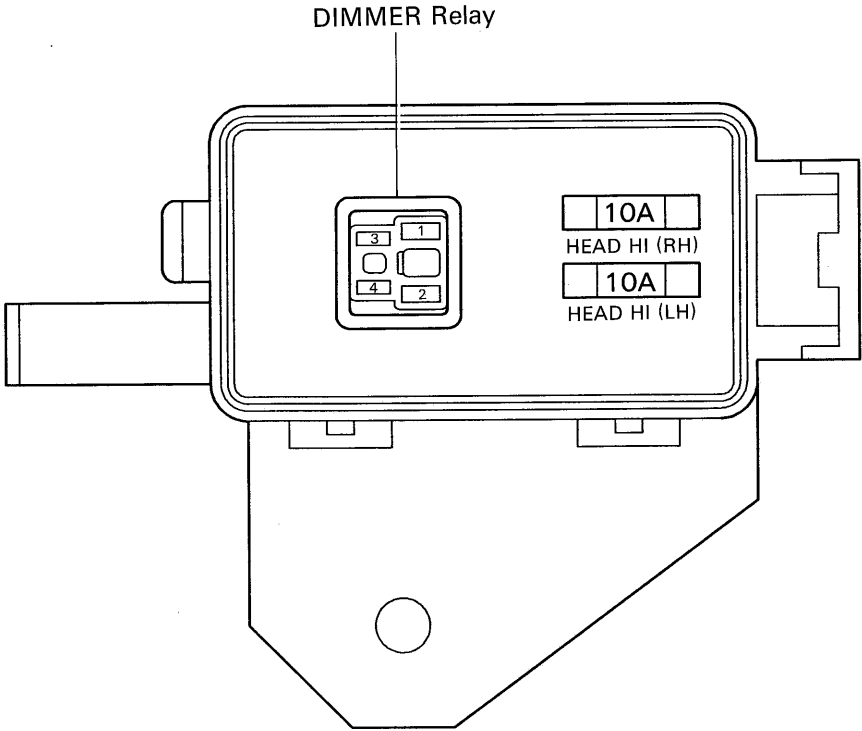

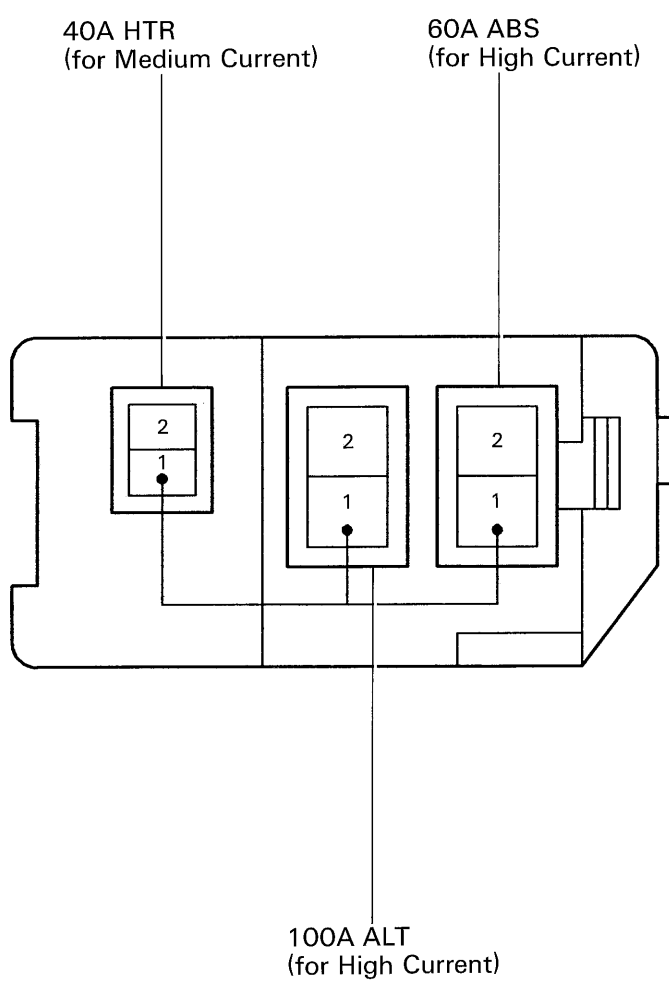
Fusible Link Block**Engine Compartment Left (See Page 50)**
(Inside Engine Room J/B)

English

○ : Engine Room J/B Engine Compartment Left (See Page 50)

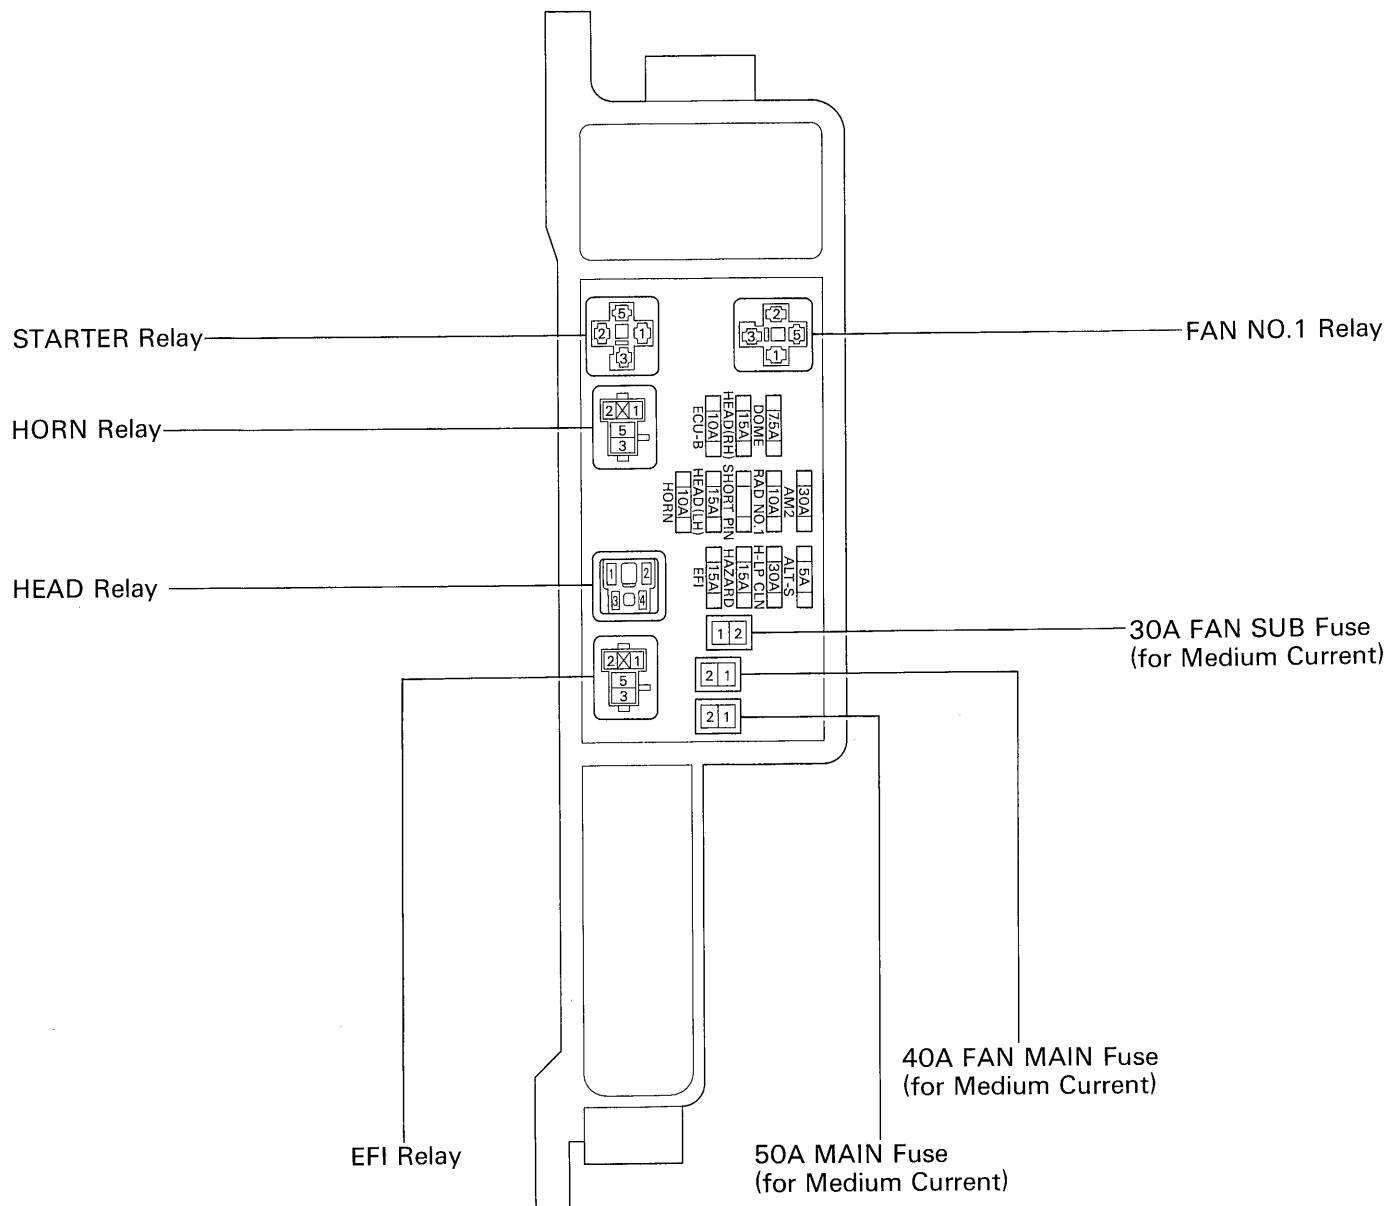


(Inner Circuit : See Page 62)

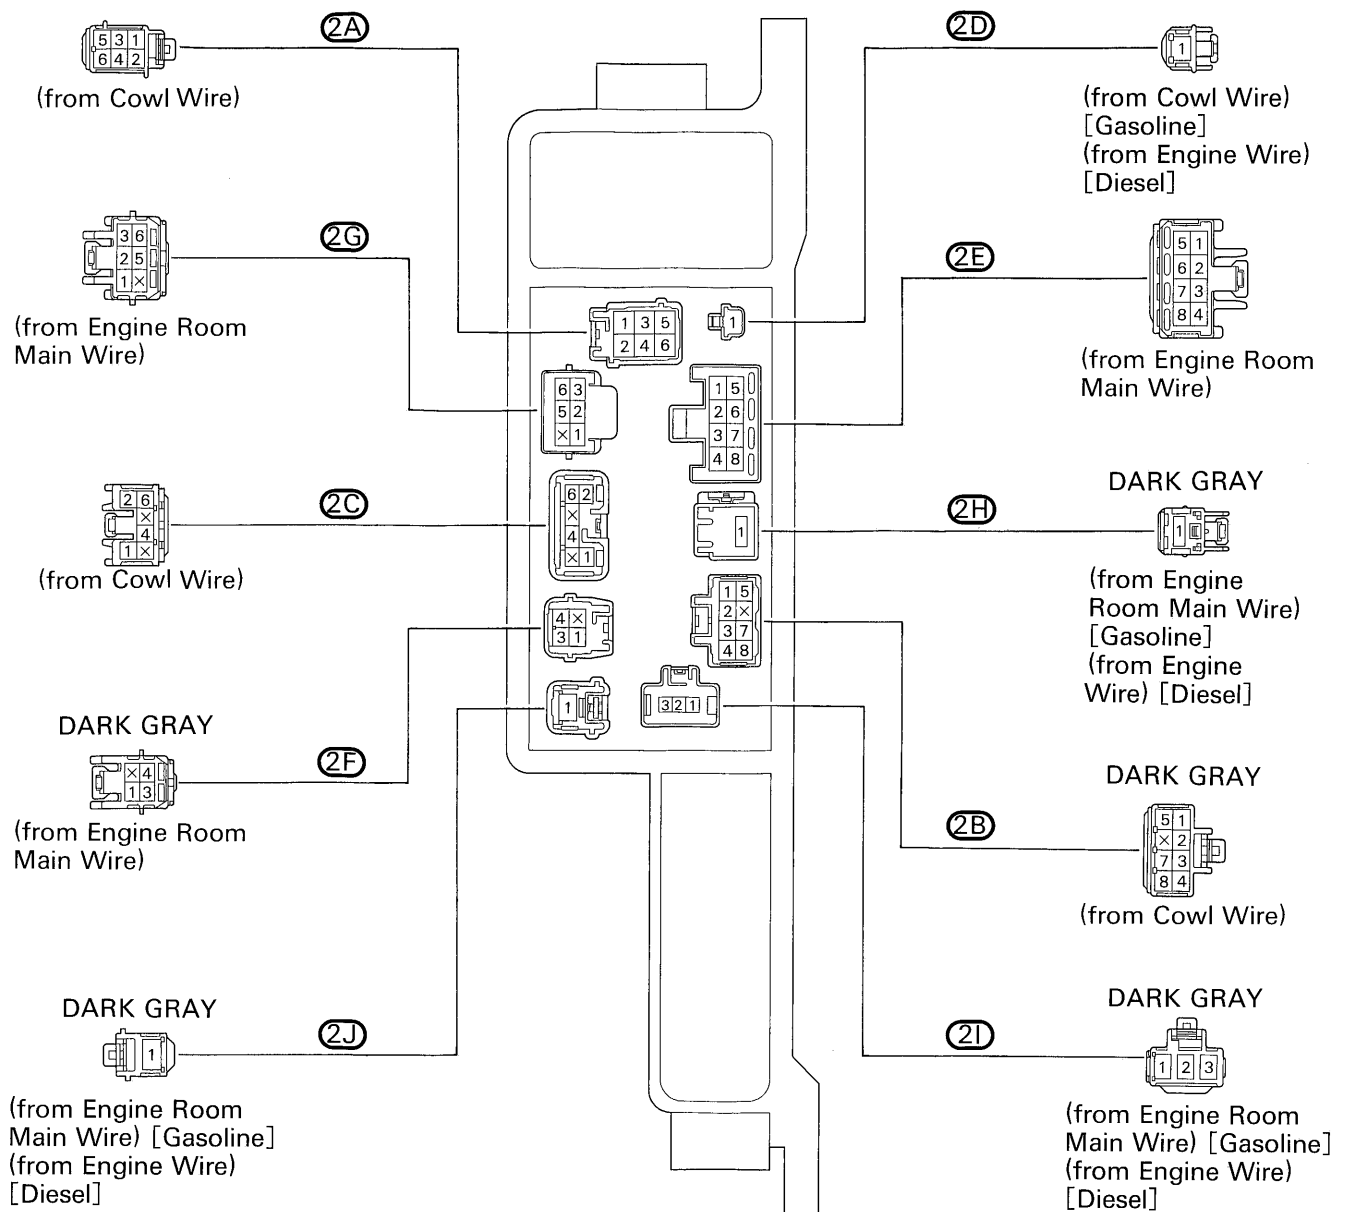


F RELAY LOCATIONS

○ : Instrument Panel J/B


Lower Finish Panel (See Page 51)

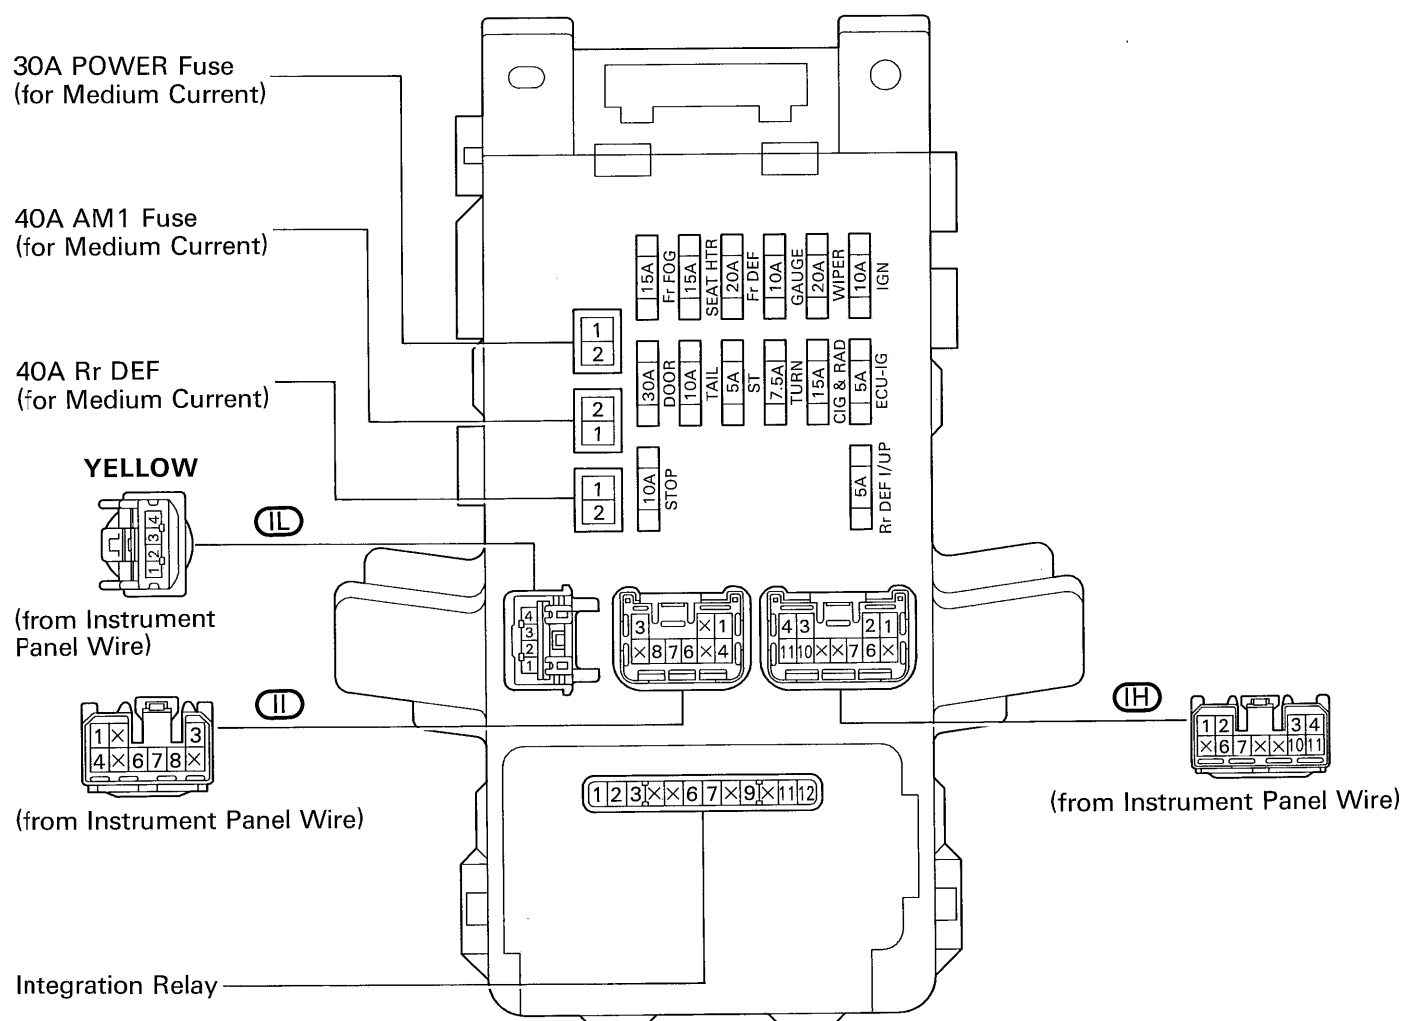


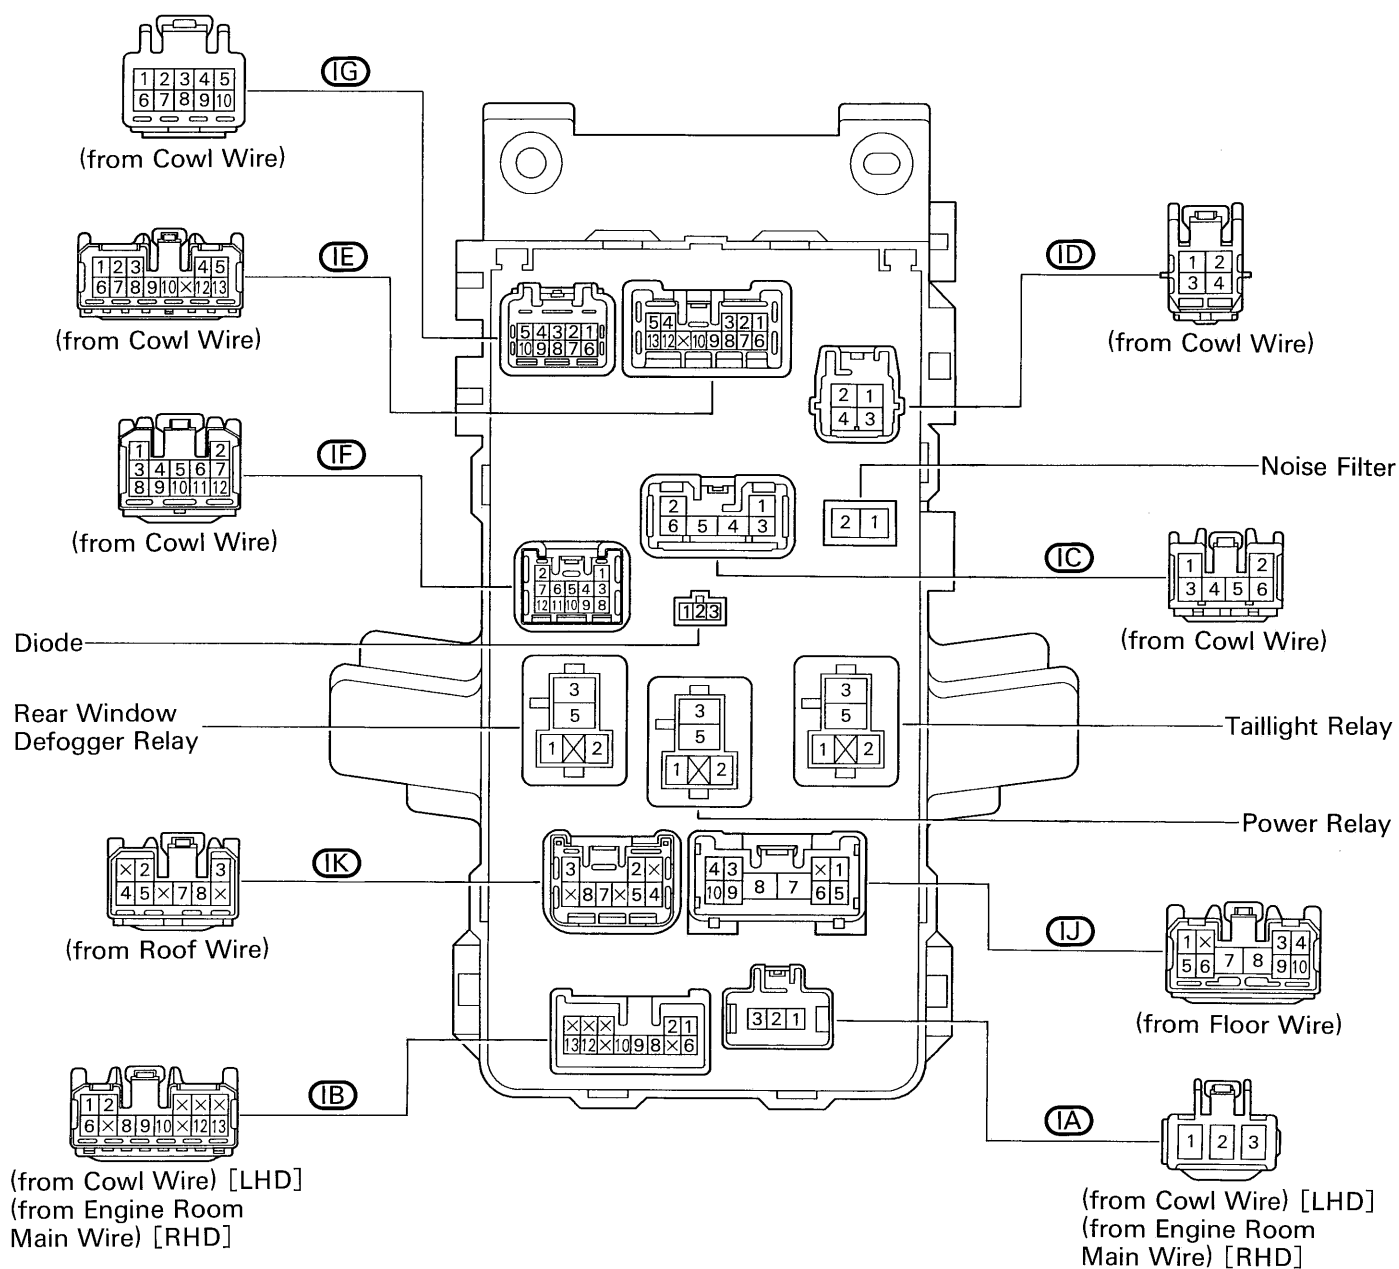

F RELAY LOCATIONS


 : Center J/B	LHD : Left Side of Heater Unit (See Page 51)
	RHD : Right Side of Heater Unit (See Page 51)

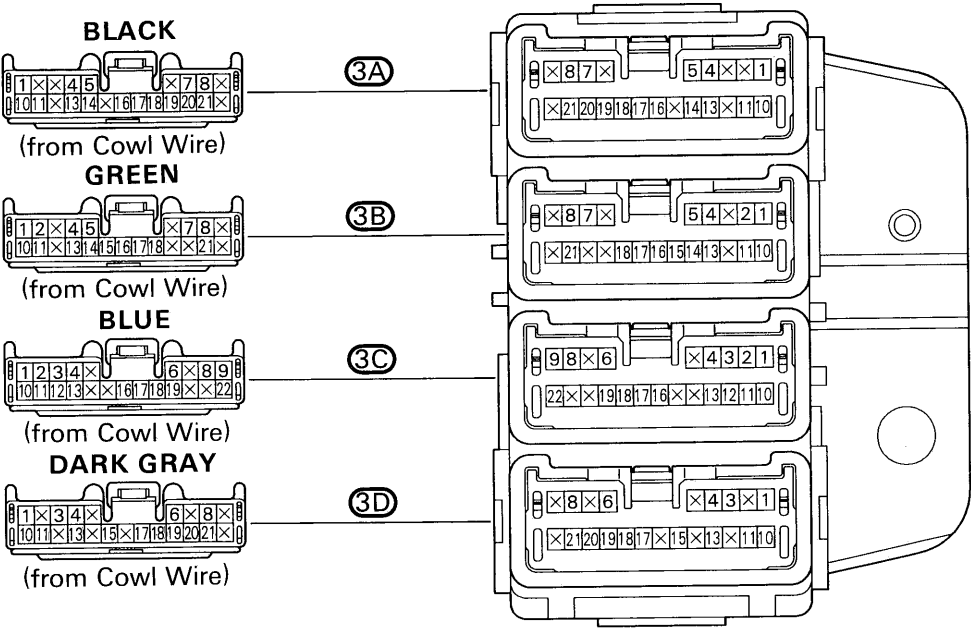

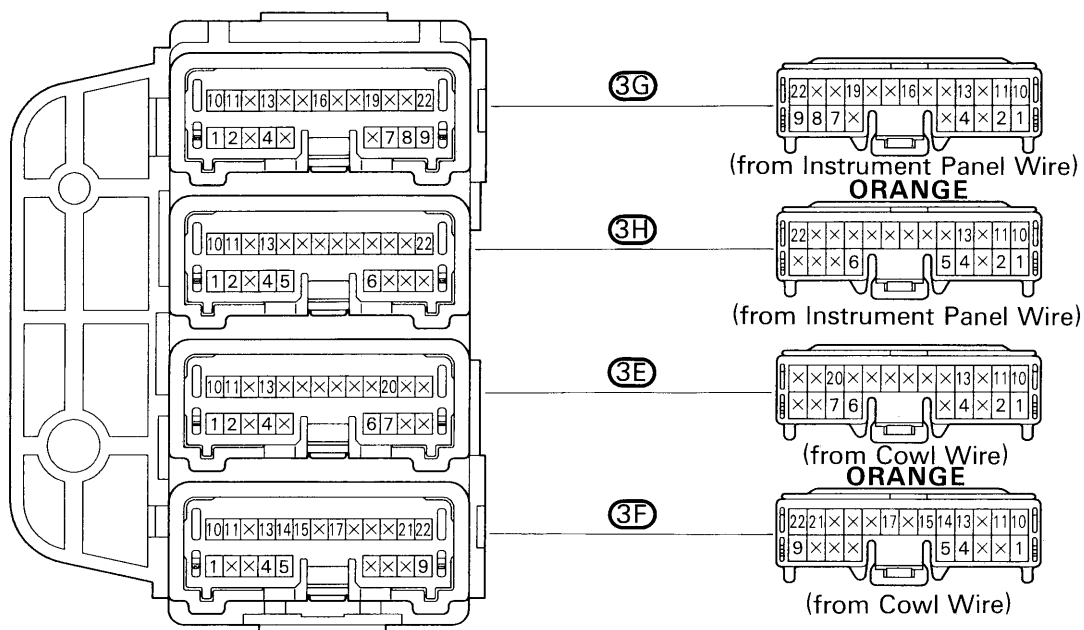


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

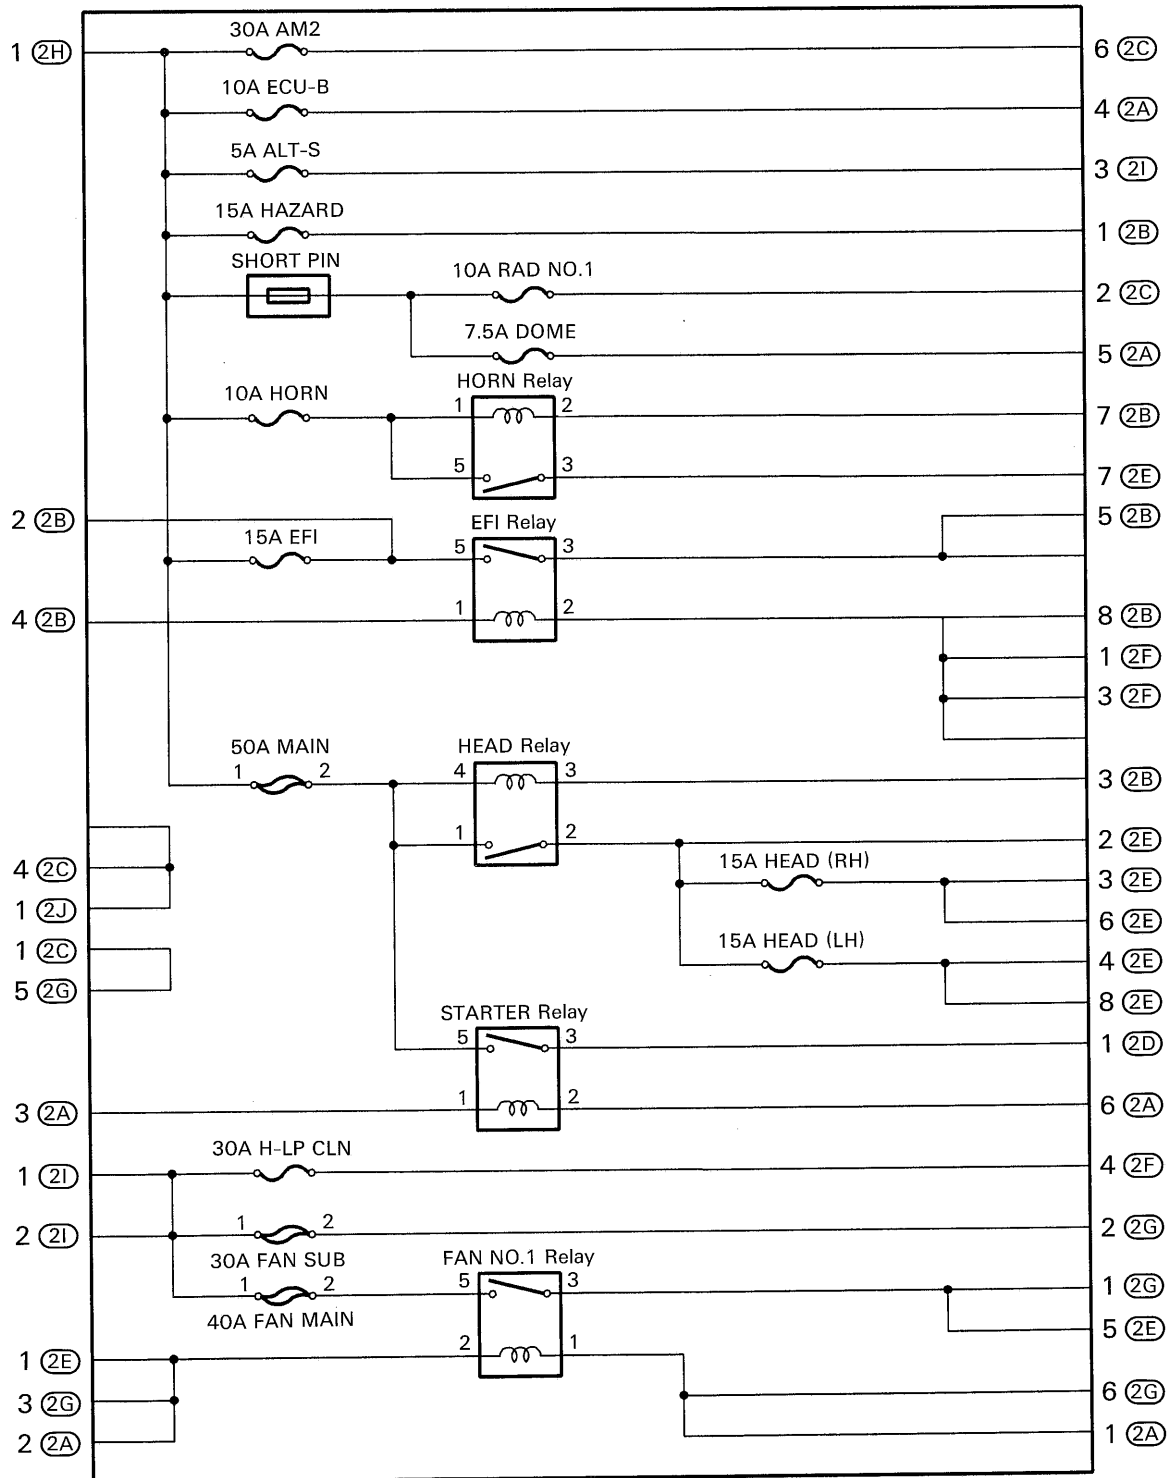

[Instrument Panel J/B Inner Circuit]

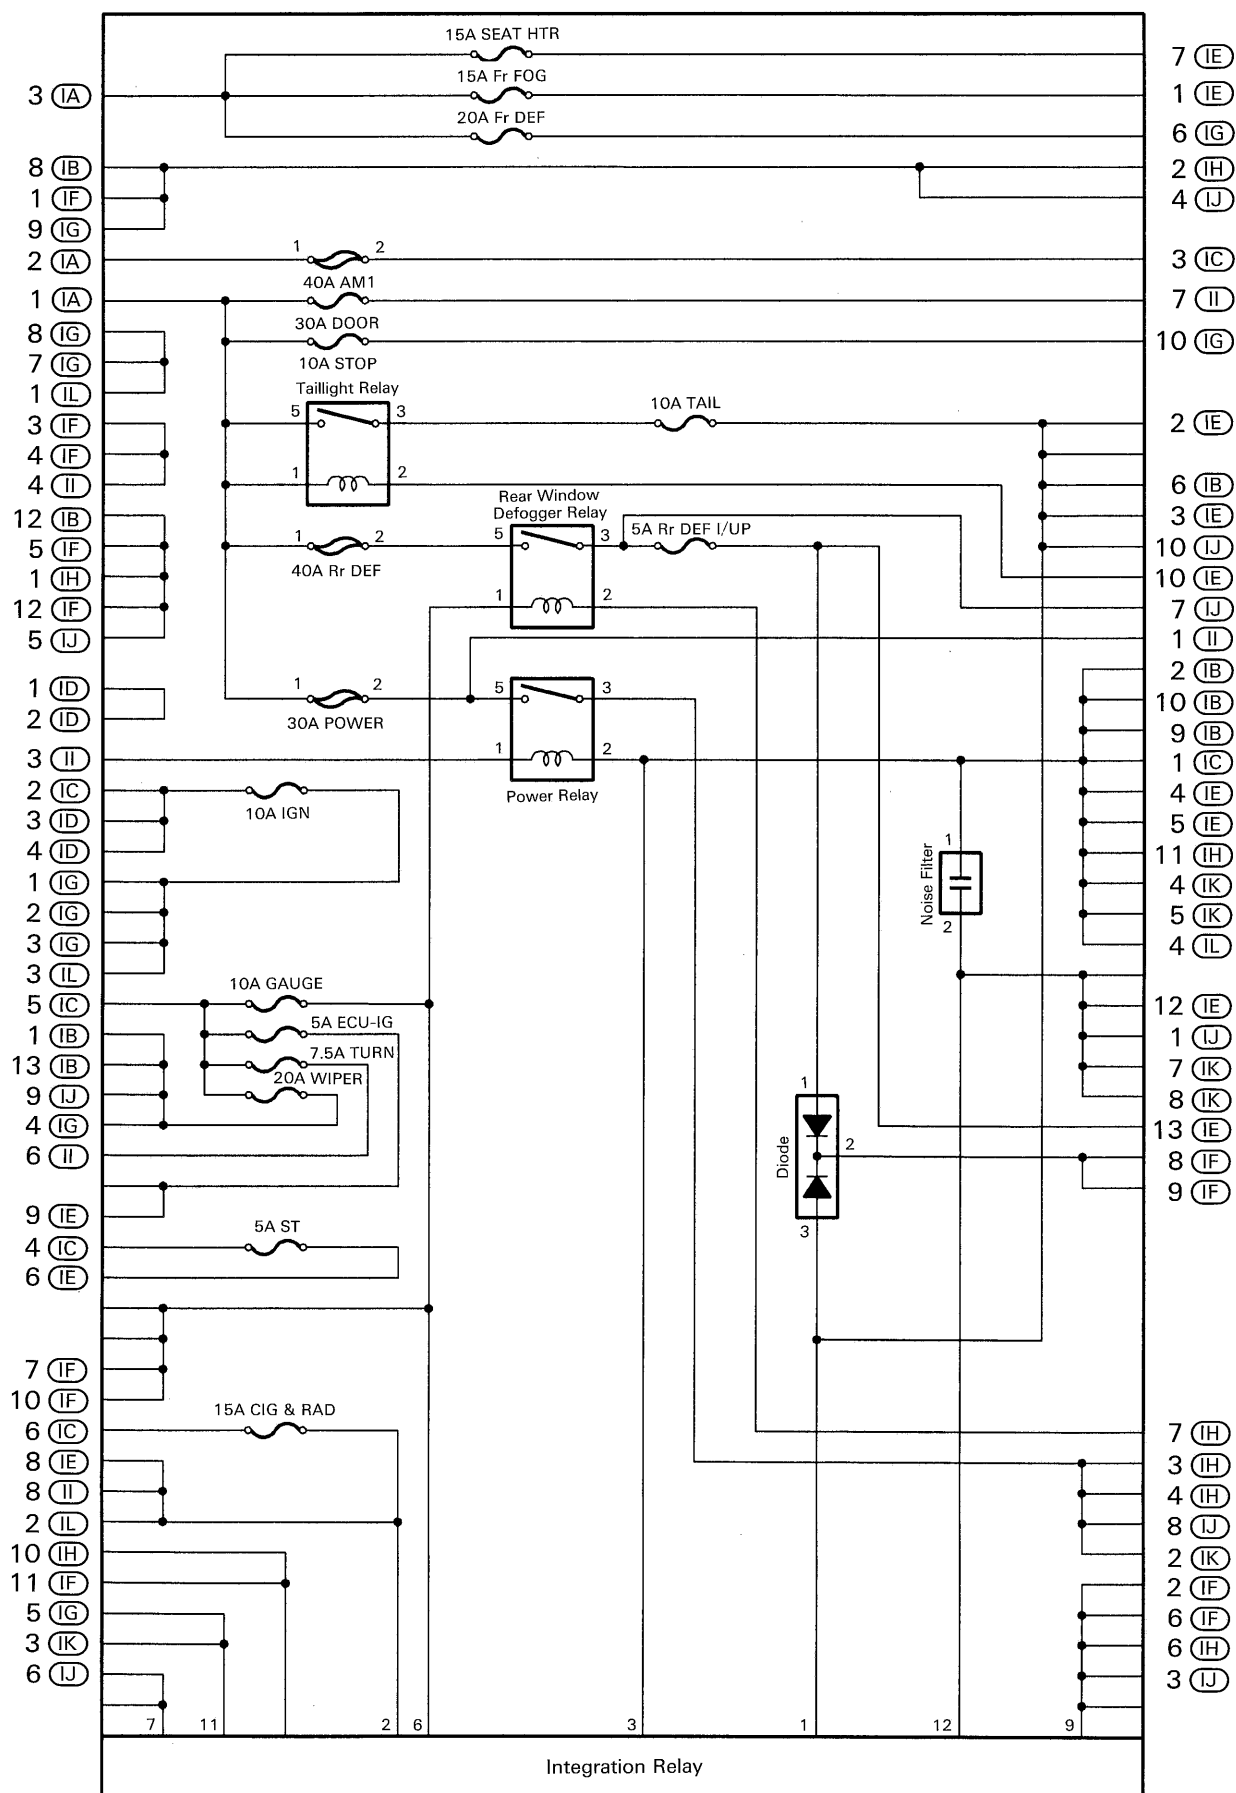

F RELAY LOCATIONS

[Center J/B Inner Circuit]

English

