

Handbook





On-line user guide

You can find your user guide on the PEUGEOT website, under the heading "Personal space".

Referring to the user guide on-line also gives you access to the latest information available, easily identified by the bookmarks, associated with this pictogram:



Please note the following point:

The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. It is advisable to contact a PEUGEOT dealer to be shown the recommended equipment and accessories.



If the heading "Personal space" is not available on the public website for your country, you can find your user guide at the following address:
<http://public.servicebox.peugeot.com>

Select:

- > the link in "Private customer access",
- > the language,
- > the model,
- > the edition date appropriate for the date of registration of your vehicle.

You will find your user guide, presented in the same way as the paper version.

Consulting your "Handbook" should enable you to adjust the equipment and configurations available on your vehicle for optimum comfort and driving conditions.

Your vehicle is fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.

PEUGEOT thanks you for your trust and wishes you many pleasant journeys.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.



Welcome

Key

This key will allow you to distinguish the special features of your vehicle:



Light van



Ludospace (4/5 seat versions)

Key

Warning:



this symbol marks warnings which it is essential to observe for your own safety, for the safety of others or to avoid any risk of damaging your vehicle.

Page reference:



this symbol invites you to refer to the pages which provide details of the function.

2 - CONTENTS

4 - 18 ► FAMILIARISATION



Eco-driving

17

34 - 45 ► SEATS



Front seats	34
Rear bench seat (4/5 seat versions)	36
Child seats	37
Locations for child seats attached with the seat belt	40
ISOFIX mountings	41
ISOFIX child seat	42
Seat belts	44

19 - 27 ► INSTRUMENTS, CONTROLS AND DISPLAYS



Instrument panel	20
Warning lamps	21
Temperature indicator	23
Service indicator	24
Instrument panel display	24
Distance recorder zero reset	26
Lighting rheostat	26
Clock	26
Display A	27

46 - 53 ► ACCESS AND STARTING



Keys	46
Alarm	48
Front and side doors	49
Rear doors	51
Opening the bonnet	53
Filling with fuel	53

28 - 33 ► COMFORT



Ventilation	28
Heating	30
Air conditioning	32

54 - 57 ► VISIBILITY



Lights	54
Windscreen wiper stalk	55
Electric windows	56
Rear windows	56
Exterior mirrors	57
Interior mirror	57

58 - 63 » COMFORT AND SAFETY



Front fittings	58
Courtesy lamps	59
Headlamp adjustment	60
Steering wheel adjustment	60
Lashing rings	61
Rear fittings	62

64 - 71 » DRIVING



Handbrake	64
ABS and EBFD systems	64
Speed limiter	65
Cruise control	67
Airbags	69

72 - 97 » PRACTICAL INFORMATION



Under the bonnet	72
Levels	77
Checks	78
Changing a wheel	79
Changing a bulb	82
Changing a fuse	88
Battery	92
Energy economy mode	92
Fitting audio equipment, speakers	93
Snow screen	94
Towing	95
Towing a trailer	96
Accessories	97

98 - 109 » TECHNICAL DATA



Dimensions	98
Engines	102
Light van weights and loads	105
Ludospace weights and loads	107
Identification features	109

110 - 117 » AUDIO EQUIPMENT



RD3 audio system	110
------------------	-----

118 - 122 » VISUAL INDEX



4 - FAMILIARISATION



INSTRUMENTS AND CONTROLS

1. Speaker (tweeter).
2. Windscreen demisting vents.
3. Controls:
 - Electric windows.
 - Rear door windows demisting.
 - Air conditioning.
4. Central locking button.
5. Multifunction screen or clock.
6. Hazard warning lamps switch.
7. Central adjustable heating/ventilation vents.
8. Lighting and direction indicator control stalk.
9. Speed limiter/cruise control switches.
10. Instrument panel.
11. Driver's airbag.
Horn.
12. Wiper/screenwash controls.
13. Audio system steering mounted controls.
14. Steering lock and ignition.
15. Fusebox.
16. Passenger's airbag deactivation switch.
17. Alarm.
18. Steering wheel adjustment control.
19. Passenger's electric mirror control.
20. Headlamp height adjustment.
21. Heated seats control.
22. Parking brake.
23. Cigarette lighter.
24. Portable ashtray.
25. Gear lever.
26. Storage compartment.
27. Heating/air conditioning controls.
28. Audio system.
29. Lower glove box.
30. Upper glove box or passenger's airbag.
31. Bonnet release lever.
32. Side adjustable heating/ventilation vents.
33. Door window demisting vents.

6 - FAMILIARISATION



KEYS

The keys allow you to switch on the ignition and operate the passenger's airbag deactivation switch, as well as to independently operate the locks on the doors and the fuel filler cap.

Central locking

From the front doors, the keys allow you to lock and unlock the doors and tailgate.

If one of the doors or the tailgate is open, the central locking does not operate.

The remote control performs the same functions at a distance.

Remote control

Locking

Press button **A** to lock the vehicle.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Unlocking

Press button **B** to unlock the vehicle.

This is confirmed by rapid flashing of the direction indicators.

Locating the vehicle

To locate your vehicle, previously locked, in a car park:

- ☞ press button **A**, the courtesy lamps come on and the direction indicators flash for a few seconds.

STARTING

STOP position (S):

The ignition is off.

To release the steering wheel slightly, turn the steering wheel slightly while turning the key, without forcing it.

Accessories position (A):

The ignition is off but various systems can be used.


On position (M):


The ignition is on.

Starting position (D):

Operates the starter.

Release the key when the engine has started. Never operate the starter while the engine is running.

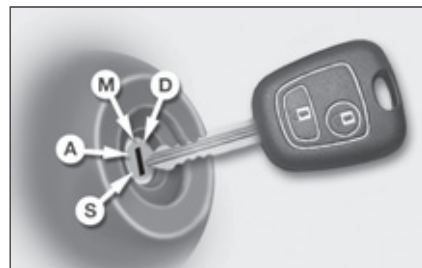

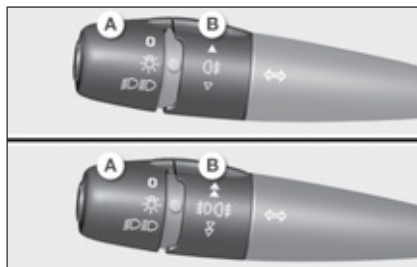

STEERING MOUNTED CONTROLS

LIGHTING

Front and rear lamps (ring A)



Lighting off



Sidelamps



Dipped/main beam headlights



Vehicles fitted with a rear foglamp (ring B)

Turn the ring forwards.



Vehicles fitted with front foglamps and a rear foglamp (ring B)

Front foglamps (1st turn of the ring forwards).

Front foglamps and rear foglamp (2nd turn of the ring forwards).

To switch off: turn the ring rearwards.



WIPERS

Front

- 2** Rapid wipe (heavy rain).
- 1** Normal wipe (moderate rain).
- I** Intermittent wipe.
- 0** Off.
- ↓** Single wipe.

Screenwash: pull the stalk towards you.

Rear

Off



Intermittent wipe



Wash-wipe





FRONT SEATS

1. Head restraint height adjustment.



Never travel with the head restraints removed.

2. Armrest.
3. Seat back angle adjustment.
4. Forwards-backwards adjustment.

AIRBAGS

Front airbags

These are fitted in the centre of the steering wheel for the driver and in the dashboard for the front passenger. They are deployed simultaneously, except in cases where the passenger's airbag is deactivated.

Precautions regarding the passenger's airbag

- ☞ Deactivate the airbag if you install a rear-facing child seat,
- ☞ Activate the airbag for an adult passenger.



Deactivating the passenger's airbag

- ☞ **With the ignition off**, insert the ignition key into the passenger's airbag switch 1 and turn it to the "OFF" position.
- ☞ As soon as you remove the child seat, turn the airbag switch to the "ON" position to activate the airbag again.

Deactivation check



With the ignition switched on (2nd notch), illumination of this warning lamp indicates that the passenger's airbag is deactivated (switch in the "OFF" position).

The warning lamp remains on until the airbag is activated again.

Lateral airbags*

The lateral airbags are fitted into the front seat backrest frame, on the door side.

They are deployed independently of each other, on whichever side the collision occurs.



ELECTRIC WINDOWS

1. Driver's electric window.
2. Passenger's electric window.

Manual mode:

- ☞ Press the switch. The window stops as soon as the switch is released.

Automatic mode (driver):

- ☞ Press and hold the switch. One touch completely opens or closes the window.



DOOR MIRRORS

- ☞ Move the manual control **3** in all four directions to adjust.

Electric control for the passenger's side mirror

- ☞ From the driver's seat, adjust in all four directions by operating the control **4**.



STEERING WHEEL HEIGHT ADJUSTMENT

- ☞ When stationary, push the control **A** forwards to release the steering wheel adjustment mechanism.
- ☞ Adjust the height of the steering wheel.
- ☞ Lock the steering wheel adjustment it by pulling control **A** towards you fully.



SPEED LIMITER*

This limiter indicates the status of selection of the function on the instrument panel and displays the programmed speed. The minimum speed which can be programmed is at least 18 mph (30 km/h).

It prevents exceeding of the speed programmed by the driver; this function remains active regardless of any action on the brake or clutch pedals. On the other hand, pressing the accelerator pedal to the point of resistance does not have any effect.

It is possible to exceed the programmed speed temporarily by pressing the accelerator firmly beyond this point of resistance.

The operating actions must be carried out with the engine running.




CRUISE CONTROL*

The cruise control has a display on the instrument panel to indicate the programmed reference speed.

It enables the vehicle to maintain the reference speed programmed by the driver.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least fourth gear engaged.

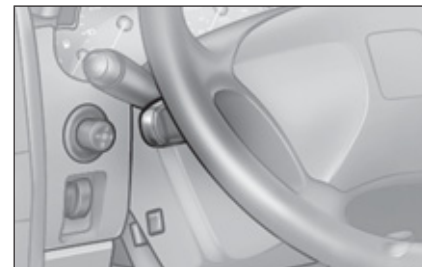

If the vehicle is fitted with a speed limiter and cruise control, these functions cannot both be activated at the same time.

12 - FAMILIARISATION

HEATING

N°	Symbol	Function
1		Air flow adjustment.
2		Air flow adjustment and air intake control.
3		Temperature adjustment.
4		Air distribution adjustment.



» 30

AIR CONDITIONING




N°	Symbol	Function
1		Air conditioning control.
2		Air flow adjustment and air intake control.
3		Temperature adjustment.
4		Air distribution adjustment.



» 32

RECOMMENDED INTERIOR SETTINGS


I require...	Heating or Manual air conditioning				
	Air distribution	Air flow	Air recirculation/ Intake of exterior air	Temperature	Manual AC
HOT					
COLD					A/C
DEMISTING DE-ICING					ON 

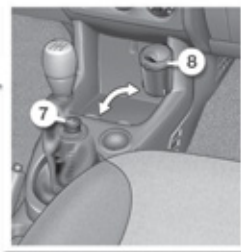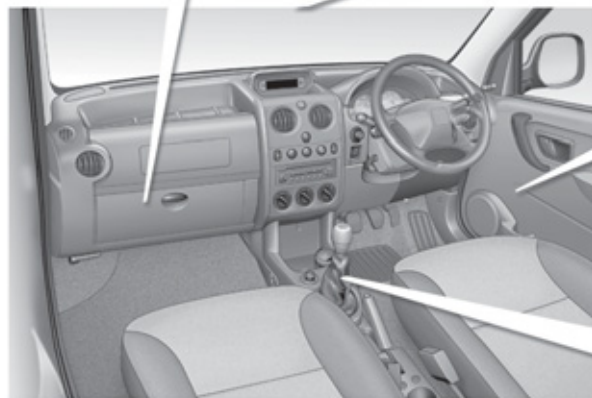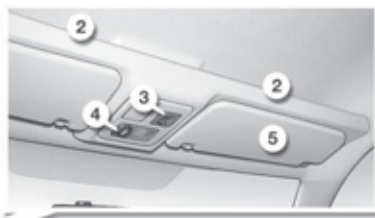

FRONT FITTINGS

1. Storage compartments in the doors.
A. Bottle holder.
B. Cup holder.
C. Storage compartment.
2. Overhead storage.
3. Map reading lamp.
4. Courtesy lamp.
5. Sun visors.
6. Glove box.
7. Cigarette lighter.
8. Removable ashtray.

REAR FITTINGS


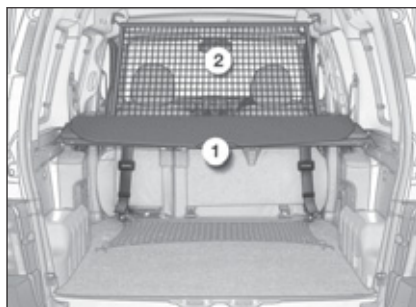


1. Load space cover.
2. High load retaining net.
3. Stowing rings.
4. Side door storage compartment.
5. Trays between the front and rear seats.
6. Seat back storage pockets.



Stowing rings

For greater safety, always ensure that the loads transported are secured firmly.

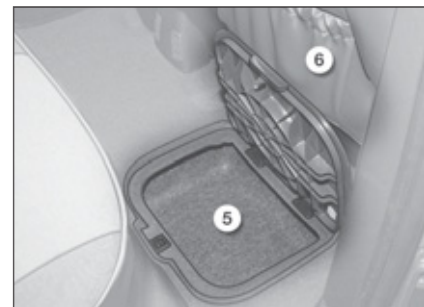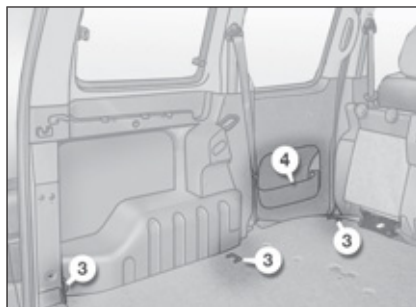

REFUELLING



This operation must be carried out with **the engine switched off**.

☞ Insert the key then turn it to the left.

☞ Remove the filler cap.

A label indicates which type of fuel to use.

When you fill your tank, do not continue after the third cut-off of the pump. This could cause engine malfunctions.

The capacity of the tank is approximately 55 litres for petrol engines and 60 litres for Diesel engines.



Low fuel level warning lamp

From the time this light comes on, you have enough fuel left to cover **approximately 30 miles (50 km)**.

Note: the right-hand sliding side door cannot be opened while the fuel filler cap is removed.

OPENING THE BONNET



Inside the vehicle: Pull the lever on the left-hand side, under the dashboard.



Outside the vehicle: Lift the safety catch, raise the bonnet and secure the stay to hold the bonnet open.

ECO-DRIVING

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO₂ emissions.

Optimise the use of your gearbox

With a manual gearbox, move off gently, change up without waiting and drive by changing up quite soon. If your vehicle has the system, the gear efficiency indicator invites you to change up; it is displayed in the instrument panel, follow its instructions.

With an automatic or electronic gearbox, stay in Drive "**D**" or Auto "**A**", according to the type of gearbox, without pressing the accelerator pedal heavily or suddenly.

Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO₂ emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic digital regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.



Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter...) and observe the schedule of operations recommended by the manufacturer.

When refuelling, do not continue after the 3rd cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.



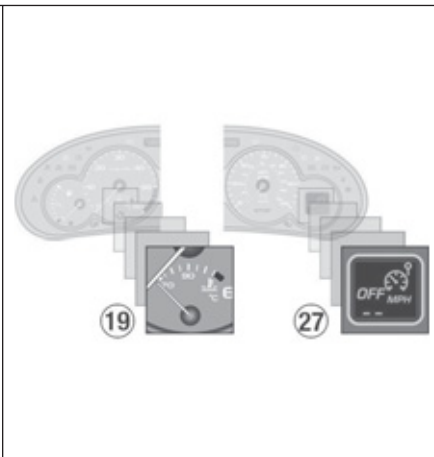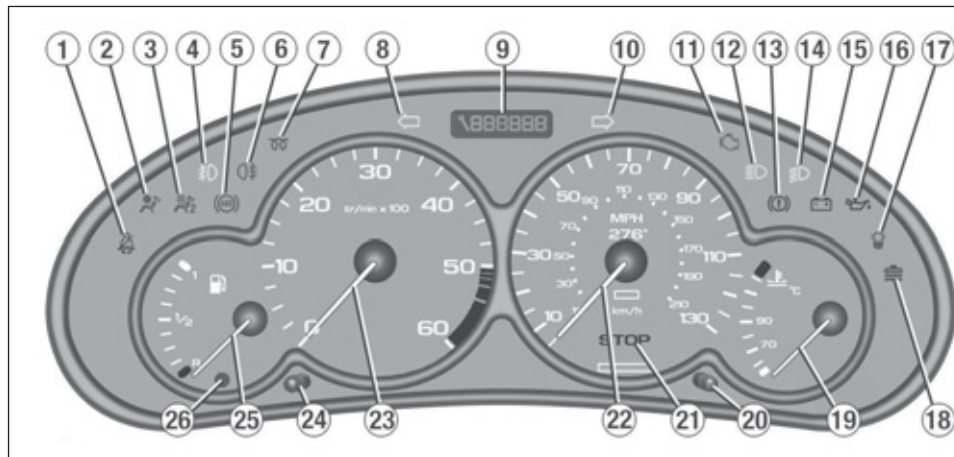

INSTRUMENT PANEL: PETROL - DIESEL

1. Seat belt not fastened warning lamp
2. Passenger's airbag deactivated warning lamp
3. Front and lateral airbags warning lamp
4. Front foglamps warning lamp
5. Anti-lock braking system (ABS) warning lamp
6. Rear foglamp warning lamp
7. Diesel pre-heater warning lamp
8. Left hand direction indicator
9. Total distance recorder, service indicator and engine oil level indicator
10. Right hand direction indicator
11. Emission control system warning lamp
12. Main beam headlamps warning lamp
13. Parking brake, low brake fluid level and electronic brake force distribution fault warning lamp
14. Dipped beam headlamps warning lamp
15. Battery charge warning lamp
16. Engine oil pressure and temperature warning lamp
17. Water in Diesel filter warning lamp
18. Low coolant level warning lamp
19. Coolant temperature indicator
20. Total distance recorder button
21. Central (STOP) warning lamp
22. Speedometer*
23. Rev counter
24. Lighting dimmer button
25. Fuel gauge
26. Low fuel level warning lamp
27. Speed limiter/cruise control screen

* Version indicating in miles or kilometres according to country of sale.

MONITORING OPERATION

A warning lamp on fixed or flashing, with the engine running, indicates an fault in the operation of the unit concerned. The illumination of certain warning lamps may be accompanied by an audible signal and a message in the screen. Do not ignore this warning: consult a PEUGEOT dealer as soon as possible.

If the central STOP warning lamp comes on when you are driving, stop your vehicle immediately, where it is safe to do so.



Central (STOP) warning lamp

Linked to the warning lamps for:

- "engine oil pressure and temperature",
- "low coolant level",
- "parking brake",
- "low brake fluid level",
- "electronic brake force distribution system fault".

Linked with the "coolant temperature" gauge.

You must stop if the lamp flashes with the engine running.

Consult a PEUGEOT dealer.



Engine oil pressure and temperature warning lamp

Linked to the central (STOP) warning lamp.

You must stop.

This warning lamp indicates one of the following:

- low oil pressure indicated by the message "**Oil pressure insufficient**" in the screen.
- low engine oil level. Top up the level.
- oil temperature too high. To lower the oil temperature, reduce your speed.

Illumination of the warning lamp is accompanied by an audible signal.

Consult a PEUGEOT dealer.



Low engine coolant level warning lamp

Linked to the central (STOP) warning lamp.

This comes on for a few seconds when the ignition is switched on.

Illumination of this warning lamp is accompanied by an audible signal and the message "**Top up engine fluid level**" in the screen.

You must stop as soon as it is safe to do so.

Wait for the engine to cool before topping up the level.

The cooling system is pressurised.

If a check is required, to **prevent any risk of burns** unscrew the cap by two turns to allow the pressure to drop.

When the pressure has dropped, remove the cap and top up the level.

Consult a PEUGEOT dealer.



Parking brake, low brake fluid level and Electronic Brake Force Distribution system

fault warning lamp

Linked to the central (STOP) warning lamp.

This comes on each time the ignition is switched on.

Illumination of this warning lamp is accompanied by an audible signal and a message in the screen indicating the cause of the warning:

- "**Handbrake on**", if the parking brake is applied or not fully released.
- "**Brake fluid level low**" if there is an excessive drop in brake fluid level (if the warning lamp remains on even when the parking brake is released).
- "**Braking fault**" is displayed together with the ABS warning lamp, indicating a fault with the Electronic Brake Force Distribution system. **You must stop as soon as it is safe to do so.**

Consult a PEUGEOT dealer.



Anti-lock braking system (ABS) warning lamp

This comes on for a few seconds each time the ignition is switched on.

If the warning lamp remains on or comes on above 8 mph (12 km/h), this indicates an ABS fault.

However, the vehicle retains conventional servo-assisted braking.

Illumination of this warning lamp, accompanied by an audible signal and the message **"ABS fault"** in the screen, indicates an ABS fault.

Consult a PEUGEOT dealer.



Battery charge warning lamp

This comes on for a few seconds when the ignition is switched on. Illumination of this warning lamp, when the engine is running, accompanied by an audible signal and the message **"Battery charge fault"** in the screen, indicates one of the following:

- malfunction of the charging circuit,
- loose battery or starter terminals,
- a cut or loose alternator belt,
- an alternator failure.

Consult a PEUGEOT dealer.



Emission control system warning lamp

This comes on for a few seconds each time the ignition is switched on.

If it comes on with the engine running, accompanied by an audible signal and the message in the screen:

- **"Antipollution fault"**, this indicates a fault with the emission control system
- **"Catalytic converter fault"**, this indicates a fault with the injection or ignition system. There is a risk of damage to the catalytic converter (petrol engine only).

Consult a PEUGEOT dealer.



Diesel engine pre-heater warning lamp

Wait until the warning lamp goes out before starting the engine.

If the temperature is high enough, the warning lamp comes on for less than one second. You can start the engine without waiting.



Low fuel level warning lamp

This comes on for a few seconds when the ignition is switched on.

When the ignition is on, it is accompanied by an audible signal and the message **"Fuel level low"** in the screen.

If it flashes with the fuel gauge needle in the lowest position, when the ignition is on, this indicates a fault with the fuel gauge.

When this warning lamp comes on, you have enough fuel left to drive **approximately 30 miles (50 km)**.

Capacity of the tank:

- approximately 55 litres for petrol engines,
- approximately 60 litres for Diesel engines.



Water in Diesel filter warning lamp*

There is a risk of damage to the injection system.

Contact a PEUGEOT dealer as soon as possible.

* According to country.



Seat belt not fastened warning lamp*

When the ignition is switched on, this warning lamp comes on if the driver has not fastened their seat belt.

Above 12 mph (20 km/h), the warning lamp flashes for two minutes. Once the two minutes have elapsed, the warning lamp remains on until the driver fastens their seat belt.



Passenger's airbag deactivated warning lamp*

Illumination of this warning lamp is accompanied by the message **"Passenger airbag deactivated"** in the screen.

If the passenger's airbag is deactivated, the warning lamp comes on when the ignition is switched on and it remains on.

Always consult a PEUGEOT dealer if the warning lamp flashes.




Front and lateral airbags warning lamp

This comes on for a few seconds when the ignition is switched on.

With the engine running, illumination of this warning lamp accompanied by an audible signal and the message **"Airbag fault"** in the multifunction screen, indicates a fault with the airbags.

Consult a PEUGEOT dealer.

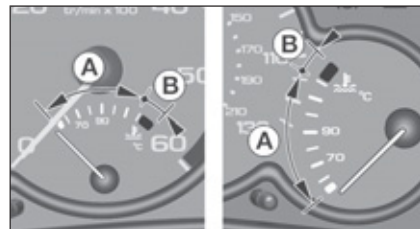

Coolant temperature indicator

- needle in zone **(A)**, the temperature is correct,
- needle in zone **(B)**, the temperature is too high. The central **STOP** warning light flashes, accompanied by an audible signal and the message **"Engine coolant temp. too high"** on the display.

You must stop.

Consult a PEUGEOT dealer.

* According to country.

24 - INSTRUMENTS, CONTROLS and DISPLAYS

INSTRUMENT PANEL DISPLAY

After switching on the ignition, three functions are shown in succession:

- service indicator,
- engine oil level indicator,
- total distance recorder/total and trip distances.

Note: the total and trip distances are displayed for 30 seconds when the ignition is switched off, on opening the driver's door, as well as on locking and unlocking the vehicle.

Service indicator

This is a visual reminder of when the next service is due. This service is to be carried out according to the manufacturer's servicing schedule.

Operation

As soon as the ignition is switched on and for 5 seconds, the spanner symbolising "service operation" comes on. The trip recorder display shows the distance remaining (in round figures) before the next service.

Example: 4 800 km (2 980 miles) remain before the next service is due. When the ignition comes on and for 5 seconds the display shows:



5 seconds after the ignition is switched on, the total distance recorder resumes normal operation and the screen shows the total or trip distances.



The distance remaining before the next service is less than 1 000 km (600 miles).

Example: 900 km (560 miles) remain before the next service is due.

When switching on the ignition and for 5 seconds, the screen shows:



5 seconds after the ignition is switched on, the total distance recorder resumes normal operation and the symbol remains on.

This indicates that a service should be carried out shortly. The screen shows the total or trip distances.

The service is overdue.

Each time the ignition is switched on and for 5 seconds, the symbol and the excess distance flash.

Example: the service is overdue by 300 km (186 miles). The service should be carried out very shortly.


When the ignition is switched on and for 5 seconds, the display shows:



5 seconds after the ignition is switched on, the total distance recorder resumes normal operation and the symbol remains on. The screen shows the total or trip distances.

Note: the spanner comes on if the two-year interval has been exceeded.

Resetting the service indicator

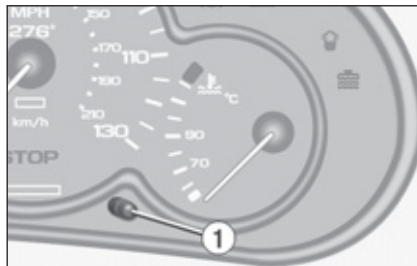

Your PEUGEOT dealer carries out this operation after each service.

The reset procedure is as follows:

- Switch off the ignition.
- Press and hold button 1.
- Switch on the ignition.

The display begins a 10 second count-down.

- Keep button 1 pressed for 10 seconds.

The display shows [=0] and the spanner disappears.

Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for approximately 10 seconds, after the service information.

Oil level too high



Flashing of the six squares and the display of "max" indicate that the oil level is too high, which could damage the engine.

If the excess oil is confirmed by a check using the dipstick, contact a PEUGEOT dealer without delay.

Oil level too low



Flashing of the six bars and the display of "min" indicate that the oil level is too low, which could damage the engine.

If the lack of oil is confirmed by a check using the dipstick, it is essential that the level is topped up.

Oil level indicator fault



Flashing of the six bars indicates a malfunction of the oil level indicator.

There is a risk of damage to the engine.

Consult a PEUGEOT dealer.

The level read on the dipstick or on the indicator will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

Total distance recorder



Briefly pressing button **1** alternates between the total and trip distance displays.

To reset the trip recorder to zero, when it is displayed press button **1** until zeros appear.

LIGHTING RHEOSTAT



With the lights on, press the button to vary the intensity of the lighting of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness.

As soon as the lighting is of the required brightness, release the button.

CLOCK



Button **1**: hour adjustment

Button **2**: minute adjustment

Press and hold the button for rapid advance.

DISPLAY A

This displays the following information:

- the time,
- the date,
- the audio system displays,
- a door check (e.g.: "left front door open"),
- warning messages (e.g. "remote control battery flat") or information messages (e.g. "economy mode active"), displayed temporarily.

Adjusting the parameters display A


Press and hold button **A** for two seconds to access the settings; the data flashes, indicating it is ready to be modified.

Then, each press of button **A** scrolls through the various data in the following order:

- language of information displayed,
- hours (12 then 24 hour mode),
- minutes,
- year,
- month,
- day.

Pressing button **B** alters the value of the parameter selected. Press and hold for rapid advance (return to start after the last possible value).

After 7 seconds with no action, the standard display returns; the modified data is now recorded.

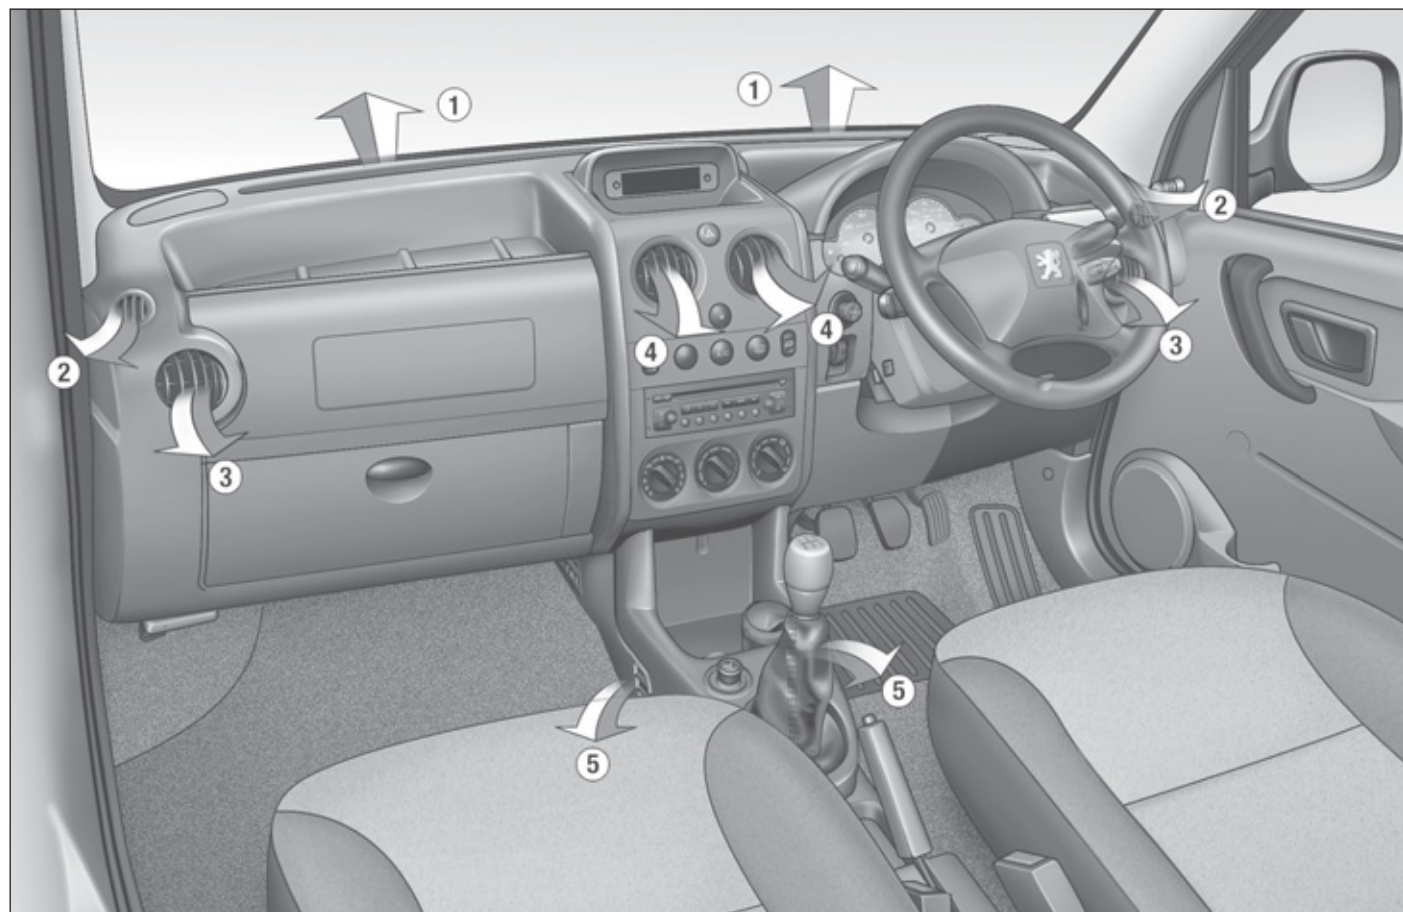

VENTILATION

1. Windscreen de-icing or demisting vents.
2. Front window de-icing or demisting vents.
3. Side vents.
4. Centre vents.
5. Air outlets to front footwells.

Advice on operation

Select the air distribution most suited to your requirements and the climatic conditions.

Gradually adjust the temperature setting for your comfort.

Position the air control in the "Outside Air" position.

For perfectly even air distribution, take care not to obstruct the exterior air intake grille and the vents. Check that the passenger compartment filter is in good condition.

When the engine is cold, to prevent too great a distribution of cold air, the ventilation will increase to its optimum level gradually.

In order to be effective, the air conditioning (**A/C** button), should only be used with the windows closed.

If the interior temperature remains very high following a prolonged period parked in the sun, do not hesitate to ventilate the passenger compartment for a few minutes.

The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in perfect working order.

The water created by the air conditioning condensation is discharged via an opening provided for this purpose. Therefore, a puddle of water may form underneath the vehicle when stationary.

If the system does not produce cold air, do not use it and contact a PEUGEOT dealer.





De-icing the rear windows and mirrors

With the engine running, pressing the control de-ices the rear windows and mirrors.

It switches off automatically after approximately twelve minutes.

Pressing the control again switches the de-icing system on again for twelve minutes.

It is possible to switch off the de-icing by pressing the control before the twelve minutes have elapsed.

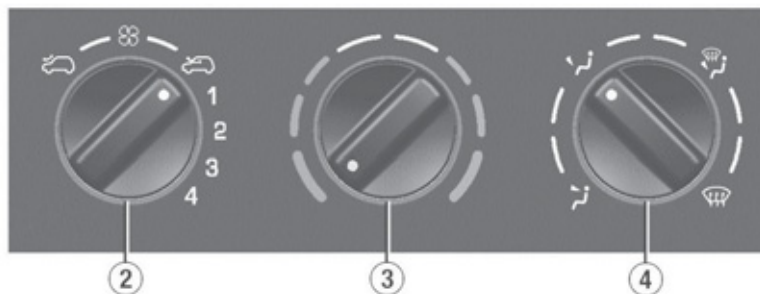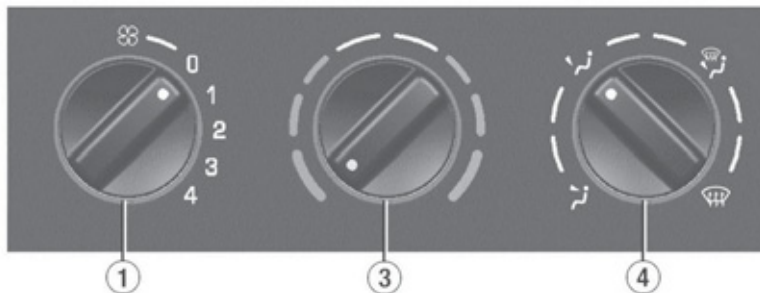

HEATING

1. Air flow adjustment



Turn the control from position **1** to position **4** to obtain an air flow sufficient to ensure your comfort.

2. Air flow adjustment and air intake control



Turn the control from position **1** to position **4** to obtain an air flow sufficient to ensure your comfort.



Intake of exterior air.

This is the normal operating position.



Passenger compartment isolation.

This position prevents exterior odours and smoke entering the passenger compartment.

As soon as possible, position the control in the exterior air intake position to prevent the formation of mist on the windows.

3. Temperature adjustment

To be adjusted to your requirements.
From blue (exterior temperature) to red (hot).



Windscreen, side windows and footwells.



Footwells.

These settings are recommended for cold climates.

4. Air distribution adjustment



Windscreen and side windows (de-icing/demisting).

To quickly demist or defrost the windscreen and side windows:

- position the air intake control in the "Exterior Air Intake" position,
- turn the temperature and air flow controls to maximum,
- close the centre vents.



Centre and side vents.

This setting is recommended for high temperatures.




AIR CONDITIONING

1. Air conditioning control

The air conditioning is designed to operate in all seasons. In summer, it enables the temperature to be lowered and in winter, above 0 °C, it increases the effectiveness of the demisting.



Press the switch to activate the air conditioning. The indicator lamp comes on.

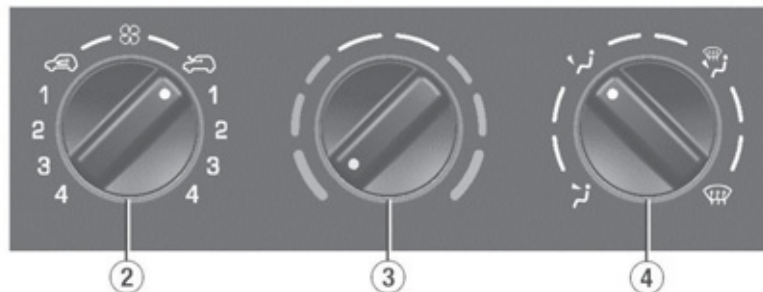

The air conditioning does not operate while the air flow adjustment control is in the minimum position.

Note: to optimise the operation of the air conditioning, leave the vents open.

2. Air flow adjustment and air intake control



Turn the control from position 1 to position 4 to obtain an air flow sufficient to ensure your comfort.



Intake of exterior air.

This is the normal operating position.



Recirculation of interior air.

This position prevents exterior odours and smoke entering the passenger compartment.

Used simultaneously with the air conditioning, recirculation enables both heating and cooling performance to be improved.

Used without the air conditioning, recirculation may result in the formation of mist on the windows.

As soon as possible, position the control in the exterior air intake position.

3. Temperature adjustment

To be adjusted to your requirements. From blue (cold when the air conditioning is on) to red (hot).

4. Air distribution adjustment



Windscreen and side windows (de-icing/demisting).

To quickly de-ice or demist the windscreen and side windows:

- turn the temperature and air flow controls to maximum,
- close the centre vents,
- position the air intake control in the "Outside Air" position,
- start the air conditioning.



Windscreen, side windows and footwells.



Footwells.

These settings are recommended for cold climates.



Centre and side vents.

This setting is recommended for high temperatures.



FRONT SEATS

1. Head restraint height adjustment

To raise or lower the restraint, slide it.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove the head restraint, place it in the top position, press the tabs and pull it upwards.

To put it back in position, locate the stems of the restraint in the holes, taking care to keep them in line with the seat back.



Never drive with the head restraints removed; they must be in place and correctly adjusted.

2. Armrests

These can be folded back.

3. Seat back angle adjustment



A. Turn the knob.



B. Pull the lever (version with one sliding side door only).

4. Forwards-backwards adjustment

Lift the control and slide the seat forwards or backwards.

5. Heated seats switch

Press the switch. The temperature is controlled automatically.

Pressing the switch again stops operation.

Note: the command for activation of heating of the seat(s) remains memorised for two minutes after the ignition has been switched off.




6. Access to rear seats (version with one sliding side door only)

Lift the control to fold the seat back and move the seat forwards.

On repositioning, the seat returns to its initial position (driver's side).



No person or object must prevent the seat from returning to its initial position; return to this position is necessary for the seat to lock in place.

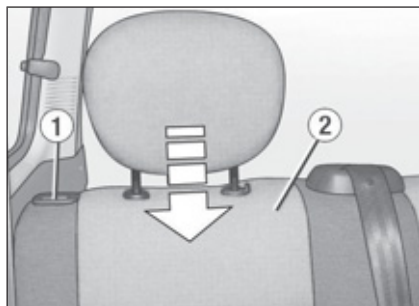

REAR BENCH SEAT (4/5 SEAT VERSIONS)

To fold the rear bench seat:

- lower the head restraint,
- press control **1** to unlock the seat back **2**,



- fold the seat back **2** onto the seat,
- place the seat in the "folded" position.




When repositioning:

- tilt the folded seat rearwards,
- lift the seat back,
- check that the seat is locked correctly.

Take care not to trap the seat belts.

On the 4-seat version, each rear seat has a fixed rear head restraint and a seat belt.

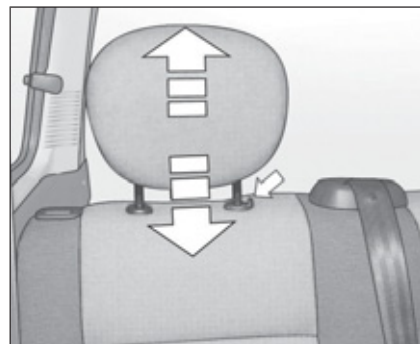

Head restraint

This is of the "comma-shape" type.

High position: press the two tabs at the same time, lift the head restraint and raise it.

Low position: push the two tabs at the same time and press the top to lower the head restraint.

To remove the head restraint: place it in the high position, lift it then remove it.

Store it inside the vehicle, securing it firmly.

To install the head restraint: engage the rods of the head restraint in the holes keeping it in line with the seat back.

GENERAL POINTS ON SEAT BELTS

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:


- **all children under the age of 12 or less than one metre fifty tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*.
- **a child weighing less than 9 kg must travel in the "rearwards-facing" position in the front.**

* The rules for carrying children are specific to each country. Refer to the current legislation in your country.

CHILD SEAT AT THE FRONT

"Rearwards-facing"

When a "rearwards-facing" child seat is installed on the **front passenger seat**, you must deactivate the passenger's airbag*. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**


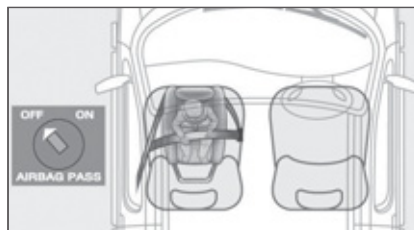


The procedures for the use of child seats and deactivation of the passenger's airbag are common to the entire PEUGEOT range.

In the absence of passenger airbag deactivation, it is strictly forbidden to install a child seat in the "forwards facing" position on the front passenger seat.

"Forwards-facing"

When a "forwards-facing" child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the intermediate longitudinal position with the seat back upright and leave the passenger's airbag activated.

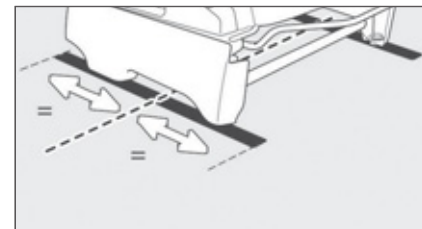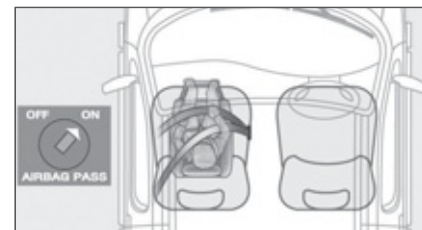

Intermediate longitudinal position

38 - SEATS



Passenger airbag OFF



Refer to the advice given on the label present on both sides of the passenger's sun visor.



To assure the safety of your child, you must deactivate the passenger's front airbag when you install a child seat in the rearwards facing position on the front passenger's seat.

Otherwise, there is a risk that the child could be seriously injured or killed if the airbag were deployed.

CHILD SEATS RECOMMENDED BY PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**:

Group 0+: from birth to 13 kg		Groups 1, 2 and 3: from 9 to 36 kg	
	L1 "RÖMER Baby-Safe Plus" Installed in the rearwards-facing position.		L2 "KIDDY Comfort Pro" The impact shield must be used for carrying young children (from 9 to 18 kg).
Groups 2 and 3: from 15 to 36 kg			
	L3 "RECARO Start"		L4 "KLIPPAN Optima" From the age of 6 years (approximately 22 kg), the booster is used on its own.
	L5 "RÖMER KIDFIX" Can be fitted to the vehicle's ISOFIX mountings. The child is restrained by the seat belt.		

LOCATIONS FOR CHILD SEATS ATTACHED WITH THE SEAT BELT

In accordance with European regulations, this table indicates the options for the installation of child seats secured using the seat belt and universally approved (a), in accordance with the weight of the child and the seat in the vehicle:

Seat			Weight of the child and indicative age			
			Below 13 kg (groups 0 (b) and 0+) Up to about 1 year	From 9 to 18 kg (group 1) From 1 to about 3 years	From 15 to 25 kg (group 2) From 3 to about 6 years	From 22 to 36 kg (group 3) From 6 to about 10 years
Front passenger (c)			U	U	U	U
	Row 2	Outer 	U	U	U	U
		Centre 	U	U	U	U
	Row 2	Right 	U	U	U	U
		Left 	U	U	U	U

(a) Universal child seat: child seat which can be installed in all vehicles using the seat belt.

(b) Group 0: from birth to 10 kg.


(c) Consult the legislation in force in your country before installing your child on this seat.

U: Seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rear facing" and/or "forward facing".




"ISOFIX" MOUNTINGS

Your vehicle has been approved in accordance with the ISOFIX **regulation**. The seats, represented below, are fitted with regulation ISOFIX mountings:

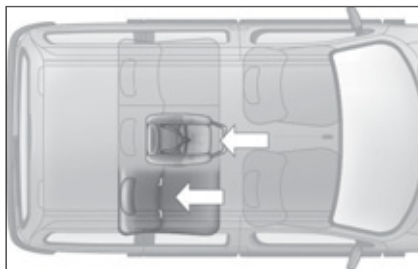

These are two rings located between the vehicle's seat back and the seat cushion.

This ISOFIX mounting system provides reliable, safe and fast fitting of the child seat in your vehicle.

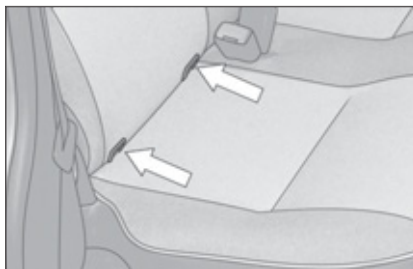

The **ISOFIX child seats** are fitted with two latches which are secured easily on these rings.



ISOFIX CHILD SEAT RECOMMENDED BY PEUGEOT AND APPROVED FOR YOUR VEHICLE

"ISOFIX KIDDY"	
Group 0+: from birth to 13 kg	Group 1: from 9 to 18 kg
	
Installed in the rear facing position, on the outer rear seat only.	Installed in the forwards facing position.
The body of this child seat must be in contact with the back of the vehicle's front seat.	It is imperative that the vehicle's front seat is adjusted to the intermediate longitudinal position.

This child seat can also be used on seats which are not fitted with ISOFIX mountings.

In this case, it is compulsory to secure the child seat to the vehicle's seat using the three-point seat belt.

Follow the instructions for fitting the child seat indicated in the seat manufacturer's installation guide.



ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger's airbag when a "rear facing" child seat is installed on the front seat. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:


- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.



To prevent accidental opening of the doors, use the "Child lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

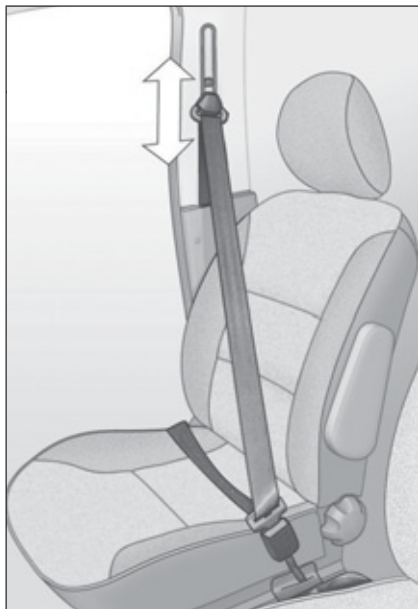

SEAT BELTS


Seat belt height adjustment

To lower or raise: slide the control downwards or upwards.

Locking the seat belts

Pull the strap, then insert the end into the buckle.

Check that the seat belt is fastened correctly by pulling the strap.

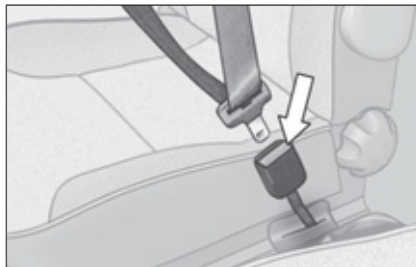

Unfastening the seat belts

Press the button on the buckle.

Front seat belts with pre-tensioner

Safety in the event of frontal impacts has been improved by the introduction of pre-tensioning seat belts for the front seats.

Depending on the seriousness of the impact, the pre-tensioning system instantly tightens the seat belts and pulls them against the bodies of the occupants.

The pre-tensioning seat belts are armed when the ignition is on.



Rear seat belts (4 seat version)

The rear seats are fitted with two three-point inertia reel seat belts.



Rear seat belts (5 seat version)

The rear seats are fitted with three three-point inertia reel seat belts (two-part rear seat, 1/3 - 2/3).



The driver must ensure that the passengers use the seat belts correctly and that they are all properly restrained before setting off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not invert the seat belt buckles as they will not fulfil their role fully.

If the seats have armrests*, the lap part of the seat belt must always pass under the armrest.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stored automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis.

The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, on emergency braking or if the vehicle rolls over. You can release the device by pulling rapidly on the strap and releasing it.

In order to be effective, a seat belt:

- must be tightened as close to the body as possible,
- must restrain one adult only,
- must not bear any trace of cuts or fraying,
- must be pulled in front of you with a smooth movement, checking that it does not twist,
- must not be transformed or modified to avoid altering its performance.

In accordance with current safety regulations, all repairs and checks must be carried out by a PEUGEOT dealer who guarantees that the work is carried out correctly.

Have your seat belts checked regularly by a PEUGEOT dealer and particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.



After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and rolled up correctly.

Recommendations for children:

- use a suitable child seat if the passenger is less than 12 years old or shorter than one metre fifty,
- do not use the strap-guide* when a child seat is installed,
- never use the same seat belt to secure more than one person,
- never allow a child to travel on your lap.

Depending on the nature and seriousness of the impacts, the pre-tensioning device may be triggered before and independently of the airbags. Triggering of the pre-tensioners is accompanied by a slight emission of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer.

* According to model.

KEYS


The keys allow you to switch on the ignition and operate the passenger airbag disarming switch as well as to independently operate the locks on the doors and the fuel filler cap.

Central locking

From the front doors, the keys allow you to lock and unlock the doors and tailgate.

If one of the doors or the tailgate is open, the central locking does not work.

The remote control performs the same functions at a distance.

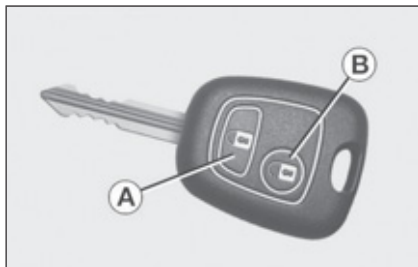

Remote control

Locking

Press button **A** to lock the vehicle.

This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Unlocking

Press button **B** to unlock the vehicle.


This is confirmed by rapid flashing of the direction indicators.

Note: if the vehicle is locked and unlocking is activated inadvertently, unless the doors are opened within 30 seconds, the vehicle will lock automatically.

Locating your vehicle

To locate your vehicle, if you have locked it, in a car park:

- ☞ press button **A**, the courtesy lamps come on and the direction indicators flash for a few seconds.

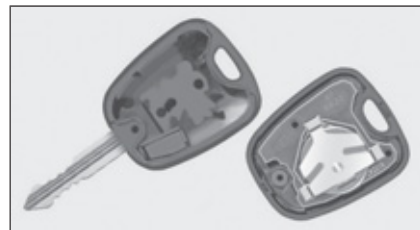

Changing the battery of the remote control

Battery reference: CR 2016/3 volt.

The information "battery flat" is given by an audible signal accompanied by the message **"Remote control battery flat"** on the screen.

To change the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, re-programme the remote control.

Reinitialising the remote control

- ☞ Switch off the ignition.
- ☞ Switch the ignition on again.
- ☞ Press button **A** immediately for a few seconds.
- ☞ Switch off the ignition and remove the remote control key from the ignition lock. The remote control is now working again.

ELECTRONIC ENGINE IMMOBILISER

This locks the engine control system as soon as the ignition has been switched off and therefore prevents starting of the vehicle by anyone who does not have the key.

The ignition key has an electronic chip which has a special code. When the ignition is switched on, the code must be recognised for the vehicle to start.

If the system does not function correctly, the central locking button indicator light, situated in the centre of the fascia, flashes rapidly when the ignition is switched on (2nd notch), accompanied by an audible signal and a message on the display.

In this case your vehicle will not start. Contact a PEUGEOT dealer as soon as possible.

Key in ignition

A buzzer sounds on opening the driver's door, if the key has been left in the ignition.



Make a careful note of the number of each key. This number is coded on the label attached to the key.

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off, except for reprogramming.

Do not operate the deadlocking function if there is anyone inside the vehicle.

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

As a safety precaution (with children on board), remove the key from the ignition when you leave the vehicle, even for a short time.

Do not repeatedly press the buttons of your remote control out of range of your vehicle.

You run the risk of stopping it from working and the remote control would have to be reprogrammed.

When purchasing a second-hand vehicle, have the key codes memorised by a PEUGEOT dealer, to ensure that the keys in your possession are the only ones which can start the vehicle.


Do not make any modifications to the electronic engine immobiliser system.

If the keys are lost

Visit a PEUGEOT dealer with the vehicle's V5 registration certificate and your personal identification documents.

The PEUGEOT network will be able to retrieve the key code and the transponder code to order a replacement key.

A heavy object (key fob...), attached to the key and weighing down on its shaft in the ignition switch, could cause a malfunction.

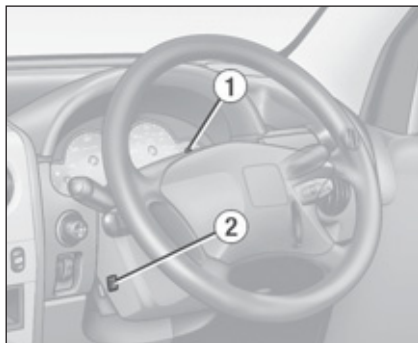

THE ALARM SYSTEM*

The alarm offers two types of protection:

- **exterior protection:** the alarm sounds if a **door, the boot or the bonnet is opened;**
- **interior protection:** the alarm sounds if there is a variation in the **volume inside the vehicle (breaking of a window or movement inside the vehicle).**

Setting the alarm

Switch the ignition off and get out of the vehicle.

Activate the alarm within five minutes following your exit from the vehicle, by locking using the remote control key (the red indicator lamp in the switch **1**, which can be seen from the outside, flashes once a second).

When the alarm is triggered, the siren sounds and the direction indicators flash for thirty seconds.

After it has been triggered, the alarm becomes operational again.

Note: if you wish to lock your vehicle without setting the alarm, lock it using the key in the door lock.

Warning

If, on setting the alarm, a door, the boot or the bonnet are not closed correctly, the siren sounds for a moment.

Close the vehicle correctly to set the alarm.

If the interior protection alarm is triggered ten times in succession, it is disarmed automatically. It must be set again in order for it to operate correctly.

Disarming the alarm

Unlock the vehicle using the remote control key (the red indicator lam in the switch **1** goes off).

Note: if the warning light flashes, it is a sign that the alarm has been triggered in your absence.

To stop it, switch on the ignition.

Note: when the alarm is set, but the remote control no longer works:

- ☞ unlock the doors using the key and open the door; the alarm is triggered;
- ☞ switch the ignition on within ten seconds; the alarm is disarmed.

To set the alarm with exterior protection only.

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you need to select exterior protection only:

- Switch off the ignition.
- Press the button **2** until the lamp **1** comes on continuously.
- Get out of the vehicle.
- Press the locking button of the remote control.
- The doors lock.
- The red lamp in the switch flashes once a second.

Operating fault

When the ignition is switched on, fixed illumination of the red indicator lamp, located in the centre of the dashboard, indicates an anomaly with the siren.

Contact a PEUGEOT dealer to have the system checked.



Do not make any modifications to the alarm system, this could cause malfunctions.

* According to country.

FRONT DOORS AND SLIDING SIDE DOORS

Opening the doors from outside



Front doors



Side doors

Opening the doors from inside



Front doors

The driver's door opening control permits complete unlocking of the vehicle.

Locking Unlocking from the inside


Front doors

To lock, lower button **A**.

The closing control of one of the front doors permits complete locking of the vehicle.

To unlock and open, lift button **A** and pull the handle towards you.

The driver's door opening control permits complete unlocking of the vehicle.

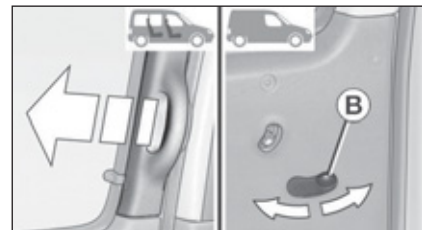

Side doors

Sliding side doors



The side door opening/closing control only controls the door concerned.

To close, push the control **B** forwards and slide the door.

To open, pull the control **B** rearwards and slide the door.




From the inside, the sliding side door is opened and closed using the handle.

A point of resistance at the end of the opening travel secures the door in the open position.



If the fuel tank cap is removed, the right-hand side door cannot be opened.

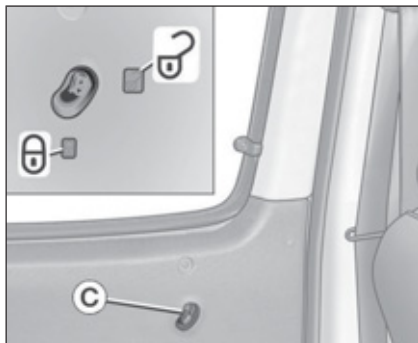

Locking from the inside

Lower or raise control **C** to lock or unlock from the inside.



Locking from the inside

Pressing control **D** operates the central locking, when the doors are closed.

Unlocking from the inside

Press control **D**.

It is **still** possible to open the doors from the inside.

Notes:

- doors locked and ignition off: the indicator light flashes,
- doors locked and ignition on: the indicator light remains on.

Automatic central locking

Your vehicle can lock automatically while driving (speed greater than 6mph (10 km/h)). You can activate or deactivate this function.

Activation


Press and hold control **D**.

Activation of the function is accompanied by an audible signal and a message on the display.

Deactivation

Press and hold control **D**.


Deactivation of the function is accompanied by an audible signal.

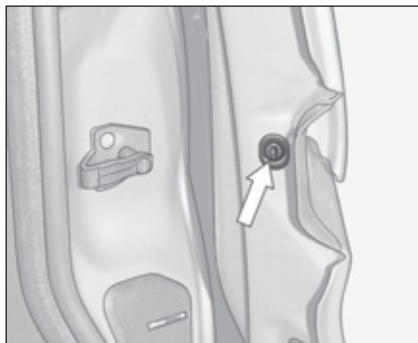

Side door child lock

This prevents opening of the side door from the inside.



Turn the control a quarter turn using the ignition key.

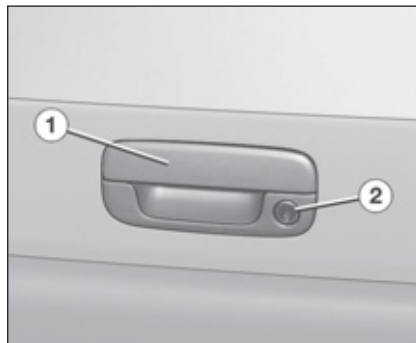

LOCKING/UNLOCKING THE TAILGATE

To open the tailgate, operate the handle **1** and lift it.

You can unlock the tailgate by inserting the key in the lock **2**.

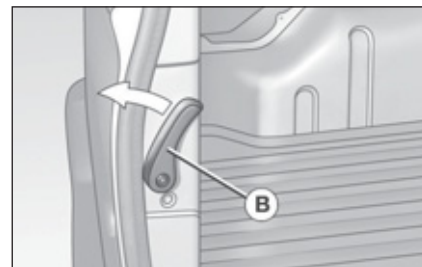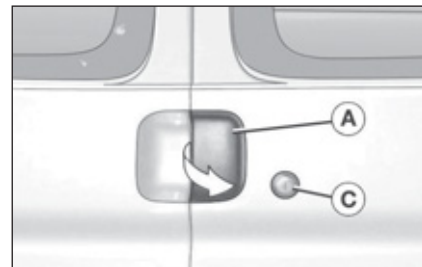

REAR DOORS

Opening the doors from outside

To open, pull the rear right door handle **A** towards you and open the rear left door by pulling the lever **B** on the inside.

You can unlock the rear doors by inserting the key in the lock **C**.


52 - ACCESS and STARTING



Opening the doors from inside


The rear door opening controls only unlock these doors.

To open, lift lever **D**.

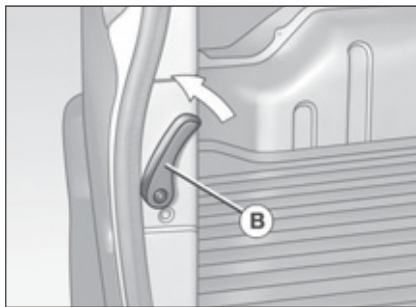

To open the other door, push lever **B**.

Note: when closing from the inside, close the right-hand door first ensuring that lever **B** is in the vertical position then close the left-hand door.

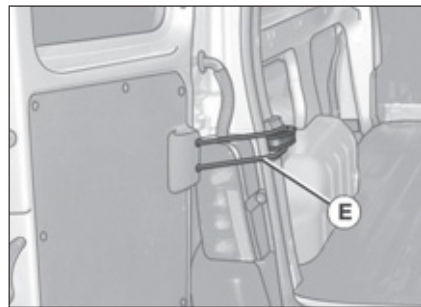

Opening the rear doors to 180°

To open the rear doors to 180°, release the check strap **E** towards you when the door is partially open.

When closing the door, the check strap hooks itself in place again automatically.



OPENING THE BONNET

Inside the vehicle: pull the lever on the left-hand side, under the dash-board.

Outside the vehicle: lift the safety catch and raise the bonnet.



BONNET STAY

Secure the stay to hold the bonnet open.

Before closing the bonnet, return the stay to its housing.

To close

Lower the bonnet and release it at the end of its travel.

Check that the bonnet has latched correctly.



When the engine is hot, take care when handling the safety catch and the bonnet stay (risk of burns).



FILLING WITH FUEL

Low fuel level



When the minimum fuel level in the tank is reached, this warning light comes on.

You have enough fuel remaining to drive for approximately 30 miles (50 km).

The engine must be switched off when filling with fuel.

- ☞ Insert the key then turn it to the left.
- ☞ Remove the cap.

A label reminds you which type of fuel to use.

When you fill your tank, do not continue after the third cut-off of the pump. This could cause your vehicle to malfunction.


The capacity of the tank is approximately 55 litres for petrol engines and 60 litres for Diesel engines.

- ☞ After filling the tank, lock the cap.



When the cap is removed, the right-hand sliding side door cannot be opened.

The key cannot be removed from the lock until the cap has been replaced on the fuel tank.

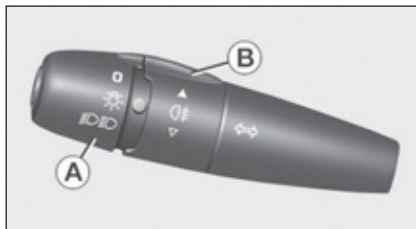

LIGHTS STALK

Front and rear lights

Selection is by turning ring **A**.



Lights off



Side lights



Dipped/main beam headlights

Dipped/Main beam change

Pull the stalk towards you.

Note: with the ignition off, when the driver's door is opened, a buzzer sounds if you have left your lights on.

Front fog lamps and rear fog lamp

Rotate the ring forwards to switch on and backwards to switch off. The status is confirmed by the indicator light on the instrument panel.



Vehicles fitted with a rear fog lamp only (ring B)

Rotate the ring forwards.

This only operates with the dipped/main beam headlights.



Vehicles fitted with front fog lamps and a rear fog lamp (ring B)

Front fog lamps (first rotation of the ring forwards).

Front and rear fog lamps (2nd rotation of the ring forwards).

Note: to switch off the rear fog lamp and the front fog lamps, turn the ring backwards twice in succession.

"Follow-me-home" lighting

In poor light, or at night, if you leave your vehicle, the side lights and dipped headlights may remain on for approximately one minute.

To activate this function:

- place the key in the **STOP** position,
- place the lights stalk in position **0**,
- flash the headlights,
- exit the vehicle and lock it.

Direction indicators (flashers)



Left: downwards.

Right: upwards.




In good or rainy weather, both day and night, the front fog lamps and the rear fog lamp are dazzling and are prohibited.

Do not forget to switch them off when they are no longer needed.

Daytime running lamps

Your vehicle may be fitted with daytime running lamps. The dipped beam headlights come on when the vehicle is started.

WINDSCREEN WIPER STALK

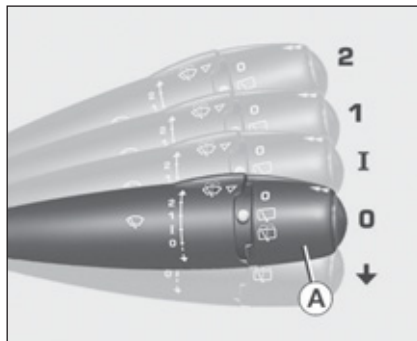

Windscreen wipers

- 2** Fast wipe (heavy rain).
- 1** Normal wipe (moderate rain).
- I** Intermittent wipe.
- 0** Off.
- ↓ Single wipe (press downwards).

Operation

In position **1** or **2**, when the vehicle stops, the windscreen wiper changes to a lower wiping speed, then resumes its initial speed when the vehicle starts again.

In the Intermittent position, the wiping speed is proportional to the speed of the vehicle.

It is necessary to reactivate wiping if the ignition has been off for over one minute:

- rotate the stalk to any position,
- then move it to the desired position.

Windscreen and headlamp wash (according to country)

Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.

The headlamp wash is also activated, **if the headlamps are on.**



Rear windscreen wiper

Turn ring **A** to the first notch. The wiping speed is inversely proportional to the speed of the vehicle.

Automatic rear windscreen wiping

- ☞ place the front wipers stalk in a position other than **0**,
- ☞ engage reverse gear,
- ☞ the rear wiper operates with intermittent wiping.

Note: if a bicycle carrier is used, contact a PEUGEOT dealer to have this function disarmed.



Rear windscreen wash

Turn ring **A** past the first notch: the windscreen wash then the windscreen wiper operate for a fixed time.



In winter, in the event of a considerable amount of snow or ice, switch on the rear window demister. Once deicing is complete, remove the snow or ice which has accumulated on the rear wiper blade. You can now operate the rear windscreen wiper.



ELECTRIC WINDOWS

1. **Driver's electric window switch**
2. **Passenger electric window switch**

You have two options:

- **Manual operation:**
Press switch 1. The window stops as soon as the switch is released.
- **Automatic operation (driver):**
Press and hold switch 1. One touch completely opens or closes the window.

Automatic closing only operates when the engine is running.




Always remove the ignition key when leaving the vehicle, even for a short time.

If an obstacle is encountered while the electric windows are in use, you must reverse the movement of the window. To do this, press the switch concerned.

When the driver operates the passenger electric window switches, he must ensure that no one is preventing correct closing of the windows.


The driver must ensure that passengers use the electric windows correctly.

Be aware of children when operating the windows.

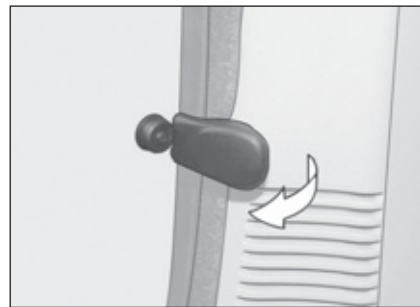

REAR WINDOWS

To partially open the rear windows, tilt the lever and push it fully to lock the windows in the open position.

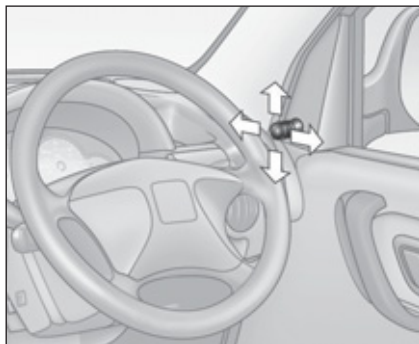


THE EXTERIOR MIRRORS

Manual mirrors


Move the lever in all four directions to adjust.

When the vehicle is parked, the exterior mirrors can be folded back manually.

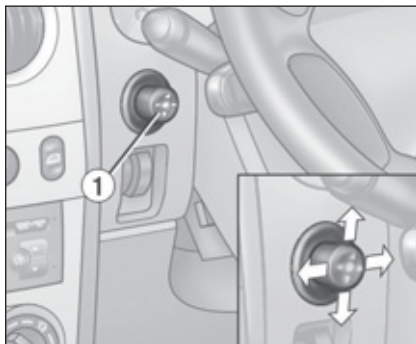

Passenger side exterior mirror electric control

From the driver's seat, move the control 1 in all four directions to adjust.



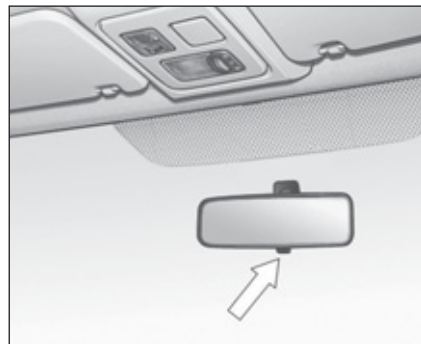


THE MANUAL INTERIOR MIRROR

The interior mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.

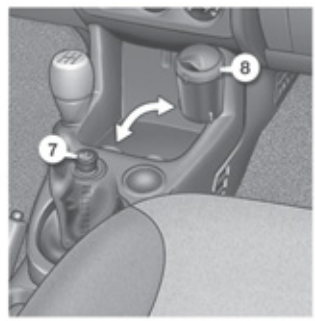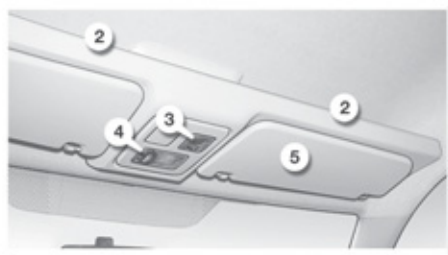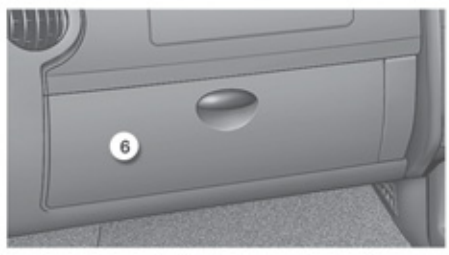

FRONT FITTINGS

1. Storage in the doors

- A. Bottle holder.
- B. Can holder.
- C. Storage compartment.

2. Overhead storage

Maximum load: **5 kg**.

3. Map reading lamps

Turn the dial to the right or to the left to switch them on.

Place the dial in the centre to switch them off.



4. Courtesy lamps



Permanently off.



On entering the vehicle:

- they come on when the vehicle is unlocked or when a door is opened,
- they go off after approximately 30 seconds with the doors closed, or when the ignition is switched on.

On leaving the vehicle:

- they come on when the key is removed from the ignition (timing of approximately 30 seconds) or when a door is opened,
- they go off after approximately 30 seconds with all of the doors closed, or immediately when the vehicle is locked.

In this position, the courtesy light may flash while driving if a door is not closed correctly.

If a door is open, it will switch off automatically after approximately 10 minutes or when the ignition is switched on.



Permanently on when the key is in the accessories position or the ignition is on.

5. Sun visors

6. Glove box


7. Cigarette lighter

It permits the connection of a telephone charger, a baby's bottle warmer, ...

8. Removable ashtray

Pull the cover to open the ashtray.

To empty, after opening, remove it by pulling upwards.

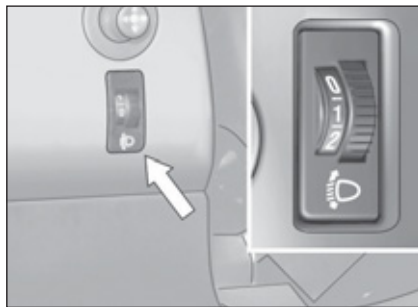

HEADLAMP ADJUSTMENT

Depending on the load in your vehicle, it is recommended that the headlamp beam is adjusted.




- 0** - With no load.
- 1** - With partial load.
- 2** - With average load.
- 3** - With maximum authorised load.



- 0** - 1 or 2 people in the front seats.
-- 3 people.
- 1** - 4 or 5 people.
- 2** - 4 or 5 people + maximum authorised load.
- 3** - Driver + maximum authorised load.


Initial setting is position 0.

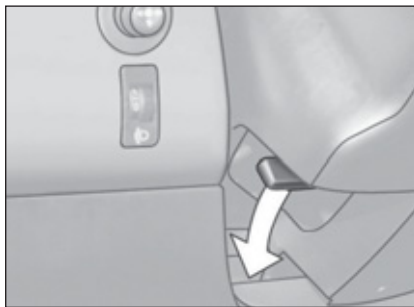

STEERING WHEEL ADJUSTMENT

When stationary, lower the handle to release the steering wheel adjustment mechanism.

Adjust it to the desired height, then lift the handle to lock the steering wheel adjustment mechanism.

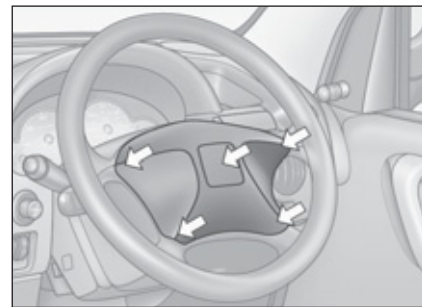

HORN



Press one of the spokes or the centre of the steering wheel.



HAZARD WARNING LIGHTS

Press the button, the direction indicators flash.

They can operate with the ignition off.



LASHING RINGS




Use the 6 lashing rings on the luggage compartment floor to secure your loads.

You can use suitable load retainers (half-height partitions, grille, etc.) supplied by the PEUGEOT network.



It is recommended that the load is immobilised by securing it firmly using the lashing rings on the floor.

62 - COMFORT AND SAFETY

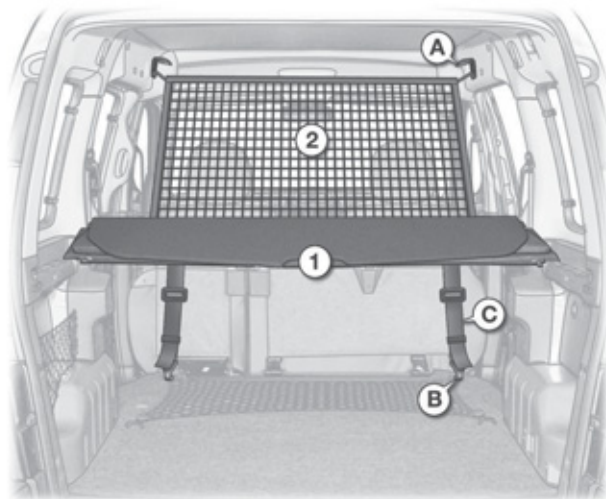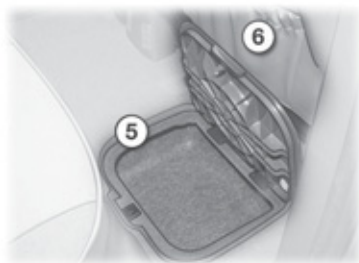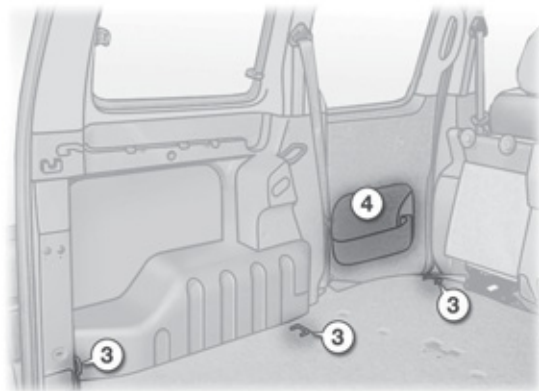



REAR FITTINGS

1. Load-space cover

To install it:

- position the front ends of the load space cover on its support and press gently to put it in place,
- unfold the load space cover fully,
- position the rear ends of the load space cover on its support and press gently to put it in place.

To remove it:

- unclip the rear ends,
- fold the load space cover fully,
- unclip the front ends and remove the load space cover.

To store it, fold it like an accordion.

Do not roll it.

2. High load retaining net

The high load retaining net can be fitted behind the front or rear seats.

Open the covers **A** of the corresponding upper fastenings.

Fit the ends of the metal bar in these fastenings.

Secure the two net strap hooks behind the front seats, with the rear seat folded, or in the stowing rings **B** on the floor.

The rings are located directly below the corresponding upper fastenings.


Pull the two straps **C** taut.

3. Stowing rings

4. Side door storage compartments

5. Containers between the front and rear seats

6. Seat back storage pockets

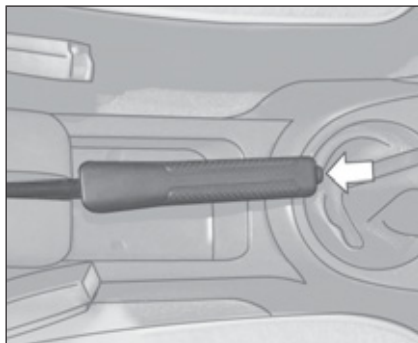

HANDBRAKE

Applying

When parking, pull the handbrake to immobilise your vehicle.

Releasing

Pull the handle and press the button to release the handbrake.



Illumination of this warning light and of the **STOP** warning light, accompanied by an audible signal (while the vehicle is moving), indicates that the handbrake is still applied or has not been released fully.

ANTI-LOCK BRAKING SYSTEM (ABS) AND THE ELECTRONIC BRAKE FORCE DISTRIBUTION (EBFD)

The ABS, in conjunction with the electronic brake force distribution, increases the stability and manoeuvrability of your vehicle on braking, in particular on poor or slippery road surfaces.

Note: when changing wheels (tyres and rims), make sure that these are approved.

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock.



When this warning light comes on, accompanied by a buzzer, it indicates that there is a malfunction of the ABS, which can cause a loss of control of the vehicle when braking.




When this warning light comes on, connected to the **STOP** and **ABS** warning lights, it indicates that there is a malfunction of the electronic brake force distribution, which can cause a loss of control of the vehicle when braking.

Stop immediately.

In both cases, consult a PEUGEOT dealer.

Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.

In emergency braking, press very firmly without releasing the pressure.

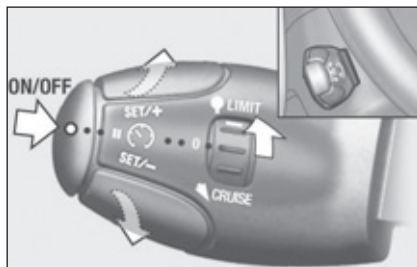

SPEED LIMITER*

The operating actions must be carried out when stationary, with the engine running, or with the vehicle moving.

The status of the function is displayed on the instrument panel in accordance with the following sequences:



Function selected, displaying of the "Speed Limiter" symbol.



Function deactivated, last programmed speed - OFF (example at 66 mph (107 km/h)).



Function activated (example at 66 mph (107 km/h)).



Vehicle speed above 66 mph (107 km/h), the programmed speed is displayed flashing.



Operating fault detected, OFF - the dashes flash.



Selecting the function

- Place the dial in the **LIMIT** position. The limiter is selected but is not yet active. The display indicates dashes or the last programmed speed.



Programming a speed

A speed can be programmed without activating the limiter but with the engine running.

- A brief or extended press of the **SET -** button decreases the speed.
- A brief or extended press of the **SET +** button increases the speed.



Activation/deactivation (off)

When you have programmed your speed, pressing this button once activates the limiter and the programmed speed is displayed, pressing the button again deactivates it (OFF).

* According to version.



Exceeding the programmed speed

Pressing the accelerator pedal in order to exceed the programmed speed will have no effect unless you press the pedal **firmly** beyond the **point of resistance**.

The limiter is deactivated temporarily and the programmed speed which is still displayed flashes.

To return to the limiter function, reduce your speed to the programmed speed or below.

Flashing of the speed

The speed flashes:

- following forcing of the accelerator point of resistance,
- when the limiter cannot prevent an increase in the vehicle speed due to the profile of the road or on a steep descent,
- in the event of sharp acceleration.



Switching the function off

- ☞ Place dial in position **0** or switch off the ignition to switch the system off. The last programmed speed remains in the memory.



In any event, the speed limiter cannot replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

The driver must always pay attention to the profile of the road, take care on sharp acceleration and remain in perfect control of his vehicle.

To prevent the mat from becoming trapped under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.




Operating fault

In the event of a limiter malfunction, a message is displayed on the multi-function display accompanied by an audible signal.

The programmed speed is cleared and the dashes flash for a few seconds.

Contact a PEUGEOT dealer to have the system checked.

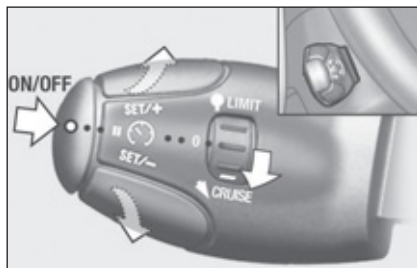

CRUISE CONTROL*

The cruise control maintains a constant vehicle speed programmed by the driver.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least fourth gear engaged.

If the vehicle is fitted with a speed limiter and cruise control, these functions cannot be activated at the same time.

The cruise control has a display on the instrument panel to indicate the programmed reference speed.

The status of the function is displayed on the instrument panel in accordance with the following sequences:



Function selected, displaying of the "Cruise Control" symbol.



Function deactivated, OFF (example at 66 mph (107 km/h)).



Function activated (example at 66 mph (107 km/h)).



Vehicle speed above (e.g. 73 mph (118 km/h)), the programmed speed is displayed flashing.



Operating fault detected, OFF - the dashes flash.



Selecting the function

- Place the switch in the **CRUISE** position. The cruise control is selected but is not yet active and no speed has been programmed.



First activation/programming a speed

- Reach the chosen speed by pressing the accelerator.
- Press the **SET -** or **SET +** button.

This programmes the reference speed and the vehicle will maintain this speed.



Temporary exceeding of the speed

It is possible to **accelerate** and drive momentarily at a speed greater than the programmed speed. The value programmed flashes.

When the accelerator pedal is released, the vehicle will return to the programmed speed.

* According to version.



Deactivation (off)

- ☞ Press this button or the brake or clutch pedal.



Reactivation

- ☞ Following deactivation of the cruise control, press this button.

Your vehicle will return to the last programmed speed.

Alternatively, you can repeat the "first activation" procedure.



Changing the programmed reference speed

When the speed is displayed:

- ☞ press **SET +** button to increase it.
- ☞ press the **SET -** button to decrease it.



Switching the function off

- ☞ Place the dial in position **0** or switch off the ignition to switch everything off.

Cancelling the programmed reference speed

When the vehicle becomes stationary, after switching off the ignition, the system no longer memorises a speed.



Operating fault

In the event of a cruise control malfunction, a message is displayed on the multifunction display accompanied by an audible signal.

The programmed speed is cleared and the dashes flash for a few seconds.

Contact a PEUGEOT dealer to have the system checked.



When changing the programmed reference speed by means of a maintained press, pay attention as the speed can increase or decrease rapidly.

Do not use the cruise control on slippery roads or in heavy traffic.

In the event of a steep slope, the cruise control cannot prevent the vehicle from exceeding the programmed speed.

In any event, the cruise control cannot replace the need to observe the speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.


It is advisable to leave your feet near the pedals.

To prevent the mat from becoming trapped under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.

AIRBAGS

The airbags have been designed to maximise the safety of the occupants in the event of serious collisions. They work in conjunction with the force-limiting seat belts. The electronic detectors register and analyse any abrupt deceleration of the vehicle in the impact detection zones (see diagram): if the triggering threshold is reached, the airbags inflate instantly and protect the occupants of the vehicle.

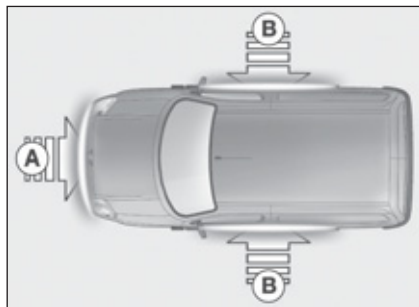

Impact detection zones

- A.** Front impact zone.
- B.** Side impact zone.


Immediately after the impact, the airbags deflate rapidly so that they do not hinder the visibility of the occupants nor their exit if necessary from the vehicle.

The airbags are not deployed in the case of minor impacts, rear impacts or in certain roll-over conditions. The seat belt is sufficient to ensure maximum protection in these situations. The seriousness of a collision depends on the nature of the obstacle and the speed of the vehicle at the moment of the collision.

Airbags only operate when the ignition is switched on.



Note: the gas escaping from the airbags can be a minor irritant.

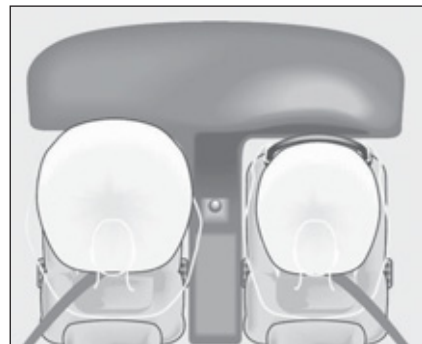

FRONT AIRBAGS

These are folded in the centre of the steering wheel for the driver and in the fascia for the front passenger. They are deployed simultaneously, except in cases where the passenger airbag is disarmed, in the event of a serious front impact applied in the impact zone **A** in the longitudinal centreline of the vehicle, on a horizontal plane and from the front of the vehicle towards the rear. The airbag inflates between the front occupant of the vehicle and the fascia to cushion his forward movement. The airbags therefore limit the risk of injury to the head and chest.

Front airbag malfunction



If this warning light comes on, accompanied by an audible signal, contact a PEUGEOT dealer to have the system checked. The airbags may no longer be triggered in the event of a serious impact.



Disarming the passenger airbag

To ensure the safety of your child, it is essential to disarm the passenger airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the airbag were to inflate.

 **With the ignition switched off,** insert the key into the passenger airbag disarming switch 1, turn it to the **"OFF"** position, then remove the key keeping the slot in this position.



The airbag warning light on the instrument panel is lit throughout the period of disarming.

In the **"OFF"** position, the passenger airbag will not be triggered in the event of an impact.

As soon as the child seat is removed, turn the airbag slot to the **"ON"** position to re-activate the airbag and thus ensure the safety of your passenger in the event of an impact.

Disarming check



This is confirmed by an indicator light, accompanied by a message on the display.

With the ignition on (2nd notch), illumination of this warning light indicates that the passenger airbag is disarmed (switch in the **"OFF"** position).



If the two airbag warning lights are lit continuously, do not install a rear-facing child seat. Consult a PEUGEOT dealer.

SIDE AIRBAGS*

The side airbags are incorporated into the front seat backs on the door side.

The triggering of these airbags requires a serious side impact applied in the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle, on a horizontal plane and from the outside of the vehicle towards the inside. The side airbag inflates between the front occupant of the vehicle and the door trim pad. It therefore limits the risk of injury to the chest.

Airbags malfunction



If this warning light comes on, accompanied by an audible signal, contact a PEUGEOT dealer to have the system checked. The airbags may no longer be triggered in the event of a serious impact.



For the front and lateral airbags to be fully effective, observe the following safety rules:

- Wear a correctly adjusted seat belt.
- Sit in a normal upright position.
- Do not leave anything between the occupants and the airbags (child, animal, object, ...).

This could hamper the operation of the airbags or injure the occupants.

- All work on the airbag systems is strictly prohibited unless it is carried out by trained staff of the PEUGEOT network.
- After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.


Front airbags

- Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.
- Passengers must not place their feet on the dashboard.
- Smoke as little as possible; deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.
- Never remove or pierce the steering wheel or hit it violently.

Lateral airbags*


- Only put approved covers on the front seats. Consult a PEUGEOT dealer.
- Do not fix or attach anything to the front seat backs. This could cause injury to the chest or arms when the lateral airbag inflates.
- Do not sit with the upper part of the body any nearer to the door than necessary.

* According to version.

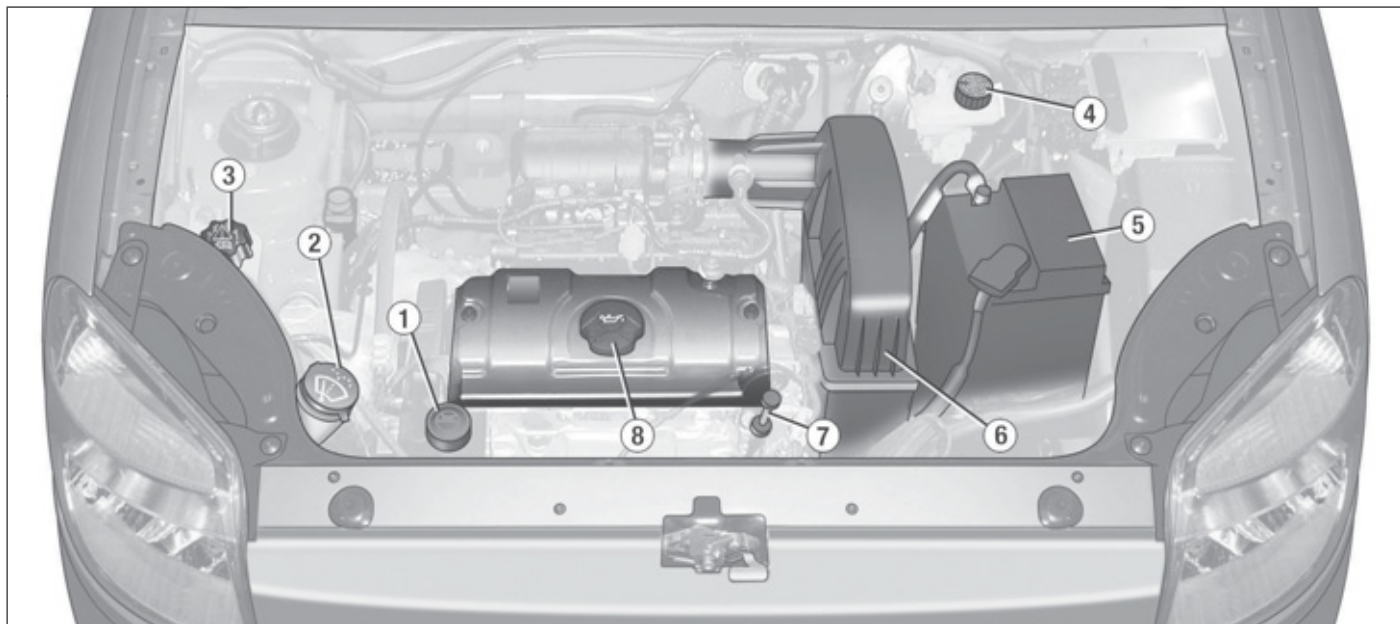


1.4 LITRE PETROL ENGINE

- | | | |
|--|---------------------------|--------------------------|
| 1. Power steering reservoir. | 4. Brake fluid reservoir. | 7. Dipstick. |
| 2. Windscreen and headlamp wash reservoir. | 5. Battery. | 8. Engine oil reservoir. |
| 3. Coolant reservoir. | 6. Air filter. | |

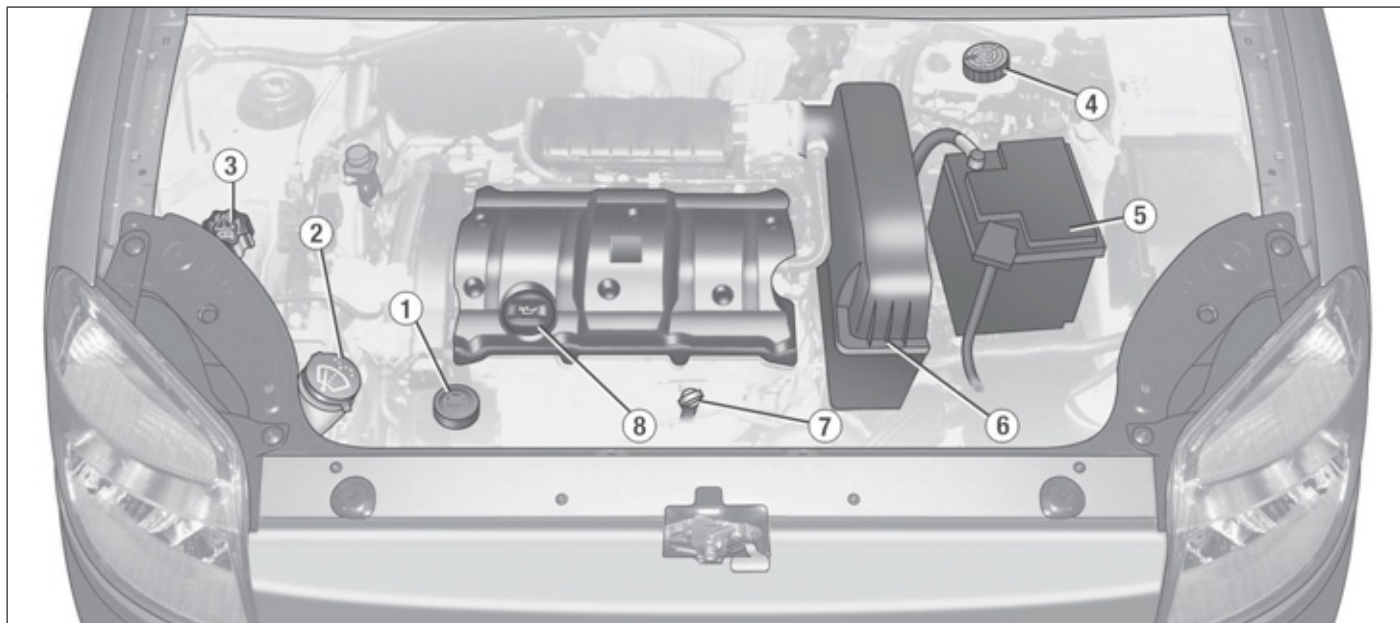


1.6 LITRE PETROL ENGINE

- | | | |
|--|---------------------------|--------------------------|
| 1. Power steering reservoir. | 4. Brake fluid reservoir. | 7. Dipstick. |
| 2. Windscreen and headlamp wash reservoir. | 5. Battery. | 8. Engine oil reservoir. |
| 3. Coolant reservoir. | 6. Air filter. | |

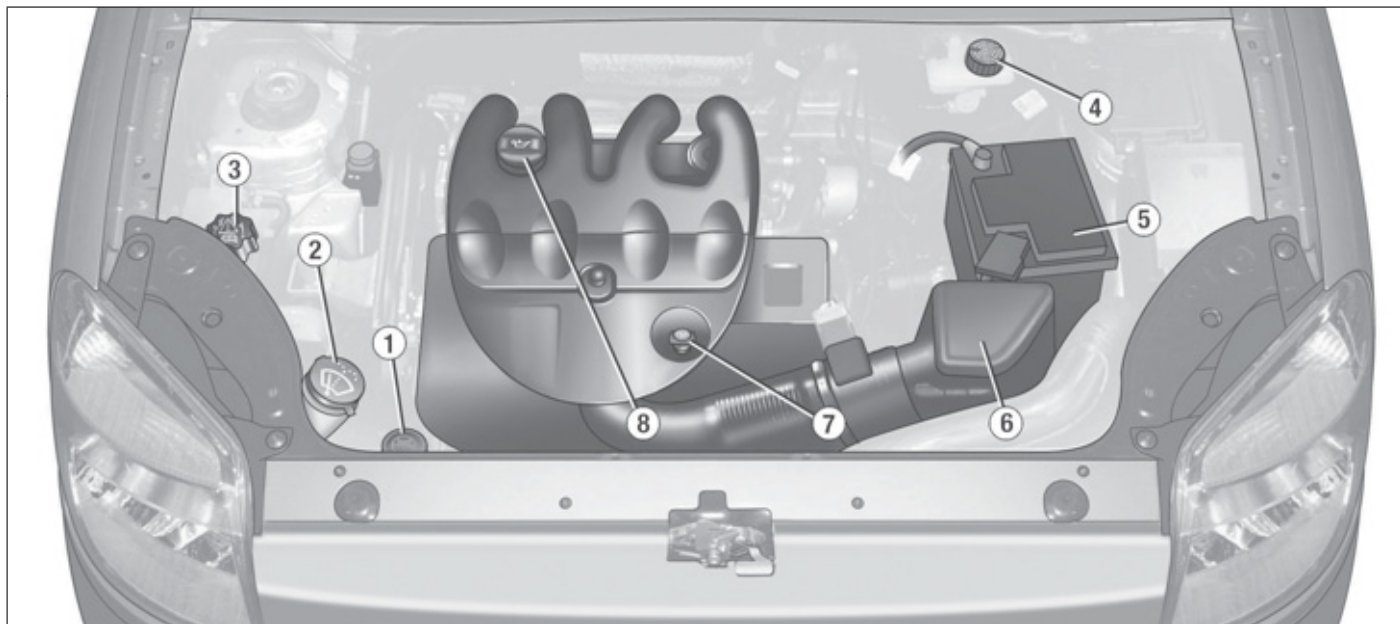

1.9 LITRE DIESEL ENGINE

- | | | |
|--|---------------------------|--------------------------|
| 1. Power steering reservoir. | 4. Brake fluid reservoir. | 7. Dipstick. |
| 2. Windscreen and headlamp wash reservoir. | 5. Battery. | 8. Engine oil reservoir. |
| 3. Coolant reservoir. | 6. Air filter. | |

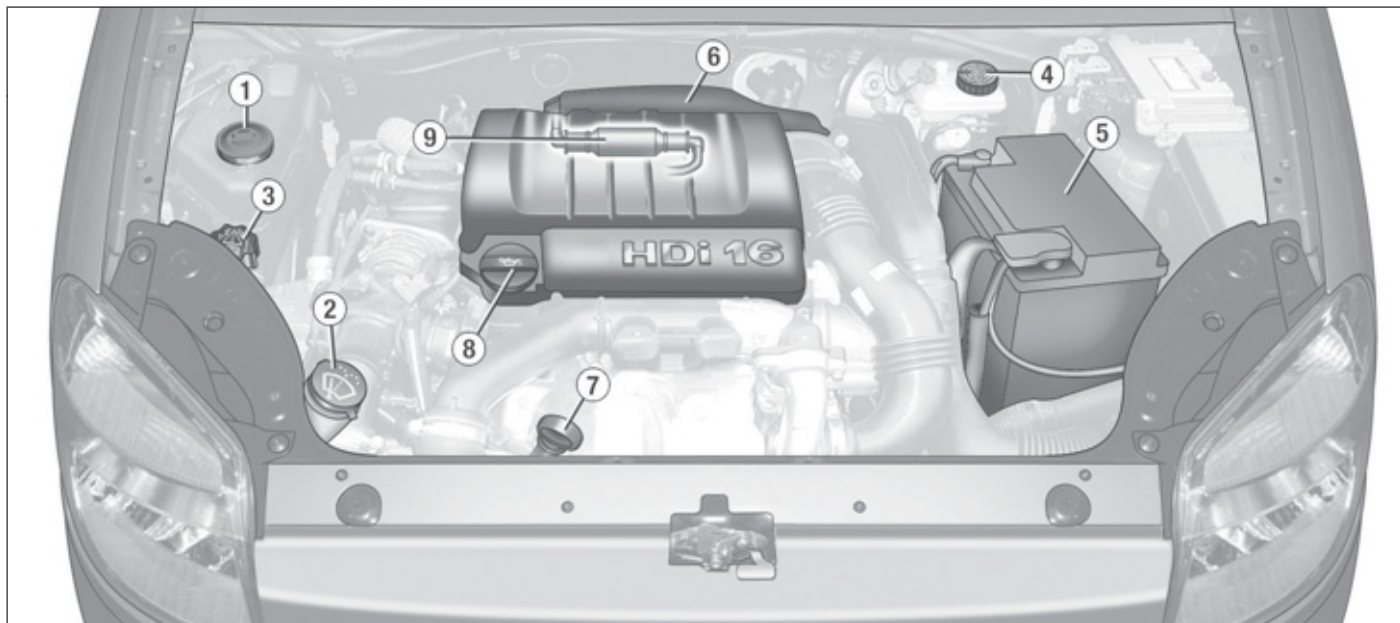

1.6 LITRE TURBO DIESEL HDI ENGINE

- | | | |
|--|---------------------------|--------------------------|
| 1. Power steering reservoir. | 4. Brake fluid reservoir. | 7. Dipstick. |
| 2. Windscreen/headlamp wash reservoir. | 5. Battery. | 8. Engine oil reservoir. |
| 3. Coolant reservoir. | 6. Air filter. | 9. Priming pump. |

PEUGEOT & TOTAL

Partners in performance and protection of the environment

Innovation at the service of performance

The TOTAL Research and Development teams develop lubricants for PEUGEOT which satisfy the requirements of the latest technical innovations incorporated in PEUGEOT vehicles.

This ensures that you obtain the best performance and the maximum engine life.

Reduced exhaust emissions

TOTAL lubricants are formulated to optimise the efficiency of engines and the protection of the emissions post-treatment systems. It is crucial to observe the servicing recommendations made by PEUGEOT to ensure correct operation.



PEUGEOT RECOMMENDS TOTAL



 
CHECKING LEVELS

Oil level

It is normal to top up the engine oil between services. PEUGEOT recommends that you check the oil level, and top up if necessary, every 3 000 miles (5 000 kilometres).

Check the level with the vehicle level, engine cold, using the oil level gauge on the instrument panel or the dipstick.

Dipstick



There are two marks on the dipstick:

A = maximum

Never fill past this mark.

B = minimum

To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.

Oil change

According to the information given in the servicing booklet.

Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.

Brake fluid level

The brake fluid must be changed according to the manufacturer's servicing schedule.

Use fluids recommended by the manufacturer, which fulfil DOT4 standards.

Cooling system

Use the fluid recommended by the manufacturer.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

Slacken the cap by two turns to release the pressure to prevent any risk of scalding. When the pressure has dropped, remove the cap and top up the level.

Note: the coolant does not need to be changed.

For vehicles equipped with a particle filter, the engine fan may operate after the ignition has been switched off, even when the engine is cold.

Power steering reservoir

☞ Open the reservoir, with the engine at ambient temperature. The level should always be above the MIN. mark and close to the MAX. mark.

Windscreen and headlamp wash level

For best quality cleaning and for your safety, we would advise that you use products recommended by PEUGEOT.

For optimum cleaning and to prevent freezing, this fluid must not be topped up or replaced with water.

Used products

Avoid products such as used oil and brake fluid coming into prolonged contact with the skin.

Do not dispose of used oil, brake fluid or coolant into drains or onto the ground. Empty used oil into the containers provided for this purpose in the PEUGEOT dealer network (France) or to an authorised waste disposal site.

CHECKS

Battery

At the start of winter, have your battery checked by a PEUGEOT dealer.

Air filter and passenger compartment filter

Have the filter elements replaced regularly. **If you drive in dusty conditions, change them twice as often.**

Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances.

It may be necessary to check the thickness of the pads, even between services.

Disc and drum wear status

For any information relating to checking the disc and drum wear status, contact a PEUGEOT dealer.

Handbrake

Where the handbrake travel is too great or there is a reduction in the performance of the system, the handbrake should be adjusted, even between services.

Have the system checked by a PEUGEOT dealer.

Oil filter

Change the filter regularly, in accordance with the servicing schedule.

Manual gearbox

This does not require an oil change. Check the level in accordance with the manufacturer's servicing schedule.

To check the main levels and certain components, in accordance with the manufacturer's servicing schedule, refer to the pages of the servicing booklet which correspond to your vehicle's engine.



Only use products recommended by PEUGEOT or products of equivalent quality and specifications.

To ensure best performance from components as important as the power steering and the braking system, PEUGEOT selects and offers quite specific products.

To prevent damage to the electrical units, avoid washing the engine.

RUNNING OUT OF FUEL (DIESEL)

If you should run out of fuel, it is necessary to re-prime the circuit:


- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual re-priming pump, under the bonnet under the protective cover, until fuel appears in the transparent pipe,
- operate the starter until the engine starts.

FUEL SUPPLY CUT-OFF (PETROL)

In a serious collision, a mechanism prevents fuel from reaching the engine.

To re-establish the fuel supply, press the switch on the corner of the front right-hand suspension assembly, under the bonnet.

CHANGING A WHEEL

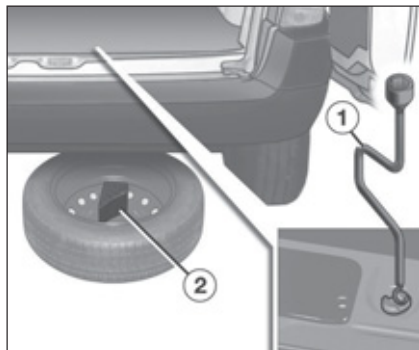

Access to the spare wheel and the jack

The wheel is located outside the vehicle, under the rear floor, supported by a metal carrier.




- Remove the jack and the wheelbrace **1**, secured behind the driver's seat.



- Remove the jack and the wheelbrace **1** secured in an interior housing above the rear right wheel.

- Using the wheelbrace **1**, slacken the spare wheel carrier retaining bolt, located on the inside near the closing system.
- Lift the carrier to release the hook rearwards, then lower it.
- Remove the chock **2** located in the spare wheel.

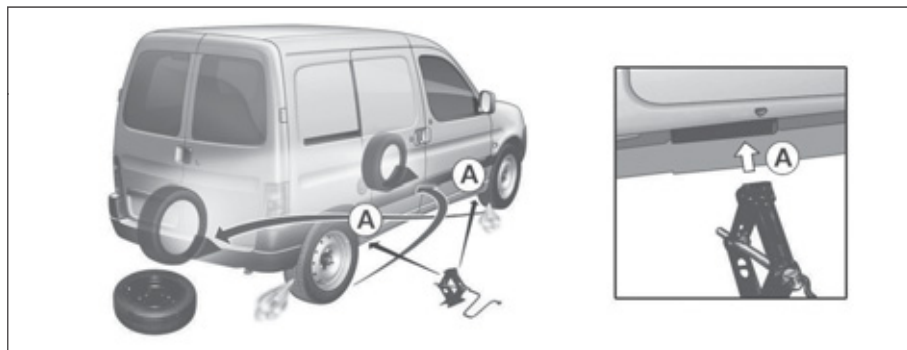


Parking the vehicle

- If possible, park the vehicle on level, stable and non-slippery ground.
- Apply the handbrake, switch off the ignition and engage first or reverse gear.

Removing a wheel

- Chock the rear of the wheel diagonally opposite the wheel to be changed, using the chock **2**.
- Remove the wheel trim using the wheelbrace **1**, by pulling at the valve passage hole.
- Slacken the wheel bolts.
- Place the jack under the locating point on the sub-frame **A** that is closest to the wheel to be changed. Ensure that the entire surface of the jack base plate is in contact with the ground.
- Extend the jack, completely unscrew the bolts and remove the wheel.

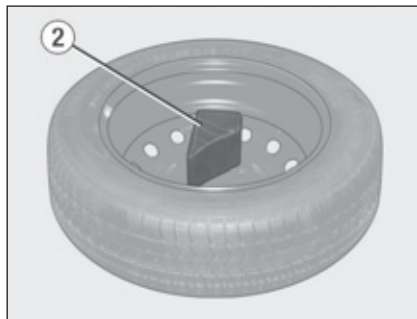

Refitting the wheel

- After positioning the wheel, lightly pre-tighten the bolts using the wheelbrace.
- Compress the jack and release it.
- Fully tighten the bolts using the wheelbrace.
- Replace the trim, starting at the valve passage hole, and press it on using the palm of the hand.



Replacing the wheel in the carrier

- Replace the chock 2 in the wheel.
- Replace the wheel in the carrier.
- Lift the wheel then the carrier and reposition the hook.
- Do not forget to fully tighten the spare wheel carrier retaining bolt.
- Stow the wheelbrace 1 and the jack.



For your safety, always change a wheel:


- on level, stable and non slippery ground,
- with the handbrake applied,
- with first or reverse gear engaged,
- with the vehicle chocked,
- making absolutely sure that the occupants get out of the vehicle and wait in a safe location.

Never go underneath the vehicle when it is raised using the jack only.

The jack and the tool kit are specific to your vehicle. Do not use them for other purposes.

After changing the wheel

- Have the tightening of the bolts and the pressure of the spare tyre checked as soon as possible by a PEUGEOT dealer.
- Have the punctured tyre repaired and replace it on the vehicle as soon as possible.

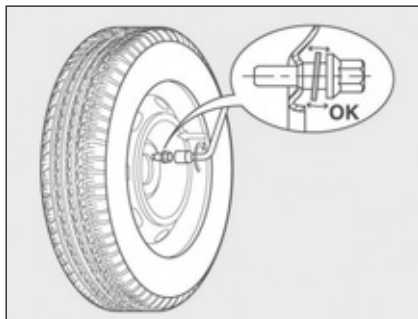

SPECIAL FEATURES OF ALLOY WHEELS

Fitting the spare wheel

If your vehicle is equipped with a steel spare wheel, when fitting it, it is **normal** to notice that the bolt washers do not come into contact with the rim. The spare wheel is secured by the cone-shape of each bolt.

Fitting snow tyres

If you fit snow tyres that are mounted on steel rims onto your vehicle, it is **essential** that you use special bolts available from your PEUGEOT dealer.

ANTI-THEFT BOLT*

If your wheels are fitted with an anti-theft bolt (one per wheel), it must be unscrewed using an anti-theft socket (which was given to you on delivery of your vehicle along with the duplicate keys and the confidential card) and the wheelbrace.

Note: make a careful note of the code number engraved on the top of the anti-theft socket. This will enable you to obtain a duplicate anti-theft socket from your PEUGEOT dealer.


* According to model and country.

CHANGING A BULB

Front lamps


To replace a dipped/main beam head-lamp or sidelamp bulb:

Remove the grille

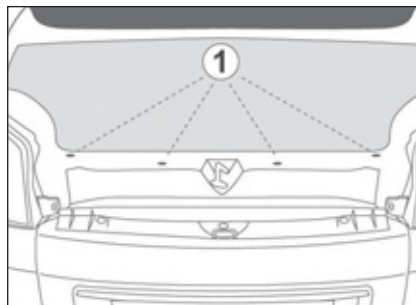


- Remove the screw (1).


Partially remove the wheelarch liner

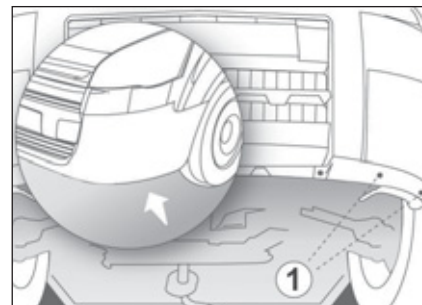


- Remove the screws (1),

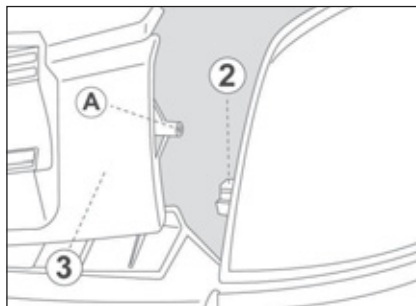


- Unclip the lug (A) of carrier (2) on each side.
- Remove the grille (3).

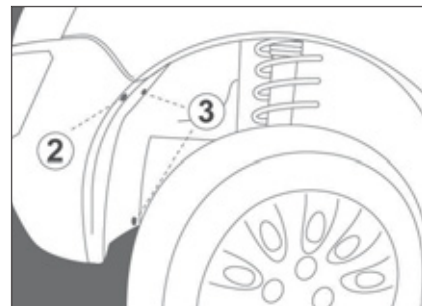


- Remove the screw (2),
- Remove the plastic pins (3).

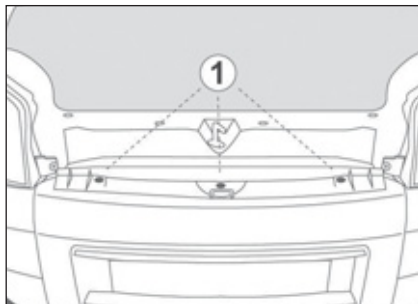Partially remove the bumper


- Remove the screws (1),

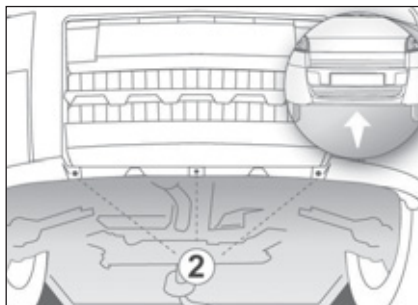


- Remove the screws (2),

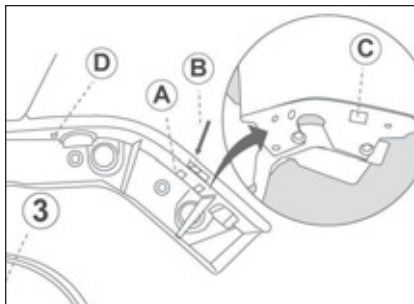


- Pull lightly on the side of the bumper (3),
- Push in the direction of the arrow (B), on the latch (A), via the opening (C),
- Maintain a light sideways pull on the bumper,
- Push the bumper sharply forwards to release the clips at (D).

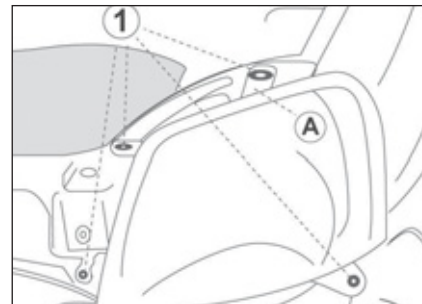Remove the headlamp

- Remove the screws (1),
- Unclip the index pin on the headlamp (A),

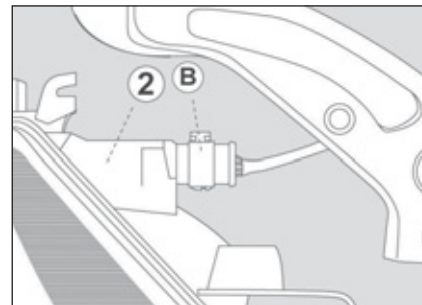


- Disconnect the connector (B) on the back of the headlamp,
- Remove the headlamp (2).

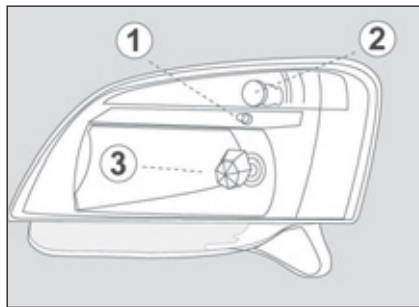


Dipped/Main beam headlamps (H4-60/55W)


After following the procedure for removal of the headlamp:

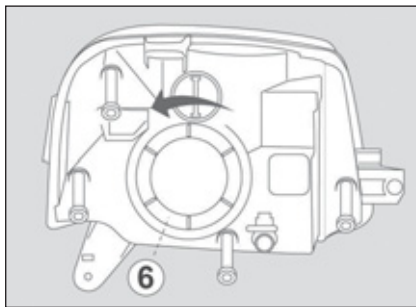

- Turn and remove the protector (6),

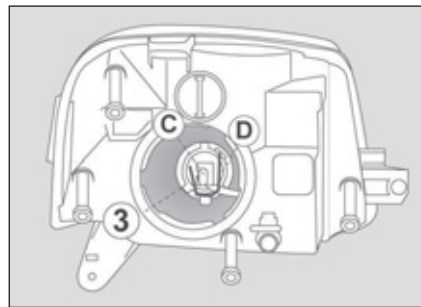

- Disconnect the connector (C),
- Unclip the spring (D),
- Remove and replace the bulb (3).

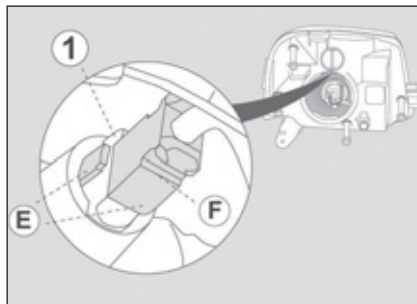


Sidelamps (W 5 W)

After following the procedure for removal of the headlamp:

- Turn and remove the protector (6).
- Unclip the the bulb holder (E).
- Disconnect the connector (F).
- Remove and replace the bulb (1).

Reassembly

Carry out the operations in reverse order to reassemble. Check that the lamps are working correctly.

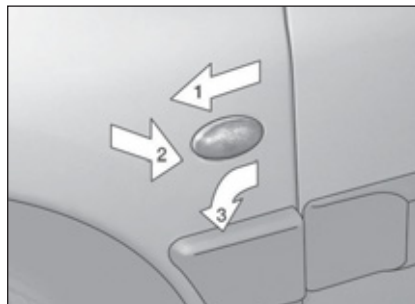


Direction indicator side repeaters (WY 5 W amber)

- Push the lens to the front or rear and pull it out.
- Turn the bulb holder a quarter turn.
- Replace the bulb.



Amber coloured bulbs (direction indicators and side repeaters) must be replaced by bulbs of the same rating and colour.

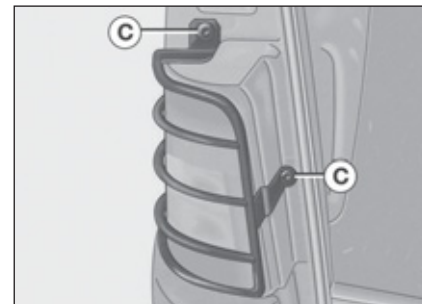


Front and rear lamp protection grille

This grille reduces the force of any impacts.

Removal (rear lamps)


Unscrew the wing nuts C and remove the protection grille.

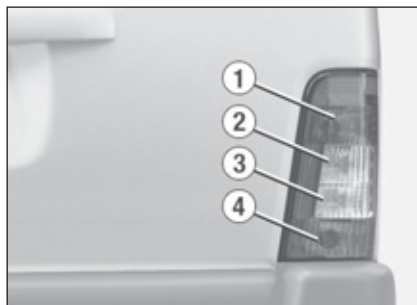


Rear lamps

1. Foglamp (P 21 W).
2. Direction indicators (P 21 W).
3. Reversing lamps (P 21 W).
4. Brake lamps/Sidelamps (P 21/5 W).

High pressure washing: when using this type of washing on stubborn dirt, do not persist on the headlamps, the lamps and their edges to avoid damaging their coating and seals.

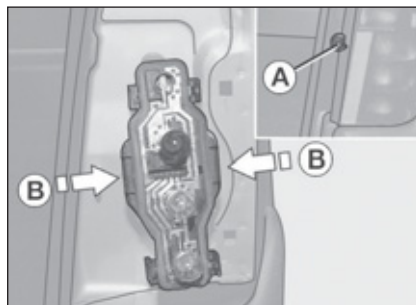


- Open the rear door.
- Unscrew the nut **A**.
- Push the lamp unit gently towards the interior of the vehicle to unclip the two side retaining clips.
- Remove the lamp unit and disconnect it.
- Unclip the bulb holder by pressing the tabs **B**.
- Change the faulty bulb.

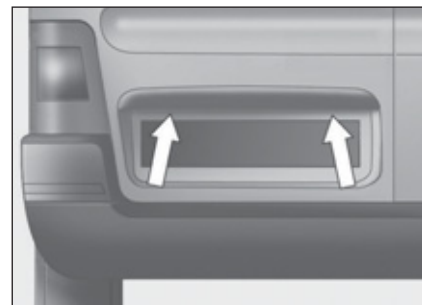

Number plate lamps (W 5 W)

- ☞ Insert a thin screwdriver into one of the external holes of the lens.
- ☞ Push it outwards to unclip it.
- ☞ Remove the lens.
- ☞ Change the failed bulb.

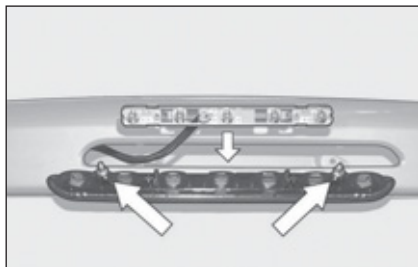


Third brake lamp (tailgate) (W 5 W)

- ☞ With the tailgate open, unscrew the two nuts.
- ☞ Unclip the carrier for access to the bulbs.
- ☞ Change the failed bulb.



Third brake lamp (left rear door) (W5W)


- ☞ Remove the housing cover by pressing the tab **A** (round section) at the end of the lamp.
- ☞ Pull the housing cover rearwards.

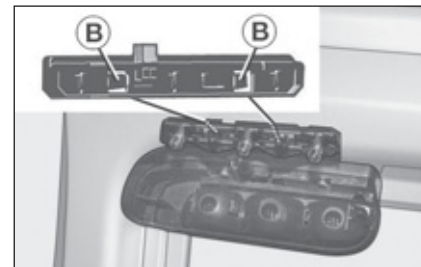

- ☞ Squeeze the two tabs **B** to remove the bulb holder.
 - ☞ Pull out the failed bulb and change it.
- To refit, proceed in the reverse order.

CHANGING A FUSE

The fuseboxes are located under the dashboard and in the engine compartment.

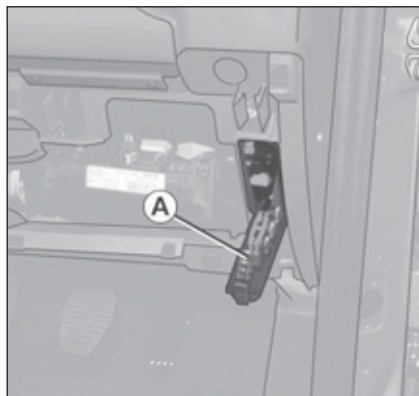

Dashboard fusebox

Unclip the cover to gain access to the fuses.

The spare fuses and the tweezer **B** are fitted to the inside of the cover **A**.


Removing and fitting a fuse

Before changing a fuse, the cause of the fault must be found and remedied. The fuse numbers are indicated on the fusebox.


Use the tweezer **B**.

Always replace a failed fuse with a fuse of the same rating (two fuse types according to manufacturer - see images).

Good

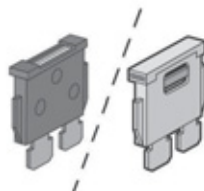


Failed

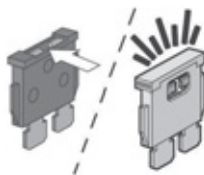

Tweezer B



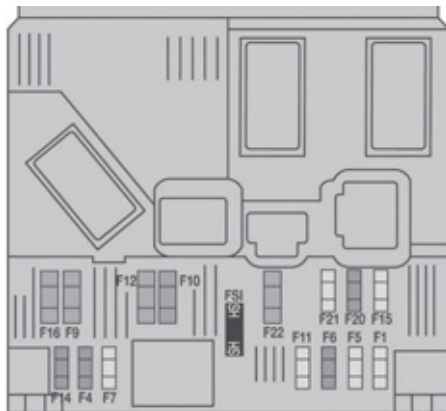

Fuse N°	Rating	Functions
1	15A	Rear wiper.
4	20A	Multifunction screen - Instrument panel - Audio system - Steering mounted controls.
5	-	Not used.
6	10A	Diagnostic socket.
7	-	Not used.
9	30A	Heated seats.
10	40A	Rear window and door mirrors demisting.
11	15A	Rear wiper (tailgate).
12	30A	Front electric windows.
14	10A	Engine fusebox - Steering mounted controls.
15	15A	Instrument panel - Multifunction screen - Audio system.
16	30A	Locking/unlocking controls for doors, bonnet and boot.
20	10A	Right-hand brake lamp.
21	15A	Left-hand brake lamp.
22	20A	Front courtesy lamp - Map reading lamp - Cigarette lighter - Electric mirror.

90 - PRACTICAL INFORMATION



The electrical system of your vehicle is designed to operate with standard or optional equipment.
Before installing other electrical equipment or accessories in your vehicle, consult a PEUGEOT dealer.

Some electrical accessories or the way in which they are fitted may have an adverse effect on the operation of your vehicle (its electronic control circuits, the audio system and the electrical charging circuit).


PEUGEOT declines any responsibility for expenses incurred through the repair of your vehicle or for any malfunctions resulting from the installation of auxiliary accessories, not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular for any equipment the power consumption of which exceeds 10 milliamps.

The maxi fuses provide additional protection for the electrical systems. Any work on these fuses must be carried out by a PEUGEOT dealer.

Engine compartment fusebox

To gain access to the box in the engine compartment (next to the battery), unclip the cover.

After carrying out work, close the cover carefully to ensure its sealing.

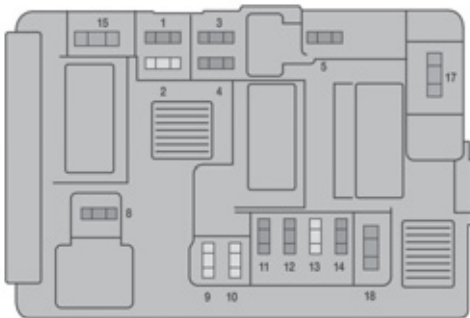

Fuse N°	Rating	Functions
1	10A	Pre-heater unit (Diesel) - Brake and clutch switches - Reversing lamps.
2	15A	Fuel pump.
3	10A	ABS control unit.
4	10A	Engine control unit.
5	-	Not used.
6	15A	Front foglamps.
7	20A	Headlamp wash pump.
8	20A	Fan assembly relay - Engine control unit.
9	15A	Left-hand dipped beam.
10	15A	Right-hand dipped beam.
11	10A	Left-hand main beam.
12	10A	Right-hand main beam.
13	15A	Horn.
14	10A	Front and rear screen wash pumps.
15	30A	Oxygen sensor - Air flow sensor.
16	30A	Air pump relay.
17	30A	Front windscreen wiper.
18	40A	Air conditioning fan.

BATTERY

To charge the battery using a battery charger:


- Disconnect the battery,
- Follow the instructions for use given by the battery charger manufacturer,
- Reconnect starting with the negative (-) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

To start the vehicle from another battery:

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery (for example, right-hand engine mounting).

Operate the starter, let the engine run. Wait for the engine to return to idle, then disconnect the cables.

It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.

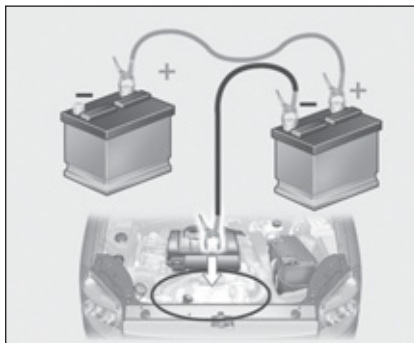

Before disconnecting the battery, you must wait 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

Close the windows and the roof before disconnecting the battery.

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If slight difficulties are experienced after this, please contact a PEUGEOT dealer.

ECONOMY MODE FUNCTION

After the engine has stopped, with the key in the "accessories" position, certain functions (windscreen wiper, electric windows, courtesy lights, audio equipment, etc.) can only be used for a combined duration of approximately thirty minutes, to prevent discharging the battery.

Once the thirty minutes are over, a switching to economy mode message appears on the multi-function display and the active functions are put on standby.

These functions are reactivated automatically next time the vehicle is driven.

In order to resume the use of these functions immediately, the engine must be started and left to run for a few minutes.

The time available to you will then be double the duration for which the engine is left running. However, this period will always be between five and thirty minutes.




A flat battery prevents the engine from starting.

FITTING AUDIO EQUIPMENT

Your vehicle is equipped with certain factory-fitted audio equipment:

- roof aerial,
- coaxial aerial cable,
- basic interference suppression,
- supply to front speakers and tweeters,
- two 8-way connectors.

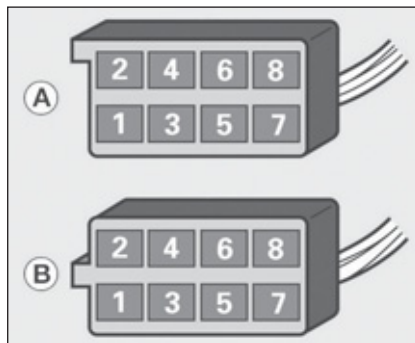

FITTING SPEAKERS

The factory-fitted equipment allows the fitting of:

- 35 mm diameter tweeters in the fascia,
- 165 mm diameter speakers in the front doors.

Making the connections

A1: -

A2: - Digital control (manufacturer)

A3: - Digital control (manufacturer)

A4: - Audio equipment multiplexing (manufacturer)

A5: -

A6: (+) Accessories

A7: (+) Permanent

A8: (-) Earth

B1: (+) -

B2: (-) -

B3: (+) Front right speaker and tweeter

B4: (-) Front right speaker and tweeter

B5: (+) Front left speaker and tweeter


B6: (-) Front left speaker and tweeter

B7: (+) -

B8: (-) -



Contact a PEUGEOT dealer before fitting audio equipment or speakers in your vehicle.

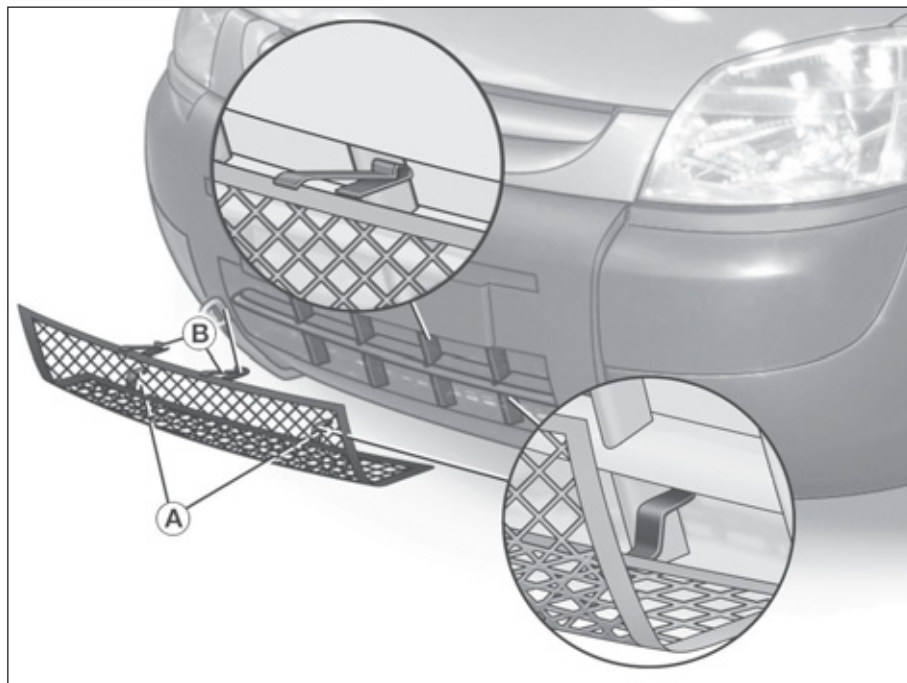

SNOW SCREEN*

The snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

Remove the snow screen:

- when the exterior temperature is higher than 10 °C,
- when towing,
- for speeds higher than 75 mph (120 km/h).

FITTING

- ☞ Offer up the snow screen facing the front bumper.
- ☞ Put it in place positioning the lower clips **A** in the bumper.
- ☞ Press the snow screen at each upper clip **B**.

REMOVAL

- ☞ Press the two upper clips **B** and pull the snow screen.


* As an accessory or according to country.



TOWING YOUR VEHICLE

Without lifting (four wheels on the ground)

You must always use a towbar.

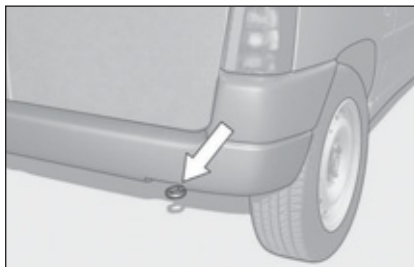

From the front or the rear

Attach the towbar to the towing eye.

By lifting (two wheels only on the ground)

It is preferable to lift the vehicle by the wheels.



Never use the radiator cross-member.

When towing another vehicle, it must freewheel.

Place the gearbox in "neutral".

Failure to observe this instruction may result in damage to certain braking components and the absence of braking assistance when the engine is started again.

TOWING A TRAILER, CARAVAN, BOAT, ETC.

We recommend the use of original PEUGEOT towbars and their harnesses that have been tested and approved from the design stage of your vehicle and that the fitting of the towbar is entrusted to a PEUGEOT dealer.

If the towbar is not fitted by a PEUGEOT dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle, in accordance with the manufacturer's instructions.

Your vehicle is primarily designed for transporting people and luggage but it may also be used for towing a trailer.

Driving with a trailer subjects the towing vehicle to more significant stress and its driver must be particularly careful.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towing load must be reduced by 10 % and so on for every 1 000 metres of altitude.

Driving advice

Distribution of loads: Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Cooling: Towing a trailer on a slope increases the temperature of the coolant.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

On the contrary, use a high gear to lower the engine speed and reduce your speed.

The maximum towing load on a long slope depends on the gradient and the outside temperature.

In all cases, pay attention to the coolant temperature.

In certain cases of particularly arduous use (towing the maximum load on a steep gradient in high temperatures), switching off the air conditioning permits the recovery of engine power and therefore an increase in the towing capacity.

If the warning light comes on, stop the vehicle and switch off the engine as soon as possible.

Tyres: Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.

Braking: Towing increases the braking distance.

Lights: Check the electrical signalling on the trailer.

Side wind: Take into account the increased sensitivity to side wind.

ACCESSORIES

These accessories and parts, having been tested and approved for reliability and safety, are all adapted to your vehicle. A wide range of recommended accessories and original parts is offered.



For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

Range of professional equipment

Load retainers (all models).

Loading roller.

Towbar, towbar harness: trailer towbar which must be fitted by the PEUGEOT network.

Separation partitions and grilles, smooth, non-slip wooden protective floor.

Protective grilles.

Range of comfort, leisure and maintenance equipment

Anti-theft alarm, window engraving, first aid kit, high visibility safety jacket, rear parking assistance, warning triangle, ...

Front seat covers compatible with airbags, bench, rubber mats, carpet mats, snow chains, blind, tailgate bicycle carrier, roof bars (max load 120 kg), transverse roof bars (max load 100 kg), ...

To prevent the mat from becoming caught under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.

Audio equipment, hands-free kit, speakers, CD changer, navigation, ...

Regardless of the audio and telematic equipment offered on the market, the technical constraints linked with the fitting of equipment of these families of products mean that the special features of the equipment and its compatibility with the capacities of the your vehicle's standard equipment must be taken into account. Please contact a PEUGEOT dealer for information before fitting such equipment.

Installation of radiocommunication transmitters

Before installing accessory radio-communication transmitters with an external aerial on your vehicle, you are advised to contact a representative of the PEUGEOT marque.

The PEUGEOT Network will inform you of the specifications (frequency band, maximum output power, aerial position, specific installation conditions) of the transmitters which can be fitted, in accordance with the Motor Vehicle Electromagnetic Compatibility Directive (2004/104/CE).

Front mud flaps, rear mud flaps, 15/17 inch alloy wheels, wheelarch trim, leather steering wheel, ...


Screenwash, interior and exterior cleaning and maintenance products, replacement bulbs, ...



The fitting of electrical equipment or accessories which are not recommended by Automobiles PEUGEOT may result in the failure of your vehicle's electronic system. Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment and accessories.

Depending on the country in which the vehicle is sold or operated, it is compulsory to have a high visibility safety jacket, warning triangle and replacement bulbs available in the vehicle.

EXTERIOR DIMENSIONS (IN MM)

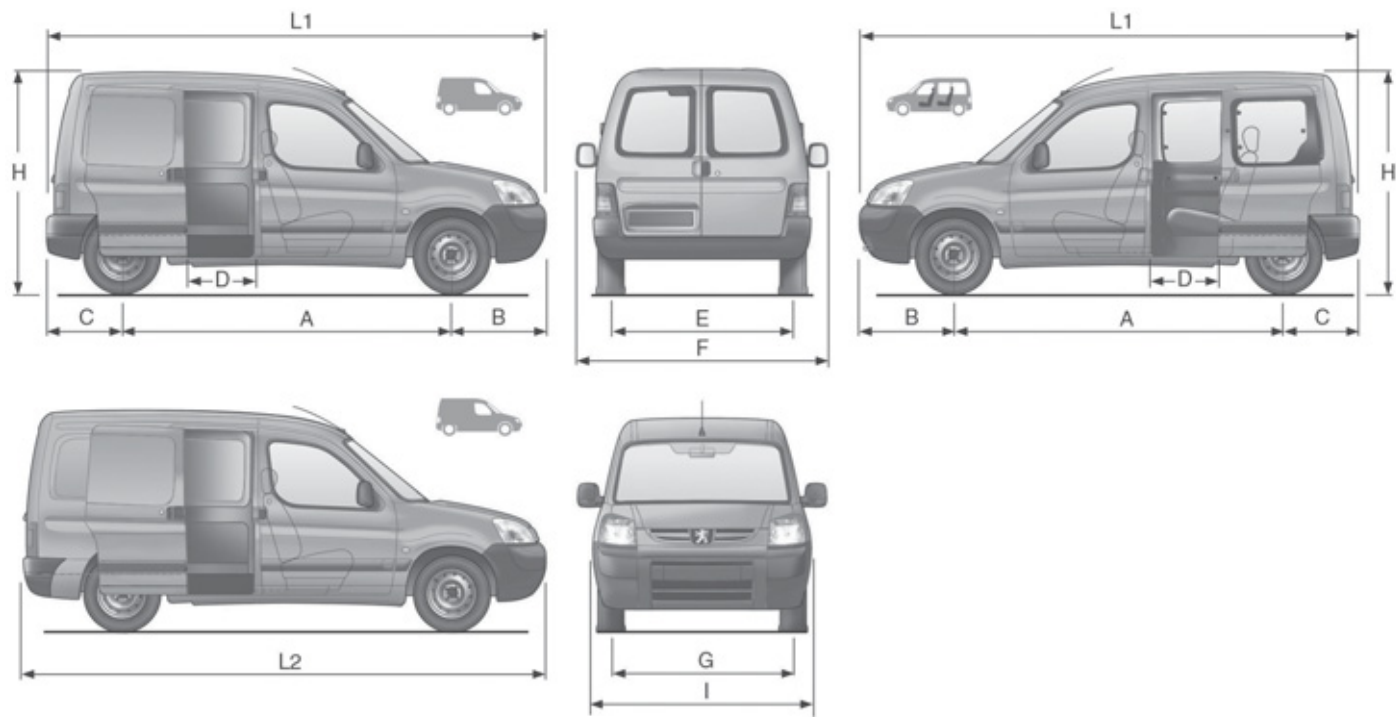

	Light van 	Ludospace 
L1	4 137	
L2	4 437	-
H	1 796 to 1 819	1 810
A	2 693	
B	836	
C	608	
D	570	550
E	1 440	1 440 or 1 452
F	1 960	
G	1 420	1 420 or 1 436
I	1 724	



LIGHT VAN INTERIOR DIMENSIONS (IN MM) AND VOLUMES (IN M³)



	L1	L2
J	1 155	
K	1 320	
M	1 190	
N	1 190	
O	568	
P	1 340	1 640
m ³	3.25	3.6

PETROL ENGINES AND GEARBOXES

ENGINES	1.4 litre	1.6 litre
Cubic capacity (cc)	1 360	1 587
Bore x stroke (mm)	75 x 77	78.5 x 82
EU standard maximum power (kW)	55	80
Maximum power at engine speed (rpm)	5 500	5 800
EU standard maximum torque (Nm)	120	147
Maximum torque at engine speed (rpm)	3 400	4 000
Fuel	Ron 95 - Ron 98	Ron 95 - Ron 98
Catalytic converter	Yes	Yes
Gearboxes	Manual (5 speed)	Manual (5 speed)
Oil capacity (in litres)		
Engine (with cartridge replacement)	3 (1) - 3.25 (2)	3.2 (1) - 3.4 (2)

(1) Draining by gravity - (2) Draining by suction

DIESEL ENGINES AND GEARBOXES

ENGINES	1.6 litre Turbo HDi 75	1.6 litre Turbo HDi 90	1.9 litre
Cubic capacity (cc)	1 560	1 560	1 867
Bore x stroke (mm)	75 x 88.3	75 x 88.3	82.2 x 88
EU standard maximum power (kW)	55	67	51
Maximum power at engine speed (rpm)	4 000	4 000	4 600
EU standard maximum torque (Nm)	185	230	125
Maximum torque at engine speed (rpm)	1 500	1 750	2 500
Fuel	Diesel	Diesel	Diesel
Catalytic converter	Yes	Yes	Yes
Gearboxes	Manual (5 speed)	Manual (5 speed)	Manual (5 speed)
Oil capacity (in litres)			
Engine (with cartridge replacement)	3.75	3.8	4.8



Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10% ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85% ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100% ethanol (E100 type).

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



PETROL WEIGHTS AND TOWED LOADS (IN KG) FOR LIGHT VANS

Engine	1.4 litre
Gearbox	Manual
Length	L1
Version (kg)	800
• Kerb weight (in running order)	1 055
• Gross vehicle weight (GVW)	1 855
• Gross train weight (GTW)	2 755
• Unbraked trailer	500
• Braked trailer (within GTW)	900
• Recommended nose weight	70
• Recommended weight on roof rack	100

The GTW and towing load values indicated are valid up to a maximum altitude of 1 000 metres; the towing load mentioned must be reduced by 10 % for each additional 1 000 metres.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the ambient temperature is above 37 °C, limit the towed load.



DIESEL WEIGHTS AND LOADS (IN KG) FOR LIGHT VANS

Engines	1.6 litre Turbo HDi 75		1.6 litre Turbo HDi 90		1.9 litre	
Gearboxes	Manual		Manual		Manual	
Length	L1	L2	L1	L2	L1	L2
Version (kg)	800	1 000	800	1 000	800	1 000
• Kerb weight (in running order)	1 112	1 143	1 112	1 143	1 206	1 146
• Gross vehicle weight (GVW)	1 915	2 150	1 915	2 150	1 955	2 180
• Gross train weight (GTW)	2 715	2 950	2 715	2 950	3 055	3 005
• Unbraked trailer	500	585	500	585	500	585
• Braked trailer (within GTW)	800	800	800	800	1 100	825
• Recommended nose weight	70	75	70	75	70	75
• Recommended weight on roof rack	111		111		100	-

The GTW and towing load values indicated are valid up to a maximum altitude of 1 000 metres; the towing load mentioned must be reduced by 10 % for each additional 1 000 metres.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the ambient temperature is above 37 °C, limit the towed load.



WEIGHTS AND TOWING LOADS (IN KG) FOR PETROL LUDOSPACE 4/5 SEAT VERSIONS

Engines	1.4 litre	1.6 litre
Gearboxes	Manual	Manual
Length	L1	L2
Version (kg)	-	1 000
• Kerb weight (in running order)	1 197	1 207
• Gross vehicle weight (GVW)	1 780	2 170
• Gross train weight (GTW)	2 680	2 880
• Unbraked trailer	540	585
• Braked trailer (within GTW)	900	710
• Recommended nose weight	70	75
• Recommended weight on roof rack	100	100

The GTW and towing load values indicated are valid up to a maximum altitude of 1 000 metres; the towing load mentioned must be reduced by 10 % for each additional 1 000 metres.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the exterior temperature is above 37 °C, limit the towed load.



**WEIGHTS AND TOWING LOADS (IN KG)
FOR DIESEL LUDOSPACE 4/5 SEAT VERSIONS**

Engines	1.6 litre Turbo HDi 75		1.6 litre Turbo HDi 90		1.9 litre	
Gearboxes	Manual		Manual		Manual	
Length	L1	L2	L1	L2	L1	L2
Version (kg)	-	1 000	-	1 000	-	1 000
• Kerb weight (in running order)	1 200	1 244	1 200	1 244	1 240	1 244
• Gross vehicle weight (GVW)	1 735	2 170	1 735	2 170	1 840	2 210
• Gross train weight (GTW)	2 535	2 970	2 535	2 970	2 940	3 005
• Unbraked trailer	540	585	540	585	500	585
• Braked trailer (within GTW)	1 100	1 100	1 100	1 100	1 100	795
• Recommended nose weight	70	75	70	75	70	75
• Recommended weight on roof rack	70		70		100	

The GTW and towing load values indicated are valid up to a maximum altitude of 1 000 metres; the towing load mentioned must be reduced by 10 % for each additional 1 000 metres.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle in order to protect the engine; when the exterior temperature is above 37 °C, limit the towed load.

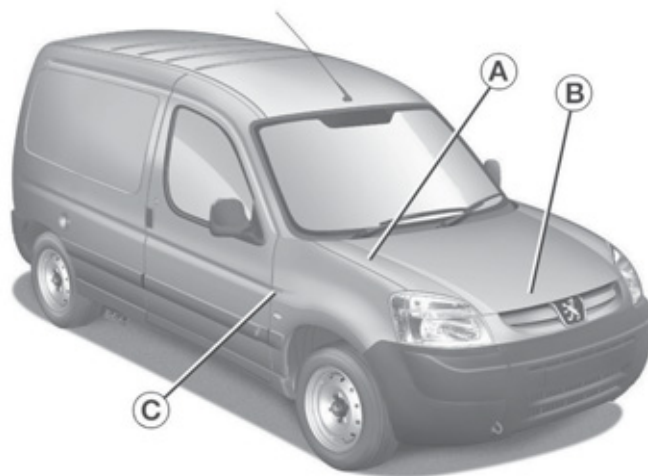

IDENTIFICATION FEATURES

A. Manufacturer's label (under the bonnet, on the front right wing).


B. Serial number on the bodywork (under the bonnet, on the right-hand crossmember).

C. Tyres and paint colour reference.

The label **C** on the driver's door pillar, near the hinges, gives:

- the wheel and tyre sizes,
- the tyre pressures: **(tyre pressure checks must be carried out cold, at least every month),**
- the paint colour reference.

RD3 AUDIO SYSTEM

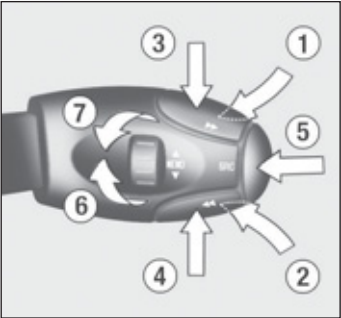

Stalk movement	Function
1 - Press (behind)	Increase volume
2 - Press (behind)	Decrease volume
1 + 2 - Simultaneous press	Sound cut-off (mute); restoring of the sound by pressing any button
3 - Press	Automatic search of higher frequencies (radio) - Selection of the next track (CD)
4 - Press	Automatic search of lower frequencies (radio) - Selection of the previous track (CD)
5 - Press the end	Change of source (radio/CD)
6 - Rotation (clockwise)	Selection of next preset station (radio)
7 - Rotation (anti-clockwise)	Selection of previous preset station (radio)

Button		Function
A		Radio On/Off.
B	-	Decrease volume.
C	+	Increase volume.
D	RDS	RDS function On/Off.
		Press for more than 2 seconds: regional following mode On/Off.
E	TA	Traffic information priority on/off.
		Press for more than 2 seconds: PTY function On/Off.
H		Selection of bass, treble, loudness, sound distribution and automatic volume correction.
I		Increase the setting of the functions associated with button H .
J		Decrease the setting of the functions associated with button H .
L		Manual and automatic search of higher frequency.
		Selection of next CD track and PTY (radio).
M	MAN	Manual/automatic operation of buttons L and N .
N		Manual and automatic search of lower frequency.
		Selection of previous CD track and PTY (radio).
Q	CD	Selection of CD.
		Press for more than 2 seconds: shuffle.
R	Radio	Selection of radio. Selection of FM1, FM2, FMast and AM wavebands.
		Press for more than 2 seconds: automatic presetting of stations (autostore).
S		Ejection of CD.
1 to 6	12 34 56	Selection of preset station.
		Press for more than 2 seconds: presetting a station.

GENERAL FUNCTIONS



On/Off

With the ignition key in the accessories or ignition position, press button **A** to switch the set on or off.

The set can operate for 30 minutes without the vehicle ignition being switched on.

Anti-theft system

The audio system is coded in such a way that it can operate only on your vehicle. It would not function if fitted to another vehicle.

The anti-theft system is automatic and requires no action on your part.


ADJUSTING THE VOLUME



Press button **C** to increase the volume, or button **B** to decrease it.

Continuous pressure on buttons **C** and **B** allows a gradual adjustment of the volume.

AUDIO SETTINGS

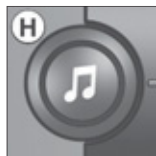

Press button **H** several times in succession to access the bass (**BASS**), treble (**TREB**), loudness (**LOUD**), fader (**FAD**), balance (**BAL**) and automatic volume correction.

Exit from audio mode is automatic after a few seconds without pressing any button, or by pressing button **H** after configuration of the automatic volume correction.



The bass and treble settings are specific to each source. It is possible to set them differently for radio or CD.

Adjusting the bass



When "**BASS**" is displayed, press button **I** or **J** to vary the setting.

- "**BASS -9**" for a minimum bass setting,
- "**BASS 0**" for a normal setting,
- "**BASS +9**" for a maximum bass setting.

Adjusting the treble

When "**TREB**" is displayed, press button **I** or **J** to vary the setting.

- "**TREB -9**" for a minimum treble setting,
- "**TREB 0**" for a normal setting,
- "**TREB +9**" for a maximum treble setting.

Adjusting the loudness

This function automatically emphasises bass and treble tones. Press button **I** or **J** to switch the function on or off.

Adjusting the front/rear sound distribution (Fader)

When **"FAD"** is displayed, press button **I** or **J**.

Button **I** increases the volume in the front.

Button **J** increases the volume in the rear.

Adjusting the right/left sound distribution (Balance)

When **"BAL"** is displayed, press button **I** or **J**.

Button **I** increases the volume on the right-hand side.

Button **J** increases the volume on the left-hand side.

Automatic volume correction

This function enables the volume to be automatically adjusted depending on the level of noise produced by the speed of the vehicle.

Press buttons **I** or **J** to switch the function on or off.

RADIO SOURCE

Radio reception

Your car radio is subject to phenomena which do not affect domestic radio sets. Both AM (MW/LW) and FM reception are subject to various forms of interference. This is no reflection on the quality of the equipment, but is due to the nature of the signals and the way in which they are transmitted.

On MW/LW, interference may be noticed when passing under high voltage power lines or bridges, or in tunnels.

On FM, interference may be the result of increasing distance from the transmitter, deflection of the signals by obstacles (mountains, hills, buildings, etc.), or of being in an area which is not covered by a transmitter.

Selecting radio mode



Press button **R**.

Selecting a waveband

Briefly press button **R** to select the FM1, FM2, FMast and AM wavebands.

Automatic station search



Briefly press button **L** or **N** to search for the station immediately above or below. By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

If the **TA** traffic information programme is selected, only stations broadcasting this type of programme are selected.

Searching for a station occurs first in "**LO**" sensitivity (selection of the most powerful transmitters) during scanning of the waveband, then in "**DX**" sensitivity (selection of the weakest and most distant transmitters).

To make a direct search in "**DX**" sensitivity, press button **L** or **N** twice.

Manual station search

Press the "**MAN**" button.

Briefly press button **L** or **N** to increase or decrease the frequency displayed.

By continuing to press the button in the direction selected, you will obtain continuous scrolling of the frequency.

The scrolling stops at the first station found as soon as the button is released.

Pressing the "**MAN**" button again returns you to automatic station search.

Manual presetting of stations

Select the station required.

Press one of the buttons "**1**" to "**6**" for more than two seconds.

The sound stops then becomes audible again, confirming that the station has been stored in the memory.

Automatic presetting of FM stations (autostore)



Press and hold button **R** for more than two seconds.

Your radio automatically presets the 6 stations with the strongest signal in **FM**. These stations are stored in the FMast waveband.

If it is not possible to find 6 stations, the remaining preset positions are empty.

Recalling preset stations

For each waveband, briefly press buttons "**1**" to "**6**" to recall the corresponding station.

RDS

Using the RDS (Radio Data System) function on FM

Radio Data System allows you to continue listening to the same station, whatever the frequency it is using for the region you are going through.



Briefly press the **"RDS"** button to switch the function on or off.

The multifunction screen will show:

- **"RDS"** if the function is selected.
- **"(RDS)"** if the function is selected but not available.

RDS alternative frequencies

The screen indicates the name of the station selected. The radio continually searches for the frequency transmitting the station which has the best reception.

Traffic information programme



Press the **"TA"** button to switch the function on or off.

The multifunction screen will show:

- **"TA"** if the function is selected,
- **"(TA)"** if the function is selected but not available.

Any traffic information flash will be given priority, whatever source you are listening to (radio or CD).

If you wish to interrupt a message, press the **"TA"** button; this switches the function off.



The volume of traffic information announcements is independent of the volume of normal radio listening.

You can adjust it using the volume button. The setting will be stored and will be used when the next messages are broadcast.

Regional mode (REG)



When they are part of a network, certain stations broadcast regional programmes in the various areas they serve. With regional mode you can keep listening to the same programme.

Press the **"RDS"** button for more than two seconds to switch the **REG** function on or off.

PTY function

This allows you to listen to stations broadcasting a specific type of programme (news, culture, sport, rock, etc.).



With **FM** selected, press the "**TA**" button for more than two seconds to switch this function on or off.

To search for a **PTY** programme:



- select the **PTY** function,
- briefly press button **L** or **N** to scroll down the list of the various types of programmes offered.
- when the programme of your choice is displayed, keep button **L** or **N** pressed for more than two seconds to carry out an automatic search (after an automatic search the **PTY** function is switched off).

In **PTY** mode the different types of programmes can be stored in the memory. To do this, press the preset buttons "**1**" to "**6**" for more than two seconds. Briefly press the corresponding button to recall the type of programme stored in the memory.

EON system

This connects stations which are part of the same network. It enables the broadcast of traffic information, by a station that is part of the same network as the station to which you are listening.

This service is available when you have selected the **TA** traffic information programme or the **PTY** function.

COMPACT DISC SOURCE

Selecting CD mode



After insertion of a disc, printed face upwards, the player starts automatically.

If a disc is already inserted, press button **Q**.

Ejection of a disc



Press button **S** to eject the disc from the player.

Selecting a track



Press button **L** to select the next track.

Press button **N** to return to the start of the current track or to select the previous track.

Accelerated play

Keep button **L** or **N** pressed for forwards or backwards accelerated play.

Accelerated play stops as soon as the button is released.

Shuffle

When the CD player is selected, keep button **Q** pressed for two seconds. The tracks will be played in random sequence. Pressing the button again for two seconds returns you to normal play.


Shuffle mode is de-activated each time the audio system is switched off.




The use of copied compact discs may cause faults.

Insert circular compact discs only.

EXTERIOR

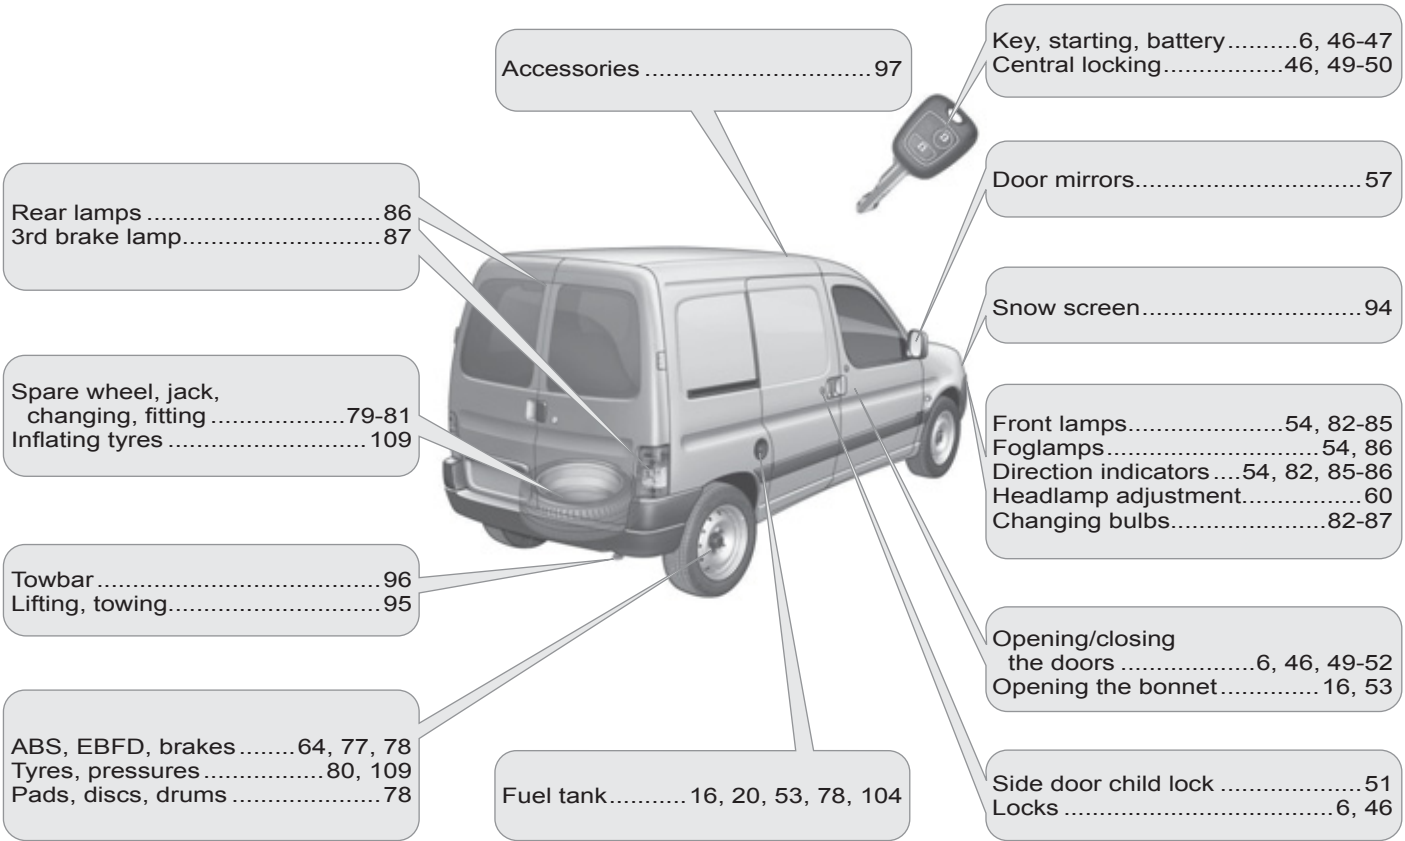

INTERIOR

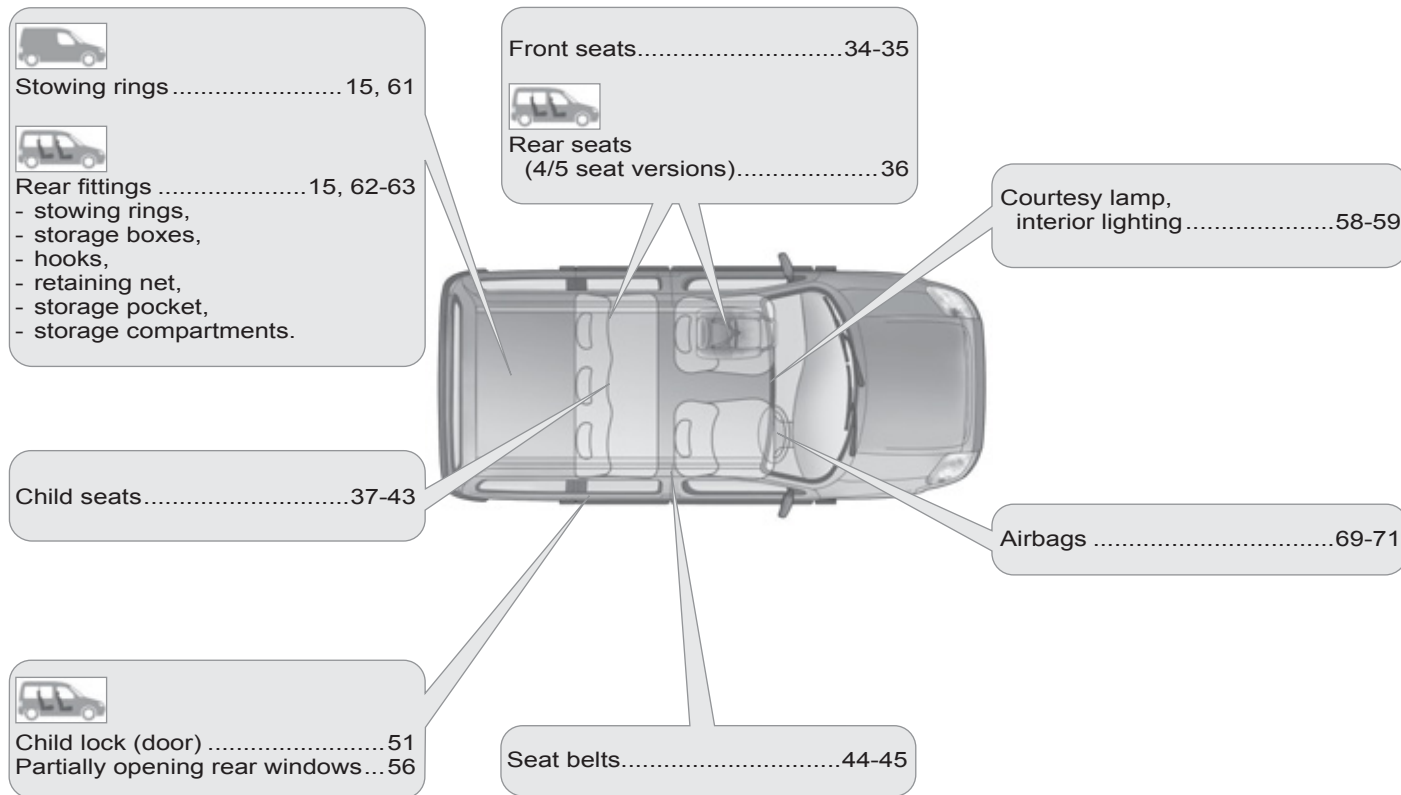

INSTRUMENTS AND CONTROLS

Overhead storage, sun visor,
courtesy lamp 14, 58-59
Rear view mirror 57

Electric windows 56
Hazard warning
lamps 60

Audio system 110-117
Fitting an audio system,
speakers 93

Opening the bonnet 16, 53


Heating/
Air conditioning 28-31, 32-33
- vent, demisting, defrosting
- air conditioning A/C,
- air recirculation,
- ventilation.

Instrument panel, dials,
speedometer 20
Warning lamps,
indicator lamps 21-23
Indicators, displays, screen ... 23-27
Setting the time,
dimmer, resetting to zero 25-27


Interior fuses 88-90

Parking brake,
handbrake 64, 78

Front fittings 58-59

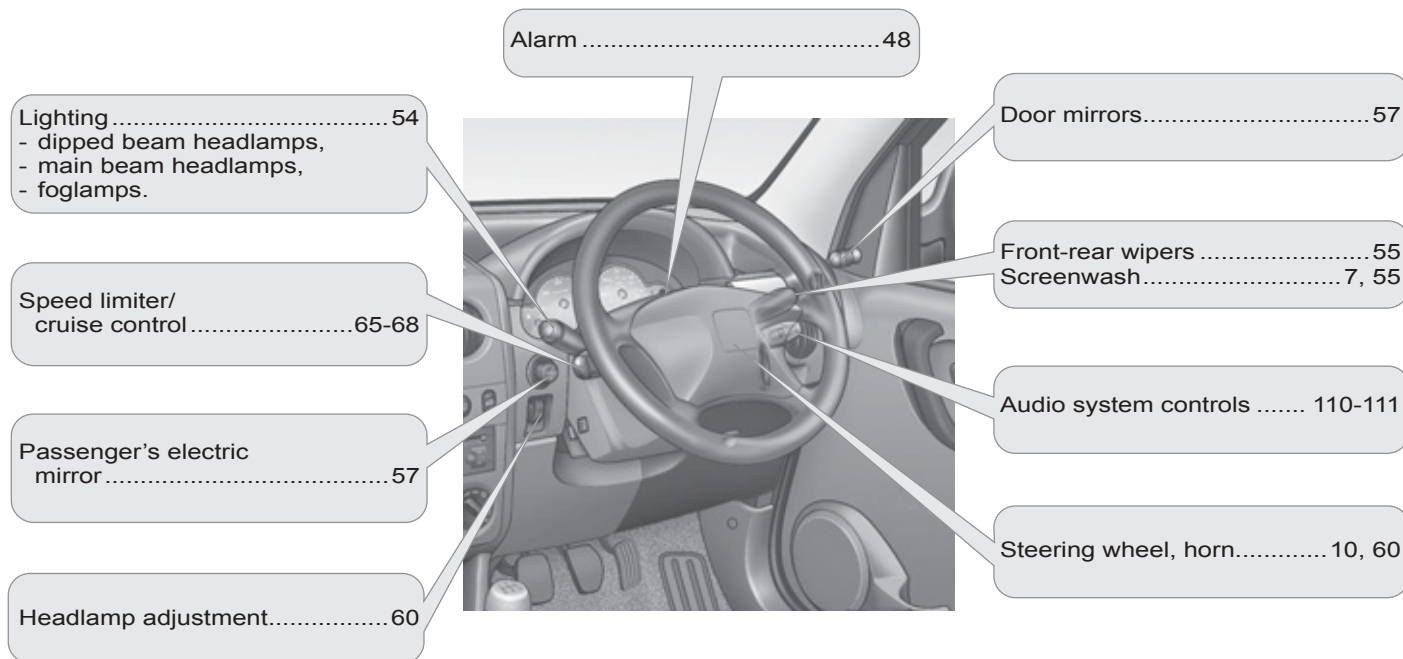STEERING MOUNTED CONTROLS

TECHNICAL DATA - MAINTENANCE

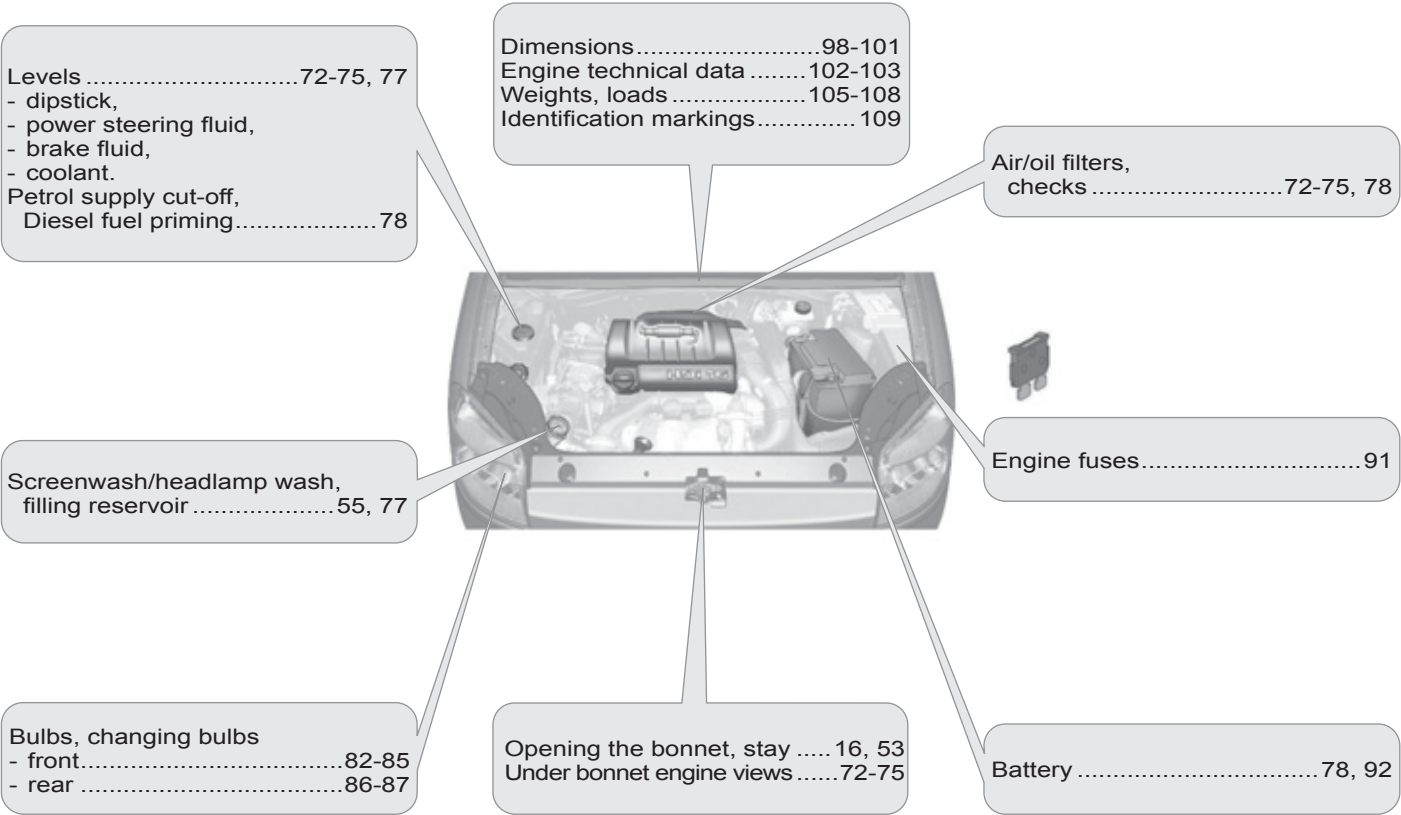





This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

For the attention of users of a vehicle adapted to electric drive:

You have available the "Electric mode supplement" which is provided with this Partner Origin document.

Refer to this supplement before using the vehicle and most particularly before any connection is made to charge the traction battery.

Ensure that the power socket you intend to use is standard and compatible with the current rating (230 V alternating current - 10 A minimum). It is recommended that in all cases this should be checked by a skilled electrician.

You must only use the original charging cable and without any extension lead.

The precautions are the same as for any electric domestic appliance. Do not touch the metal end of the normal socket nor that of the charging cable (risk of malfunction and of electrocution).

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.

Printed in the EU

10-11 Anglais



PEUGEOT

Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS

Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P. 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 171 284 850 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

