 
 
 
 


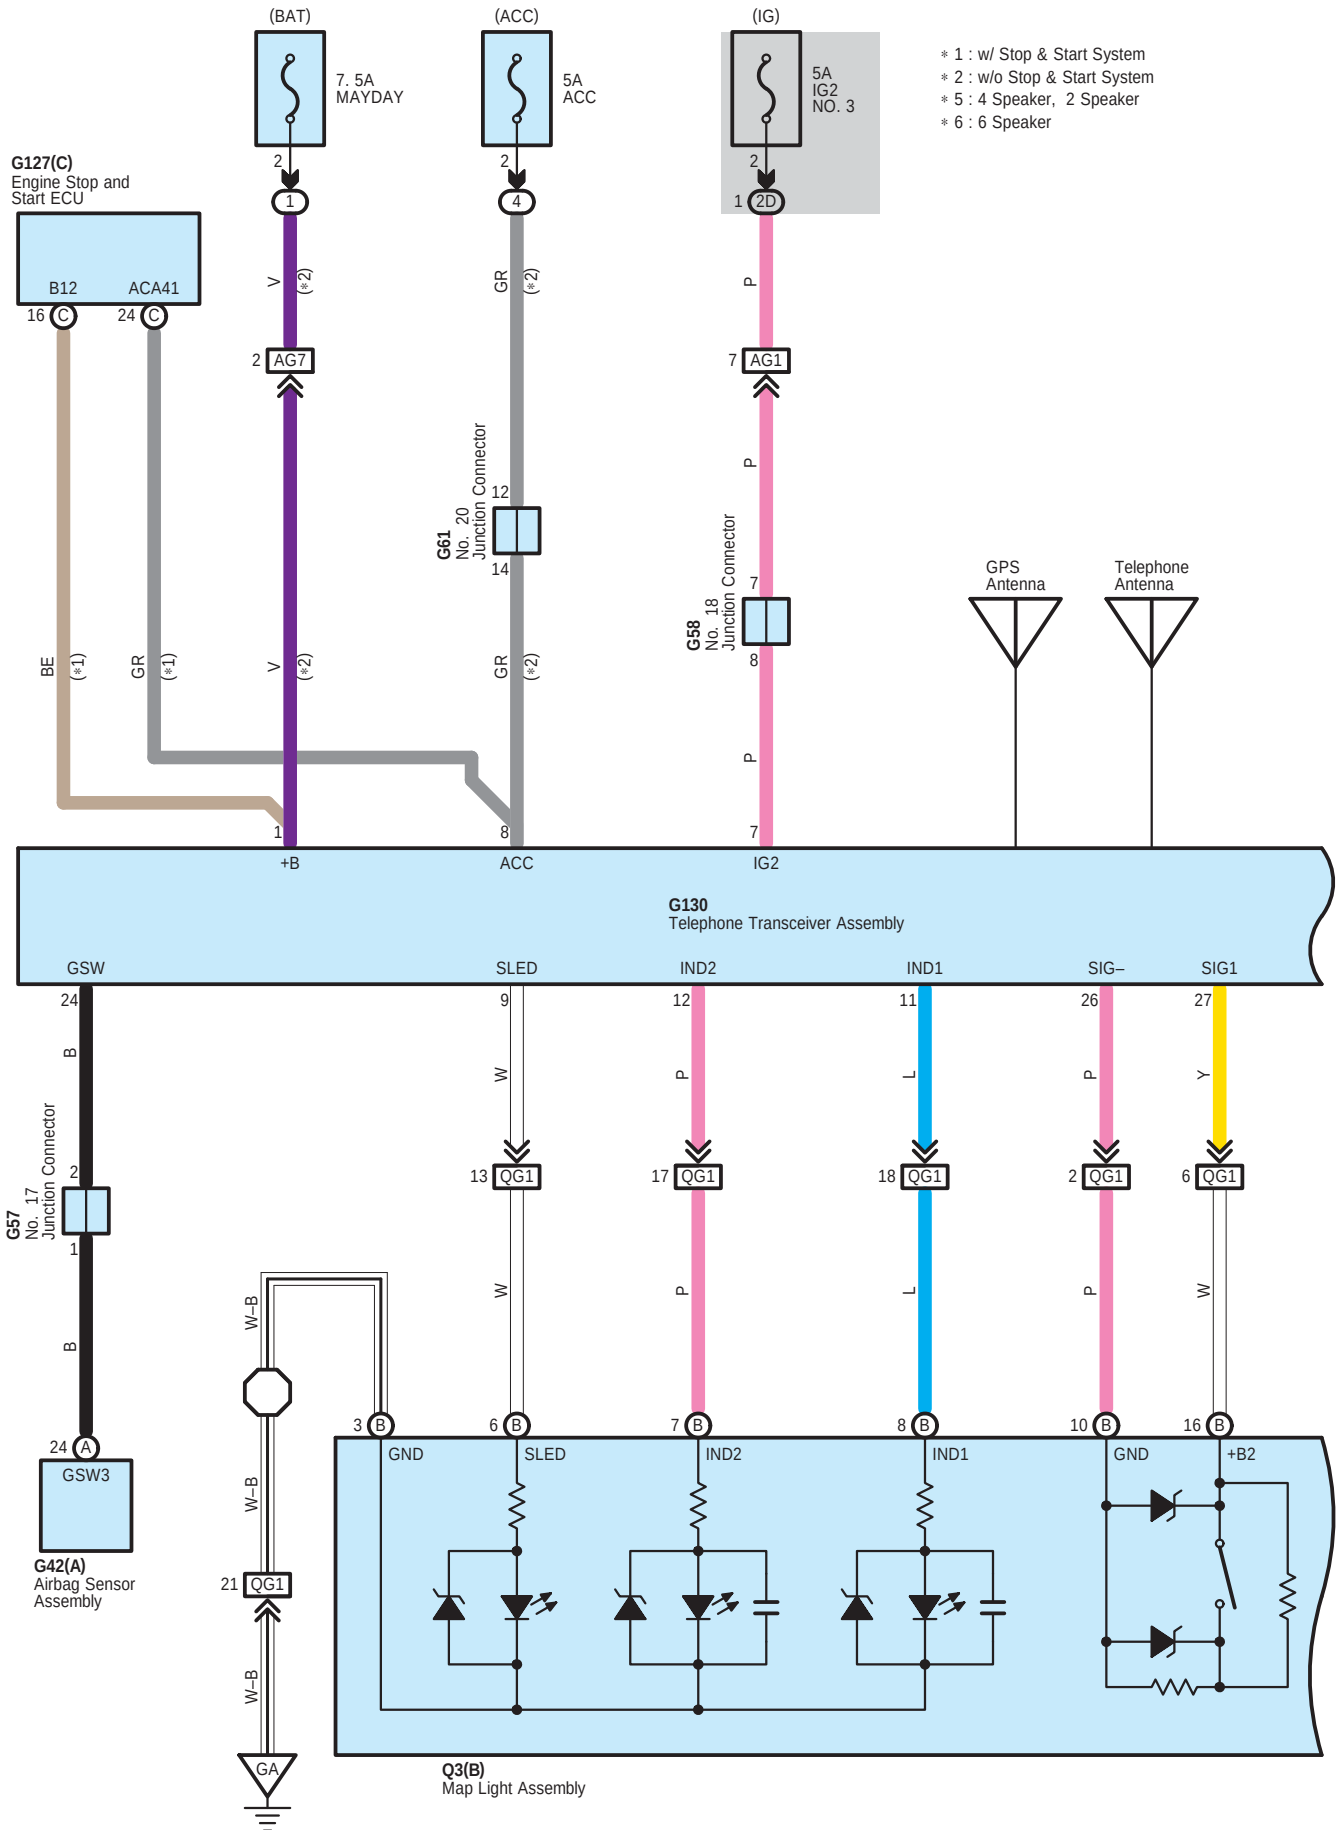


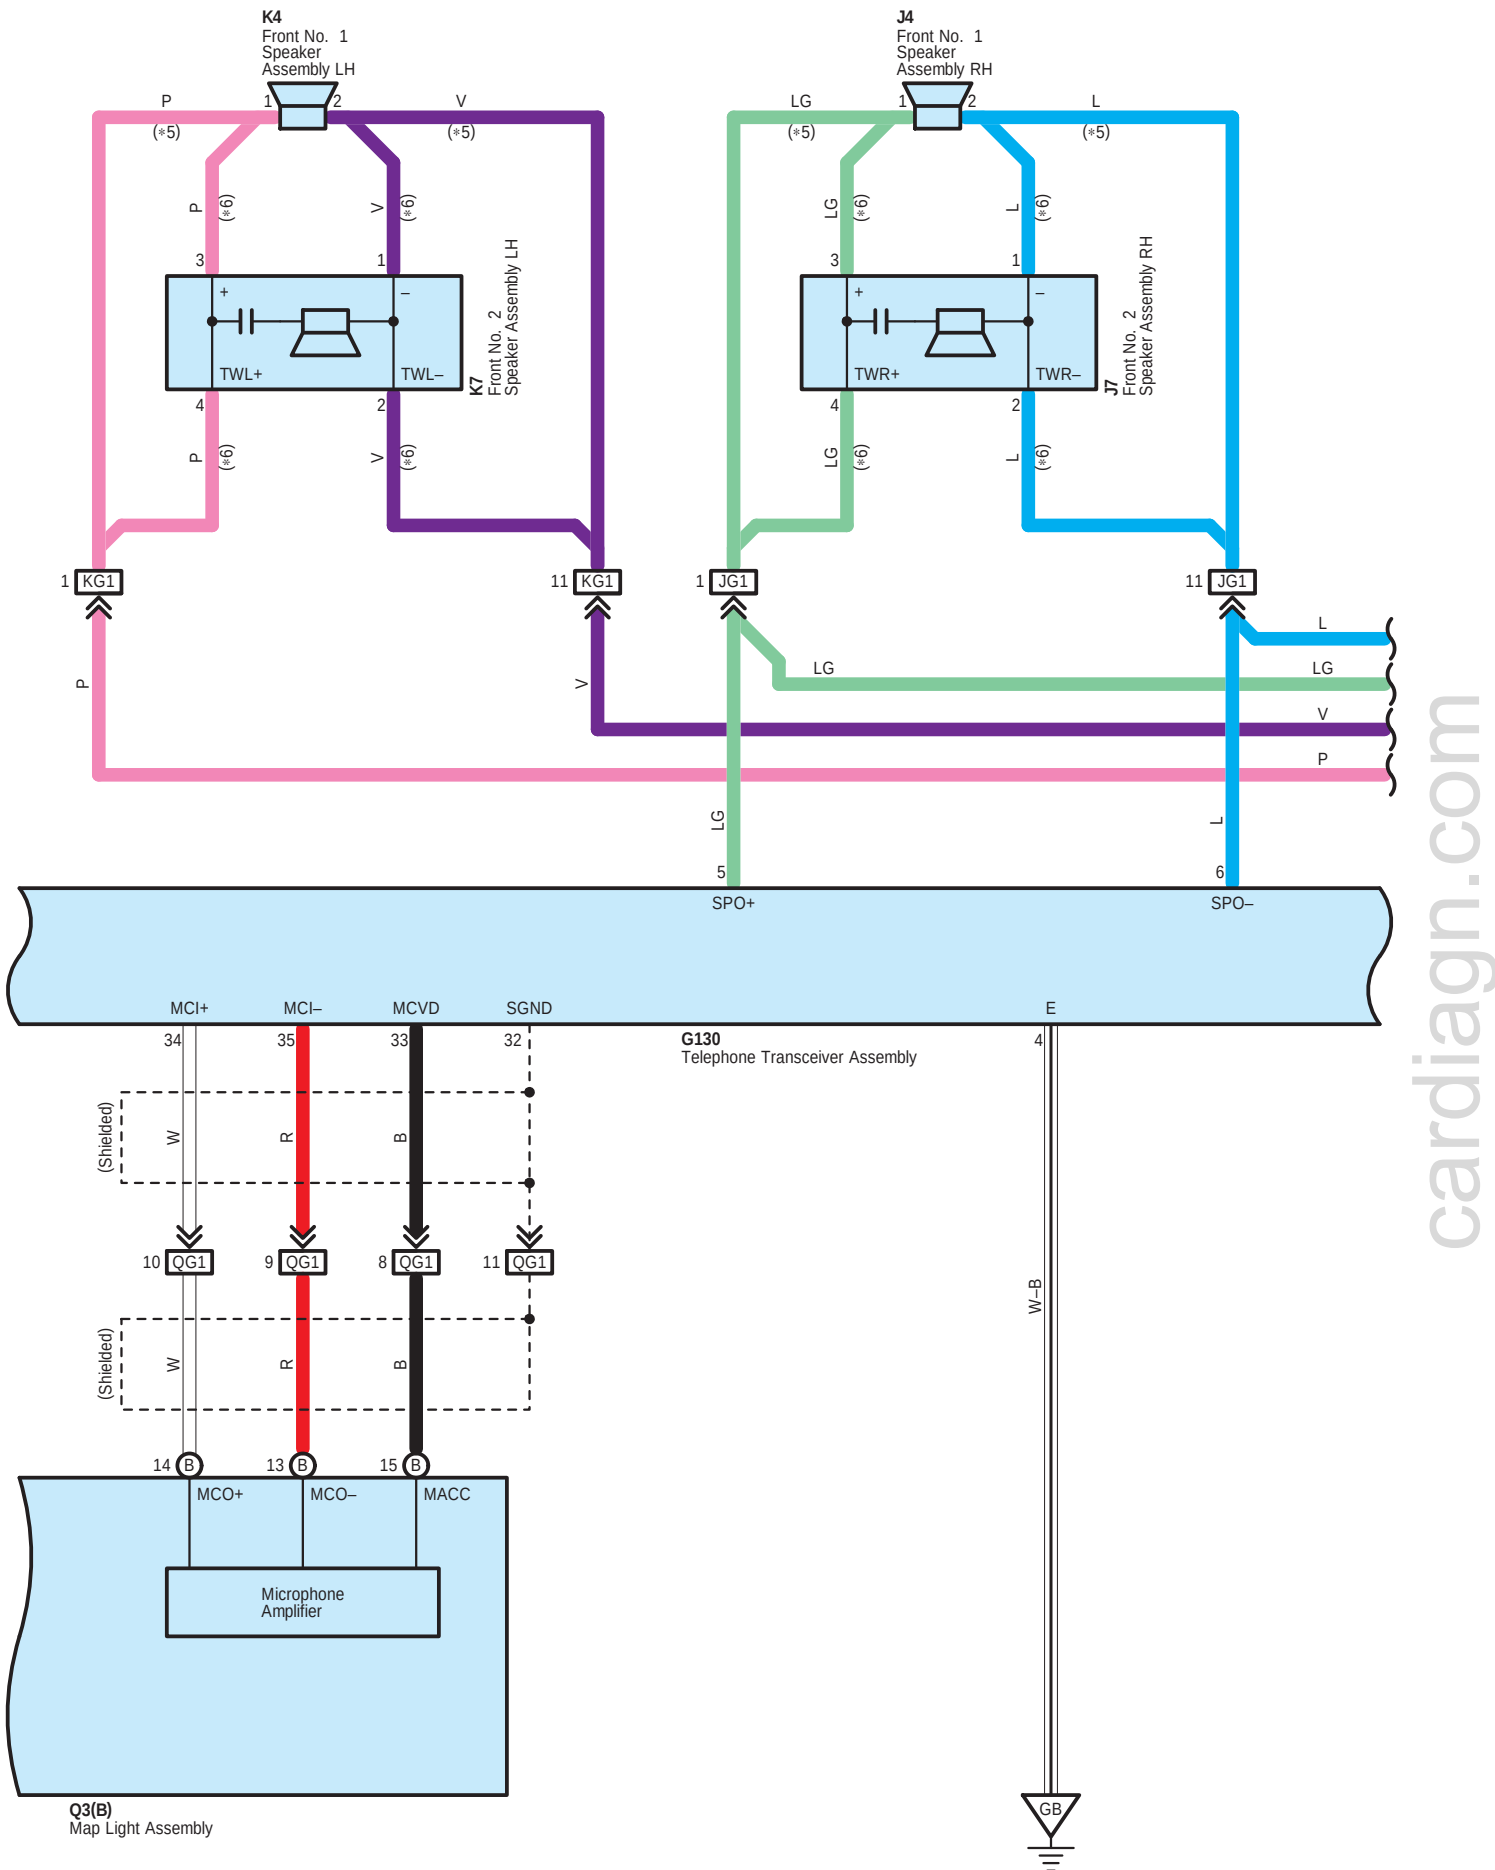

 
G37(A), G40(C)
Radio & Display Receiver Assembly
G117(F), G118(G)
Radio Receiver Assembly

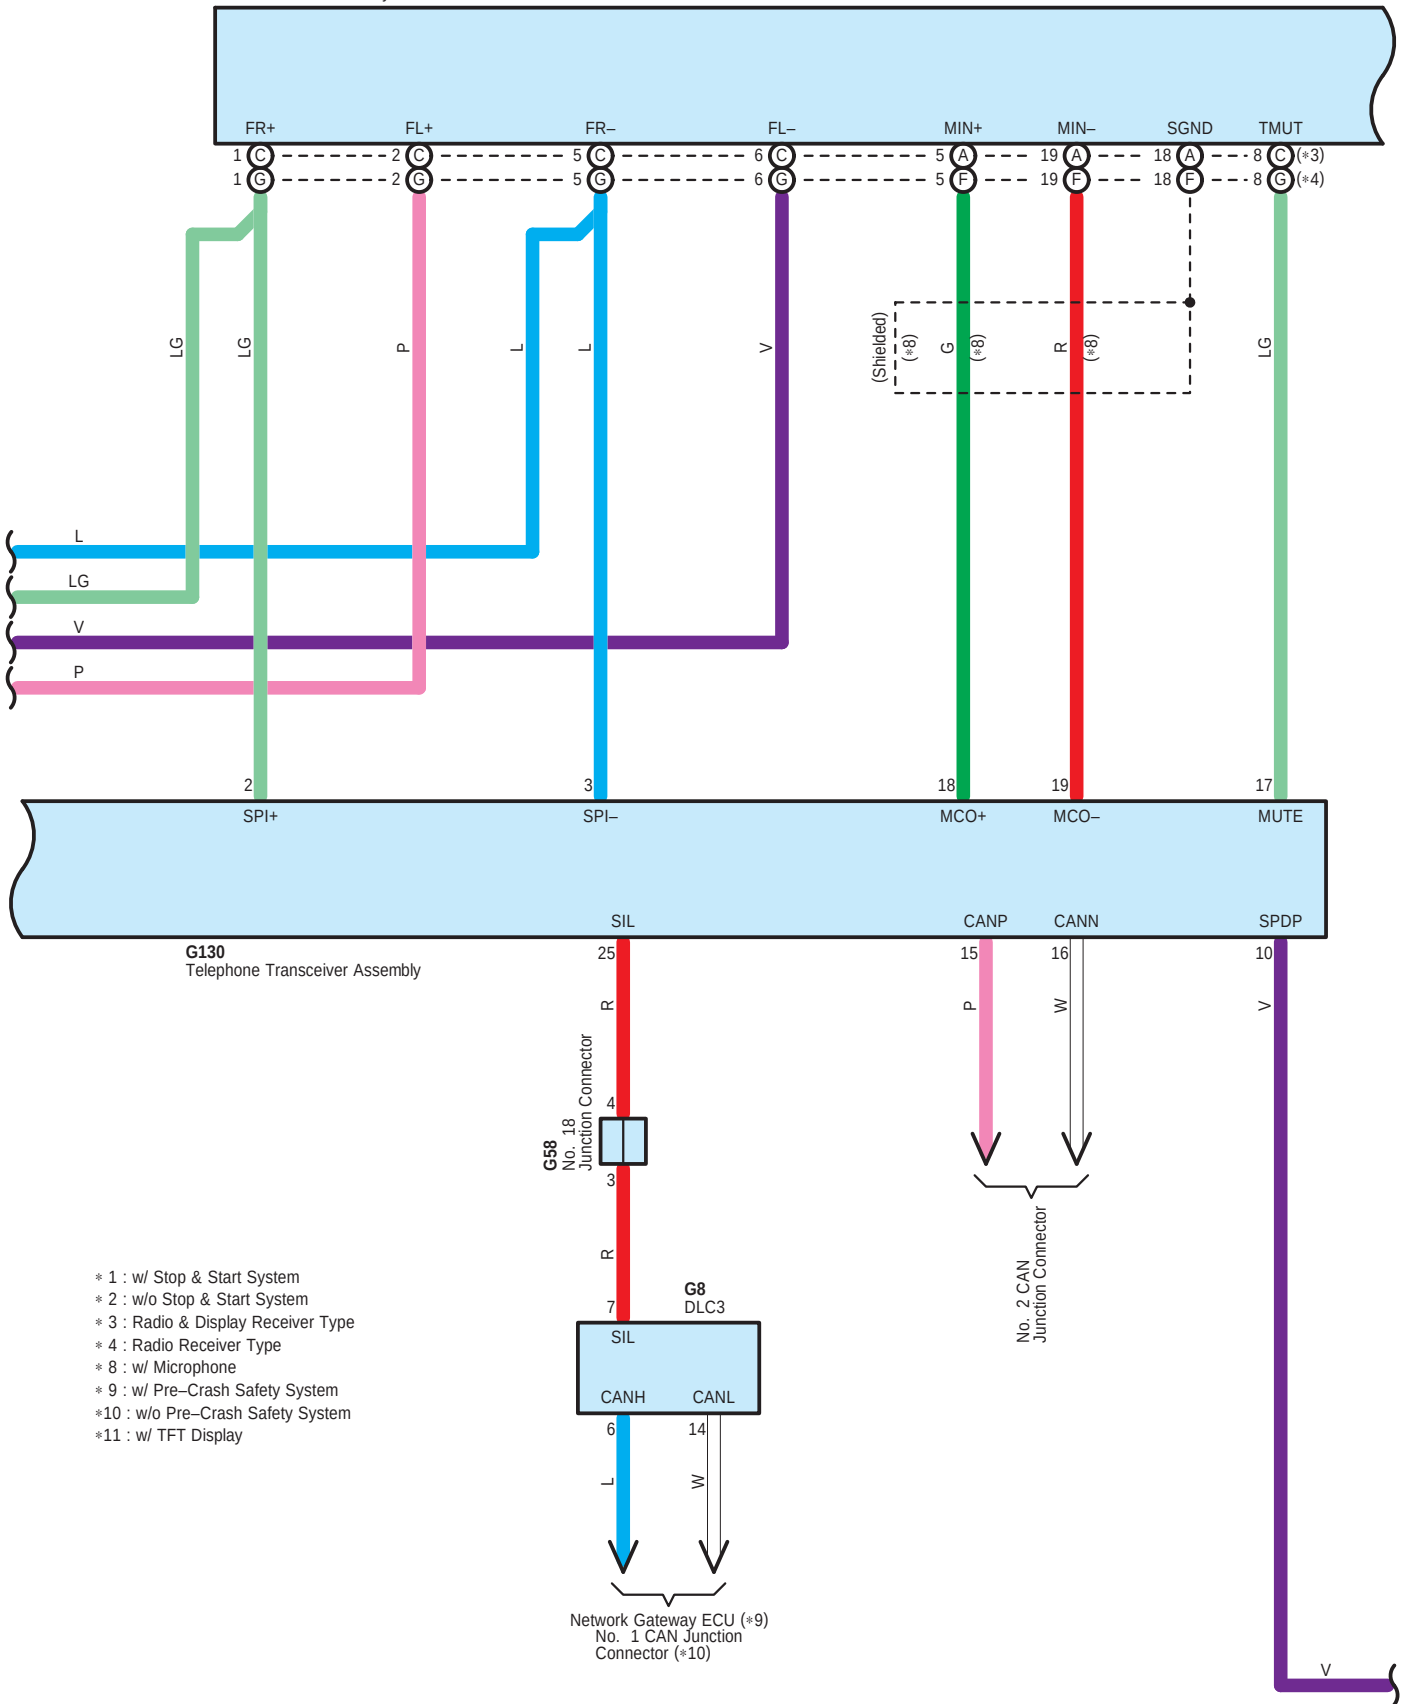

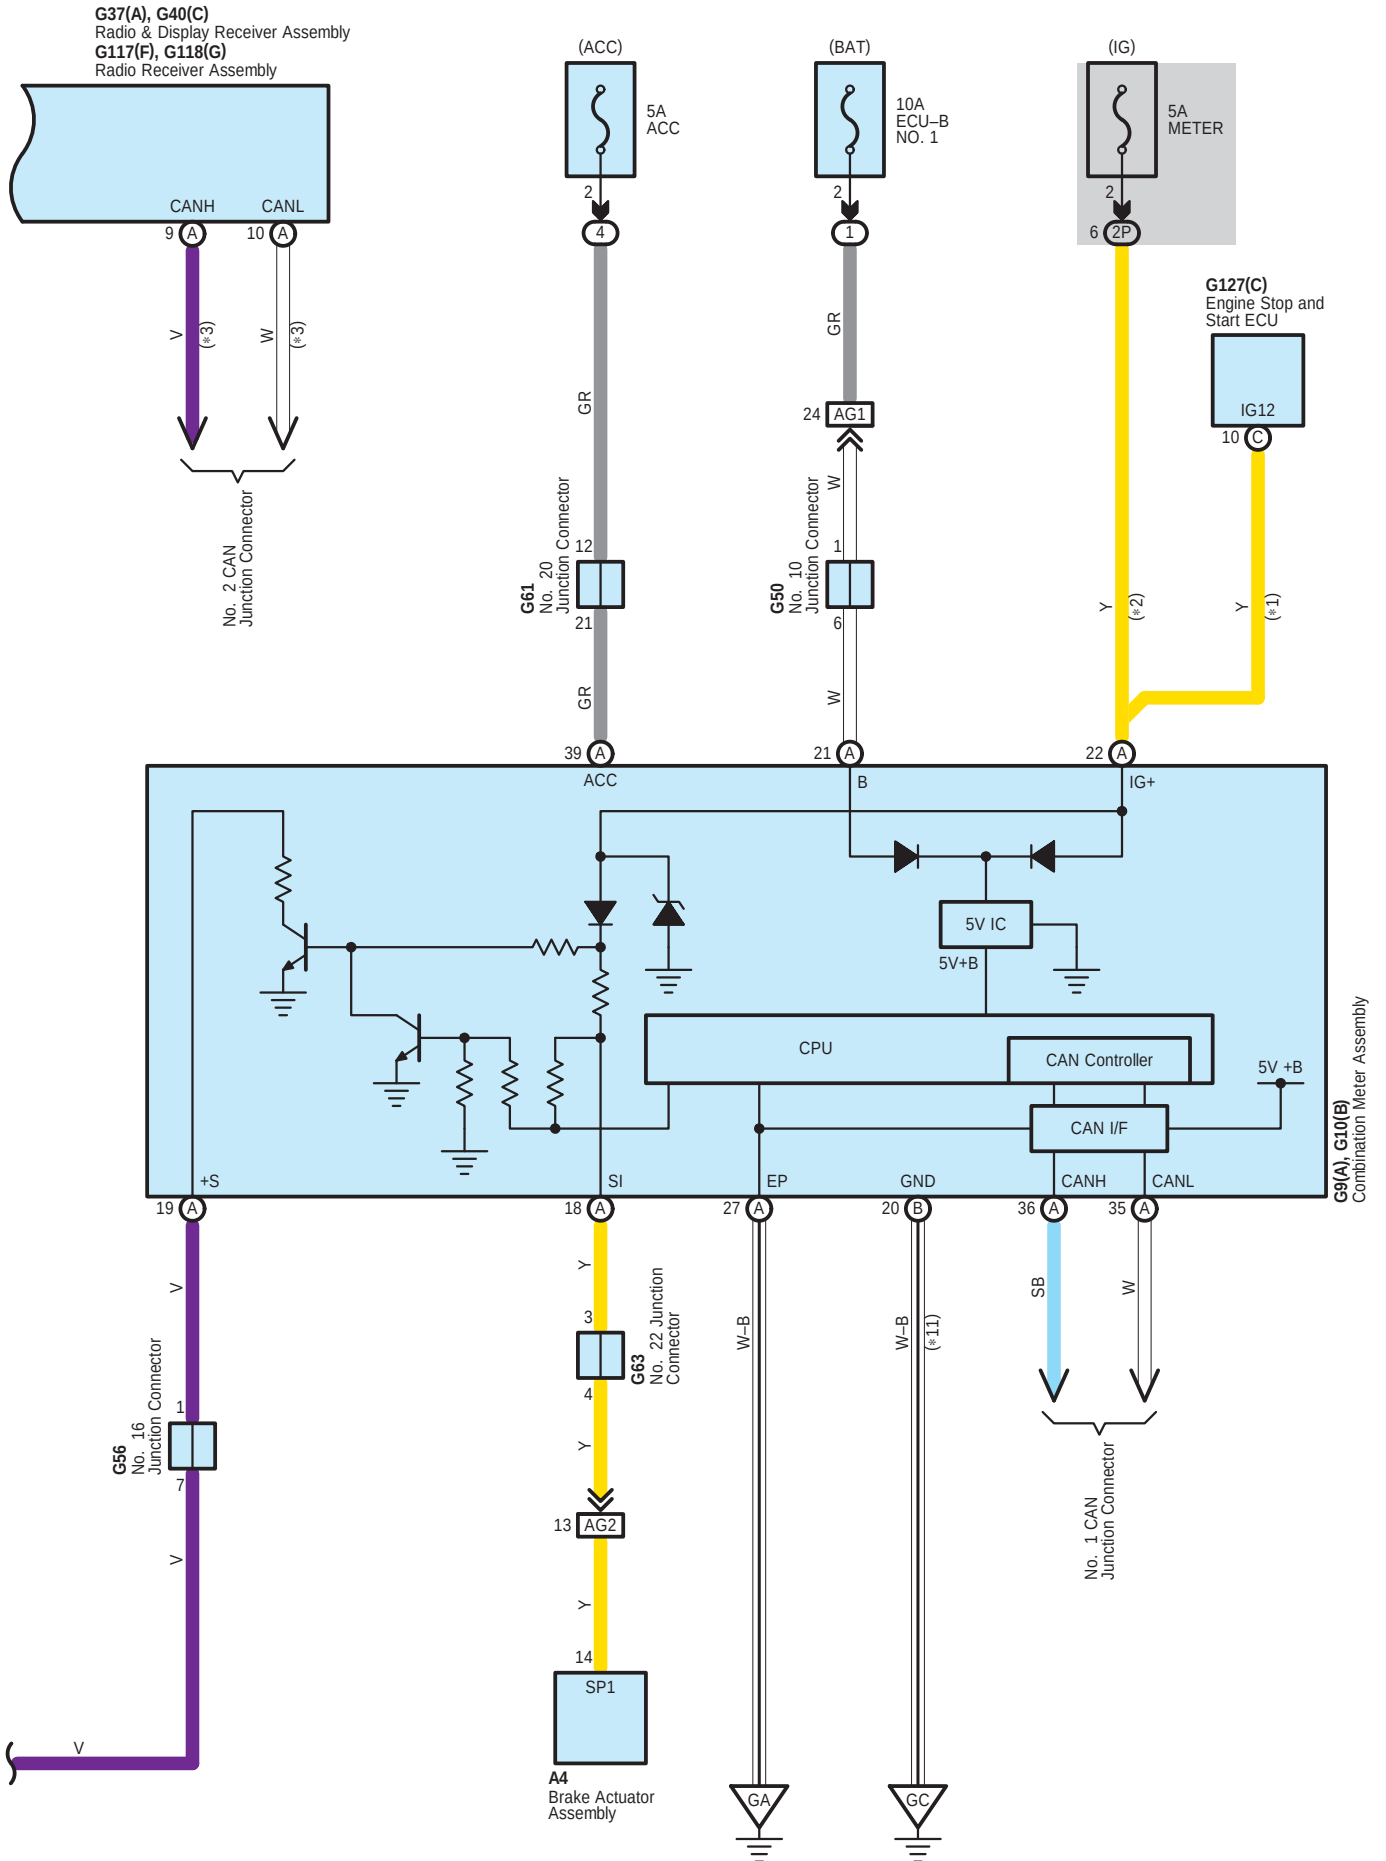


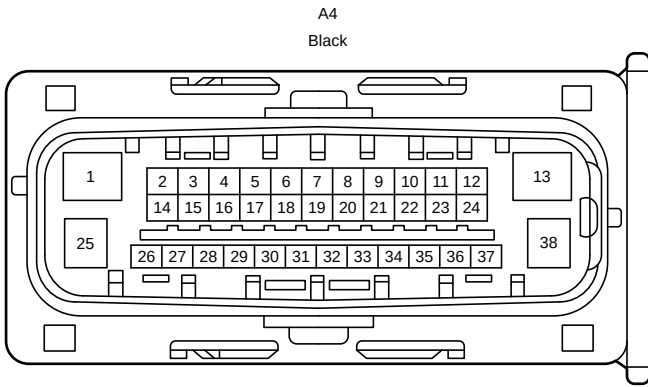


90980-12B01

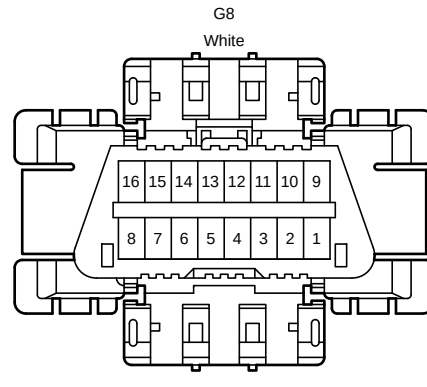 


90980-11978

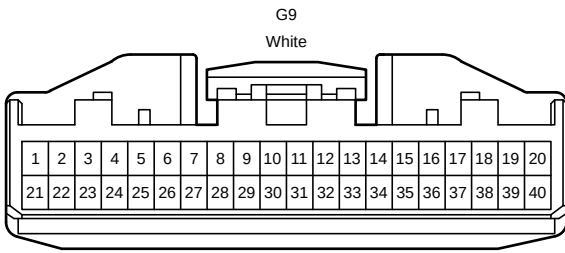 


90980-12557

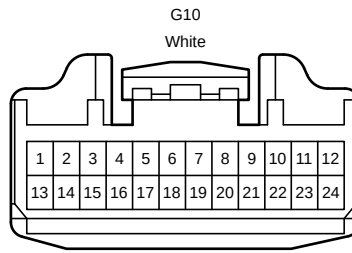 


90980-12554

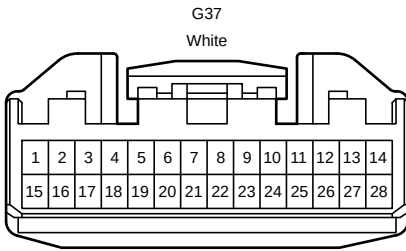 


90980-12555

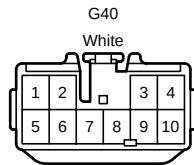 


90980-10997

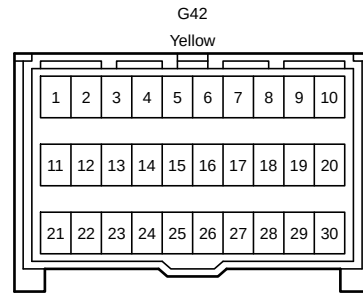 


90980-12710

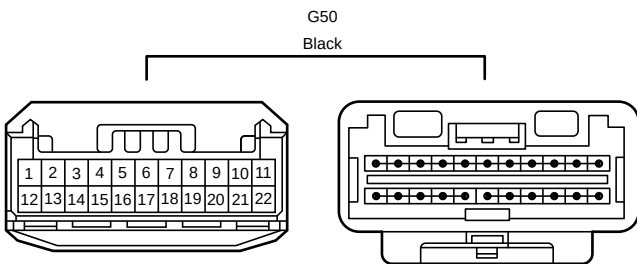 


90980-12B54

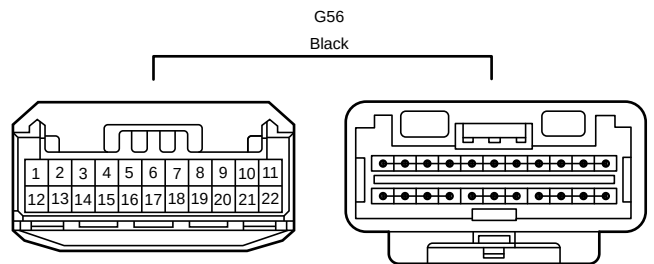 














90980-12B54

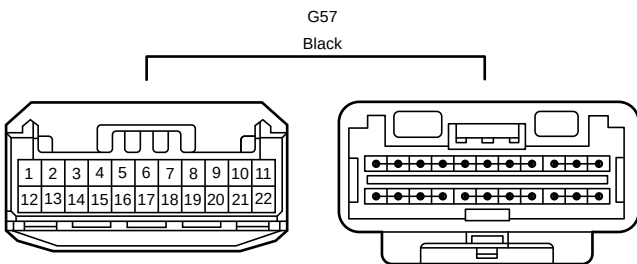 


90980-12B54

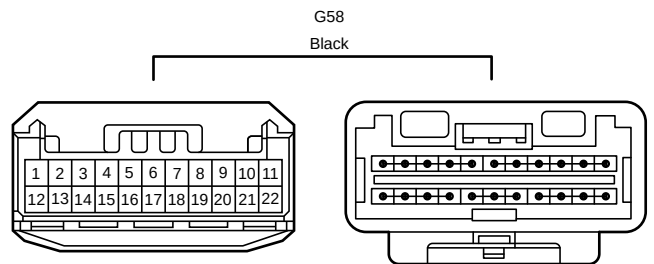 


90980-12B54

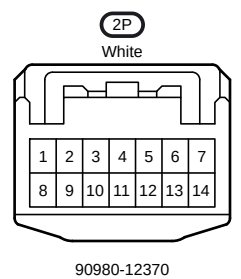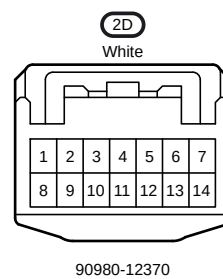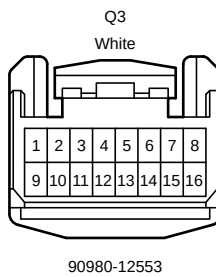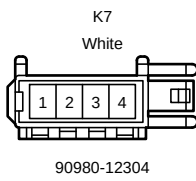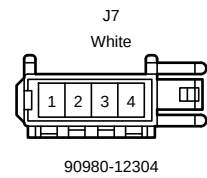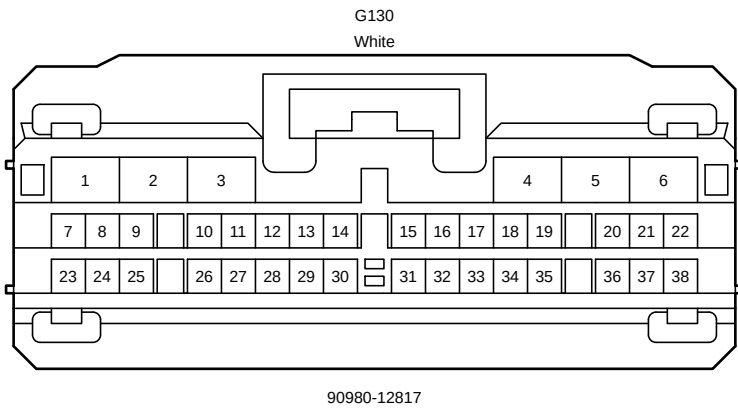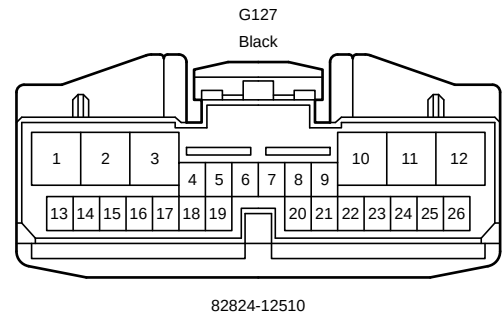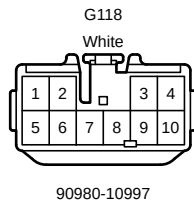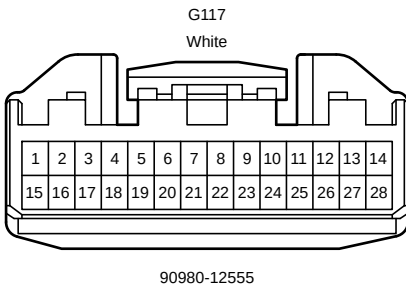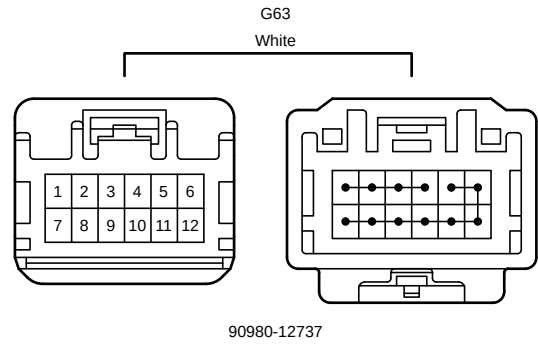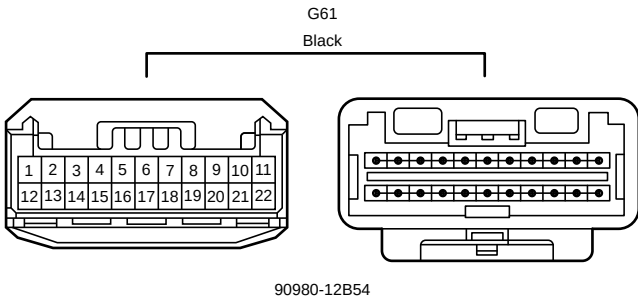             

AG1
White

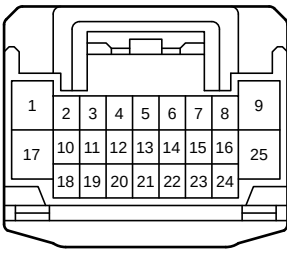 


90980-12414

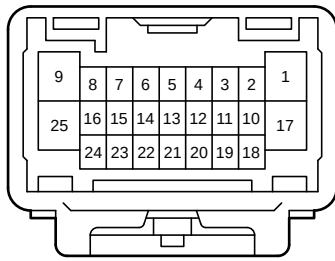 


90980-12413

 AG2
White

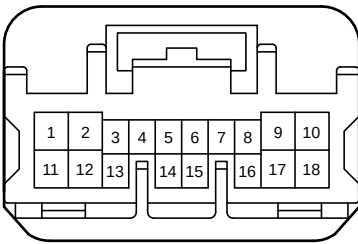


90980-12739

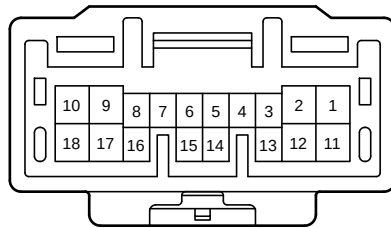 


90980-12738

 AG7
White

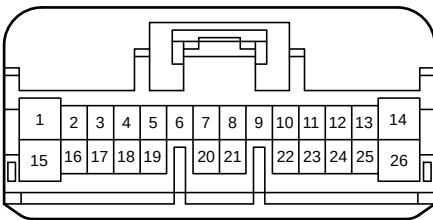


90980-12771

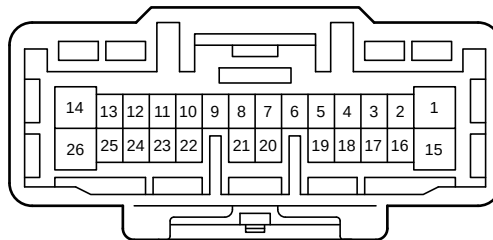 


90980-12770

 JG1
White

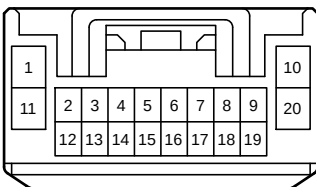

90980-12A22

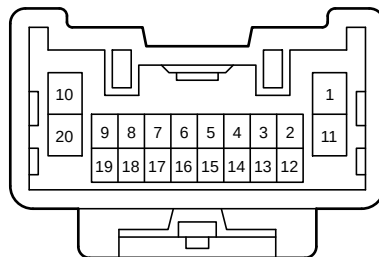 

90980-12377

