



Position of Parts in Seat (RHD)

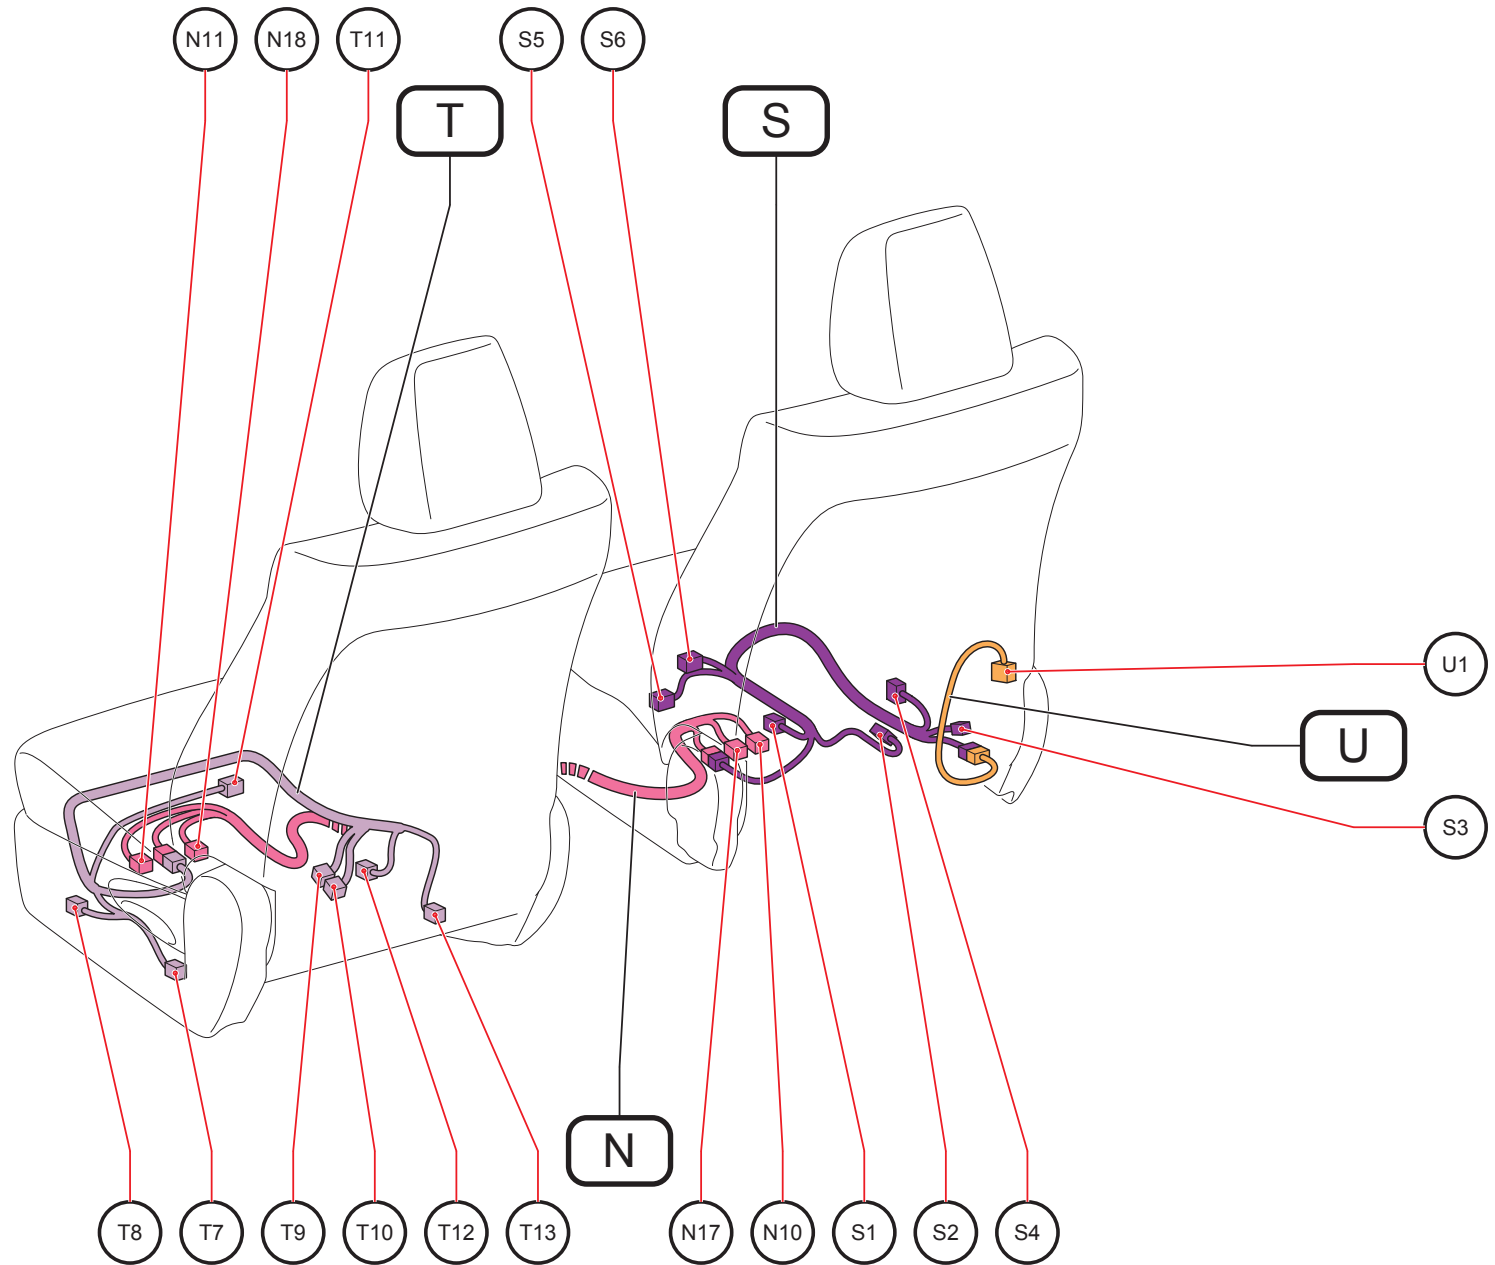


N10	Front Seat Airbag Assembly RH
N11	Front Seat Airbag Assembly LH
N17	Front Seat Inner Belt Assembly RH
N18	Front Seat Inner Belt Assembly LH
S1	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
S2	Front Power Seat Tilt Position Motor RH (Front Seat Adjuster Assembly RH)
S3	Front Power Seat Lift Position Motor RH (Front Seat Adjuster Assembly RH)
S4	Front Power Seat Switch RH
S5	Front Seat Cushion Heater Assembly RH
S6	No. 54 Junction Connector
T7	Rear Out Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
T8	Front Out Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
T9	Occupant Detection ECU
T10	Occupant Detection ECU
T11	Front Seat Inner Belt Assembly LH
T12	Front In Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
T13	Rear In Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
U1	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)


Position of Parts in Seat (RHD)

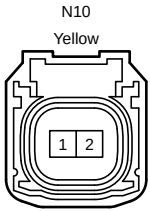


90980-12698

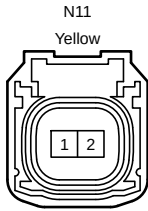


90980-12698

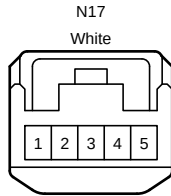


90980-12366

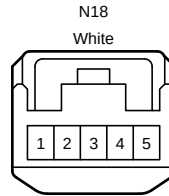


90980-12366

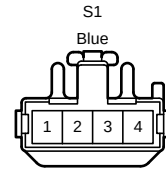


90980-12335

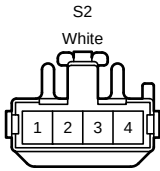


90980-12335

 


90980-12341

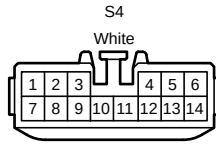


90980-10807

 


90980-11735

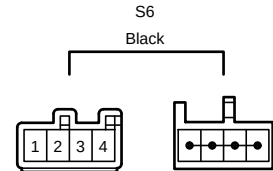


90980-11398

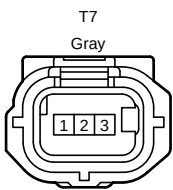


90980-12354

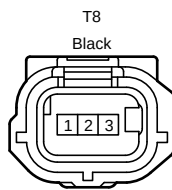


90980-12353

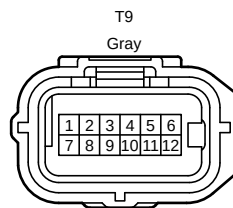


90980-12357

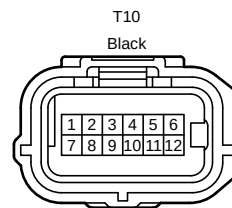


90980-12356

 


90980-11155

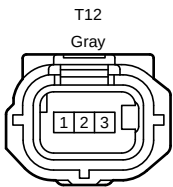

90980-12354

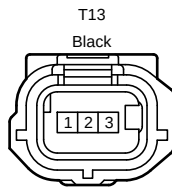

90980-12353

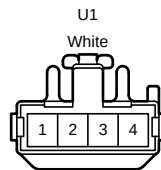

90980-12335