


Fiat Ducato 2002 – 2006 fuse box diagrams

Year of production: 2002, 2003, 2004, 2005, 2006

Main fusebox under the dashboard on driver's side for LH drive versions, on passenger's side for RH drive versions

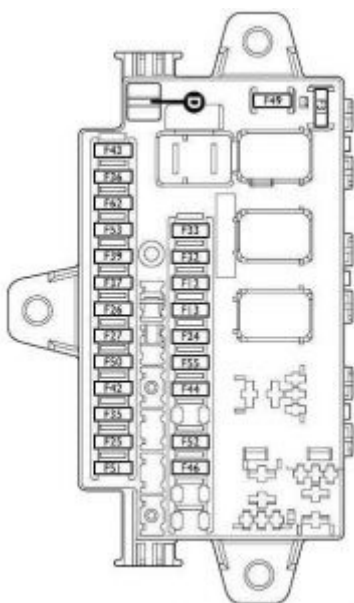


Fiat Ducato – fuse box diagram – Main fusebox under the dashboard on driver's side for LH drive versions, on passenger's side for RH drive versions

No.	A	Function
12	5	Front right-hand side light – Rear right-hand side light
13	5	Front left-hand side light – Rear left-hand side light
24	5	Control lights – Side/taillight warning light – Number plate lights
25	7.5	Radio
26	7.5	Brake lights
27	7.5	Alarm – Remote control – Chronotachograph – Phone – Cruise control – Power mirrors
31	10	Ignition switch
32	15	Radio
33	7.5	Rear fog lights
35	7.5	Door power window control – ABI
37	10	PCC – Instrument panel
39	10	EOBD diagnostic socket – Cab lights
42	7.5	ABS control unit
43	15	Windscreen washer pump
44	15	Cigar lighter
49	15	Headlight washer pump
50	7.5	Airbag control unit
51	10	PCA (Ambulance – Minibus versions)

52	20	Front current socket
53	10	Instrument panel – Hazard lights – Direction indicators
55	30	Cab fan (with Webasto system) – Webasto control unit – Cab fan (with climate control) – Cab heater fan


Fusebox under the dashboard on passenger's side for LH drive versions, on driver's side for RH drive versions

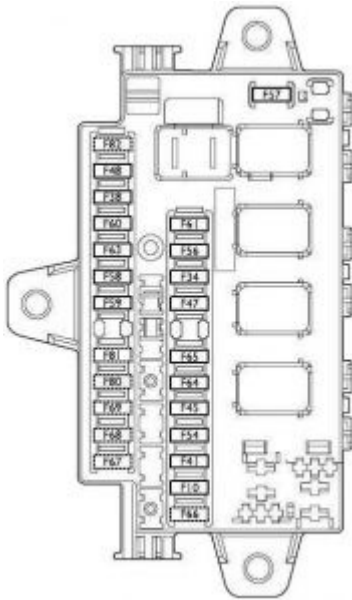

Fiat Ducato – fuse box diagram – fusebox under the dashboard on passenger's side for LH drive versions, on driver's side for RH drive versions

No.	A	Function
34	10	Chronotachograph – Phone – Alarm – Remote control
38	20	ABI for door lock
40	15	Right heated rear window
41	10	Door mirror defrosting device
45	15	Driver's seat warmer
47	20	ABI for left power window
48	20	ABI for right power window
54	15	Left heated rear window
56	30	Additional climate control
57	15	Additional heater fan
58	5	Webasto timer
59	15	Food box power
60	10	Alarm blinker
61	20	Webasto unit
63	30	Rotating lights (Ambulance versions)
64	20	Rear current socket – Siren (Ambulance versions) – Suction fan (Minibus versions)
65	10	Current socket for special set-up


Battery fusebox

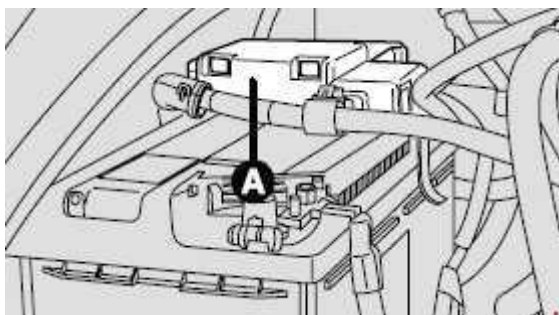

Fiat Ducato – fuse box diagram – battery fuse box

No.	A	Function
70	150	CVM protection
71	80	CFO protection
72	125	Alternator
72	70	Alternator (2.0 – 2.0 JTD with heating system)
72	100	Alternator (2.8 JTD with heating system – 2.0 JTD with climate control system)
73	70	Body-builders' current socket

Engine compartment fusebox

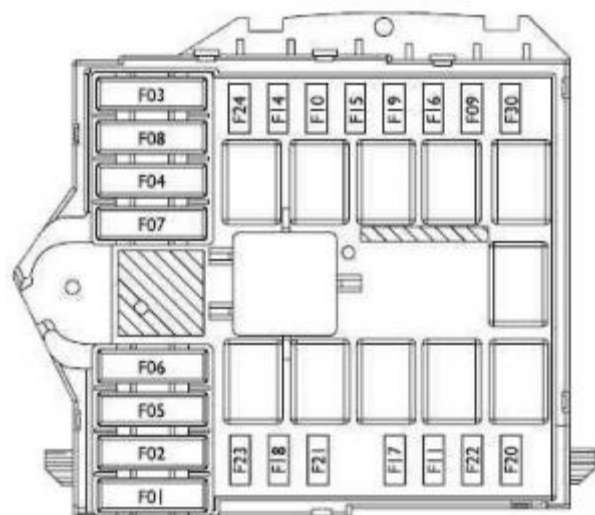

Fiat Ducato – fuse box diagram – engine

compartment fuse box

No.	A	Function
1	60	CFB protection
2	50	Glow plug preheating
3	30	Ignition switch
4	50	ABS control unit
5	30	Cab fan (climate control)
6	40	Radiator fan low-speed resistor (2.0 with climate control system) Engine control unit (2.0 with climate control system) Engine cooling fan (2.0 with climate control system) Engine control unit (2.0 with climate control system)

6	40	Engine cooling fan 1st speed Engine control unit 1st speed
7	40	Engine cooling fan (2.0 with climate control system) Engine control unit (2.0 with climate control system)
7	40/60	Engine cooling fan 2nd speed Engine control unit 2nd speed Radiator fan 2nd speed remote switch coil (climate control)
8	30	Windscreen wiper motor – Windscreen washer pump
9	15	Front fog lights
10	15	Horn – Steering column stalk control
11	10	E.I. secondary services – Engine control unit
14	10	Right-hand dipped beam headlight
15	10	Left-hand dipped beam headlight
16	7.5	E.I. system – Fiat code
17	5	E.I. primary services – Engine control unit
18	7.5	Fiat code – Engine control unit
19	7.5	Compressor
20	30	PTC
21	15	Fuel pump
22	20	E.I. primary services
23	10	Automatic gearbox control unit
24	15	Automatic gearbox control unit
30	15	Main beam headlights

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.