


GMC Yukon 2017 fuse box diagram

Engine Compartment Fuse Block

The engine compartment fuse block is in the engine compartment, on the driver side of the vehicle.

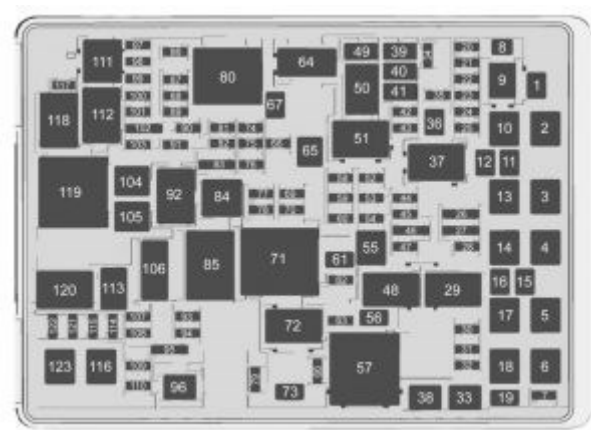

GMC Yukon – fuse box – engine compartment

Item	Usage
1	Electric Running Boards
2	ABS Pump
3	Interior BEC LT1
4	Passenger motorized safety belt
5	Suspension Leveling Compressor
6	4WD Transfer Case Electronic Control
7	—
8	—
9	—
10	Electric parking brake
11	—
12	—
13	Interior BEC LT2
14	Rear BEC 1
15	—
16	—
17	Driver motorized safety belt


18	—
19	—
20	—
21	ALC Exhaust Solenoid
23	Integrated Chassis Control Module
24	Real Time Dampening
25	Fuel Pump Power Module
26	-/Battery Regulated Voltage Control
27	—
28	Upfitter 2
29	Upfitter 2 Relay
30	Wiper
31	TIM
32	—
33	—
34	Reverse lamps
35	ABS Valve
36	Trailer Brakes
37	Upfitter 3 Relay
38	—
39	Right trailer stoplamp/Turn signal lamp
40	Left trailer stoplamp/turn signal lamp
41	Trailer parking lamps
42	Right Parking Lamps
43	Left Parking Lamps
44	Upfitter 3
45	Automatic Level Control Run/Crank
46	—
47	Upfitter 4
48	Upfitter 4 Relay
49	Reverse Lamps
50	—
51	Parking Lamp Relay
52	—
53	—

54	—
55	—
56	—
57	—
58	—
59	Euro Trailer
60	A/C Control
61	—
62	—
63	Upfitter 1
64	—
65	—
66	—
67	Trailer Battery
68	—
69	RC Upfitter 3 and 4
70	VBAT Upfitter 3 and 4
71	—
72	Upfitter 1 Relay
73	—
74	Engine Control Module Ignition
75	Miscellaneous Ignition Spare
76	Transmission Ignition
77	RC Upfitter 1 and 2
78	VBAT Upfitter 1 and 2
79	—
80	—
81	—
82	—
83	Euro Trailer RC
84	Run/Crank Relay
85	—
86	—
87	Engine
88	Injector A – Odd

89	Injector B – Even
90	O2 Sensor B
91	Throttle Control
92	Engine Control Module Relay
93	Horn
94	Fog Lamps
95	High-Beam Headlamps
96	—
97	—
98	—
99	—
100	O2 Sensor A
101	Engine Control Module
102	Engine Control Module/ Transmission Control Module
103	Auxiliary Interior Heater
104	Starter
105	—
106	—
107	Aeroshutter
108	—
109	Police Upfitter
110	—
111	—
112	Starter Relay
113	—
114	Front Windshield Washer
115	Rear Window Washer
116	Left cooling fan
117	Fuel pump prime
118	—
119	—
120	Fuel pump prime
121	Right HID Headlamp
122	Left HID Headlamp
123	Right cooling fan

Instrument Panel Fuse Block (Left)

The left instrument panel fuse block access door is on the driver side edge of the instrument panel.

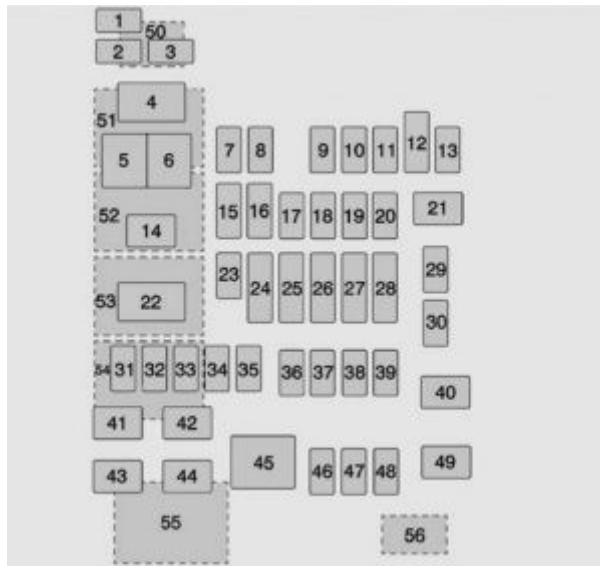


GMC Yukon – fuse box – instrument panel (left)

Number	Usage
1	—
2	—
3	—
4	Accessory Power Outlet 1
5	Retained Accessory Power/Accessory
6	APO/BATT
7	Universal Garage Door Opener/Inside Rear View Mirror
8	SEO Retained Accessory Powe
9	—
10	Body Control Module 3
11	Body Control Module 5
12	Steering Wheel Controls Backlighting
13	—
14	—
15	—
16	Discrete Logic Ignition Sensor
17	Video processing module
18	Mirror Window Module
19	Body Control Module 1
20	Front Bolster (if equipped)
21	—
22	—

23	—
24	HVAC/Ignition
25	Instrument Cluster Ignition/Sensing Diagnostic Module Ignition
26	Tilt Column/SEO, Tilt Column Lock 1/SEO
27	Data Link Connector/ Driver Seat Module
28	Passive entry/Passive start/HVAC battery
29	Content theft deterrent
30	—
31	—
32	—
33	SEO/Automatic Level Contro
34	Park Enable Electric Adjustable Pedal (if equipped)
35	—
36	Miscellaneous R/C
37	Heated Steering Wheel
38	Steering Column Lock 2 (if equipped)
39	Instrument Cluster Battery
40	—
41	—
42	Euro Trailer (if equipped)
43	Left Doors
44	Driver Power Seat
45	—
46	Right heated, cooled, or ventilated seat (if equipped)
47	Left heated, cooled, or ventilated seat (if equipped)
48	—
49	—
50	Accessory Power Outlet 2
51	—
52	Retained accessory power relay
53	Run/Crank Relay
54	—
55	—
56	—

Instrument Panel Fuse Block (Right)

The right instrument panel fuse block access door is on the passenger side edge of the instrument panel.

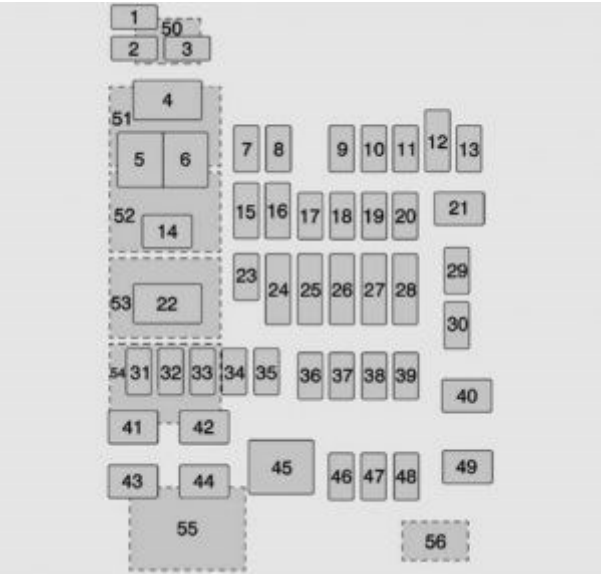

GMC Yukon – fuse box – instrument panel (right)


Item	Usage
1	—
2	—
3	—
4	Accessory Power Outlet 4
5	—
6	—
7	—
8	Glove Box
9	—
10	—
11	—
12	Steering Wheel Controls
13	Body Control Module 8
14	—
15	—
16	—

17	—
18	—
19	Body Control Module 4
20	Rear Seat Entertainment
21	Sunroof
22	—
23	—
24	—
25	—
26	Infotainment/Airbag
27	—/RF window switch/ Rain sensor
28	Obstacle Detection/USB
29	Radio
30	—
31	—
32	—
33	—
34	—
35	—
36	Special equipment option B2
37	Special equipment option
38	Body control module 2
39	A/C Inverter
40	—
41	—
42	—
43	—
44	Right Door Window Motor
45	Front Blower
46	Body Control Module 6
47	Body Control Module 7
48	Amplifier
49	Right Front Seat
50	Accessory Power Outlet 3
51	—

52	Retained accessory power relay
53	—
54	—
55	—
56	—

Rear Compartment Fuse Block

The rear compartment fuse block is behind the access panel on the left side of the compartment

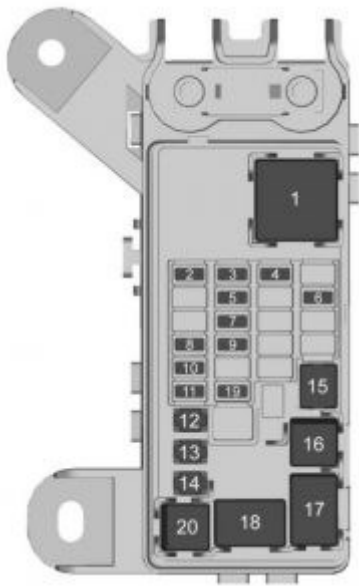

GMC Yukon – fuse box – rear compartment

Items	Usage
1	Rear defogger relay
2	Left heated second row seat
3	Right heated second row seat
4	Heated Mirrors
5	Liftgate
6	Glass Breakage
7	Liftglass
8	Liftgate Module Logic
9	Rear Wiper
10	Rear HVAC blower
11	Second Row Seat
12	Second row seat
13	Liftgate module
14	Rear accessory power outlet

15	Rear defogger
16	Liftgate
17	Liftglass
18	Rear fog lamp (if equipped)
19	Rear fog lamp (if equipped)
20	Heated mirror