

xB

2009

EMAIL

www.scion.com
→ Contact

-

CHAT

www.scion.com
→ Have a Question?
→ Contact

-

PHONE

1.866.70.SCION

-

MAIL

SCION
19001 S. Western Ave.
D102, P.O. Box 2742
Torrance, CA 90509-2742
USA

-

WEB

www.scion.com

-

QUICK REFERENCE GUIDE

GET INFORMED.
ROLL.

©2009 Scion, a marque of
Toyota Motor Sales, U.S.A., Inc.

00505-QRG09-XB



what moves you

2009 Scion xB Quick Reference Guide

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	7
Hood release	6
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	6

FEATURES/OPERATIONS

Air Conditioning/Heating	12
Auto lock functions²	8
Automatic Transmission	8
AUX audio jack	13
Bottle holders	14
Cruise control	11
iPod jack	14
Lights & turn signals	10
Multi-information display	15
Parking brake	8
Power outlet	14
Seat adjustments-Front	9
Seat-Folding down rear seat	9
Seats-Head restraints	9
Steering wheel switches	13
Tilt steering wheel	12
Windows	11
Window wipers & washers	10

SAFETY AND

EMERGENCY FEATURES


Door locks	16
Doors-Child safety locks	16
Seat belts	16
Seat belts-Shoulder belt anchor	16
Spare tire & tools	17
Tire Pressure Monitoring (warning) System	17

¹ Visit your Toyota dealer for information on customizing this feature.


² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

OVERVIEW

Instrument panel

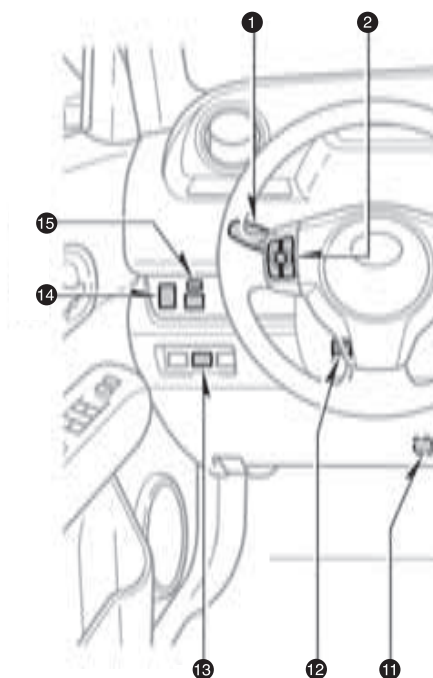


- ❶ Headlight and turn signal controls
- ❷ Steering wheel audio controls¹
- ❸ Wiper and washer controls
- ❹ Rear window defogger switch
- ❺ Air Conditioning controls
- ❻ Front passenger occupant classification indicator/
Front passenger seat belt reminder light
- ❼ Power outlet
- ❽ Emergency flasher button

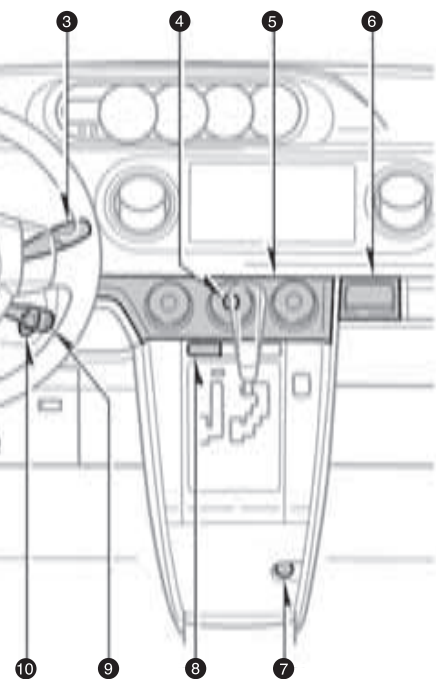

- ⑨ Cruise control
- ⑩ Engine switch
- ⑪ Tire Pressure Monitoring (warning) System reset
- ⑫ Tilt steering lock release
- ⑬ “VSC OFF” (Vehicle Stability Control “OFF”)
- ⑭ Instrument panel light control dial
- ⑮ Power outside rearview mirror controls

¹ For details, refer to the *SCION Audio System Owner’s Manual* or *SCION Navigation System Owner’s Manual*.

Instrument cluster

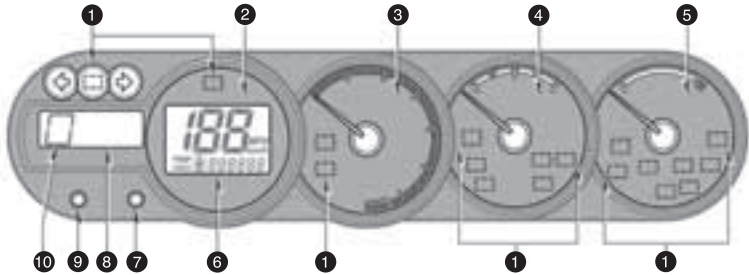

- ❶ Service indicator and reminder
- ❷ Speedometer
- ❸ Tachometer
- ❹ Fuel gauge
- ❺ Engine coolant temperature
- ❻ Odometer and two trip meters
- ❼ Trip meter reset knob
- ❽ Multi-information display
- ❾ Multi-information display control switch
- ❿ Automatic Transmission shift position indicator

Indicator symbols

	Brake system warning ¹
	Driver seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning ¹
	Airbag SRS warning ¹
	Low Tire Pressure Warning ¹
	Engine oil replacement reminder ¹
	Front passenger occupant classification indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Turn signal indicator
	Low fuel level warning ¹
	Slip indicator
	Vehicle Stability Control "OFF" indicator
	Cruise control indicator ²
	Electric power steering system warning ¹
	Anti-lock Brake System warning ¹

¹ For details, refer to "Service reminder indicators and warning buzzers," Section 1-6, 2009 Owner's Manual.

² If this light flashes, refer to "Cruise control," Section 1-7, 2009 Owner's Manual.

Keyless entry

Locking operation



Push 

Unlocking operation



Push ONCE: Driver door
TWICE: ALL doors 


NOTE: After unlocking, if a door is not opened within 60 seconds, all doors will relock for safety.


Panic button



Push and hold 

Hood release

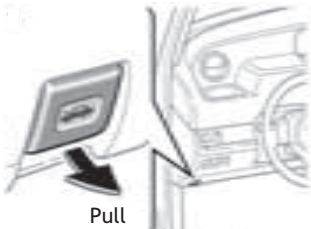

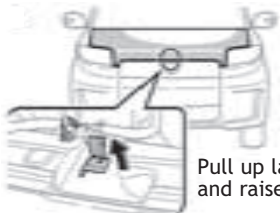

Pull

Pull up latch and raise hood


Light control-Instrument panel



Bright


Dark

Fuel tank door release and cap

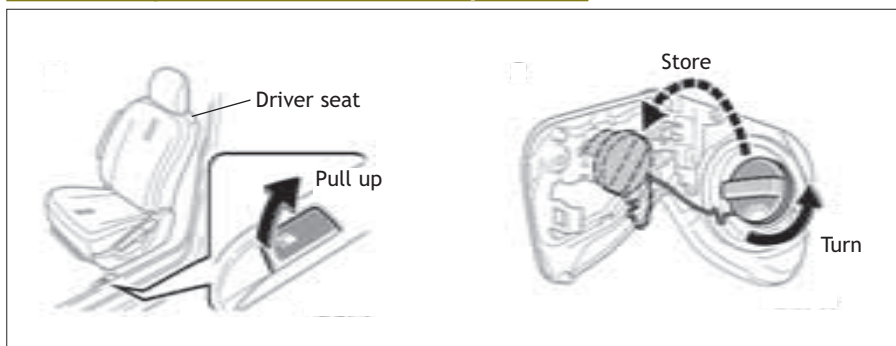

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Engine maintenance

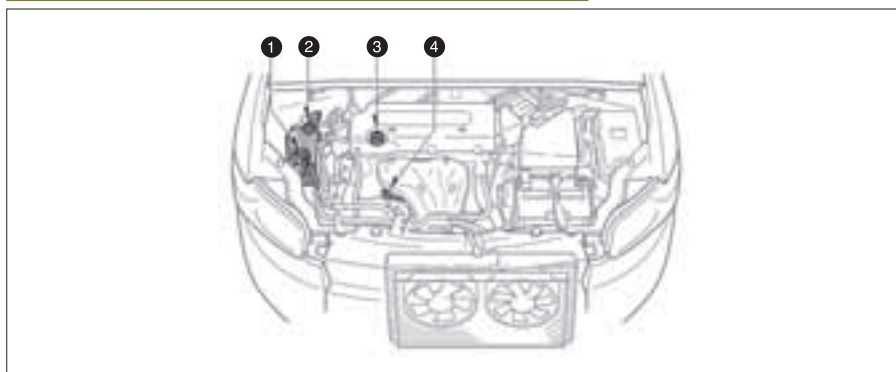

- ❶ Windshield washer fluid tank
- ❷ Engine coolant reservoir
- ❸ Engine oil filler cap
- ❹ Engine oil level dipstick

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS

Auto lock functions


Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.*
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when ignition key is turned to “ACC” or “LOCK” position and driver’s door is opened.
- Doors unlock when shifting into Park.*

* Automatic Transmission only

Refer to the *Owner’s Manual* for more details.

Automatic Transmission (if equipped)

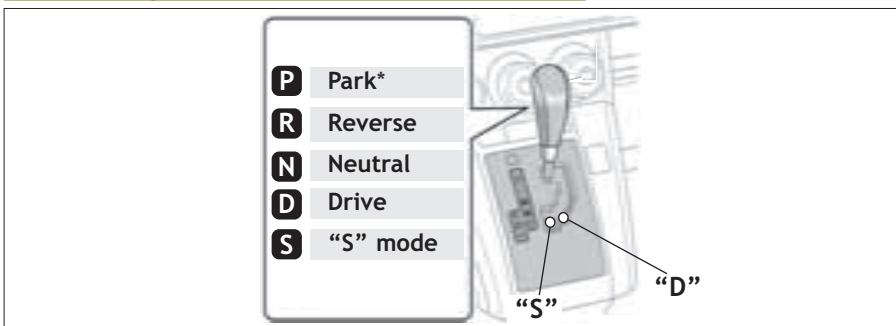

* The engine switch must be ON, and the brake pedal depressed to shift from Park.

“S” (Sequential) mode


Push shift lever to the left from “D” position.

“S” position:

- +: Upshift (push and release)
- : Downshift (pull and release)


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Parking brake

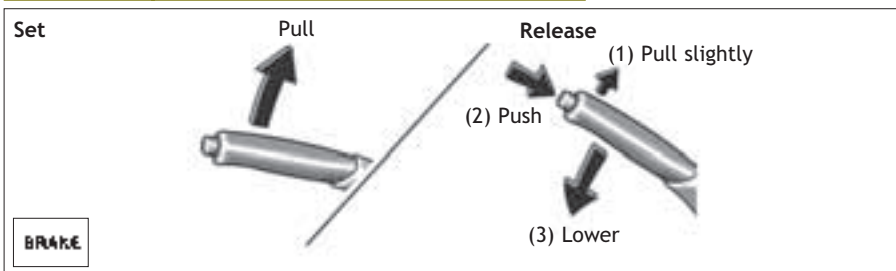


Seats-Head restraints

Front

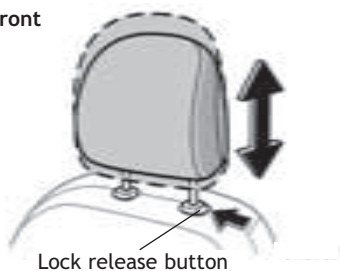

Rear


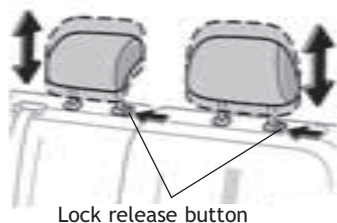


Seat adjustments-Front




- ① Position
- ② Height crank (driver side only)
- ③ Seatback angle

Seat-Folding down rear seat

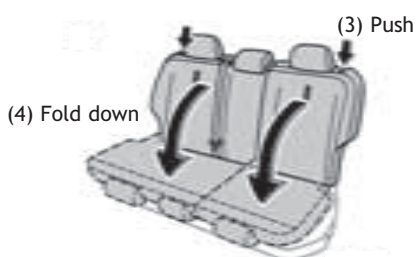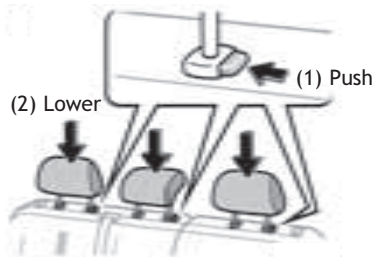


Lights & turn signals

Headlights

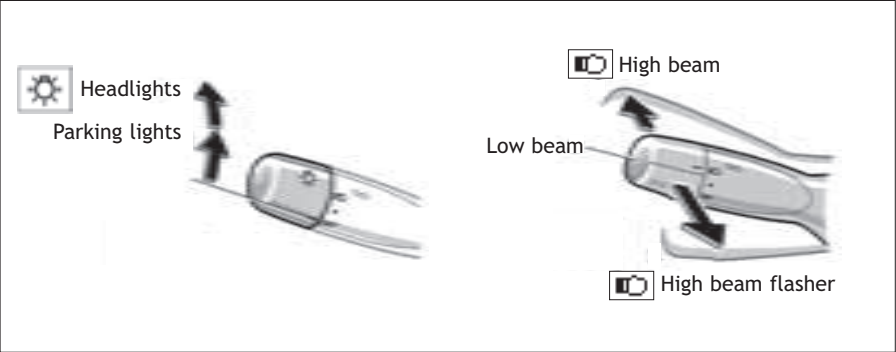


Turn signals

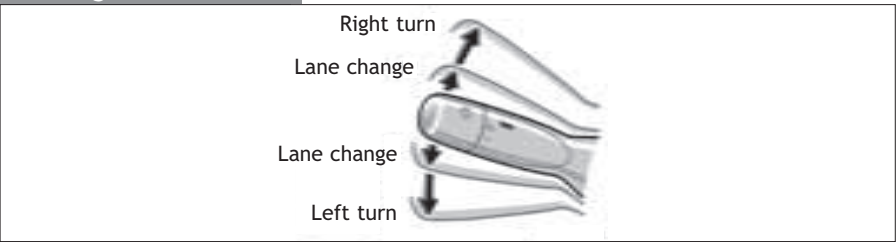


Window wipers & washers

Front


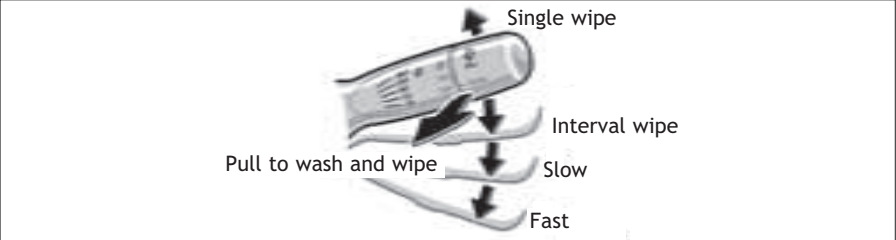


Rear

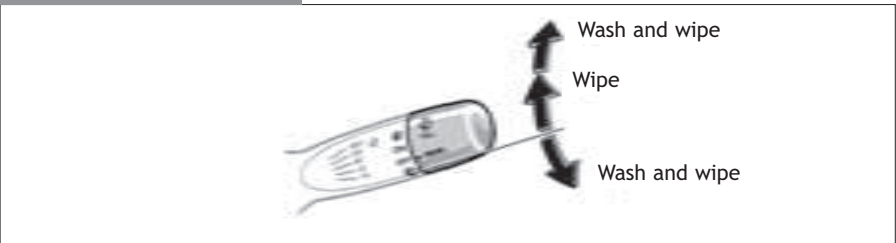

Windows

Driver side

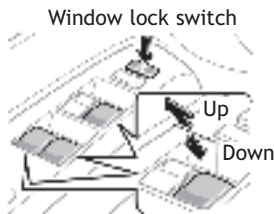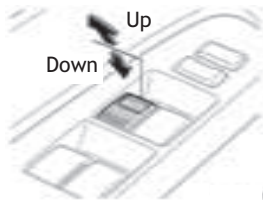


Automatic operation (driver side only) Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Cruise control

System ON/OFF

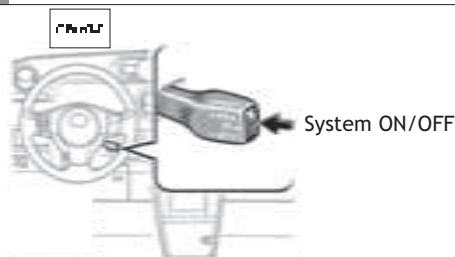


Functions

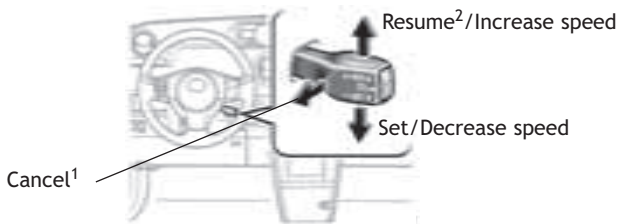

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed reaches 25 mph.

Tilt steering wheel

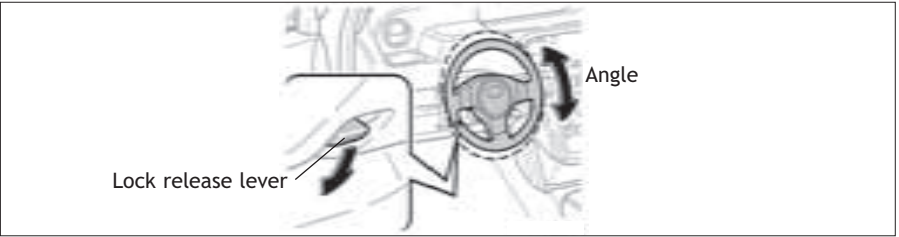

Hold wheel, push lever down, set angle and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Air Conditioning/Heating

A line drawing of the vehicle's climate control panel. It features three large circular knobs and several smaller buttons. Numbered callouts (1 through 6) point to specific controls: 1 points to the leftmost knob (Airflow vent), 2 points to the middle knob (Fan speed), 3 points to the rightmost knob (Temperature), 4 points to a button below the right knob (Air Conditioning ON/OFF), 5 points to a button in the center (Rear window defogger), and 6 points to a button on the left (Fresh or recirculated cabin air).

1 Airflow vent
In “” or “” mode, fresh air (“” indicator “OFF”) reduces window fogging.

2 Fan speed


3 Temperature

4 Air Conditioning ON/OFF
Use fresh air to quickly cool interior, then change to recirculate for cooler air.

5 Rear window defogger

6 Fresh or recirculated cabin air

Steering wheel switches

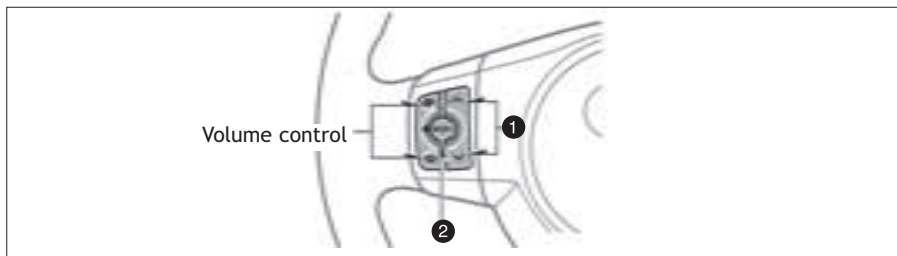

1 “^ v”

-In **radio mode** Push to select a preset station; push and hold to seek the next strong station.


-In **CD mode** Push to skip up or down to a next/previous track.

2 “MODE”

Push to turn audio “ON” and select an audio mode. Push and hold to turn the audio system “OFF.”

Refer to the *SCION Audio System Owner’s Manual* or *SCION Navigation System Owner’s Manual* for more details.

AUX audio jack

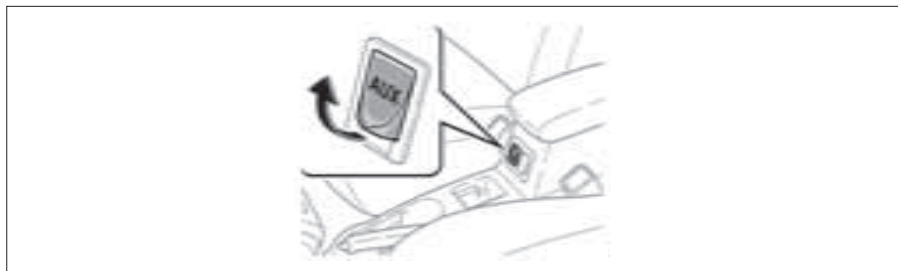

By inserting a mini plug into the AUX jack, you can listen to music from a portable audio device through the vehicle’s speaker system.

If you do not have a SCION genuine audio system, you will not be able to use the AUX jack.

Refer to the *SCION Audio System Owner’s Manual* or *SCION Navigation System Owner’s Manual* for more details.

iPod jack




By inserting an iPod customer cable connector into the iPod jack, you can charge the iPod battery and listen to music from your iPod through the vehicle's speaker system.

If you do not have a SCION genuine audio system, you will not be able to use the iPod jack.

Refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual* for more details.

Power outlet

Instrument panel

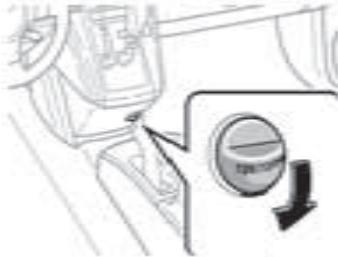



Designed for car accessories. Key must be in the "ACC" or "ON" position to use.

Bottle holders

Front door



Multi-information display

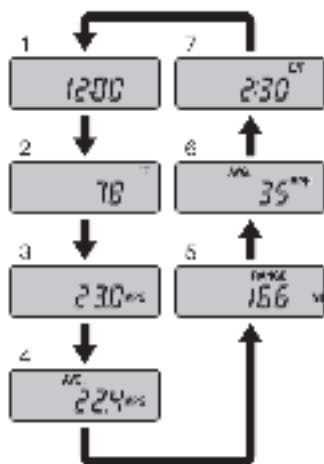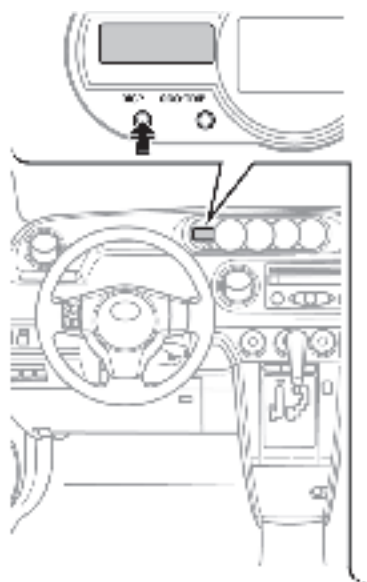


Push “DISP” to change information in the following succession:


- (1) Clock
- (2) Outside temperature
- (3) Current gas mileage (MPG)
- (4) Average gas mileage (AVG/MPG)
- (5) Miles left on remaining fuel (RANGE/MI)
- (6) Average vehicle speed from engine start (AVG/MPH)
- (7) Running time from engine start (E/T)

SAFETY AND EMERGENCY FEATURES

Door locks

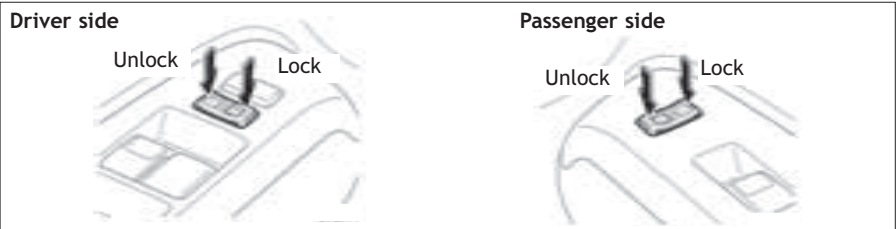


Doors-Child safety locks

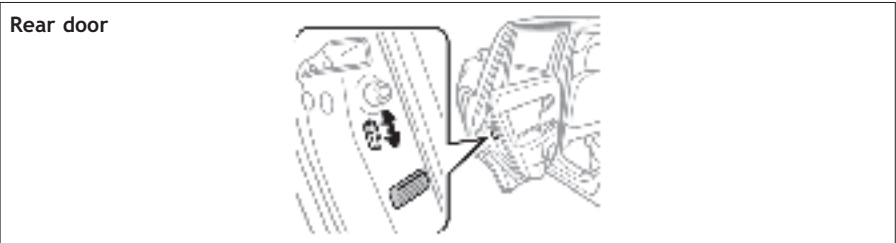


Moving the lever to “LOCK” will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

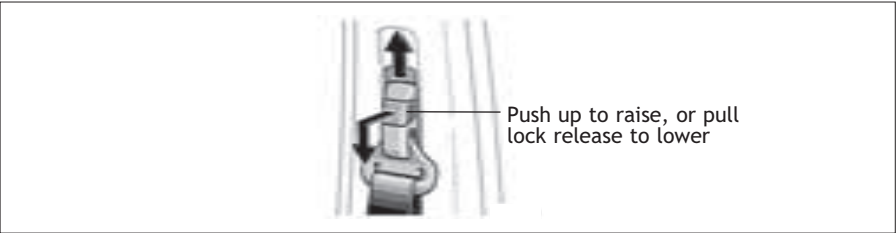

Seat belts

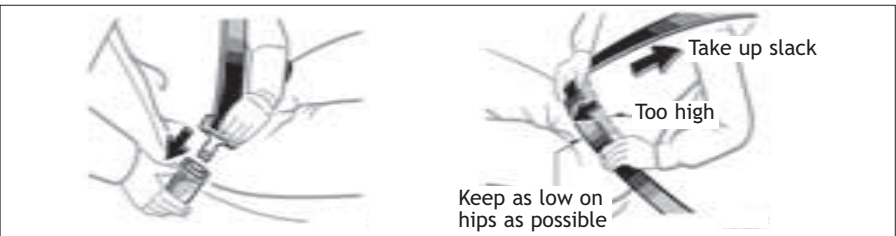

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner’s Manual*.

2009 Scion xB

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Scion xB.

! A word about safe vehicle operations


This *Quick Reference Guide* is not a full description of Scion xB operations. Every Scion xB owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Tire Pressure Monitoring (warning) System

If tire pressure indicator light is on, check/adjust each tire.

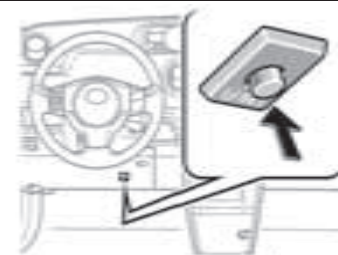


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Then allow the vehicle to sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


Spare tire & tools

Tool and spare tire location

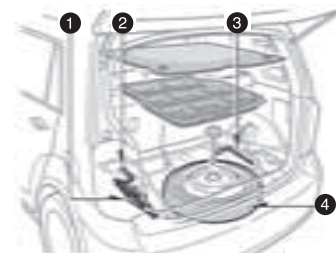

- ① Jack
- ② Jack handle
- ③ Wheel nut wrench
- ④ Spare tire

Removing the spare tire

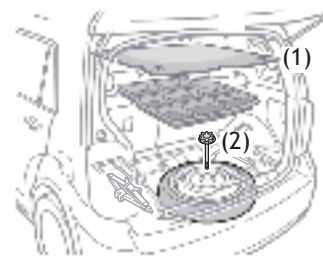

- (1) Remove the spare tire cover.
- (2) Loosen and remove the bolt.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.