

HANDBOOK



PEUGEOT 508 RXH





On-line handbook

You can find your handbook on the PEUGEOT website, under "Personal space".

This personal space offers advice and other useful information for the care and maintenance of your vehicle.

Referring to the handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



Please note the following point:

The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system. Please note this specific warning. It is advisable to contact a PEUGEOT dealer to be shown the recommended equipment and accessories.



If the "Personal space" function is not available on the PEUGEOT public website for your country, you can find your handbook at the following address:

<http://public.servicebox.peugeot.com>

Select:

- › The Vehicle documentation link in the home page (no registration is needed),
- › the language,
- › the vehicle, its body style,
- › the print edition of your handbook appropriate for the date of registration of your vehicle.

You have access to your handbook on line, together with the latest information, identified by the symbol:



WELCOME


Thank you for choosing a 508 RXH.

This handbook has been designed to enable you to make the most of your vehicle in all situations.

Therefore, on the first few pages, you will find a detailed summary followed by a quick reference guide intended to make it easier for you to become familiar with your vehicle.

All of the details specific to your vehicle, comfort, safety, practical information, are then presented in this handbook, to increase your appreciation of the vehicle and to help you make the most of it.

Each model may only be fitted with some of the equipment shown in this handbook, depending on the trim level, model, version and specification for the country in which it is sold.

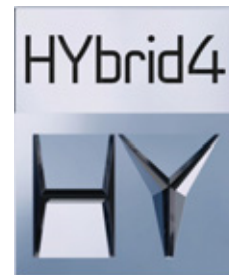

Key



Warning:

this symbol marks warnings which it is essential to observe for your own safety, for the safety of others or to avoid any risk of damaging your vehicle.



Protection of the environment:

this symbol accompanies advice relating to protection of the environment.



Information:

this symbol draws your attention to additional information for better use of your vehicle.



Page reference:

this symbol invites you to refer to the pages which provide details of the function.

Familiarisation	1	Access	2	Driving	4
		Remote control key	70	Electric parking brake	123
		Alarm	80	6-speed electronic gearbox	130
		Electric windows	82	Hill start assist	134
		Boot	84	Head-up display	135
		Motorised tailgate	85	Speed limiter	138
		Panoramic sunroof	88	Cruise control	140
		Fuel tank	89	Parking sensors	142
		Diesel misfuel prevention	90	Parking space sensors	144
Hybrid system	■				
Presentation	22				
Starting / switching off	25				
Ready lamp	29				
HYbrid4 mode selector	29				
Energy consumption / generation indicator	32				
Display of hybrid power flow	33				
HYbrid4 frequently asked questions	36				
Eco off	39				
Eco-driving	40				
Consumption	42				
High voltage battery	43				
Car washing machine or tunnel	47				
Vehicle recovery	48				
Instruments and controls	1	Comfort	3	Visibility	5
Instrument panel	49	Front seats	92	Lighting controls	146
Indicator and warning lamps	50	Rear seats	96	LED lamps	149
Gauges and indicators	61	Mirrors	98	Automatic illumination of headlamps	151
Trip computer	66	Steering wheel adjustment	100	Headlamp adjustment	154
Setting the date and time	69	Interior fittings	101	Directional lighting	155
		Boot fittings	104	Wiper controls	156
		Heating and Ventilation	110	Automatic rain sensitive wipers	158
		Dual-zone digital air conditioning	112	Courtesy lamps	160
		Quad-zone digital air conditioning	115	Interior mood lighting	161
		Rear screen demist - defrost	120		
		Programmable Heating / Ventilation	121		

6 Child safety

Child seats	162
ISOFIX child seats	168
Child lock	171

7 Safety

Direction indicators	172
Emergency or assistance call	173
Horn	173
ESC system	174
Seat belts	177
Airbags	180

8 Practical information

Temporary puncture repair kit	184
Changing a wheel	190
Snow chains	195
Changing a bulb	196
Changing a fuse	203
12 V battery	207
Energy economy mode	210
Changing a wiper blade	211
Recovering the vehicle	212
Vehicle recovery	214
Towing a trailer	215
Fitting roof bars	217
Very cold climate screen	217
Accessories	218

9 Checks

Opening the bonnet	221
Running out of fuel (Diesel)	222
Diesel engine	223
Checking levels	224
Checks	227

10 Technical data

Electric motor	230
Diesel engine	231
Diesel weights	232
Dimensions	233
Identification markings	234

 Audio equipment and telematics

Emergency or assistance	235
JBL equipment	237
Peugeot Connect Navigation (RT6)	239

 Alphabetical index

 Visual search

Presentation of the HYbrid4 system

Thank you for choosing this HYbrid4 vehicle, which has characteristics that are different from conventional vehicles.

Study this handbook to learn about the specific hybrid functions and for more information, refer to the "Hybrid System" section.


22

The HYbrid4 technology allows two sources of energy to be associated in an effective manner: the Diesel HDI engine, which drives the front wheels and the electric motor, which drives the rear wheels.

These two motors can operate alternately or simultaneously, according to the hybrid mode selected and the driving conditions.

The electric motor alone provides power for the vehicle in "ZEV" (Zero Emissions Vehicle) mode, and in "Auto" mode for running at low speed and low load. It also assists the Diesel engine when moving off, accelerating and changing gear.

The battery that powers the electric motor is recharged during phases of deceleration and stores the energy for subsequent use.

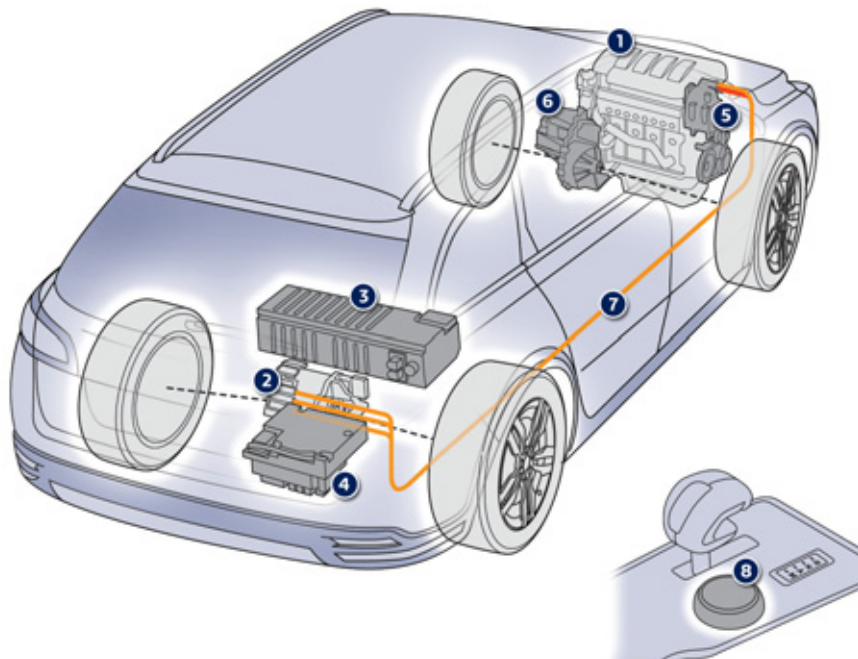

- | | |
|---|--------------------------------|
| 1. Diesel HDI engine (front wheel drive). | 6. 6-speed electronic gearbox. |
| 2. Electric motor (rear wheel drive). | 7. Electrical flow. |
| 3. 200 V battery. | 8. HYbrid4 mode selector. |
| 4. Electronic power supervisor. | |
| 5. Stop & Start system. | |

For economical driving, caring for the environment

The fuel **consumption** of a vehicle **varies greatly**:

- according to the driver's **style of driving** (moderate, aggressive, fast, ...),
- according to the **type of journeys** made (urban, main road, motorway, flowing, heavy traffic, ...) and the speed.

Main recommendations for driving economically

Hybrid mode selector

To optimise fuel consumption, use the **Auto mode** of the selector whenever possible (the mode is activated automatically when starting) including for urban journeys.

This mode optimises the use of the energy sources (internal combustion engine and/or electric) contrary to other modes, which are for use in particular cases.

Gear lever

Use the **automatic** mode **A** as much as possible as this optimises gear changes to suit the requirements.

Drive smoothly

Stay in the "eco" zone displayed in the energy consumption / generation indicator: accelerate gently, drive at steady speeds using the speed limiter or cruise control as soon as possible.

Use the "charge" zone: anticipate the need to slow down by taking your foot off the accelerator rather than braking. The movement of the energy consumption / generation indicator needle (into the "charge" zone), shows the level of energy recovery.

Consumption history

See the impact of your style of driving and the type of journey by reviewing the history of your energy consumption. Refer to the "Multifunction screens" section.

Causes of high consumption and checks

As with any vehicle, limit overloading, wind resistance (windows open above 30 mph (50 km/h), roof rack, loaded or not, ...), the use of power consumers (air conditioning, heated seats, heated rear screen, ...).

Observe the recommendations on checks (regular check of tyre pressures, correct tyre pressures, ...) and routine servicing.




Exterior

Electronic key: Keyless Entry and Starting

This system allows you to unlock, lock and start your vehicle while keeping the key on your person and in the defined zone around the vehicle.


▶ 25, 71

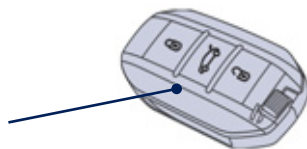

Motorised tailgate

This system provides motorised opening and closing of the tailgate, by pressing a button.

▶ 85

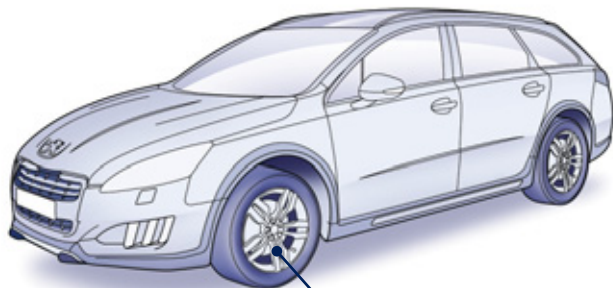

Temporary puncture repair kit

This kit is a complete system consisting of a compressor and a sealant cartridge, to allow the temporary repair of a tyre.

▶ 184




Front and rear parking sensors

This system provides a warning when manoeuvring forwards and backwards by detecting obstacles located in front of or behind the vehicle.

▶ 142


Opening

Keyless Entry and Starting system

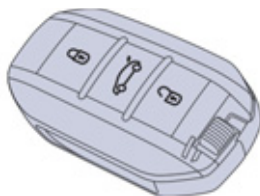

Unlocking

With the electronic key on your person and in the defined zone around the vehicle, pass your hand behind the door handle to unlock the vehicle, then pull on the handle to open the door.

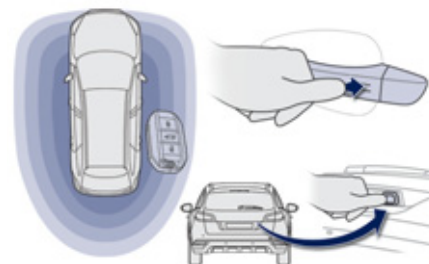


Locking

With the electronic key in the defined zone around the vehicle, press with a finger on the door handle (at the markings) to lock the vehicle.

▶ 71, 74

Opening

Remote control key

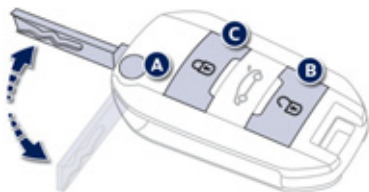

- A. Unfolding / Folding the key.
- B. Unlocking the vehicle.




Other functions...


- C. Normal locking of the vehicle
Vehicle location.



Fuel tank

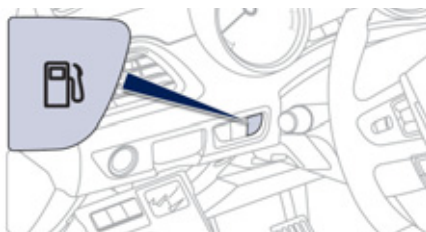

1. Opening the fuel filler flap.

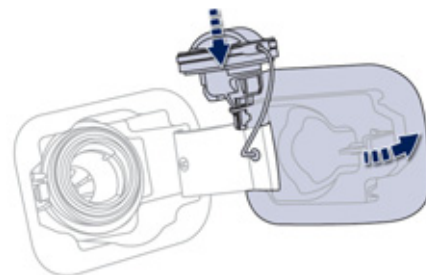

2. Opening and hooking the fuel filler cap.
Tank capacity: approximately 72 litres.



Interior

Interior mood lighting

This subdued passenger compartment lighting improves visibility inside the vehicle in low light conditions.




161

Head-up display

This system projects speed and cruise control/speed limiter information onto a smoked strip in the driver's field of vision, so that they do not need to take their eyes off the road.



135

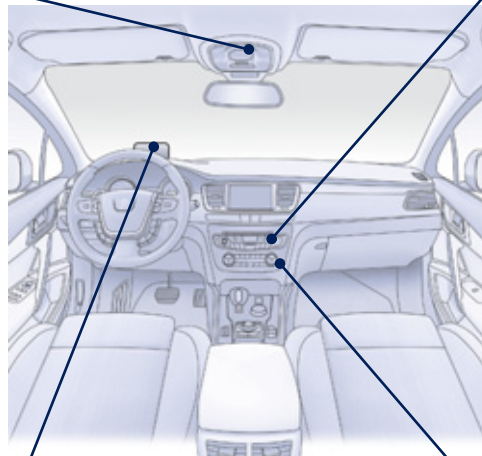

Audio and communication system

This system benefits from the latest technology: MP3 compatible audio system, USB player, Bluetooth hands-free system, satellite navigation system with colour screen, auxiliary inputs, Hi-Fi audio system, ...

Peugeot Connect Navigation (RT6)



239

If your vehicle is fitted with a JBL Hi-Fi audio system, this is designed specifically for the passenger compartment of your vehicle.

Refer to the "Audio and telematics" section.

Digital air conditioning

After setting the desired level of comfort, the system then automatically controls this level according to the ambient conditions.

Dual-zone




112

Quad-zone



115

Switch panels

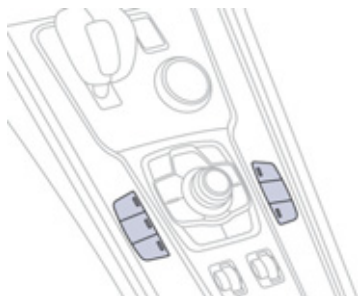

Illumination of the lamp indicates the state of the corresponding function.



Massage.

▶ 95



Adaptive lighting

▶ 152




Parking space sensor.

▶ 144



Alarm.

▶ 80

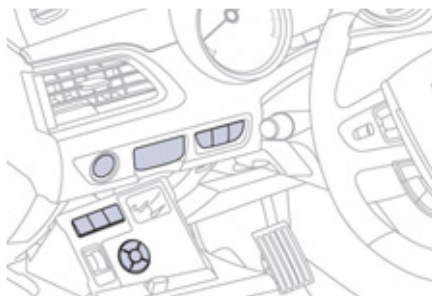

Starting/stopping using the electronic key.

▶ 25-26



Peugeot Connect SOS

▶ 236



Electric parking brake.

▶ 123



Opening the boot.

▶ 73, 84



Opening the fuel filler flap.

▶ 89



Deactivation of the DSC system.

▶ 176



Electric child lock.

▶ 171



Programmable heating warning lamp.

▶ 121



Deactivation of parking sensors.

▶ 143



Inhibition of internal combustion engine stop.

▶ 39



Head-up display (on/off, settings).

▶ 135, 136

Sitting comfortably

Front seats


Electrical adjustment

1. Angle, seat height and seat forwards-backwards adjustment.
2. Backrest angle adjustment.
3. Lumbar support adjustment.




Instruments and controls

1. Cruise control / speed limiter controls.
2. Headlamp height adjustment.
3. Lighting and direction indicator stalk
4. Instrument panel.
5. Driver's airbag.
Horn.
6. Gear selector.
7. HYbrid4 mode selector.
8. 12 V accessory socket
USB port / auxiliary socket.
9. Bonnet release lever.
10. Fusebox.
11. Front door window demisting/defrosting vent.
12. Windscreen demisting/defrosting vent.
13. Steering lock and starting with the key.
14. Starting using the electronic key.
15. Audio equipment steering wheel controls.
16. Wiper / screenwash / trip computer stalk.
17. Central locking and hazard warning buttons.
18. Screen.
19. Central adjustable air vents.
20. Passenger's airbag.
21. Side adjustable air vents.
22. Glove box / Passenger's airbag deactivation.
23. Electric parking brake.
24. Central armrest with storage.
25. Storage (according to version).
26. Audio system.
27. Heating / air conditioning controls.
28. Alarm / Peugeot Connect SOS - Peugeot Connect Assistance.
29. Peugeot Connect Navigation (RT6) controls.
30. Massage / Adaptive lighting / Parking space sensor.

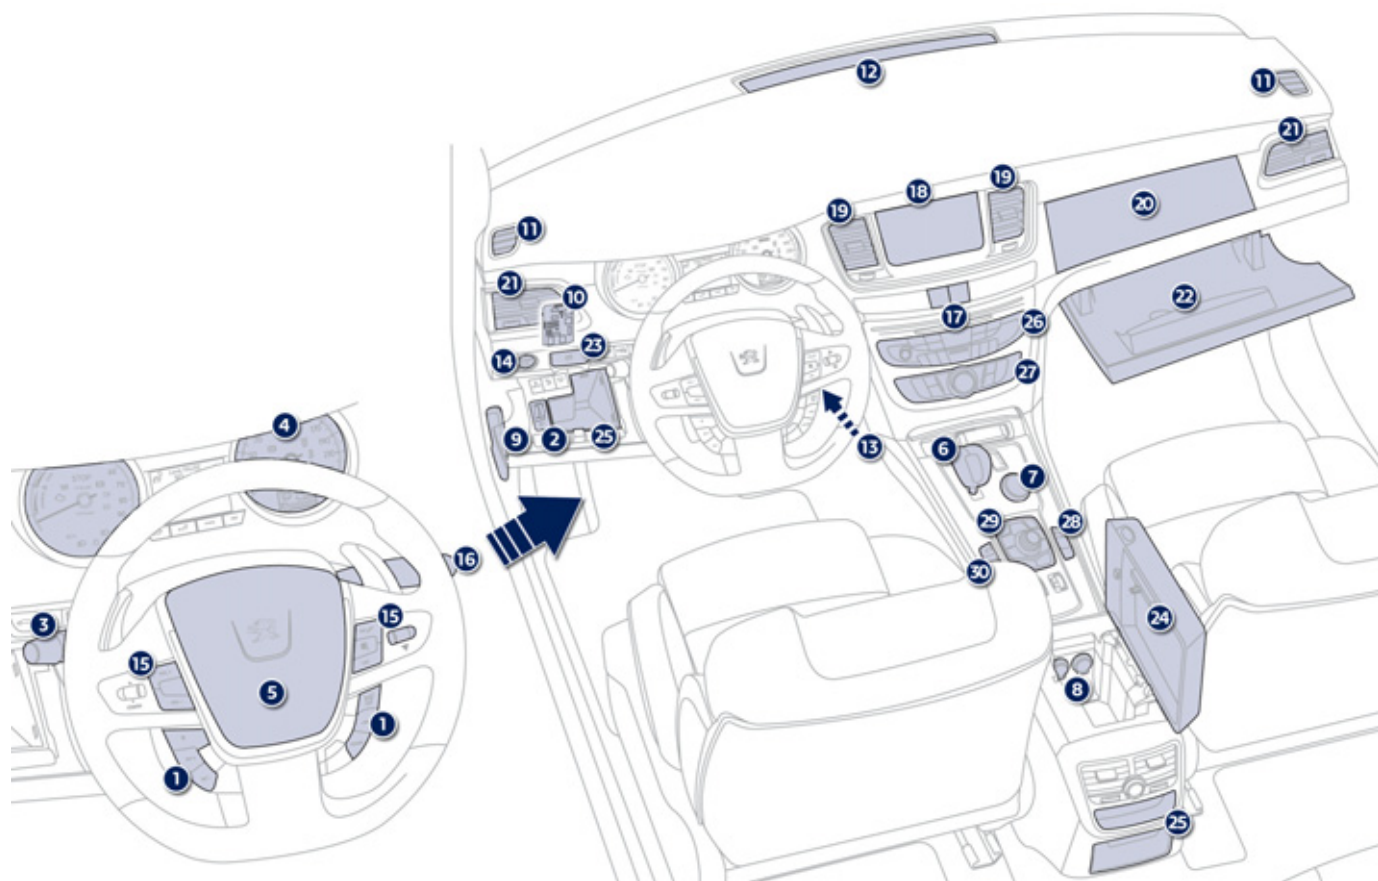

Sitting comfortably


Head restraint adjustment

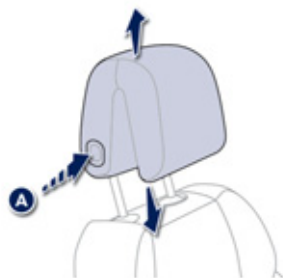

To lower it, press button **A**.
To raise it, guide the head restraint upwards to the desired position.



Steering wheel adjustment

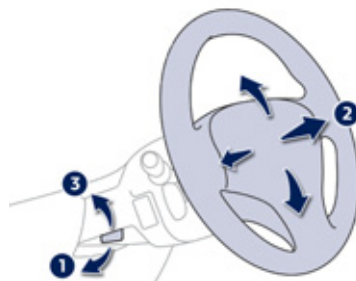


1. Release the adjustment mechanism.
2. Adjust for height and reach.
3. Lock the adjustment mechanism.

! For reasons of safety, these operations must only be carried out with the vehicle stationary.



Heated seats control

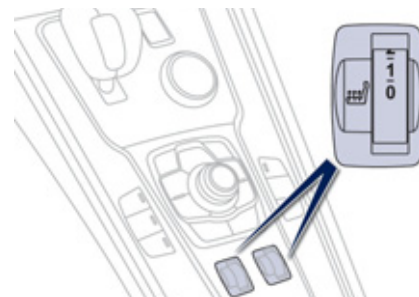


- 0: off.
1: low.
2: medium.
3: high.



Sitting comfortably

Door mirrors

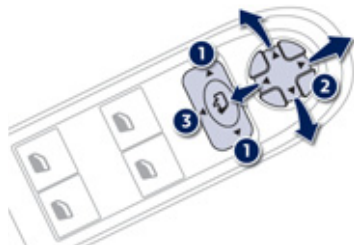


Adjustment

1. Selection of the mirror.
2. Adjusting the position of the mirror glass.
3. De-selection and folding/unfolding the mirrors.

▶ 98

i Other functions...
Automatic dipping in reverse.

Rear view mirror

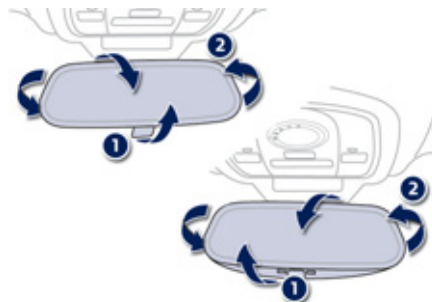

Manual day/night model

1. Selecting the "day" position of the rear view mirror.
2. Rear view mirror adjustment.

Automatic day/night model

1. Automatic detection of day/night mode.
2. Rear view mirror adjustment.

▶ 100

Front seat belts




1. Fitting the belt.
2. Fastening.
3. Check that the belt is correctly fastened by pulling on the belt webbing.

▶ 177

Seeing clearly

Lighting

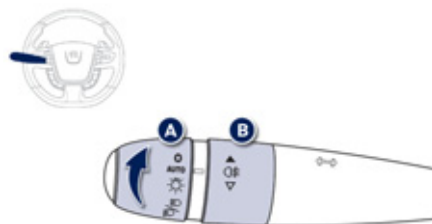

Ring A


O	Lighting off.
AUTO	Automatic illumination of headlamps.
	Sidelamps.
	Dipped / main beam headlamps.

Ring B

	Rear foglamps.
--	----------------

▶ 147, 148

Wipers

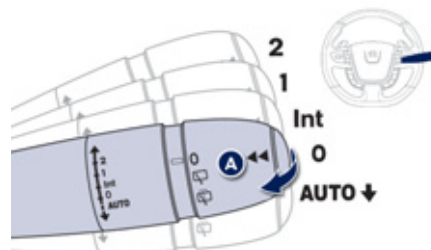


Control stalk A: windscreen wipers

- 2. Fast wipe.
- 1. Normal wipe.
- Int. Intermittent wipe.
- 0. Park.
- AUTO** Automatic wiping.

↓ Single wipe: Brief pull on the stalk towards.
Screenwash: Long pull on stalk towards you.

▶ 156

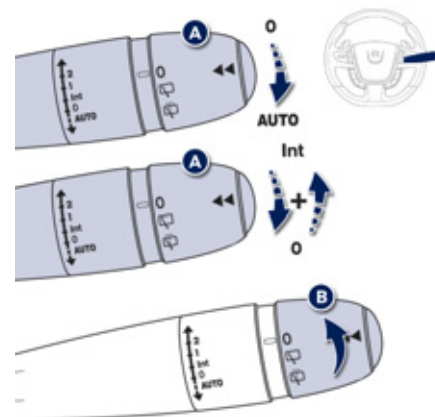

Switching on "AUTO" mode

- ☞ Briefly push the stalk downwards.
- ☞ Briefly push the stalk downwards or place the stalk in another position: Int, 1 or 2.

▶ 158

Ring B: rear wiper

	Park.
	Intermittent wipe.
	Screenwash.

▶ 157

Monitoring

Instrument panel



On switching on, the dial needles go to the extent of their travel then return to 0.

- A. With the ignition on, the needle should indicate the fuel remaining.
- B. With the engine running, the associated low level warning lamp should go off.



- C. With the ignition on, the instrument panel screen should indicate the oil level.

If the levels are not correct, top up the level which is low.

▶ 49

Warning lamps




1. With the ignition on, the orange and red warning lamps come on.
2. With the engine running, these warning lamps should go off.

If a warning lamp remains on, refer to the page concerned.

▶ 50

Passenger safety


Front passenger's airbag

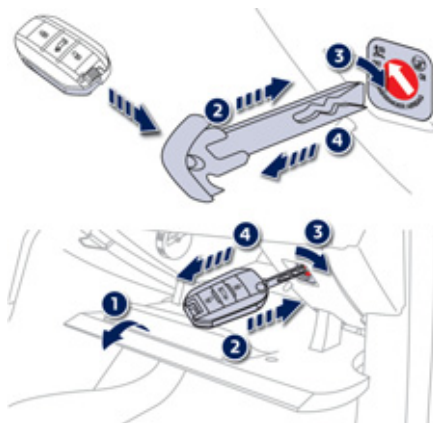

1. Open the glove box.
2. Insert the key.
3. Select position:
 "ON" (activation), with front passenger or
 "forwards facing" child seat,
 "OFF" (deactivation), with "rear facing" child seat.
4. Remove the key keeping the switch in the new position.

▶ 181

Front seat belts and passenger's front airbag

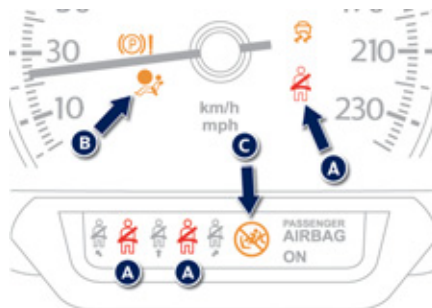

- A. Front seat belts not fastened or unfastened warning lamp.


▶ 178

- B. Airbag fault warning lamp.
- C. Front passenger's airbag activation indicator lamp.

▶ 181


Driving safely

Starting - stopping the engine

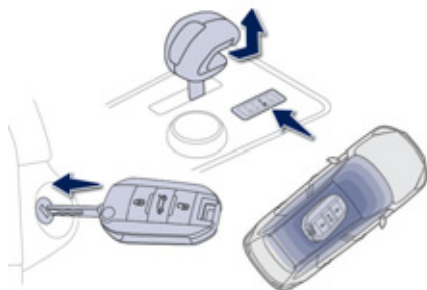

Before starting

- Place the gear lever in position **N**.
- Insert the key in the ignition switch or keep the electronic key in the vehicle.

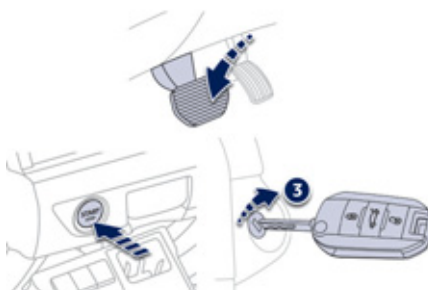

Starting


- Press the brake pedal.
- Make a single short press (about one second) on the **START/STOP** button or turn the key fully towards the dashboard to position **3** (Start).



- The instrument panel and the **Ready** lamp come on, confirmed by an audible signal.
- The dial in the centre console is in **AUTO** mode.




Moving off

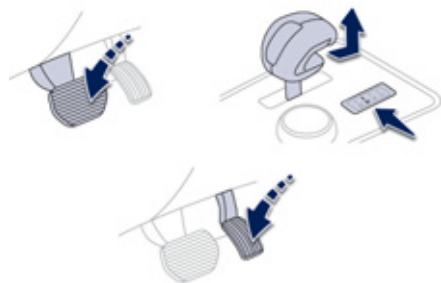

- While maintaining pressure on the brake pedal, move the gear lever to position **A** to go forwards, or **R** for reverse.
- Take your foot off the brake pedal; you can now move off.

Driving safely

Speed limiter "LIMIT"

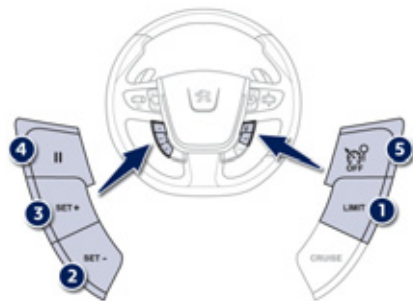


1. Selecting speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Pause/resume speed limiter.
5. Speed limiter off.

The values must be set with the engine running.

▶ 138

Cruise control "CRUISE"

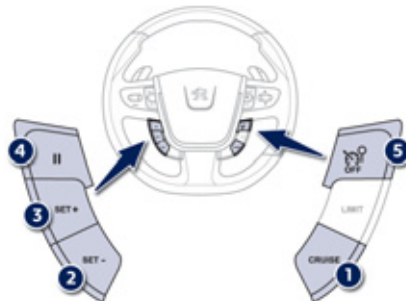

1. Selecting cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Pause/resume cruise control.
5. Cruise control Off.

In order to be programmed or activated, the vehicle speed must be higher than 25 mph (40 km/h), with at least 2nd gear engaged.

▶ 140

Display in the instrument panel



The cruise control or speed limiter mode appears in the instrument panel when it is selected.



Cruise control



Speed limiter


Presentation

The HYbrid4 technology allows two sources of energy to be associated in an effective manner: the Diesel HDi engine, which drives the front wheels and the electric motor, which drives the rear wheels.

These two motors can operate alternately or simultaneously, according to the hybrid mode selected and the driving conditions.

The electric motor alone provides power for the vehicle in "ZEV" (Zero Emissions Vehicle) mode, and in "Auto" mode for running at slow speed and low load. It also assists the Diesel engine when moving off, accelerating and changing gear.

The battery that powers the electric motor is recharged during phases of deceleration and stores the energy for subsequent use.

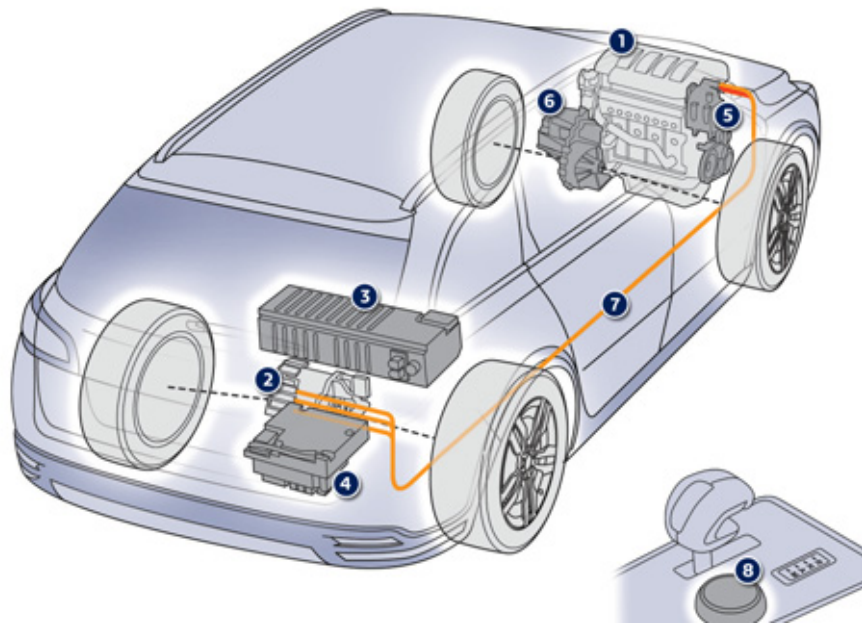

1. Diesel HDi engine (front wheel drive).
2. Electric motor (rear wheel drive).
3. 200 V battery.
4. Electronic power supervisor.
5. Stop & Start system.
6. 6-speed electronic gearbox.
7. Electrical flow.
8. HYbrid4 mode selector.

Main parts of the HYbrid4 system

The **HDi Diesel engine - 1**, located at the front, drives the front wheels and provides most of the power needed to drive the vehicle.

It is fitted with the **Stop & Start system - 5** which recharges the batteries and provides additional power when needed (in 4x4 mode).


The **electric motor - 2**, located at the rear, drives the rear wheels on its own, or supplements the Diesel engine, according to the hybrid mode selected.

It recovers energy and charges the batteries during phases of deceleration of the vehicle and is active up to 70 mph (120 km/h).

A 200 V NI-MH **high voltage battery - 3**, provides a source of energy for the rear electric motor. Its charging rate is managed automatically by the vehicle during phases of deceleration. It is located in a compartment in the boot, access to which is restricted to trained service technicians.

The battery **state of charge** is indicated by 8 horizontal or vertical bars (depending on the screen).

The **conventional battery**, located under the bonnet, powers the vehicle's 12 V systems. It is recharged automatically by the high voltage network.

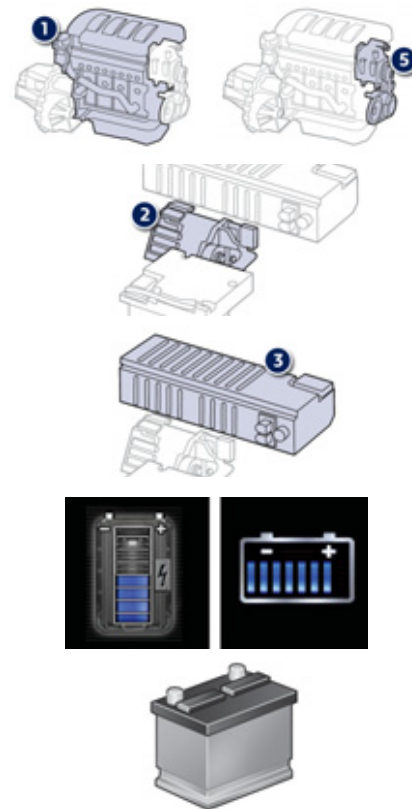


The **electronic power supervisor - 4** automatically manages the operation of the two power units (Diesel and electric) to provide the lowest consumption.

An inverter and a transformer are needed to manage the electric power.


The inverter acts on the torque of the electric motor, by regulating the current coming from the high voltage battery pack. Its operating range is between 150 and 270 volts.

The transformer converts the 200 V of the battery pack to 12 V, to power the vehicle's ancillary systems.

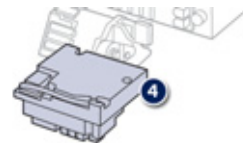


The **Stop & Start system - 5** allows the Diesel engine to be put into standby during stops (traffic lights, a stop, or in a traffic jam, for example) or during phases of running in all-electric mode.

The stopping and restarting of the Diesel engine is done in a way that is instantaneous and transparent for the driver.

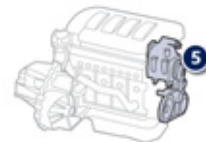

The **electronic gearbox - 6** provides, in automatic mode, significant savings in fuel consumption compared to a conventional manual gearbox, thanks to its electronic control system.

It also offers improved driving pleasure with the possibility at any time of choosing the gear changing mode: automatic or manual, using the paddles located behind the steering wheel.

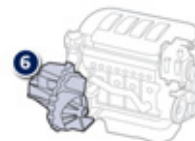


Starting - stopping the engine

Before starting



- Place the gear selector in position **N**.
- If the vehicle has Keyless Entry and Starting, simply having the key inside the vehicle is sufficient.
- Otherwise, it is necessary to place the key in the ignition switch.

Starting the HYbrid4 system

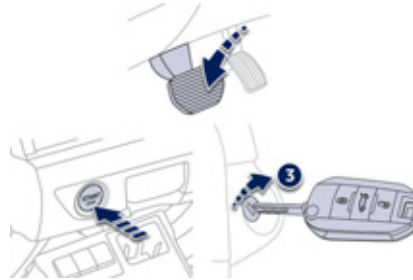


- Press the brake pedal.
- Make a single short press (about one second) on the **START/STOP** button or turn the key fully towards the dashboard to position **3** (Starting).
- The steering column unlocks (noise and noticeable movement).



- Keep your foot on the brake pedal until the HYbrid4 system starts up (the instrument panel and the **Ready** lamp come on, confirmed by an audible signal).
The hybrid system determines whether it is necessary to start the Diesel engine.

Switching the HYbrid4 system off

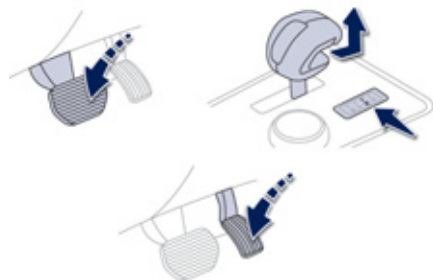

- Before switching off the HYbrid4 system, place the gear selector in position **N**.
- Make a short press on the **START/STOP** button or turn the key fully off to position **1** (Stop) then remove the key from the ignition switch.
- The system shuts down and the steering column locks.

i When stationary, ensure that the ignition is switched off and check that the **Ready** lamp is off when you want to leave the vehicle, otherwise the hybrid system will still be active.

For more information, refer to the "Underbonnet precautions / warnings" section.

! When your vehicle moves off in electric mode, it makes no noise. Be very careful of pedestrians as they will not hear you coming.

Ignition on without starting the engine (accessory position)

Turn the key towards the dashboard to the intermediate position or with the Keyless Entry and Starting key inside the vehicle, press the "START/STOP" button, with no action on the pedal. This switches on the ignition and so activates the ancillary equipment.



- ☞ Press the "START/STOP" button, the instrument panel comes on but the engine does not start.
- ☞ Press the button again to switch off the ignition and so allow the vehicle to be locked.

! If you use the accessories position for too long, the system automatically changes to economy mode to avoid discharging the battery.

Anti-theft protection

Electronic engine immobiliser


The keys contain an electronic chip which has a secret code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.

In the event of a malfunction, you are informed by a message in the instrument panel screen.

In this case, your vehicle does not start; contact a PEUGEOT dealer as soon as possible.

Emergency starting with the electronic key

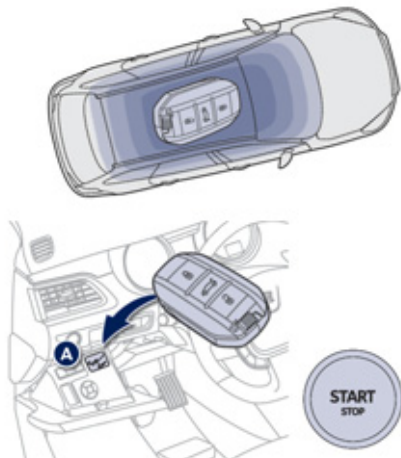


When the electronic key is in the defined zone and your vehicle does not start after pressing the "START/STOP" button:

- ☞ Open the housing below the "START/STOP" button.
- ☞ Insert the electronic key in the location **A**.
- ☞ Press the "START/STOP" button.

i Once the engine has started, you can remove the electronic key and close the housing.

Emergency switch-off using the electronic key

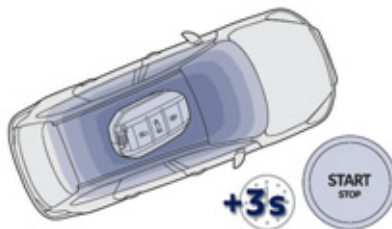

In the event of an emergency only, the engine can be switched off without conditions. To do this, press and hold the "START/STOP" button for about 3 seconds.

In this case the steering column locks as soon as the vehicle stops.

if the electronic key is no longer in the defined zone when you request switching off the engine, a message appears in the instrument panel.

- ☞ Press and hold the "START/STOP" button for about 3 seconds if you want to force switching off the engine (note that restarting will not be possible without the key).

! The electronic key must always remain inside the vehicle while in use.

Electronic key not recognised by the "Keyless Entry and Starting" system



If the electronic key is no longer in the defined zone when driving or when you (later) request switching off of the hybrid system, a message appears in the instrument panel.



- ☞ Press and hold the "START/STOP" button for about 3 seconds if you want to force switching off of the hybrid system (note that restarting will not be possible without the electronic key in the defined zone).

Ready lamp



With the gear selector in position **N**, press the brake pedal and start the hybrid system.

This lamp comes on when the vehicle is ready to move off ("Auto" mode is on by default) and so the driver can press the accelerator.

This lamp comes on more or less instantly but may take a few seconds in some cases (in particular, the time needed for pre-heating the Diesel engine in cold weather or in energy economy mode, for example, ...).

! When stationary, switch off the hybrid system and check that the **Ready** lamp is off when you leave the vehicle, otherwise the hybrid system will remain active.

For more information, refer to the "Underbonnet precautions / warnings" section.


HYbrid4 mode selector

The selector allows the user to choose between 4 drive modes for the vehicle.

Turn the dial to the right or left; the mode selected is confirmed by illumination of the corresponding indicator.

AUTO mode, for normal use and optimised fuel consumption.

Sport mode, to make use of the maximum performance of the vehicle.

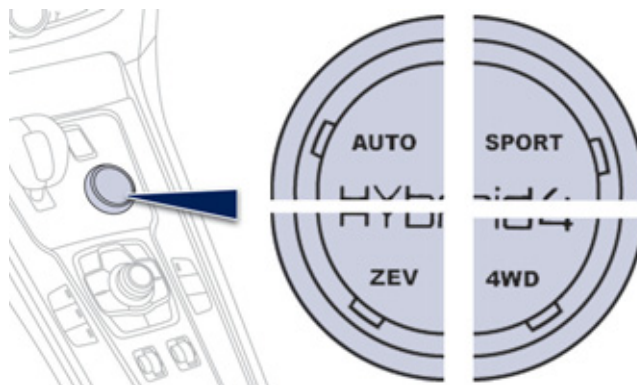

ZEV mode, to force electric running.

4WD mode, to force the vehicle into 4x4 mode.



Auto mode


i This **standard** mode to use in **preference** is activated **automatically** on starting the hybrid system.

It automatically manages the operation of the Diesel engine and the electric motor, according to inherent vehicle parameters, traffic conditions and driving style so as to **optimise the vehicle's fuel consumption**.

In particular, this mode activates "**zero emissions**" **electric running** when the conditions allow.

In auto mode, the **electric motor**:

- can drive the vehicle on its own up to around 36 mph (60 km/h) in "zero emissions" electric running, depending on the state of charge of the battery, if the conditions specific to the vehicle are met and if acceleration is moderate,
- **supplements the Diesel engine** when moving off and changing gear, during acceleration and when traction from the front wheels is inadequate (it automatically **adds 4 wheel drive**),
- is no longer active above 70 mph (120 km/h).

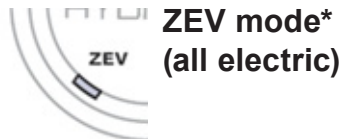

ZEV mode* (all electric)

Zero emissions vehicle operation is assured 100 % by electric drive.

This mode **forces silent running** at moderate speeds.



It can be activated when the required conditions are met, particularly if the state of charge of high voltage battery is sufficient (from 4 bars).

If the conditions do not allow this mode, a message that the "electric mode is not currently available" appears in the screen. The ZEV warning lamp flashes for a few seconds then goes off and the selector comes on in AUTO. In ZEV mode:

- Range and acceleration capacity are limited. The maximum speed possible is around 36 mph (60 km/h).
- Under high load or a priority requirement causing the start of the Diesel engine, the system changes automatically to AUTO mode.

i For more information on "Automatic restarting of the Diesel engine or ZEV mode not available", refer to the corresponding section.

* ZEV: Zero Emissions Vehicle.



Sport mode (Diesel and electric)

This mode allows more dynamic driving by providing **additional performance**.

Vehicle acceleration and pick-up are maximised by using the capacity of the electric motor, supplementing the power of the Diesel engine.

This mode manages the progressiveness of the accelerator, the electronic gearbox and the use of the electric motor.

In Sport mode:

- The electric motor can be used up to 70 mph (120 km/h).



4WD mode** (Diesel and electric)

This mode provides **additional traction***** at low speed by driving all 4 wheels of the vehicle continuously: the Diesel engine (front wheel drive) and the electric motor (rear wheel drive) operate simultaneously and permanently.

Their coupling is managed electronically to optimise traction on slippery surfaces.

In 4WD mode:

- Power for the electric motor is provided, if needed, by the alternator-starter motor of the front engine. The Diesel engine operates continuously.
- The additional traction from the electric motor is available up to 75 mph (120 km/h).


** 4WD: 4 Wheel Drive.

*** This mode will be even more effective if suitable tyres are fitted (winter tyres in particular).

- i** This mode should be used on snow covered roads or difficult ground (mud, sand, ...). In this mode, in severe conditions and if the circumstances allow, it is recommended that you accelerate strongly to ensure that you move off and avoid any risk of getting stuck. The addition of 4WD traction is available whatever:
- the state of charge of the traction battery,
 - the altitude.

- !** Be aware of the ground clearance of your vehicle: around 184 mm (with the vehicle in working order: driver only and the fuel tank full) in ideal conditions. This value will vary with vehicle load, the nature of the ground surface and the surroundings. If the driver considers that the vehicle can traverse an obstacle, they assume entire responsibility for this.

Energy consumption / generation indicator

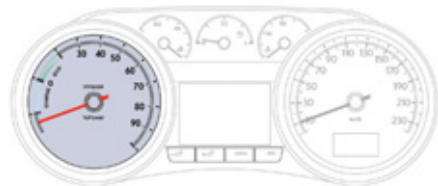

The indicator dial provides real time information on the total power used, combining electric and Diesel.
It comprises three main zones.


ECO zone



Zone which indicates that the vehicle is **optimising its energy consumption**, electric, Diesel or a combination of both.

This zone corresponds to phases of electric running as well as to phases of optimum use of the Diesel engine, which are easily accessible with a suitable driving style (smooth "eco-citizen" driving).

CHARGE zone

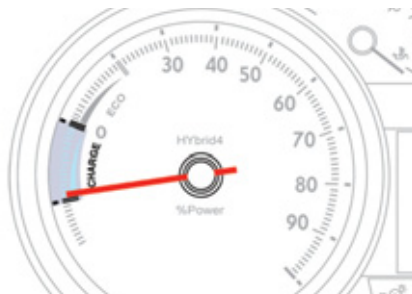

Zone which indicates that the vehicle is in electrical **energy recovery** phase: on deceleration, braking (partially or particularly with your foot off the accelerator (to use in preference as this gives better energy recovery).

This allows the high voltage battery to be recharged using "**free**" **energy** which can then be **reused** for future energy requirements.



POWER zone



Zone which indicates an increased cumulative **power demand** from your hybrid vehicle, taking account of the combined capacities of the Diesel engine and the electric motor.

View hybrid flow information

Information on the active hybrid mode, arrows for energy flows and the state of charge of the battery, is displayed in the instrument panel screen or the screen.

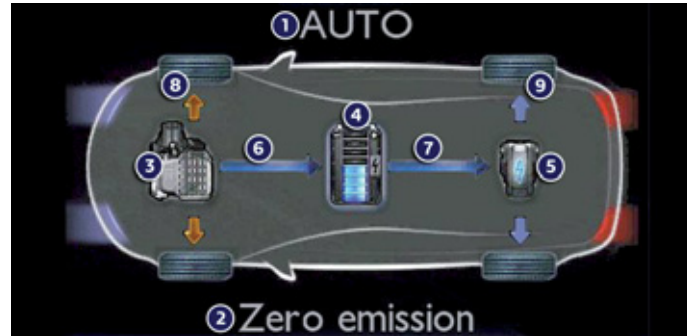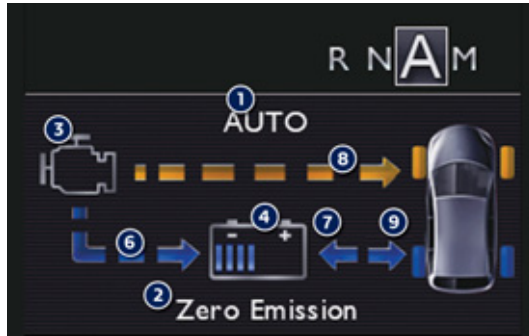

Hybrid modes

1. Hybrid mode selected (AUTO, ZEV, SPORT, 4WD).
2. Messages, e.g.: "Zero Emission" if the Diesel engine is off (0 g/km CO₂).

Vehicle infrastructure

3. Diesel engine.
4. Traction battery state of charge.
5. Electric Motor/Generator.


Operation / Energy flows

6. The Diesel engine supplies the battery (if needed).
7. Arrow from left to right: the battery powers the electric motor (when the electric motor is operating).
Arrow from right to left: the electric motor/generator recharges the battery (energy recovery phases).
8. The Diesel engine drives the front wheels.
9. The electric motor drives the rear wheels.

Examples of displays



On starting and when stationary

There is no flow of energy (the Stop & Start system stops and restarts the Diesel engine automatically).

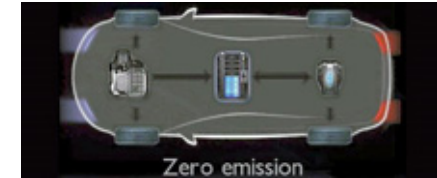


Energy recovery

During this phase (deceleration, braking, foot off the accelerator, ... all modes), the battery is recharged by the electric motor/generator, then being driven by the rear wheels. You can maximise this energy recovery by taking your foot off the accelerator pedal, deceleration will then be less marked than with a conventional vehicle.

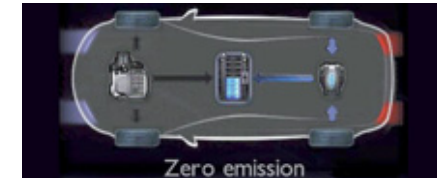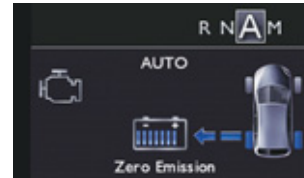

100% electric

In all electric running (AUTO or ZEV modes), only the electric motor, powered by the battery, drives the rear wheels. The display of "Zero Emission" indicates that the Diesel engine is off and the vehicle is producing no CO_2 .

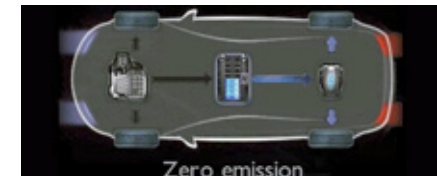

i Automatic restarting of the Diesel engine or ZEV mode NOT available

The internal combustion engine may restart or ZEV mode may not be available in the various conditions presented below.

The internal combustion engine can be switched off automatically as soon as these conditions are lifted.

When the conditions described below cause the vehicle to come out of ZEV mode and the Diesel engine to restart, the vehicle automatically changes to AUTO mode.

Action by the driver

- Moving the gear selector to position **M**.
- Action on steering mounted control paddles to change gear.
- Sustained and sharp acceleration.
- Use of demisting.
- Use of air conditioning.

Maintaining the performance of the system

- When the vehicle exceeds 18 mph (30 km/h) after moving off (if the internal combustion engine has not already started since the vehicle was last started).
- If the high voltage battery is not sufficiently charged. A minimum of 4 bars in ZEV mode so as to ensure operation over a certain distance (in AUTO, electric operation is accessible for a shorter period with a lower level of charge).
- When the fuel level enters the reserve zone (where rate of consumption of this reserve is high, ZEV inhibition may continue for some time after refuelling).
- During regeneration of the particle emissions filter, which occurs automatically for 5 to 10 minutes, approximately every 300 miles (500 kms) (or less in extended urban running).

Difficult weather conditions and circumstances

- If certain conditions or engine temperature requirements make it necessary (such as an engine temperature that is too low for the ambient conditions).
- When the battery is close to maximum charge (for example: when going down a long hill), because engine recovery being no longer possible, the internal combustion engine restarts automatically just to provide engine braking.
- If the vehicle encounters a steep slope (car park ramp, ...).
- If the vehicle has been parked in the sun for a prolonged period.
- When driving in mountainous conditions (altitude).

Your vehicle is fitted with the most effective emissions control systems, in particular the Particle Emissions Filter (PEF).

At regular intervals your Diesel engine will produce energy for the self-cleaning of this filter.

During this PEF regeneration phase, electric running is purposely made unavailable and is accompanied by a message **"Electric mode not available: PEF regeneration in progress"**.

HYbrid4 frequently asked questions

ZEV (Zero Emissions Vehicle) mode

Question	Answer
Why is it not always possible for me to put the vehicle into ZEV (Zero Emissions Vehicle) mode even though the battery is well charged?	This situation is temporary. Certain conditions will occasionally prevent the change to ZEV mode, even if the battery has sufficient charge, such as, for example, very cold conditions, altitude, demisting, high demand for heating or air conditioning, regeneration of the particle emissions filter (PEF).
Why do I sometimes see an alert message "Electric mode not available: PEF regeneration in progress"?	This is an message relating to the regeneration of the particle emissions filter (PEF). This is a completely normal process that takes place every 240 or 300 miles (400 or 500 km) (or more frequently in prolonged urban use), as on a conventional HDi vehicle. This process is not generally noticed by the driver. On the other hand, in the case of a hybrid, this phenomenon may be noticeable (in urban use) as temporarily the HDi engine will not stop and this message will be displayed at intervals while regeneration is in progress.
Why is it not possible for me to put the vehicle into ZEV mode, even though I had just been running electrically in Auto mode?	The management of ZEV is different from Auto mode. Changing to ZEV mode is only possible with a battery charge of at least 4 bars, in order to assure sufficient range. In Auto mode, the system alone manages the conditions for changing temporarily to electric mode, for shorter periods and with a lower state of charge of the battery.
Why is the range in ZEV (Zero Emissions Vehicle) mode lower when climbing?	The vehicle needs more energy when climbing than when running on the level. So it is better to stay in Auto mode, which will favour operation of the Diesel engine.
Why is it that the system makes me come out of ZEV (Zero Emissions Vehicle) mode; it does not return to ZEV automatically when the conditions allow?	It is not intended to give preference to ZEV running at any cost, as it is not always the most economical mode. So the system returns automatically to Auto mode.

Reducing consumption - Fuel

Question	Answer
How can I optimise my fuel consumption?	Give preference to Auto mode as it selects in the best way the "driving energy source" to use in order to reduce fuel consumption. You should also adapt your driving style to the special features of hybrid vehicles to get the best out of it, for example by taking your foot off the accelerator pedal rather than braking and by anticipating decelerations (entering a built-up area, stop at traffic lights, stop at halt signs, ...).
Why do I not manage to reduce my fuel consumption even though I often drive in ZEV (Zero Emissions Vehicle) mode?	It is not ZEV mode but Auto mode that is the most appropriate for reducing fuel consumption, as it selects the best "driving energy source". ZEV mode (100% electric operation) can reduce fuel consumption in some cases. However, recharging the traction battery has an energy cost. This is why we recommend using Auto mode more often.
Why does the trip computer sometimes display the bars for 28 mpg (10 litres) consumption in town?	The current fuel consumption displayed may appear high when the distance covered is very low, but this generally has very little impact and the true average fuel consumption will remain low. In town, your hybrid retains very good fuel economy (of the order of 35% better than a non-hybrid vehicle).
Why is my battery rarely fully charged?	A partly charged battery is normal operation (4 to 5 bars on average in Auto mode). This allows some capacity to be left free for the recovery for energy when going downhill or taking when your foot off the accelerator.
Why are there so may fuel alert messages when starting to use the reserve?	To encourage you to refuel as soon as possible and avoid the loss of hybrid functions.

Air conditioning

Question	Answer
It seems to me that the vehicle runs less on electric when the heating or air conditioning is operating, is that right?	The demand for heating or air conditioning may require the starting of the Diesel engine until the desired level of comfort is attained. Normal hybrid operation is simply put back. The period can be higher under low or very high ambient temperatures.
It seems to me that when it is very hot and the air conditioning is working, the vehicle runs on electric for shorter periods. Is that right?	When it is hot, the periods when the Diesel engine is put on standby and the vehicle runs on electric are necessarily restricted in order to limit the difference between the temperature in the vehicle and the level of comfort selected. In very hot weather, it is always possible to press the Eco OFF button (which brings the vehicle out of ZEV mode and prevents electric running or the stopping of the engine) to give preference to temperature control (keeps the air conditioning running).

Special HYbrid4 features

Question	Answer
Can I tow with my hybrid vehicle and how much?	A HYbrid4 vehicle can tow between 500 kg and 800 kg (see the "Towing" section). This allows a jet ski or two-wheeler on a trailer to be towed, for example. The "technical" reason for the limit is related to maintaining adequate cooling capacity for the internal combustion engine as well as the hybrid components that are also cooled by the engine's cooling system.
Why does engine braking seem so strong?	When you take your foot off the accelerator, the engine braking results mainly from the energy recovery by the electric motor. This leads to a higher level of deceleration than a conventional vehicle and so allows the recovery of free energy.

ECO OFF switch



This function prevents the Diesel engine being switched off and so ensures that a comfortable temperature can be maintained in the passenger compartment (air conditioning running continuously).

On pressing the switch, the engine restarts immediately.

To return to normal operation, press the switch again.

After switching off the ignition, the vehicle will return to normal operation (lamp in the switch off).

During electric running and when the engine is stopped, the hybrid system manages restarting automatically to assure comfort levels in the passenger compartment*.

However, variations in temperature may still be felt in very hot climates. To avoid any discomfort in these conditions you can operate the ECO OFF switch.

* Except in ZEV mode, which favours electric running over assuring a comfortable temperature.

Eco-driving

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO₂ emissions.

Eco-driving suited to your HYbrid4 vehicle

Use gear selector position **A**, as this optimises gear changes to suit the circumstances and the **AUTO** mode of the HYbrid4 mode selector.

When moving off, accelerate normally up to the desired speed (**POWER** zone between 20 and 40 %).

At steady speeds, drive gently with small movements of the accelerator pedal (**ECO** or **CHARGE** zone), run in electric mode as often as possible when driving at low speed.

Anticipate the need to slow down and use engine braking (**CHARGE** zone), so as to make use of free energy recovery while keeping light pressure on the accelerator pedal.

Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning.

Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sun roof and window blinds...).

Switch off the air conditioning, unless it has automatic digital regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic.

Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the Diesel engine when stationary, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:


- before a long journey,
- at each change of season,
- after a long period out of use.

Have your vehicle serviced regularly (engine oil, oil filter, air filter...) and observe the schedule of operations recommended by the manufacturer.

When refuelling, do not continue after the 3rd cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.


Consumption of your hybrid in the screen

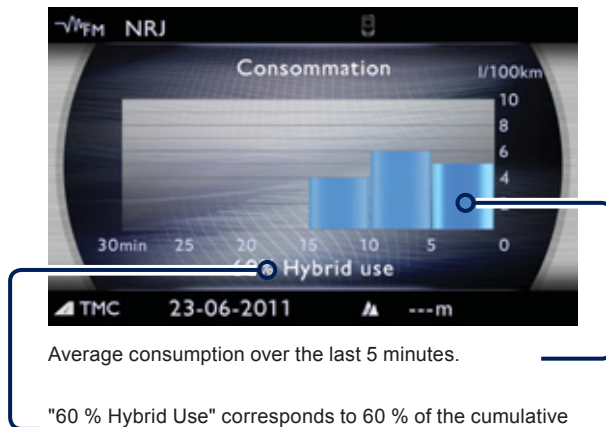

"60 % Hybrid Use" corresponds to 60 % of the cumulative running time with the addition of the hybrid system and 40 % of the time with the Diesel engine only (with no contribution from the hybrid system).


i For more information on the trip computer, refer to the corresponding section.

Resetting the history

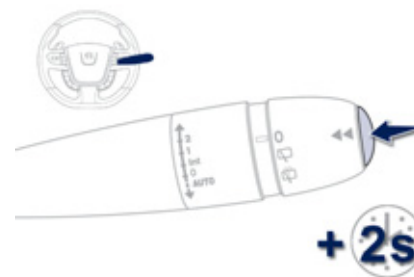

With the hybrid system active, when trip 2 displayed, press the control for 2 seconds to reset the history to zero.

200 V high voltage battery

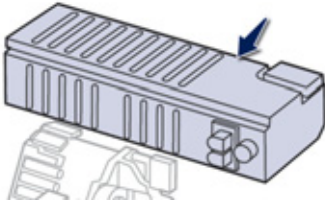

The 200 V high voltage battery cannot be recharged from a mains supply. The battery is Ni-MH (Nickel Metal Hydride) and is located below the boot floor, close to the electric motor.

Charging



The battery is charged when the vehicle decelerates, the electric motor then becomes a generator and converts kinetic energy into electrical energy (except if the speed of the vehicle is above 70 mph (120 km/h)). The battery is not recharged from a mains supply. The battery may also be charged automatically when required by the Stop & Start system of the Diesel engine.

This recovery allows the use of "free" energy. The battery charging time is very short and is continuous.

A discharged battery (following ZEV running or high load, for example) will quickly return to a state of charge sufficient for full operation of the different hybrid modes.

The charging takes place automatically when driving.

The energy recovery can be faster during deceleration.

The average state of charge is 4 to 5 bars, so preserving a margin for energy recovery when deceleration of going downhill (free energy).

i To preserve the service life of the battery, the level of charge never falls below 20 %, even if a level of 0 bars is displayed after ZEV running. Where the battery is close to maximum, vehicle deceleration with your foot off the accelerator pedal will be at a lower level.



High voltage



The voltage used for the operation of the electric motor is in the range 150 to 270 Volts. Be sure to take account of the warning labels fitted to the vehicle. Take great care regarding the high voltage and high temperatures of components carrying the current.

READY


Before doing any work on the vehicle, switch off the ignition (**Ready** lamp off).

Emergency cut-off

In the event of an accident, a cut-off system blocks the high voltage current and cuts off the fuel pump; your vehicle can no longer be started.

To restart the hybrid system, contact a PEUGEOT dealer.

High voltage cables

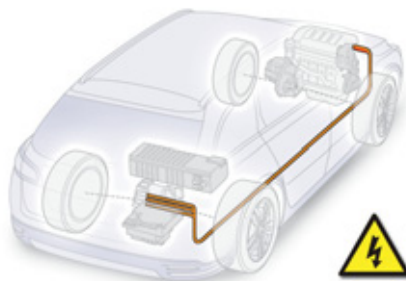

High voltage cables are routed under the vehicle (sills); take care not to damage them when the vehicle is used for off-road activity (such as covering rough ground).

! Never touch, dismantle, remove or replace the high voltage parts, orange cables or connectors, even in the event of an accident.

! Take care to position lifting equipment (jack, hoist, ...) at the locations provided to avoid damaging the cables.


Battery precautions

The high voltage battery must not in any circumstances be charged from an external source and must only be handled by a workshop technician.

There is the risk of serious burns, as well as electric arcs that could cause serious injury or even death.

A used Ni-MH (Nickel Metal Hydride) type high voltage battery must be removed in an appropriate manner by a repair workshop, so that its recycling presents no risk to the environment.

Fan cooling of the high voltage battery

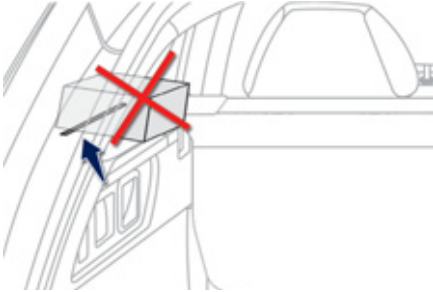

The high voltage battery has an air cooling system, comprising an air intake (located on the rear shelf) and a fan (located behind the boot trim).

This system does not work continuously, but adapts the force of the fan cooling to the requirements of the battery. Its operation can be heard at the rear, even if the vehicle is stopped after a run. If the air intake is blocked, the battery may overheat, damaging the battery and causing a loss of performance of the hybrid system.



For the best use of the high voltage battery, please follow these recommendations:

- do not obstruct the air intake with loose articles, otherwise, the battery may overheat, causing a loss of performance of the hybrid system
- do not spill fluids, as this may cause damage to the battery.


Underbonnet precautions / warnings

READY

Always ensure that the ignition is switched off (**Ready** lamp off) before opening the bonnet.

The alternator-starter motor of your hybrid vehicle is also supplied at high voltage. If the vehicle ignition has not been switched off, there is a risk of the engine restarting at any time.

! Also ensure that the ignition is switched off when refuelling to avoid the engine restarting.

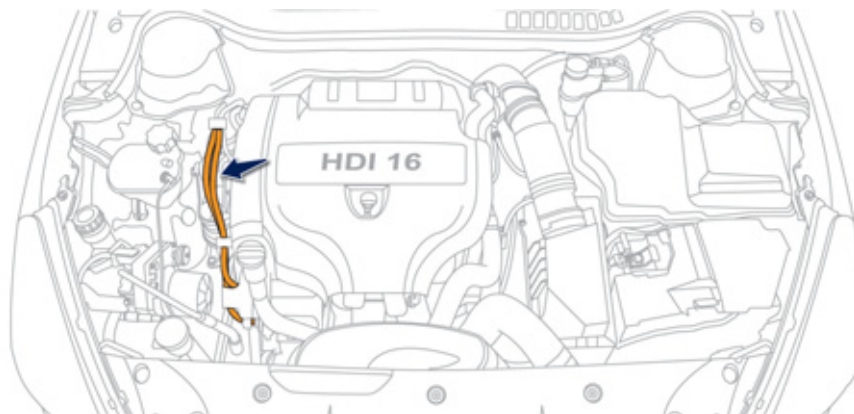

Car washing machine or tunnel



Some car washing machines or tunnels (where the vehicle is moved forwards on a travelling track) require that the parking brake be "released" during the wash.

Car washing machines or tunnels in which the Diesel engine must be switched off.

- i** With the hybrid system active, **Ready** lamp on, parking brake released:
 - Place the gear selector in position **N**.
 - Switch off the engine (press on START/STOP or with the vehicle's key if it does not have Keyless Entry and Starting). The parking brake is applied automatically and the **Ready** lamp goes off in the instrument panel.
 - Switch on the ignition again (press on START/STOP or with the key in the intermediate position) without your foot on the brake pedal. The **Ready** lamp remains off.
 - Release the parking brake using the manual control on the centre console, while keeping your foot on the brake pedal.
 - Switch off the ignition (press on START/STOP without your foot on the brake pedal, or using the key) checking that the parking brake remains released.

Car washing machines or tunnels in which the Diesel engine must not be switched off.

- i** With the hybrid system active, **Ready** lamp on, parking brake released:
 - Place the gear selector in position **N** (Auto or Sport mode).
 - Press the brake pedal then the ECO OFF button.




If the Diesel engine is not running, it restarts.

If the Diesel engine is running, it remains running without time limit.

Vehicle recovery

Before doing any work, with the ignition on, press the brake pedal and put the gear selector to position **N**, then switch off the hybrid system.


If necessary because access to the vehicle is difficult, it can be moved a few dozen metres at a speed not exceeding 6 mph (10 km/h).

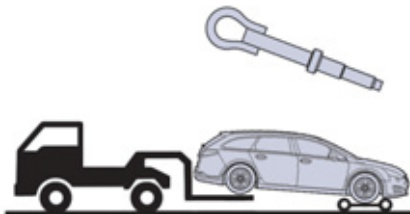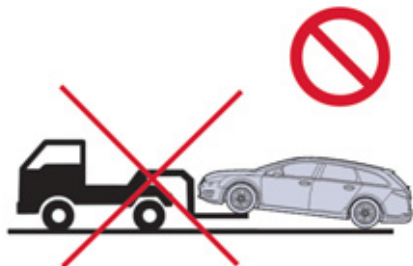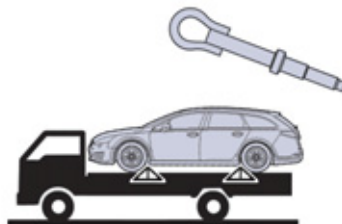

The front or rear wheels must not be on the ground, use a flat-bed lorry or trailer to recover the vehicle.

Use the towing eyes only to pull a vehicle out or to pull it onto a flat-bed.

Instrument panel

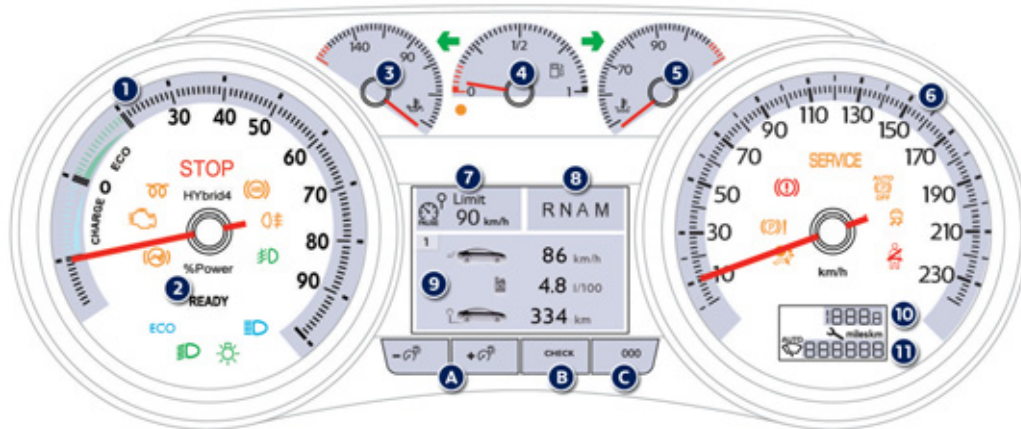


Dials and screens

1. Energy consumption / generation indicator (power available as a percentage)
For more information refer to the "Hybrid system" section.
2. Ready lamp.
Indicates that the vehicle is ready to drive.
3. Engine oil temperature gauge.
4. Fuel gauge.
5. Engine coolant temperature gauge.
6. Speedometer (mph or km/h).
7. Cruise control or speed limiter settings.
8. Gear lever position and gear for an electronic gearbox.
9. Display zone: hybrid flow, alert messages or state of functions, trip computer.
10. Trip distance recorder (miles or km).
11. Automatic wipers
Service indicator (miles or km) then, total distance recorder.
These two functions are displayed successively when switching on the ignition.

Control buttons

- A. Main lighting dimmer.
- B. Display of alert log.
Recall of the service information.
- C. Reset the trip distance recorder.

Instrument panel screen

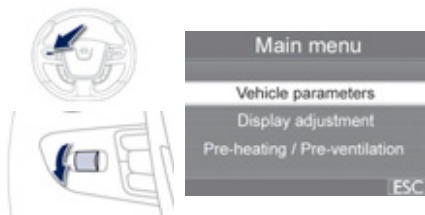

With the vehicle stationary, use the left hand thumb wheel to move through the menus, so as to configure the vehicle settings (driving and comfort systems, ...).

- Rotation (other than menu): scroll through the list of active functions available,
- Press: main menu, confirm the selection,
- Rotation (in a menu): move up or down in the menu.

Main menu

Vehicle parameters

Driving position setting

Unlocking boot only

Driving assistance

Speeds memorised

Rear wipe in reverse gear

Automatic parking brake

Lighting

Welcome lighting

Guide-me-home headlamps

Directional headlamps

Screen settings

Language

Units

Fuel consumption

Temperature

Colours

Preheating / Preventilation

Parameters

Indicator and warning lamps

Visual indicators informing the driver that a system is in operation, switched off or has a fault.

When the ignition is switched on

Certain warning lamps come on for a few seconds in the instrument panel and/or instrument panel screen when the vehicle's ignition is switched on.

When the engine is started, these same warning lamps should go off.

If they remain on, before moving off, refer to the information on the warning lamp concerned.

Associated warnings

The switching on of certain warning lamps may be accompanied by an audible signal and a message in the instrument panel screen.

The warning lamps may come on continuously (fixed) or flash.



Certain warning lamps may come on in one of two modes. Only by relating the type of lighting to the operating status of the vehicle can it be ascertained whether the situation is normal or whether a fault has occurred.

Operation indicator lamps

If one of the following indicator lamps comes on in the instrument panel and/or instrument panel screen, this confirms that the corresponding system has come into operation.

Warning / indicator lamp	State	Cause	Action / Observations
 Ready	fixed.	The vehicle is ready to move off; you can press the accelerator.	It comes on once high voltage is established in the vehicle.
 Left-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed down.	
 Right-hand direction indicator	flashing with buzzer.	The lighting stalk is pushed up.	
 Sidelamps	fixed.	The lighting stalk is in the "Sidelamps" position.	
 Dipped beam headlamps	fixed.	The lighting stalk is in the "Dipped beam headlamps" position.	
 Main beam headlamps	fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.
 Adaptive lighting	fixed.	The lighting stalk has been pulled towards you and the button has been pressed Its warning lamp is on.	The camera, located in the interior rear view mirror, authorises or not switching between main and dipped beam, depending on the exterior lighting and the driving conditions. Pulling the lighting stalk to return to dipped beam.
 Rear foglamps	fixed.	The rear foglamps are switched on.	Turn the ring on the stalk rearwards to switch off the rear foglamps.



For more information on the lighting controls, refer to the corresponding section.

Warning / indicator lamp	State	Cause	Action / Observations
 Diesel engine pre-heating	fixed.	The START/STOP switch has been pressed (ignition on).	Wait until the warning lamp goes off before starting. Once it goes off, starting is immediate, on condition that the brake pedal remains pressed for automatic or electronic gearboxes, or the clutch pedal is pressed fully down for manual gearboxes. The period of illumination of the warning lamp is determined by the ambient conditions (up to about thirty seconds in extreme conditions). If the engine does not start, switch the ignition off and then on, wait until the warning lamp goes off again, then start the engine.
 Parking brake	fixed.	The parking brake is applied or not properly released.	Release the parking brake to switch off the warning lamp, keeping your foot on the brake pedal. Observe the safety recommendations. For further information on the parking brake, refer to the "Parking brake" section.
 Deactivation of the automatic functions of the electric parking brake	fixed.	The "automatic application" (on switching off the engine) and "automatic release" functions are deactivated or faulty.	Activate the function (according to country) via the vehicle configuration menu or contact a PEUGEOT dealer or a qualified workshop if automatic application / release is not possible. The parking brake can be released manually using the emergency release procedure. For more information on the electric parking brake, refer to the corresponding section.
 Foot on the brake pedal	flashing.	If you hold the vehicle on a rising incline using the accelerator for too long, the clutch overheats.	Use the brake pedal and/or the electric parking brake.

Warning / indicator lamp	State	Cause	Action / Observations
 Automatic wiping	fixed.	The wiper control is pushed downwards.	Automatic front wiping is activated. To deactivate automatic wiping, operate the control stalk downwards or put the stalk into another position.
 Passenger's airbag system	fixed in the seat belt and passenger's front airbag warning lamps display.	The control switch, located in the glove box, has been placed in the "ON" position. The passenger's front airbag is activated. In this case, do not install a "rear facing" child seat.	Move the control switch to the "OFF" position to deactivate the passenger's front airbag. In this case, you can install a "rear facing" child seat.

Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This may be accompanied by an audible signal and a message in the instrument panel screen.

Warning / indicator lamp		State	Cause	Action / Observations
	Passenger's airbag system	fixed in the instrument panel and/or seat belt and front passenger's airbag warning lamps display.	The control switch, located in the glove box, is set to the OFF position. The passenger's front airbag is deactivated.	Set the control to the "ON" position to activate the passenger's front airbag. In this case, do not fit a child seat in the rear-facing position.
	Dynamic stability control DSC/ASR	fixed.	The button (located on the folding panel at the bottom left of the dashboard) has been pressed. Its indicator lamp is on. The DSC/ASR is deactivated. DSC: dynamic stability control. ASR: anti-slip regulation.	Press the button to activate the DSC/ASR. Its indicator lamp switches off. The DSC/ASR system is activated automatically when the vehicle is started. After deactivation, the system is reactivated automatically from approximately 30 mph (50 km/h).

Warning lamps

With the hybrid system active or when the vehicle is being driven, illumination of one of the following warning lamps indicates a fault which requires action on the part of the driver.

Any fault resulting in the illumination of a warning lamp must be investigated further by reading the associated message in the instrument panel screen. If you encounter any problems, contact a PEUGEOT dealer or a qualified workshop.

Warning / indicator lamp		State	Cause	Action / Observations
STOP	STOP	fixed, associated with another warning lamp, accompanied by an audible signal and a message in the screen.	It is associated with a punctured wheel, the braking system, the power steering, the engine oil pressure, the engine coolant temperature, the hybrid system or a major electrical fault.	Stop as soon as it is safe to do so as the engine may cut out. Park, switch off the ignition and call a PEUGEOT dealer or a qualified workshop.

Warning / indicator lamp		State	Cause	Action / Observations
SERVICE	Service	on temporarily.	A minor fault has occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown on the screen, such as, for example: - the hybrid system, - the closing of the doors, boot or bonnet, - the engine oil level, - the screenwash level, - the remote control battery, - saturation of the particle emission filter (Diesel). For any other faults, contact a PEUGEOT dealer or a qualified workshop.
		fixed.	A major fault has occurred for which there is no specific warning lamp.	Identify the fault by reading the message shown on the screen and contact a PEUGEOT dealer or a qualified workshop.
	PEF: particle emissions filter, Diesel	fixed, associated temporarily with a message on the risk of FEP filter blockage.	This indicates the start of saturation of the particle emissions filter.	As soon as traffic conditions permit, regenerate the filter by driving at a speed of at least 36 mph (60 km/h) until the service warning lamp goes off.
		fixed.	This indicates the low level of the Diesel additive reservoir.	Have it topped up as soon as possible by a PEUGEOT dealer or a qualified workshop.

Warning / indicator lamp		State	Cause	Action / Observations
	Electric parking brake	flashing.	The electric parking brake is not applied automatically. The application/release is faulty.	You must stop as soon as it is safe to do so. Park on flat level ground, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.
	Electric parking brake fault	fixed.	The electric parking brake has a fault.	Contact a PEUGEOT dealer or a qualified workshop without delay. The parking brake can be released manually using the emergency release procedure. For more information on the electric parking brake, refer to the corresponding section.
	Deactivation of the automatic functions of the electric parking brake	fixed.	The "automatic application" (on switching off the engine) and "automatic release" functions are deactivated or faulty.	Activate the function (according to country) via the vehicle configuration menu or contact a PEUGEOT dealer or a qualified workshop if automatic application / release is not possible. The parking brake can be released manually using the emergency release procedure. For more information on the electric parking brake, refer to the corresponding section.
	Braking	fixed.	The braking system fluid level has dropped significantly.	You must stop as soon as it is safe to do so. Top up with brake fluid listed by PEUGEOT. If the problem persists, have the system checked by a PEUGEOT dealer or a qualified workshop.
		fixed, associated with the ABS warning lamp.	The electronic brake force distribution (EBFD) system has a fault.	You must stop as soon as it is safe to do so. Have it checked by a PEUGEOT dealer or a qualified workshop.


Warning / indicator lamp	State	Cause	Action / Observations
 Anti-lock Braking System (ABS)	fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking. Drive carefully at reduced speed and contact a PEUGEOT dealer or a qualified workshop without delay.
 Dynamic stability control (DSC/ASR)	flashing.	The DSC/ASR regulation is operating.	The system optimises traction and improves the directional stability of the vehicle.
	fixed.	Unless it has been deactivated (button pressed and its indicator lamp on) the DSC/ASR system has a fault.	Have it checked by a PEUGEOT or a qualified workshop.
 Engine autodiagnosis system	flashing.	The engine management system has a fault.	Risk of destruction of the catalytic converter. Have it checked by a PEUGEOT dealer or a qualified workshop.
	fixed.	The emission control system has a fault.	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or qualified workshop without delay.
 Low fuel level	fixed with the needle in the red zone.	When it first comes on there remains approximately 7 litres of fuel in the tank. At this point, you begin to use the fuel reserve.	Refuel as soon as possible to avoid running out of fuel. This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made. Never continue to drive until you run out of fuel, as this could damage the emission control and injection systems.

Warning or indicator lamp in the instrument panel	State	Cause	Action / Observations
 Engine oil pressure	fixed.	There is a fault with the engine lubrication system.	You must stop as soon it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.
 Battery charge*	fixed.	The battery charging circuit has a fault.	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
 Door(s) open	fixed, associated with a message identifying the door, if the speed is below 6 mph (10 km/h). fixed, associated with a message identifying the door, and accompanied by an audible signal if the speed is above 6 mph (10 km/h).	A door or the boot is still open.	Close the door or boot.

* According to destination country.

Warning / indicator lamp	State	Cause	Action / Observations
 Seat belt(s) not fastened / unfastened	fixed then flashing accompanied by an increasing audible signal.	A seat belt has not been fastened or has been unfastened.	Pull the strap then insert the tongue in the buckle.
 Airbags	on temporarily.	This lamp comes on for a few seconds when you turn on the ignition, then goes off.	This lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
	fixed.	One of the airbag or seat belt pretensioner systems has a fault.	Have it checked by a PEUGEOT dealer or a qualified workshop.
 Directional headlamps	flashing.	The directional headlamps system has a fault.	Have it checked by a PEUGEOT dealer or a qualified workshop.

Coolant temperature gauge

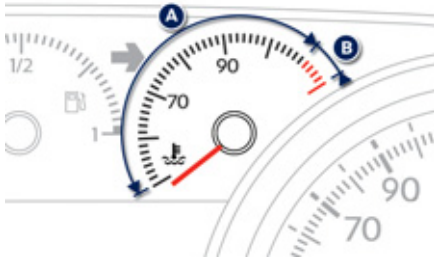

With the hybrid system active:

- in zone **A**, the temperature is correct,
- in zone **B**, the temperature is too high; the central **STOP** warning lamp comes on, accompanied by an audible signal and a message in the instrument panel screen.

You must stop as soon as it is safe to do so.

Wait a few minutes before switching off the engine.

Contact a PEUGEOT dealer or a qualified workshop.

After driving for a few minutes, the temperature and pressure in the cooling system increase.

To top up the level:

- ☞ wait for the engine to cool,
- ☞ unscrew the cap by two turns to allow the pressure to drop,
- ☞ when the pressure has dropped, remove the cap,
- ☞ top up the level to the "MAX" mark.



Be aware of the risk of burns when topping up the cooling system. Do not fill above the maximum level (indicated on the reservoir).

Engine oil temperature gauge



On switching on the ignition or when driving, it indicates the engine oil temperature.

With the needle in zone **C**, the temperature is correct.

With the needle in zone **D**, the temperature is too high.

Slow down to lower the oil temperature.

CHECK (vehicle autotest)

Automatic CHECK

With the key in the ignition on position, all of the warning lamps for the functions tested are displayed. They are switched off after a few seconds.

At the same time, an automatic CHECK (vehicle autotest) is carried out.

If no "major" fault is found, you can start your vehicle.

In the presence of a fault

A "minor" fault has been detected: the warning lamp(s) are displayed then go off.

You can start your vehicle; however, contact a PEUGEOT dealer or a qualified workshop as soon as possible.

A "major" fault has been detected: the associated warning lamp(s) remain on accompanied by the STOP or SERVICE warning lamp.

Do not start your vehicle.

Call a PEUGEOT dealer or a qualified workshop without delay.

Manual CHECK



Pressing the **"CHECK"** button on the instrument panel starts the manual CHECK (vehicle autotest). This function enables you to recall at any time (with the key in the ignition on position or with the engine running), the alerts present.

With the engine running and the vehicle moving, the instrument panel displays the warning lamps (in the event of a fault).

i The passenger's airbag deactivated warning lamp* remains on while the airbag is deactivated.

Lighting dimmer control



With the headlamps on, press button **B** to increase the brightness of the instruments and controls and the interior mood lighting or button **A** to reduce it.

As soon as the lighting reaches the required level of brightness, release the button.

* According to country.

Service indicator

System which informs the driver when the next service is due, in accordance with the manufacturer's servicing schedule.

The point at which the service is due is calculated from the last indicator zero reset. It is determined by two parameters:

- the distance travelled,
- the time elapsed since the last service.



More than 1 800 miles (3 000 km) remain before the next service is due

When the ignition is switched on, no service information appears in the screen.

Between 600 miles (1 000 km) and 1 800 miles (3 000 km) remain before the next service is due

For 5 seconds after the ignition is switched on, the spanner symbolising the service operations comes on. The distance recorder display line indicates the distance remaining before the next service is due.

Example: 1 700 miles (2 800 km) remain before the next service is due.

For 5 seconds after the ignition is switched on, the screen indicates:



5 seconds after the ignition is switched on, **the spanner goes off**; the distance recorder resumes its normal operation. The screen then indicates the total and trip distances.



Less than 600 miles (1 000 km) remain before the next service is due

Example: 560 miles (900 km) remain before the next service is due.

For 5 seconds after the ignition is switched on, the screen indicates:



5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on** to indicate that a service must be carried out soon.



i Illumination of the key is accompanied by a message in the instrument panel screen.

Service overdue

Every time the ignition is switched on, an overdue service is immediately signaled by flashing of the spanner and the fixed illumination of the **Service** warning lamp.

SERVICE




5 seconds after the ignition is switched on, the distance recorder resumes its normal operation. **The spanner remains on.**



i The distance remaining may be weighted by the time factor, depending on the driving conditions. Therefore, the spanner may also come on if you have exceeded the period since the last service, indicated in the **warranty and maintenance record**.

Service indicator zero reset

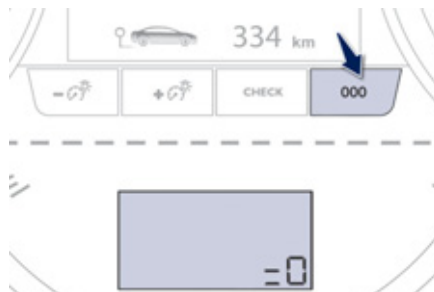

After each service, the service indicator must be reset to zero.

The procedure for resetting to zero is as follows:

- ☞ switch off the ignition,
- ☞ press and hold the trip distance recorder zero reset button,
- ☞ switch on the ignition; the distance recorder display begins a countdown,
- ☞ when the display indicates "**=0**", release the button; the spanner disappears.

i Following this operation, if you wish to disconnect the battery, lock the vehicle and wait at least five minutes for the zero reset to be taken into account.

Retrieving the service information

You can access the service information at any time.

 
- ☞ Press the trip distance recorder zero reset button.

The service information is displayed for a few seconds, then disappears.

Engine oil level indicator


System which informs the driver whether the engine oil level is correct or not. This information is indicated for a few seconds when the ignition is switched on, after the service information.

i The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.



Oil level correct

 This is indicated by a message in the instrument panel screen.



Oil level incorrect

This is indicated by a message in the instrument panel screen. If the low oil level is confirmed by a check using the dipstick, the level must be topped up to avoid damage to the engine.




Oil level indicator fault

This is indicated by a message in the instrument panel screen. Contact a PEUGEOT dealer or a qualified workshop.

Dipstick

Refer to the "Checks" section to locate the dipstick and the oil filler cap on your engine.

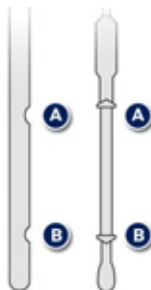

There are 2 marks on the dipstick:

- **A** = max; never exceed this level,
- **B** = min; top up the level via the oil filler cap, using the grade of oil suited to your engine.

Mileage recorder



The total mileage is displayed in zone **A** of the screen and the trip mileage in zone **B**.

Trip recorder zero reset




With the trip mileage displayed, press the button for a few seconds.


Trip computer

System which provides current information concerning the trip (range, fuel consumption...).


Instrument panel screen

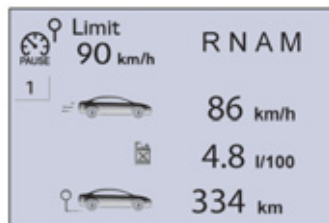

Information display

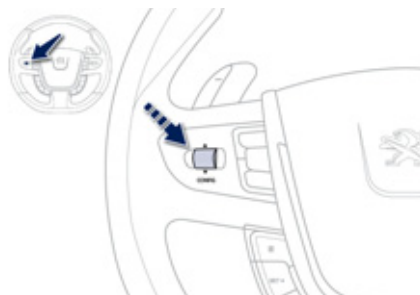

☞ Press the **steering mounted control** to display the various trip computer tabs in succession.

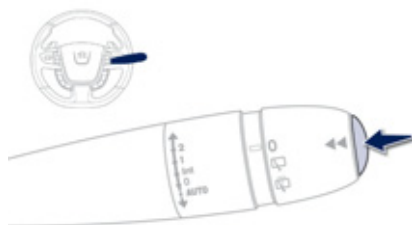

☞ Or on the end of the wiper stalk.

- The current information tab with:
 - the range,
 - the current fuel consumption,
 - the Stop & Start time counter.


1

- The trip "1" tab with:
 - the average speed, for the first trip,
 - the average fuel consumption,
 - the distance travelled.

2

- The trip "2" tab with:
 - the average speed, for the second trip,
 - the average fuel consumption,
 - the distance travelled.

Trip reset


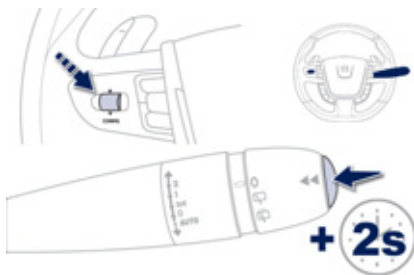


When the trip required is displayed, press the control for more than two seconds or make a long press on the left hand thumb wheel of the steering mounted controls.

Trips "1" and "2" are independent but their use is identical.


For example, trip "1" can be used for daily figures, and trip "2" for monthly figures.

Resetting the history

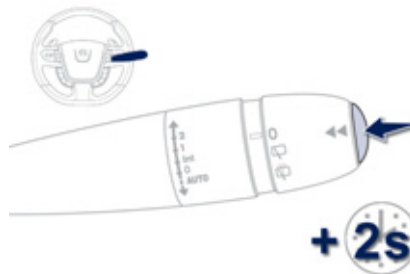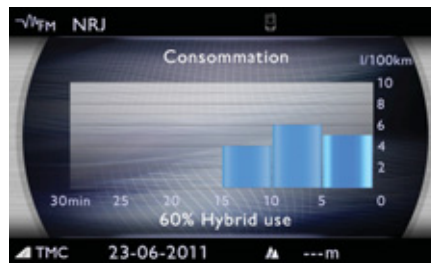

With the hybrid system active, when trip 2 displayed, press the control for 2 seconds to reset the history to zero.

 Trip computer, a few definitions...



Range

(miles or km)

This indicates the distance which can still be travelled with the fuel remaining in the tank in relation to the average fuel consumption over the last few miles (kilometres) travelled.

i This value may vary following a change in the style of driving or the relief, resulting in a significant change in the current fuel consumption.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

! The hybrid system and its electric motor do not provide additional range; follow the indications of the trip computer.



If dashes are displayed continuously while driving in place of the digits, contact a PEUGEOT dealer or a qualified workshop.



Current fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption during the last few seconds.



This function is only displayed from 20 mph (30 km/h).



Average fuel consumption

(mpg or l/100 km or km/l)

This is the average fuel consumption since the last trip computer zero reset.




Average speed

(mph or km/h)

This is the average speed calculated since the last trip computer zero reset (ignition on).

Setting the date and time

Peugeot Connect Navigation (RT6)

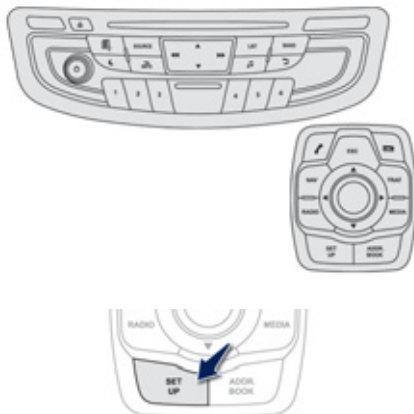

Press **SETUP** to display the "Configuration" menu.



Select "**Display configuration**" and confirm.

Select "**Set date and time**" and confirm.



Select the setting to adjust.
Confirm by pressing **OK**, then adjust the setting and confirm again to save the modification.

Adjust the settings one by one.
Then select "**OK**" on the screen and confirm to save the settings.

i Select "**Synchronize the minutes with GPS**" so that setting the minutes is done automatically by satellite reception.

Remote control key

System which permits central unlocking or locking of the vehicle using the lock or from a distance. It is also used to locate and start the vehicle, as well as providing protection against theft.



Unfolding the key


☞ First press this button to unfold the key.



Folding the key


☞ First press this button to fold the key.
If you do not press the button when folding the key, there is a risk of damage to the mechanism.

"Keyless Entry and Starting" system

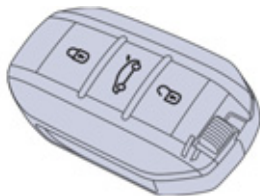

System that allows the opening, closing and starting of the vehicle while keeping the electronic key on your person. It can also be used as a remote control.

Unlocking the vehicle Complete unlocking

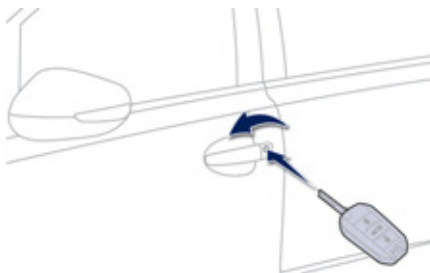

Using the key

- ☞ Turn the key to the front of the vehicle to unlock the vehicle.


Using the remote control



- ☞ Press the open padlock to unlock the vehicle.

Holding this button down opens the windows automatically.

To avoid inadvertently locking the vehicle with the windows open, contact a PEUGEOT dealer to deactivate this function.

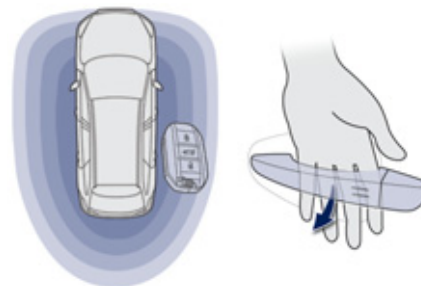

Using the electronic key

- ☞ With the electronic key on your person and in the defined zone, pass your hand behind the door handle to unlock the vehicle, then pull on the handle to open the door. Your passengers can also open their doors with the exception of the boot, as soon as the electronic key is in the defined zone around the vehicle.

i Unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds. According to version, the door mirrors unfold at the same time.



Accumulations (water, dust, grime, salt...) on the inner surface of the door handle may affect detection. If cleaning the inner surface of the door handle using a cloth does not resolve the problem, contact a PEUGEOT dealer or a qualified workshop. A sudden splash of water (stream of water, high pressure jet washer, ...) may be identified by the system as the desire to open the vehicle.

Selective unlocking



This is set via the instrument panel screen configuration menu. Complete unlocking is activated by default.

Using the remote control



To unlock the driver's door only press the open padlock once.

To unlock the other doors and the boot, press the open padlock again

Using the electronic key

- ☞ To unlock only the driver's door with the electronic key on your person, pass your hand behind the driver's door handle then pull the handle to open the door.
- ☞ To unlock the vehicle completely, pass your hand behind one of the passenger door handles, on the side of the vehicle where the electronic key is located, then pull the door handle.


i Each unlocking is confirmed by rapid flashing of the direction indicators for approximately two seconds. According to version, the door mirrors unfold at the same time as the first unlocking action.

Unlocking the boot

Using the remote control



- Press this button to unlock the vehicle and open the boot.

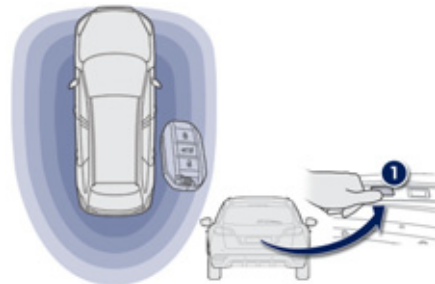

Using the electronic key

- With the electronic key in the defined zone, lift lever 1 to unlock the vehicle and open the boot.

Boot only function activated



This is set in the instrument panel configuration menu.

This function is deactivated by default.


- use of the remote control or the electronic key then unlocks and/or opens only the boot.



Don't forget to lock your boot afterwards.

Locking the vehicle

Normal locking

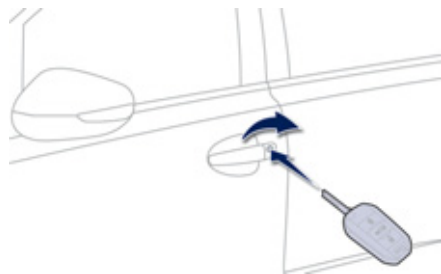


Using the key

- ☞ Turn the key towards the rear of the vehicle to lock the vehicle completely.

Using the remote control



- ☞ Press the closed padlock to lock the vehicle completely.

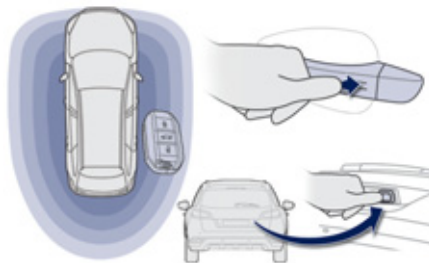

Using the electronic key

- ☞ With the electronic key in the defined zone, press with a finger on the door handle (at the markings) to lock the vehicle.
- ☞ From the boot, with the electronic key in the defined zone, press a button to lock the vehicle.

- i Maintaining the locking action (remote control or manual key) automatically closes the windows and sunroof.


- i Locking is confirmed by fixed lighting of the direction indicators for approximately two seconds. According to version, the door mirrors fold at the same time. It is not possible to lock the vehicle if an electronic key is left inside the vehicle or if the ignition is on.

- ! As a safety measure (children on board), never leave the vehicle without taking your key, even for a short period. Guard against theft when the electronic key is in the defined zone with the vehicle unlocked.

- i If one of the doors or the boot is still open or if an electronic key has been left inside the vehicle, the central locking does not take place. When the vehicle is locked, if it is unlocked inadvertently, it will relock automatically after about thirty seconds unless a door is opened. The folding and unfolding of the door mirrors by the remote control can be deactivated by a PEUGEOT dealer.

Deadlocking

- !** Deadlocking renders the exterior and interior door controls inoperative. It also deactivates the manual central control button. Therefore, never leave anyone inside the vehicle when it is deadlocked.

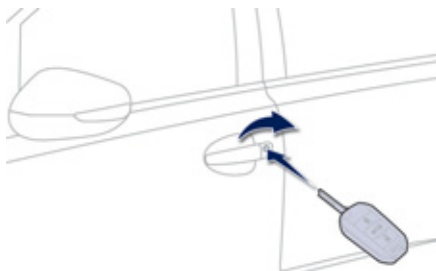

Using the key

- ☞ Turn the key to the rear in the driver's door lock to lock the vehicle completely.
- ☞ Turn the key to the rear again within five seconds to deadlock the vehicle.

Using the remote control



- ☞ Press the closed padlock to lock the vehicle completely or press the closed padlock for more than two seconds to close the windows automatically in addition to locking.
- ☞ Press the closed padlock again within five seconds to deadlock the vehicle.



Using the electronic key

By the doors:

- ☞ With the electronic key in the defined zone, press a finger on the door handle (at the markings) to lock the vehicle.
- ☞ Within five seconds, press the door handle again to deadlock the vehicle.

By the tailgate:

- ☞ With the electronic key in the defined zone, press the button to lock the vehicle.
- ☞ Within five seconds, press the button to deadlock the vehicle.

i Deadlocking is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Locking/ unlocking from the inside



☞ Press the button.

This allows the doors and the boot to be locked or unlocked.

! If the vehicle is deadlocked, the button is not active. In this case, use the key or the remote control to unlock.

i When carrying large objects with the boot open, you can press this button to inhibit the boot open alert signal. When locking from inside, the door mirrors do not fold.

Automatic central locking of the doors

The doors can lock automatically while driving (speed above 6 mph (10 km/h)).

To activate or deactivate this function, press and hold the button until a message appears in the screen.

! Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

Locating your vehicle




☞ Press the closed padlock to locate your locked vehicle in a car park.

This is indicated by lighting of the courtesy lamps and flashing of the direction indicators for a few seconds.

Emergency procedure

Emergency unlocking/locking using the electronic key

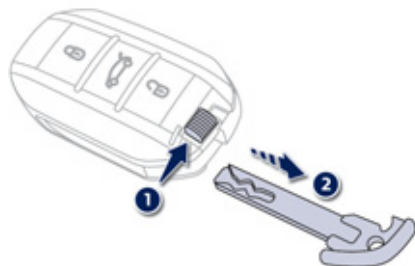


The integral key is used to lock and unlock the vehicle when the electronic key cannot operate:

- cell battery flat, vehicle battery discharged or disconnected, ...
 - vehicle located in an area with strong electromagnetic emissions.
- ☞ Pull on button 1, to extract the integral key 2.
- ☞ Unlock or lock the vehicle using the key.

Manual locking

Driver's door

Insert the key in the lock to lock or unlock the door.

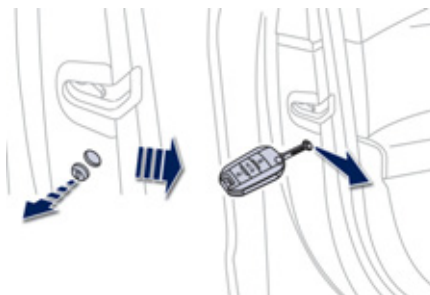

Passenger doors

- ☞ On the rear doors, check that the child lock is not on.
- ☞ Remove the black cap located on the edge of the door, using the key.
- ☞ Insert the key into the aperture without forcing, then without turning, move the latch sideways towards the inside of the door.
- ☞ Remove the key and refit the cap.

Remote control problem

Following disconnection of the vehicle battery, replacement of the remote control battery or in the event of a remote control malfunction, you can no longer unlock, lock or locate your vehicle.

- ☞ First of all, use the key in the lock to unlock or lock your vehicle.
 - ☞ Then, reinitialise the remote control.
- If the problem persists, contact a PEUGEOT dealer or a qualified workshop as soon as possible.


Reinitialisation with the remote control

- ☞ Switch on the ignition.
 - ☞ Immediately press one of the remote control buttons for a few seconds.
 - ☞ Switch off the ignition.
- The remote control is fully operational again.

Reinitialisation with the electronic key

- ☞ Switch of the ignition.
 - ☞ Immediately press one of the remote control buttons for a few seconds.
 - ☞ Switch on the ignition
- The electronic key is fully operational again.

Changing the battery of the key

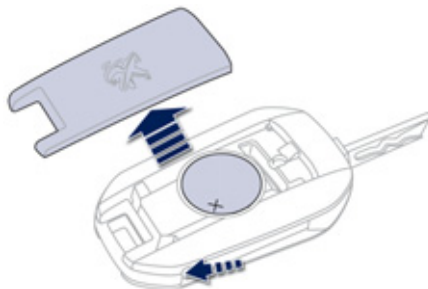

Battery ref.: CR2032 / 3 volts.


This replacement battery is available from a PEUGEOT dealer or a qualified workshop. A message appears in the instrument panel screen when replacement of the battery is needed.

- ☞ Unclip the cover using a small screwdriver at the cutout.
- ☞ Lift off the cover.
- ☞ Remove the flat battery from its location.
- ☞ Fit the new battery into its location observing the original direction of fitment.
- ☞ Clip the cover onto the casing.



Do not throw the remote control batteries away, they contain metals which are harmful to the environment. Take them to an approved collection point.

Changing the battery of the electronic key

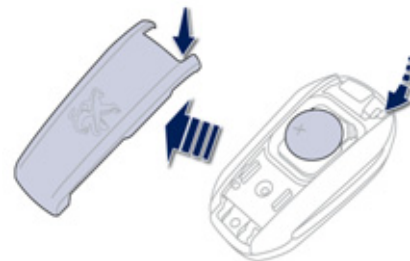

Battery ref.: CR2032 / 3 volts.

This replacement battery is available from a PEUGEOT dealer or a qualified workshop. A message is displayed in the instrument panel screen when replacement of the battery is needed.

- ☞ Unclip the cover using a pointed object at the key ring.
- ☞ Slide the flat battery out of its location.
- ☞ Slide the new battery into its location observing the original direction of fitment.
- ☞ Clip the cover in place starting at the front.
- ☞ Reinitialise the electronic key.

! Lost keys, remote control, electronic key

Visit a PEUGEOT dealer with the vehicle's V5 registration document and your personal identification documents.
The PEUGEOT dealer will be able to retrieve the key code and the transponder code required to order a replacement.

Remote control

The high frequency remote control is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it.

Do not repeatedly press the buttons of your remote control out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

The remote control does not operate when the key is in the ignition, even when the ignition is switched off.

Locking the vehicle

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency.

As a safety precaution (with children on board), remove the key from the ignition or take the electronic key when you leave the vehicle, even for a short time.

Electrical interference

The Keyless Entry and Starting electronic key may not operate if close to certain electronic devices: telephone, laptop computer, strong magnetic fields, ...

Anti-theft protection


Do not make any modifications to the electronic engine immobiliser system; this could cause malfunctions.

Don't forget to turn the steering to engage the steering lock.

When purchasing a second-hand vehicle

Have the key codes memorised by a PEUGEOT dealer, to ensure that the keys in your possession are the only ones which can start the vehicle.

Alarm

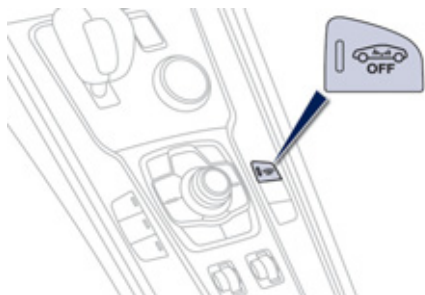

System which protects and provides a deterrent against theft and break-ins. It provides the following types of monitoring:

- Exterior perimeter

The system checks for opening of the vehicle. The alarm is triggered if anyone tries to open a door, the boot or the bonnet...

- Interior volumetric

The system checks for any variation in the volume in the passenger compartment. The alarm is triggered if anyone breaks a window, enters the passenger compartment or moves inside the vehicle.

- Tilt

The system checks for any change in the attitude of the vehicle. The alarm is triggered if the vehicle is lifted, moved or knocked.

! Self-protection function

The system checks for the putting out of service of its components.

The alarm is triggered if the battery, the central control unit or the wires of the siren are put out of service or damaged.

For all work on the alarm system, contact a PEUGEOT dealer or a qualified workshop.

Locking the vehicle with full alarm system

Activation

☞ Switch off the ignition and get out of the vehicle.



☞ Press the locking button on the remote control or lock the vehicle using the Keyless Entry and Starting system.

The monitoring system is active: the indicator lamp on the button flashes once per second. After the locking button on the remote control is pressed or the vehicle locked using the Keyless Entry and Starting system, the exterior perimeter monitoring is activated after a delay of 5 seconds, the interior volumetric monitoring after 45 seconds and anti-tilt monitoring after 90 seconds.

If an opening (door, boot...) is not closed fully, the vehicle is not locked but the exterior perimeter monitoring will be activated after a delay of 45 seconds.

Deactivation of the volumetric monitoring



☞ Press the unlocking button on the remote control or unlock the vehicle using the Keyless Entry and Starting system.



The volumetric protection system is deactivated: the indicator lamp in the button goes off.

Locking the vehicle with exterior perimeter monitoring only

Deactivate the interior volumetric and anti-lift monitoring to avoid unwanted triggering of the alarm in certain cases such as:

- leaving a window partially open,
- washing your vehicle,
- changing a wheel,
- having your vehicle towed,
- transportation by sea.

Deactivation of the interior volumetric and anti-tilt monitoring



- ☞ Switch of the ignition and within ten seconds, press this button until the indicator lamp is on continuously.
- ☞ Get out of the vehicle.



- ☞ Press the locking button on the remote control immediately or lock the vehicle using the Keyless Entry and Starting system.

The exterior perimeter monitoring alone is activated: the indicator lamp in the button flashes once per second.

To be effective, this deactivation must be carried out each time the ignition is switched off.

Reactivation of the interior volumetric and anti-tilt monitoring



- ☞ Press the unlocking button on the remote control or unlock the vehicle using the Keyless Entry and Starting system to deactivate the exterior perimeter monitoring.



- ☞ Press the locking button on the remote control or lock the vehicle using the Keyless Entry and Starting system to activate all the monitoring functions.



The indicator lamp in the button again flashes once per second.

Triggering of the alarm

This is indicated by sounding of the siren and flashing of the direction indicators for thirty seconds. The monitoring functions remain active until the alarm has been triggered eleven times in succession.



When the vehicle is unlocked using the remote control or unlocked using the Keyless Entry and Starting system, rapid flashing of the indicator lamp in the button informs you that the alarm was triggered during your absence. When the ignition is switched on, this flashing stops immediately.

Failure of the remote control

To deactivate the monitoring functions:

- ☞ Unlock the vehicle using the key in the driver's door lock.
- ☞ Open the door; the alarm is triggered.
- ☞ Switch on the ignition; the alarm stops. The indicator lamp in the button switches off.

Locking the vehicle without activating the alarm

- ☞ Lock or deadlock the vehicle using the key in the driver's door lock.

Operating fault

When the ignition is switched on, fixed illumination of the indicator lamp in the button indicates a fault in the system.

Have it checked by a PEUGEOT dealer or a qualified workshop.


Automatic activation*

2 minutes after the last door or the boot is closed, the system is activated automatically.

- ☞ To avoid triggering the alarm on entering the vehicle, first press the unlocking button on the remote control or unlock the vehicle using the Keyless Entry and Starting system.

* According to country.

Electric windows

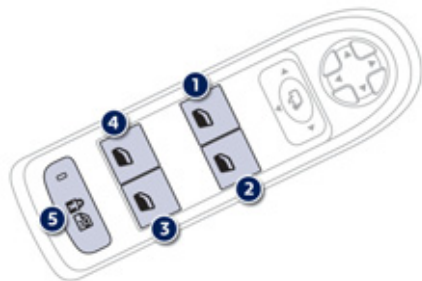

1. Left hand front electric window switch.
2. Right hand front electric window switch.
3. Right hand rear electric window switch.
4. Left hand rear electric window switch.
5. Deactivating the rear electric window switches, locking the rear doors (child lock).

Manual operation

To open or close the window, press or pull the switch gently. The window stops as soon as the switch is released.

Automatic operation (depending on version)

To open or close the window, press or pull switch fully: the window opens or closes completely when the switch is released. Pressing the switch again stops the movement of the window.

The electric window switches remain operational for approximately one minute after the key has been removed from the ignition. Once this time has elapsed, the electric windows will not operate. To reactivate them, switch the ignition on again.

Safety anti-pinch

When the window rises and meets an obstacle, it stops and immediately partially lowers again. In the event of unwanted opening of the window on closing, press the switch until the window opens completely, then pull the switch immediately until the window closes. Continue to hold the switch for approximately one second after the window has closed.

The safety anti-pinch function is not active during this operation.

Deactivating the rear window controls

For the safety of your children, press switch **5** to prevent operation of the rear windows irrespective of their position.

The interior controls for the rear doors are also deactivated.

When the button is pressed down, the warning lamp is on, the switches are deactivated. When the button is raised, the switches are active, the warning lamp is off.

Reinitialisation of the electric windows

Following reconnection of the battery, the safety anti-pinch function must be reinitialised. The safety anti-pinch function is not active during these operations:

- lower the window completely, then raise it, it will rise in steps of a few centimetres each time the switch is pressed. Repeat the operation until the window closes completely,
- continue to press the switch for at least one second after reaching this position, window closed.



Always remove the key from the ignition when leaving the vehicle, even for a short time.


In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned.

When operating the passenger electric window switches, the driver must ensure that no one is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

Boot Opening

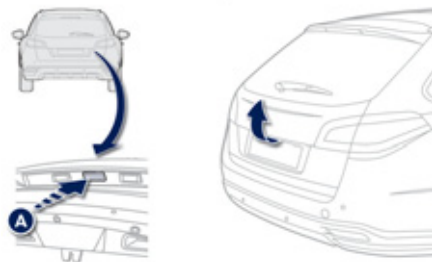

- After unlocking the vehicle completely using the remote control or the key, press at the top (on lever **A**), and raise the tailgate.



From the inside

Hold this button down until unlocking of the boot is heard.


Closing

- Lower the tailgate using the interior grab handle.

If the tailgate is not closed correctly, with the **hybrid system active** or the **vehicle moving** (speed above 6 mph (10 km/h)), a message appears in the instrument panel screen for a few seconds.

Motorised tailgate


Opening

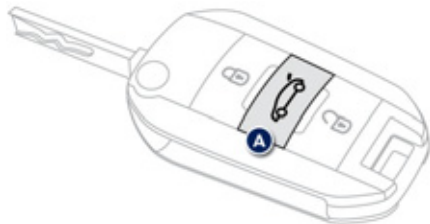

Vehicle locked/deadlocked



- Press this button **A** on the remote control.

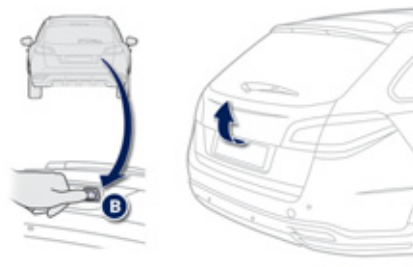

Vehicle unlocked

- Press button **A** on the remote control, or press the push button **B** on the tailgate.




From the inside

- Press this button to unlock and open the tailgate.



Check that there is no obstacle in the way when opening the tailgate remotely.

Closing

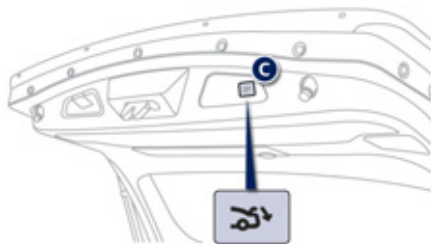


Press this button **C** to close the tailgate electrically.

Do not hinder closing of the tailgate: any obstacle to closing causes the tailgate to stop and rise a few centimetres automatically. To close the tailgate manually: move the tailgate slightly up then down to disengage it from its drive then lower it until closed.



To avoid the risk of injury, ensure that no one is close to the rear of the vehicle when opening or closing the tailgate.

Stopping the opening or closing

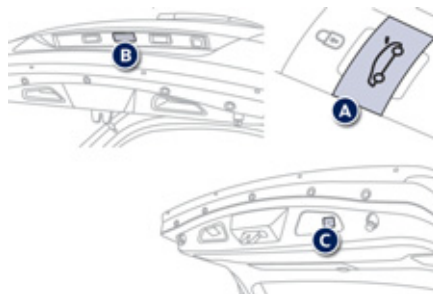

While electric opening or closing of the tailgate is in progress, you can stop its movement at any time:

press the interior button or button **A** on the remote control or button **B** or **C** on the tailgate.

Adjusting the opening height

The maximum opening height of the tailgate can be set and memorised (restricted overhead clearance, ...).

This memorisation is done in two steps, by successive presses on button **C**:

- during opening, a first press stops the tailgate at the desired height,
- a second maintained press memorises the position of the tailgate; an audible signal confirms the memorisation.


To delete this memorisation, make a new maintained press until the audible signal is heard.

"Boot open" warning

With the hybrid system active or when the vehicle is moving, if the tailgate is not properly closed, a message accompanied by an audible signal (from 6 mph (10 km/h)) is displayed in the instrument panel screen.

Tailgate release

System allowing the mechanical unlocking of the boot in the event of a battery or central locking system malfunction.

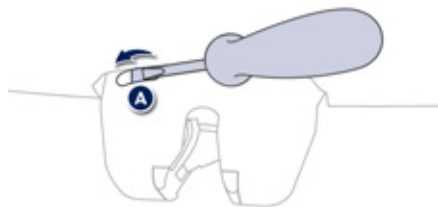

Unlocking

- ☞ Fold back the rear seats to gain access to the lock from inside the boot.
- ☞ Insert a small screwdriver into hole **A** of the lock to unlock the tailgate.
- ☞ Move the latch to the left.

Locking after closing


If the fault persists after closing again, the boot will remain locked.

Panoramic sunroof



Your vehicle is fitted with a tinted glass panoramic sunroof which increases the light and visibility in the passenger compartment. Its electric blind helps control the temperature and noise level in the passenger compartment.

Electric blind

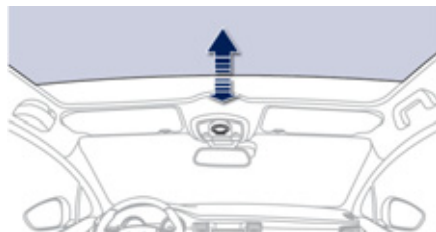

The blind is controlled electrically by a rotary opening dial.

Opening

Turn the dial to the left (several possible opening settings).

Closing

Return the dial to the initial position.

If the position of the blind does not agree with the position indicated by the dial, press the dial to open the blind to this position.

Safety anti-pinch

If the blind encounters an obstacle during closing, it stops and partially opens again to the 2nd position.

If the blind fails to close at a second attempt, it may be necessary to force the closing of the blind using the reinitialisation procedure.

Reinitialising the system

Following reconnection of the battery, or in the event of a malfunction in its operation, it may be necessary to reinitialise the system:

- ☞ turn the dial to the fully open position,
- ☞ wait until the blind is fully open,
- ☞ then immediately press the dial for at least 3 seconds,

If the blind opens on its own when closing, as soon as possible after the blind stops:

- put the dial in the fully closed position,
- press the dial,
- maintain pressure on the dial until the blind closes.


The anti-pinch function is inoperative during these operations.

! In the event of contact during operation of the blind, you must reverse its movement. To do this, turn the dial. When the driver operates the dial, they must ensure that nothing prevents the blind from closing correctly. The driver must ensure that the passengers use the blind correctly. Be aware of children during operation of the blind.

Fuel tank

Capacity of the tank: approximately 72 litres.

Opening

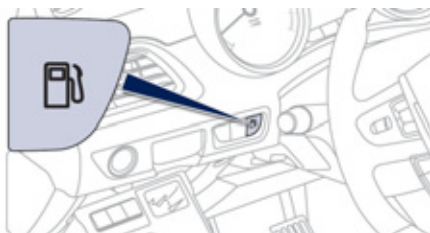


- Press the switch.
This control remains active for a few minutes after switching off the ignition. If necessary, switch the ignition on again to reactivate it.

READY

You must switch off the engine by stopping the hybrid system (the **Ready** lamp must be off) to avoid any automatic restart of the engine while refuelling.

Refuelling

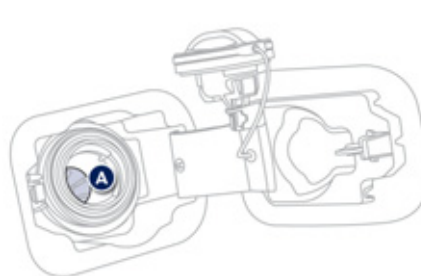

Additions of fuel must be of at least 5 litres to be registered by the fuel gauge. Opening the filler cap may result in an inrush of air. This vacuum is entirely normal and results from the sealing of the fuel system.

- ☞ Take care to select the pump that delivers the correct fuel type for your vehicle's engine (reminder on a label on the inside of the filler flap).
- ☞ Open the filler cap by turning it a 1/4 turn to the left.
- ☞ Remove the filler cap and hang it on its carrier (on the filler flap).

- ☞ Introduce the nozzle and push it in fully (pushing on the the metal non-return valve **A**).
- ☞ Fill the tank. Do not continue past the third cut-off of the nozzle, as this may cause malfunctions.
- ☞ Refit the filler cap turning it a 1/4 turn to the right.
- ☞ Push the filler flap to close it.

Your vehicle is fitted with a catalytic converter, a device which helps to reduce the level of harmful emissions in the exhaust gases.

! If you have put in the wrong fuel for your vehicle, you must have have the tank drained and refilled with the correct fuel before you start the engine.

Low fuel level



When the low fuel level in the tank is reached, this warning lamp comes on in the instrument panel, accompanied by an audible warning and a message in the instrument panel screen.

When it first comes on, around **7 litres** of fuel remain in the tank.

You must refuel as soon as possible to avoid running out.

Fuel supply cut-off


Your vehicle is equipped with a safety device which cuts off the fuel supply in the event of a collision.

Diesel misfuel prevention

Mechanical device which prevents filling the tank of a Diesel vehicle with petrol. It avoids the risk of engine damage that can result from filling with the wrong fuel.

Located in the filler neck, the misfuel prevention device appears when the filler cap is removed.

Operation

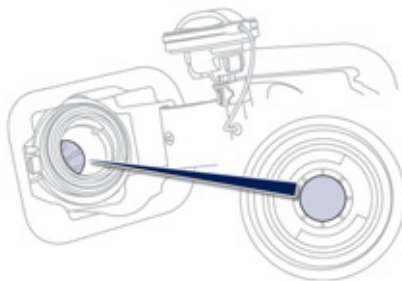

When a petrol filler nozzle is introduced into the fuel filler neck of your Diesel vehicle, it comes into contact with the flap. The system remains closed and prevents filling.

Do not persist but introduce a Diesel filler nozzle.

i It is still possible to use a fuel can to fill the tank but this must be done slowly. In order to ensure a good flow of fuel, do not place the nozzle of the fuel can in direct contact with the flap of the misfuel prevention device.

Travelling abroad

As Diesel fuel pump nozzles may be different in other countries, the presence of the misfuel prevention device may make refuelling impossible.

Before travelling abroad, we recommend that you check with the PEUGEOT dealer network, whether your vehicle is suitable for the fuel pumps in the country in which you want to travel.

Quality of the fuel used for Diesel engines



DIESEL


The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

Front seats

Electric adjustments

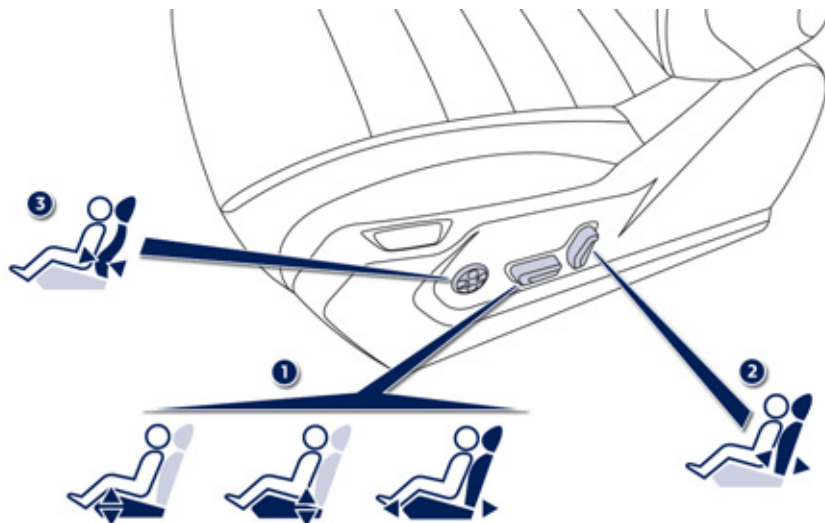

1. Adjustment of the seat cushion angle and height, and forwards-backwards adjustment

- ☞ Raise or lower the front of the control to adjust the seat cushion angle.
- ☞ Raise or lower the rear of the control to raise or lower the seat.
- ☞ Simultaneously raise or lower the front and rear of the control in order to raise or lower the entire seat.

2. Adjustment of the backrest angle

Move the control forwards or backwards to adjust the backrest angle.

3. Adjustment of lumbar support

This function allows you to independently adjust the height and level of lumbar support.

Move the control:


- ☞ Forwards or backwards to increase or reduce the lumbar support.
- ☞ Upwards or downwards to raise or lower the lumbar support zone.

i Switch on the ignition or start the engine if the vehicle has gone into economy mode.

The electric functions of the driver's seat are active for about a minute after opening the front door. They are deactivated about a minute after switching off the ignition and in economy mode.

To reactivate them, switch on the ignition.

Storing driving positions

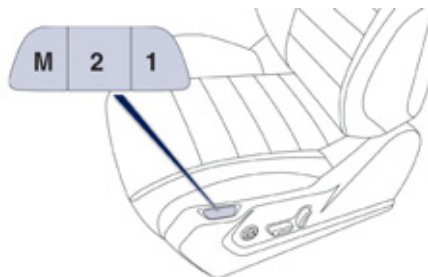

System which stores the electrical settings of the driver's seat and door mirrors as well as the head-up display settings. It enables you to store up to two positions using the buttons on the side of the driver's seat.

Storing a position using buttons M / 1 / 2

- ☞ Switch on the ignition.
- ☞ Adjust your seat, the door mirrors and the head-up display.
- ☞ Press button **M**, then press button **1** or **2** within four seconds.
An audible signal indicates that the position has been stored.

Storing a new position cancels the previous position.

Recalling a stored position

Ignition on or engine running

- ☞ Briefly press button **1** or **2** to recall the corresponding position.

An audible signal indicates the end of the adjustment.

You can interrupt the current movement by pressing button **M**, **1** or **2** or by using one of the seat controls.

A stored position cannot be recalled while driving.

Recalling stored positions is deactivated 45 seconds after switching off the ignition.

Welcome function


The welcome function assists entry and leaving the vehicle.

After switching off the ignition and opening the driver's door, the seat moves back automatically and then stays in this position, ready for the next entry to the vehicle.

When switching on the ignition, the seat moves forward to the stored driving position.

When moving the seat, take care that no person or object hinders the automatic movement of the seat.

i To activate or deactivate this function, contact a PEUGEOT dealer or a qualified workshop.

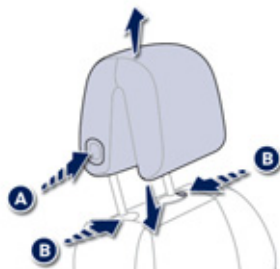

Head restraint height and angle adjustment


- ☞ To lower the head restraint, press the lug **A** and, going beyond the stiff point, guide the head restraint downwards, then release the button at the desired position.
- ☞ To raise the head restraint, guide it upwards to the desired position.
- ☞ To remove the head restraint, press the two lugs **B** and pull the head restraint upwards.
- ☞ To put the head restraint back in place, engage the head restraint stems in the openings keeping them in line with the seat back. Check that it has engaged by pulling it upwards.

! The head restraint is fitted with a locking mechanism which prevents it from lowering; this is a safety device in case of impact.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

Never drive with the head restraints removed; they must be in place and adjusted correctly.

Heated seats control

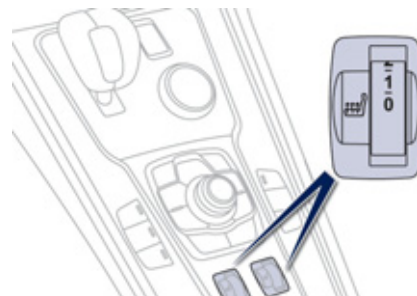

With the hybrid system active, the front seats can be heated individually.

- ☞ Use the adjustment wheel to switch on and select the level of heating required:


0: Off.

1: Low.

2: Medium.

3: High.

Massage function

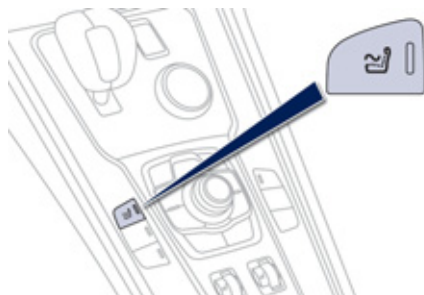

This function provides the driver with a back massage. It only operates when the engine is running as well as in STOP mode of the Stop & Start system.

Activation



Press this button.

The warning lamp comes on and the massage function is activated for a period of 1 hour. During this time, massage is performed in cycles of 6 minutes (4 minutes of massage followed by 2 minutes break). In total, the system will perform 10 cycles. After one hour, the function is deactivated, the warning lamp goes off.

Deactivation




You can deactivate the massage function at any time by pressing this button.

Rear seats

Bench seat the left-hand (1/3) or right-hand (2/3) section of which can be folded to adapt the boot load space.

Outer rear seat head restraints

These have a high position (comfort and safety), a low position (rear visibility) and can also be removed.

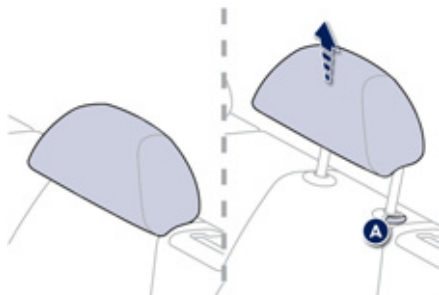

To remove a head restraint:

- ☞ pull the head restraint fully upwards,
- ☞ then, press the lug **A**.

! Never drive with rear passengers when the head restraints are removed; the head restraints must be in place and in the high position.

Folding the seat from the boot

Each section of the bench seat (1/3 or 2/3) has its own control to release the seat back and its seat cushion from the boot.




- ☞ Check that nothing is preventing the seat back from folding (head restraint, seat belts, ...),
- ☞ check also that no object on or under the seat could hinder its movement,




- ☞ pull the control from the boot and push the seat backrest.

Folding the seat from the rear

Check that no object, either on or underneath the seat, could hinder its movement.

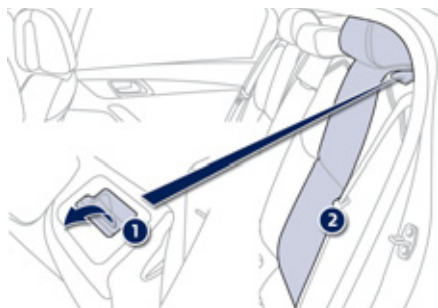

- ☞ Move the corresponding front seat forwards if necessary,
- ☞ check that the seat belt is positioned correctly on the side of the seat back,
- ☞ place the head restraints in the low position or remove them if necessary,

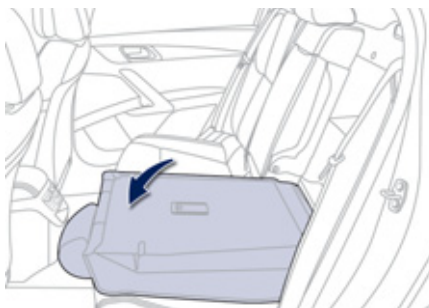


- ☞ pull the control 1 forwards to release the seat backrest 2 then fold it forwards.

Returning the seat back to its original position

When returning the rear seat back to its original position, take care not to trap the seat belts and ensure that their buckles are positioned correctly.


3

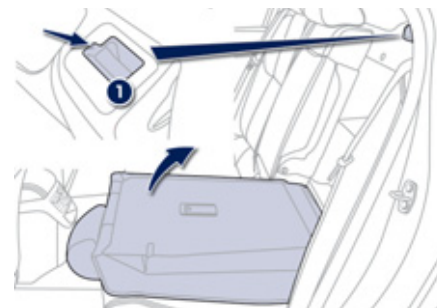

- ☞ Put the seat back in the upright position and secure it, the seat cushion also returns to its original position,
- ☞ check that the red indicator, located at the control 1, is no longer visible,
- ☞ refit the head restraints or put them back in place.

Mirrors

Door mirrors

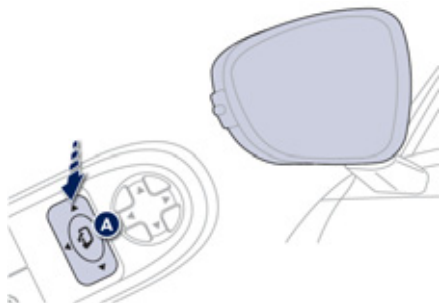


Each fitted with an adjustable mirror glass permitting the lateral rearward vision necessary for overtaking or parking. They can also be folded for parking in confined spaces.

Demisting - Defrosting

If your vehicle is fitted with heated mirrors, the demisting-defrosting operates by switching on the heated rear screen (refer to the "Rear screen demist-defrost" page).

The rear screen demisting - defrosting can only operate when the hybrid system is active.

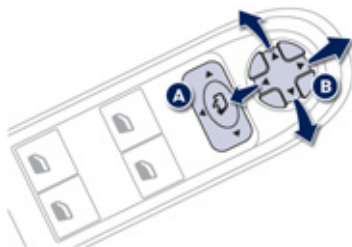

Adjustment

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Move control **B** in all four directions to adjust.
- ☞ Return control **A** to the central position.

i The objects observed are, in reality, closer than they appear. Take this into account in order to correctly judge the distance of vehicles approaching from behind.

Folding

- Automatic: lock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.

i If the mirrors are folded using control **A**, they will not unfold when the vehicle is unlocked. Pull again on control **A**.


Unfolding

- Automatic: unlock the vehicle using the remote control or the key.
- Manual: with the ignition on, pull control **A** rearwards.

i The folding and unfolding of the door mirrors using the remote control can be deactivated by a PEUGEOT dealer or a qualified workshop. Fold the mirrors when putting your vehicle through an automatic car wash.

Automatic tilting in reverse gear

System which provides a view of the ground during parking manoeuvres in reverse gear.

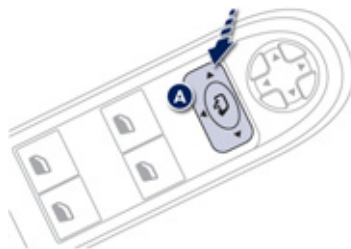

Programming

- ☞ With the engine running, engage reverse gear.
 - ☞ Select and adjust the left-hand and right-hand mirrors in succession.
- The adjustment is stored immediately.

Switching on

- ☞ With the engine running, engage reverse gear.
- ☞ Move control **A** to the right or to the left to select the corresponding mirror.

The glass of the mirror selected tilts downwards, in accordance with its programming.

Switching off

- ☞ Exit reverse gear and wait ten seconds.
- or
- ☞ Return control **A** to the central position.
- The mirror glass returns to its initial position. The mirror glass also returns to its initial position:
- if the speed exceeds 6 mph (10 km/h),
 - if the engine is switched off.

Rear view mirror

Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, which darkens the mirror glass and reduces the nuisance to the driver caused by the sun, headlamps from other vehicles...



Manual day/night model

Adjustment

- ☞ Adjust the mirror so that the glass is directed correctly in the "day" position.

Day / night position

- ☞ Pull the lever to change to the "night" anti-dazzle position.
- ☞ Push the lever to change to the normal "day" position.

! As a safety measure, the mirrors should be adjusted to reduce the "blind spot".



Automatic day/night model

By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.

i In order to ensure optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.

Steering wheel adjustment



- ☞ **When stationary**, lower the control lever to release the steering wheel adjustment mechanism.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Pull the control lever to lock the steering wheel adjustment mechanism.

! As a safety precaution, these operations should only be carried out while the vehicle is stationary.

Interior fittings

1. Cooled glove box

It has a ventilation nozzle which can be closed using a thumb wheel. It delivers cooled air.

2. Retractable cup holder

Press the cover to open the cup holder

3. Removable ashtray

Press the lid to open the ashtray.

To empty it, pull it out by pulling it upwards.

4. Coin holder


5. Peugeot Connect Assistance, Peugeot Connect SOS

6. Front armrest

7. 12 V accessory socket (120 W)

Observe the maximum power rating to avoid damaging your accessory


8. Peugeot Connect USB

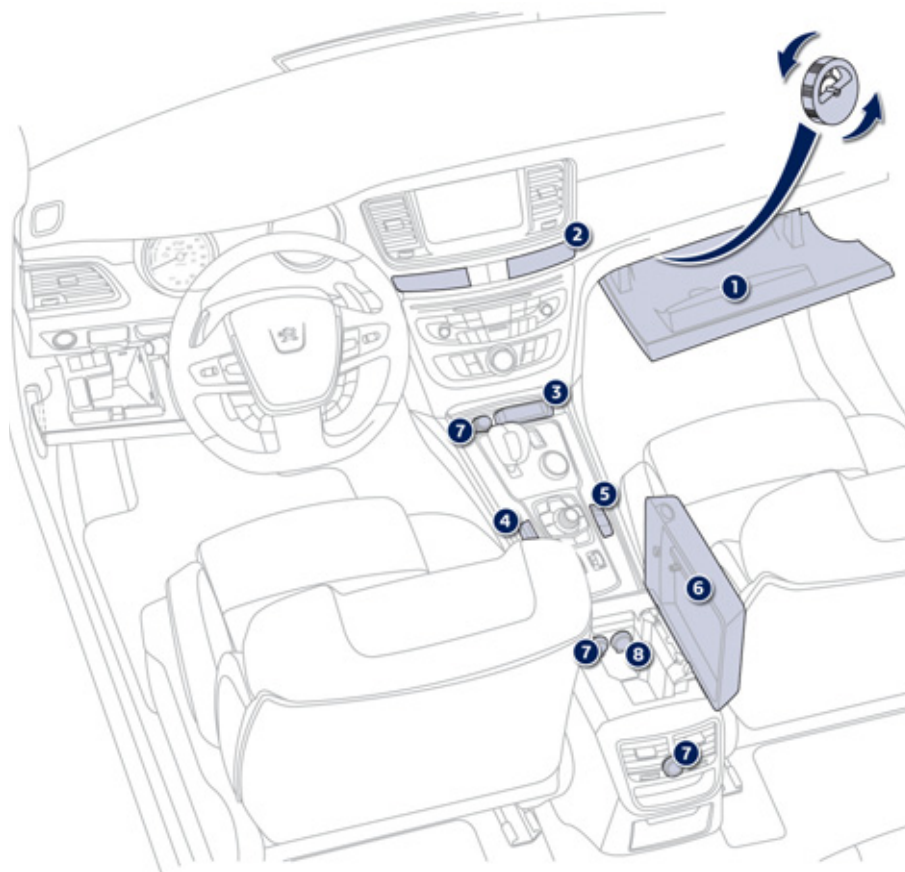

Mats

Removable carpet protection.

Fitting

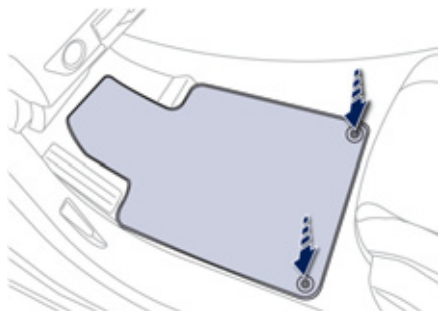

When fitting the mat for the first time, on the driver's side use only the fixings provided in the wallet attached.

The other mats are simply placed on the carpet.

Removal

To remove the mat on the driver's side:

- ☞ move the seat as far back as possible,
- ☞ unclip the fixings,
- ☞ remove the mat.

Refitting

To refit the mat on the driver's side:

- ☞ position the mat correctly,
- ☞ refit the fixings by pressing,
- ☞ check that the mat is secured correctly.

! To avoid any risk of jamming of the pedals:

- only use mats which are suited to the fixings already present in the vehicle; these fixings must be used,
- never fit one mat on top of another.

The use of mats not approved by PEUGEOT may interfere with access to the pedals and hinder the operation of the cruise control / speed limiter.

The mats approved by PEUGEOT have two fixings located below the seat.

Rear armrest



- ☞ Lower the rear armrest for a more comfortable position.
- It may be fitted with cup holders and also gives access to the ski flap.

Ski flap

Facility for storing and transporting long objects.



Opening

- ☞ Lower the armrest.
- ☞ Press the flap opening control.
- ☞ Lower the flap.
- ☞ Load the objects from inside the boot.

Peugeot Connect USB



This connection box, consisting of a JACK auxiliary socket and a USB port, is located in the front armrest (under the cover).

It permits the connection of portable device, such as a digital audio player of the iPod® type or a USB memory stick.

It reads the audio file formats (MP3, OGG, WMA, WAV, ...) which are transmitted to your audio equipment and played via the vehicle's speakers.

You can manage these files using the steering mounted controls or the audio system control panel and display them in the instrument panel screen.



When the USB port is used, the portable device charges automatically.

i For more information on the use of this system, refer to the "Audio and Telematics" section.


Boot fittings

1. **Boot lamps**
2. **Rear seats folding controls**
3. **Retractable hooks**
4. **12 V accessory socket (120 W max)**
5. **Storage wells**
With towing eye, a wheel chock and a temporary puncture repair kit (according to destination country and equipment).
6. **Load space cover**
(see following page)

7. **Stowing rings**
Take each ring in turn and then slide them into the oblong housing. Pressing the button, move the ring to the desired position.

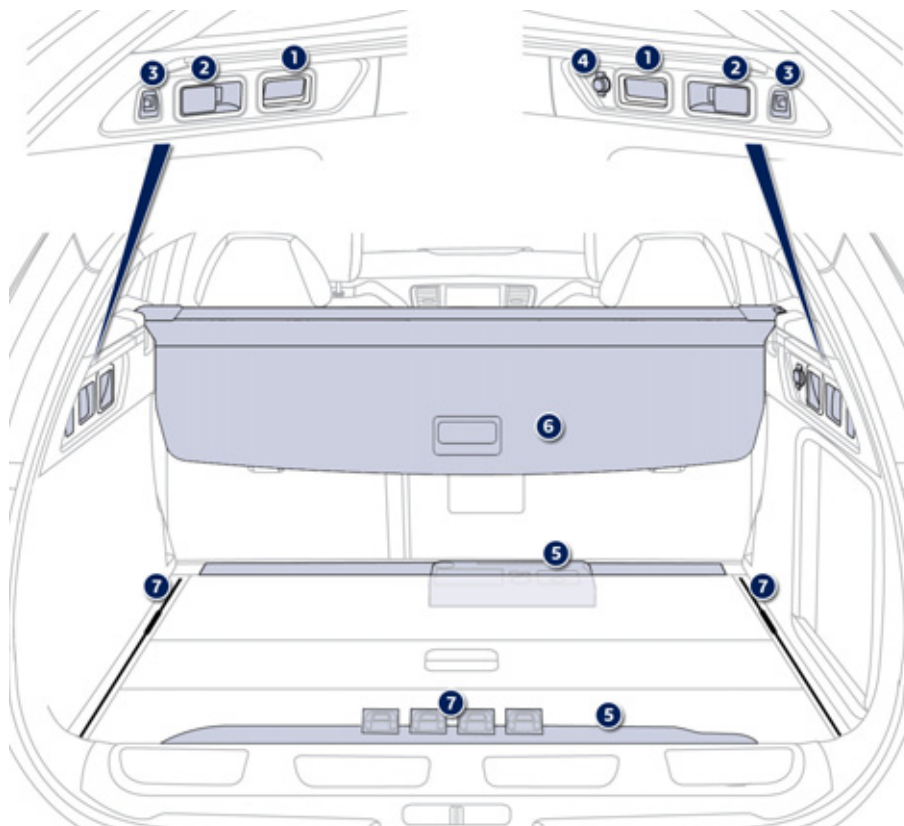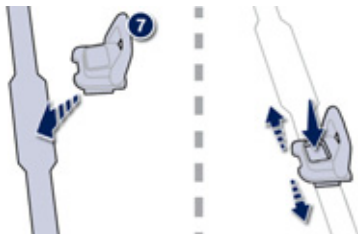

Fan cooling of the high voltage battery

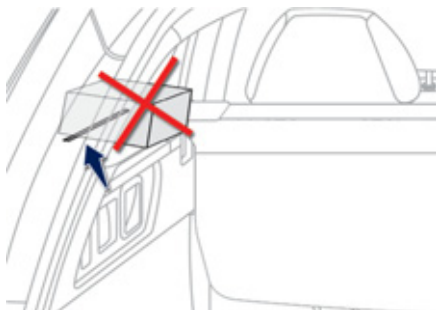

The high voltage battery has an air cooling system, comprising an air intake (located on the rear shelf) and a fan (located behind the boot trim).

This system does not work continuously, but adapts the force of the fan cooling to the requirements of the battery. Its operation can be heard at the rear, even if the vehicle is stopped after a run. If the air intake is blocked, the battery may overheat, damaging the battery and causing a loss of performance of the hybrid system.




For the best use of the high voltage battery, please follow these recommendations:

- do not obstruct the air intake with loose articles, otherwise, the battery may overheat, causing a loss of performance of the hybrid system
- do not spill fluids, as this may cause damage to the battery.


Luggage cover

To reel in

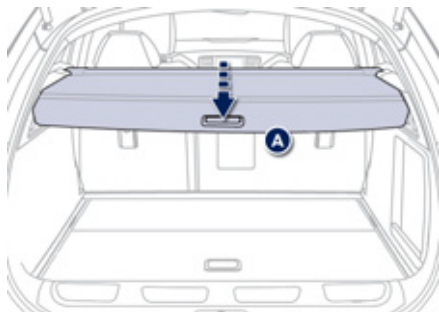

- ☞ Gently push on the (PRESS) handle, the luggage cover reels in automatically. The moving part **A** can be folded against the rear bench seat backrest.

To remove

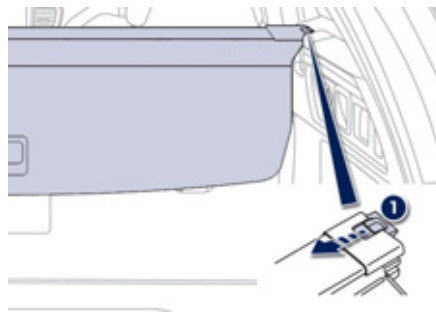

- ☞ Compress the control **1** and lift the luggage cover on the right then on the left to remove it.

To install




- ☞ Position the left-hand end of the luggage cover roller in its location **B** behind the rear bench seat.
- ☞ Compress the roller control **1** and put the roller in place in its location **C** on the right.
- ☞ Release the control to secure the luggage cover.
- ☞ Unreel it to its fastening on the rear pillar.

Warning triangle (stowing)

The location for a folded triangle is in the inner trim panel of the boot lid.


! Before leaving your vehicle to set up and install the triangle, put on your high visibility vest.

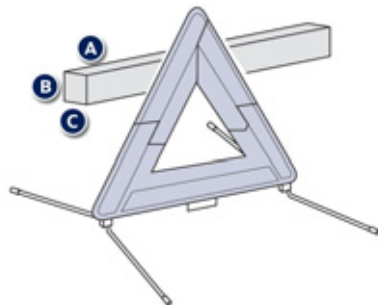

The dimensions of the triangle (once folded) or its storage box must be:

- **A:** length = **438 mm**,
- **B:** height = **56 mm**,
- **C:** width = **38 mm**.

To use the triangle, refer to the manufacturer's instructions.

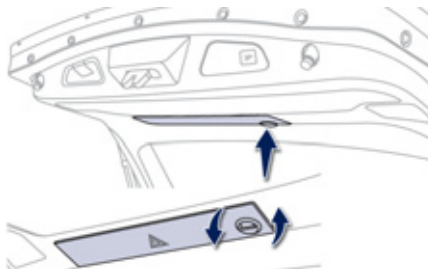

- ☞ Turn the knob to remove the cover.
- ☞ Hold the cover and the triangle so that they do not fall.

Placing the triangle in the road

- ☞ Place the triangle at a distance behind the vehicle, as shown in the table below, according to the type of road and the level of ambient light.

Distance from your vehicle (in metres)		
Road		Motorway
Day	Night	
50 m	80 m	150 m

i These are the internationally recognised values.
Use the triangle in line with local driving regulations.


The triangle is available as an accessory, contact a PEUGEOT dealer or a qualified workshop.

High load retaining net

Hooked onto the special upper and lower fixings, this allows the use of the entire loading volume up to the roof:


- behind the front seats (row 1) when the rear seats are folded.
- behind the rear seats (row 2).

i Never reposition the rear seats if the net's roller is attached to the backs of the folded seats.

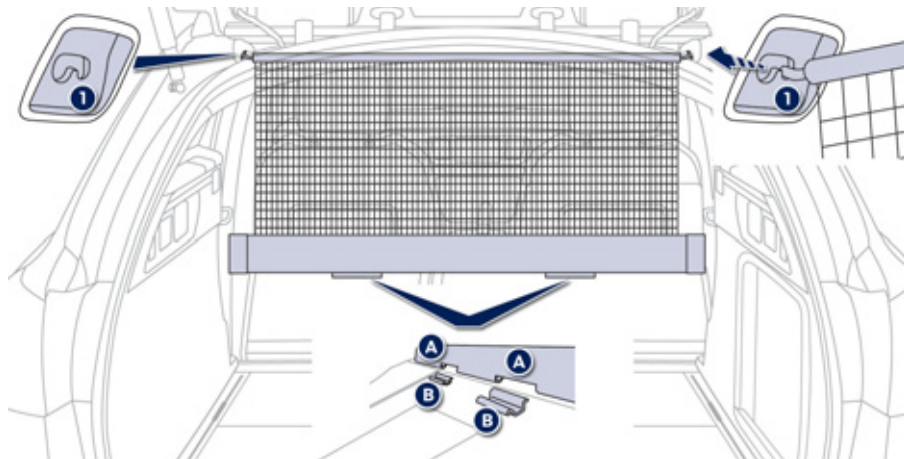

Row 1

- ☞ position the net's roller above the two rails (located on the back of the folded rear seats),
- ☞ the two grooves **A** must be placed above the two rails **B**. Slide the two rails **B** in the grooves **A** and push the roller (lengthwise) from right to left to secure it,
- ☞ check that the net is hooked and tightened correctly,
- ☞ fold the rear seats,
- ☞ unroll the high load retaining net without stretching it,
- ☞ position one of the ends of the net's metal bar in the corresponding upper fixing **1**,
- ☞ pull the net's metal bar to position the other end in the other upper fixing **1**.

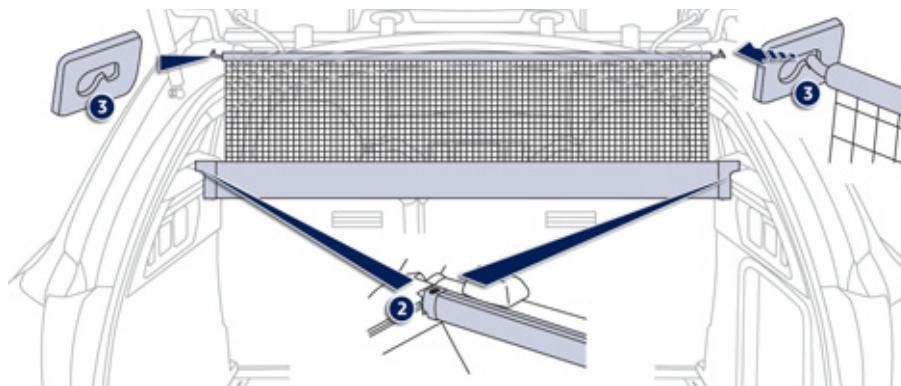

3

Row 2

- ☞ reel in then remove the load space cover,
- ☞ position the left hand end of roller **2** in the load space cover support,
- ☞ position the right hand end of roller **2** in the load space cover support, then lock the position (red indicator),
- ☞ from the rear bench seat, unroll the high load retaining net by pushing to disengage the retaining hooks,
- ☞ position one of the ends of the net's metal bar in the corresponding upper fixing **3**,
- ☞ pull on the net's metal bar to position the other end in the other upper fixing **3**,
- ☞ check that the net is hooked and tensioned correctly.

Heating and Ventilation

System which creates and maintains good conditions of comfort and visibility in the vehicle's passenger compartment.

Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.

Controls


The incoming air follows various routes depending on the controls selected by the driver, the front passenger and rear passengers, according to the level of equipment.

The temperature control enables you to obtain the level of comfort required by mixing the air of the various circuits.

The air distribution control enables you to select the air vents used in the passenger compartment by the combined use of the associated buttons.

The air flow control enables you to increase or reduce the speed of the ventilation fan.

These controls are grouped together on control panel **A** on the centre console.

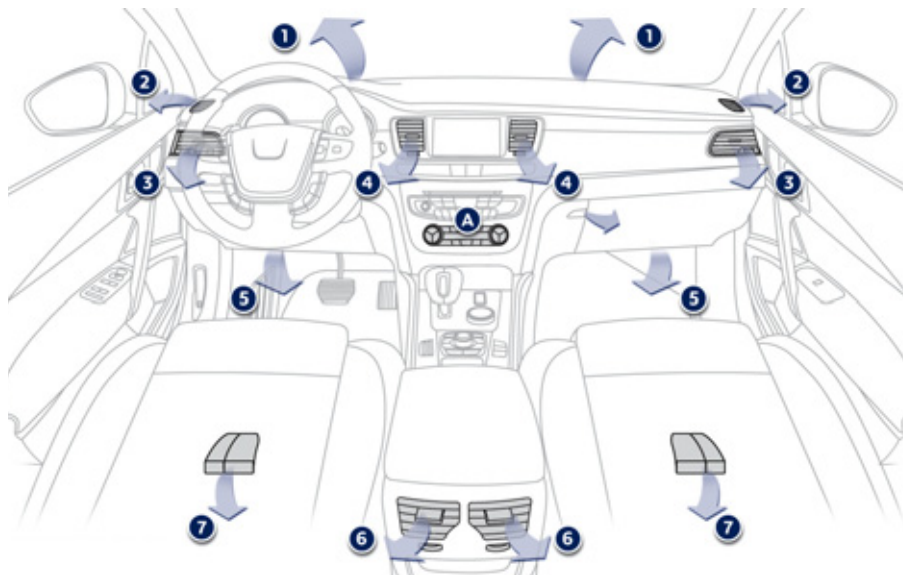

Air distribution

1. Windscreen demisting/defrosting vents.
2. Front side window demisting/defrosting vents.
3. Side adjustable air vents.
4. Central adjustable air vents.
5. Air outlets to the front footwells.
6. Adjustable air vents for the rear passengers.
7. Air outlets to the rear footwells.


Recommendations for ventilation and air conditioning

- i** In order for these systems to be fully effective, follow the operation and maintenance guidelines below:
- ☞ If the interior temperature remains very high after the vehicle has been parked in the sun for a considerable time, first ventilate the passenger compartment for a few minutes. Place the air flow control at a sufficient level to provide an adequate renewal of air in the passenger compartment.
 - ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreen, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
 - ☞ Use in preference the intake of exterior air as prolonged use of the air recirculation may cause misting of the windows and side windows.
 - ☞ Do not cover the sunshine sensor, located on the dashboard; this is used for regulation of the automatic air conditioning system.
 - ☞ Operate the air conditioning system for 5 to 10 minutes, once or twice a month to keep it in good working order.
 - ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly (refer to the "Checks" section).
We recommend the use of a combined passenger compartment filter. Thanks to its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, bad odours and greasy deposits).
 - ☞ The air conditioning uses power from the engine while operating. This results in an increase in the vehicle's fuel consumption.
When towing at or near maximum capacity or on steep slopes in high ambient temperatures, switching off the air conditioning saves engine power and so improves towing capacity.
Condensation created by the air conditioning results in a discharge of water under the vehicle when stationary, which is perfectly normal.
 - ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly.
 - ☞ If the system does not produce cold air, do not use it and contact a PEUGEOT dealer or a qualified workshop.
-  The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

Dual-zone digital air conditioning

The air conditioning can only operate when the hybrid system is active (Ready lamp on). Its effectiveness will be reduced when in electric mode (see the ECO OFF section).

Automatic operation

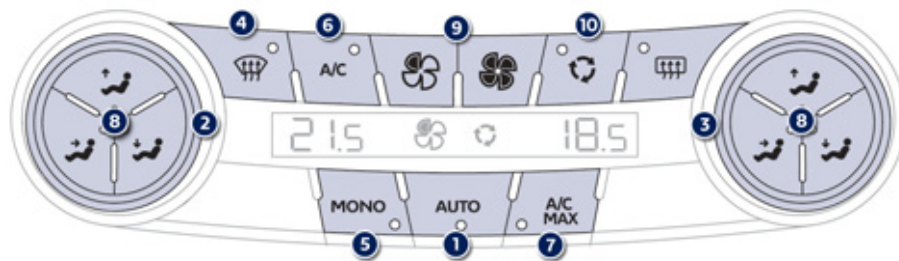

1. Automatic comfort programme

AUTO

☞ Press this "AUTO" button. The indicator lamp comes on.

We recommend that you use this mode. It automatically adjusts all settings to provide optimum operation for the comfort level chosen: passenger compartment temperature, air flow, air distribution and air recirculation. This system is designed to operate effectively in all seasons, with the windows closed.

i When the engine is cold, to prevent too great a distribution of cold air, the air flow will reach its optimum level gradually. In cold weather, it favours the distribution of warm air to the windscreen, side windows and footwells only.

i The **ZEV** mode gives preference to electric driving rather than maintaining a comfortable temperature.

2 - 3. Driver-passenger side adjustment

The driver and front passenger can each adjust the temperature to their requirements. The value indicated on the display corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.



☞ Turn control **2** or **3** to the left (blue) or to the right (red) respectively to decrease or increase this value.

A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is normal. It is recommended that the difference between left and right should not be greater 3.

i On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value, there is no need to change the value displayed in order to obtain the comfort required. The system corrects the difference in temperature automatically and as quickly as possible.

4. Automatic visibility programme



See "Front demisting-defrosting".

i With Stop & Start, when demisting has been switched on, the Diesel engine does not stop.

5. Mono-zone / Dual-zone



☞ Press this button to equalise the comfort value on the passenger's side with that on the driver's side (mono-zone). The indicator lamp in the button comes on.

6. Air conditioning On / Off



The air conditioning is designed to operate effectively in all seasons, with the windows closed.

It allows you:

- in summer, to lower the temperature,
- in winter, above 3°C, to improve demisting performance.

Switching on

☞ Press the "A/C" button, the associated green indicator lamp comes on.

The air conditioning does not operate when the air flow control is set to off.

Switching off

☞ Press the "A/C" button again, the associated green indicator lamp goes off. Switching off the air conditioning may result in some discomfort (humidity, misting).

7. Maximum air conditioning



If you want to temporarily refresh the air in the passenger compartment, press this button and "LO" is displayed.

To return to the previous settings, press the button again.

Manual operation

If you wish, you can change one of settings provided by the system. The other functions will still be controlled automatically.

☞ Pressing the "AUTO" button returns the system to completely automatic operation.



For maximum cooling or heating of the passenger compartment, it is possible to exceed the minimum value 14 or the maximum value 28.

☞ Turn control **2** or **3** to the left until "LO" is displayed or to the right until "HI" is displayed.

8. Air distribution adjustment

☞ Press the corresponding button for:



Windscreen and side windows.



Centre and side vents.



Footwells.



To suit your requirements, you can combine two distribution buttons or select the three distribution modes simultaneously.

9. Air flow adjustment



☞ Press this **"full fan"** button to increase the air flow.

The air flow symbol, the fan, fills progressively according to the value requested.



☞ Press **"empty fan"** button to reduce the air flow.

Switching the system off



☞ Press this **"empty fan"** air flow button until the fan symbol disappears and "- -" appears.

This action switches off all of the functions of the air conditioning system.

Temperature related comfort is no longer guaranteed but a slight flow of air, due to the forward movement of the vehicle, can still be felt.

10. Air intake / Air recirculation



☞ Press this button for recirculation of the interior air. The indicator lamp on the button comes on.

Air recirculation enables the passenger compartment to be isolated from exterior odours and smoke. It is activated automatically when operating the screenwash.

☞ As soon as possible, press this button again to permit the intake of outside air and prevent the formation of condensation. The indicator lamp in the button goes off.




Avoid driving for long periods with the system off (risk of condensation and deterioration of the air quality). Pressing the **"full fan"** button reactivates the system with the values in use at the time it was switched off.

Quad-zone digital air conditioning

The air conditioning can only operate when the hybrid system is active (Ready lamp on). Its effectiveness will be reduced when in electric mode (see the ECO OFF section).

Automatic operation

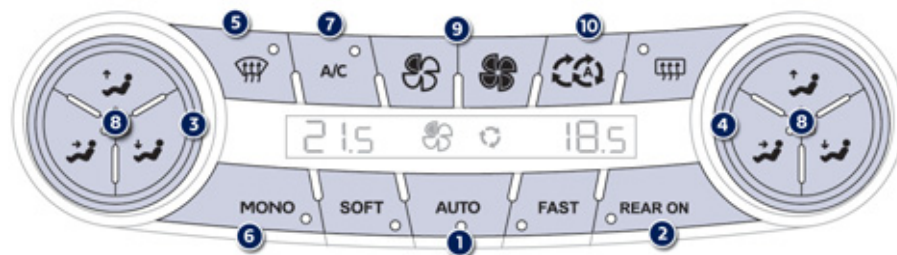

1. Automatic comfort programme

The Soft/Auto/Fast modes allow the driver and front seat passenger to select their desired comfort settings for the passenger compartment:

SOFT

Favours optimum gentle and silent operation by limiting the air flow.

AUTO

Offers the best compromise between thermal comfort and silence of operation.

FAST

Favours dynamic and effective air flow.

2. Activating/deactivating the rear air conditioning

REAR ON

Press this button to deactivate the rear air conditioning and lock the system. A padlock appears in the LCD screen. When the rear system is reactivated, automatic mode is selected with the last temperature settings used.

3 - 4. Driver-passenger side adjustment

The driver and front passenger can each adjust the temperature to their requirements.

The value indicated on the display corresponds to a level of comfort and not to a temperature in degrees Celsius or Fahrenheit.



Turn control **3** or **4** to the left (blue) or to the right (red) respectively to decrease or increase this value.

A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

It is recommended that the difference between left and right should not be greater 3.

3

i On entering the vehicle, if the interior temperature is much colder or warmer than the comfort value, there is no need to change the value displayed in order to obtain the comfort required. The system corrects the difference in temperature automatically and as quickly as possible.

5. Automatic visibility programme



See "Front demisting-defrosting".

i With Stop & Start, when demisting has been switched on, the Diesel engine does not stop.

6. Mono-zone / Quad-zone

MONO

Press this button to apply the driver's comfort setting value to the front and rear passengers (mono-zone). The indicator lamp on the button comes on.

7. Air conditioning On / Off

A/C

The air conditioning is designed to operate effectively in all seasons, with the windows closed. It allows you:

- in summer, to lower the temperature,
- in winter, above 3°C, to improve demisting performance.

Switching on

☞ Press the "**A/C**" button, the associated green indicator lamp comes on.

The air conditioning does not operate when the air flow control is set to off.

Switching off

☞ Press the "**A/C**" button again, the associated green indicator lamp goes off. Switching off the air conditioning may result in some discomfort (humidity, misting).

Manual operation

If you wish, you can change one of settings provided by the system. The other functions will still be controlled automatically. Press one of the Soft/Auto/Fast buttons to return to fully automatic operation.

i For maximum cooling or heating of the passenger compartment, it is possible to exceed the minimum value 14 or the maximum value 28.

☞ Turn the dial **3** or **4** to the left until "**LO**" is displayed or to the right until "**HI**" is displayed.

i The **ZEV** mode gives preference to electric driving rather than maintaining a comfortable temperature.

8. Air distribution adjustment

☞ Press the corresponding button for:



Windscreen and side windows.



Centre and side vents.



Footwells.



To suit your requirements, you can combine two distribution buttons or select the three distribution modes simultaneously.

9. Air flow adjustment



☞ Press this **"full fan"** button to increase the air flow.

The symbol for air flow, the fan, fills progressively according to the value requested.



☞ Press **"empty fan"** button to reduce the air flow.

Switching the system off



☞ Press this **"empty fan"** air flow button until the fan symbol disappears and "--" appears.

This action switches off all of the functions of the air conditioning system. Temperature related comfort is no longer assured but a slight flow of air, due to the forward movement of the vehicle, can still be felt. Avoid driving for long periods with the system off (risk of condensation and deterioration of the air quality). Pressing the **"full fan"** button reactivates the system with the values in use at the time it was switched off.

10. Air intake / Air recirculation



Automatic air intake mode
It is activated by default with automatic comfort regulation.


Air recirculation enables the passenger compartment to be isolated from exterior odours and smoke. It is activated automatically when operating the screenwash. It is inactive when the ambient temperature is below 5°C to guard against the risk of misting in the vehicle.

☞ As soon as possible, press this button again to permit the intake of outside air and prevent the formation of condensation. The indicator lamp in the button goes off.

Adjusting the rear passenger comfort level

The rear air conditioning controls only operate if, from the front:

- the **REAR** button is activated,
- the automatic visibility programme is not activated.

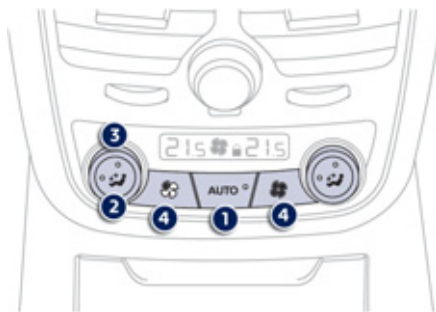

1. Automatic comfort programme

AUTO

- ☞ Press the **"AUTO"** button. The lamp in the button comes on.

We recommend that you use this mode. It automatically adjusts all settings to provide optimum operation for the comfort level chosen: passenger compartment temperature, air flow and air distribution.

This system is designed to operate effectively in all seasons, with the windows closed.

2. Air distribution adjustment

Press the corresponding button successively for:



- Footwell and centre vent.



- Centre vent.



- Automatic control of air distribution.

3. Temperature adjustment, left and right

The left and rear passengers can each adjust their temperature setting independently.

The value indicated in the screen is a level of comfort and not a temperature in degrees Celsius or Fahrenheit.



- ☞ Turn the dial to the left to lower the value and to the right to raise it.

A setting around 21 provides an optimum level of comfort. However, depending on your requirements, a setting between 18 and 24 is normal.

It is recommended that the difference between left and right should not be greater 3.

Ensure that the air grilles and vents on the floor are not obstructed.

4. Air flow adjustment



- ☞ Press this "full fan" button to increase the air flow.

The air flow symbol, the fan, fills progressively as the fan speed increases.



- ☞ Press this "empty fan" button to reduce the air flow.

Deactivating the system



- ☞ Press the "empty fan" air flow button until the fan disappears and "- -" appears.

This action stops all of the functions of the air conditioning system.

Thermal comfort is no longer controlled.

However, a slight air flow may still be felt, resulting from the forward movement of the vehicle.

Front Demist - Defrost

With manual air conditioning



- Select this programme to demist or defrost the windscreen and side windows as quickly as possible.

The system automatically manages the air conditioning, air flow and air intake, and provides optimum distribution towards the windscreen and side windows.

Adjust the temperature control to quickly demist /defrost the windows.

To switch it off, press the "visibility" button again, the warning lamp in the button goes off and the system reverts to the previous settings.

With dual-zone and quad-zone digital air conditioning

Automatic visibility programme



- Select this programme to demist or defrost the windscreen and side windows as quickly as possible.

The system automatically manages the air conditioning, air flow and air intake, and provides optimum distribution towards the windscreen and side windows.

With the quad-zone digital air conditioning, pressing this button deactivates and locks the rear air conditioning.

- To stop the programme, press either the "visibility" button again or "AUTO", the warning lamp on the button goes off and the warning lamp in the "AUTO" button comes on.

The system reverts to the previous settings.

- With Stop & Start, when demisting has been switched on, the Diesel engine does not stop.

Rear screen demist - defrost



The control button is located on the air conditioning system control panel.

Switching on

The rear screen demisting - defrosting can only operate when the hybrid system is active.

- Press this button to demist/defrost the rear screen and, depending on version, the door mirrors. The indicator lamp associated with the button comes on.

Switching off


The demist/defrost switches off automatically to prevent an excessive consumption of current.

- It is possible to stop the demist/defrost operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button goes off.



- Switch off the demist/defrost of the rear screen and door mirrors as soon as it is no longer needed as lower current consumption results in reduced fuel consumption.

Programmable Heating / Ventilation

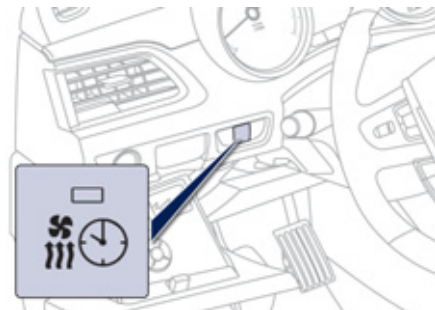

Programmable heating mode

This is an additional and separate system which heats the engine hot water circuit to improve defrosting and to preheat the passenger compartment.




This indicator lamp comes on **only** when if the system is programmed in programmable heating mode.


Programmable Ventilation mode

This mode allows ventilation of the passenger compartment with exterior air to improve the temperature experienced on entering the vehicle in summer.


Programming

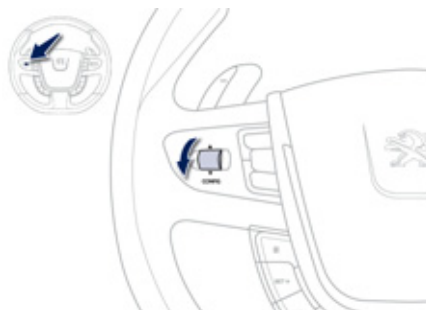


With the ignition on, press the left hand steering mounted thumb wheel for access to the main menu:

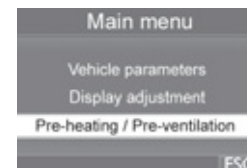


- In the "Main menu", select "Pre-heating / Pre-ventilation".

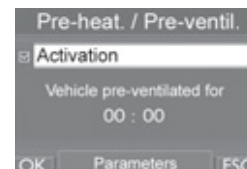

 - Select "Activation" and if necessary for programming, "Parameters".



 - Select "Heating" to preheat the engine or passenger compartment or "Ventilation" to ventilate the passenger compartment.



☞ Select:

- immediate to start the heating or ventilation (once confirmed "OK"),
- the first clock to programme/store your departure time,
- the second clock to programme/store a second departure time.

Depending on the departure time chosen, the system calculates automatically the optimum time to start operating.

i The immediate or programmed activation of Ventilation mode depends on the temperatures inside and outside the vehicle.

i Using these two clocks and according to season you can, for example, select one or the other departure time. A message in the instrument panel screen confirms your choice.

i Only one programmed or immediate preheating/preventilation can be activated between two starts of the vehicle.

! The heating and the ventilation in immediate or programmable mode is not activated when:

- the fuel level is too low,
- the battery is not sufficiently charged.

! To programme the heating and the ventilation, it is necessary to first **deactivate** the alarm volumetric and tilt monitoring (see the "Alarm" section).

! Always switch off the programmable heating while refuelling to avoid any risk of fire or explosion. To avoid the risk of intoxication and asphyxiation, the programmable heating must not be used, even for short periods, in an enclosed area such as a garage or workshop not equipped with exhaust gas extraction. Do not park the vehicle on an inflammable surface (dry grass, dead leaves, paper...), there is a risk of fire.

Electric parking brake



The electric parking brake combines 2 operating modes:

- **Automatic Application/Release**
Application is automatic when the engine stops, release is automatic on use of the accelerator (this mode is activated by default),
- **Manual Application/Release**
Manual application of the parking brake is done by pulling control lever **A**. manual release is done by pushing and releasing the control lever, while pressing the brake pedal.

When the driver's door is opened, there is an audible signal and a message is displayed if the brake is not applied.

Programming the mode

Depending on the country of sale of the vehicle, the automatic application when the engine is switched off and the automatic release when you press the accelerator can be deactivated.



Activation / deactivation is done via the menu in the instrument panel screen.

The parking brake is then applied and released manually.



If this warning lamp comes on in the instrument panel, the automatic mode is deactivated.



It is recommended that you do not apply the parking brake in very cold conditions (ice) and during towing (recovery, ...). Deactivate the automatic functions and release the parking brake manually.

Manual application

With the vehicle stationary, to apply the parking brake whether the hybrid system is active or off, **pull** control lever **A**.

The application of the parking brake is confirmed by:

- illumination of the braking warning lamp and of the **P** warning lamp in the control lever **A**,
- display of a message.



When the driver's door is opened with the hybrid system active, there is an audible signal and a message is displayed if the parking brake has not been applied.



Before leaving the vehicle, check that parking brake warning lamps in the instrument panel and the control lever **A** are on, not flashing.

Manual release



With the ignition on or the hybrid system active, to release the parking brake, **press the brake pedal, pull** then release control lever **A**. The full release of the parking brake is confirmed by:

-  - the braking warning lamp and of the **P** warning lamp in the control lever **A** going off,
-  - display of a message.

If you pull the control lever **A** without pressing the brake pedal, the parking brake will not be released and a message appears in the instrument panel.

Maximum application

If necessary, you can make a **maximum application** of the parking brake. It is obtained by means of a **long pull** on control lever **A**, until you see a message and an audible signal is heard.

Maximum application is essential:

- in the case of a vehicle towing a trailer, if the automatic functions are activated but you are applying the parking brake manually,
- when the slope you are parked on may vary (e.g. on a ferry, on a lorry, during towing).

i In the case of towing, a loaded vehicle or parking on a gradient, make a maximum application of the parking brake then turn the front wheels towards the pavement and engage a gear when you park.
After a maximum application, the release time will be longer.

Automatic application, engine off

With the vehicle stationary, the parking brake **is automatically applied when the engine is switched off**.

The application of the parking brake is confirmed by:

-  - illumination of the braking warning lamp and of the **P** warning lamp in the control lever **A**,
-  - display of a message.

! Before leaving the vehicle, check that parking brake warning lamps in the instrument panel and in the control lever **A** are on fixed (not flashing). Never leave a child alone inside the vehicle with the ignition on, as they could release the parking brake.

Automatic release

The electric parking brake **releases automatically and progressively with the movement of the vehicle**, select position **A**, **M** or **R** then press the accelerator. Full release of the parking brake is confirmed by:

-  the braking warning lamp and of the **P** warning lamp in the control lever **A** going off,
-  display of a message.

 When stationary, with the hybrid system active, do not press the accelerator pedal unnecessarily, as you may release the parking brake.

Immobilising the vehicle, hybrid system active

With the hybrid system active and the vehicle stationary, in order to immobilise the vehicle it is essential to **manually** apply the parking brake by **pulling** control lever **A**.

The application of the parking brake is confirmed by:

-  illumination of the braking warning lamp and of the **P** warning lamp in the control lever **A**,
-  display of a message.

When the driver's door is opened, a loud beep is heard and a message is displayed if the parking brake has not been applied.

 Before leaving the vehicle, check that parking brake warning lamps in the instrument panel and the control lever **A** are on fixed, not flashing.

Particular situations

In certain situations (e.g. starting the engine), the parking brake can automatically alter its force. This is normal operation.

To advance your vehicle a few centimetres without starting the engine, but with the ignition on, press on the brake pedal and release the parking brake **by pushing** then **releasing** control lever **A**. The full release of the parking brake is confirmed by the warning lamps in the control lever **A** and in the instrument panel going off and display of a message.

If a parking brake fault occurs **while applied** or if the battery runs flat, an emergency release is always possible.

In order to ensure correct operation and so your safety, the number of successive application/release operations of the parking brake is limited to eight.

In the event of abuse, you are alerted by a message and a warning lamp which flashes.

Emergency braking



In the event of a failure of the main service brake, a continuous pull on the control lever **A** will stop the vehicle.

The dynamic stability control provides stability during emergency braking.

If the emergency braking malfunctions, a message will be displayed.



If a failure of the DSC system is signalled by the lighting of this warning lamp, then braking stability is not guaranteed.

In this event, stability must be assured by the driver by repeating alternate "pull-release" actions on the control lever **A**.

Emergency parking brake release

In the event of fault with the electric parking brake or a battery failure, an emergency mechanical control can be used to **manually release** the parking brake.


- ☞ Immobilise the vehicle (or chock it if the brake pedal has not been released), with the hybrid system active, place the gear selector in position **M** or **R**.
- ☞ Switch of the hybrid system, but leave the ignition on. If you are unable to immobilise the vehicle, do not operate this control and contact a PEUGEOT dealer or a qualified workshop as soon as possible.




- ☞ If your vehicle has one, take out the vehicle chock **B**, located behind the rear seats.
- ☞ On a slope, immobilise the vehicle by placing a chock in front or behind one of the front wheels, opposing the slope. On level ground, immobilise the vehicle by placing a chock in front or behind one of the front wheels.



The emergency braking must only be used in exceptional circumstances.

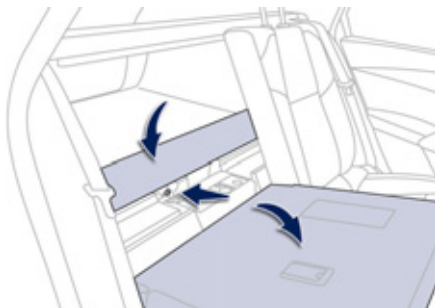

- ☞ Fold the 2/3 part of the rear seat for access to the green cap.

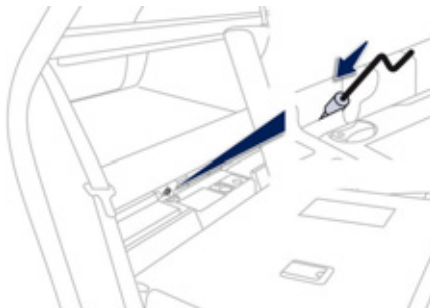

- ☞ Pierce the cap and insert the release tool in the tube.
- ☞ Turn the release tool **clockwise**. For **reasons of safety** it is **essential** to keep turning until the stop is reached. the parking brake is released.
- ☞ Take care to refit the release tool in its housing.
- ☞ The operation of the parking brake is reinitialised each time the ignition is switched off and on. If reinitialisation of the parking brake is not possible, contact a PEUGEOT dealer.
- ☞ The application time may be longer than with normal operation.

! For reasons of safety you must contact a PEUGEOT dealer as soon as possible to have the cap replaced.

Take care not to place anything dusty or wet close to the cap.

With an emergency release, immobilisation of the vehicle is no longer be assured once the mechanical release has started and the mechanical tool cannot be used to apply the parking brake again.

Do not carry out any action on lever **A**, or stop / start the system while the release tool is engaged.

Have it checked by a PEUGEOT dealer or a qualified workshop.

To re-engage the electric parking brake (after correction of the fault or battery failure), make a long pull on the control lever **A** until the parking brake warning lamp (!) flashes in the instrument panel, then make a second long pull until this warning lamp comes on fixed (not flashing).

! Emergency braking should only be used in exceptional circumstances.

Operating faults

If the electric parking brake fault warning lamp comes on together with one or more of the warning lamps presented in these tables, place the vehicle in a safe condition (on level ground, gear engaged) and contact a PEUGEOT dealer or a qualified workshop without delay.

Situations	Consequences
Display of the message "Parking brake fault" and of the following warning lamps: 	- The automatic functions are deactivated. - Hill start assist is not available. - The electric parking brake can only be used manually.
Display of the message "Parking brake fault" and of the following warning lamps: 	- Manual release of the electric parking brake is only available by pressing the accelerator pedal and releasing the control lever. - Hill start assist is not available. - The automatic functions and the manual application are still available.
Display of the message "Parking brake fault" and of the following warning lamps: 	- The automatic functions are deactivated. - Hill start assist is not available.

Situations	Consequences
   SERVICE and possibly  flashing	To apply the electric parking brake: ☞ immobilise the vehicle and switch off the ignition. ☞ pull the control for at least 5 seconds or until application is complete. ☞ switch on the ignition and check that the electric parking brake warning lamps come on. The application is slower than during normal operation. To release the electric parking brake: ☞ switch on the ignition. ☞ push the control lever and hold it for approximately 3 seconds then release it. If the braking warning lamp is flashing or if the warning lamps do not come on with the ignition on, these procedures will not work. Place the vehicle on level ground and have it checked by a PEUGEOT dealer or a qualified workshop.
Display of the message "Parking brake fault" and of the following warning lamps:  and possibly  flashing	- Only the automatic application on switching off the engine and automatic release on acceleration functions are available. - The manual application/release of the electric parking brake and the emergency braking are not available.
Display of the message "Battery charge fault" . 	- You must stop as soon as it is safe to do so. Switch off and immobilise your vehicle (if necessary, place the a chock under a wheel!). - Apply the electric parking brake before switching off the engine.

6-speed electronic gearbox

Six-speed electronic gearbox which offers a choice between the comfort of fully automatic operation or the pleasure of manual gear changing.

There are two driving modes:


- **automated** mode for automatic control of the gears by the gearbox,
- **manual** mode for sequential gear changing by the driver.

In automated mode, it remains possible to change gear manually by using the steering mounted control paddles as desired, when overtaking, for example.

This gearbox provides additional functions:

- hill start assist,
- creep function (the vehicle moves on its own on releasing the brake pedal) in automated mode or in reverse.

Gear selector

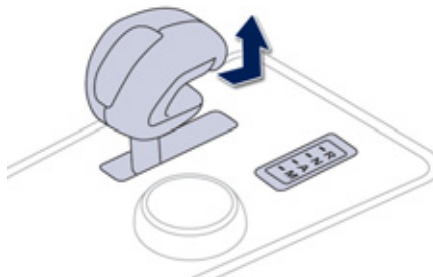

R. Reverse

- ☞ With your foot on the brake, lift the selector and push forwards.

N. Neutral.

- ☞ With your foot on the brake, select this position to start.

A. Automated mode.

- ☞ Move the selector backwards to select this mode.

M. Manual mode with sequential gear changing.

- ☞ Lift the selector then move it backwards to select this mode, then use the steering mounted control paddles to change gear.

Steering mounted control paddles



- + Change up paddle to the right of the steering wheel.

- ☞ Press the back of the "+" steering mounted paddle to change up a gear.

- Change down paddle to the left of the steering wheel.

- ☞ Press the back of the "-" steering mounted paddle to change down a gear.

i The steering mounted paddles cannot be used to select neutral or to engage or disengage reverse gear.

Displays in the instrument panel



N Neutral

R Reverse

1, 2, 3, 4, 5, 6 Gears in manual mode

A This comes on when automated mode is selected. It goes off on changing to manual mode.



- Place your **foot on the brake** when a message appears in the instrument panel screen.

i Engagement of reverse gear is accompanied by an audible signal. If you leave the vehicle, place the gear selector in position **N** and then you must stop the hybrid system by switching off the ignition (**Ready** lamp off).

Moving off

- Select position **N**.
- Press the brake pedal down fully.
- Start the hybrid system.

N

N appears in the instrument panel screen.

i If the gear selector is not in position **N** on starting, **N** flashes in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen.

Foot on brake flashes on the instrument panel, accompanied by an audible signal and a message in the instrument panel screen, if the brake pedal is not pressed on starting.

- Select a gear (position **M** or **A**) or reverse (position **R**).
- Release the parking brake unless it is programmed to automatic mode.
- Take your foot off the brake pedal, then accelerate.

R

A and **1** or **R** appear in the instrument panel screen.

i When the engine is idling with the brakes off, if position **R**, **A** or **M** is selected, the vehicle will move off on its own without any action on the accelerator.

Automatic mode

- After starting the vehicle, select position **A** for enter automatic mode.

A

A appears in the instrument panel screen.

The gearbox is then operating in auto-active mode, without any action on the part of the driver. It continuously selects the most suitable gear, depending on the:

- style of driving,
- profile of the road.

i For optimum acceleration, for example when overtaking another vehicle, press the accelerator pedal firmly past the point of resistance.

Manual gear changing



This selective gear change mode enables you to overtake, for example, while still remaining in automatic mode.

- ☞ Operate the **+** or **-** steering mounted control paddle.

The gearbox engages the gear requested if the engine speed permits. **A** is still displayed in the instrument panel.

After a few moments without any action on the controls, the gearbox resumes automatic control of the gears.

Manual mode

- ☞ When the vehicle has moved off, select position **M** to change to manual mode.
- ☞ Operate the **+** or **-** steering mounted control paddles.



A disappears and the gears engaged appear successively in the instrument panel screen.

The gear change commands are only carried out if the engine speed permits. The internal combustion engine is still running.

It is not necessary to release the accelerator during gear changes.

When braking or slowing down, the gearbox changes down automatically to permit acceleration in the correct gear.

i At very low speed, if reverse gear is requested, this will only be taken into account when the vehicle is immobilised (foot on the brake). A warning lamp appears in the instrument panel screen.

! On sharp acceleration in manual mode, the gearbox will not change up unless the driver acts on the gear lever or the steering mounted paddles. Never select neutral **N** while the vehicle is moving.

Only engage reverse gear **R** when the vehicle is immobilised with the brake pedal pressed.

Creep function (moving without the accelerator)

This function facilitates manoeuvring of the vehicle at low speed (when parking, in traffic jams, ...).

With the hybrid system active and the parking brake released, if position **A**, **M** or **R** is selected, the vehicle moves as soon as you take your foot off the brake pedal (even without any action on the accelerator).

For your safety, this function will only be activated if you press the brake pedal when engaging forward drive or reverse.

This function is deactivated if the driver's door is opened. To reactivate it, close the door and then press the brake or accelerator pedal.



Never leave children unsupervised in the vehicle with the hybrid system active.

Stopping the vehicle

Before switching off the engine, you can choose to:

- move to position **N** to engage neutral,
- leave the gear engaged; in this case, it will not be possible to move the vehicle.

In both cases, you should apply the parking brake to immobilise the vehicle.



When immobilising the vehicle, with the hybrid system active, you must place the gear selector in neutral **N**. Before carrying out any work in the engine compartment, check that the gear selector is in neutral **N** and that the parking brake is applied.

Operating fault

SERVICE

With the ignition on, the flashing of this warning lamp, accompanied by an audible signal and a message in the instrument panel screen, indicates a malfunction of the gearbox. Have it checked by a PEUGEOT dealer or a qualified workshop.



You must press the brake pedal when starting the engine.

Whatever the circumstances, you must manually apply the parking brake when parking, unless the parking brake is programmed in automatic mode.


Hill start assist

System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This function is only active when:

- the vehicle is completely stationary, with your foot on the brake pedal,
- in particular conditions on a slope,
- with the driver's door closed.

The hill start assist function cannot be deactivated.

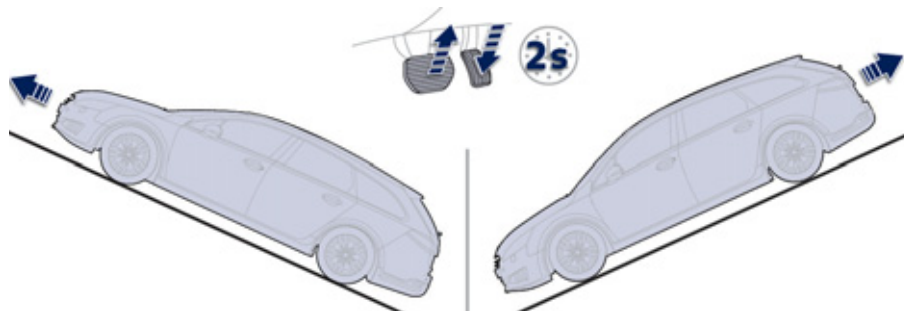

On an ascending slope, with the vehicle stationary, the vehicle is held for a brief moment when you release the brake pedal, if the gear selector is in position **A** or **M**.

On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held for a brief moment when you release the brake pedal.



Do not exit the vehicle while it is being held in the hill start assist phase.

If you need to exit the vehicle with the hybrid system active, apply the parking brake manually then ensure that the parking brake warning lamp and the warning lamp **P** on the lever (of the electric brake) are permanently on.

Operating fault




SERVICE

If a malfunction of the system occurs, these warning lamps come on. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.


Head-up display

System which projects various information onto a smoked strip in the field of vision of the driver so that they do not have to take their eyes off the road.


This system operates when the hybrid system is active and retains its settings on switching off the ignition.

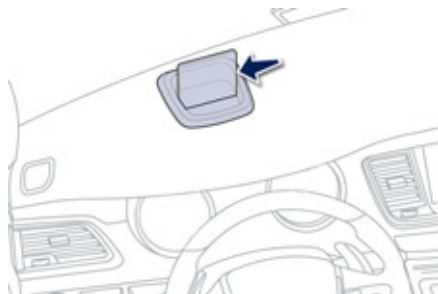


Buttons

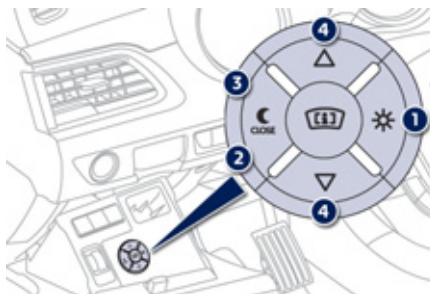

1. Head-up display on.
2. Head-up display off (long press).
3. Brightness adjustment.
4. Display height adjustment.

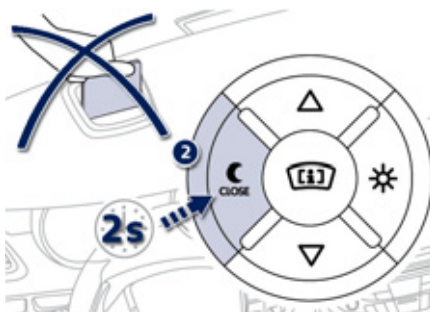

Displays during operation

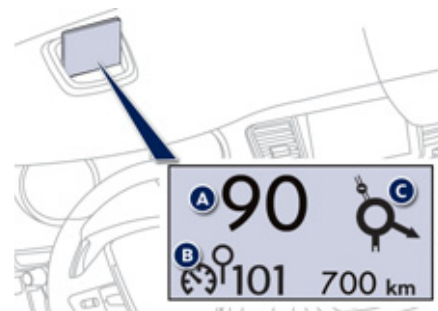


Once the system has been activated, the following information is grouped together in the head-up display:

- A. The speed of your vehicle.
- B. Cruise control/speed limiter information.
- C. Navigation information (depending on version) which appears in blue while in electric mode.

i For more information on the navigation system, refer to the "Audio and telematic" section.

Activation / Deactivation

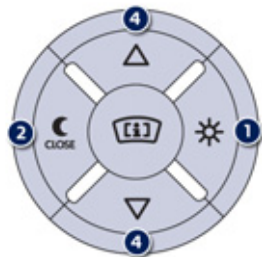


- ☞ With the engine running, press button **1** to activate the system and deploy the strip.
- ☞ Press and hold button **2** to deactivate the system and retract the strip.

The activated/deactivated state is saved and restored on restarting the engine.

Height adjustment

- ☞ With the engine running, adjust the display to the desired height using buttons **4**:
 - up to move the display up,
 - down to move the display down.

Brightness adjustment

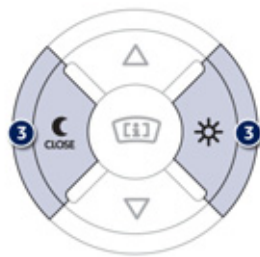

- ☞ With the engine running, adjust the brightness of the information displayed using buttons **3**:
 - the "sun" to increase the brightness,
 - the "moon" to decrease the brightness.


! We recommend that adjustments are made using these buttons only when the vehicle is stationary. When stationary or while driving, no objects should be placed around the strip (or in its recess) so as to not impede deployment of the strip and its correct operation.

i In certain extreme weather conditions (rain and/or snow, bright sunshine, ...) the head-up display may not be legible or may suffer temporary interference. Some sunglasses may hamper reading of the information. To clean the strip, use a clean, soft cloth (such as a spectacles cloth or microfibre cloth). Do not use a dry or abrasive cloth or detergent or solvent products as these could scratch the strip or damage the non-reflective coating.

Memorising speeds

This memorising of speeds applies to both the speed limiter and the cruise control.

Operation

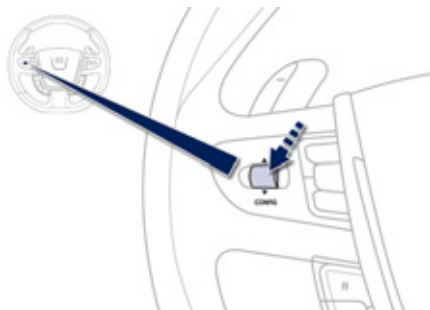

You can memorise up to 5 speeds in the system.

By default, some speeds are already memorised.

- ☞ Go to the main menu in the instrument panel screen by pressing the **"CONFIG"** button.
- ☞ Select the "Personalisation-configuration" menu and confirm.

- ☞ Select the "Vehicle parameters" menu and confirm.
- ☞ Select the "Driving assistance" line and conform.
- ☞ Select the "Speeds memorised" line and confirm.
- ☞ Modify the speed.
- ☞ Select **"OK"** and confirm to save the modifications.



For safety reasons, the driver must carry out these operations when stationary, using the instrument panel screen.
These operations are only possible when stationary.

Selection



To select a memorised speed:

- ☞ press and hold the **"+"** or **"-"** button; the system stops at the nearest memorised speed,
- ☞ press and hold again the **"+"** or **"-"** button to select another memorised speed.

A reminder of the speed and the state of the system (on / off) is displayed in the instrument panel.

Speed limiter

System which prevents the vehicle from exceeding the speed programmed by the driver. When the programmed speed limit is reached, pressing the accelerator pedal no longer has any effect unless it is pressed firmly, which allows you to temporarily exceed the programmed speed.

To return to the programmed speed, simply slow down to a speed below the programmed speed by releasing the accelerator.


The speed limiter is **switched on** manually: it requires a programmed speed of at least 20 mph (30 km/h).

The speed limiter is **switched off** by manual operation of the control.

The programmed speed remains in the memory when the ignition is switched off.

i The speed limiter cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Steering mounted controls

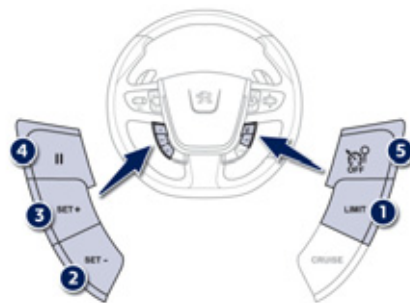

1. Speed limiter mode selection button
2. Programmed value decrease button
3. Programmed value increase button
4. Suspend/restore speed limiter (pause)
5. Speed limiter off button

Displays in the instrument panel



The programmed information is grouped together in the instrument panel screen.

i This information also appears in the head-up display. For more information, refer to the "Head-up display" section.



- A. Speed limiter on / pause indication
- B. Speed limiter mode selection indication
- C. Programmed speed value

Programming



- ☞ Press 1, the speed limiter mode is activated but remains paused. You do not have to switch the speed limiter on in order to set the speed.
- ☞ Set the speed value by pressing button 2 or 3 (e.g.: 55 mph (90 km/h)).

You can then change the programmed speed using buttons 2 and 3:

 
 
 
- by + or - 1 mph (km/h) = short press,
- by + or - 5 mph (km/h) = long press,
- in steps of + or - 5 mph (km/h) = maintained press.
- ☞ Switch the speed limiter on by pressing button 4.
- ☞ Suspend the speed limiter by pressing button 4: the screen confirms the suspension with "Pause".
- ☞ Switch the speed limiter back on by pressing button 4 again.

Exceeding the programmed speed

Pressing the accelerator pedal to exceed the programmed speed will not have any effect unless you press the pedal **firmly** past the **point of resistance**.

The speed limiter is deactivated temporarily and the programmed speed, which is still displayed, flashes.

Returning to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the programmed speed.



Off / Return to normal driving

- ☞ Press 5, the speed limiter is deactivated.

Operating fault



In the event of a speed limiter fault, the speed is cleared resulting in flashing of the dashes. Have it checked by a PEUGEOT dealer or a qualified workshop.

- ! On a steep descent or in the event of sharp acceleration, the speed limiter will not be able to prevent the vehicle from exceeding the programmed speed. The use of mats not approved by PEUGEOT may adversely affect the normal operation of the accelerator pedal and impede the operation of the speed limiter. Mats approved by PEUGEOT have a third fixing in the area of the pedals to avoid any risk of interference with the pedals.

Cruise control

System which automatically maintains the speed of the vehicle at the value programmed by the driver, without any action on the accelerator pedal.

The cruise control is **switched on** manually: it requires:


- a minimum vehicle speed of 25 mph (40 km/h),
- the engagement of 2nd gear or higher,
- position **A**.

Cruise control is **switched off** manually or by pressing the brake pedal or on triggering of the ESC system for safety reasons.

It is possible to exceed the programmed speed temporarily by pressing the accelerator pedal. To return to the programmed speed, simply release the accelerator pedal.

Switching off the ignition cancels any programmed speed value.

Steering mounted controls

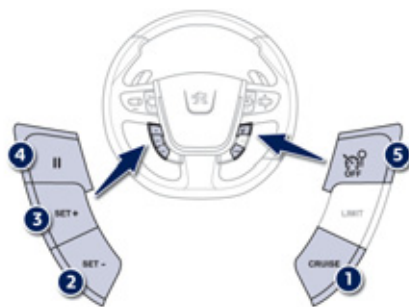

1. Cruise control mode selection button
2. Speed programming / programmed value decrease button
3. Speed programming / programmed value increase button
4. Cruise control suspension / resume button (pause)
5. Cruise control off button

i The cruise control cannot, in any circumstances, replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Displays in the instrument panel



The programmed information is grouped together in the instrument panel screen.

i This information also appears in the head-up display. For more information, refer to the "Head-up display" section.



- A.** Cruise control on / pause indication
- B.** Cruise control mode selection indication
- C.** Programmed speed value

Programming



- ☞ Press **1**, the cruise control is activated but remains paused.
- ☞ Set the programmed speed by accelerating to the required speed, then press button **2** or **3** (e.g.: 70 mph (110 km/h)).

You can then change the programmed speed using buttons **2** and **3**:

- by + or - 1 mph (km/h) = short press,
 - by + or - 5 mph (km/h) = long press,
 - in steps of + or - 5 mph (km/h) = maintained press.
- ☞ Pause the cruise control by pressing button **4**: the screen confirms the suspension with "Pause".
- ☞ Switch the cruise control back on by pressing button **4** again.

 
Exceeding the programmed speed

Intentional or unintentional exceeding of the programmed speed results in flashing of this speed on the display.


Return to the programmed speed, by means of intentional or unintentional deceleration of the vehicle, automatically cancels the flashing of the speed.

Off / Return to normal driving

- ☞ Press **5**; cruise control mode is deactivated. The screen returns to the distance recorder.



Operating fault

 

In the event of a cruise control fault, the speed is cleared resulting in flashing of the dashes. Have it checked by a PEUGEOT dealer or a qualified workshop.

! When the cruise control is switched on, be careful if you maintain the pressure on one of the programmed speed changing buttons: this may result in a very rapid change in the speed of your vehicle.

Do not use the cruise control on slippery roads or in heavy traffic.

On a steep descent, the cruise control will not be able to prevent the vehicle from exceeding the programmed speed. To avoid any risk of jamming of the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

Parking sensors



This system indicates the proximity of an obstacle (person, vehicle, tree, gate, etc.) which comes within the field of detection of sensors located in the bumper.


Certain types of obstacle (stake, roadworks cone, etc.) detected initially will no longer be detected at the end of the manoeuvre due to the presence of blind spots.



This function cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

Rear parking sensors

The system is switched on by engaging reverse gear. This is accompanied by an audible signal. The system is switched off when you exit reverse gear.

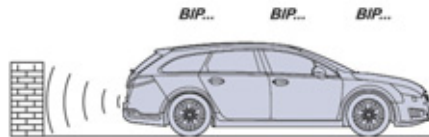

Audible assistance

The proximity information is given by an intermittent audible signal, the frequency of which increases as the vehicle approaches the obstacle. The sound emitted by the speaker (right or left) indicates the side on which the obstacle is located. When the distance between the vehicle and the obstacle becomes less than approximately thirty centimetres, the audible signal becomes continuous.



Visual assistance

This supplements the audible signal by displaying bars in the multifunction screen which move progressively nearer to the vehicle. When the obstacle is near, the "Danger" symbol is displayed in the screen.

Front parking sensors

In addition to the rear parking sensors, the front parking sensors are triggered when an obstacle is detected in front and the speed of the vehicle is still below 6 mph (10 km/h).

The front parking sensors are interrupted if the vehicle stops for more than three seconds in forward gear, if no further obstacles are detected or when the speed of the vehicle exceeds 6 mph (10 km/h).

i The sound emitted by the speaker (front or rear) indicates whether the obstacle is in front or behind.

Deactivation / Activation of the front and rear parking sensors



The function is deactivated by pressing this button. The indicator lamp in the button comes on. Pressing this button again reactivates the function. The indicator lamp in the button goes off.

i The function will be deactivated automatically if a trailer is being towed or a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by PEUGEOT).

Operating fault

SERVICE


In the event of a malfunction of the system, when reverse gear is engaged this warning lamp is displayed in the instrument panel and/or a message appears in the screen, accompanied by an audible signal (short beep). Contact a PEUGEOT dealer or a qualified workshop.

i In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow. When reverse gear is engaged, an audible signal (long beep) indicates that the sensors may be dirty. Certain sound sources (motorcycle, lorry, pneumatic drill, etc.) may trigger the audible signals of the parking sensor system.

Parking space sensors

System which measures the parking space available between two vehicles or obstacles. It measures the size of the space and gives you information on:

- the possibility of fitting into a free space, depending on the dimensions of your vehicle and the distances needed for manoeuvring,
- the level of difficulty of the parking manoeuvre.

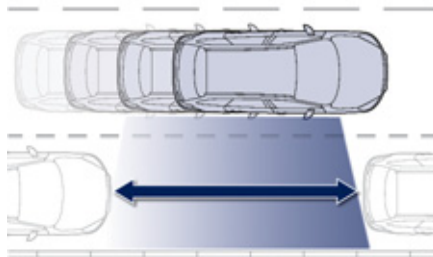


The system does not measure spaces which are clearly much smaller or larger than the size of the vehicle.

Displays

The warning lamp in the control **A** can have two different states:

- **on fixed:** the system is switched on by a press on control **A**.
- **off:** the system is not switched on.

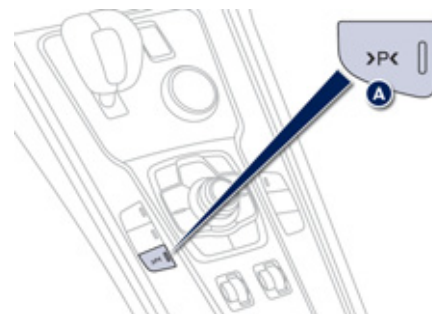


Operation


When you have identified a parking space:

- ☞ Put the gear selector in position **A**.
- ☞ Press button **A** to start the system.
- ☞ Operate the direction indicator on the side where the space is to be measured; a message is displayed and the warning lamp flashes to confirm that measurement is in progress.
- ☞ During measurement, go forward the length of the space, at a speed less than 12 mph (20 km/h), to prepare for your manoeuvre.
- ☞ Once the measurement has been completed, the system informs you of the level of difficulty of the manoeuvre by a message in the multifunction screen accompanied by an audible signal.

 The system displays one of the following messages:



Parking possible

 

Parking difficult



Parking not advised

The system switches itself off automatically:

- when you engage reverse gear,
- when you switch off the ignition,
- if measuring is not requested,
- within five minutes of switching on the system,
- if the vehicle speed exceeds the threshold of 45 mph (70 km/h) for one minute.

! If the lateral distance between your vehicle and the parking space is too great, the system may not be able to measure the space.

i The system remains available after each measurement and can therefore measure several spaces in succession. In poor or wintry weather, ensure that the sensors are free of dirt, ice or snow. The parking space sensor system deactivates the front parking sensors when measuring forwards. If there is a fault, have the system checked by a PEUGEOT dealer or a qualified workshop.

Lighting controls

System for selection and control of the various front and rear lamps providing the vehicle's lighting and signalling.

Main lighting

There are various lamps on the vehicle:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear,
- directional headlamps for improved visibility when cornering.

Additional lighting

Other lamps are installed to fulfil the requirements of particular driving conditions:

- rear foglamps to better signal the presence of the vehicle in foggy conditions,
- daytime running lamps to be seen during the day.


Automatic lighting functions

Various automatic lighting functions are also available depending on options:


- guide-me-home lighting,
- directional headlamps,
- welcome lighting,
- daytime lighting (daytime running lamps),
- automatic illumination of headlamps,
- adaptive lighting.

Selection ring for main lighting mode

Turn the ring to position the symbol required facing the mark.

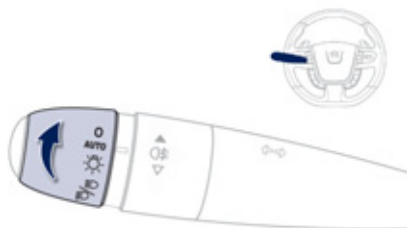

- 0** Lighting off.
- AUTO** Automatic illumination of headlamps.
-  Sidelamps only.
-  Dipped or main beam headlamps.

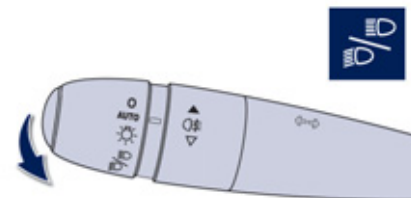

5

Dipping the headlamps

Pull the stalk to switch the lighting between dipped / main beam headlamps.


In the lighting off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.

Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms the lighting switched on.

Foglamps selection ring

The foglamps operate with dipped and main beam headlamps.

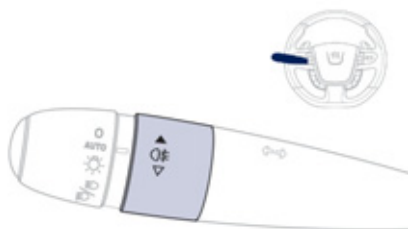

Rear foglamps

- ☞ Turn the ring forwards and release to switch on the rear foglamps.

When the headlamps switch off with automatic illumination of headlamps (AUTO model) or when the dipped beam headlamps are switched off manually, the foglamps and sidelamps remain on.

- ☞ Turn the ring rearwards to switch off the foglamps, the sidelamps will then switch off.

! In good or rainy weather, both day and night, use of the the rear foglamps is prohibited. In these situations, the power of their beams may dazzle other drivers. They should only be used in fog or snow.

In these weather conditions, it is your responsibility to switch on the foglamps and dipped headlamps manually as the sunshine sensor may detect sufficient light.

Do not forget to switch off the rear foglamps when they are no longer needed.

i Lighting left on audible signal


An audible signal when a front door is opened warns the driver that the vehicle's exterior lighting is on, with the ignition off and in manual lighting mode. In this case, switching off the lighting stops the audible signal.

With the ignition off, if the dipped headlamps remain on, the vehicle goes into "ECO" mode to avoid discharging the battery.

The lighting goes off when you switch off the ignition, but you can always switch it on again using the lighting control stalk.

i In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

LED lamps

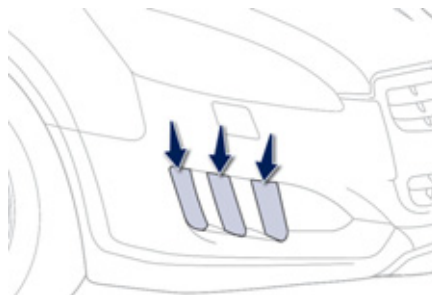

They come on when the engine is started. Depending on the destination country, they are used for:

- daytime running lamps* in day mode and sidelamps in night mode (they are brighter when daytime running lamps), or
- sidelamps in day and night mode.

Where LED lamps are fitted, the filament bulbs for the daytime running lamps / sidelamps in the front lamp units are not used.

* function that can be set in the vehicle configuration menu.

Daytime running lamps

Daytime lighting, compulsory in certain countries, which comes on automatically when the engine is started making the vehicle more visible to other road users.

This function is assured:


- in countries where it is imposed by regulations, by illumination of the dipped beam headlamps with the sidelamps and number plate lamps.
- for other countries where it is provided, by the use of dedicated lamps.



This function can be activated or deactivated via the vehicle configuration menu.

Manual guide-me-home lighting

Temporarily keeping the dipped beam headlamps on after the ignition has been switched off makes the driver's exit easier when the light is poor.

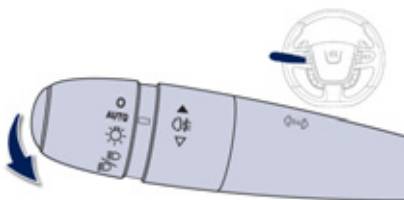


Switching on

- ☞ Within 30 seconds or a minute after switching of the ignition (according to the automatic guide-me-home lighting duration programmed in the configuration menu), "flash" the headlamps using the lighting stalk.
- ☞ A further "headlamp flash" switches the function off.

Switching off

The manual guide-me-home lighting switches off automatically after about 30 seconds.

Parking lamps

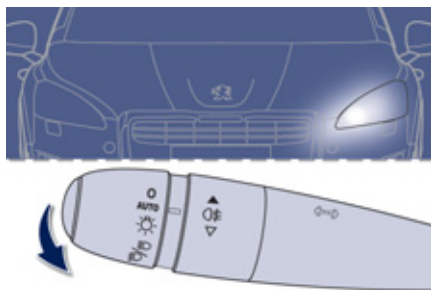

Side markers for the vehicle by illumination of the sidelamps on the traffic side only.


- ☞ Within one minute of switching off the ignition, operate the lighting control stalk up or down depending on the traffic side (for example: when parking on the left; lighting control stalk upwards; the right hand sidelamps are on).

This is confirmed by an audible signal and illumination of the corresponding direction indicator warning lamp in the instrument panel. To switch off the parking lamps, return the lighting control stalk to the middle position or switch on the ignition.

Automatic illumination of headlamps

The sidelamps and dipped beam headlamps are switched on automatically, without any action on the part of the driver, when a low level of external light is detected or in certain cases of activation of the windscreen wipers.

As soon as the brightness returns to a sufficient level or after the windscreen wipers are switched off, the lamps are switched off automatically.

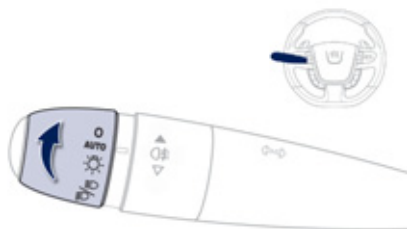

Activation

- ☞ Turn the ring to the "AUTO" position. The automatic illumination of headlamps is accompanied by a message in the instrument panel screen.

Deactivation

- ☞ Turn the ring to another position. Deactivation is accompanied by a message in the instrument panel screen.

Association with automatic guide-me-home lighting

Association with automatic illumination of headlamps provides the guide-me-home lighting with the following additional options:

- selection of the lighting duration of 15, 30 or 60 seconds,
- automatic activation of guide-me-home lighting when the automatic illumination of headlamps is in operation.

Programming



Selection of the duration of the guide-me-home lighting is done in the configuration menu vehicle parameters, in the instrument panel screen.

Operating fault

SERVICE

In the event of a fault with the sunshine sensor, the lighting comes on, this warning lamp is displayed in the instrument panel and/or a message appears in the instrument panel screen, accompanied by an audible signal. Contact a PEUGEOT dealer or a qualified workshop.



In fog or snow, the sunshine sensor may detect sufficient light. In this case, the lighting will not come on automatically. Do not cover the sunshine sensor, coupled with the rain sensor and located in the centre of the windscreen behind the rear view mirror; the associated functions would no longer be controlled.

Adaptive lighting

System which automatically changes between dipped and main beam according to the driving conditions, using a sensor in the rear view mirror.

The system is active from 15 mph (25 km/h) and is deactivated below 9 mph (15 km/h).



Switching on

☞ put the lighting control stalk on the "AUTO" or "Dipped/main beam headlamps" position,



☞ press this button, the warning lamp comes on.

Switching off

The driver can take over at any time, if the circumstances dictate:



☞ press this button, the warning lamp goes off,

☞ or by dipping the headlamps manually using the lighting control stalk, whether in the "AUTO" or "Dipped/main beam headlamps" position.

i Flashing the headlamps does not deactivate the system. The state of the system is stored in memory when switching off the ignition. This automatic headlamp dipping system is a driving aid. The driver remains responsible for the vehicle's lighting and its correct use for the prevailing conditions of light, visibility and traffic.

i The system may suffer interference or not work correctly:

- under conditions of poor visibility (for example, snowfall, heavy rain or thick fog, ...),
- if the windscreen is dirty, misted or obscured (by a sticker, ...) in front of the sensor,
- if the vehicle is facing highly reflective signs.

The system is not able to detect:

- road users that do not have their own lighting, such as pedestrians,
- road users whose lighting is obscured, such as vehicles running behind a safety barrier (on a motorway, for example),
- road users at the top or bottom of a steep slope, on twisty roads, on crossroads.

Exterior welcome lighting

Remote switching on of the lighting makes your approach to the vehicle easier in poor light. It is activated according to the level of light detected by the sunshine sensor.

Switching on



- Press the open padlock on the remote control. The dipped beam headlamps and the sidelamps come on; your vehicle is also unlocked.

Switching off


The exterior welcome lighting switches off automatically after a set time, when the ignition is switched on or on locking the vehicle.

Programming



The lighting duration is selected via the instrument panel screen configuration menu.

Door mirror spotlamps

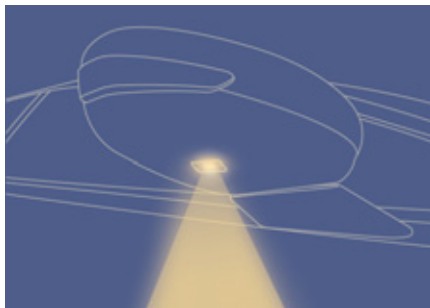

To make your approach to the vehicle easier, these illuminate:

- the zones facing the driver's and passenger's doors,
- the zones forward of the door mirrors and rearward of the front doors.

Switching on


The spotlamps come on:

- when you unlock the vehicle,
- when you remove the key from the ignition,
- when you open a door,
- when you use the remote control.

Switching off

They are timed to go off automatically.

Manual adjustment of halogen headlamps

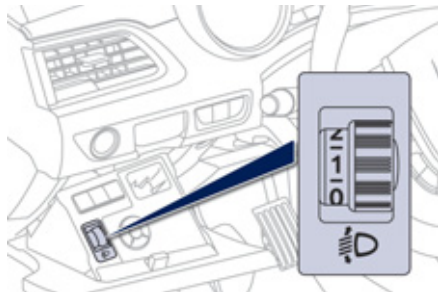


To avoid causing a nuisance to other road users, the beams of the halogen headlamps should be adjusted according to the load in the vehicle.

- 1 Driver
- 2 Driver + front passenger.
- 3 Driver + front passenger + rear passengers.
- 4 5 people.
- 5 5 people + a load in the boot.
- 6 Driver + a load in the boot.



The initial setting is position "0".

Automatic adjustment of xenon headlamps

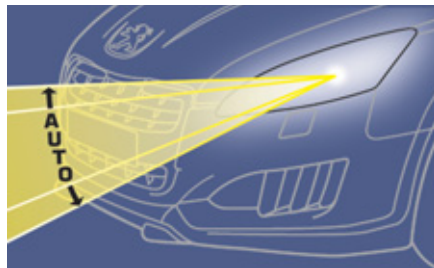

In order to avoid causing a nuisance to other road users, this system corrects the height of the xenon headlamps beam automatically and when stationary, in relation to the load in the vehicle.

SERVICE

If a fault occurs, this warning lamp is displayed in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen. The system then places your headlamps in the lowest position.




If a fault occurs, do not touch the xenon bulbs. Contact a PEUGEOT dealer or a qualified workshop.


Main directional lighting

When the dipped or main beam headlamps are on, this function enables the light beams to provide improved lighting of the side of the road when cornering.

The use of this function, associated with the xenon headlamps only, considerably improves the quality of your lighting when cornering.

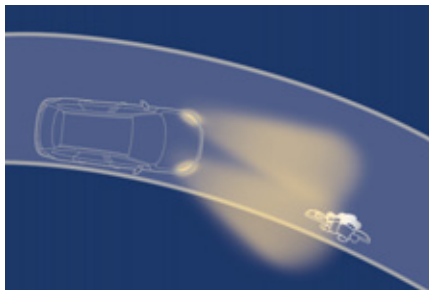

with directional lighting

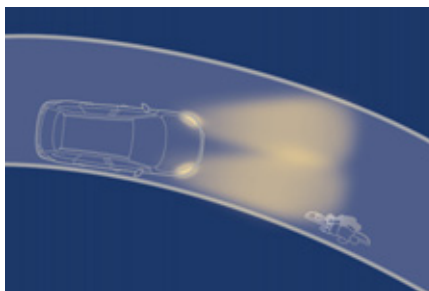

without directional lighting

Programming



The function is activated or deactivated via the configuration menu (in the instrument panel screen).

Operating fault



If a fault occurs, this warning lamp flashes in the instrument panel, accompanied by a message in the instrument panel screen. Contact a PEUGEOT dealer or a qualified workshop.

i When stationary or moving at very low speed or when reverse gear is engaged, the function is inactive. The status of the function remains in the memory when the ignition is switched off.

Wiper controls

The vehicle's front and rear wipers are designed to improve the driver's visibility progressively according to the climatic conditions.


Programming

Various automatic wiper control modes are also available according to the following options:


- automatic rain sensitive windscreen wipers,
- rear wiper on engaging reverse gear.

Manual controls

The wipers are controlled directly by the driver.

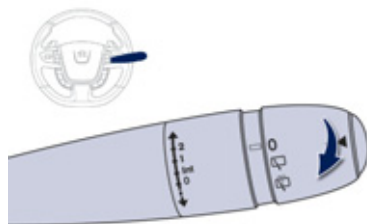

Model with manual wiping (intermittent)

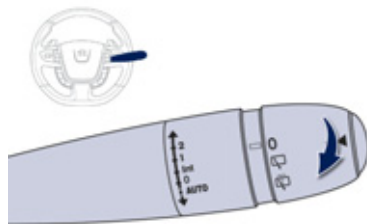


Model with AUTO wiping

Windscreen wipers

Wiping speed:

- 2** fast (heavy rain),
- 1** normal (moderate rain),
- I** intermittent (proportional to the speed of the vehicle),
- 0** park,
- ↓** single wipe (press down and release),
- AUTO ↓** automatic (press down and release),
single wipe (pull the stalk briefly towards you).

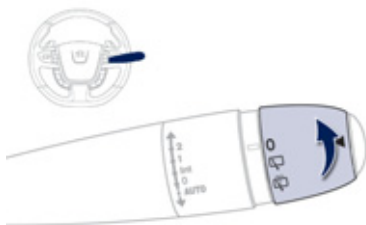

Rear wiper

Rear wiper selection ring:

! If a significant accumulation of snow or ice is present, or when using a bicycle carrier on the boot, deactivate the automatic rear wiper via the instrument panel screen configuration menu.

-  park,
-  intermittent wipe,
-  wash-wipe (set duration).

Reverse gear


When reverse gear is engaged, the rear wiper will come into operation if the windscreen wipers are operating.

Programming



The function is activated or deactivated via the instrument panel screen configuration menu. This function is activated by default.

Windscreen and headlamp wash

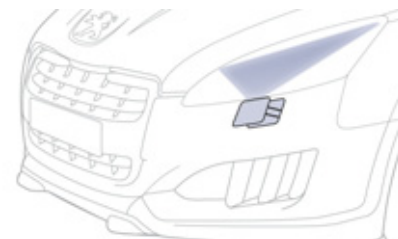

-  Pull the windscreen wiper stalk towards you. The windscreen wash then the windscreen wipers operate for a fixed period.
- The headlamp washers only operate when **the dipped beam headlamps are on**.


Screenwash/headlamp wash level low

SERVICE

In the case of vehicles fitted with headlamp washers, when the fluid reservoir low level is reached this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen. The warning lamp comes on when the ignition is switched on, or every time the stalk is operated, until the reservoir is refilled. Next time you stop, refill the screenwash / headlamp wash reservoir.

Automatic rain sensitive windscreen wipers

The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rainfall.

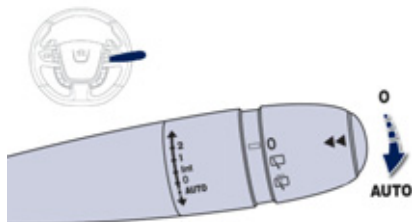


Switching on



Briefly push the control stalk downwards.

This warning lamp comes on in the instrument panel and a message is displayed.

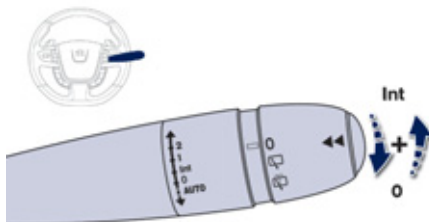

Switching off



Briefly push the control stalk downwards again, or place the control stalk in another position (Int, 1 or 2).

This warning lamp goes off in the instrument panel and a message is displayed.

i The automatic rain sensitive windscreen wipers must be reactivated by pushing the control stalk downwards, if the ignition has been off for more than one minute.

Operating fault

If a fault occurs with the automatic rain sensitive wipers, the wipers will operate in intermittent mode.

Have it checked by PEUGEOT dealer or a qualified workshop.

- !** Do not cover the rain sensor, linked with the sunshine sensor and located in the centre of the windscreen behind the rear view mirror.
- Switch off the automatic rain sensitive wipers when using an automatic car wash.
- In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.

Special position of the windscreen wipers



This position permits release of the windscreen wiper blades.


It is used for cleaning or replacement of the blades. It can also be useful, in winter, to detach the blades from the windscreen.

- ☞ Any action on the wiper stalk in the minute after switching off the ignition places the blades vertically on the screen.
- ☞ To park the blades again, switch on the ignition and operate the wiper stalk.

i To maintain the effectiveness of the "flat-blade" type of wiper blades, it is advisable to:

- handle them with care,
- clean them regularly using soapy water,
- avoid using them to retain cardboard on the windscreen,
- replace them at the first signs of wear.

Courtesy lamps

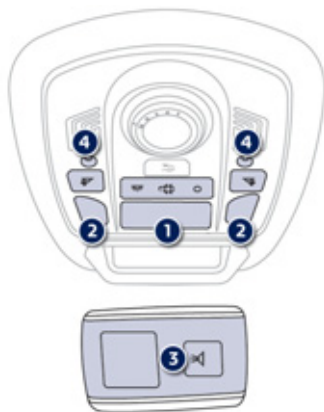

1. Front courtesy lamp
2. Front map reading lamps
3. Rear map reading lamps
4. Interior mood LEDs

Front courtesy lamps



In this position, the courtesy lamp comes on gradually:

- when the vehicle is unlocked,
- when the key is removed from the ignition,
- when opening a door,
- when the remote control locking button is activated, in order to locate your vehicle.

It switches off gradually:

- when the vehicle is locked,
- when the ignition is switched on,
- 30 seconds after the last door is closed.



Permanently off.



Permanent lighting.



With the "permanent lighting" mode, the lighting time varies according to the circumstances:

- with the ignition off, approximately ten minutes,
- in energy economy mode, approximately thirty seconds,
- with the hybrid system active, unlimited.

Front and rear map reading lamps

☞ With the ignition on, press the corresponding switch.

When the front courtesy lamp is on "permanent lighting", the rear map reading lamp comes on as well, unless it is "permanently off".

From the front, you can deactivate the rear map reading lamps so as to not disturb sleeping rear passengers, for example. However, the rear passengers can force the illumination of a lamp.



Take care to avoid leaving anything in contact with the courtesy lamps.


Interior mood lighting

The dimmed passenger compartment lighting improves visibility in the vehicle when the light is poor.



Switching on

At night, interior mood light emitting diodes - LEDs come on automatically when the sidelamps are switched on.

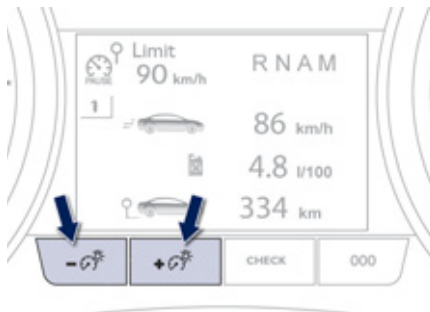

Switching off

The interior mood lighting switches off automatically when the sidelamps are switched off.

It can be switched off manually by adjusting the instrument panel lighting dimmer button to the lowest setting.

General points relating to child seats

Although one of PEUGEOT's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats**,
- **a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear.**

- i** **PEUGEOT recommends** that children should travel in the **outer rear seats** of your vehicle:
- **"rearwards-facing"** up to the age of 2,
 - **"forwards-facing"** over the age of 2.

* The rules for carrying children are specific to each country. Refer to the legislation in force in your country.

Child seat in the front




"Rearwards-facing"

When a "rearwards-facing" child seat is installed on the **front passenger seat**, it is essential that the passenger airbag is deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**



"Forwards-facing"

When a "forwards-facing" child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the fully back and highest position with the seat back upright and leave the passenger's airbag activated.

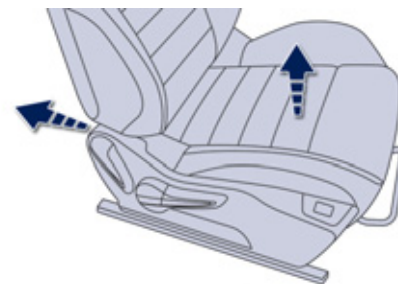

Passenger seat in the fully back and highest position.


i Ensure that the seat belt is correctly tensioned.



Passenger airbag OFF



Refer to the advice given on the label present on both sides of the passenger's sun visor.

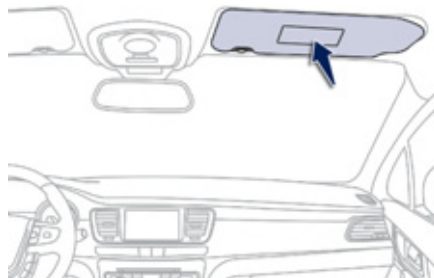

i To assure the safety of your child, you must deactivate the passenger's front airbag when you install a child seat in the rearwards facing position on the front passenger's seat. Otherwise, there is a risk that the child could be seriously injured or killed if the airbag were deployed.

i For more information on deactivating the airbag, refer to the "Safety" section then "Airbags".

Child seats recommended by PEUGEOT

PEUGEOT offers a complete range of recommended child seats which are secured using a **three point seat belt**.

Group 0+: from birth to 13 kg	Group 1: from 9 to 18 kg
 L1 "RÖMER/BRITAX Baby-Safe Plus". Installed in the rearwards-facing position.	 L2 "RÖMER Duo Plus ISOFIX".
Groups 2 and 3: from 15 to 36 kg	
 L5 "KLIPPAN Optima". From the age of 6 years (approximately 22 kg), the booster is used on its own.	 L6 "RÖMER KIDFIX" Can be secured using the vehicle's ISOFIX mountings. The child is restrained by the seat belt.

Installing child seats attached using the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved (a) in accordance with the weight of the child and the seat in the vehicle.

Weight of the child and indicative age					
Seat		Under 13 kg (groups 0 (b) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Front passenger seat (c) with height adjustment		U (R)	U (R)	U (R)	U (R)
Front passenger seat (c) without height adjustment		U	U	U	U
Outer rear seats		U	U	U	U
Centre rear seat		X	X	X	X

a: universal child seat, child seat that can be installed in all vehicles using a seat belt.

b: group 0, from birth to 10 kg. Shell seats and baby carriers cannot be installed in the front passenger seat.

c: consult the legislation in force in your country before installing your child on this seat.

U: seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rearwards-facing" and/or "forwards-facing".

U (R): same as **U**, with the vehicle's seat adjusted to the highest position and as far back as possible.

X: seat position not suitable for installation of a child seat for the weight class indicated.

Advice on child seats

! The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Ensure that there is no seat belt or seat belt buckle under the child seat, as this could destabilise it.

Remember to fasten the seat belts or the child seat harnesses keeping the slack relative to the child's body to a minimum, even for short journeys.

When installing a child seat using the seat belt, ensure that the seat belt is tightened correctly on the child seat and that it secures the child seat firmly on the seat of your vehicle. If your passenger seat is adjustable, move it forwards if necessary.

At rear seating positions, always leave sufficient space between the front seat and:

- a "rearwards facing" child seat,
- the child's feet for a child seat fitted "forwards facing".

To do this, move the front seat forwards and, if necessary, move its backrest into the upright position.

For optimum installation of the "forwards-facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and remove the head restraint. Ensure that the head restraint is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking. Refit it if an adult uses the seating position.

Children under the age of 10 must not travel in the "forwards-facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag when a "rearwards-facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- a child or children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.


To prevent accidental opening of the doors and rear windows, use the "Child lock". Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.


"ISOFIX" mountings

Your vehicle has been approved in accordance with the **latest ISOFIX regulations**.

The seats, represented below, are fitted with regulation ISOFIX mountings.

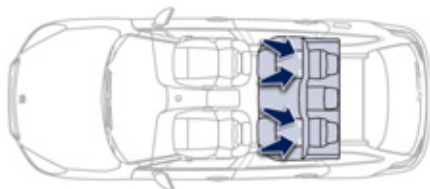

There are three rings for each seat.

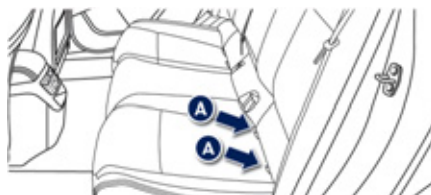

- Two rings **A**, located between the vehicle seat back and cushion, indicated by a label.



- A ring **B**, behind the seat, referred to as the **TOP TETHER** for fixing the upper strap.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are easily secured on the two rings **A**.

Some also have an **upper strap** which is attached to ring **B**.

To attach this strap, raise the vehicle seat's head restraint then pass the hook between its rods. Then fix the hook on ring **B** and tighten the upper strap.

! The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

For information regarding the ISOFIX child seats which can be installed in your vehicle, refer to the table showing the locations for installing ISOFIX child seats.

ISOFIX child seat

Recommended by PEUGEOT and approved for your vehicle

RÖMER Duo Plus ISOFIX
(size category B1)

Group 1: from 9 to 18 kg



Installed only in the forwards-facing position.
Fitted with an upper strap to be secured on the upper ring **B**, referred to as the TOP TETHER.
Three seat body angles: sitting, reclining, lying.
Adjust the front seat of the vehicle so that the child's feet do not touch the back of the seat.
Can be installed forwards-facing by attaching it to the seat using a three-point seat belt

i This child seat can also be used on seats which are not fitted with ISOFIX mountings. In this case, it must be attached to the vehicle seat using the three point seat belt.

Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.

Locations for installing ISOFIX child seats

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.

In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child / indicative age									
	Less than 10 kg (group 0) Up to approx. 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to approx. 1 year			From 9 to 18 kg (group 1) From approx. 1 to 3 years				
Type of ISOFIX child seat	Shell		"rearwards-facing"			"rearwards-facing"		"forwards-facing"		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Front passenger seat 	Not Isofix									
Outer rear seats 	X		IL-SU			IL-SU		IUF IL-SU		
Centre rear seat 	Not Isofix									

IUF: seat suitable for the installation of an Isofix **Universal** seat, "Forwards-facing" secured using the top belt.

IL-SU: seat suitable for the installation of an Isofix **Semi-Universal** seat either:


- "rearwards-facing" fitted with a top belt or a stay,
- "forwards-facing" fitted with a stay,
- a shell seat fitted with an upper strap or a stay.

For advice on securing of the top belt, refer to the paragraph "Isofix mountings".

X: seat not suitable for the installation of a child seat or shell for the weight group indicated.

Electric child lock

Remote control system to prevent opening of the rear doors using their interior controls and use of the rear electric windows.

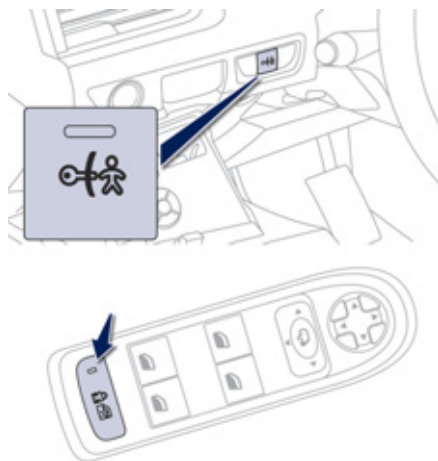

Switching on

☞ With the ignition on, press this button. The indicator lamp in the button comes on, accompanied by a message to confirm that the child lock is on. This indicator lamp remains on until the child lock is switched off. It is still possible to open the doors from the outside and operate the rear electric windows from the driver's control panel.


Switching off

☞ With the ignition on, press this button again. The indicator lamp in the button goes off, accompanied by a message to confirm that the child lock is off. This indicator lamp remains off while the child lock is switched off.

! Any other status of the indicator lamp indicates a fault with the electric child lock. Have it checked by a PEUGEOT dealer or a qualified workshop.

! This system is independent and in no circumstances does it take the place of the central locking control. Check the status of the child lock each time you switch on the ignition. Always remove the key from the ignition when leaving the vehicle, even for a short time. In the event of a serious impact, the electric child lock is switched off automatically to permit the exit of the rear passengers.

Direction indicators

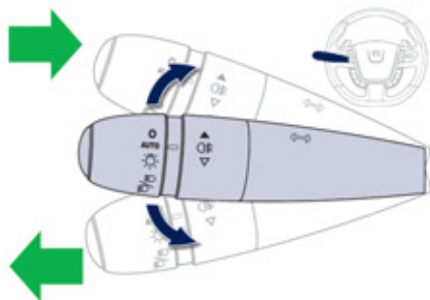


- ☞ Lower the lighting control stalk fully when moving to the left.
- ☞ Raise the lighting control stalk fully when moving to the right.

i If you forget to cancel the direction indicators for more than twenty seconds, the volume of the audible signal will increase if the speed is above 40 mph (60 km/h).

"Motorway" function

Move the stalk briefly upwards or downwards, without going beyond the point of resistance; the corresponding direction indicators will flash 3 times.

Hazard warning lamps

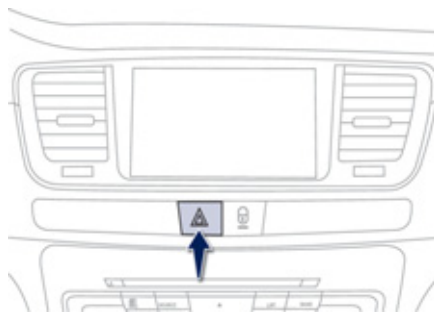

Press the button, the direction indicators flash. They can operate with the ignition off.


Automatic operation of hazard warning lamps

When braking in an emergency, depending on the rate of deceleration, as well as when the ABS regulation is invoked or in the event of an impact, the hazard warning lamps come on automatically.

They switch off automatically the first time you accelerate.

- ☞ You can also switch them off by pressing the button.

Emergency or assistance call

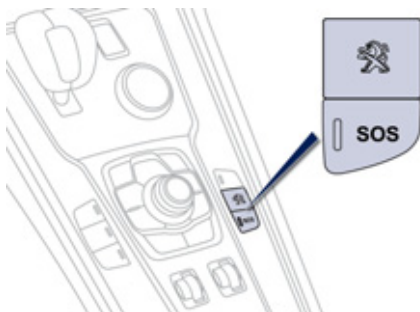


This system allows you to make an emergency or assistance call to the emergency services or to the dedicated PEUGEOT service.

i For more information on the use of this function, refer to the "Audio equipment and telematics" section.

Horn

Audible warning system to alert other road users to an imminent danger.

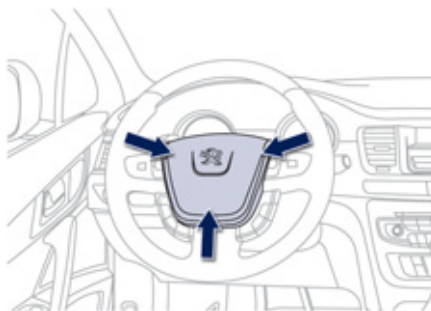

☞ Press the central part of the multifunction steering wheel.

i Use the horn moderately and only in the following circumstances:

- immediate danger,
- overtaking a cyclist or pedestrian,
- approaching a location lacking visibility.

Electronic stability programme (ESC)

Electronic Stability Programme incorporating the following systems:

- the anti-lock braking system (ABS) and the electronic brake force distribution (EBFD),
- the emergency braking assistance,
- the anti-slip regulation (ASR) or traction control,
- the dynamic stability control (DSC).

Definitions

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)

This system improves the stability and manoeuvrability of your vehicle when braking and provides improved control in corners, in particular on poor or slippery road surfaces. The ABS prevents wheel lock in the event of emergency braking. The electronic brake force distribution system manages the braking pressure wheel by wheel.

Emergency braking assistance

In an emergency, this system enables you to reach the optimum braking pressure more quickly and therefore reduce the stopping distance. It is triggered in relation to the speed at which the brake pedal is pressed. This is felt by a reduction in the resistance of the pedal and an increase in the effectiveness of the braking.

Anti-slip regulation (ASR)

The ASR system (also known as Traction Control) optimises traction in order to avoid wheel slip by acting on the brakes of the driving wheels and on the engine. It also improves the directional stability of the vehicle on acceleration.

Dynamic stability control (DSC)

If there is a difference between the path followed by the vehicle and that required by the driver, the DSC monitors each wheel and automatically acts on the brake of one or more wheels and on the engine to return the vehicle to the required path, within the limits of the laws of physics.

Snow driving assistance (Intelligent Traction Control)

Your vehicle has a system to help driving on snow: **Intelligent Traction Control**.

This automatic system continuously checks for situations of difficult surface adhesion that could make it difficult to move off or make progress on deep fresh snow or compacted snow.

In these situations, **Intelligent Traction Control** limits the amount of wheel slip to provide the best traction and trajectory control. In extremely severe conditions (deep snow, mud...), it can be useful to temporarily deactivate the **dynamic stability control and wheel anti-slip** systems to allow a degree of wheel spin and so recover grip.

It is recommended that the system be reactivated as soon as possible.

Snow tyres are strongly recommended on surfaces offering low levels of adhesion.

Operation

Anti-lock braking system (ABS) and electronic brake force distribution (EBFD)



When this warning lamp comes on, accompanied by an audible signal and a message, it indicates that there is a fault with the ABS, which could cause loss of control of the vehicle when braking.



When this warning lamp comes on, coupled with the **STOP** warning lamp, accompanied by an audible signal and a message, it indicates that there is a fault with the electronic brake force distribution (EBFD), which could cause loss of control of the vehicle when braking.

You must stop as soon as it is safe to do so. In both cases, contact a PEUGEOT dealer or a qualified workshop.



When changing wheels (tyres and rims), make sure that these are approved for your vehicle. Normal operation of the ABS may make itself felt by slight vibrations of the brake pedal.



In emergency braking, press very firmly without releasing the pressure.



Dynamic stability control (DSC)

Activation

This system is activated automatically each time the vehicle is started. It comes into operation in the event of a grip or trajectory problem.



This is indicated by flashing of this warning lamp in the instrument panel.

Deactivation

In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground...), it may be advisable to deactivate the DSC system, so that the wheels can spin freely and regain grip.



☞ Press the **"ASR OFF"** button.



This warning lamp and the indicator lamp in the button come on: the DSC system no longer acts on the operation of the engine.



Reactivation

The system is reactivated automatically each time the ignition is switched back on or from 30 mph (50 km/h).

☞ Press the **"ASR OFF"** button again to reactivate it manually.

Operating fault




If this warning lamp comes on, accompanied by an audible signal and a message in the instrument panel screen, this indicates a fault with the system. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.



The DSC system offers exceptional safety in normal driving, but this should not encourage the driver to take extra risks or drive at high speed. The correct operation of the system depends on observation of the manufacturer's recommendations regarding the wheels (tyres and rims), the braking components, the electronic components and the PEUGEOT assembly and operation procedures. After an impact, have the system checked by a PEUGEOT dealer or a qualified workshop.


Seat belts

Front seat belts

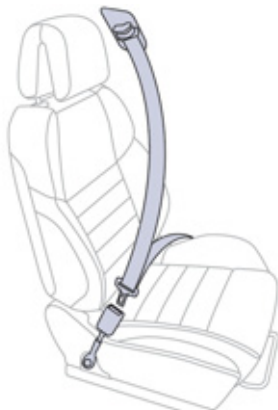

The front seat belts are fitted with a pretensioning and force limiting system. This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants. The pretensioning seat belts are active when the ignition is on. The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.

Rear seat belts

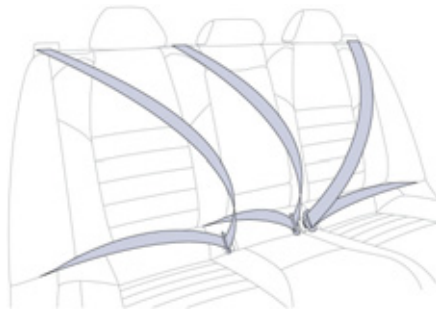

The rear seats are each fitted with a seat belt, three-point anchorages with inertia reel and force limiter (except for the centre rear seat).




Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.


Unfastening

- ☞ Press the red button on the buckle.
- ☞ Guide the seat belt as it reels in.

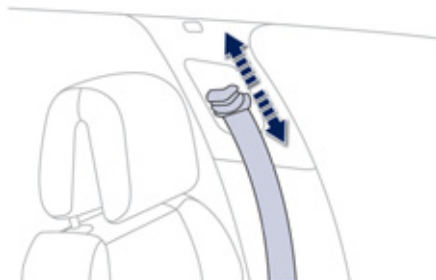

Front seat belt height adjustment

- ☞ To adjust the anchorage point, squeeze the control and slide it until you find a notch.

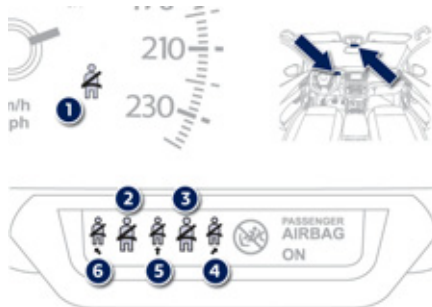

Seat belt not fastened / unfastened warning lamps

1. Front and/or rear seat belts not fastened / unfastened warning lamp in the instrument panel.
2. Front left seat belt warning lamp.
3. Front right seat belt warning lamp.
4. Rear right seat belt warning lamp.
5. Rear centre seat belt warning lamp.
6. Rear left seat belt warning lamp.



From approximately 12 mph (20 km/h), the warning lamp(s) flash for two minutes accompanied by an audible signal. Once these two minutes have elapsed, the warning lamp(s) remain on until the driver or one or more passengers fasten their seat belt.

Front and rear seat belt warning lamps



On switching on the ignition, warning lamp 1 comes on in the instrument panel and the corresponding warning lamp (2 to 6) comes on in red in the passenger's seat belt and front airbag warning lamp display if the corresponding seat belt is not fastened or is unfastened.

i The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off. Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis. The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling firmly on the strap and releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle, go to a qualified workshop with the skills and equipment needed, which a PEUGEOT dealer is able to provide.

Have your seat belts checked regularly by a PEUGEOT dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap.

In the event of an impact

Depending on the nature and seriousness of the impact, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer or a qualified workshop.

In the event of an accident, the high voltage is disconnected automatically.

Airbags

System designed to maximise the safety of the occupants (with the exception of the rear centre passenger) in the event of violent collisions.


The airbags supplement the action of the force-limiting seat belts (with the exception of the centre rear passenger).

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:

- in the case of a serious impact, the airbags are deployed instantly and contribute towards better protection of the occupants of the vehicle (with the exception of the rear centre passenger); immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags will not be deployed; the seat belt alone contributes towards ensuring your protection in these situations.

! The airbags do not operate when the ignition is switched off.

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

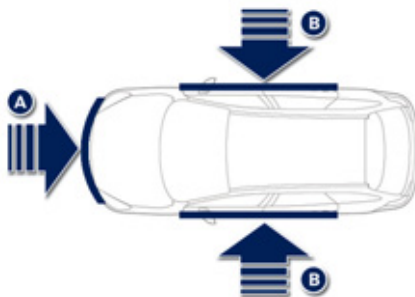


Impact detection zones

A. Front impact zone.

B. Side impact zone.

i Deployment of the airbag(s) is accompanied by a slight emission of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system. This smoke is not harmful, but sensitive individuals may experience slight irritation. The noise of the detonation may result in a slight loss of hearing for a short time.

Front airbags

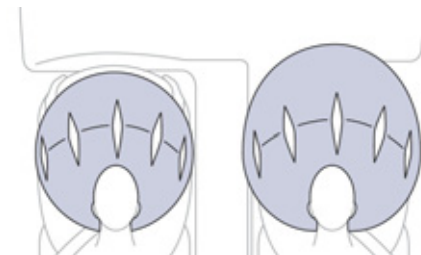


System which protects the driver and front passenger in the event of a serious front impact in order to limit the risk of injury to the head and thorax.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.

Deployment

The airbags are deployed simultaneously, unless the passenger's front airbag is deactivated, in the event of a serious front impact to all or part of the front impact zone A, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the thorax and head of the front occupant of the vehicle and the steering wheel, driver's side, and the dashboard, passenger's side to cushion their forward movement.

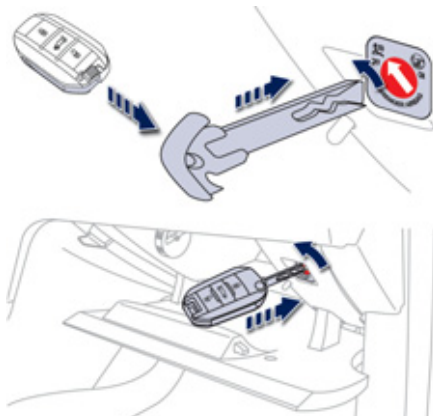

Deactivation

Only the passenger's front airbag can be deactivated:

- ☞ **with the ignition off**, insert the key in the passenger airbag deactivation switch,
- ☞ turn it to the **"OFF"** position,
- ☞ then, remove the key keeping the switch in the new position.



According to version, this warning lamp comes on either in the instrument panel or in the seat belt and passenger's front airbag warning lamp display when the ignition is on and until the airbag is reactivated.



To assure the safety of your child, the passenger's front airbag must be deactivated when you install a "rear facing" child seat on the front passenger seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were deployed.

Reactivation

When you remove the child seat, **with the ignition off**, turn the switch to the **"ON"** position to reactivate the airbag and so assure the safety of your front passenger in the event of an impact.



With the ignition on, this warning lamp comes on in the seat belt and passenger's front airbag warning lamp display for approximately one minute, if the passenger's front airbag is activated.

Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible warning and a message in the instrument panel screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



If this warning lamp flashes, contact a PEUGEOT dealer or a qualified workshop. The passenger's front airbag may no longer be deployed in the event of a serious impact.



If even one of the two airbag warning lamps comes on continuously, do not install a child seat on the front passenger seat. Have it checked by a PEUGEOT dealer or qualified workshop.

Lateral airbags




System which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest, between the hip and the shoulder. Each lateral airbag is fitted in the seat backrest frame, door side.

Deployment

The lateral airbags are deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The lateral airbag inflates between the hip and shoulder of the front occupant of the vehicle and the corresponding door trim panel.

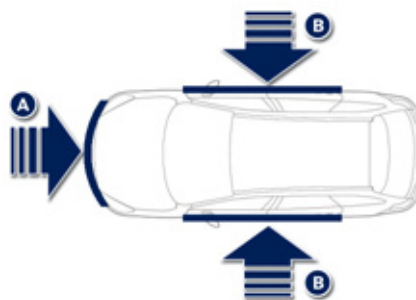

Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

Curtain airbags

System which protects the driver and passengers (with the exception of the rear centre passenger) in the event of a serious side impact in order to limit the risk of injury to the side of the head.

Each curtain airbag is built into the pillars and the upper passenger compartment area.

Deployment

The curtain airbag is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

Operating fault



If this warning lamp comes on in the instrument panel, accompanied by an audible signal and a message in the instrument panel screen, contact a

PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

In the event of a rear or front collision, the curtain airbag is not deployed.

! For the airbags to be fully effective, observe the following safety rules:

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system must be carried out by a PEUGEOT dealer or a qualified workshop.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Passengers must not place their feet on the dashboard.

If possible, do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Lateral airbags

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a PEUGEOT dealer.

Refer to the "Accessories" section.

Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.

Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.

If fitted on your vehicle, do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

Temporary puncture repair kit

 
Complete system consisting of a compressor and a sealant cartridge which permits **temporary repair** of a tyre so that you can drive to the nearest garage.

It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.

Access to the kit



This kit is located behind rear seats.



List of tools

All of these tools are specific to your vehicle and can vary according to equipment. Do not use them for other purposes.


1. 12 V compressor.
Contains a sealant cartridge for the temporary repair of a tyre and can also be used for adjusting tyre pressures.
2. One chock* to block one of the front wheels of the vehicle.
3. Removable towing eye.
See the "Towing the vehicle" section.

* Depending on destination country or equipment.

Description of the kit




- A. "Sealant" or "Air" position selector.
- B. On "I" / off "O" switch.
- C. Deflation button.
- D. Pressure gauge (in bar or p.s.i.).
- E. Compartment housing:
 - a cable with adaptor for 12 V socket,
 - various inflation adaptors for accessories, such as balls, bicycle tyres...

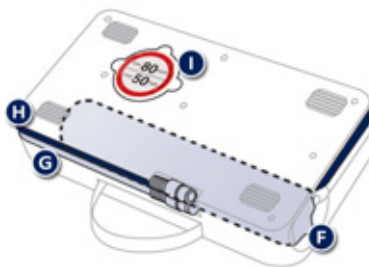

- F. Sealant cartridge.
- G. White pipe with cap for repair.
- H. Black pipe for inflation.
- I. Speed limit sticker.


i The speed limit sticker I must be affixed to the vehicle's steering wheel to remind you that a wheel is in temporary use. Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.

Repair procedure

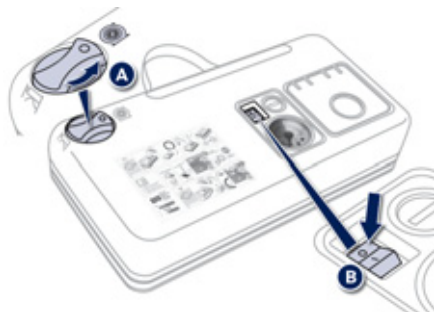


1. Sealing

- ☞ Switch off the ignition.
- ☞ Turn the selector **A** to the "sealant" position.
- ☞ Check that the switch **B** is in position "O".

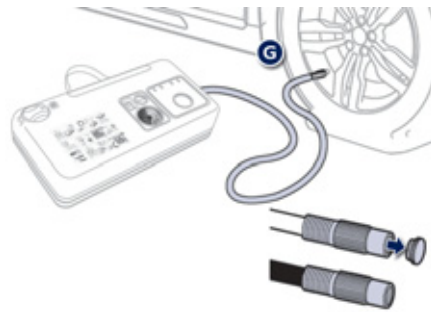

- ☞ Uncoil the white pipe **G** fully.
- ☞ Unscrew the cap from the white pipe.
- ☞ Connect the white pipe to the valve of the tyre to be repaired.

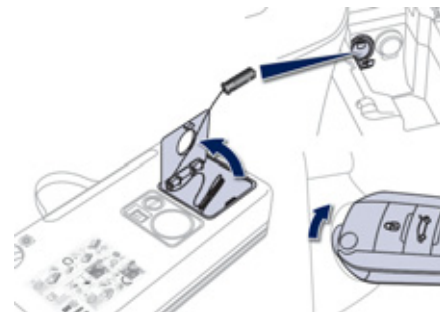


- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle and leave the engine running.

i Avoid removing any foreign bodies which have penetrated into the tyre.


! Take care, this product is harmful (e.g. ethylene-glycol, colophony...) if swallowed and causes irritation to the eyes. Keep this product out of the reach of children.

! Do not start the compressor before connecting the white pipe to the tyre valve: the sealant product would be expelled through the pipe.

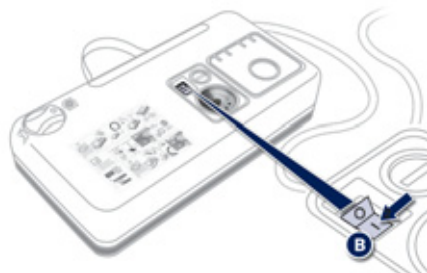


- ☞ Switch on the compressor by moving the switch **B** to position "I" until the tyre pressure reaches 2.0 bars. The sealant is injected into the tyre under pressure; do not disconnect the pipe from the valve during this operation (risk of splashing).

i If after around 5 to 7 minutes the pressure is not attained, this indicates that the tyre is not repairable; contact a PEUGEOT dealer or a qualified workshop for assistance.

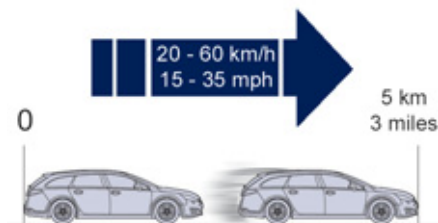


- ☞ Remove the kit and screw the cap back on the white pipe. Take care to avoid staining your vehicle with traces of fluid. Keep the kit to hand.
- ☞ Drive immediately for approximately three miles (five kilometres), at reduced speed (between 15 and 35 mph (20 and 60 km/h)), to plug the puncture.
- ☞ Stop to check the repair and the tyre pressure using the kit.

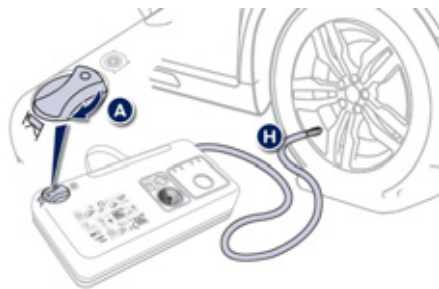

2. Inflation

- ☞ Turn the selector **A** to the "air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel.

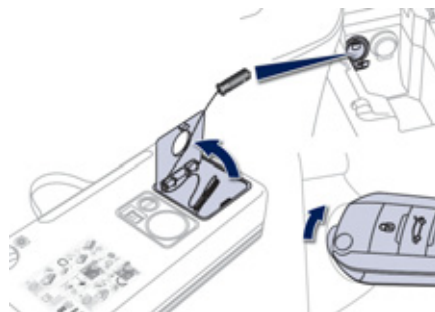

- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket.
- ☞ Start the vehicle again and leave the engine running.



As soon as possible, go to a PEUGEOT dealer or a qualified workshop. You must inform the technician that you have used this kit. After inspection, the technician will advise you on whether the tyre can be repaired or if it must be replaced.



- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "**I**"; to deflate: switch **B** in position "**O**" and press button **C**), in accordance with the vehicle's tyre pressure label (located on the left hand door aperture).
A loss of pressure indicates that the puncture has not been fully plugged; contact a PEUGEOT dealer or qualified workshop for assistance.
- ☞ Remove and stow the kit.
- ☞ Drive at reduced speed (50 mph [80 km/h] max) limiting the distance travelled to approximately 120 miles (200 km).


Removing the cartridge



- ☞ Stow the black pipe.
- ☞ Detach the angled base from the white pipe.
- ☞ Support the compressor vertically.
- ☞ Unscrew the cartridge from the bottom.

! Beware of discharges of fluid.
The expiry date of the fluid is indicated on the cartridge.
The sealant cartridge is designed for single use; even if only partly used, it must be replaced.
After use, do not discard the cartridge into the environment, take it to an authorised waste disposal site or a PEUGEOT dealer.
Do not forget to obtain a new sealant cartridge, available from PEUGEOT dealers or from a qualified workshop.


Checking tyre pressures / inflating accessories

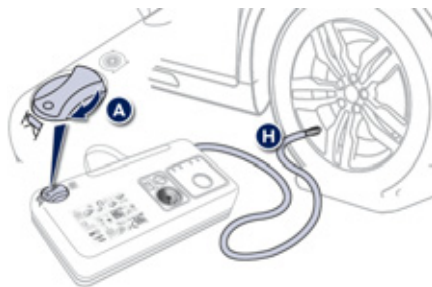

You can also use the compressor, without injecting any product, to:

- check or adjust the pressure of your tyres,
- inflate other accessories (balls, bicycle tyres...).

- ☞ Turn the selector **A** to the "Air" position.
- ☞ Uncoil the black pipe **H** fully.
- ☞ Connect the black pipe to the valve of the wheel or accessory.
If necessary, fit one of the adaptors supplied with the kit first.

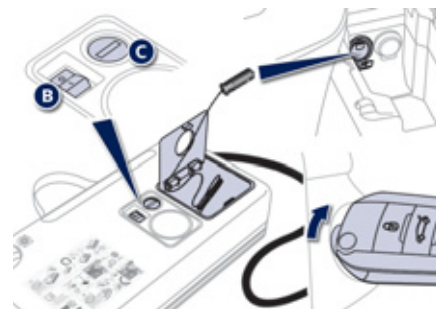

- ☞ Connect the compressor's electrical connector to the vehicle's 12 V socket.
- ☞ Start the vehicle and let the engine run.
- ☞ Adjust the pressure using the compressor (to inflate: switch **B** in position "I"; to deflate: switch **B** in position "O" and press button **C**), according to the vehicle's tyre pressure label or the accessory's pressure label.
- ☞ Remove the kit then stow it.


Changing a wheel

Procedure for changing a faulty wheel for the spare wheel using the tools provided with the vehicle.

Access to the tools



The tools are located in the boot, behind the rear seats.

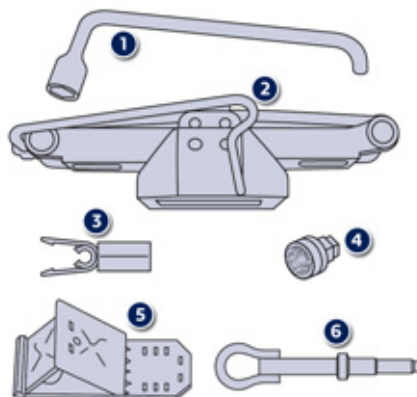

List of tools*

All of these tools are specific to your vehicle and can vary according to the level of equipment. Do not use them for other purposes.

1. Wheelbrace.
For removing the wheel trim and removing the wheel bolts.
2. Jack with integral handle.
For raising the vehicle.

3. "Bolt cover" tool.
For removing the bolt protectors (covers) on alloy wheels.
4. Socket for the security bolts (located in the glove box).
For adapting the wheelbrace to the special "security" bolts.
5. One wheel chock for immobilising the vehicle.
6. Towing eye.
See "Towing the vehicle".

! Before doing any work on your vehicle, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.

i When using lifting equipment (a jack for example), take care to use the jacking points provided, so as to avoid damaging the high voltage cables.

* Depending on country of sale.

Removing a wheel

i Wheel with trim

When refitting the wheel, refit the trim starting by placing its notch facing the valve and press around its edge with the palm of your hand.


i Parking the vehicle

Immobilise the vehicle where it does not block traffic: the ground must be level, stable and not slippery.

Apply the parking brake unless it has been programmed to automatic mode, switch off the ignition and put the gear lever in position **A**, **M** or **R** to block the wheels.


Check that the braking warning lamp and the **P** warning lamp in the parking brake control lever come on.

The occupants must get out of the vehicle and wait where they are safe. Never go underneath a vehicle raised using a jack; use an axle stand.

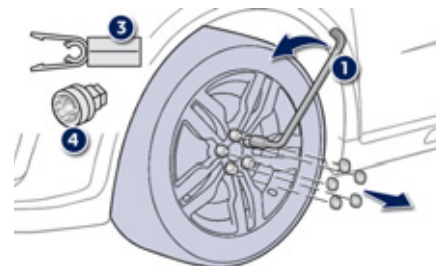


List of operations


- ☞ Remove the bolt cover from each of the bolts using the tool **3** (according to equipment).
- ☞ Fit the security socket **4** on the wheelbrace **1** to slacken the security bolt (if fitted).
- ☞ Slacken the other bolts using the wheelbrace **1** only.

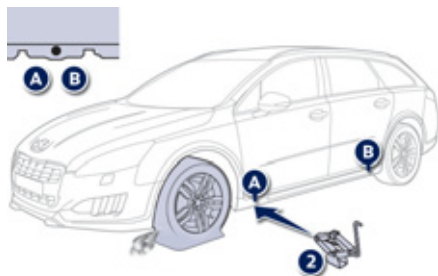

- ☞ Place the jack **2** in contact with one of the two front **A** or rear **B** locations provided on the underbody, whichever is closest to the wheel to be changed.

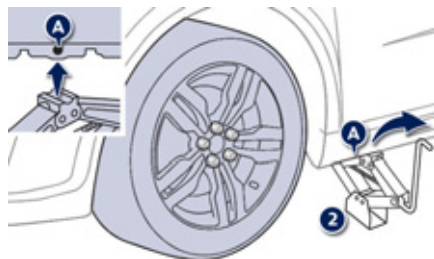

- ☞ Extend the jack **2** until its base plate is in contact with the ground. Ensure that the centreline of the jack base plate is directly below the location **A** or **B** used.

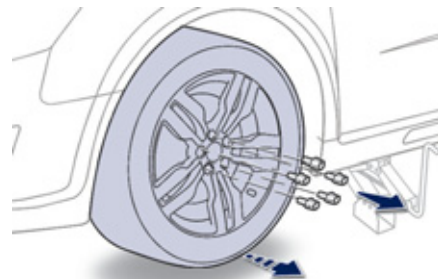

- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.
- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.


Fitting a wheel



i After changing a wheel


To store the punctured wheel in the boot correctly, first remove the central cover. Have the tightening of the bolts and the pressure of the spare wheel checked by a PEUGEOT dealer or a qualified workshop without delay.

Have the punctured wheel repaired and refitted to the vehicle as soon as possible.

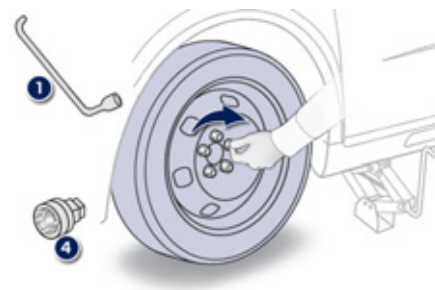


List of operations

- ☞ Put the wheel in place on the hub.
- ☞ Screw in the bolts fully by hand.
- ☞ Pre-tighten the security bolt using the wheelbrace 1 fitted with the security socket 4.
- ☞ Pre-tighten the other bolts using the wheelbrace 1 only.

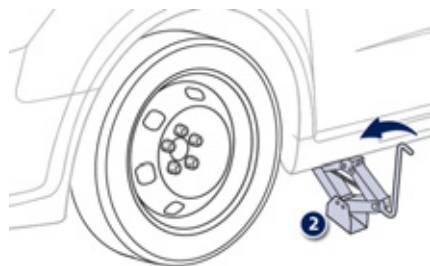

- ☞ Lower the vehicle fully.
- ☞ Fold the jack 2 and detach it.

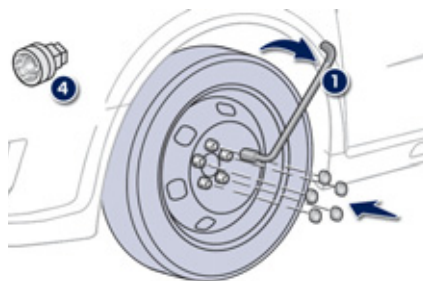

- ☞ Tighten the security bolt using the wheelbrace 1 fitted with the security socket 4.
- ☞ Tighten the other bolts using the wheelbrace 1 only.
- ☞ Refit the bolt covers on each of the bolts (according to equipment).
- ☞ Store the tools in the box.

Snow chains

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.

i The snow chains must be fitted only to the front wheels. They must never be fitted to "space-saver" type spare wheels.

Use only the chains designed to be fitted to the type of wheel fitted to your vehicle:

Original tyre size	Maximum link size.
225/55 R17	9 mm
245/45 R18	

For more information on snow chains, contact a PEUGEOT dealer or a qualified workshop.

i Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.


Advice on installation

- ☞ If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- ☞ Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- ☞ Fit the chains following the instructions provided by the manufacturer.
- ☞ Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- ☞ Stop your vehicle and check that the snow chains are correctly tightened.

i Avoid driving on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. It is recommended that before you leave, you practise fitting the snow chains on a level and dry surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.

Changing a bulb

Front lamps

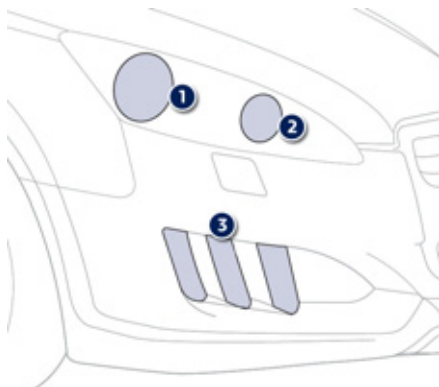

Model with xenon and directional headlamps


1. Direction indicators (light emitting diodes - LEDs).
2. Directional dipped / main beam headlamps (D1S-35W).
3. Daytime running lamps / sidelamps (light emitting diodes - LEDs).



Before doing any work on your vehicle, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.



In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

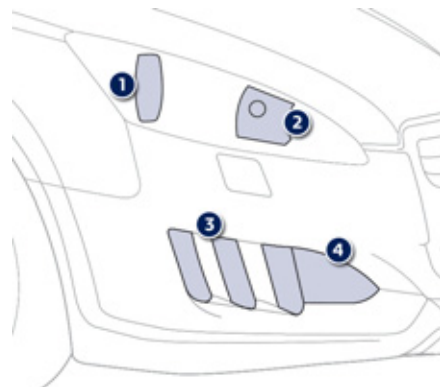

Model with halogen headlamps

1. Dipped and main beam headlamps (H7-55W).
2. Main beam headlamps (H7-55W).
3. Daytime running lamps / sidelamps (light emitting diodes - LEDs).
4. Direction indicators (PY21-21W).

For H7 type bulbs with lugs... take care to observe their correct installation so as to ensure the best lighting performance.

! The headlamps are fitted with polycarbonate glass with a protective coating:

- ☞ **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
- ☞ use a sponge and soapy water or a pH neutral product,
- ☞ when using a high pressure washer on persistent marks, do not keep the lance directed towards the lamps or their edges for too long, so as not to damage their protective coating and seals.

Changing a bulb should only be done after the headlamp has been switched off for a few minutes (risk of serious burns).

- ☞ Do not touch the bulb directly with your fingers, use a lint-free cloth.

It is imperative to use only anti-ultraviolet (UV) type bulbs to avoid damaging the headlamp.

Always replace a failed bulb with a new bulb with the same type and specification.

! Risk of electrocution

Xenon bulbs (D1S-35W) must be replaced by a PEUGEOT dealer or a qualified workshop.

i Dipped and main beam headlamps (xenon model)


D1S xenon bulbs must be changed by a PEUGEOT dealer or a qualified workshop, as there is a risk of electrocution.

It is recommended that the D1S bulbs are changed at the same time when one of them fails.

Direction indicators (Xenon model)

Daytime running lamps


For the replacement of these light-emitting diode (LED) lamps, contact a PEUGEOT dealer or a qualified workshop.

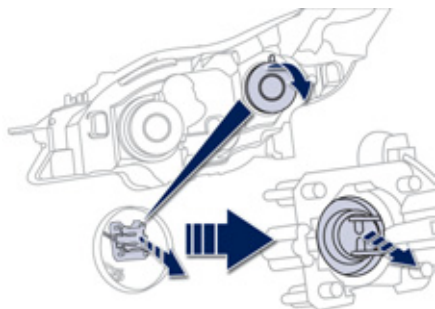

Dipped beam headlamps (halogen model)

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Extract the bulb by pulling and change it.


For reassembly, carry out these operations in reverse order.

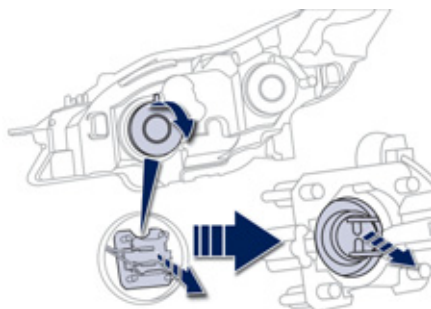

Main beam headlamps (halogen model)

- ☞ Remove the protective plastic cover by pulling on the tab.
- ☞ Disconnect the bulb connector.
- ☞ Remove the bulb by pulling it out and change it.

For reassembly, carry out these operations in reverse order.

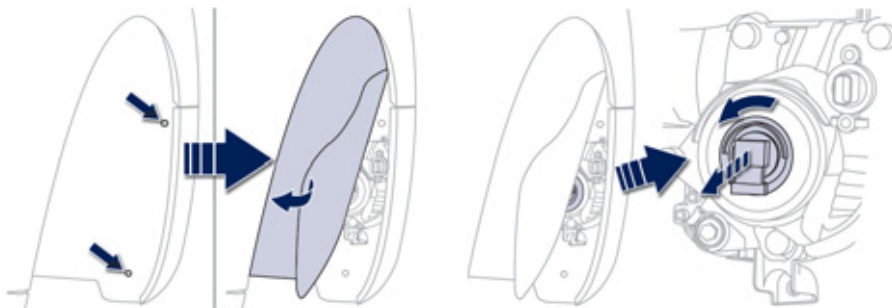


Direction indicators (halogen model)

- ☞ Turn the wheel fully inwards for easy access to the wheel arch liner.
- ☞ Remove the two fixing screws for the access flap, located in the wheel arch.
- ☞ Pull away the wheel arch liner.

- ☞ Turn the bulb holder a quarter of a turn and pull it out.
- ☞ Disconnect the bulb holder connector.
- ☞ Pull the bulb and change it.

For reassembly, carry out these operations in reverse order.

You may also contact a PEUGEOT dealer or a qualified workshop to have these bulbs replaced.

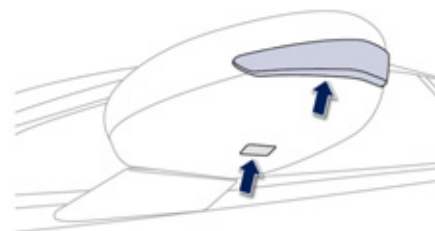


Door mirror spotlamps

You should contact a PEUGEOT dealer or a qualified workshop for the replacement of the light emitting diode - LED.


Integrated direction indicator side repeaters

You should contact a PEUGEOT dealer or a qualified workshop for the replacement of these bulbs.

Rear lamps

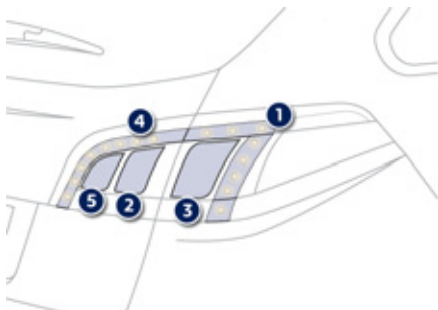


1. Brake lamps (light emitting diodes - LEDs).
2. Reversing lamps (W19W).
3. Direction indicators (PY21W amber).
4. Sidelamps (light emitting diodes - LEDs).
5. Foglamps (light emitting diodes - LEDs).

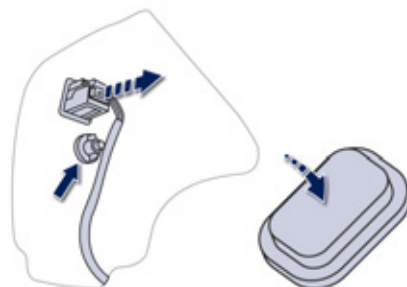

Direction indicators (on the wings)

- ☞ Open the boot then remove the access cover.
- ☞ Remove the sealing foam.
- ☞ Disconnect the lamp connector.
- ☞ Remove the lamp fixing nut.

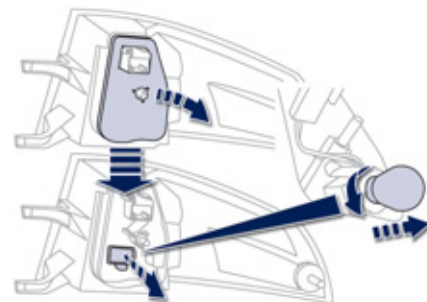


- ☞ Carefully remove the lamp unit from outside.
- ☞ Remove the sealing foam.
- ☞ Unclip the bulb holder.
- ☞ Turn the bulb a quarter of a turn and pull it out.

For reassembly, carry out these operations in reverse order.


i Changing the light emitting diode-LED lamps

For replacement, contact a PEUGEOT dealer or qualified workshop.

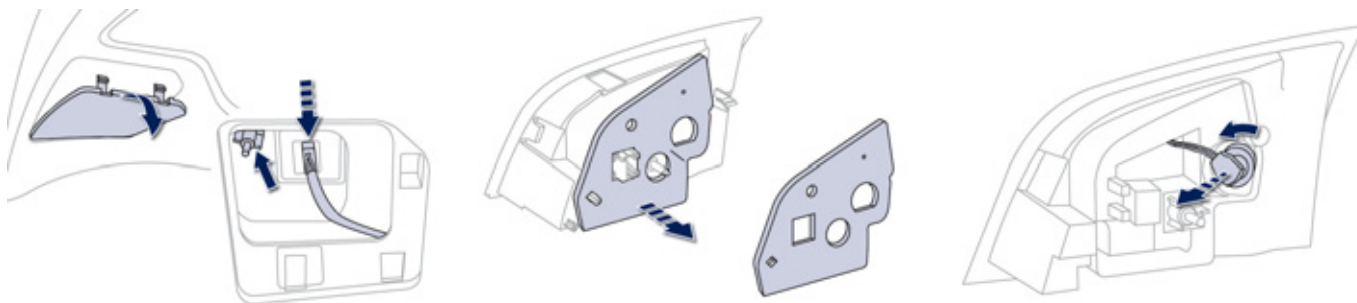


Reversing lamp (tailgate)

- ☞ Open the tailgate and then remove the access cover.
 - ☞ Disconnect the lamp connector.
 - ☞ Remove the lamp fixing nut.
 - ☞ Carefully remove the lamp from the outside.
 - ☞ Remove the sealing foam.
 - ☞ Turn the bulb holder a quarter of a turn and pull it out.
- For reassembly, carry out these operations in reverse order.

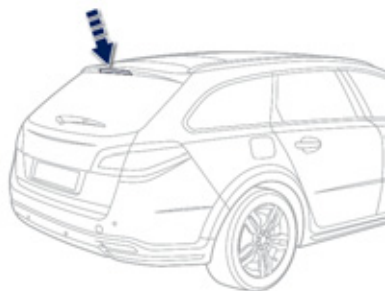

Third brake lamp (light emitting diodes - LEDs)

Contact a PEUGEOT dealer or qualified workshop.

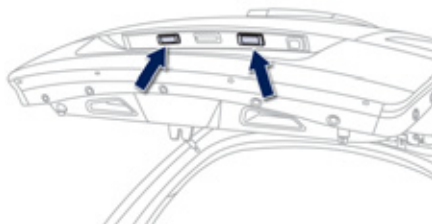


Number plate lamps

- ☞ Insert a thin screwdriver into one of the outer holes of the lens.
- ☞ Push it outwards to unclip.
- ☞ Disconnect the lamp connector.
- ☞ Remove the lens.
- ☞ Pull the bulb out and change it.

Changing a fuse

Procedure for replacing a failed fuse with a new fuse to rectify a failure of the corresponding function.

Access to the tools

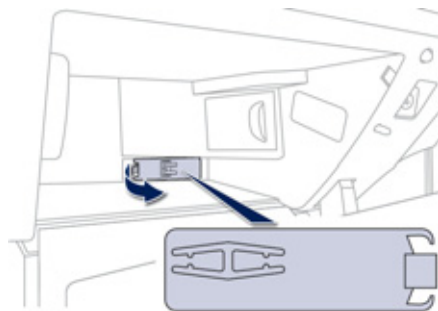

The extraction tweezers and spare fuses are located in the glove box.

Changing a fuse



Good



Failed

Before changing a fuse, the cause of the failure must be identified and rectified.


- ☞ Identify the failed fuse by checking the condition of its filament.
- ☞ Use the special tweezers to extract the fuse from its housing.
- ☞ Always replace the faulty fuse with a fuse of the same rating.
- ☞ Check that the number marked on the fusebox, the rating marked on the fuse and the following tables all agree.

i Installing electrical accessories

Your vehicle's electrical system is designed to operate with standard or optional equipment. Before installing other electrical equipment or accessories on your vehicle, contact a PEUGEOT dealer or a qualified workshop.

- ! PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.

Dashboard fuses

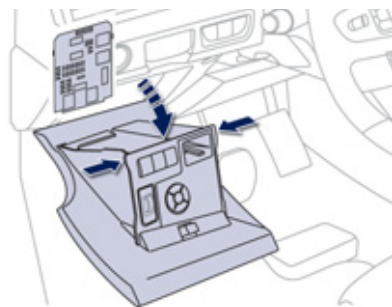


The fusebox is placed in the lower dashboard (left-hand side).


Fuse N°	Rating (A)	Functions
F6 A or B	15	Audio system.
F8	3	Alarm.
F13	10	Front cigar lighter.
F14	10	Front 12 V socket.
F16	3	Rear courtesy lamp, rear map reading lamps.
F17	3	Front courtesy lamp, courtesy mirror.
F28 A or B	15	Audio system.
F30	20	Rear wiper.
F32	10	Audio amplifier.

Access to the fuses

- Open the hinged panel, then apply light force to bypass the stops.

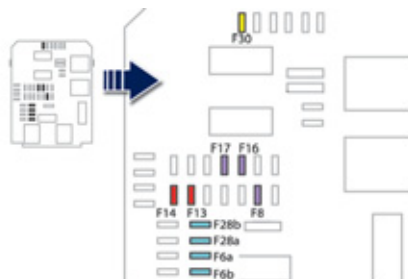


Fuses behind the glove box

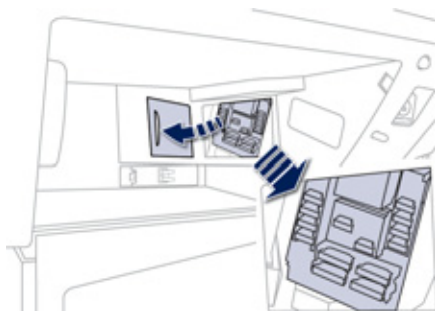

Fuse N°	Rating (A)	Functions
F3	15	Driver's electric window panel, 12 V socket for rear seats.
F4	15	12 V socket in boot.
F5	30	One-touch rear window.
F6	30	One-touch front window.
F11	20	Trailer unit.
F12	20	Audio amplifier.
F15	20	Panoramic sunroof blind.
F16	5	Driver's electric window switch panel.



Engine compartment fuses

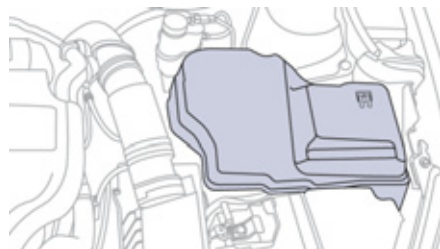


The fusebox is placed in the engine compartment near the battery.

Fuse N°	Rating (A)	Functions
F20	15	Front / rear screenwash pump.
F21	20	Headlamp wash pump.
F22	15	Horn.
F23	13	Right-hand main beam headlamp.
F24	15	Left-hand main beam headlamp.
F27	5	Left hand lamp mask.
F28	5	Right hand lamp mask.

Access to the fuses

- 🔧 Unclip the cover.
- 🔧 Change the fuse (see corresponding paragraph).
- 🔧 When you have finished, close the cover carefully to ensure correct sealing of the fusebox.

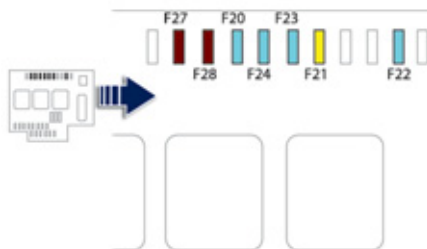


12 V battery

Procedure for starting the engine using another battery or charging a discharged battery.

Your vehicle is fitted with a conventional 12 V battery, located under the bonnet, in addition to the high voltage battery used by the hybrid system.


In certain conditions, if the 12 V battery is too discharged to activate the hybrid system, recharging from another conventional 12 V battery is possible.

Do not carry out this recharge if the **Ready** lamp is on.

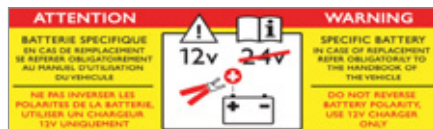

! The presence of this label indicates the use of a 12 V lead-acid battery with special technology and specification, for which the involvement of a PEUGEOT dealer or qualified workshop is required when replacing or disconnecting the battery. Failure to observe this recommendation may cause premature wear of the battery.

Access to the battery

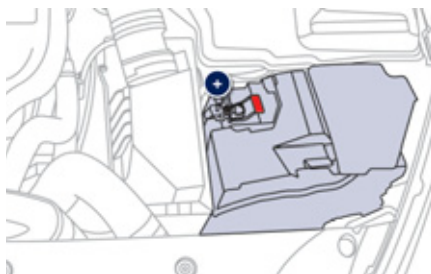


The battery is located under the bonnet. To gain access to it:

- ☞ open the bonnet using the interior release lever, then the exterior safety catch,
- ☞ remove the plastic cover on the (+) terminal,
- ☞ if necessary, unclip the fusebox to remove the battery.

! Before doing any work on your vehicle, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.

Disconnecting the (+) cable

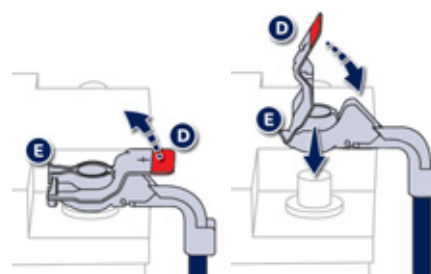

- ☞ Raise the locking tab **D** fully to release the cable terminal clamp **E**.

Reconnecting the (+) cable

- ☞ Position the open clamp **E** of the cable on the positive post (+) of the battery.
- ☞ Press vertically on the clamp **E** to position it correctly on the battery.
- ☞ Lock the clamp by spreading the positioning lug and then lowering the tab **D**.


! Do not apply excessive force on the tab as locking will not be possible if the clamp is not positioned correctly; start the procedure again.

Starting using another battery

When your vehicle's battery is discharged, the engine can be started using a slave battery (external or on another vehicle) and jump lead cables.

- !** First check that the slave battery has a nominal voltage of 12 V and a capacity at least equal to that of the discharged battery.
- Do not try to start the engine by connecting a battery charger.
- Do not disconnect the (+) terminal when the engine is running.

- ☞ Remove the plastic cover from the (+) terminal, if your vehicle has one.
- ☞ Connect the red cable to the positive terminal (+) of the flat battery **A**, then to the positive terminal (+) of the slave battery **B**.
- ☞ Connect one end of the green or black cable to the negative terminal (-) of the slave battery **B** (or earth point on the other vehicle).
- ☞ Connect the other end of the green or black cable to the earth point **C** on the broken down vehicle (or on the engine mounting).
- ☞ Start the engine of the vehicle with the good battery and leave it running for a few minutes.

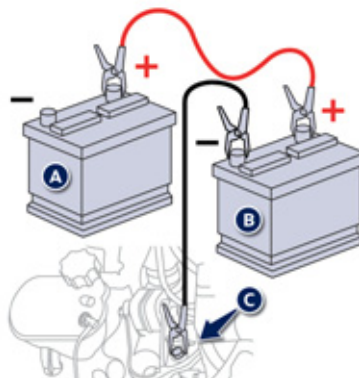

- ☞ Operate the starter on the broken down vehicle and let the engine run. If the engine does not start straight away, switch off the ignition and wait a few moments before trying again.
- ☞ Wait until the engine returns to idle then disconnect the jump lead cables in the reverse order.
- ☞ Refit the plastic cover to the (+) terminal, if your vehicle has one.

i Do not disconnect the cables too quickly; leave them connected for a few minutes (until the engine returns to idle) otherwise there is a risk that the battery would be under-charged, with the need then to repeat the operation. Starting the vehicle when the battery is flat must be done with the electronic key inside the vehicle, the driver's door closed and the driver's seat belt buckled.

Charging the battery using a battery charger

- ☞ Disconnect the battery from the vehicle.
- ☞ Follow the instructions for use provided by the manufacturer of the charger.
- ☞ Connect the battery starting with the negative terminal (-).
- ☞ Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.

i After refitting the battery, the Stop & Start system will only be active after several hours depending on the climatic conditions and the state of charge of the battery (up to about 8 hours).



The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste.

Take used remote control batteries and vehicle batteries to a special collection point.

i It is advisable to disconnect the battery if the vehicle is to be left unused for more than one month.



Protect your eyes and face before handling the battery.

All operations on the battery must be carried out in a well ventilated area and away from naked flames and sources of sparks, so as to avoid the risk of explosion or fire.

Do not try to charge a frozen battery; the battery must first be thawed out to avoid the risk of explosion. If the battery has been frozen, before charging have it checked by a PEUGEOT dealer or a qualified workshop who will check that the internal components have not been damaged and the casing is not cracked, which could cause a leak of toxic and corrosive acid.



Do not reverse the polarity and use only a 12 V charger.

Do not disconnect the terminals while the engine is running.

Do not charge the batteries without disconnecting the terminals first. Wash your hands afterwards.

Do not push the vehicle to start the engine.

Before disconnecting the battery

Wait 2 minutes after switching off the ignition before disconnecting the battery.

Close the windows and the doors before disconnecting the battery.


Following reconnection of the battery

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems.

However, if problems remain following this operation, contact a PEUGEOT dealer or a qualified workshop.

Referring to the corresponding section, you must yourself reinitialise (depending on version):

- the remote control key,
- the electric blind(s),
- ...

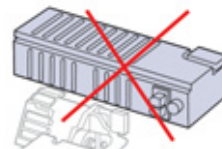

Do not attempt to charge the high voltage battery.

Load reduction mode

System which manages the use of certain functions according to the level of charge remaining in the battery.

When the vehicle is being driven, the load reduction function temporarily deactivates certain functions, such as the air conditioning, the heated rear screen...

The deactivated functions are reactivated automatically as soon as conditions permit.

Energy economy mode

System which manages the duration of use of certain functions to conserve a sufficient level of charge in the battery.

After the engine has stopped, you can still use functions such as the audio and telematics system, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for a maximum combined duration of about forty minutes.

Switching to economy mode

A message then appears in the instrument panel screen indicating that the vehicle has switched to economy mode and the active functions are put on standby.

If a telephone call is being made at this time, it will be maintained for around 10 minutes with the Bluetooth hands-free system of your audio system.

i In this energy economy mode and when starting up the hybrid system, it may take a few seconds before the **Ready** lamp comes on.

Exiting economy mode

These functions are reactivated automatically next time the vehicle is driven.

☞ In order to restore the use of these functions immediately, start the engine and let it run:

- for less than ten minutes, to use the equipment for approximately five minutes,
- for more than ten minutes, to use the equipment for up to approximately thirty minutes.

Let the engine run for the duration specified to ensure that the battery charge is sufficient. Do not repeatedly and continuously restart the engine in order to charge the battery. A flat battery prevents the engine from starting (refer to the "Battery" section).

Changing a wiper blade



Before removing a front wiper blade

- ☞ Within one minute after switching off the ignition, operate the wiper stalk to position the wiper blades vertically on the windscreen.

Removing

- ☞ Raise the corresponding wiper arm.
- ☞ Unclip the wiper blade and remove it.

Fitting

- ☞ Put the corresponding new wiper blade in place and clip it.
- ☞ Fold down the wiper arm carefully.


After fitting a front wiper blade

- ☞ Switch on the ignition.
- ☞ Operate the wiper stalk again to park the wiper blades.

Recovering the vehicle on a flat-bed

Procedure for having your vehicle recovered on a flat bed lorry or trailer.

Access to the tools

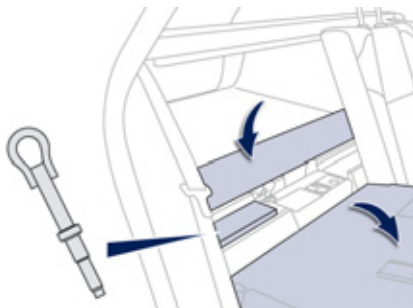

The towing eye is located behind the rear seats.


- ☞ For access to it, fold the 2/3 part of the rear seats.

! Always recover the vehicle on a flat bed lorry or trailer.

Never tow the vehicle with the four wheels on the ground (or the front or rear wheels only), you risk damaging the transmission.

Place the gear selector in position **N** and switch off the engine (**Ready** lamp off).

From the front

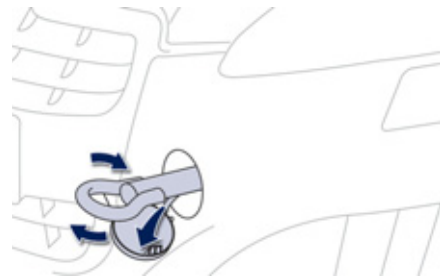


- ☞ On the front bumper, unclip the cover by pressing at the bottom to disengage the securing lugs.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing system.
- ☞ Switch on the hazard warning lamps.

- i ☞ Place the gear selector in neutral - position **N**.

Failure to observe this special condition could result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

From the rear

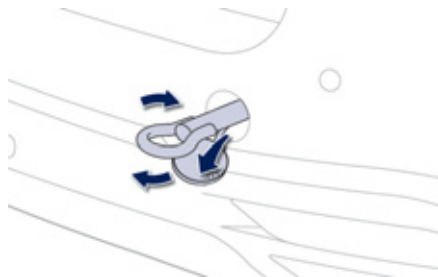




- ☞ On the rear bumper, unclip the cover by levering at the left with the point of the towing eye.
- ☞ Screw the towing eye in fully.
- ☞ Install the towing system.
- ☞ Switch on the hazard warning lamps.

! When towing with the engine off, there is no longer any braking or steering assistance.

Vehicle recovery

Before doing any work, with the ignition on, press the brake pedal and put the gear selector to position **N**, then switch off the hybrid system.


If necessary because access to the vehicle is difficult, it can be moved a few dozen metres at a speed not exceeding 6 mph (10 km/h).

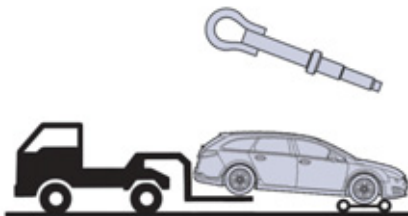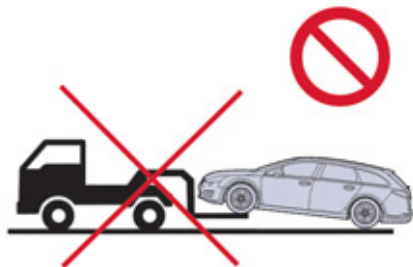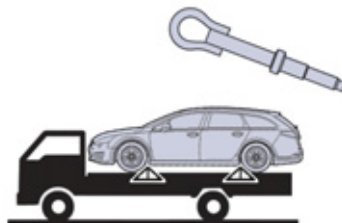

The front or rear wheels must not be on the ground, use a flat-bed lorry or trailer to recover the vehicle.

Use the towing eyes only to pull a vehicle out or to pull it onto a flat-bed.

Towing a trailer

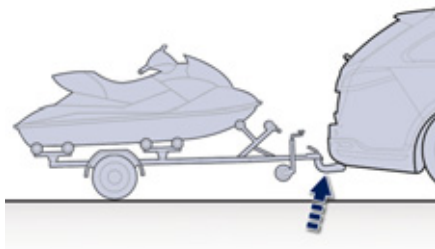


Towbar suitable for the attachment of a trailer or installation of a bicycle carrier, with additional lighting and signalling.

Your vehicle is primarily designed for transporting people and luggage, but it may also be used for towing a trailer.

Maximum trailer weight

The towing weight is limited: refer to the Technical data section.

Blanking cover

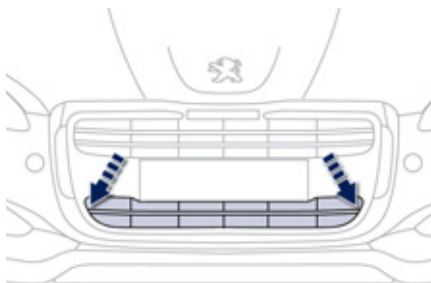

When towing, you must remove the blanking cover if your vehicle has one. Contact a PEUGEOT dealer or a qualified workshop for this.

i We recommend the use of genuine PEUGEOT towbars and their harnesses that have been tested and approved from the design stage of your vehicle, and that the fitting of the towbar is entrusted to a PEUGEOT dealer or a qualified workshop. If the towbar is not fitted by a PEUGEOT dealer, it is imperative that it is fitted in accordance with the vehicle manufacturer's instructions.

! Driving with a trailer places greater demands on the towing vehicle and the driver must take particular care.

Driving advice

Distribution of loads

- ☞ Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towed load must be reduced by 10 % for every 1 000 metres of altitude.

Refer to the "Technical data" section for details of the weights and towed loads which apply to your vehicle.

Side wind

- ☞ Take into account the increased sensitivity to side wind.

Cooling

Towing a trailer on a slope increases the temperature of the coolant.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

- ☞ To lower the engine speed, reduce your speed.

The maximum towed load on a long incline depends on the gradient and the ambient temperature.

In all cases, keep a check on the coolant temperature.



- ☞ If the warning lamp and the **STOP** warning lamp come on, stop the vehicle and switch off the engine as soon as possible.

Braking

Towing a trailer increases the braking distance. To avoid overheating of the brakes on a long mountain type of descent, the use of engine braking is recommended.

Tyres


- ☞ Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.

Lighting

- ☞ Check the electrical lighting and signalling on the trailer.

i The rear parking sensors will be deactivated automatically if a genuine PEUGEOT towbar is used.

Fitting roof bars

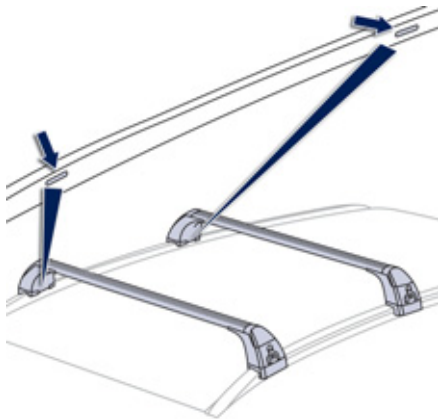

When fitting transverse roof bars, take care to align them with the marks on the longitudinal bars.

! Use accessories recommended by PEUGEOT observing the manufacturer's recommendations and fitting instructions so as to avoid the risk of damaging the body (deformation, scratches, ...).

i Maximum authorised weight on the roof rack, for a loading height not exceeding 40 cm (with the exception of bicycle carriers): **100 kg**

If the height exceeds 40 cm, adapt the speed of the vehicle to the profile of the road to avoid damaging the roof bars and the fixings on the roof.


Be sure to refer to national legislation in order to comply with the regulations for transporting objects which are longer than the vehicle.

Very cold climate screen

Removable protective screen which prevents the accumulation of snow at the radiator cooling fan.

Before fitting or removing the screen, ensure that the engine is off and the cooling fan has stopped. It is recommended that the screen be fitted and removed by a PEUGEOT dealer or a qualified workshop.

Fitting

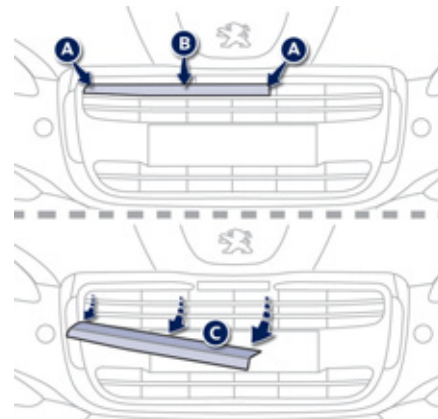

- ☞ Offer up the screen to the front of the top section of the front bumper upper grille.
- ☞ Press on the edges **A** to engage its fixing clips.
- ☞ Press on the middle at **B** to complete the engagement of the fixing clips.

Removal

- ☞ Pull on the top **C** of the very cold climate screen to unclip it then pull it towards you to remove it.

Do not forget to remove the very cold climate screen:

- when the ambient temperature exceeds 10° C,
- when towing,
- at speeds above 75 mph (120 km/h).

Accessories

A wide range of accessories and genuine parts is available from the PEUGEOT dealer network. These accessories and parts have been tested and approved for reliability and safety. They are all adapted to your vehicle and benefit from PEUGEOT's recommendation and warranty.

"Comfort":

cool box, smoker's kit, 230 V socket, torch...

"Style":

spoiler, front and rear mud flaps, aluminium gear lever knob, alloy wheels (16, 17, 18 and 19 inch), body kit, door mirror shells, door air deflectors, ...

"Protection":

mats*, seat covers, vehicle covers, sun blinds, boot net, load protection net, dog guard, door and boot sill protectors, resin side rubbing strips...

"Transport solutions":

booster seats and child seats, boot tray, roof box, ski carrier, towbar-mounted bicycle carrier, towbars (swan-neck, quickly detachable ball, folding), harnesses, sliding floor, utility vehicle conversion kit, ...

The trailer towbar and its harness should preferably be fitted by a PEUGEOT dealer.

"Safety and security":

speed limiter/cruise control, anti-theft alarm, microwave unit, window etching, wheel security bolts, breathalyser, first aid kit, warning triangle, high visibility vest, stolen vehicle tracking system, winter equipment (17 inch wheels for snow chains), reversing camera, front and rear parking sensors, boot spacers...

- * To avoid any risk of jamming of the pedals:
- ensure that the mat is positioned and secured correctly,
 - never fit one mat on top of another.

"Multimedia":

audio systems, portable navigation system, Takara/Sony portable video screen, Bluetooth system, speakers, DVD player, Wi-Fi, driving aids, video support, microwave unit...

You can also obtain products for cleaning and maintenance (exterior and interior) and topping up fluids (screenwash, ...), as well as refills (cartridge for temporary tyre repair kit...) from PEUGEOT dealers.

i **Installation of radio communication transmitters**

Before installing any after-market radio communication transmitter, you can contact a PEUGEOT dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

i Depending on the legislation in force in the country, it may be compulsory to have a high visibility safety vest, warning triangle and spare bulbs and fuses available in the vehicle.

! The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system and excessive electrical consumption.

Please note this precaution. You are advised to contact a PEUGEOT representative to be shown the range of recommended equipment and accessories.

PEUGEOT & TOTAL

Partners in performance and protection of the environment

Innovation at the service of performance

The TOTAL Research and Development teams develop lubricants for PEUGEOT which satisfy the requirements of the latest technical innovations incorporated in PEUGEOT vehicles.

This ensures that you obtain the best performance and the maximum engine life.

Reduced exhaust emissions

TOTAL lubricants are formulated to optimise the efficiency of engines and the protection of the emissions post-treatment systems. It is crucial to observe the servicing recommendations made by PEUGEOT to ensure correct operation.



PEUGEOT RECOMMENDS **TOTAL**

OFFICIAL PARTNERS

Opening the bonnet

! Before doing anything under the bonnet, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.

! Never touch, handle or remove the orange "high voltage" cables.

! The use of a high pressure jet wash under the bonnet is strictly prohibited, in order to avoid damage to the electric components.



Opening

☞ **From inside:** pull the release lever, located on the left below the dashboard, towards you.



☞ **From the outside:** lift the safety catch and raise the bonnet.
A bonnet strut opens the bonnet and holds it open.

Closing

☞ Lower the bonnet and release it at the end of its travel.
☞ Check that it is latched correctly.

Running out of fuel (Diesel)

On vehicle fitted with HDi engines, the fuel system must be primed if you run out of fuel; refer to the corresponding engine compartment view.

2 litre HDi engine



i If the tank on your vehicle is fitted with a misfuel prevention device, refer to the "Misfuel prevention (Diesel)" section.

! If the engine does not start first time, don't keep trying. Start the procedure again from the beginning.

! Before doing anything under the bonnet, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.


- ☞ Fill the fuel tank with at least five litres of Diesel.
- ☞ Open the bonnet.
- ☞ If necessary, unclip the style cover for access to the priming pump.
- ☞ Slacken the bleed screw.
- ☞ Squeeze and release the priming pump repeatedly until fuel appears in the transparent pipe.
- ☞ Tighten the bleed screw.
- ☞ Operate the starter until the engine starts (if the engine fails to start at the first attempt, wait around 15 seconds before trying again).
- ☞ If the engine fails to start after a few attempts, operate the priming pump again, then the starter.
- ☞ Put the style cover back in position and clip it in place, ensuring that it has clipped correctly.
- ☞ Close the bonnet.

Diesel engine

! Before doing anything under the bonnet, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

1. Power steering reservoir.
2. Screenwash and headlamp wash reservoir.
3. Coolant reservoir.
4. Brake fluid reservoir.
5. Battery / Fuses.
6. Fusebox.
7. Air filter.
8. Engine oil dipstick.
9. Engine oil filler cap.
10. Priming pump.
11. Bleed screw.

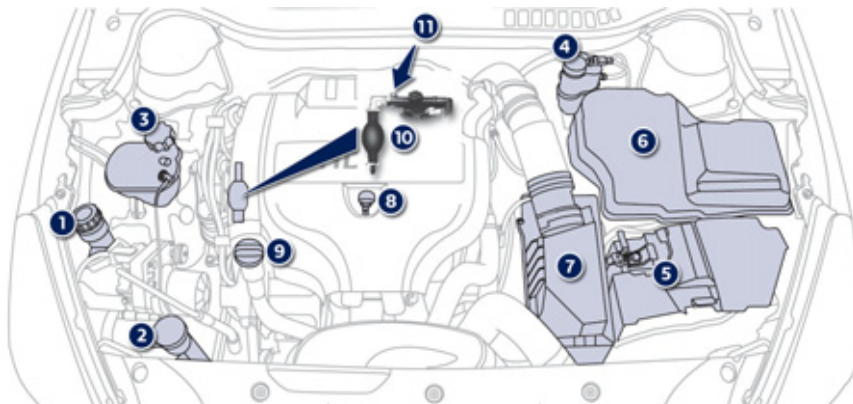

Checking levels

If a level drops significantly, have the corresponding system checked by a PEUGEOT dealer or a qualified workshop.

Check all of these levels regularly, in line with the servicing booklet and the requirements of the warranties. Top them up if necessary, unless otherwise indicated.

! Before doing anything under the bonnet, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.

! Take care when working under the bonnet, as certain areas of the engine may be extremely hot (risk of burns) and the cooling fan could start at any time (even with the ignition off).

Oil level



The check is carried out either when the ignition is switched on using the oil level indicator in the instrument panel, or using the dipstick.

It will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

It is normal to top up the oil level between two services (or oil changes). PEUGEOT recommends that you check the level, and top up if necessary, every 3 000 miles (5 000 kms).

After topping up the oil, the check when switching on the ignition with the oil level indicator in the instrument panel is not valid during the 30 minutes after topping up.

Engine oil change

Refer to the servicing and warranty booklet for details of the interval for this operation.

In order to maintain the reliability of the engine and emission control system, the use of additives in the engine oil is prohibited.

Oil specification

The oil must be the correct grade for your engine and conform to the manufacturer's recommendations.

Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.

Changing the fluid

Refer to the servicing and warranty booklet for details of the interval for this operation.

Fluid specification

The brake fluid must conform to the manufacturer's recommendations and meet the DOT3 or DOT4 standard.

Power steering fluid level



The power steering fluid level should be close to the "MAX" mark. With the engine cold, unscrew the cap to check the level.

Coolant level



The coolant level should be close to the "MAX" mark but should never exceed it.

When the engine is warm, the temperature of the coolant is regulated by the fan. This can operate with the ignition off.

On vehicles which are fitted with a particle emission filter, the fan may operate after the vehicle has been switched off, even if the engine is cold.

In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.

Changing the coolant

The coolant does not have to be changed.

Fluid specification

The coolant must conform to the manufacturer's recommendations.

Screenwash and headlamp wash fluid



In the case of vehicles fitted with headlamp washers, the low fluid level is indicated by an audible signal and a message in the instrument panel screen.

Top up the reservoir when you next stop the vehicle.

Fluid specification

For optimum cleaning and to avoid freezing, this fluid must not be topped up with or replaced with plain water.

Diesel additive level (Diesel engine with particle emission filter)

A low additive level is indicated by illumination of the service warning lamp, accompanied by an audible warning and a message in the instrument panel screen.

Topping up

This additive must be topped up by a PEUGEOT dealer or a qualified workshop without delay.

Used products



Avoid prolonged contact of used oil or fluids with the skin.
Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground.
Take used oil to a PEUGEOT dealer or a qualified workshop (France) or to an authorised waste disposal site.

Checks

Unless otherwise indicated, check these components in accordance with the servicing and warranty booklet and according to your engine. Otherwise, have them checked by a PEUGEOT dealer or a qualified workshop.


! Before doing anything under the bonnet, switch off the ignition (**Ready** lamp off) to avoid any risk of injury resulting from automatic operation of the engine.

12 V battery



The battery does not require any maintenance. However, check that the terminals are clean and correctly tightened, particularly in summer and winter.

When carrying out work on the battery, refer to the "12 V battery" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.

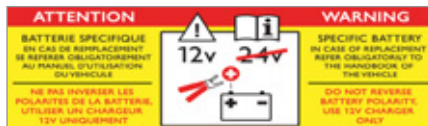

The presence of this label, in particular with the Stop & Start system, indicates the use of a specific 12 V lead-acid battery with special technology and specification. The involvement of a PEUGEOT dealer or a qualified workshop is essential when replacing or disconnecting the battery.

Air filter and passenger compartment filter



Refer to the servicing and warranty booklet for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary**. A clogged passenger compartment filter may have an adverse effect on the performance of the air conditioning system and generate undesirable odours.

Oil filter



Replace the oil filter each time the engine oil is changed. Refer to the servicing and warranty booklet for details of the replacement interval for this component.

Particle emission filter (Diesel)

SERVICE

The start of saturation of the particle filter is indicated by the temporary illumination of this warning lamp accompanied by a message in the multi-function screen.

i As soon as the traffic conditions permit, regenerate the filter by driving at a speed of at least 40 mph (60 km/h) until the warning lamp goes off. If the warning lamp stays on, this indicates a low additive level.

On a new vehicle, the first particle filter regeneration operations may be accompanied by a "burning" smell, which is perfectly normal. Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

The 100% electric mode is not available during regeneration of the particle emissions filter.

6-speed electronic gearbox



The gearbox does not require any maintenance (no oil change). Refer to the servicing and warranty booklet for details of the checking interval for this component.

Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the condition of the brakes checked, even between vehicle services. Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc wear



For information on checking brake disc wear, contact a PEUGEOT dealer or a qualified workshop.

Electric parking brake



This system does not require any routine servicing. However, in the event of a problem, have the system checked by a PEUGEOT dealer or a qualified workshop.

For more information, refer to the "Electric parking brake - Operating faults" section.



Only use products recommended by PEUGEOT or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, PEUGEOT selects and offers very specific products.

After washing the vehicle, dampness, or in wintry conditions, ice, can form on the brake discs and pads: braking efficiency may be reduced. Make light brake applications to dry and defrost the brakes.

Electric motor and battery

Electric motor	-
Technology	Synchronous with permanent magnets.
Max. power: EU standard (kW)*	27
Max. power speed (rpm)	2 500
Max. torque: EU standard (Nm)	200
Max. torque speed (rpm)	1 250
Efficiency (%)	80 to 90
High voltage battery	Ni-MH (Nickel Metal Hydride)
Voltage (V~)	200
Energy capacity (kWh / Ah)	1.1 / 5.5
Range (miles (km))	1.2 (2) (approximately)

Range varies according to the ambient climatic conditions, the driving style and conditions, the use of vehicle systems and ageing of the battery.

* The maximum power corresponds to the value type approved on an engine test bed, under conditions defined by European legislation (directive 1999/99/EC).

Engine and gearbox

Diesel engine	2.0 litre HDi 163 hp
Gearbox	Electronic gearbox (6-speed)
Model code	8URHC8/P
Cubic capacity (cc)	1 997
Bore x stroke (mm)	85 x 88
Max power: EU standard (kW)*	120
Max power engine speed (rpm)	3 850
Max torque: EU standard (Nm)	300
Max torque engine speed (rpm)	1 750
Fuel	Diesel
Catalytic converter	yes
Particle emission filter	yes
Oil capacity (in litres)	
Engine (with filter replacement)	5

* The maximum power corresponds to the value type approved on an engine test bed, under conditions defined by European legislation (directive 1999/99/EC).

Weights and towed loads (in kg)

Diesel engine	2.0 litre HDi 163 hp
Gearbox	Electronic gearbox (6-speed)
Model code	8URHC8/P
- Unladen weight	1 770
- Kerb weight*	1 845
- Gross vehicle weight (GVW)	2 325
- Gross train weight (GTW) on a 12% gradient	3 125
- Braked trailer (within GTW limit) on a 10% or 12% gradient	800
- Braked trailer** (with load transfer with the GTW limit)	1 100
- Unbraked trailer	750
- Recommended nose weight	75

* The kerb weight is equal to the unladen weight + driver (75 kg).


** The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount; warning, towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.

The GTW and towed load values indicated are valid up to a maximum altitude of 1000 metres; the towed load mentioned must be reduced by 10 % for each additional 1000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

Dimensions (in mm)

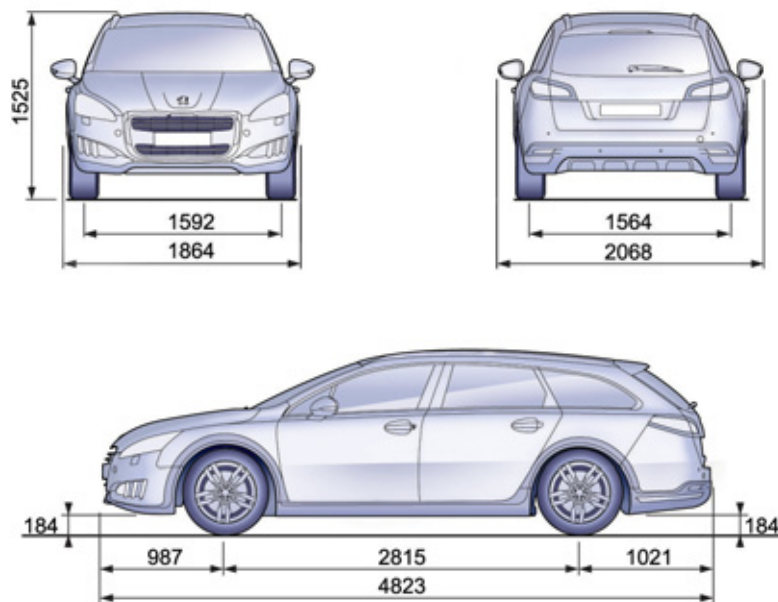


! Be aware of the ground clearance of your vehicle: around 184 mm (with the vehicle in working order: driver only and the fuel tank full) in ideal conditions.

This value will vary with vehicle load, the nature of the ground surface and the surroundings.

If the driver considers that the vehicle can traverse an obstacle, they assume entire responsibility for this.

Identification markings

Various visible markings for the identification and tracing of your vehicle.

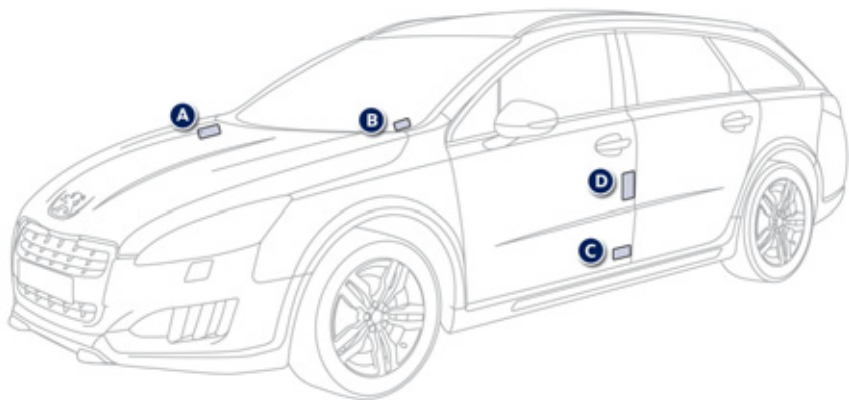

A. Vehicle Identification Number (VIN) under the bonnet.

This number is engraved on the bodywork near the damper support.

B. Vehicle identification Number (VIN) on the windscreen lower crossmember.

This number is indicated on a self-adhesive label which is visible through the windscreen.

C. Manufacturer's label.

The VIN is indicated on a self-destroying label affixed to the door aperture, on the driver's side.

D. Tyre/paint label.

This label is fitted to the middle pillar, on the driver's side.

It bears the following information:

- the tyre inflation pressures with and without load,
- the tyre sizes,
- the brands of tyre recommended by the manufacturer,
- the inflation pressure of the spare wheel,
- the paint colour code.




The tyre pressures must be checked when the tyres are cold, at least once a month.



The use of snow chains is only authorised on the front wheels. The selector must be in 4WD mode.



Low tyre pressures increase fuel consumption.

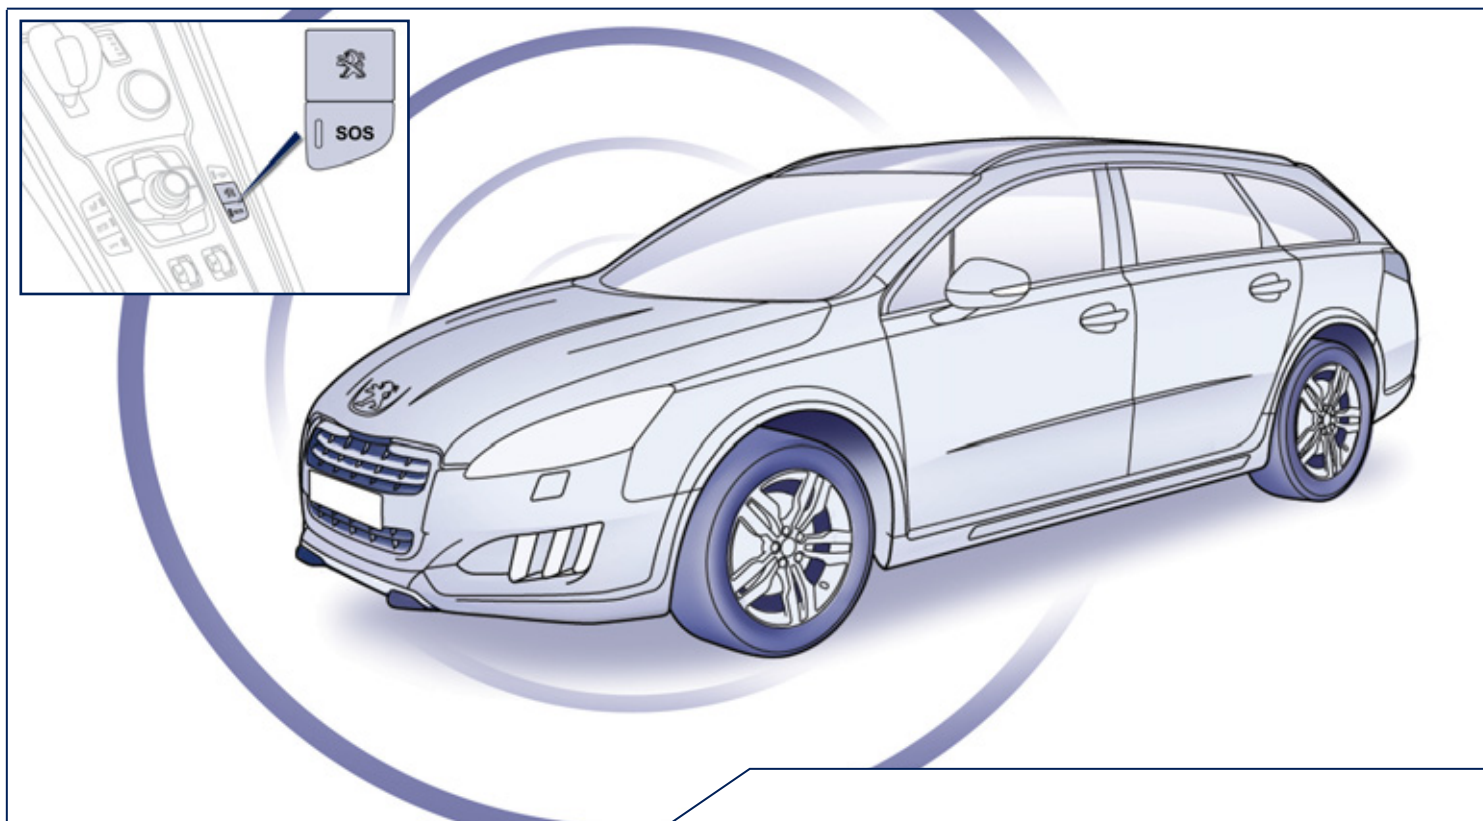

EMERGENCY OR ASSISTANCE CALL

EMERGENCY OR ASSISTANCE CALL

PEUGEOT CONNECT SOS



In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the PEUGEOT CONNECT SOS call centre*.

The green LED remains on (without flashing) when communication is established. It goes off at the end of communication.

Pressing this button again immediately cancels the request. The green LED goes off. Cancellation is confirmed by a voice message. To cancel a call, tell the PEUGEOT CONNECT SOS call centre that the call was a mistake.

PEUGEOT CONNECT SOS immediately locates your vehicle, starts communication with you in your language**, and where necessary sends the appropriate public emergency services**. In countries where the service is not available, or when the locating service has been expressly declined, the call sent directly to the emergency services (112) without the vehicle location.



If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

* Subject to the general conditions for the service available from dealers and to technological and technical limitations.

** Depending on the geographical cover of PEUGEOT CONNECT SOS, PEUGEOT CONNECT ASSISTANCE and the official national language selected by the owner of the vehicle.

The list of countries covered and PEUGEOT CONNECT services are available from dealers or at www.peugeot.co.uk.

PEUGEOT CONNECT ASSISTANCE



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made**.

Pressing this button again immediately cancels the request. The cancellation is confirmed by a voice message.

OPERATION OF THE SYSTEM



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.



If the orange LED flashes: there is a system fault.

If the orange LED is on continuously: the backup battery must be replaced. In either case, contact a PEUGEOT dealer.

If you purchased your vehicle outside the PEUGEOT dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

For technical reasons and in particular to improve the quality of PEUGEOT CONNECT services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.

JBL EQUIPMENT

The Hi-Fi system is a 5.1 system developed by PEUGEOT in conjunction with JBL.



4 two-way speaker kits, separated by an active filter, are fitted at front and rear.


These are based on a fabric dome tweeter delivering stable and balanced treble reproduction and a 50W RMS neodymium magnet inverted motor medium-woofer possessing a very high output of bass frequencies.



The central line in the dashboard improves reproduction of the musical scene, putting the listener in a situation that realistically reproduces the original musical recording.

The bass unit located in the boot carries a 150W triple-coil true subwoofer in an optimised space, giving depth and impact to the bass ranges.

This set of speakers is controlled by a 10-way 500W RMS 2 ohm amplifier, using advanced surround sound and sound distribution handling, so as to deliver optimum performance both for the driver and for the passengers in the vehicle.



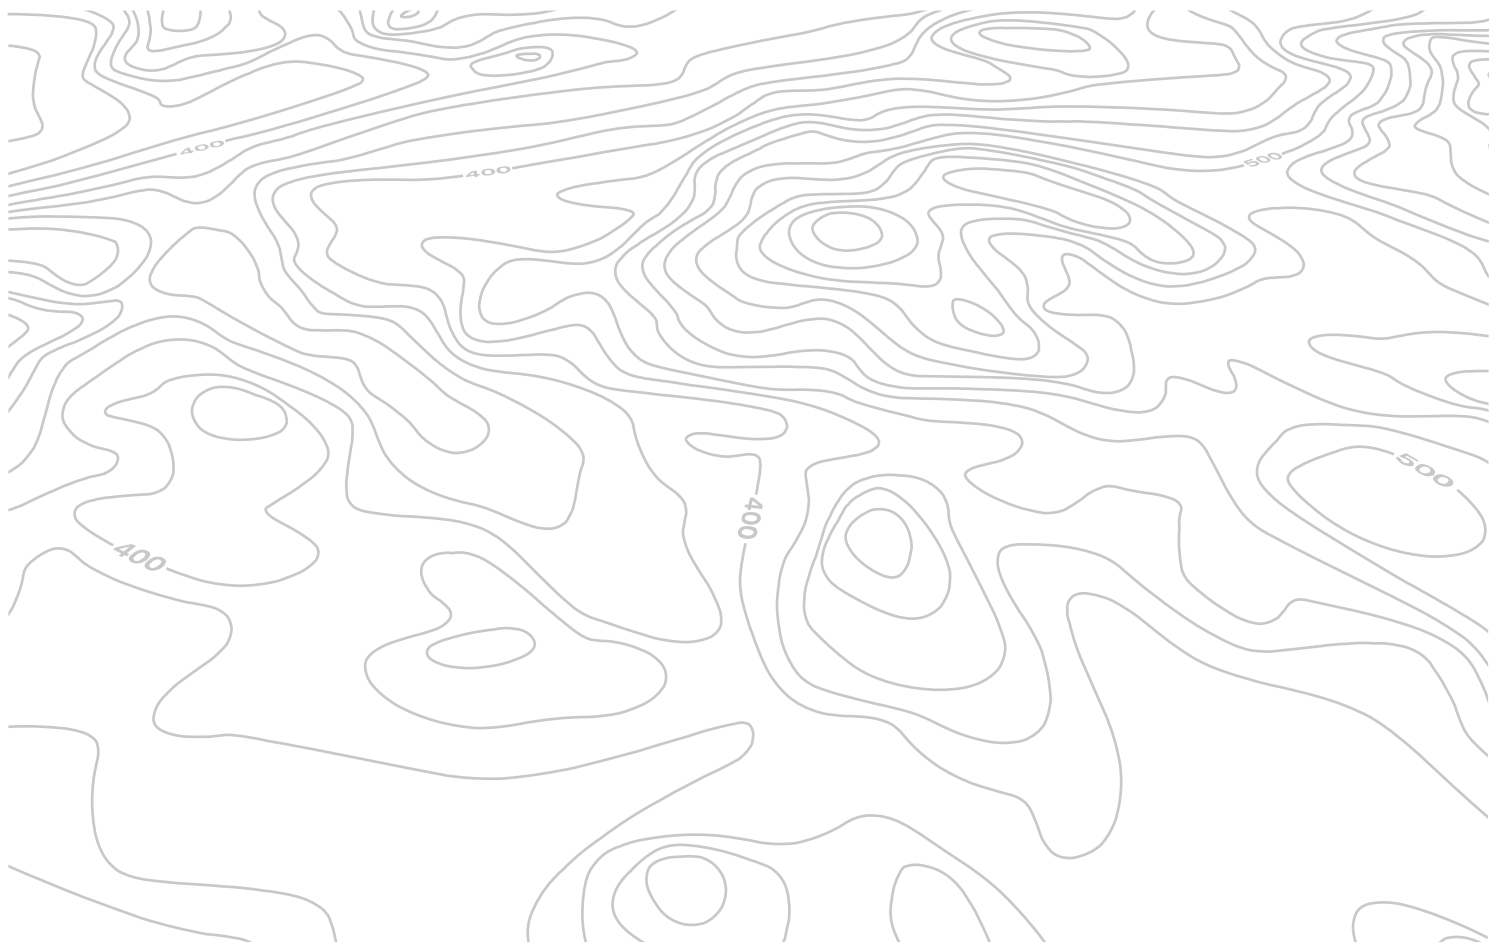

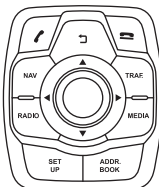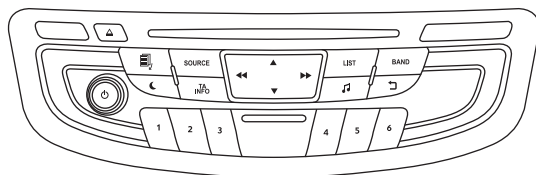

Peugeot Connect Navigation (RT6)

SATELLITE NAVIGATION SYSTEM

MULTIMEDIA BLUETOOTH TELEPHONE AUDIO SYSTEM

CONTENTS

01 First steps - Control panel	p.	240
02 Steering mounted controls	p.	242
03 General operation	p.	243
04 Navigation - Guidance	p.	245
05 Traffic information	p.	258
06 Using the telephone	p.	261
07 Contacts - ADDR BOOK	p.	269
08 Radio	p.	272
09 Music media players	p.	275
10 Audio settings	p.	281
11 Configuration	p.	282
12 Screen menu map	p.	283
Frequently asked questions	p.	286



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

01 FIRST STEPS

Press and hold: reinitialise the system.

MODE button: select the type of permanent display.

Rotation: adjust volume (each source is independent, including TA messages and navigation instructions).

On / Off.
Short press: mute / restore sound.

Display black screen.

Select:

- automatically the previous/next radio frequency.
 - the previous/next CD, MP3 or media track.
- Move left/right, in **"Move the map"** mode.

Select the source: CD, USB, AUX, Apple® player, Bluetooth Streaming, Radio.

TA (Traffic Announcement) function On / Off.

Display the list of radio stations received, CD/MP3/Apple® player tracks or folders.

Long press: management of the classification of MP3/WMA files/update the list of stations received.

Select the FM waveband (AM not available on Hybrid vehicles).

Abandon the current operation, go up one level.

Long press: return to permanent display.

Access to **"Audio settings"**: musical ambiances, bass, treble, loudness, distribution, left/right balance, front/rear fader, automatic volume adjustment.

Short press: select a preset radio station.
Long press: store the current radio station.

Select:

- the previous/next line in a list or menu.
- the previous next media folder.
- step by step previous/next radio frequency.
- previous/next MP3 folder.

Move up/down, in **"Move the map"** mode.



01 FIRST STEPS

Access to the "**Telephone**" menu and display the list of recent calls or accept an incoming call.

Access to the "**Navigation - guidance**" menu and display the recent destinations.

Radio source, access to the "**RADIO**" menu and display the list of stations received.

Access to the "**Configuration**" menu.

Long press: access to the GPS coverage and navigation demonstration mode.

Abandon the current operation, go up one level.
Long press: return to permanent display.


Reject an incoming call or end a call in progress.

Access to the "**Traffic information**" menu and display of current traffic alerts.


Media source, access to "**MEDIA**" menu and display the list of tracks.

Display the list of contacts / Access to the "**Directory of contacts**" menu.

Selection and OK confirmation dial:
Select an item on the screen or in a list or a menu, then confirm with a short press.
Other than for menus and lists, a short press calls up a contextual memory, according to the display in the screen.
Rotation with the map displayed: zoom in/out in the map.

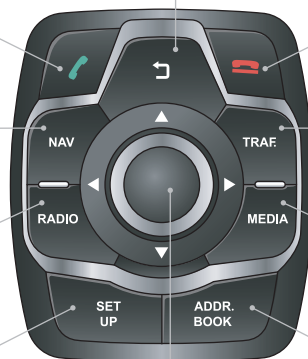

02 STEERING MOUNTED CONTROLS

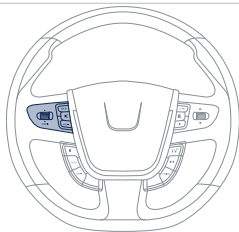

- Press: access to the instrument panel screen menu.
- Rotation: navigation in the instrument panel screen menu.




- Increase volume.



- Mute / restore sound.



- Decrease volume.

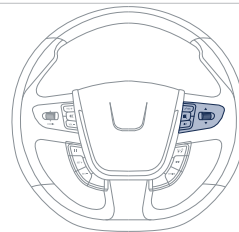

- Rotation
Radio -automatic selection of next / previous frequency.
Media: previous / next track.
- Press then rotation: access to 6 preset stations.



- Change the audio source.
- TEL/SRC button (short press):
Accept an incoming call
Call in progress: access to telephone menu: hang up, secret mode, hands-free mode.
- TEL/SRC button (long press):
Reject an incoming call or end a call in progress.
When not making a call, access to the telephone menu (Dial, Contacts, Calls log, Voice mailbox).



- Select the type of permanent display on the screen.



- Radio: display the list of stations.
Media: display the list of tracks.

03 GENERAL OPERATION



Press the **MODE** button several times in succession for access to the following displays:



"RADIO"

"TELEPHONE"

(If conversation in progress)

HYBRID FLOW

For more information, refer to the "Hybrid System" section, then "View hybrid flow information".

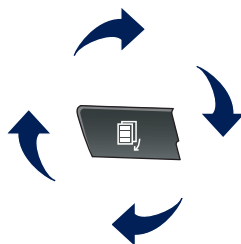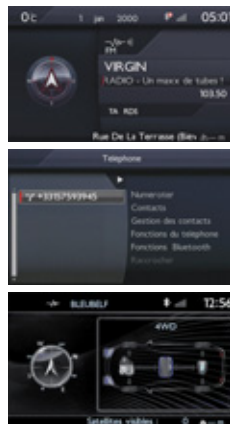


"FULL SCREEN MAP"

"MAP IN WINDOW"

(If navigation guidance in progress)

HYBRID CONSUMPTION

For more information, refer to the "Hybrid System" section, then "Consumption of your hybrid".

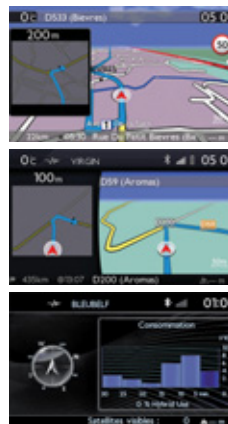

SETUP: PARAMETERS

date and time, display configuration, sound, vehicle settings.



Changing the audio source:

RADIO: RADIO broadcasts.

MUSIC: playing MUSIC.



For cleaning the screen, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, with no additional product.



For the details of the menus, refer to the "Screen menu map" section.

03 GENERAL OPERATION

DISPLAY ACCORDING TO CONTEXT



A press on the dial gives access to short-cut menus according to the display in the screen.

RADIO:

- 1 **Activate / Deactivate TA**
- 1 **Activate / Deactivate RDS**
- 1 **Change waveband**
- 1 **TA**

TELEPHONE (call in progress):

- 1 **Private mode**
- 1 **Put call on hold**

- 1 **DTMF ring tones**
- 1 **Hang up**

MUSIC MEDIA PLAYERS, CD or USB (according to media):

Play modes:

- 1 **Normal**
- 1 **Random**
- 1 **Random on all media**
- 1 **Repetition**

FULL SCREEN MAP OR IN A NEW WINDOW:

- 1 **Stop / Restore guidance**

1 **Select destination**

- 2 **Enter an address**

- 2 **Directory**

- 2 **GPS coordinates**

1 **Divert route**

1 **Move the map**

- 2 **Info. on location**

- 2 **Select as destination**

- 2 **Select as stage**

- 2 **Save this place (contacts)**

- 2 **Quit map mode**

1 **Guidance criteria**

04 NAVIGATION - GUIDANCE

Access to the "NAVIGATION" menu



Press **NAV**.

A short press on the end of the lighting control stalk repeats the last navigation message.



To make full use of all of the functions of your navigation system, update the mapping regularly. Contact a PEUGEOT dealer or order your mapping update at <http://peugeot.navigation.com>

To delete the list of recent destinations, select "**Guidance options**" in the navigation menu then select "**Delete last destinations**" and confirm. Select "**Yes**" then confirm. Deleting just one destination is not possible.

Go from the list to the menu (left/right).



or



04 NAVIGATION - GUIDANCE

SELECTING A DESTINATION

TOWARDS A NEW DESTINATION

1		Press NAV to display the " Navigation - guidance " menu.	
2		Select " Select destination " and confirm, then select " Enter an address " and confirm.	
3		Select the " Country " function then confirm.	
4		Select the " Town " or " Post code " function then confirm.	
5		Select the letters in the name of the town or the numbers in a post code one at a time, confirming each one with the knob.	
6		Selection the town from the list offered, then confirm A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed directly by selecting and confirming " List " in the screen.	
7		If possible, enter the " Road " and " N°/X " information in the same way.	
 Select " Archive " to save the address entered in a contact file. The system allows up to 400 contact files to be recorded.			
8		Confirm " OK " to start guidance.	
9		Select the guidance criteria: " Fastest route ", " Shortest route " or optimised " Distance/Time ", then select the desired restriction criteria: " With tolls ", " With Ferry ", or " Traffic info " then confirm " OK ".	

04 NAVIGATION - GUIDANCE

TO ONE OF THE RECENT DESTINATIONS

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2



Select the desired destination and confirm to start guidance.



DELETE RECENT DESTINATIONS

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2



Select "**Options**" and confirm and then "**Delete recent destinations**" and confirm.



TOWARDS A CONTACT IN THE CONTACTS DIRECTORY

i

Navigation towards a contact is only possible if it has an address entered in the audio navigation system.

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2




Select "**Select destination**" and confirm, then select "**Directory**" and confirm.



3



 Selection the desired destination from your contacts and confirm "**OK**" to start the guidance.



04 NAVIGATION - GUIDANCE

TOWARDS GPS COORDINATES

1



 
Press **NAV** to display the "Navigation - guidance" menu.



2




Select "**Select destination**" and confirm, then select "**GPS coordinates**" and confirm.



3



 Enter the GPS coordinates and confirm "**OK**" to start the guidance.




TOWARDS A POINT ON THE MAP

1



 With the map displayed, press **OK** to display the contextual menu. Select "**Move the map**" and confirm.



2



 
Move the cursor using the control to identify the desired destination.



3




Press **OK** to display the contextual menu for "**Move the map**" mode.



4



 Select "**Select as destination**" or "**Select as stage**" and confirm.



04 NAVIGATION - GUIDANCE

TOWARDS POINTS OF INTEREST (POI)

The points of interest (POI) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2



Select the "**Enter an address**" function and confirm, then select **Select destination** and confirm.




3



To select a POI close to your current location, select "**POI**" and confirm, then select "**Around the current place**" and confirm.

To select a POI as a stage on the route, select "**POI**" and confirm, then select "**On the route**" and confirm.

 To select a POI as a destination, first enter the country and town (see "Towards a new destination"), select "**POI**" and confirm, finally select "**Near**" and confirm.




Select "**Search by Name**" to search for POIs by name and not by proximity.

4



 
Search for POIs in the categories suggested in the following pages.



5



 Select the POI and confirm "**OK**" to start the guidance.



04 NAVIGATION - GUIDANCE

This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



LIST OF PRINCIPAL POINTS OF INTEREST (POI)



Service station



Garage



PEUGEOT



Covered car park



Car park



Rest area



Hotel



Restaurant



Cafeteria



Bed and breakfast



Airport



Railway station



Bus station



Port



Industrial estate



Supermarket



Vending machine



Sports complex, sports centre, sports ground



Swimming pool



Winter sports resort



Cinema



Theme parks



Hospital, Chemist, Vet



Police station



School



Town hall



Post office



Museum, Culture, Theatre, Historic monument



Tourist information, Tourist attraction



Risk areas / Danger areas*



An annual mapping update allows new points of interest to be presented to you. You can also update the Risk areas / Danger areas every month. The detailed procedure is available on <http://peugeot.navigation.com>.

* According to availability in the country.

04 NAVIGATION - GUIDANCE

ALERT PARAMETERS RISK AREAS / DANGER AREAS

1



Press **NAV** to display the "**Navigation - guidance**" menu.

 


These functions are only available if risk areas have been downloaded and installed on the system.
The detailed procedure for updating risk area POIs can be found at <http://peugeot.navigation.com>.

2



Select "**Guidance options**" and confirm, then select "**Set parameters for risk areas**" and confirm.



3

 


Select:

- "Visual alert"
- "Audible alert"
- "Alert only in guidance"
- "Overspeed alarm only".




The choice of time of notification defines how long in advance that Risk area warnings are given.

Select "**OK**" to confirm the screen.






04 NAVIGATION - GUIDANCE

   ADDING A STAGE

1	 Press NAV to display the "Navigation - guidance" menu.	
2	 Select "Journey leg and route" then confirm.	
3	 Select "Add a stage" then confirm The address of the stage is entered as a destination, by "Enter an address", a contact in "Directory", or "Previous destinations".	
4	 Select "Close to" a route passing close to the stage or "Strict" for a route passing through the stage. Confirm "OK" to start the guidance, and give a general indication of the guidance route.	

   ORGANISING STAGES

1	 To organise stages, carry out operations 1 to 2 again, then select "Order/delete journey legs" and confirm.	
2	 Select the stage that you want to move in the order.	
3	 Select and confirm to save the modifications.	
 Select "Delete" to delete the stage.		

04 NAVIGATION - GUIDANCE

ROUTE OPTIONS

CALCULATION CRITERIA

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2



Select "**Guidance options**" and confirm.




3



Select "**Define calculation criteria**" and confirm.

This function allows modification of:

 - the guidance criteria: ("**Fastest route**", "**Shortest route**", "**Distance/Time**"),
- the exclusion criteria: ("**With tolls**" or "**With Ferry**"),
- traffic avoidance: ("**Traffic info**").




i

If traffic avoidance (Traffic info) is selected, the system suggests an alternative route if there is a delay on the guidance route.

4



 Select "**OK**" and confirm to save the modifications.



04 NAVIGATION - GUIDANCE

MAP MANAGEMENT

SELECTING THE POINTS OF INTEREST DISPLAYED ON THE MAP

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2




Select "**Map management**" and confirm.



3



 
Select "**Map details**" and confirm.



4



 Select from the various categories the ones that you want to display on the screen.




Select "**By default**" to have only "**Oil stations, garages**" and "**Accident-prone area**" appear on the map (if installed in the system).

5



 Select "**OK**" then confirm and select "**OK**" again then confirm to save the modifications.



04 NAVIGATION - GUIDANCE

MAP ORIENTATION

1



 
Press **NAV** to display the "**Navigation - guidance**" menu.



2




Select "**Map management**" and confirm.



3



 Select "**Map orientation**" and confirm.




4



Select:

 - "**Vehicle direction**" to have the map follow the direction of travel,
- "**North direction**" to keep the map always North up,
- "**Perspective view**" to display a perspective view.



The colour of the map, different from the day and night mode, is configured in the "**SETUP**" menu.



Street names are visible on the map from the 100 m scale.

04 NAVIGATION - GUIDANCE

ADJUSTING THE GUIDANCE SPEECH SYNTHESIS

ADJUSTING THE VOLUME/DEACTIVATION

The volume setting of guidance messages is also accessible via the **"SETUP" / "Voice synthesis"** menu.



The volume of messages can be adjusted during the transmission of the message using the volume adjustment control.

1



 
Press **NAV** to display the **"Navigation - guidance"** menu.



2




Select **"Guidance options"** and confirm.



3



 
Select **"Set speech synthesis"** and confirm.



4



 
Select the volume graph and confirm.



5



 Adjust the volume to the desired level and confirm.




Select **"Deactivate"** to deactivate voice messages.

6



 Select **"OK"** and press the dial to confirm.



04 NAVIGATION - GUIDANCE

MALE VOICE / FEMALE VOICE

1



 
Press **SETUP** to display the configuration menu.



2




Select "**Voice synthesis**" and confirm.



3



 Select "**Select male voice**" or "**Select female voice**" then confirm "**Yes**" to activate a male or female voice. The system restarts.




05 TRAFFIC INFORMATION

Access to the "TRAFFIC INFORMATION" menu



Press **"TRAFFIC"**.

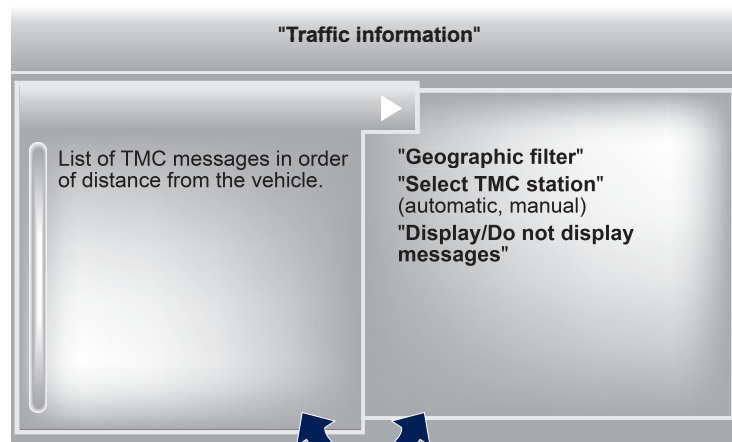

Go from the list to the menu (left/right).



or



05 TRAFFIC INFORMATION

CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

TMC (Traffic Message Channel) messages contain information on traffic and weather conditions, received in real time and transmitted to the driver in the form of audible announcements and symbols on the navigation map.

The navigation system can then suggest an alternative route to avoid a traffic problem.

1



 
Press the **TRAFFIC** button to display the "Traffic information" menu.



2



Select the **"Geographic filter"** function and confirm.



i

We recommend:

 
- a filter on the route and
- a filter around the vehicle of:
 - 12 miles (20 km) in urban areas,
 - 30 miles (50 km) on motorways.

3



The system offers a choice of:


- **"Retain all the messages"**,
- or
- **"Retain the messages"**
 - **"Around the vehicle"**, (confirm the mileage to modify and select the distance),
 - **"On the route"**.



4



 Confirm **"OK"** to save the modifications.



05 TRAFFIC INFORMATION

PRINCIPAL TMC SYMBOLS

1 Black and blue triangle: general information, for example:



Weather reports



Traffic reports



Wind



Fog



Parking



Snow / ice

2 Red and yellow triangle: traffic information, for example:



Modified signage



Narrow carriageway



Slippery surface



Accident



Delay



Roadworks



Risk of explosion



Road closed



Demonstration



Danger



No entry



Traffic jam

 
RECEIVING TA MESSAGES

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

1




Press **RADIO** to display the menu.



2



 
Select "**Guidance options**" then confirm.



3



 Activate or deactivate "**TA**" then confirm.



! The volume setting for TA messages can be adjusted only during the transmission of this type of alert.



Activate or deactivate the function at any time by pressing the button.


During a message, press the button to interrupt it.

06 USING THE TELEPHONE

Access to the "TELEPHONE" menu



Press this button.

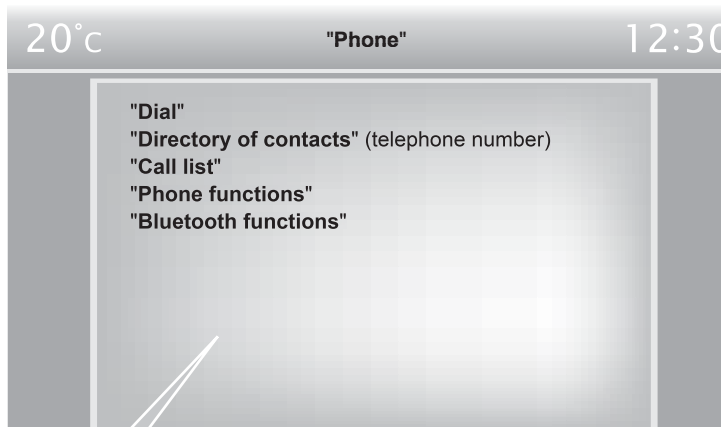

In **"Call list"**, select a number in the list and confirm **OK** to start the call.



Calls received.



Calls sent.

In the top bar of the permanent display



No telephone connected.



Telephone connected.



Incoming call.



Outgoing call.



Synchronization of address book in progress.



Telephone call in progress.



Connecting a different telephone deletes the list of recent calls.

06 USING THE TELEPHONE

PAIRING A BLUETOOTH TELEPHONE FIRST CONNECTION



For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio unit must be carried out with the **vehicle stationary**.



You can check the compatibility of your telephone at www.peugeot.co.uk (connected services).

1

Activate the telephone's Bluetooth function and ensure that it is "shown to all" (telephone configuration).



2



 
Press this button.



3




Select "**Bluetooth functions**" and confirm.



4



 
Select "**Peripherals search**" and confirm.
The list of peripherals detected is displayed. Wait until the "**Connect**" button is available.



5



 Select the name of the desired peripheral from the list of devices detected then select "**Connect**" and confirm.




6



The system offers to connect the telephone:

- in "**Hands-free mode**" (telephone only),
- in "**Audio**" mode (streaming: playing music files on the telephone),
- or "**All**" (for selection of both modes).

 Select "**OK**" and confirm.



06 USING THE TELEPHONE



The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.



The "**Hands-free mode**" should be used in preference if "Streaming" is not desired.

 


The ability of the system to connect in only one mode depends on the telephone. The two modes may both connect by default.

7



Select a code for the connection then confirm "**OK**".



8

Enter the same code on the telephone then accept the connection.



Then accept automatic connection on the telephone to allow the telephone to reconnect automatically every time the vehicle is started.



Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



On return to the vehicle, the last telephone connected automatically reconnects, within around 30 seconds after switching on the ignition (Bluetooth activated and visible). To modify the automatic connection mode, remove the pairing and pair the telephone again with the desired mode.

06 USING THE TELEPHONE

MAKING A CALL

CALLING A NEW NUMBER

1



 
Press this button.



2




Select "**Dial**" then confirm.



3



 Dial the telephone number using the virtual keypad selecting each number in turn.
Confirm "**OK**" to make the call.



Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

CALLING A CONTACT

1



 
Press this button or make long press on the steering mounted **TEL/SRC** button.



2




Select "**Directory of contacts**" then confirm.



3



 
Select the desired contact and confirm.



4



Select the number and confirm to start the call.

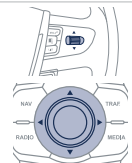

06 USING THE TELEPHONE

CALLING A RECENTLY DIALED NUMBER

1



 
Press this button or make a long press on **TEL/SRC**, select **"Call list"** and confirm,



2



Select the desired number and confirm.



To erase the calls log, press **PHONE**, select **"Telephone options"** and confirm then select **"Delete calls log"** and confirm.

i

It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

ENDING A CALL

1



Press **HANG UP**



or
Make a long press on the steering mounted **TEL/SRC** button.



06 USING THE TELEPHONE

RECEIVING A CALL

 
1

An incoming call is announced by a ring and a superimposed display in the screen.

2



"Yes" to accept the call is selected by default.
Press **"OK"** to accept the call.
Select **"No"** and confirm to reject the call.



A short press on this button or **TEL/SRC** accepts an incoming call.



A long press on this button or **TEL/SRC**

or a press on **HANG UP** rejects an incoming call.



06 USING THE TELEPHONE

OPTIONS DURING A CALL *

 
 
1



During a call, press the **MODE** button several times to select display of the telephone screen, then press **"OK"** to open the contextual menu.




Or make a short press on this button.



2a



 
Select **"Private mode"** and confirm to take the call on the handset.
Or select **"Hands-free mode"** and confirm to take the call via the vehicle's speakers.



2b



 
Select **"Put call on hold"** and confirm to put the current call on hold.
Or select **"Resume the call"** and confirm to resume the call on hold.



2c



 
Select **"DTMF ring tones"** to use the numerical keypad, so as to navigate through the menu of an interactive vocal server.



2d



 Select **"Hang up"** to end the call.





it is possible to hold a 3-way conference call by making 2 calls in succession*. Select **"Conference mode call"** in the contextual menu accessible using this button.







* Depending on the compatibility of the phone and your service plan.

06 USING THE TELEPHONE

  MANAGING PAIRED TELEPHONES

1  Press this button.	
2  Select "Bluetooth functions".	
3  Select "List of the paired peripherals" and confirm. It is possible to: - "Connect" or "Disconnect" the selected telephone, - delete the pairing of the selected telephone. It is also possible to select all pairings.	

    CHANGING THE RING TONE

1  Press this button.	
2  Select "Telephone options" and confirm.	
3  Select "Ring options" and confirm.	
4  You can adjust the volume and the ring tone used.	
5  Select "OK" and confirm to save the changes.	

07 DIRECTORY - ADDR BOOK

Access to the "CONTACTS" menu



Press ADDR BOOK.



The sorting of the list of contacts depends on the telephone used.

"Directory of contacts"

List of contacts.

"Display contacts" ("Open", "Import", "Delete")

"New contact"

"Configuration" ("Delete all contacts", "Import all the entries", "Synchronization options".

"Contact mem. status"
(up to 400)



Destination:

- from the contacts in the mobile telephone and the SIM card (depending on the synchronization options in the Bluetooth menu and the compatibility of the telephone),
- saved in the system.

Select a contact and confirm.

Then select **"Guide"** and confirm.



Telephone contacts:

- from the mobile telephone and the SIM card (depending on the synchronization options in the Bluetooth menu and the compatibility of the telephone),
- saved in the system.

Select a telephone contact and confirm to start the call.

 
07 DIRECTORY - ADDR BOOK

ENTERING A NEW CONTACT / SYNCHRONIZING WITH THE TELEPHONE

1




Press **ADDR BOOK** twice then select **"New contact"** to enter a new contact.



2



 
Press **ADDR BOOK** twice then select **"Configuration"** and confirm.



3a



 
Select **"Delete all contacts"** to delete the contacts saved in the system.



3b



 Select **"Import all the entries"** to import all the contacts in the telephone and save them in the system.




3c



Select **"Synchronization options"** and confirm:

 
- No synchronization: only the contacts saved in the system (always present).
- Display telephone contacts: only the contacts saved in the telephone.
- Display SIM card contacts: only the contacts saved on the SIM card.
- Display all phone contacts: contacts on the SIM card and in the telephone.



4








 Press **ADDR BOOK** twice then select **"Contact mem. status"** to see the number of contacts saved in the system or imported, and the free memory.



07 DIRECTORY - ADDR BOOK

     EDITING, IMPORTING OR DELETING A CONTACT


1  Press ADDR BOOK twice then select "Display contacts" and confirm.		3b  Select "Import" to copy the contacts to the system.	
2  Select the desired contact and confirm.		i In this menu "Display contacts", the import or deletion of contacts in the system is done one at a time.	
3a  Select "Open" to view an external contact or modify a contact saved in the system.		3c  Select "Delete" and confirm.	
i It is necessary to import an external contact to modify the record. It will be saved in the system. It is not possible to modify or delete contacts in the telephone or the SIM card via the Bluetooth connection.		4  Select OK or press this button to exit this menu.	

08 RADIO


Access to the "RADIO" menu



 
Press **RADIO**.



A long press on **LIST** refreshes the list of stations received.

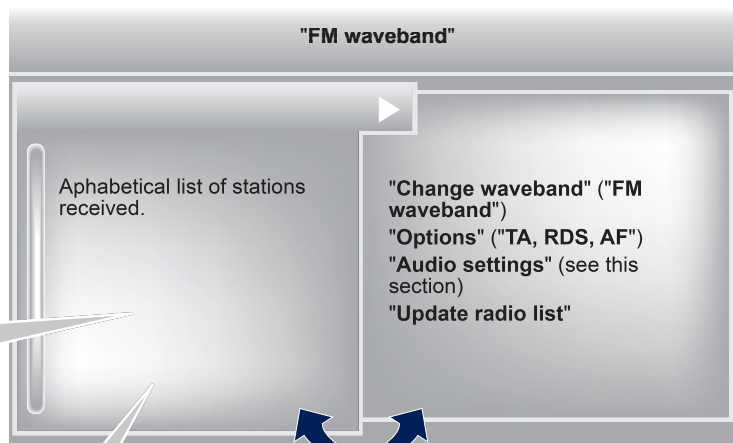

 Press **▲** or **▼** or use the rotary control to select the previous or next station in the list.



This list can also be displayed by pressing **LIST** on the steering mounted controls.

Go from the list to the menu (left/right).



or



08 RADIO

SELECTING A STATION



The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS station tracking mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a fault with the audio system.



 
 
The quality of reception is represented by the number of active waves in this symbol.

1a



By alphabetical list

Press **RADIO** or **LIST**, select the station of your choice and confirm.



1b



By automatic frequency search

Press **◀** or **▶** for the automatic search for a lower or higher radio frequency.

Or turn the thumb wheel at the steering mounted controls.

 


1c



By manual frequency search

Press **▲** or **▼** to adjust the radio frequency step by step.




PRESETTING A STATION

1



After selecting a station, press one of the buttons on the numerical keypad for 2 seconds to preset the current station.

 An audible signal confirms that the station has been preset.




2



Press the button on the numerical keypad to recall a preset station.

 Or press then turn the thumb wheel at the steering mounted controls.



08 RADIO

ACTIVATE / DEACTIVATE RDS

 


RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

1




Press **RADIO**.



2



 
Select "**Guidance options**" then confirm.



3



 Activate or deactivate "**RDS**" then confirm.



09 MUSIC MEDIA PLAYERS

Access to the "MUSIC MEDIA PLAYER" menu



Press **MEDIA**.

"MEDIA"

List of the current media tracks.



 
"Following media source"

"Eject USB device" (if USB connected)

"Play mode" ("Normal", "Random", "Random on all media", "Repetition")

"Audio settings" (see this section)

"Activate / Deactivate AUX input"



This list can also be displayed by pressing **LIST** at the steering mounted controls.

Go from the list to the menu (left/right).



or



09 MUSIC MEDIA PLAYERS

CD, MP3 CD / USB PLAYER

INFORMATION AND ADVICE



The audio equipment will only play audio files with ".wma", ".aac", ".flac", ".ogg" and ".mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other type of file (.mp4, .m3u...) can be played.

WMA files must be of the standard wma 9 type.

The sampling rates supported are 11, 22, 44 and 48 KHz.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The system supports USB mass storage or iPod devices via the USB port (suitable cable not supplied).

If a partitioned USB memory key is connected to the system, only the first partition is recognised.

Control of the peripheral device is with the audio system controls.

The number of tracks is limited to 2000 maximum, 999 tracks per folder.

If the current consumption at the USB port exceeds 500 mA, the system goes into protection mode and deactivates the port.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).



In order to be read, a USB memory stick must be formatted FAT 16 or 32.

The system does not support the operation of an Apple® player and a USB memory stick connected at the same time.

It is recommended that official Apple® USB cables are used to ensure correct operation.

09 MUSIC MEDIA PLAYERS

SOURCES



Insert the CD in the player, insert the USB memory stick in the USB player or connect the USB peripheral to the USB port using a suitable cable (not supplied)

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. However, the system memorises these lists and if they are not modified, the loading time will be shorter.

Play starts automatically after a period which depends on the capacity of the USB memory stick.



SELECTION OF SOURCE



 
The **SOURCE** or **SRC** button on the steering mounted controls allows a direct change to the next media source.



1




Press **MEDIA** to display the "**MEDIA**" menu.



2



 Select "**Change media**" and confirm.




09 MUSIC MEDIA PLAYERS

SELECTING A TRACK

Previous track.	 / 
Next track.	 / 
Previous folder.	
Next folder.	
Fast forward.	Long press 
Fast backward.	Long press 
Pause: long press on SRC .	

 LIST: List of USB or CD tracks or folders

Up or down in the list.	 /  /  / 
Confirm, next menu level.	 /  / 
Up one menu level.	 +  /  / 

09 MUSIC MEDIA PLAYERS

CONNECTING APPLE® PLAYERS

- 1 Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.

- 2 Control is via the audio system.

i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.
The "Shuffle tracks" mode on an iPod® corresponds to the "Random" mode on the audio system.
The "Shuffle albums" mode on an iPod® corresponds to the "Random all" on the audio system.
"Shuffle tracks" is restored by default on each connection.

! The version of software in the audio system may not be compatible with the generation of your Apple® player.

AUDIO STREAMING



Streaming allows audio files on your telephone to be played via the vehicle's speakers.

1

Connect the telephone: see "USING THE TELEPHONE".
Select "**Audio**" or "**All**" profile.

2

If play does not start automatically, it may be necessary to start the audio playback from the telephone.
Control is from the peripheral device or by using the audio system buttons.



Once connected in streaming mode, the telephone is considered to be a media source.
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

09 MUSIC MEDIA PLAYERS

USING THE AUXILIARY INPUT (AUX)

Cable not supplied

1

 
Connect the portable device (MP3 player...) to the auxiliary JACK socket using an audio cable.



2



Press **MEDIA** to display the "**MEDIA**" menu.




3



Select "**Activate / Deactivate AUX input**" and confirm.

 First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.



!


Display and management of the controls are via the portable device.

10 AUDIO SETTINGS

1



They are accessible by the **MUSIC** button in the control panel or by a long press on **RADIO** or **MEDIA** according to the source in use.

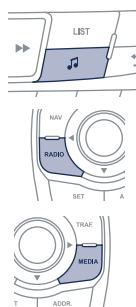

2

- "Equalizer" (choice of 6 musical ambiances)
- "Bass"
- "Treble"
- "Loudness" (Activate/Deactivate)
- "Distribution" ("Driver", "All passengers")
- "Le-Ri balance" (Left/Right)
- "Fr-Re balance" (Front/Rear)
- "Auto. Volume" depending on road speed (Activate/Deactivate)



The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of listeners in the vehicle.



The audio settings (**Equalizer**, **Bass**, **Treble** and **Loudness**) are different and independent for each sound source.
The settings for distribution and balance are common to all sources.



On-board audio: Arkamys® Sound Staging.

With Sound Staging, the driver and passengers are immersed in an "audio scene" recreating the natural atmosphere of an auditorium: truly a part of the scene and its surroundings.

This new sensation is made possible by software in the audio system which processes the digital signals from the media players (radio, CD, MP3...) without changing the audio settings. This processing takes account of the characteristics of the passenger compartment to produce optimum results.

The Arkamys® software installed in your audio system processes the digital signal from the media players (radio, CD, MP3, ...) and recreates a natural musical scene, with harmonious placement of instruments and voices in the space in front of passengers, level with the windscreen.

11 CONFIGURATION

DISPLAY CONFIGURATION

1



 
Press **SETUP** to display the "Configuration" menu.



2



Select "**Display configuration**" and confirm.




3a



Select "**Choose colour**" and confirm to select the screen colour harmony and the map presentation mode:

 
- day mode,
- night mode,
- automatic day/night mode, according to whether the headlamps are on.



3b



 Select "**Adjust luminosity**" and confirm to adjust the screen brightness. Press "**OK**" to save the changes. The settings for day and night are independent.



12 SCREEN MENU MAP



MAIN FUNCTION

1 Option A

2 Option A1

3 Option A2

1 Option B...

"Navigation - guidance" MENU

1 Select destination

2 Enter an address

2 Directory

2 GPS coordinates (Archive)

1 Journey leg and route

2 Add a stage

3 Enter an address

3 Directory

3 Previous destinations

2 Order/delete journey legs

2 Divert route

2 Chosen destination

1 Guidance options

2 Define calculation criteria

2 Set speech synthesis

2 Delete last destinations

2 Set parameters for risk areas

1 Map management

2 Map orientation

2 Map details

2 Move the map / "Vehicle monitoring"

2 Mapping and updating

2 Description of risk areas database

1 Stop / Restore guidance

"TRAFFIC INFORMATION" MENU

1 Geographic filter

2 Retain all the messages:

2 Retain the messages:

3 Around the vehicle

3 On the route

1 Select TMC station

2 Automatic TMC

2 Manual TMC

2 List of TMC stations

1 Display / Do not display messages

12 SCREEN MENU MAP

"PHONE" MENU

- 1 Dial
- 1 Directory of contacts
- 1 Call list
- 1 Phone functions
 - 2 Ring options
 - 2 Delete calls log
- 1 Bluetooth functions
 - 2 List of the paired peripherals
 - 3 Connect
 - 3 Disconnect
 - 3 Delete
 - 3 Delete all
 - 2 Peripherals search
 - 2 Rename radiotelephone

"DIRECTORY OF CONTACTS" MENU

- 1 Display contacts
 - 2 Open
 - 2 Import
 - 2 Delete
- 1 New contact
- 1 Configuration
 - 2 Delete all contacts
 - 2 Import all the entries
 - 2 Synchronization options
 - 3 No synchronization
 - 3 Display telephone contacts
 - 3 Display SIM card contacts
 - 3 Display all phone contacts
- 1 Contact mem. status

"RADIO" MENU

- 1 Following waveband
- 1 Options
 - 2 Activate / Deactivate TA
 - 2 Activate / Deactivate RDS
- 1 Audio settings
 - 2 Equalizer
 - 3 None
 - 3 Classical
 - 3 Jazz
 - 3 Rock
 - 3 Techno
 - 3 Vocal

12 SCREEN MENU MAP

- 2 Bass
- 2 Treble
- 2 Loudness
- 2 Distribution
- 3 Driver
- 3 All passengers
- 2 Le-Ri balance
- 2 Fr-Re balance
- 2 Auto. Volume
- 1 Update radio list

"MEDIA" MENU

- 1 Following media source
- 1 Eject USB support
- 1 Read mode
 - 2 Normal
 - 2 Random
 - 2 Random on all media
 - 2 Repetition
- 1 Audio settings (same as RADIO)
- 1 Activate / Deactivate AUX input

"SETUP" MENU

- 1 Display configuration
 - 2 Choose colour
 - 3 Harmony:
 - 3 Cartography:
 - 4 Day mode
 - 4 Night mode
 - 4 Auto Day/Night
 - 2 Adjust luminosity
 - 2 Set date and time
- 1 Voice synthesis
 - 2 Guidance instructions volume
 - 2 Select male voice / Select female voice

FREQUENTLY ASKED QUESTIONS

The following table groups together the answers to the most frequently asked questions concerning your audio system.

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The guidance criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the guidance criteria on the Navigation Menu, "Guidance options" \ "Define calculation criteria".
I am unable to enter my post code.	The system only accepts post codes of up to 5 characters.	
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the Guidance options menu, "Navigation - guidance", "Set parameters for risk areas".
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Traffic info" function in the list of guidance criteria.
I receive a Risk area alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for a Risk area located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk area. Select "On the route" to no longer receive alerts other than guidance or to reduce the time for the announcement.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the "Geographic filter" settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the SETUP button, then select "GPS coverage").
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.
I am unable to connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	- Check that your telephone's Bluetooth function is switched on. - Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone on www.peugeot.co.uk (connected services)
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.	- Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: refer to the information and advice in the "MUSIC MEDIA PLAYERS" section. - The audio system's CD player does not play DVDs. - Some recorded CDs will not be played by the audio system because they are not of the correct quality.
	Le CD has been recorded in a format that is not compatible with the player (udf, ...).	
	The CD is protected by an anti-pirating protection system which is not recognised by the audio system.	
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiances) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
The station is not received or its name has changed in the list.	I cannot find some radio stations in the list of stations received.	
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings for Volume, Bass, Treble, Equalizer and Loudness can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings for (Volume, Bass, Treble, Equalizer, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Fr-Re balance, Le-Ri balance) to the middle position, select the "None", musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

FREQUENTLY ASKED QUESTIONS

QUESTION	ANSWER	SOLUTION
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the battery charge. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).
When I connect my Apple® player or my BlackBerry® to the USB port, I have alert messages on the current consumption by the USB port.	When charging, the current consumption of these smartphones is greater than the rating of the USB port, which is 500 mA.	

A

ABS	174
Accessories	27, 218
Accessory position	27
Accessory socket, 12 volt	101
Adaptive lighting	51
Adjusting headlamps	154
Adjusting head restraints	94
Adjusting seat belt height	178
Adjusting the steering wheel	100
Airbags	60
Airbags, curtain	182, 183
Airbags, front	180, 183
Airbags, lateral	182, 183
Air conditioning	40
Air conditioning, digital	111, 112, 115, 120
Air conditioning, manual	111
Air conditioning, quad-zone	115, 118, 120
Air filter	227
Air flow	40
Air vents	110
Alarm	80
Anti-lock braking system (ABS)	174
Anti-theft	27
Armrest	101
Armrest, rear	102
ASR	174
Assistance, emergency braking	174
Assistance call	173, 236
Audible warning	173
Audio streaming (Bluetooth)	279
Automatic illumination of headlamps	147, 151
Automatic operation of hazard warning lamps	172
Automatic rain sensitive windscreen wipers	156, 158

B

Backup starting	208
Backup switching off	28
Battery	4, 22, 43-45, 105, 207-209, 227
Battery, charging	207, 209
Battery, remote control	77-79
Bluetooth (hands-free)	262
Bluetooth (telephone)	262
Boot	84-86
Boot (opening)	73
Brake discs	228, 229
Brake lamps	200
Brake pads	228, 229
Brakes	228, 229

C

Capacity, fuel tank	89
Central locking	74
Changing a bulb	196, 200, 202
Changing a fuse	203
Changing a wheel	190
Changing a wiper blade	159, 211
Changing the date	69
Changing the remote control battery	77, 78
Changing the time	69
Checking levels	224-226
Checking the engine oil level	65
Checking tyre pressures (using the kit)	184
Checks	223, 227-229
Children	166, 169, 170
Child seats	162, 167
Child seats, conventional	165, 166
Closing the boot	84
Closing the doors	74
Cold climate screen	217
Connectors, audio	103
Coolant level	61, 225

Coolant temperature indicator	61
Courtesy lamps	160
Cruise control	137, 140
Cup holder	101

D

Date (setting)	69
Daytime running lamps	149, 196, 197, 199
Deactivating ESP	176
Deactivating the passenger airbag	180
Deadlocking	75
Defrosting	98, 120
Diesel	35, 39, 52
Diesel additive level	226
Diesel engine pre-heat warning lamp	52
Dimensions	233
Dipped beam	51, 146, 196-198
Dipstick	65, 224
Directional lighting	155
Direction indicators	150, 172, 196, 199, 200
Driving positions (memorising)	93
Dynamic emergency braking	123
Dynamic stability control (DSC)	54, 58, 174, 176

E

EBA (Emergency braking assistance)	174
EBFD	174
Eco-driving	40
Economical driving	40
Economy mode	210
Eco off	39
Electronic brake force distribution (EBFD) ...	174

Electronic engine immobiliser.....	27, 79
Emergency boot release.....	87
Emergency call	173, 236
Emergency warning lamps	107, 172
Energy economy mode.....	210
Engine, Diesel.....	91, 222, 223, 231, 232
Engine compartment.....	46, 223
Engine compartment fusebox.....	203
Engine oil level indicator	65, 224
Engines	230-232
Environment.....	5, 40, 78

F

Filling with fuel	89, 91
Fitting a wheel.....	191
Fitting roof bars	217
Fittings, boot	104
Flashing indicators	150, 172
Flat bed lorry or trailer	48, 214
Fog lamps, rear.....	148, 200
Folding the rear seats.....	96
Front fog lamps	148
Front seats	92, 93
Fuel.....	40, 91
Fuel consumption.....	40, 42
Fuel consumption figures	42
Fuel filler cap.....	89
Fuel filler flap.....	89
Fuel gauge	89
Fuel tank.....	89
Fusebox, dashboard	203
Fuses.....	203

G

G.P.S.	248
Gearbox, electronic gear control	130, 228
Gear lever, electronic gear control gearbox	130
Ground clearance	31, 233
Guidance.....	246, 253
Guide-me-home.....	151

H

Halogen headlamps	196, 198
Hands-free kit.....	262
Hazard warning lamps	107, 172
Head-up display	135, 138, 140
Headlamp adjustment.....	154
Headlamps, directional.....	155, 196
Headlamp wash	157
Headlamp wash reservoir.....	225
Head restraints, front	94
Head restraints, rear	96
Heated seats	94
Heating	40, 118, 121
Height and reach adjustment, steering wheel	100
High load retaining net.....	108
High voltage	43-45, 105, 179, 209, 221
High voltage cable	44
Hill start assist.....	134
History.....	42, 67
Hybrid.....	4, 22, 29, 33, 207
Hybrid flow	4, 22, 33
Hybrid selector.....	29
Hybrid system	4, 22, 23, 243

I

Identification plates.....	234
Ignition.....	27
Ignition on.....	27
Indicator lamps, status.....	52, 57
Indicators, direction	172
Inflating accessories (using the kit)	184
Inflating tyres	40
Instrument panel	49
Instrument panels	50
Instrument panel screen	50
Instruments and controls	12
Intelligent Traction Control.....	175
Interior fittings	101
Interior mood lighting	161
ISOFIX.....	169
ISOFIX child seats	168-170
ISOFIX mountings.....	168

J

Jack	190
JBL (audio system).....	9, 237

K

Keeping children safe	162, 169, 170, 180
Key	70-72, 74, 77, 79
Key, electronic.....	28, 70-74, 77
Keyless Entry and Starting	71, 72, 79
Key not recognised	28
Key with remote control	27

L

Labels, identification	234
Lamps, warning and indicator	50, 54, 55
LED daytime running lamps	149
Level, brake fluid	224
Level, headlamp wash	157, 225
Level, power steering fluid	224
Levels and checks	223-226
Lighting, guide-me home	150, 151
Lighting, interior	160, 161
Lighting bulbs (replacement)	196, 200, 202
Lighting control stalk	146, 150
Lighting on reminder	148
Loading	40, 217
Load reduction mode	210
Load space cover	106
Locating your vehicle	76
Long objects, transporting	103
Luggage retaining strap	104

M

Main beam	51, 146, 196-199
Maintenance	40
Map reading lamps	160
Markings, identification	234
Massage function	95
Mat	102
Mini fuel level	89
Mirror, rear view	100
Mirrors, door	98, 99
Motorised boot	85, 86
Motorway function (direction indicators)	172
Mountings for ISOFIX seats	168
Music media players	275

N

Navigation	245, 246
Number plate lamps	202

O

Oil filter	227
Oil level	65, 224
Opening the boot	70, 73, 84
Opening the doors	70
Opening the panoramic sunroof blind	88
Operation indicator lamps	50, 52, 54, 57

P

Paint colour code	234
Panoramic glass sunroof	88
Parking brake	126, 228, 229
Parking brake, electric	123
Parking lamps	150
Parking sensors, front	143
Parking sensors, rear	142
Parking space sensor	144
Particle emission filter	226, 228
Passenger compartment filter	227
PEUGEOT CONNECT ASSISTANCE	236
Peugeot Connect Navigation (RT6)	239
PEUGEOT CONNECT SOS	236
Port, USB	103
Power	32
Priming the fuel system	222
Programmable heating (Webasto)	121
Protecting children	162, 166, 168-170, 180
Puncture	184

R

Radio	272, 273
Ready	29
Ready lamp	29, 89
Rear screen (demisting)	98, 120
Recharging the battery	207, 209
Reduction of electrical load	210
Regeneration of the particle emissions filter	228
Reinitialising the remote control	77, 78
Remote control	70-72, 74, 79
Removable screen (snow shield)	215, 217
Removing a wheel	191
Removing the mat	102
Repair kit, puncture	184
Replacing bulbs	196, 200, 202
Replacing fuses	203
Replacing the air filter	227
Replacing the oil filter	227
Replacing the passenger compartment filter	227
Replacing wiper blades	159, 211
Reset history	42, 67
Resetting the service indicator	64
Reversing lamp	200
Risk areas (update)	250
Roof bars	217
Roof blind	88
Routine checks	227-229
Running out of fuel (Diesel)	222

S

Safety for children	166, 171
Screen, colour and mapping	243, 283
Screen, instrument panel	50, 66

Screen-wash reservoir.....	225
Screen menu map.....	283
Screenwash, front.....	157
Screenwash fluid level.....	157, 225
Seat adjustment.....	92
Seat belts.....	177-179
Seats, rear.....	96
Serial number, vehicle.....	234
Service indicator.....	63
Service warning light.....	56
Servicing.....	40
Setting the clock.....	69
Short-cut menus.....	244
Sidelamps.....	146, 149, 150, 196, 199, 200
Side repeater.....	199
Ski flap.....	103
Snow chain.....	195, 234
Spare wheel.....	190
Speed limiter.....	137, 138
Speedometer.....	32, 49
Spotlamps, side.....	153, 199
Start.....	25, 208
Starting the engine.....	28, 29, 35
Starting the vehicle.....	25, 130
Steering mounted controls, audio.....	242
Stopping the vehicle.....	25, 28, 130
Stop & Start.....	113, 116, 120, 207, 221-224, 227
Storage.....	101, 102, 104
Storage wells.....	104
Storing driving positions.....	93
Stowing rings.....	104
Switching off the engine.....	28, 29
Switch off.....	25
Synchronising the remote control.....	77, 78
Synthesiser, voice.....	256
System, navigation.....	246

T

Table of weights.....	232
Tables of engines.....	230-232
Tables of fuses.....	203
Technical data.....	230-232
Telephone.....	262, 264
Temperature, coolant.....	61
Temperature control for heated seats.....	94
Temporary tyre repair kit.....	184
Third brake lamp.....	202
TMC (Traffic info).....	259
Tools.....	190
Towbar.....	215
Towed loads.....	232
Towing another vehicle.....	48, 212, 214
Traction control (ASR).....	54, 58, 174
Traffic information (TA).....	260, 274
Traffic information (TMC).....	259, 260
Trailer.....	215
Trip computer.....	66, 68
Tyre pressures.....	234
Tyres.....	40

U

Unlocking.....	70, 71
Unlocking the boot.....	73
Update risk areas.....	250
Updating the date.....	69
Updating the time.....	69
USB (Peugeot Connect).....	103

V

Vehicle identification.....	234
Ventilation.....	45, 105, 110, 111


W

Warning lamps.....	52, 55, 57
Warning triangle.....	107
Wash-wipe, rear.....	157
Washing (advice).....	47
Weights.....	232
Welcome function.....	93
Welcome lighting.....	153
Wiper, rear.....	157
Wiper control stalk.....	156-158
Wipers.....	53, 156, 158


X

Xenon headlamps.....	196
----------------------	-----


Exterior

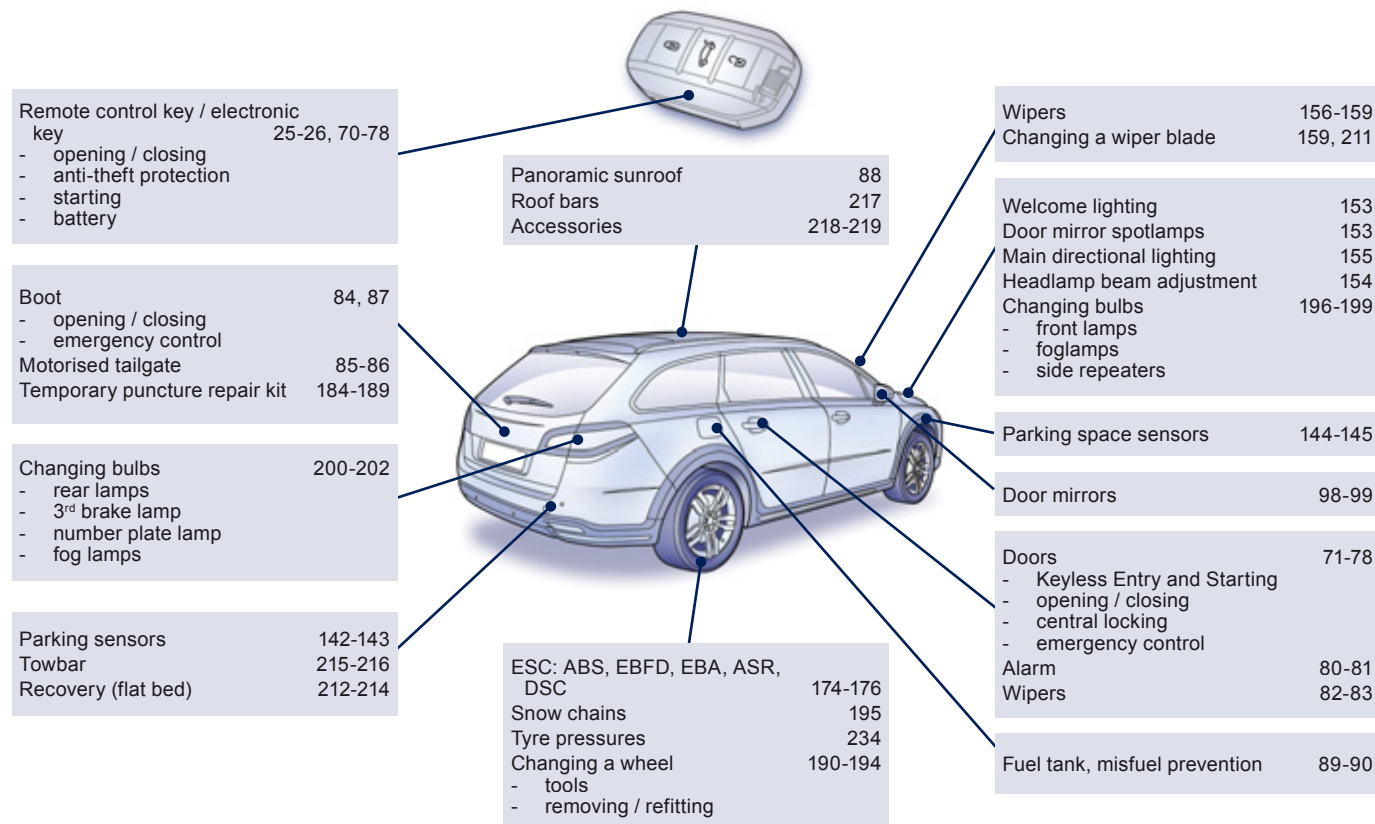


Interior

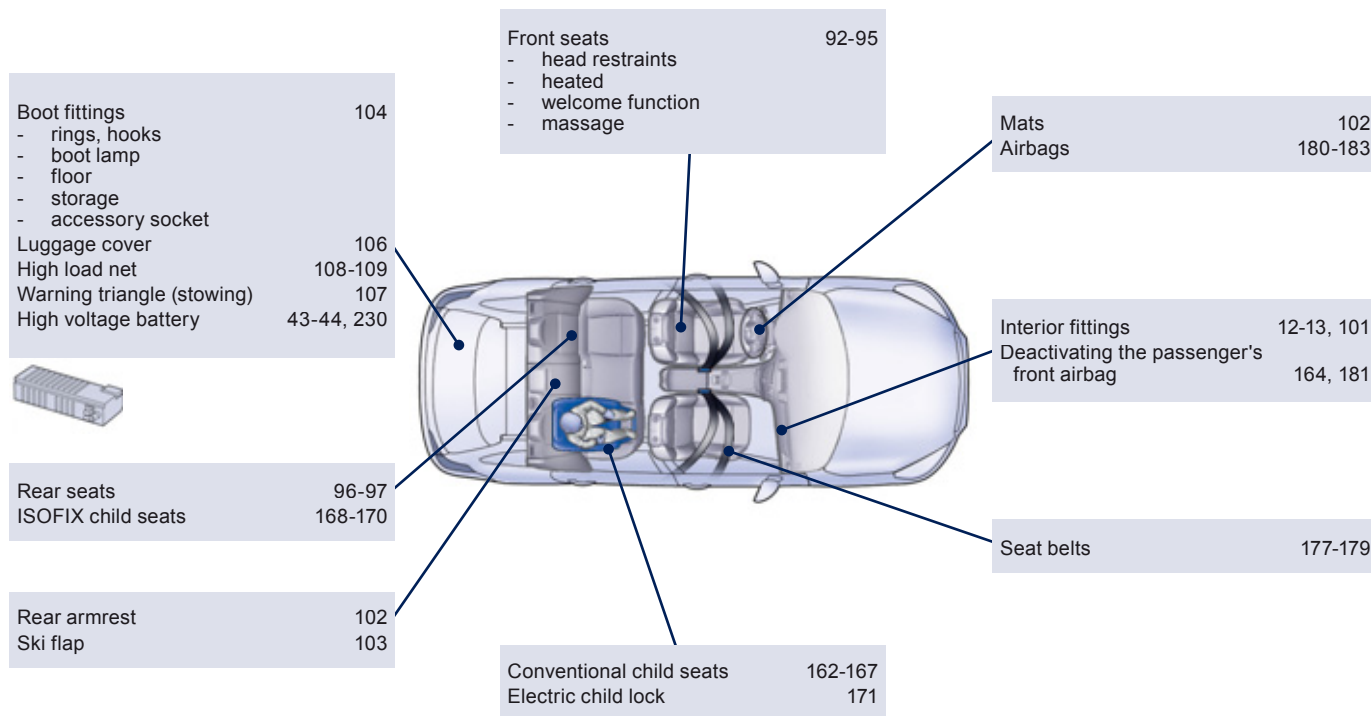


Instruments and controls

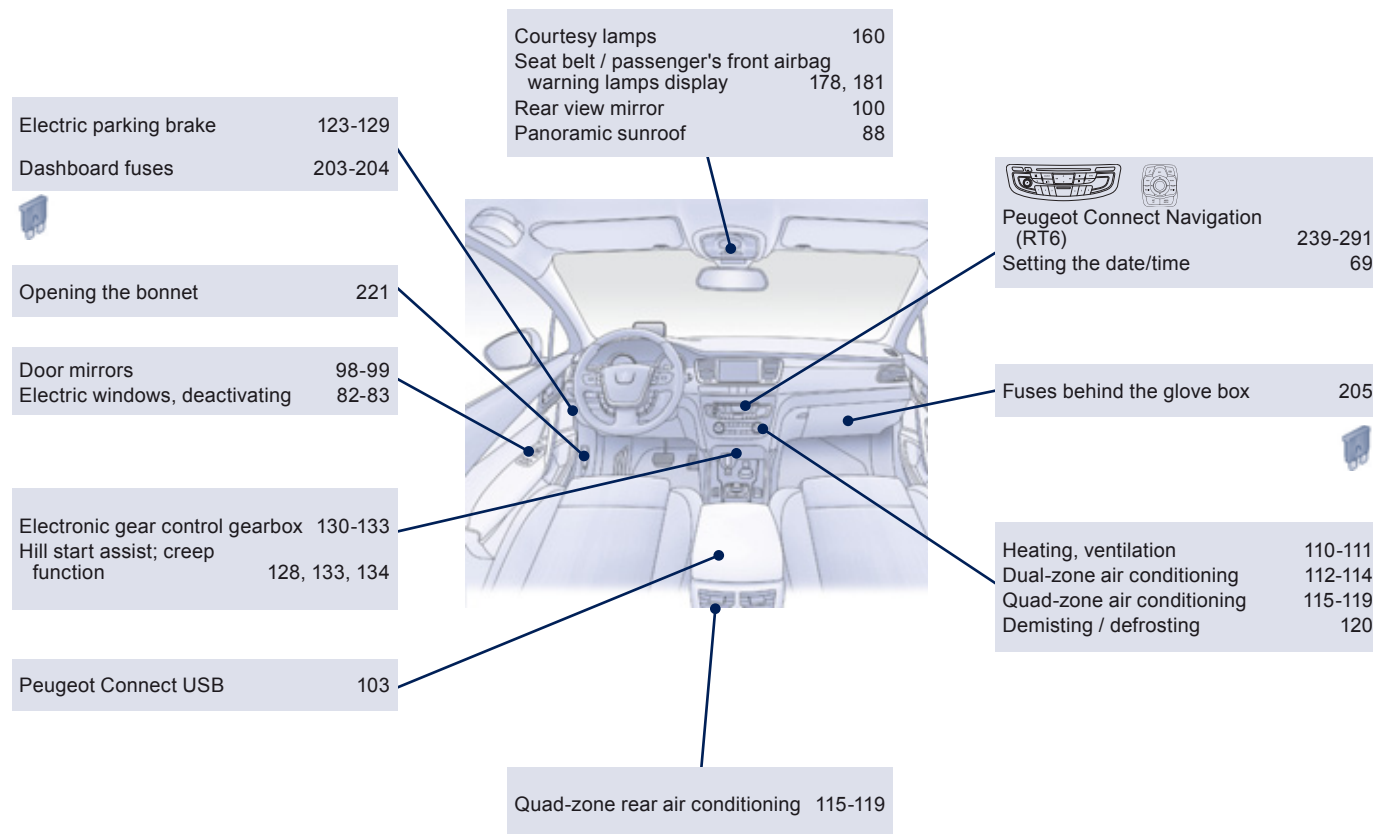

Instruments and controls (cont.)

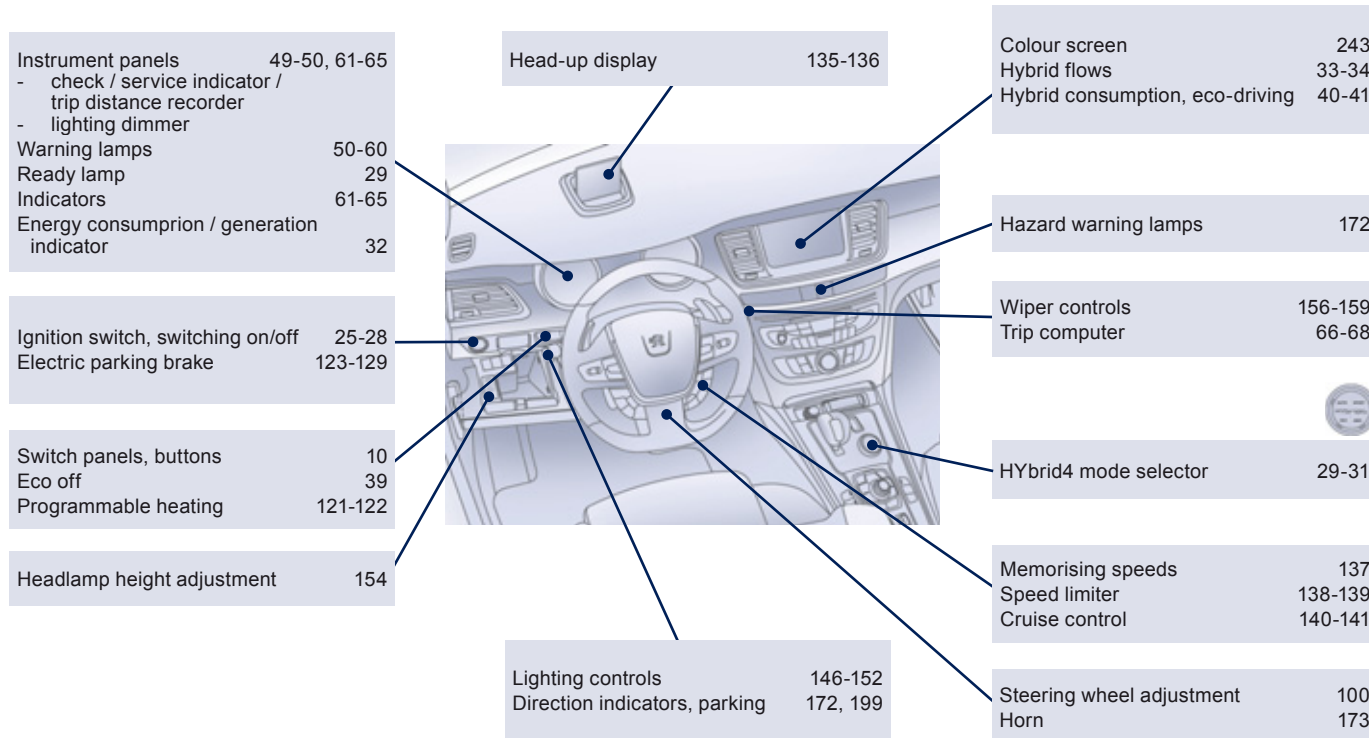

Maintenance - Technical data

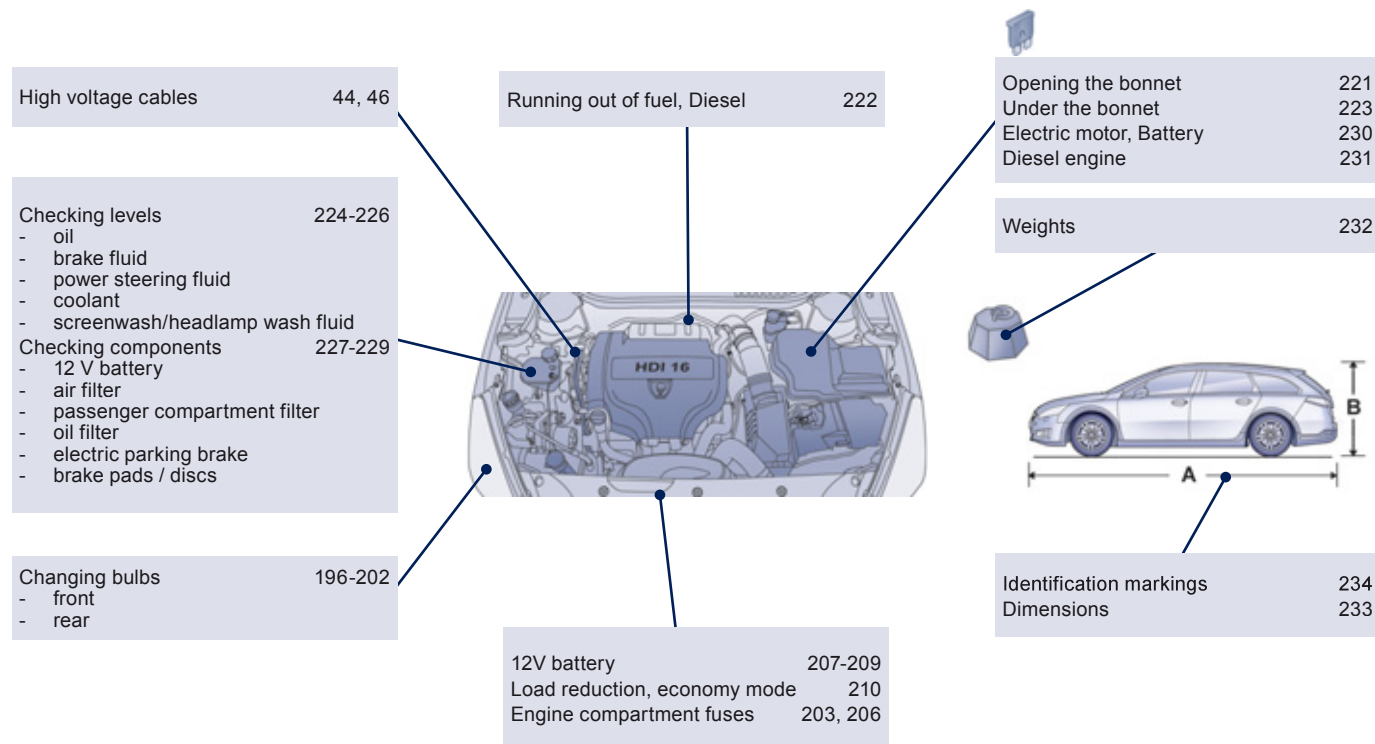









This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update the current handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this handbook is prohibited without written authorisation from Automobiles PEUGEOT.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

Anglais

Printed in the EU

02-13



PEUGEOT

Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS

Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P. 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 172 771 770 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

