




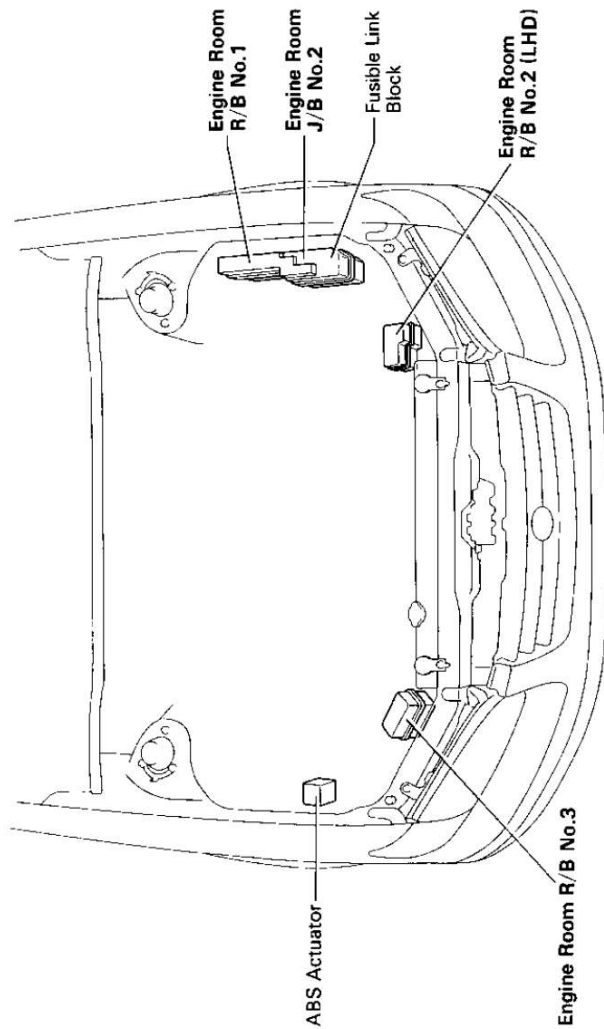


[Instrument Panel LHD]

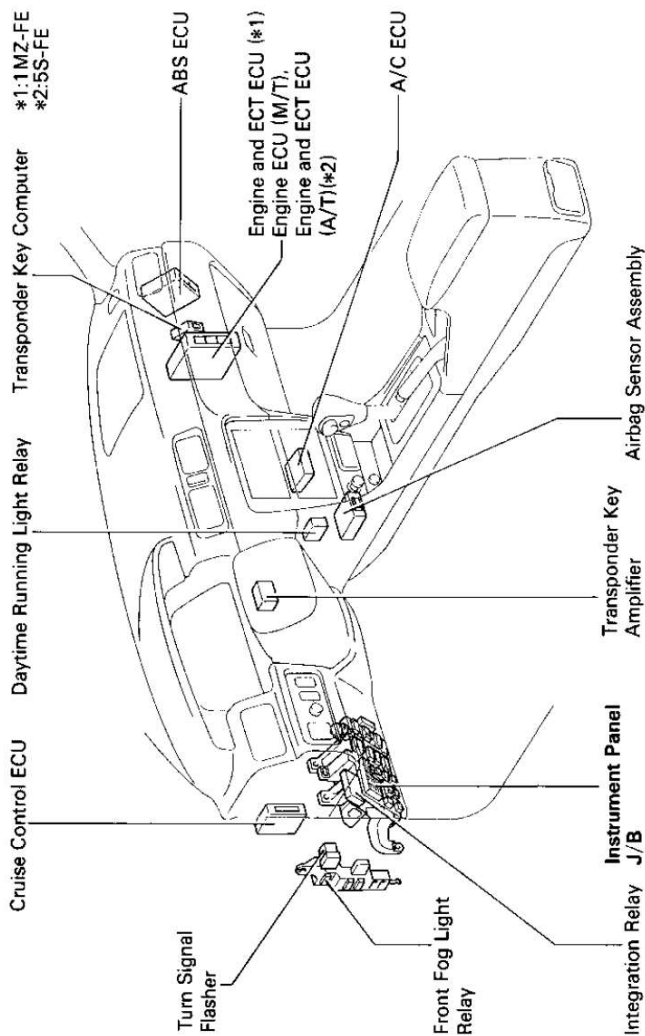


[Body]

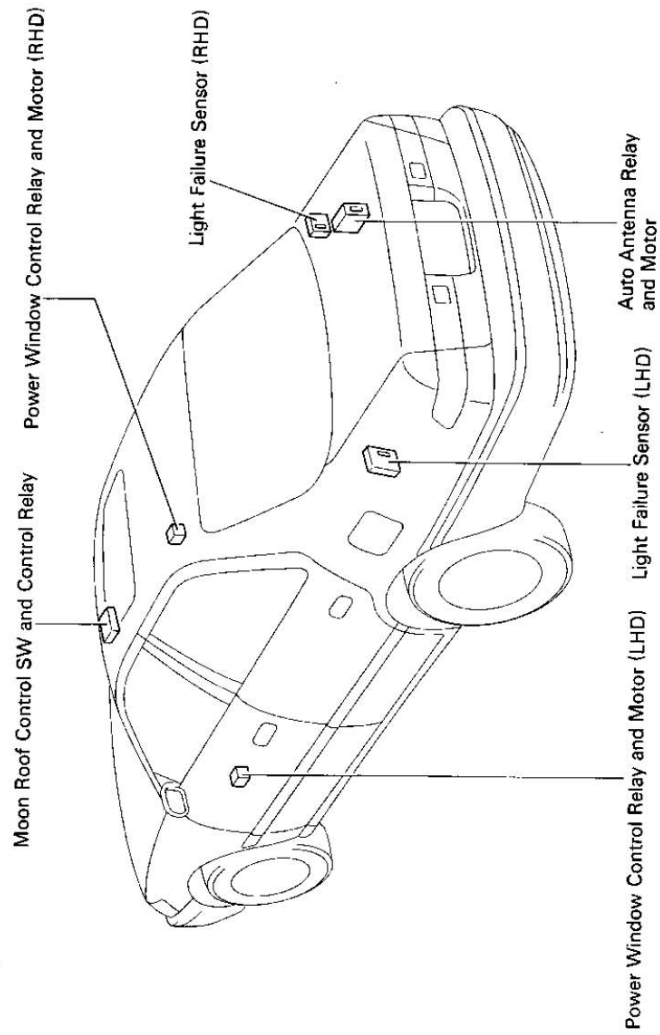


[Instrument Panel RHD]


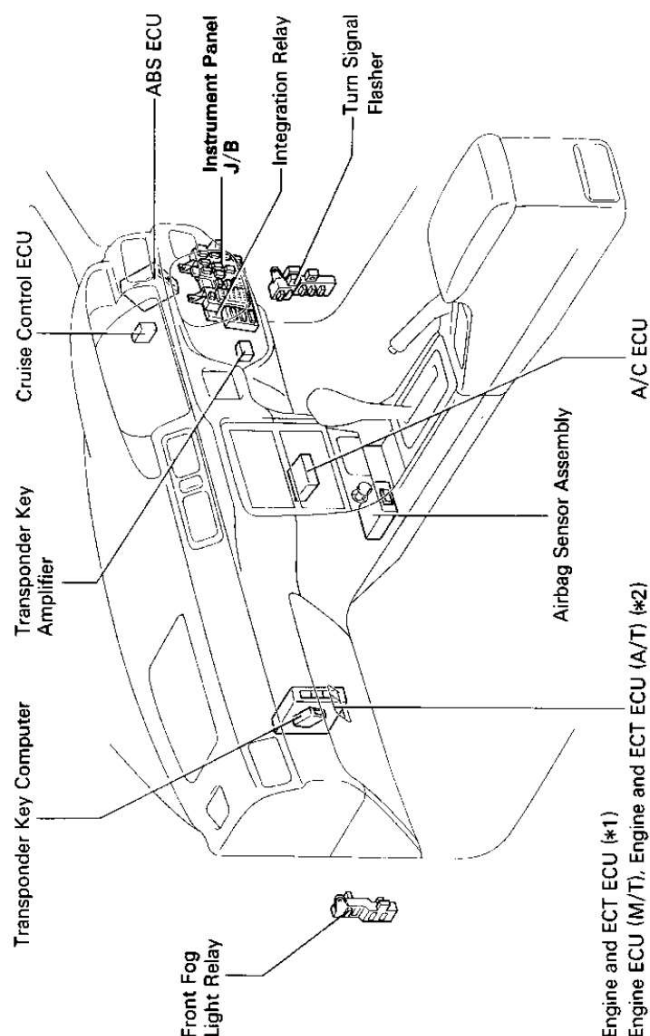


: Instrument Panel J/B (LHD) Lower Finish Panel (See page 51)

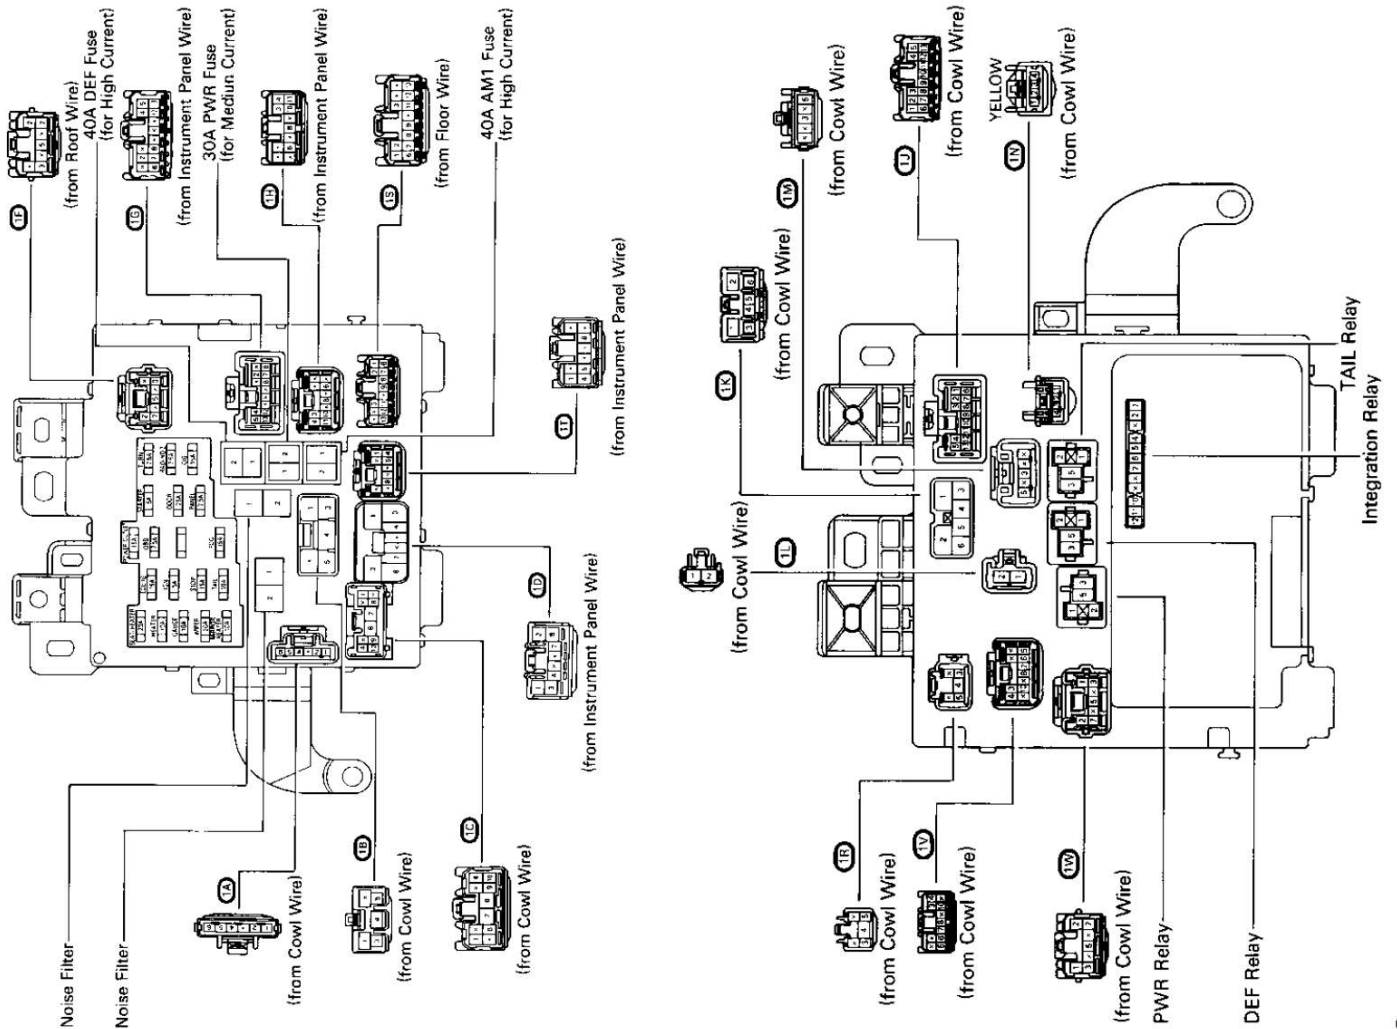


[Instrument Panel J/B (LHD) Inner Circuit]

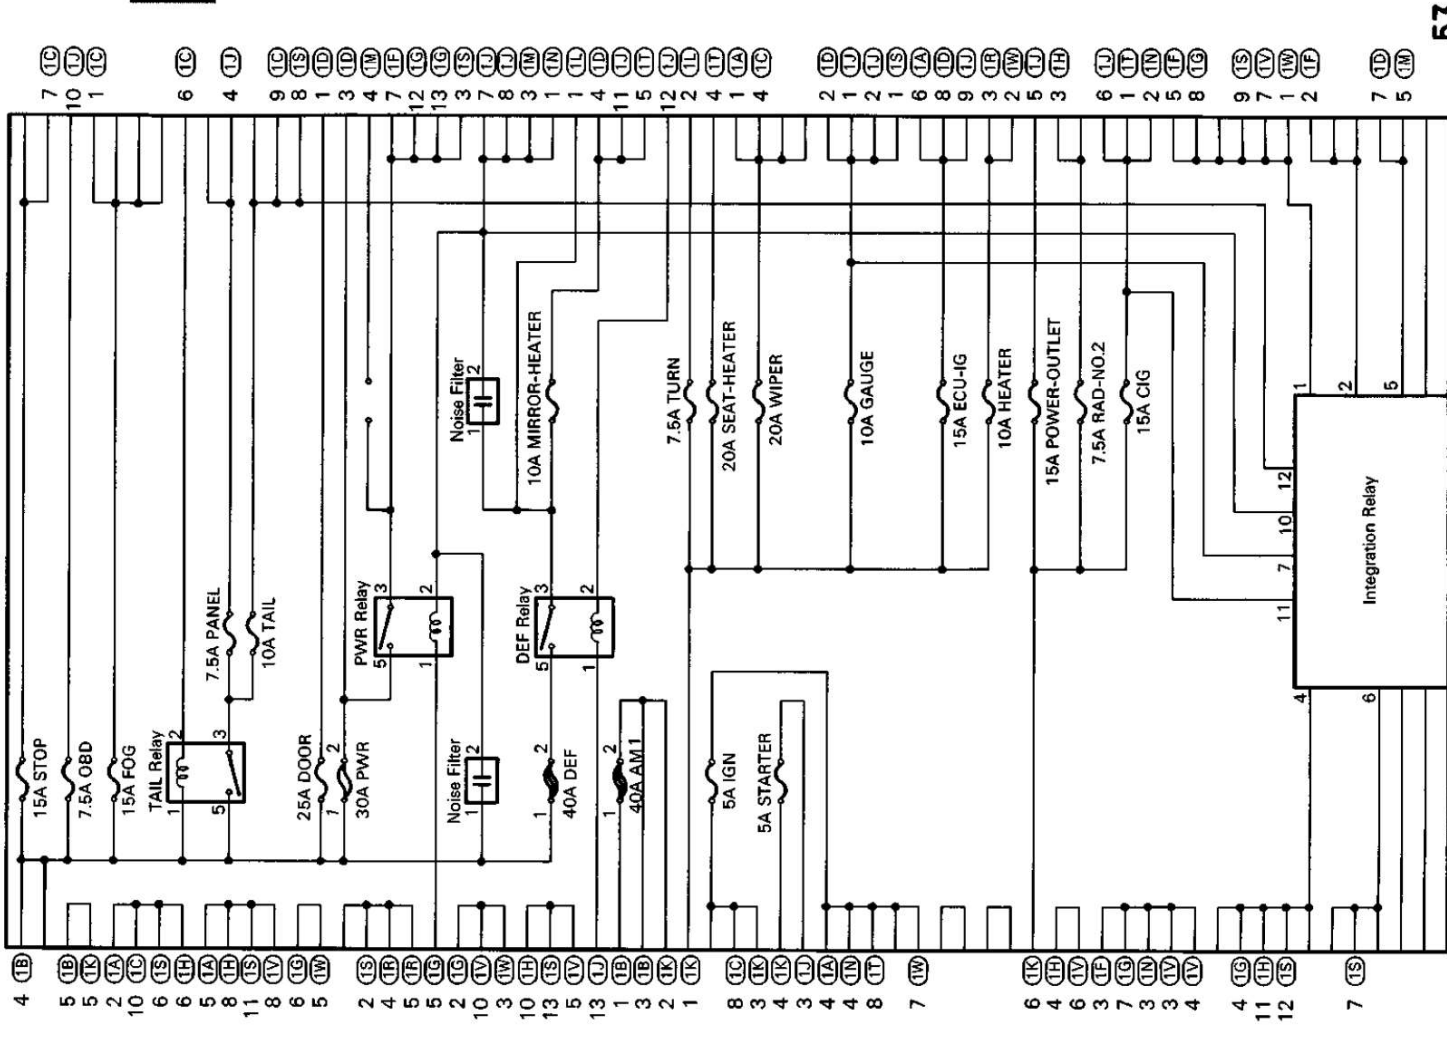


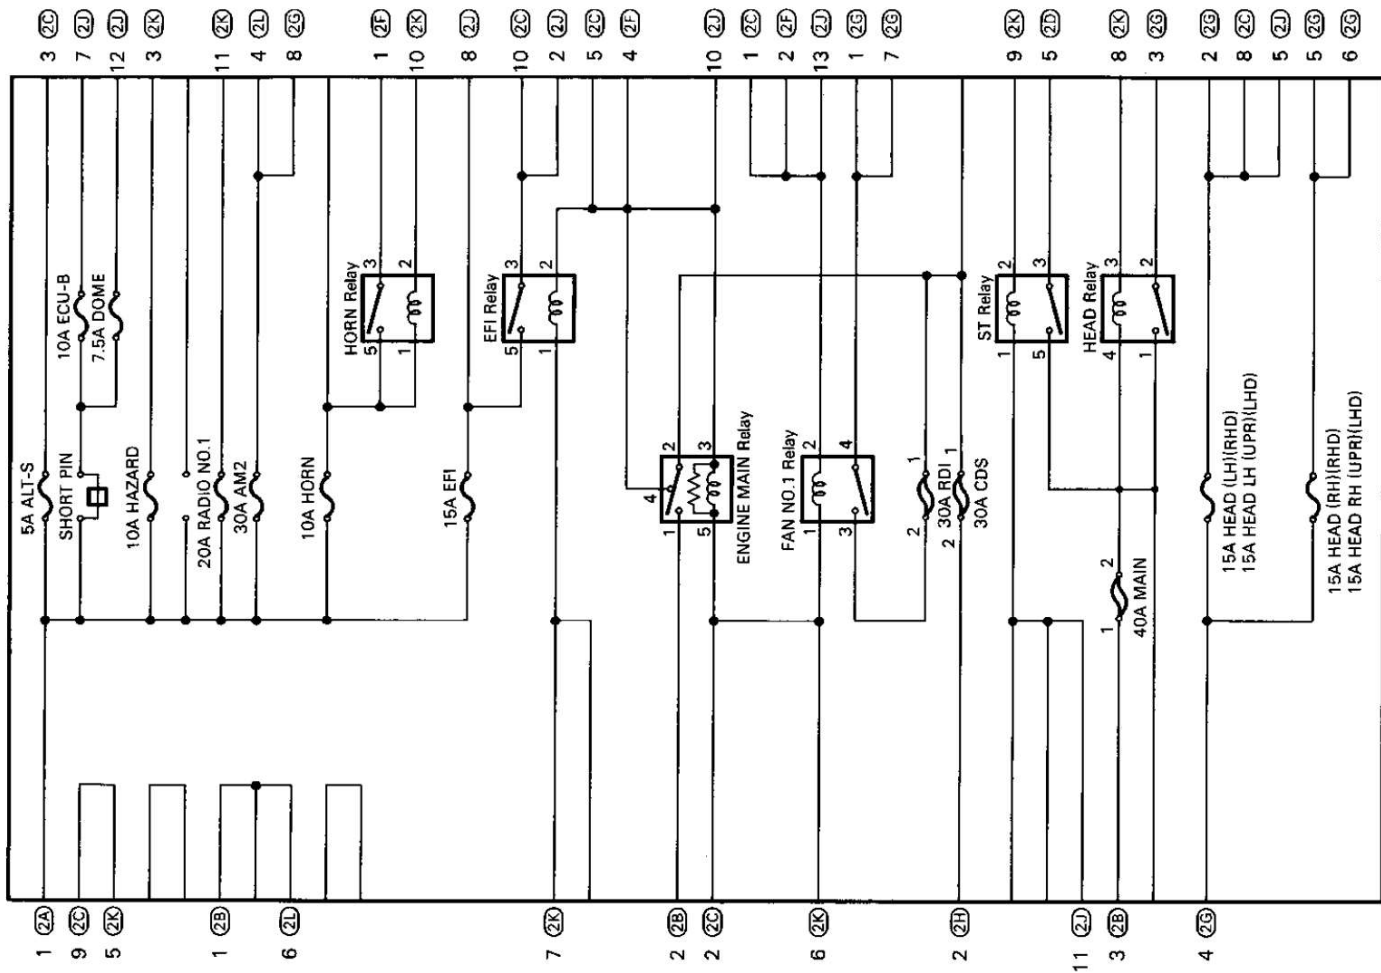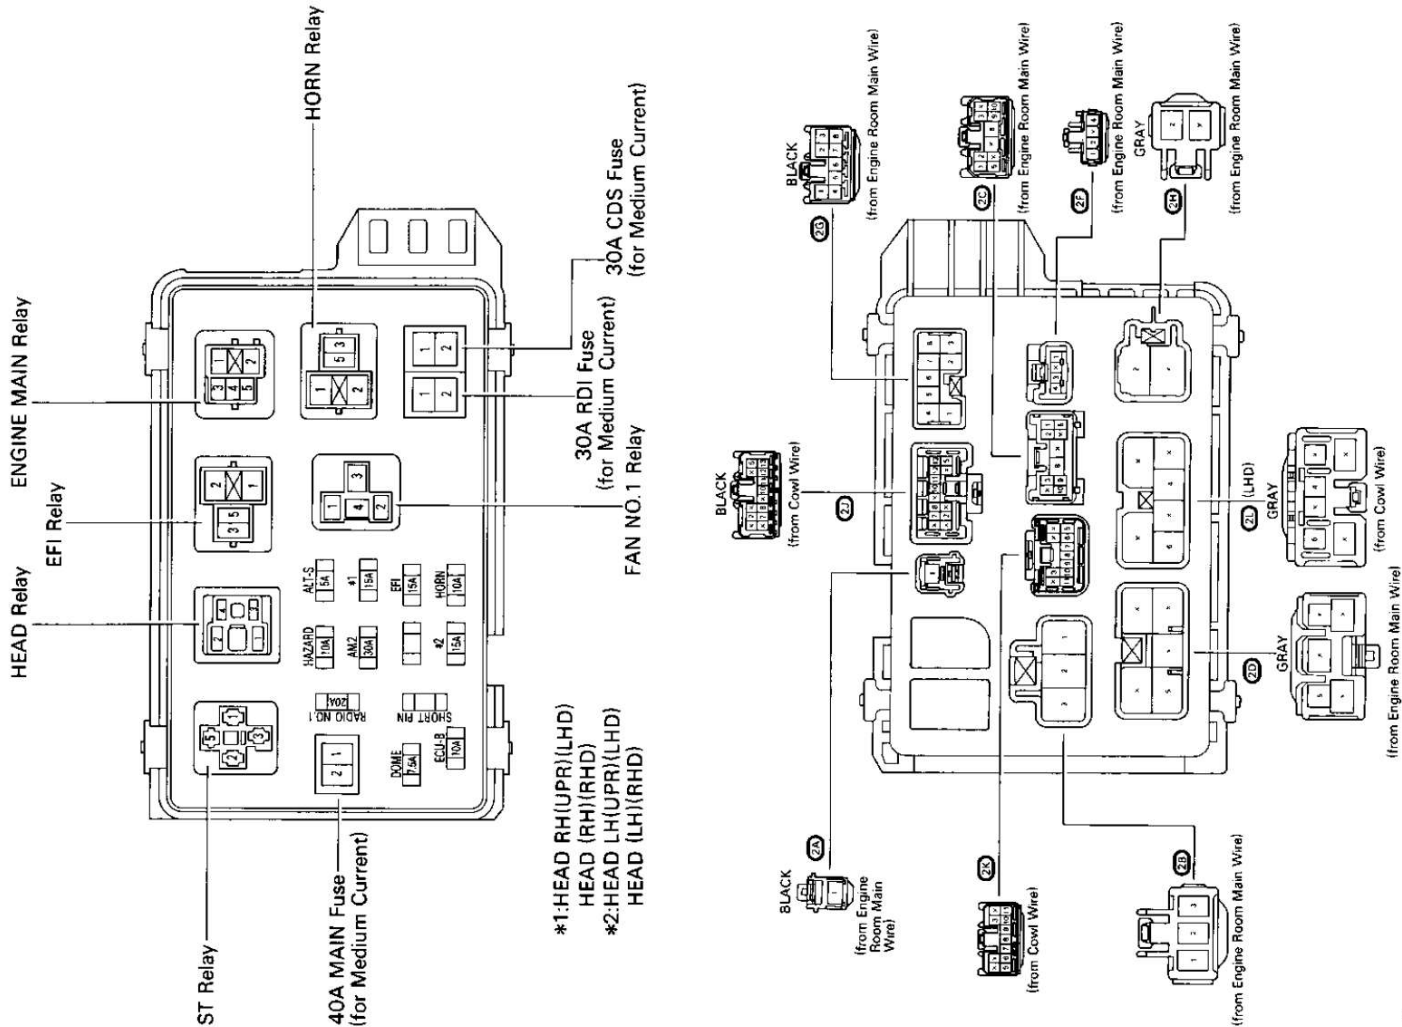


Fusible Link Block	Engine Compartment Left (See page 50) Inside Engine Room J/B No.2
--------------------	--

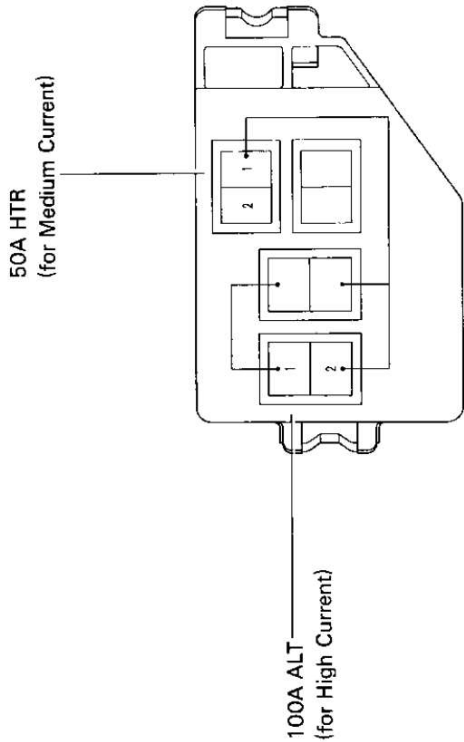

②: Engine Room R/B No.2	Near The Battery (See page 50) [LHD]
-------------------------	---

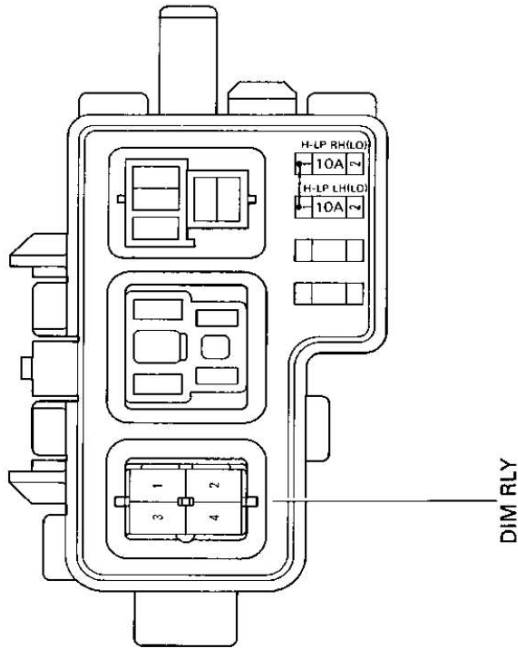

①: Engine Room R/B No.1	Engine Compartment Left (See page 50) Inside Engine Room J/B No.2
-------------------------	--

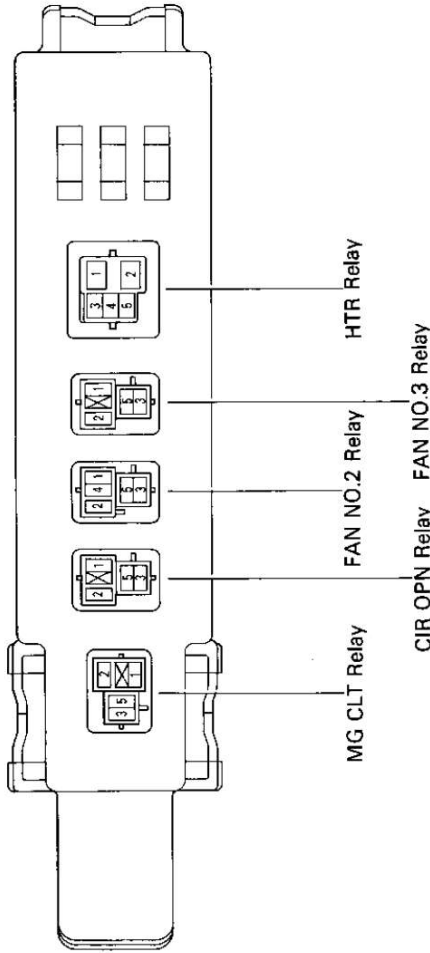

③: Engine Room R/B No.3	Radiator Upper Support LH (See page 50)
-------------------------	---

