

STARTING SYSTEM

REFER TO 1988 CELICA REPAIR MANUAL (Pub. No. RM071U)


NOTE: The following pages contain only the points which differ from the above listed manual.

	Page
STARTER	ST-2

ST-2

STARTING SYSTEM – Starter

**STARTER
COMPONENTS**

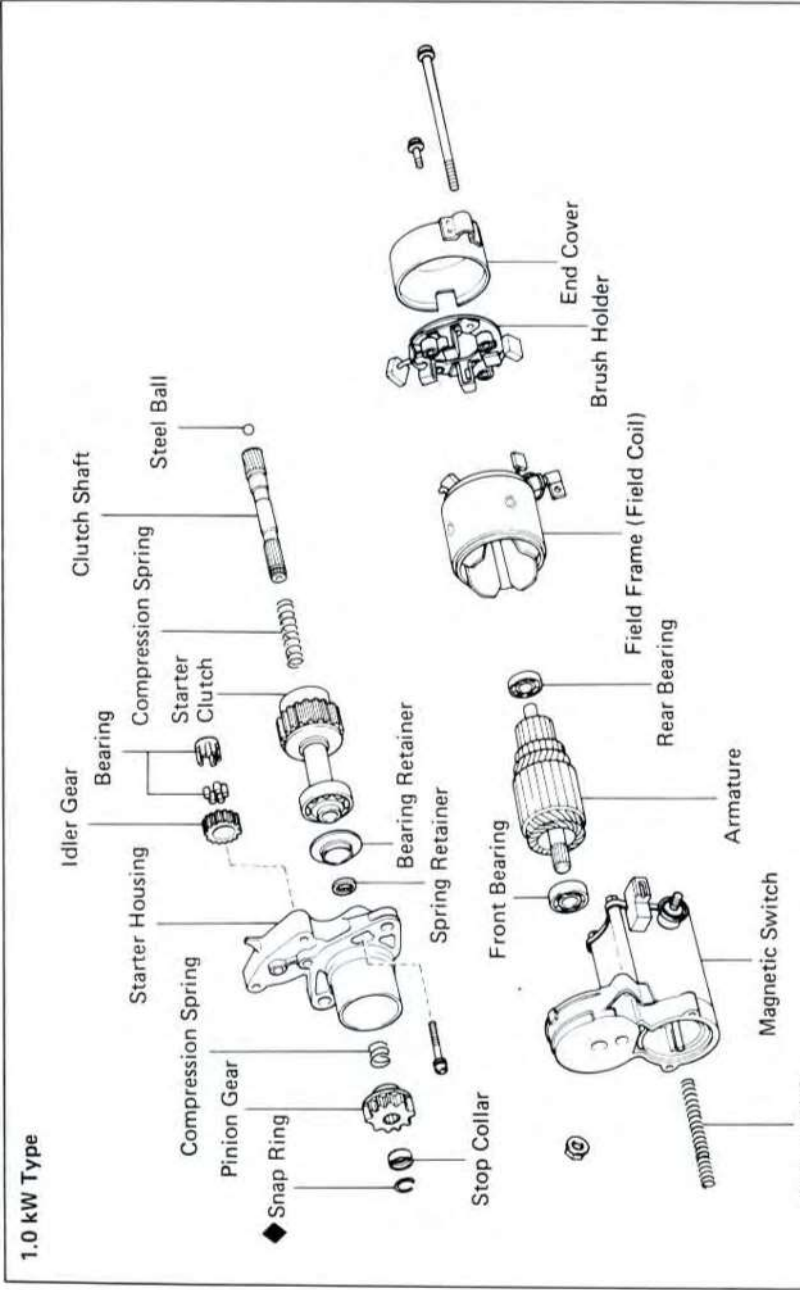

STARTING SYSTEM — Starter **ST-3****REMOVAL OF STARTER**

1. REMOVE BATTERY
2. REMOVE AIR CLEANER ASSEMBLY
(See step 11 page EM-43)
3. DISCONNECT CONNECTOR AND WIRE FROM STARTER
4. REMOVE STARTER

Remove the two bolts and starter.

DISASSEMBLY OF STARTER

(See Pub. No. RM071U, for 3S-FE Starter on pages ST-5 to 7)

INSPECTION AND REPAIR OF STARTER

(See Pub. No. RM071U, for 3S-FE Starter on pages ST-7 to 12)

ASSEMBLY OF STARTER

(See Pub. No. RM071U, for 3S-FE Starter on pages ST-13 to 17)

PERFORMANCE OF STARTER

(See Pub. No. RM071U on pages ST-16 and 17)


INSTALLATION OF STARTER

1. INSTALL STARTER

Install the starter with the two bolts.

Torque: 400 ka-cm (29 ft-lb, 39 N·m)



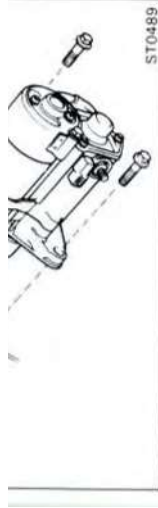

2. **CONNECT CONNECTOR AND WIRE TO STARTER**
3. **INSTALL AIR CLEANER ASSEMBLY**
(See step 21 on page EM-51)
4. **INSTALL BATTERY**
5. **CHECK THAT ENGINE STARTS**