

BMW ZKE Fault codes

ZKEII

15 Repeat-blocking was activated!
No fault!

62 No SUCH CODE

24 Voltage supply disconnected!

2 Pin contact power lock - Drive for passenger door faulty
Check the power lock module circuit-breaker connection and
the connection to the pin contacts.
Is the mechanism working? (select power lock mode!)

11 Power lock relay is stuck!
One of the relay contacts is stuck. The relay must be
replaced!

13 CRASH-sensor was activated!
No fault!

26 Internal fault!
There is an internal fault. Please delete the fault storage
and lock the power lock from the driver door.
In case of malfunction and if the fault is still stored, the
power lock module must be replaced!

28 Passengers-door-contact active for over 16 minutes!
The door was open longer than 16 minutes.
No fault! Please delete the fault storage!

ZKEIII

2 Data exchange, driver's door module and GM : disturbed
11 Sliding/tilting sunroof module : faulty
13 No SUCH CODE
15 Input signal, terminal R on general module : faulty
24 Relay for wiper Speed 1 : disturbed
26 Washer-pump relay disturbed
62 Relay fault, closing driver's side : front power window

ZKEIV

2 Fuse for ZV
11 Electrical-load cutoff - short circuit or overload
13 Door-lock heater, short circuit
15 Lock contact
24 Relay for ZV double-locking does not pick up
26 Relay for driver's door FH does not pick up
28 Relay for driver's door FH does not pick up
62 Relay for ZV unlocking sticks

ZKEV

2 Data exchange driver door module with base-module (GM) faulty
11 Power sunroof module faulty
13 No SUCH CODE
15 Incoming signal clamp R at the base module (GM) faulty
24 Relays wipestage 1 faulty
26 Relays washing pump faulty
28 Windshield-pressure module faulty
62 Fault by selecting: Close power window driver side front