

6114 Overview of tightening torques

Positive battery cable to power distribution box, battery voltage, multi-fuse	
NutM6	8Nm

6120 Overview of tightening torques

Positive battery terminal to battery		
NutM6	Tightening torque	5Nm

6121 Overview of tightening torques

Battery cover		
M8		2,8Nm
Battery holder to engine support		
Hexagon screw M8x30	Tightening torque	19Nm
Battery terminal rail to battery tray		
M8		19Nm
Battery terminal with IBS positive battery terminal / negative battery terminal		
NutM6		5Nm
Positive battery cable to battery terminal		
M8		15,2Nm
Trailing link		
M8	Tightening torque	19Nm

6131 Overview of tightening torques

Audio operating unit on instrument panel		
Screw	Tightening torque	2,5Nm
Centre console		
Oval-head screw		1,8Nm
Controller to cover		
Screw		2,5Nm
Parking brake button		
Oval-head screw	Tightening torque	1,5Nm
Parking brake button to centre console trim		
Screw	Tightening torque	1,5Nm
Steering column switch cluster (SZL) on the steering column		
Screw TS5x20	Tightening torque	3Nm

6133 Overview of tightening torques

Fanfare		
M6x20 screw	Tightening torque	11,8Nm

6161 Overview of tightening torques

Windscreen wiper arm			
Combination hexagon nut		Tightening torque	35Nm
Wiper console to body			
M6x30		Tightening torque	10Nm
Wiper console to retaining bracket			
M6		Tightening torque	10Nm

6162 Overview of tightening torques

Wiper motor to tailgate			
Screw		Tightening torque	7,6Nm

6166 Overview of tightening torques

Washer fluid reservoir to body			
M6x20 screw		Tightening torque	11,8Nm
Washer fluid reservoir to body			
M6x20		Tightening torque	8Nm

6171 Overview of tightening torques

Washer fluid reservoir to holder		
M6x20 screw	Tightening torque	8Nm

61 operating fluid overview

Expendable materials

Protective cover "Vehicle protection" picture panel		8319 2 350 087
--	--	----------------