



F RELAY LOCATIONS

[Body]

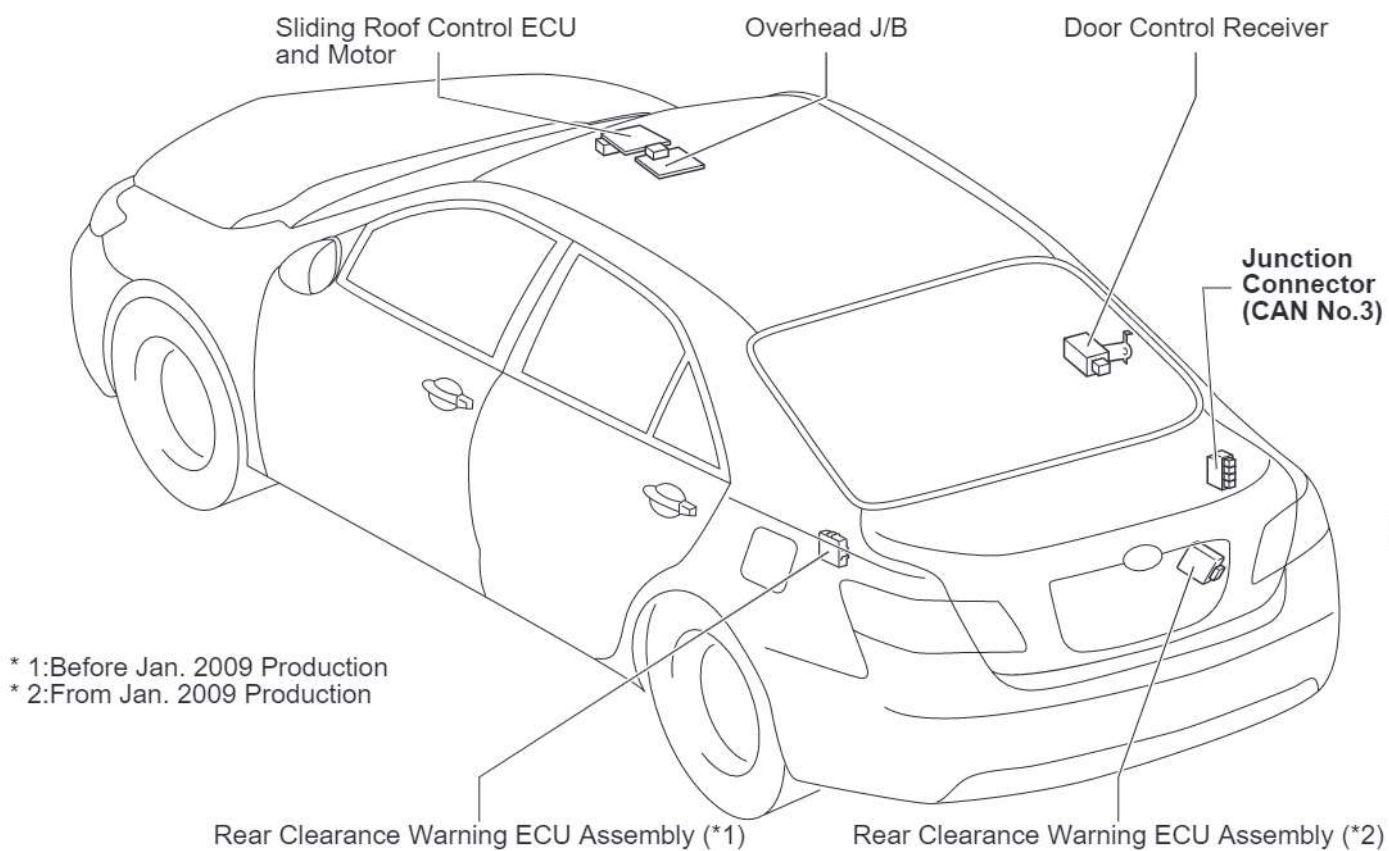


F RELAY LOCATIONS

[Engine Compartment] (LHD)

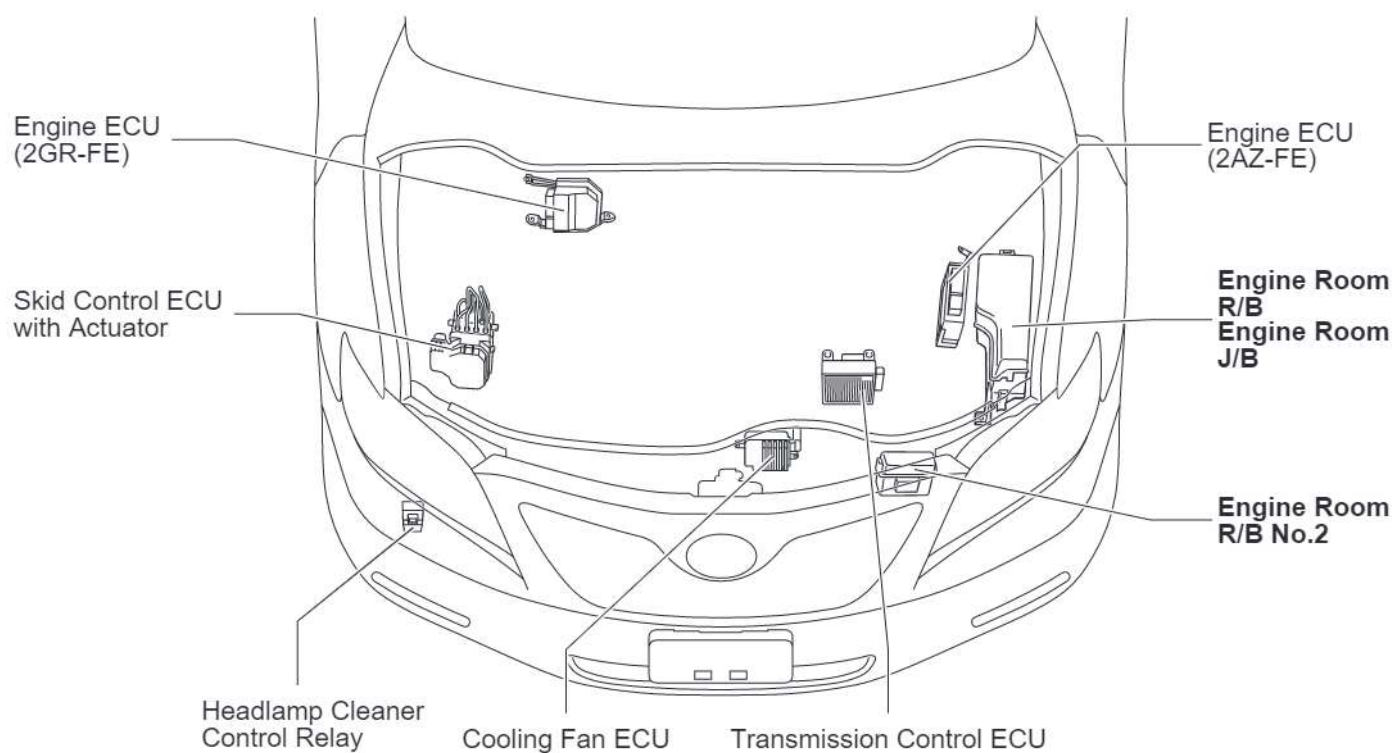


(RHD)

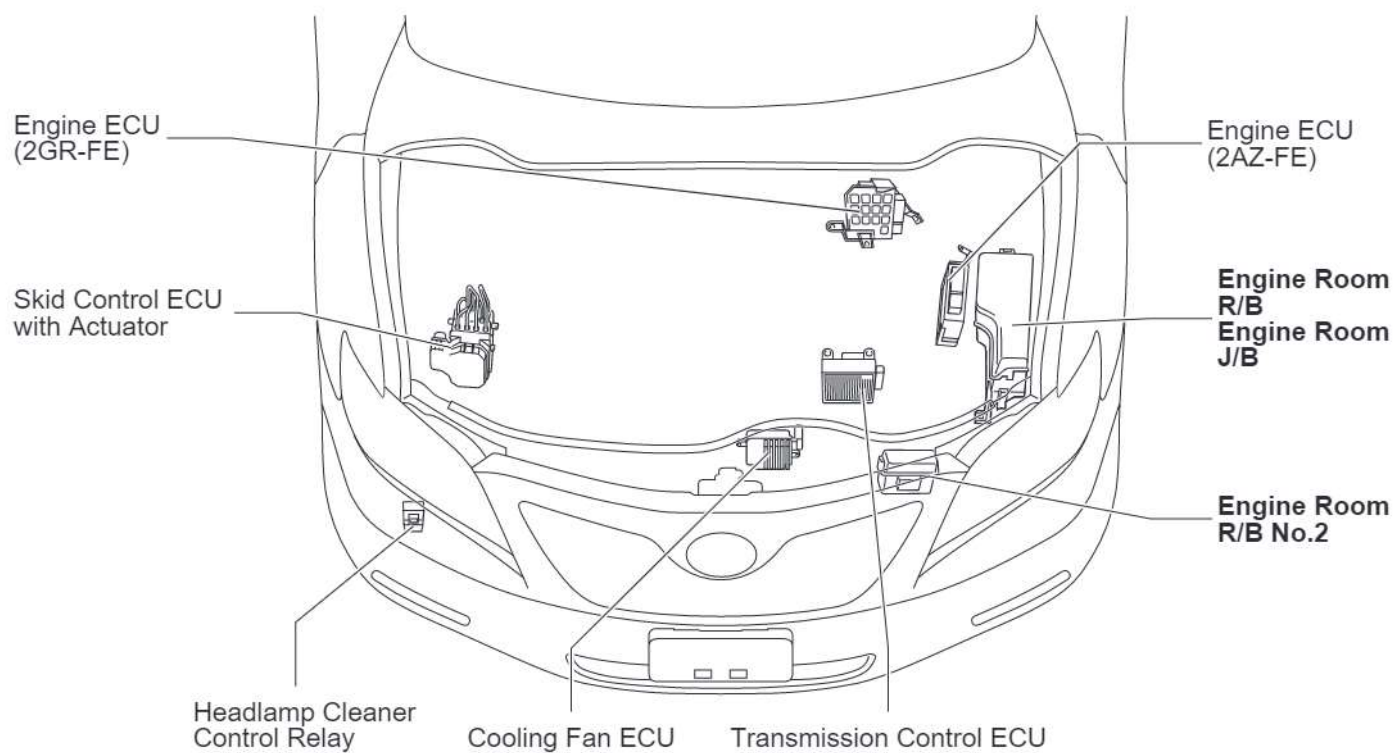


F RELAY LOCATIONS

[Engine Compartment] (LHD)

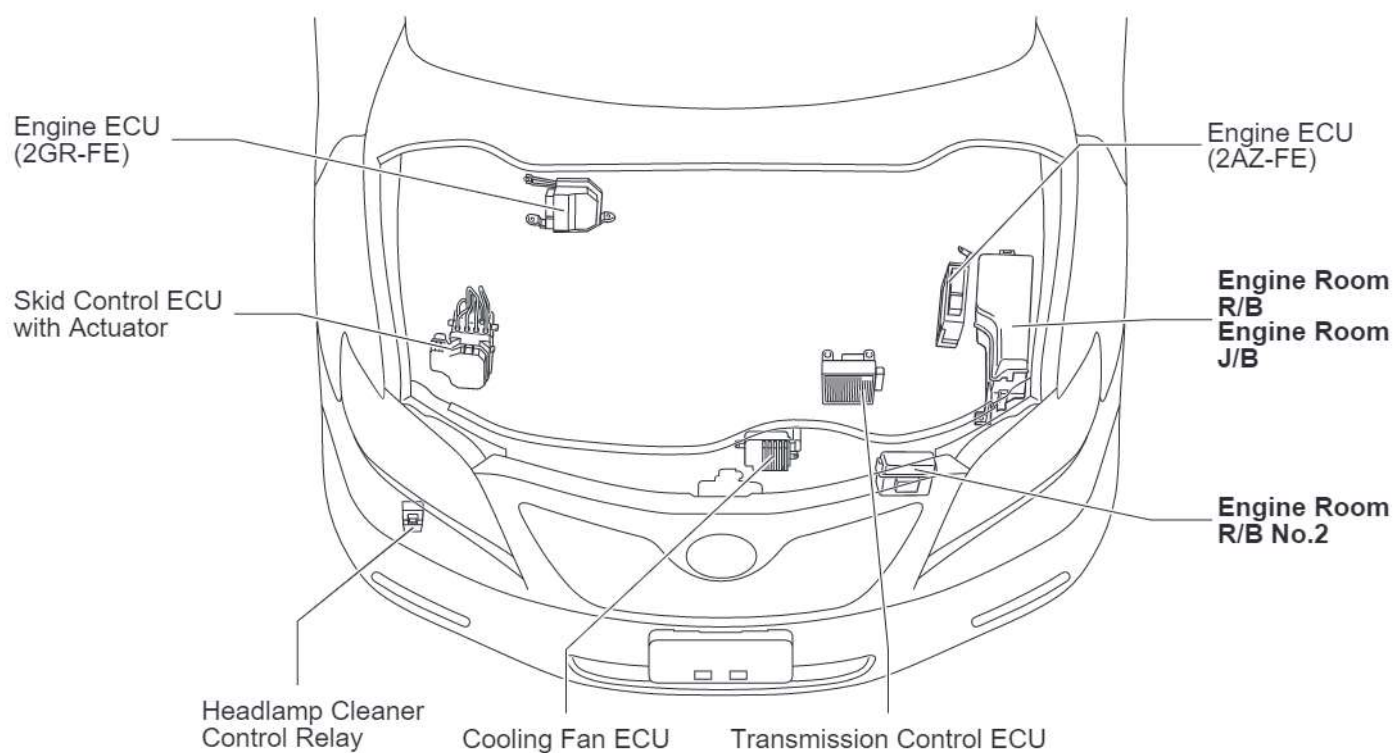


(RHD)

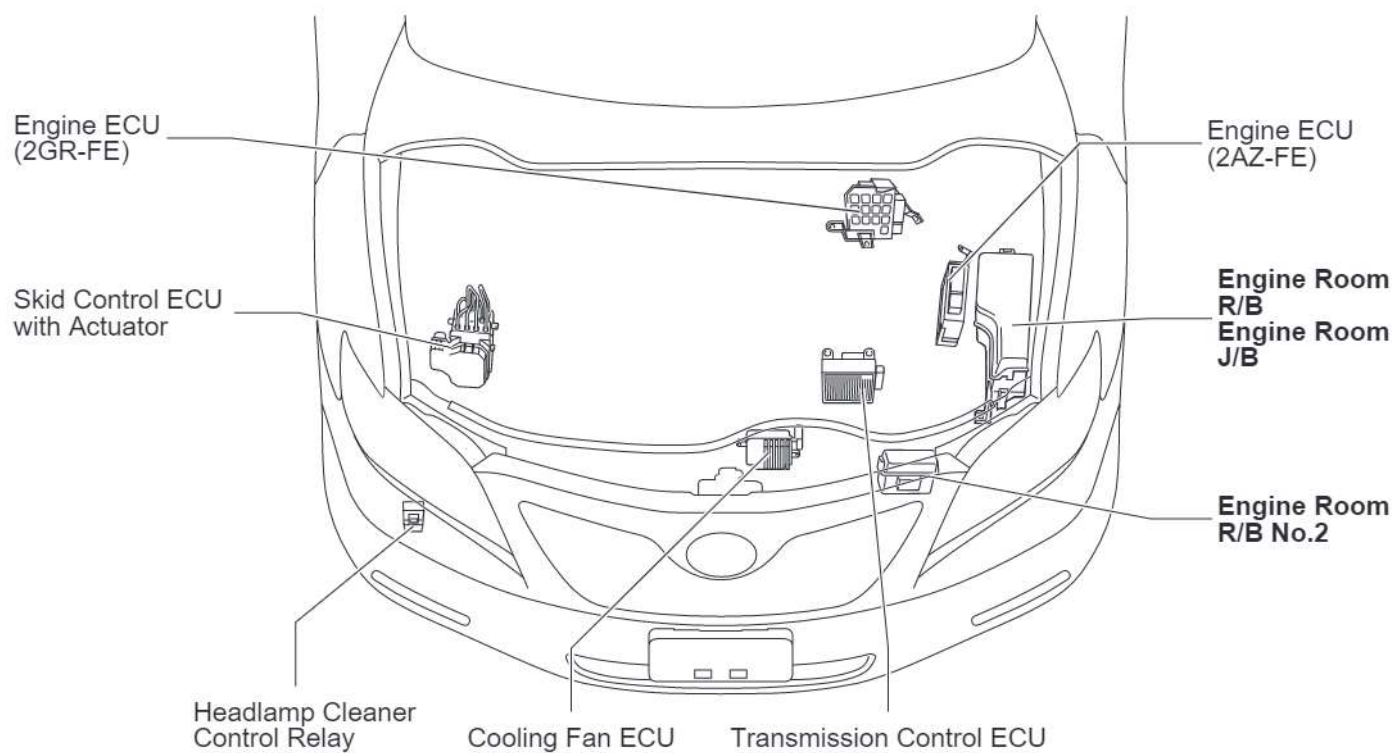

F RELAY LOCATIONS

② : Engine Room R/B No.2 Left Side of the Radiator Support (See Page 20)

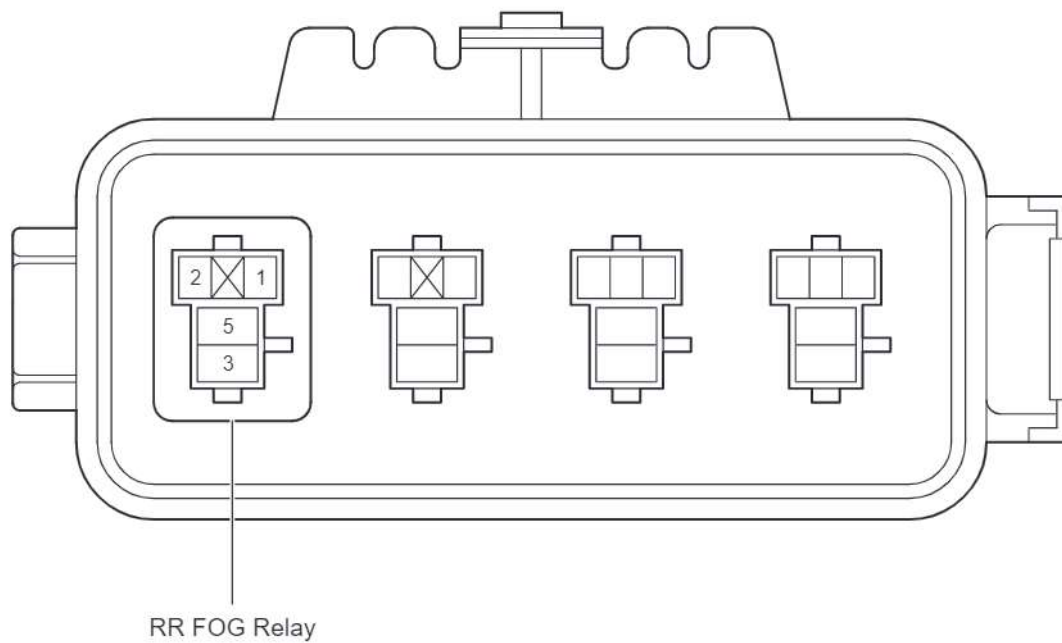


F RELAY LOCATIONS


① : Engine Room R/B

② : Engine Room J/B

Engine Compartment Left (See Page 20)

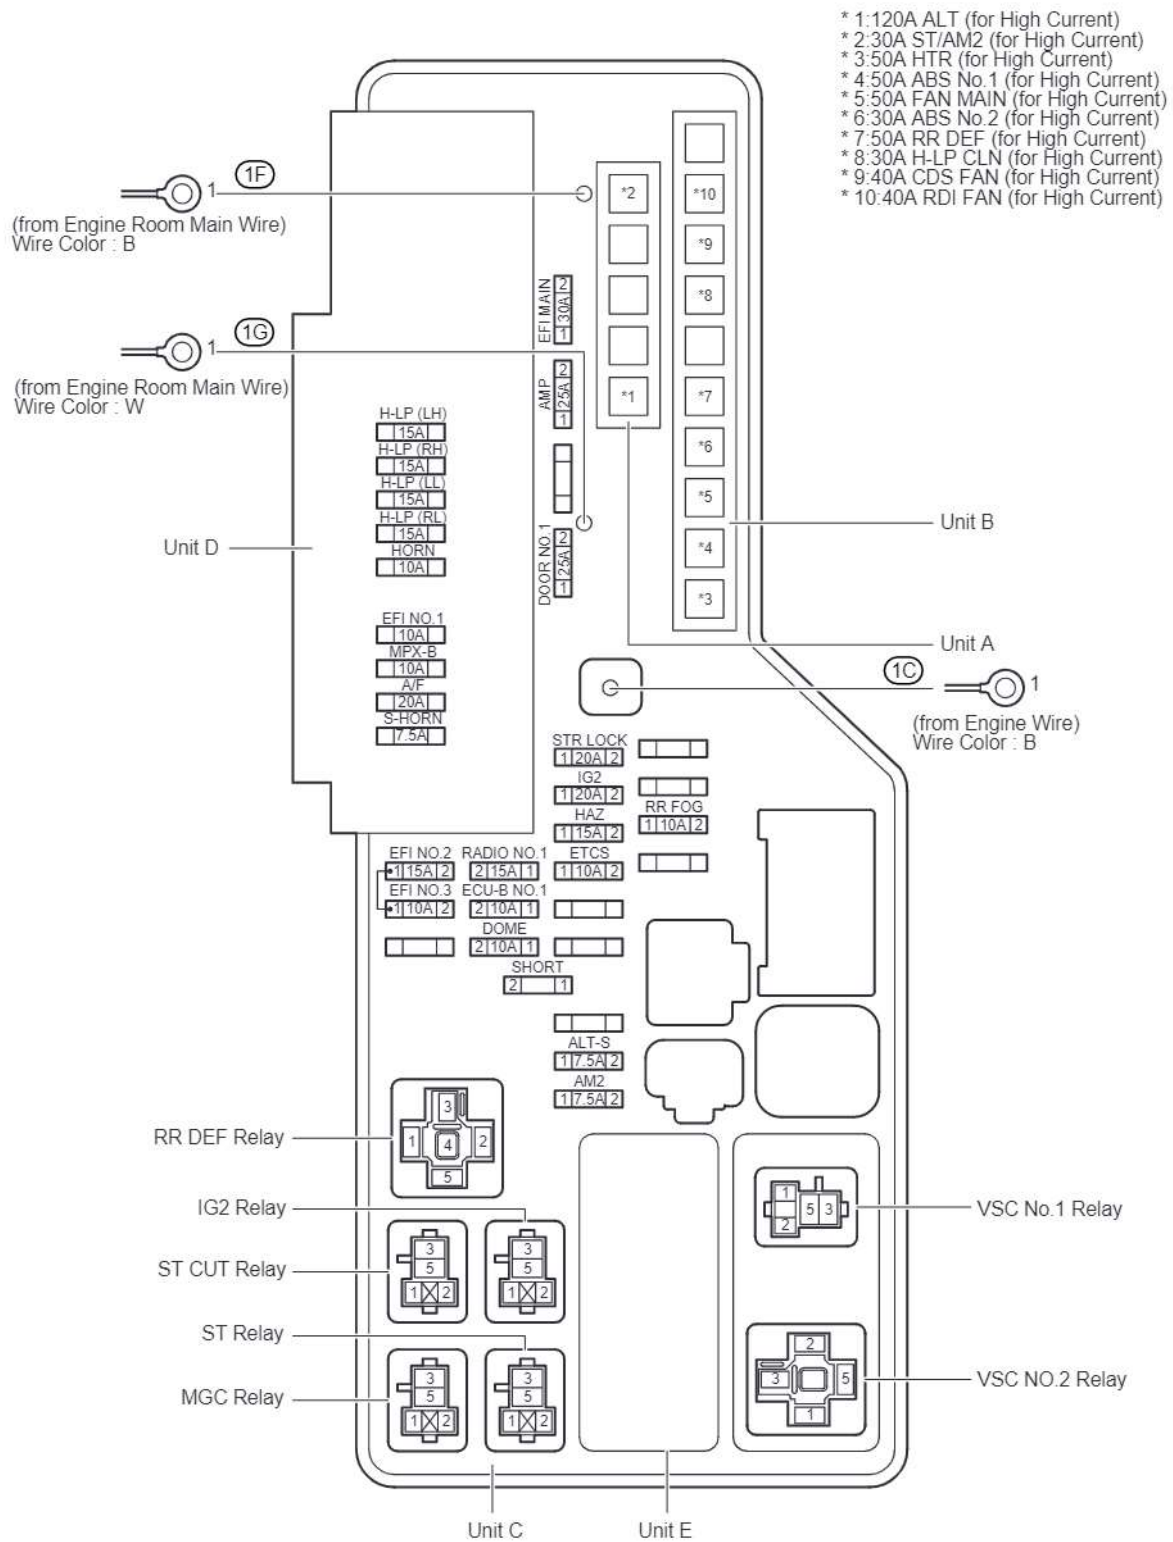


Unit E



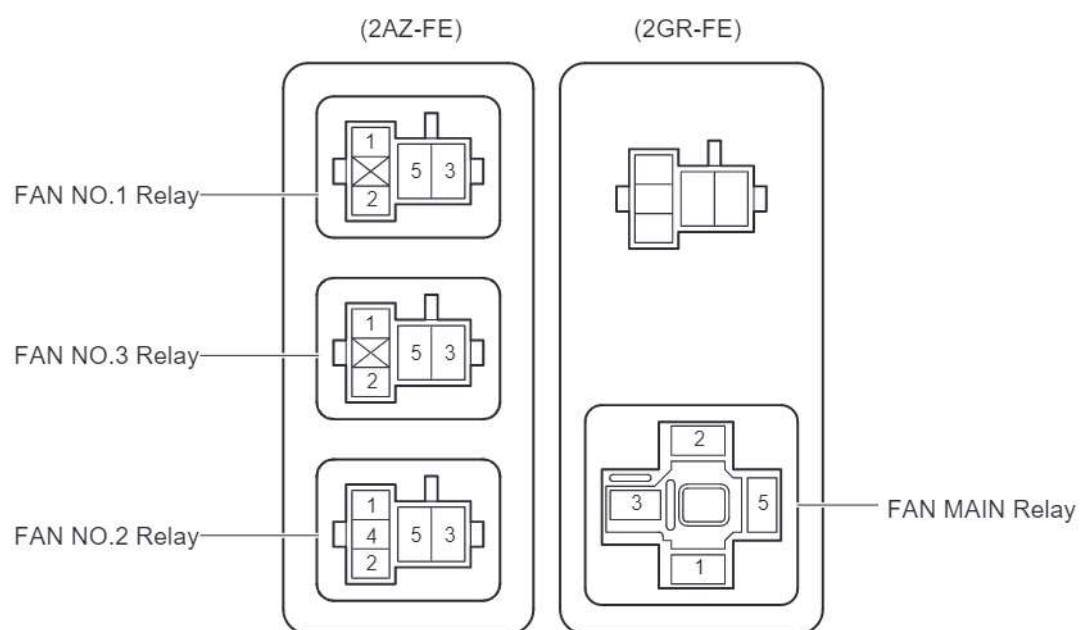


F RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Left (See Page 20)
○ : Engine Room J/B	


Unit D

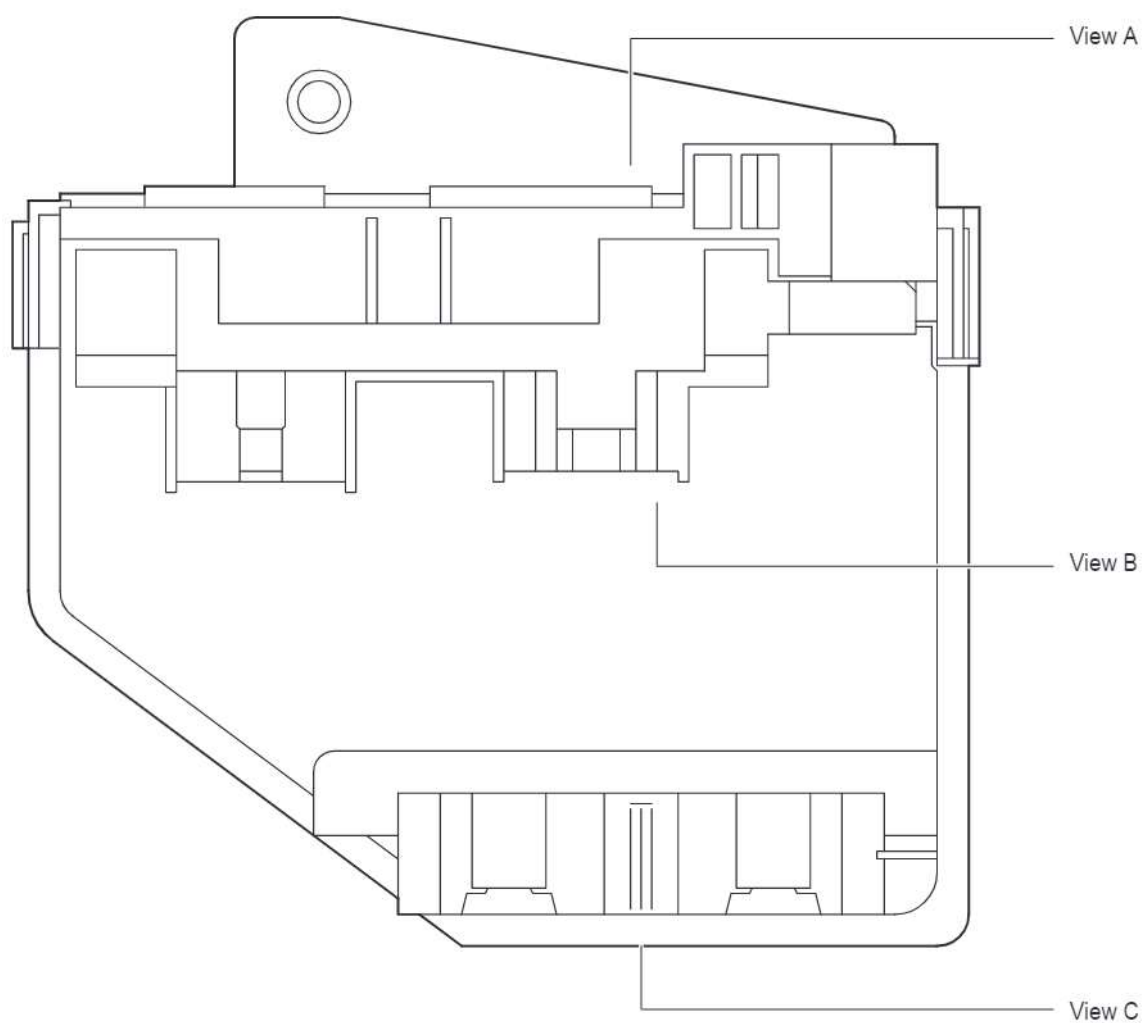

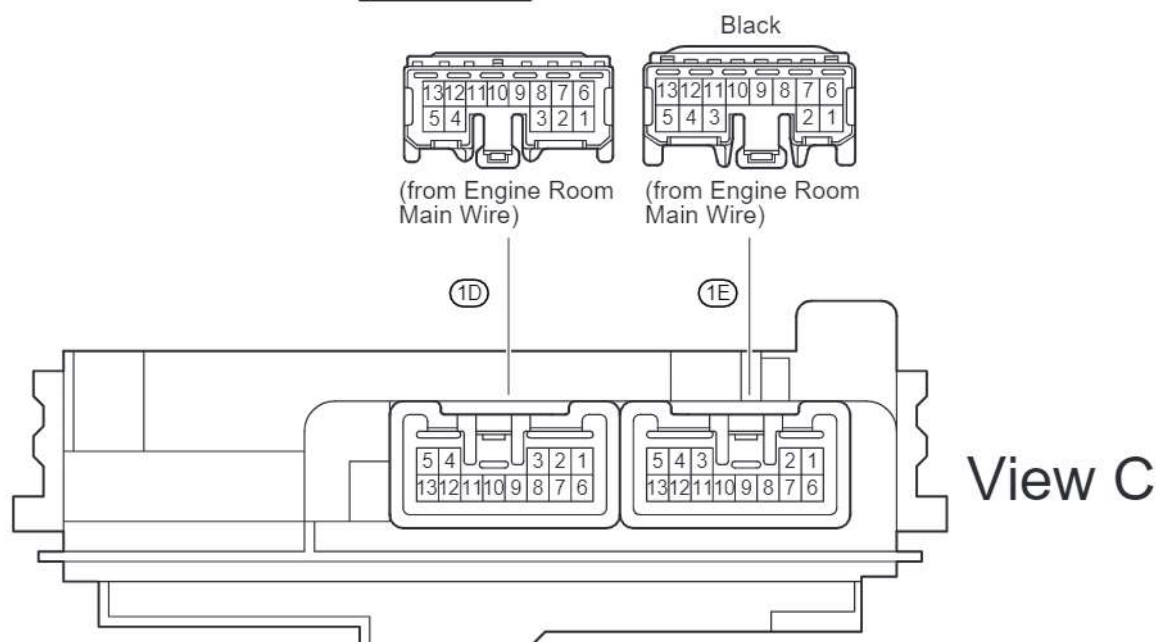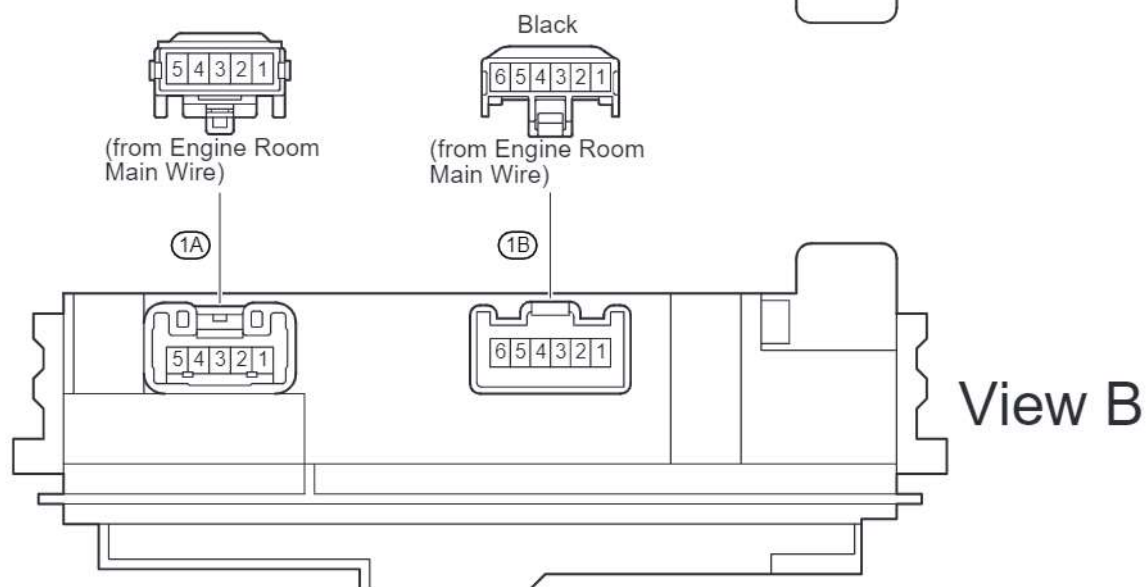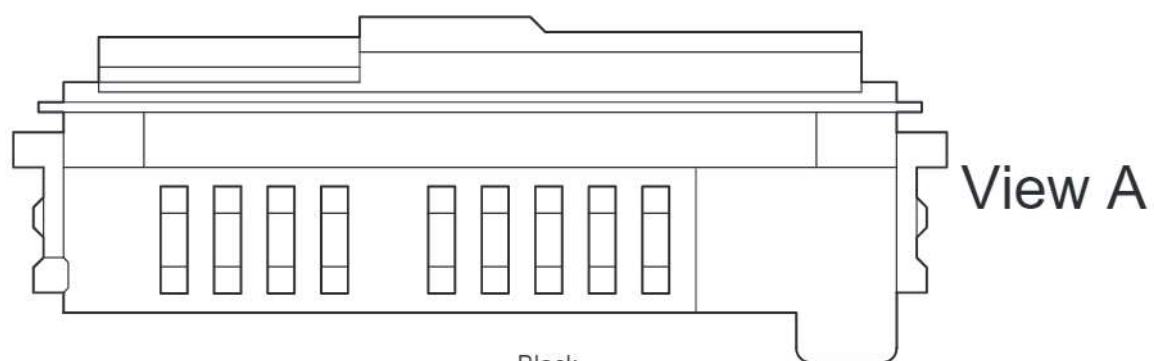


F RELAY LOCATIONS

[Engine Room R/B and Engine Room J/B Inner Circuit]

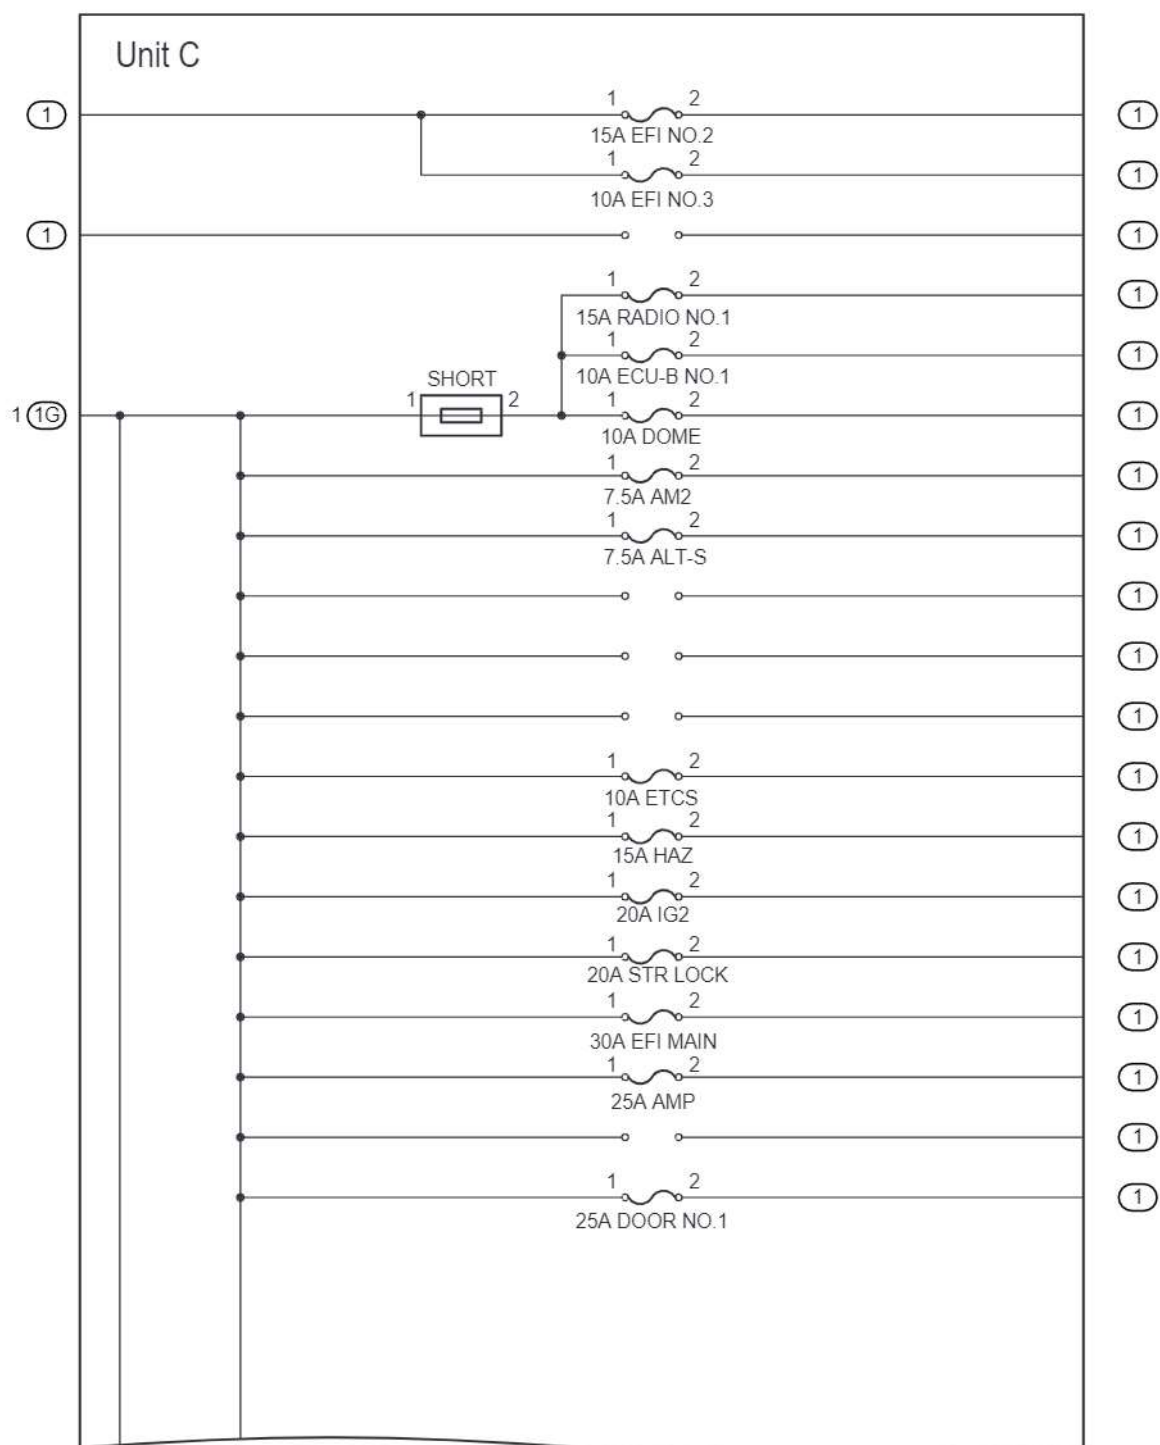

(Cont. Next Page)


(Cont'd)

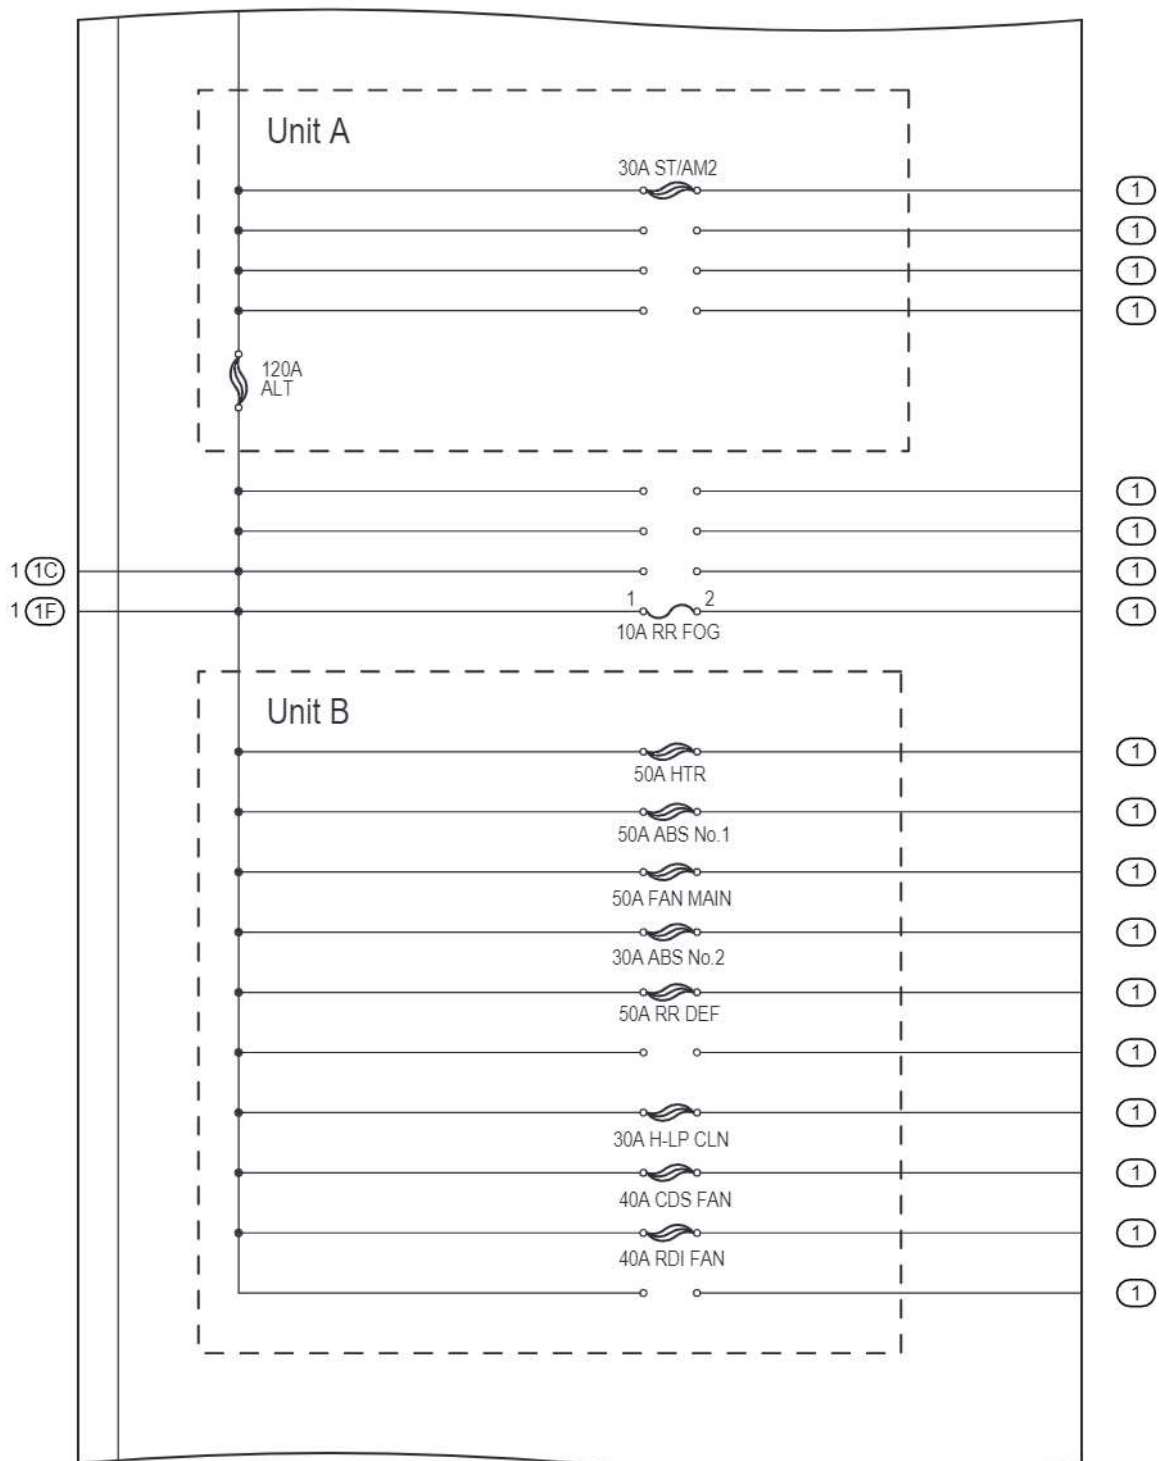


(Cont. Next Page)

[Engine Room R/B and Engine Room J/B Inner Circuit]

(Cont'd)

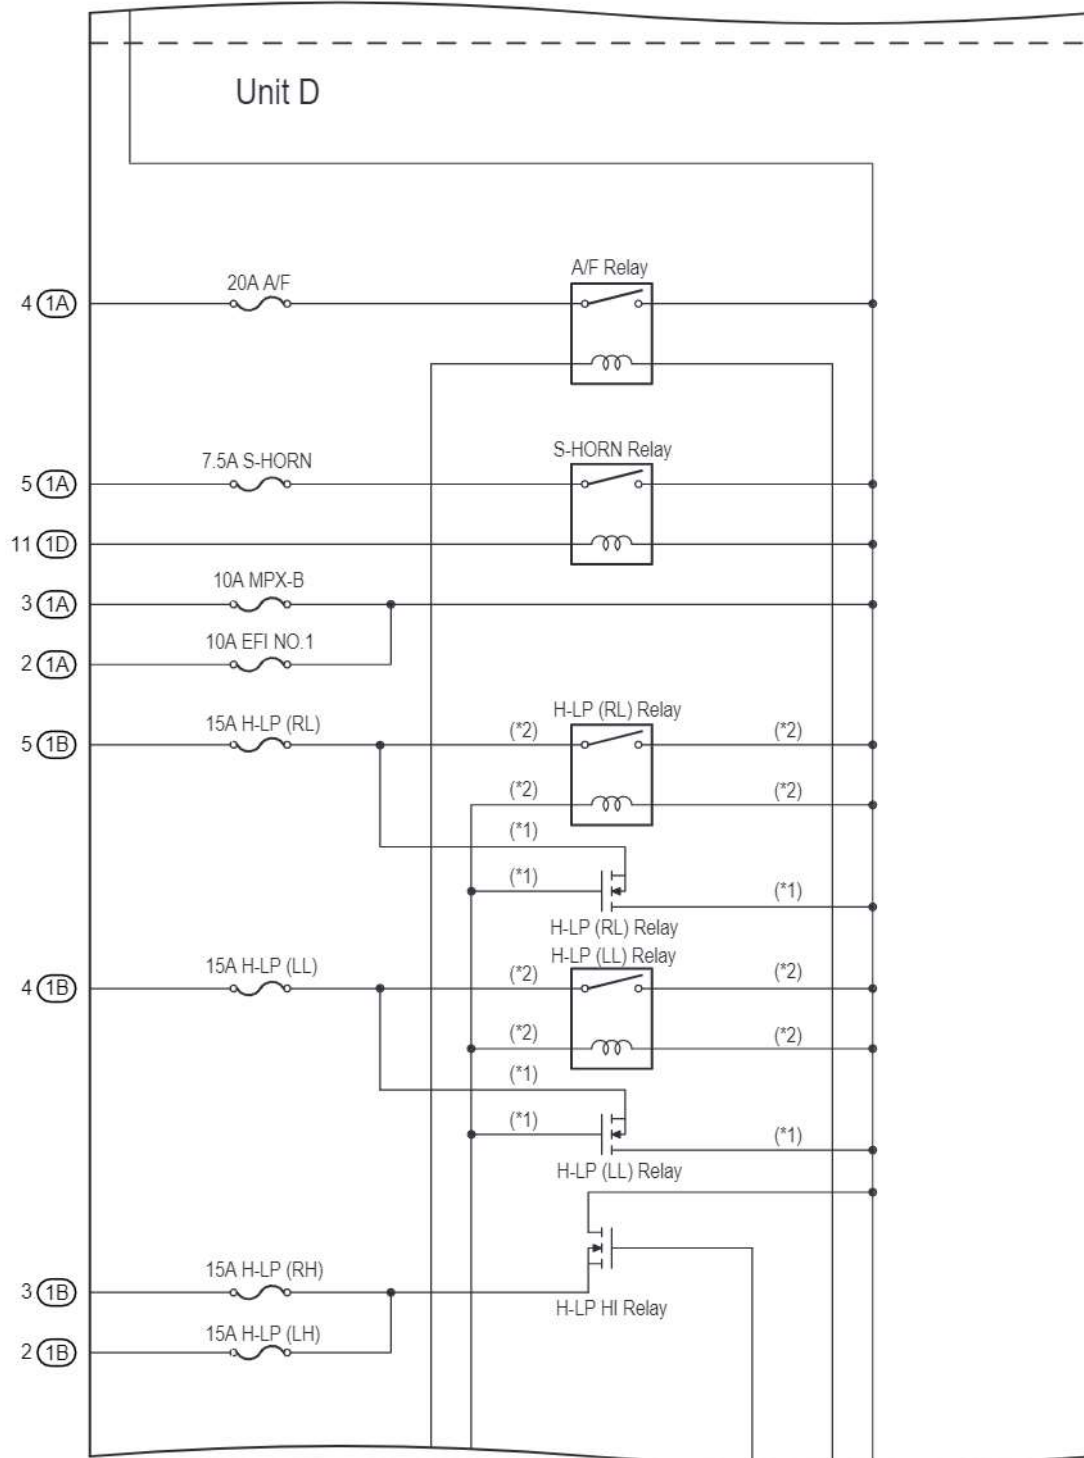


CAMRY (EM0263E)

 


F RELAY LOCATIONS

 : Instrument Panel J/B	LHD : Lower Finish Panel (See Page 21) RHD : Behind the Glove Box (See Page 21)
--	--

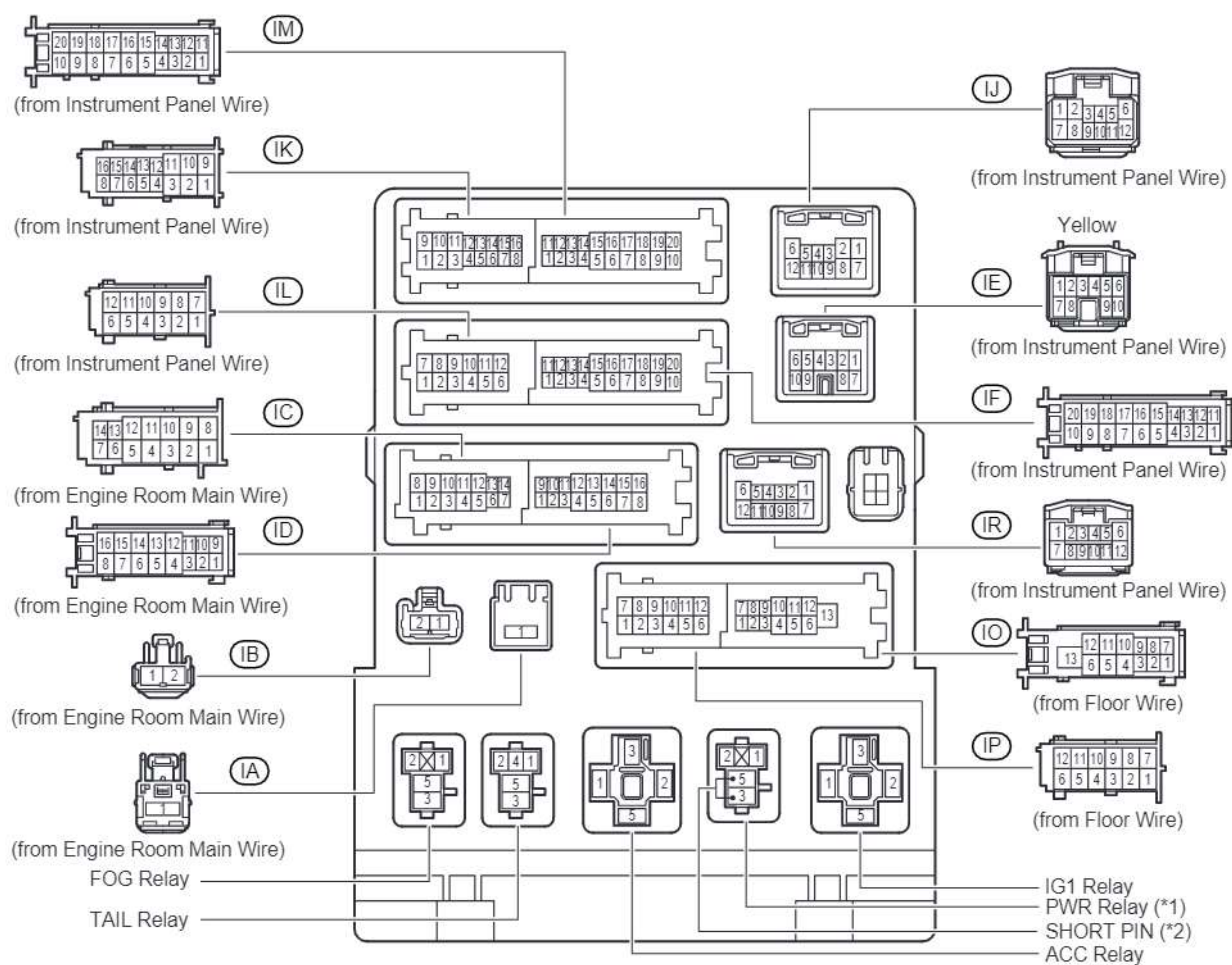


* 1:Driver's Door Only Jam Protection
 * 2:4-Door Jam Protection

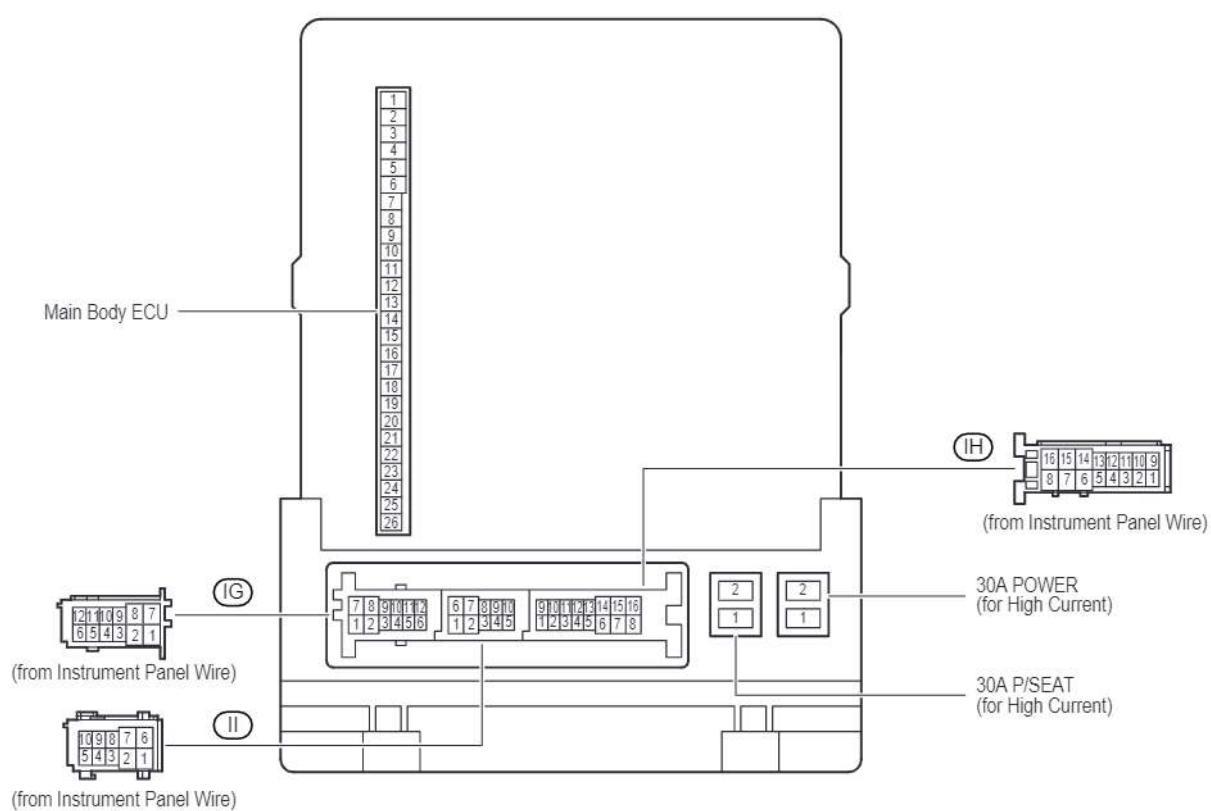


F RELAY LOCATIONS

○ : Instrument Panel J/B	LHD : Lower Finish Panel (See Page 21)
	RHD : Behind the Glove Box (See Page 21)

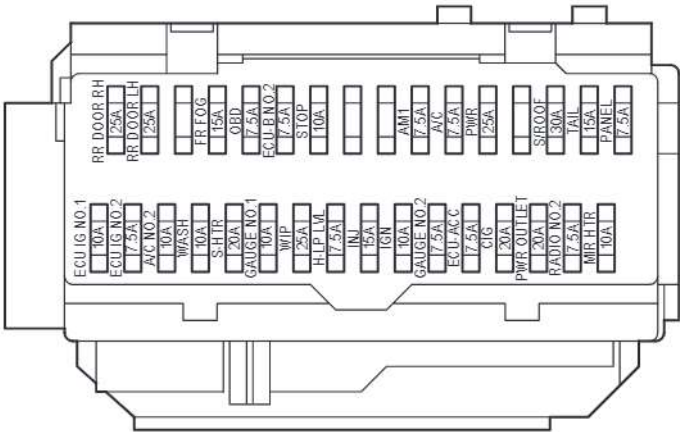

cardiagn.com

[Instrument Panel J/B Inner Circuit]

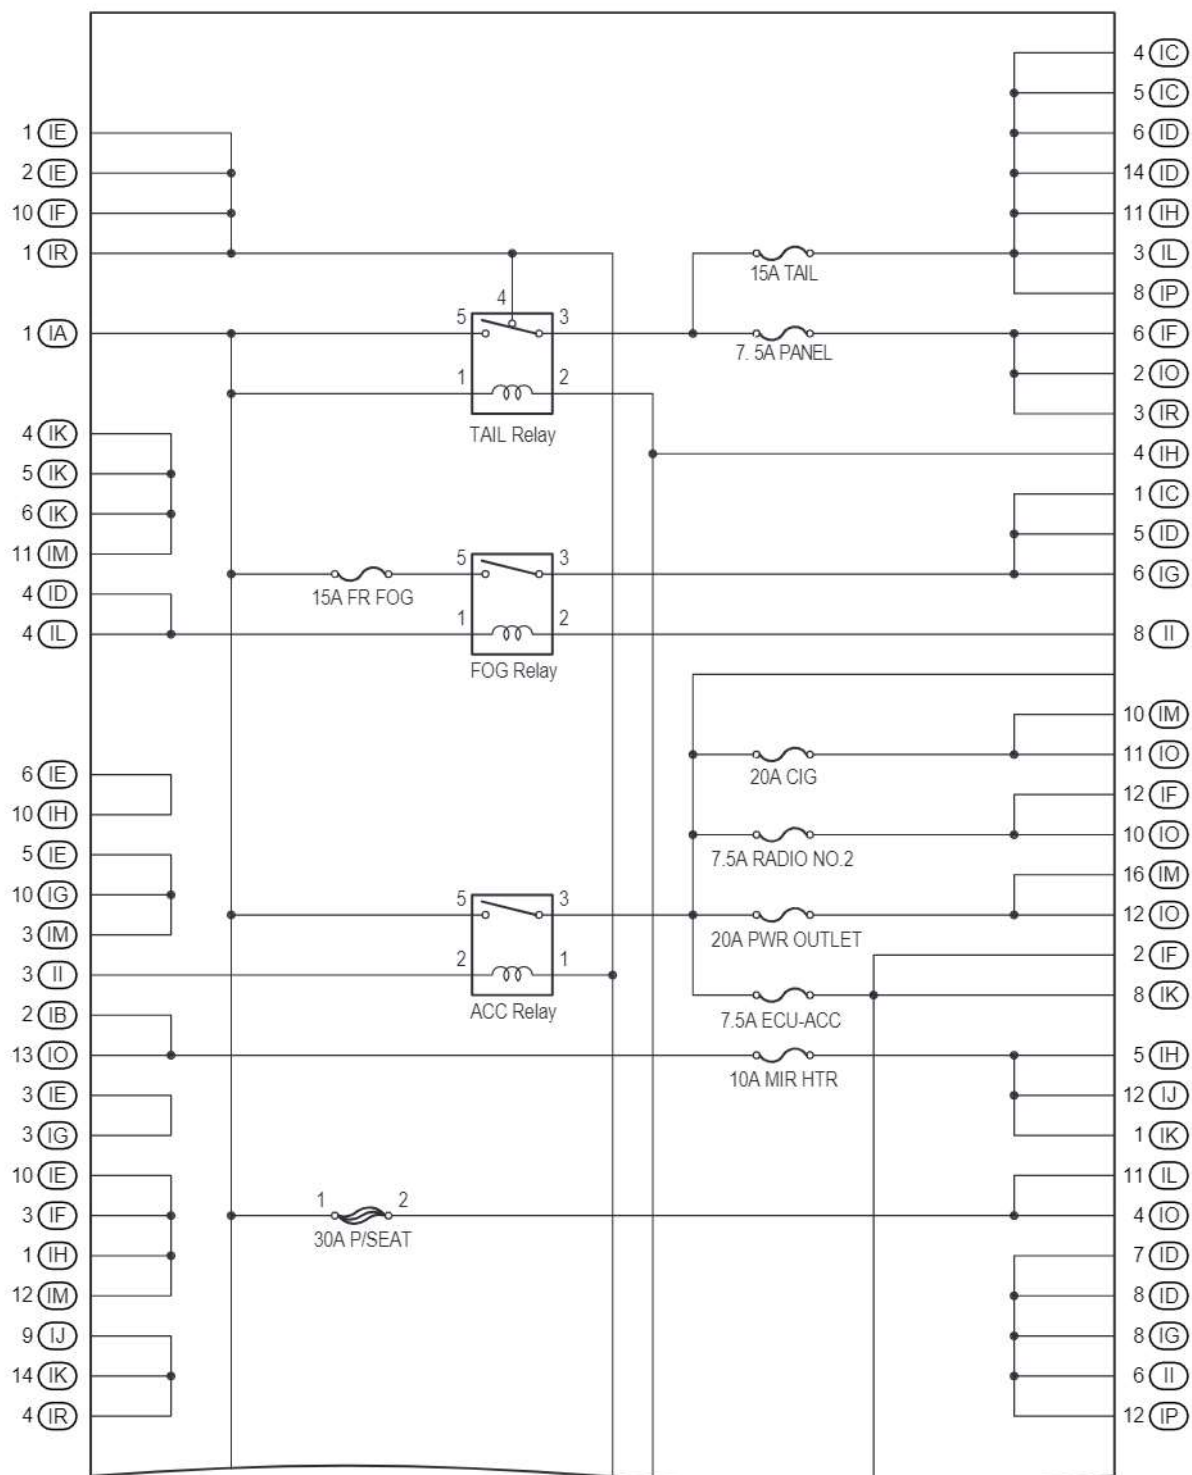


(Cont. Next Page)

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

* 1: Driver's Door Only Jam Protection
* 2: 4-Door Jam Protection


(Cont'd)

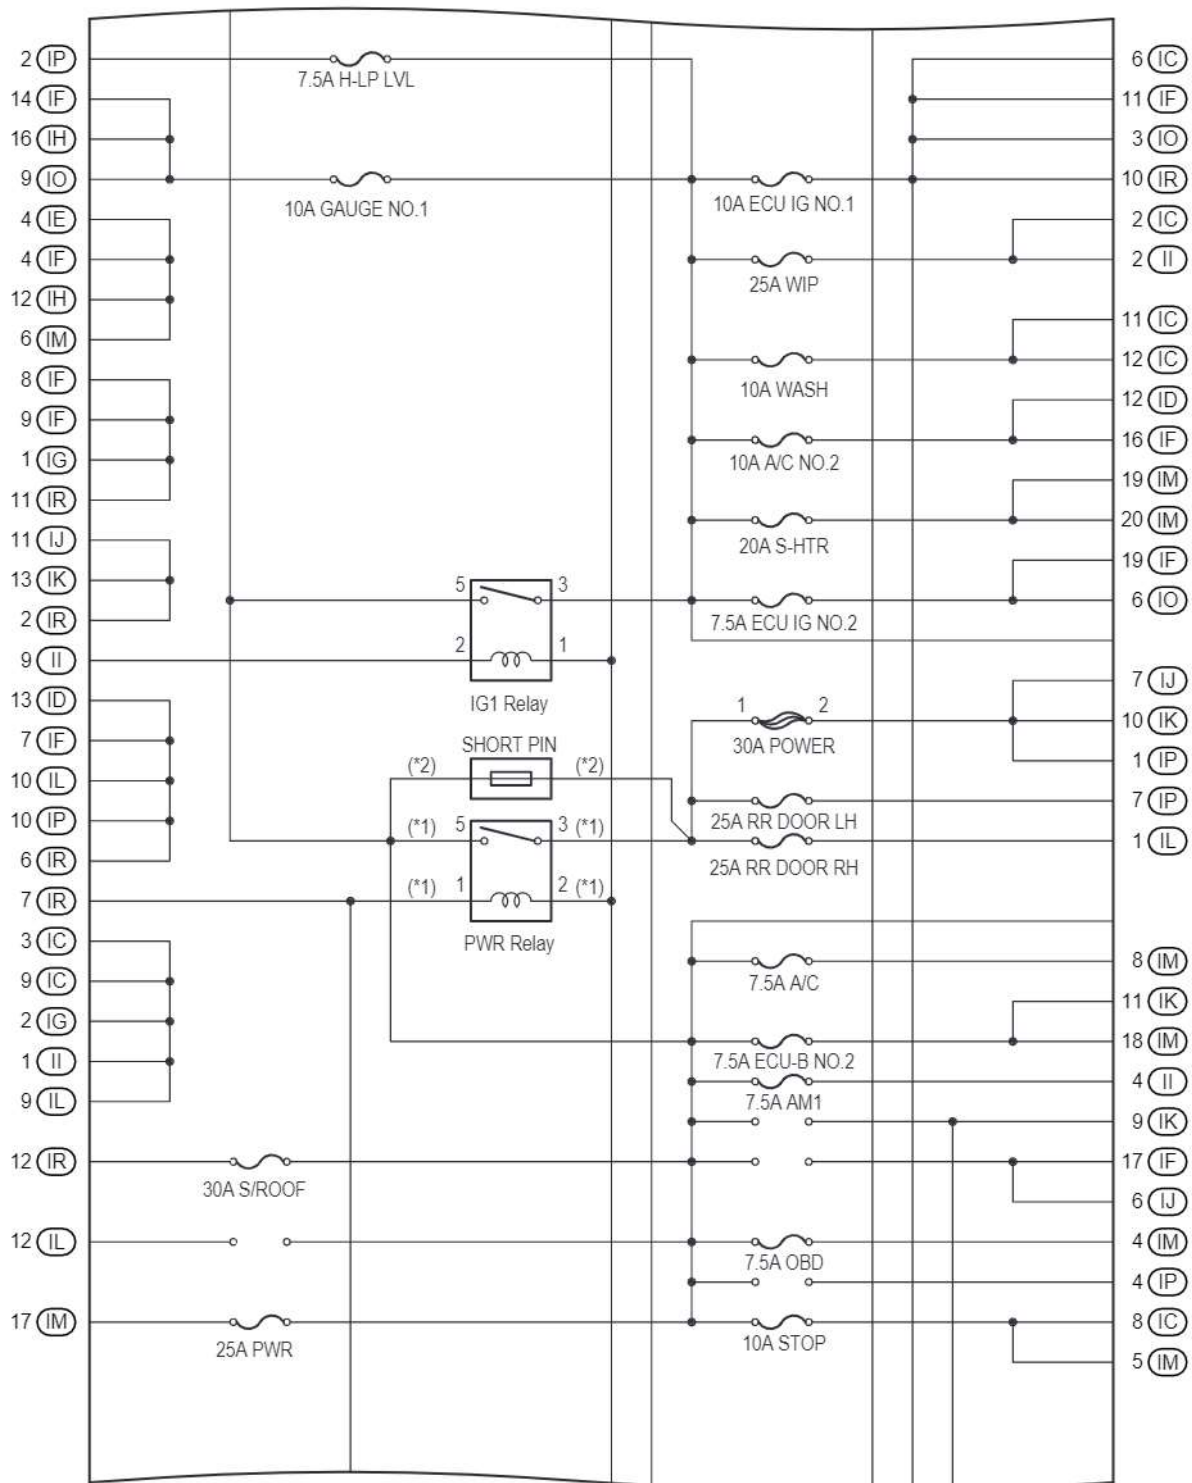

(Cont. Next Page)


* 3:w/ Entry & Start System
* 4:w/o Entry & Start System

(Cont'd)

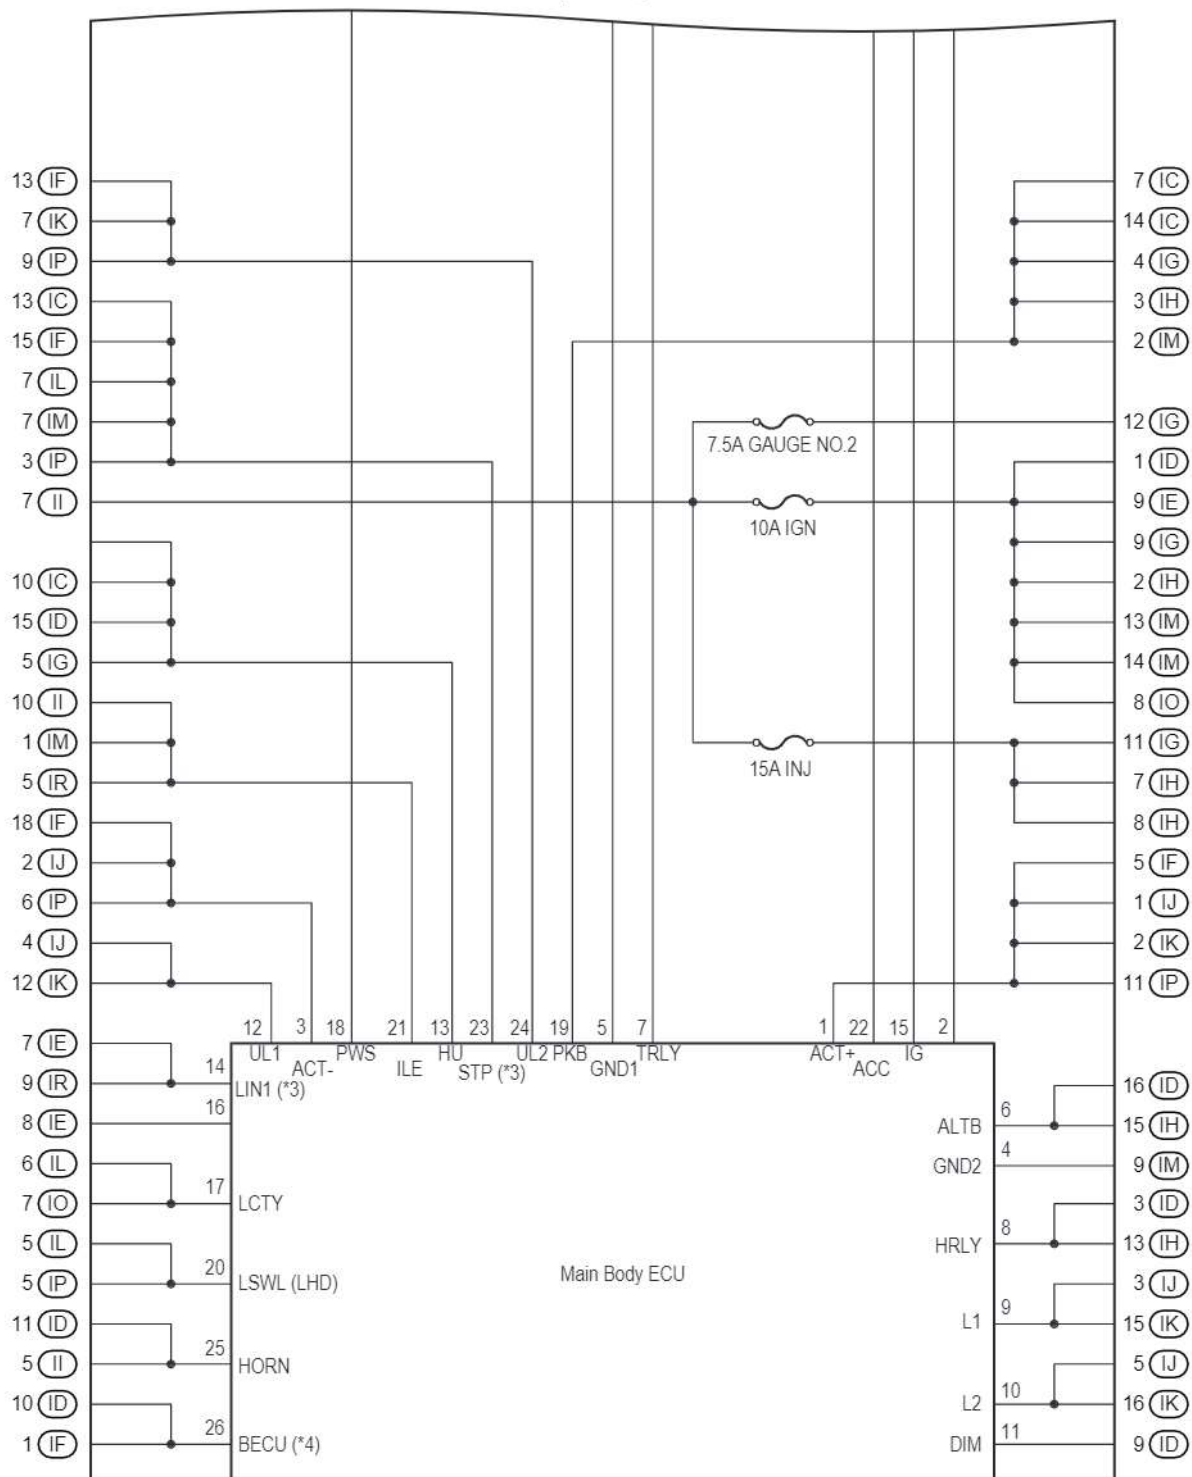


CAMRY (EM0263E)


[Instrument Panel] (LHD)

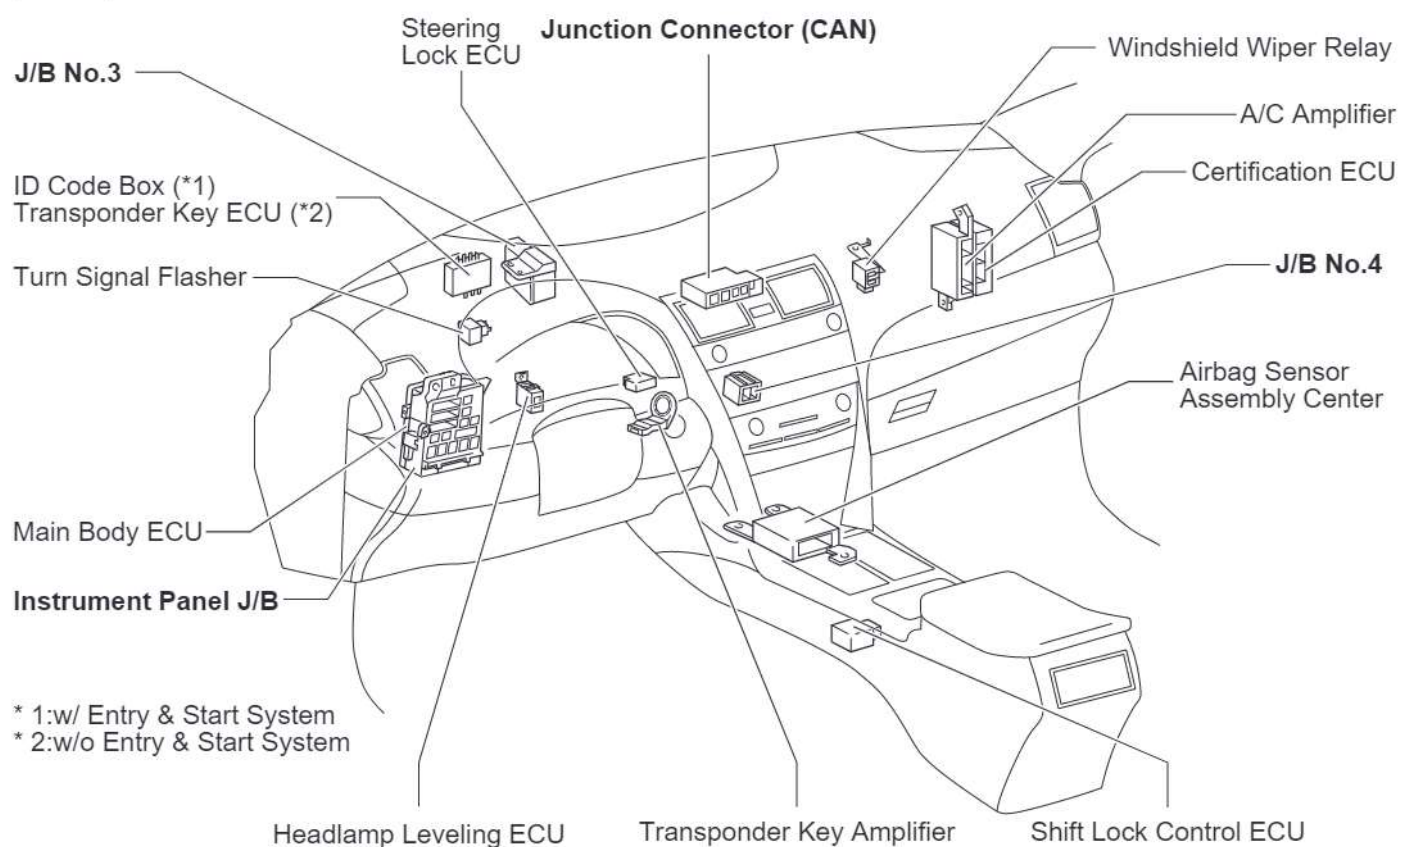


(RHD)

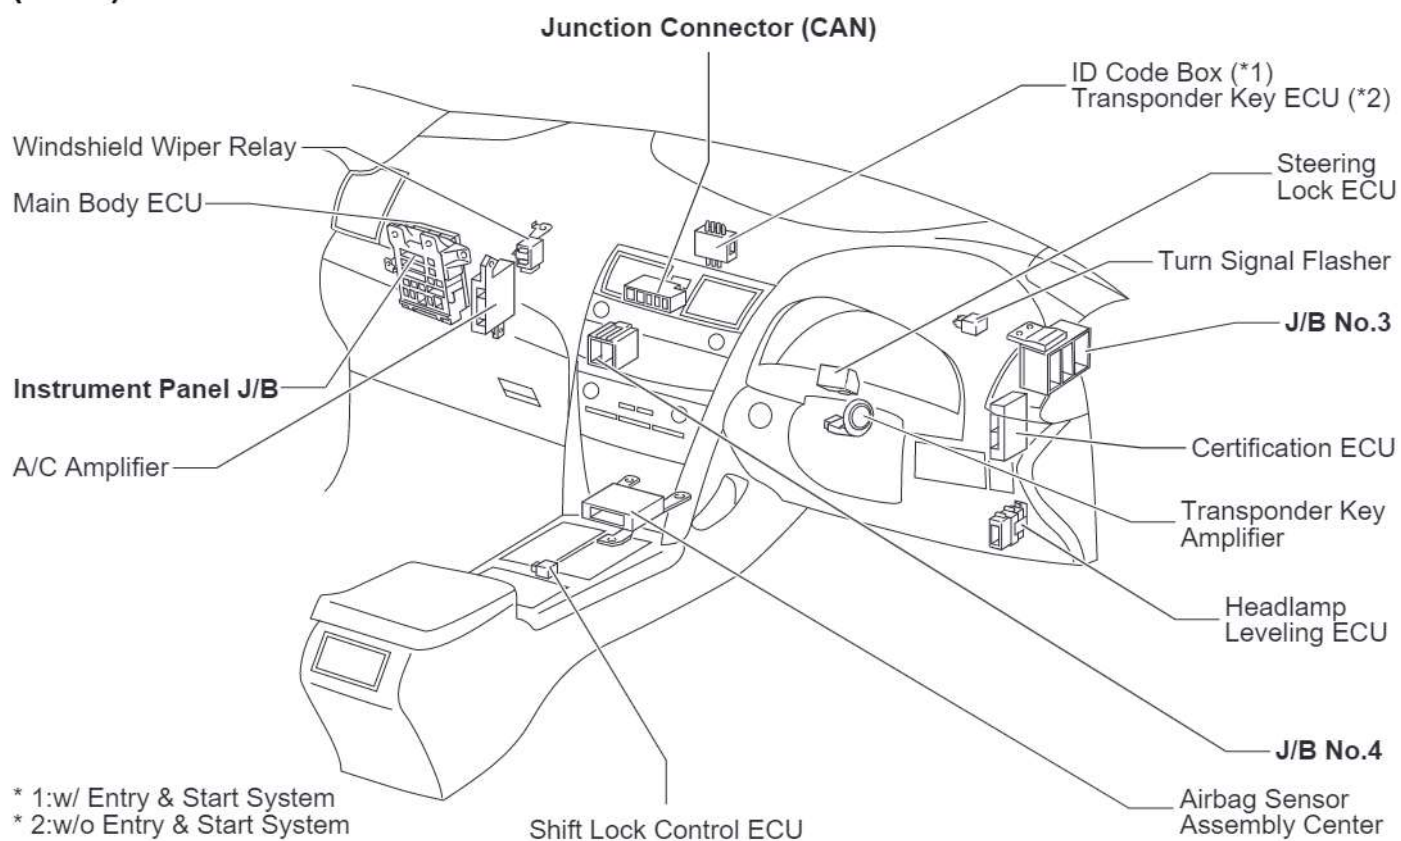

[Instrument Panel] (LHD)

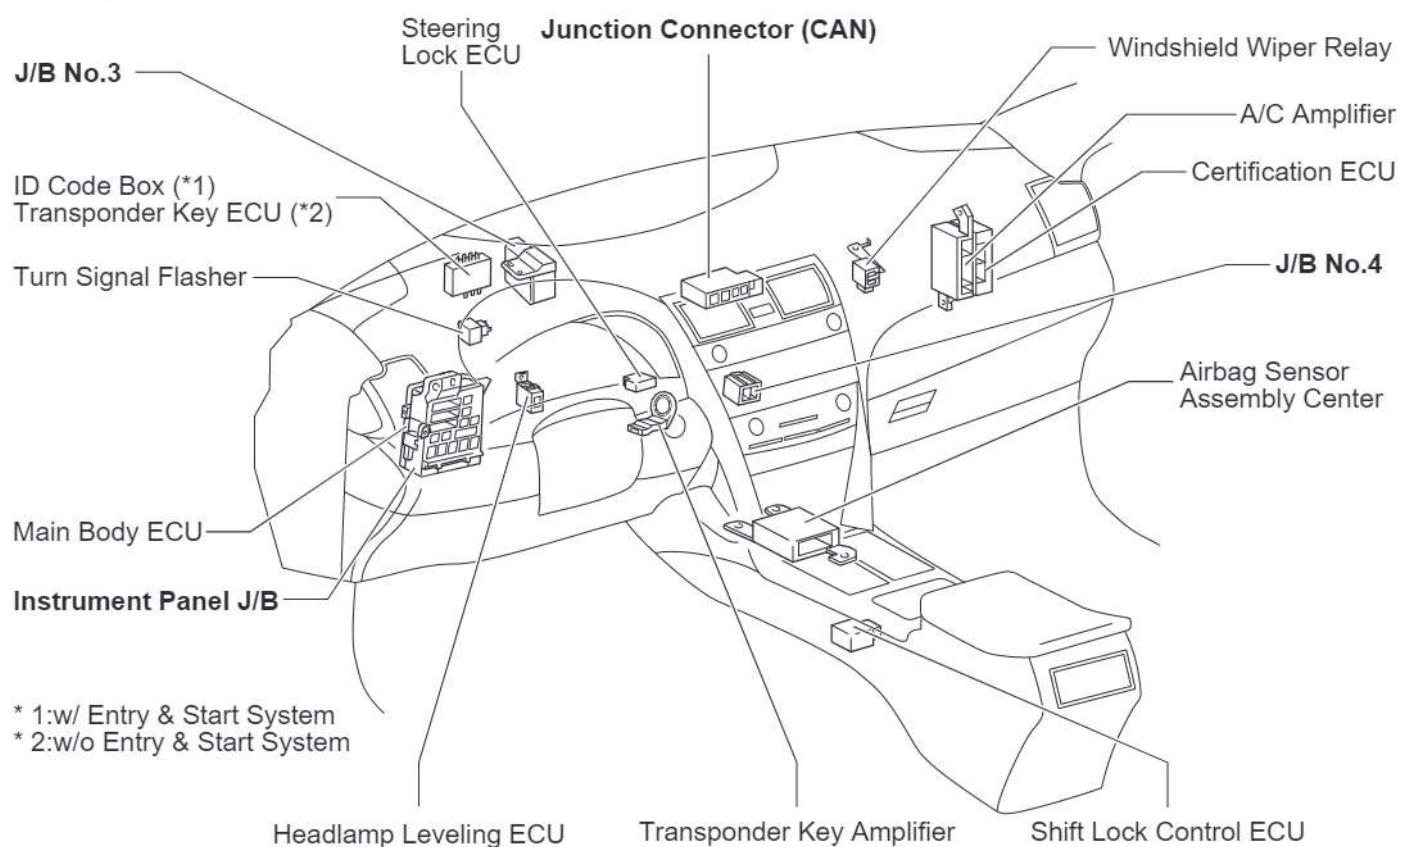


(RHD)

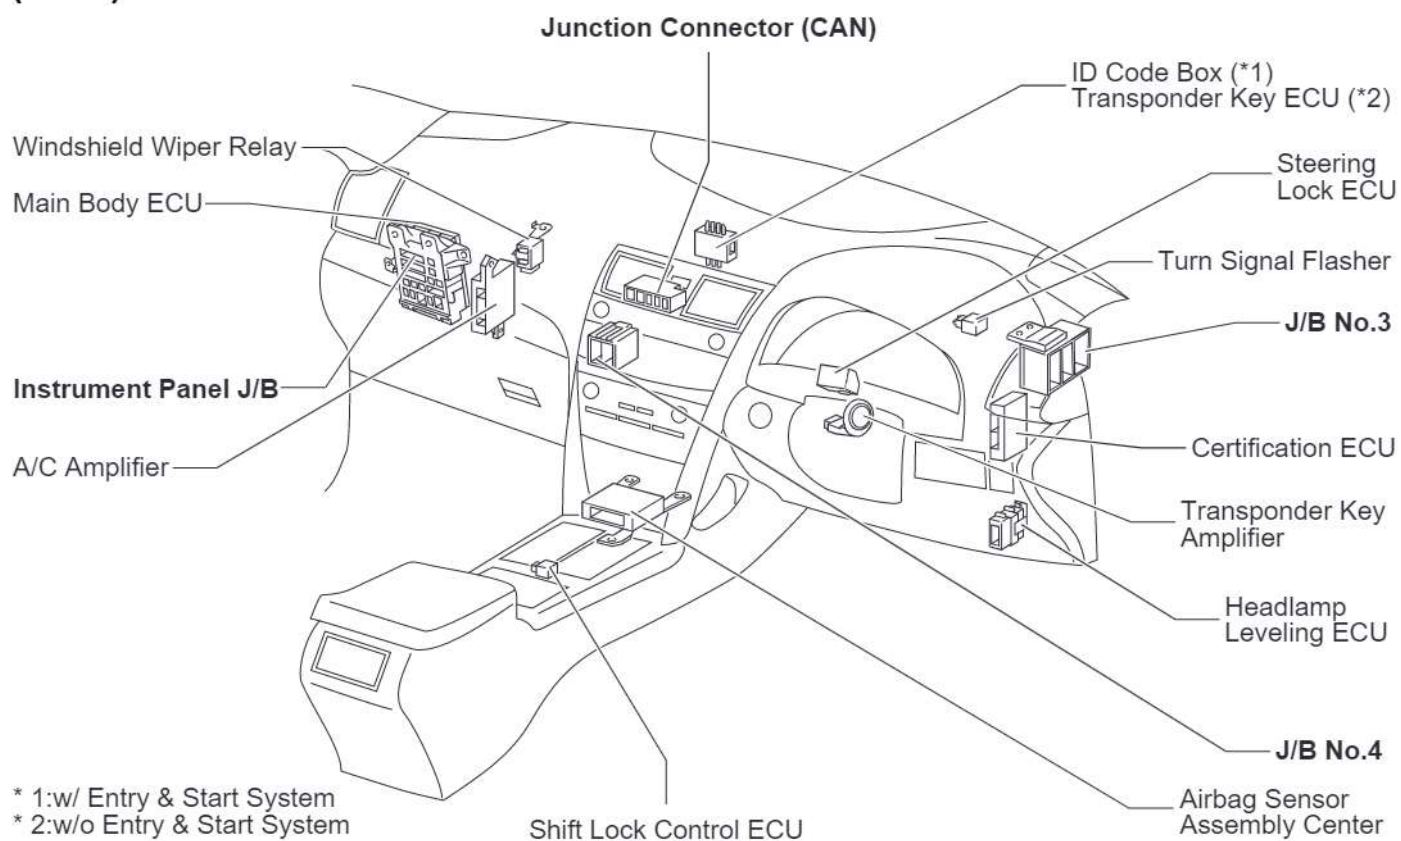

F RELAY LOCATIONS


○ : J/B No.3

Behind the Combination Meter (See Page 21)

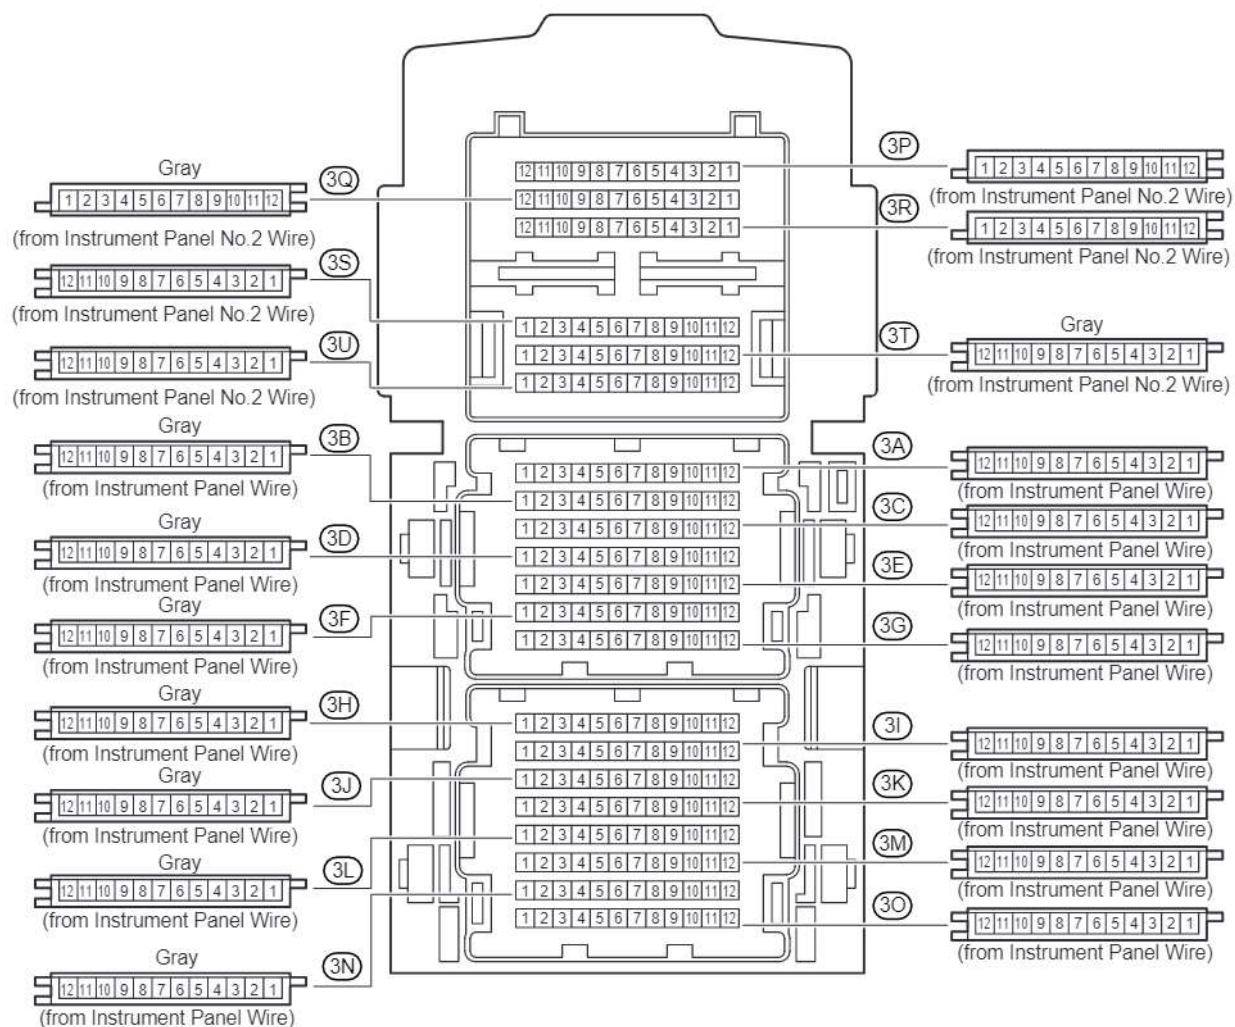


F RELAY LOCATIONS

[J/B No.3 Inner Circuit]

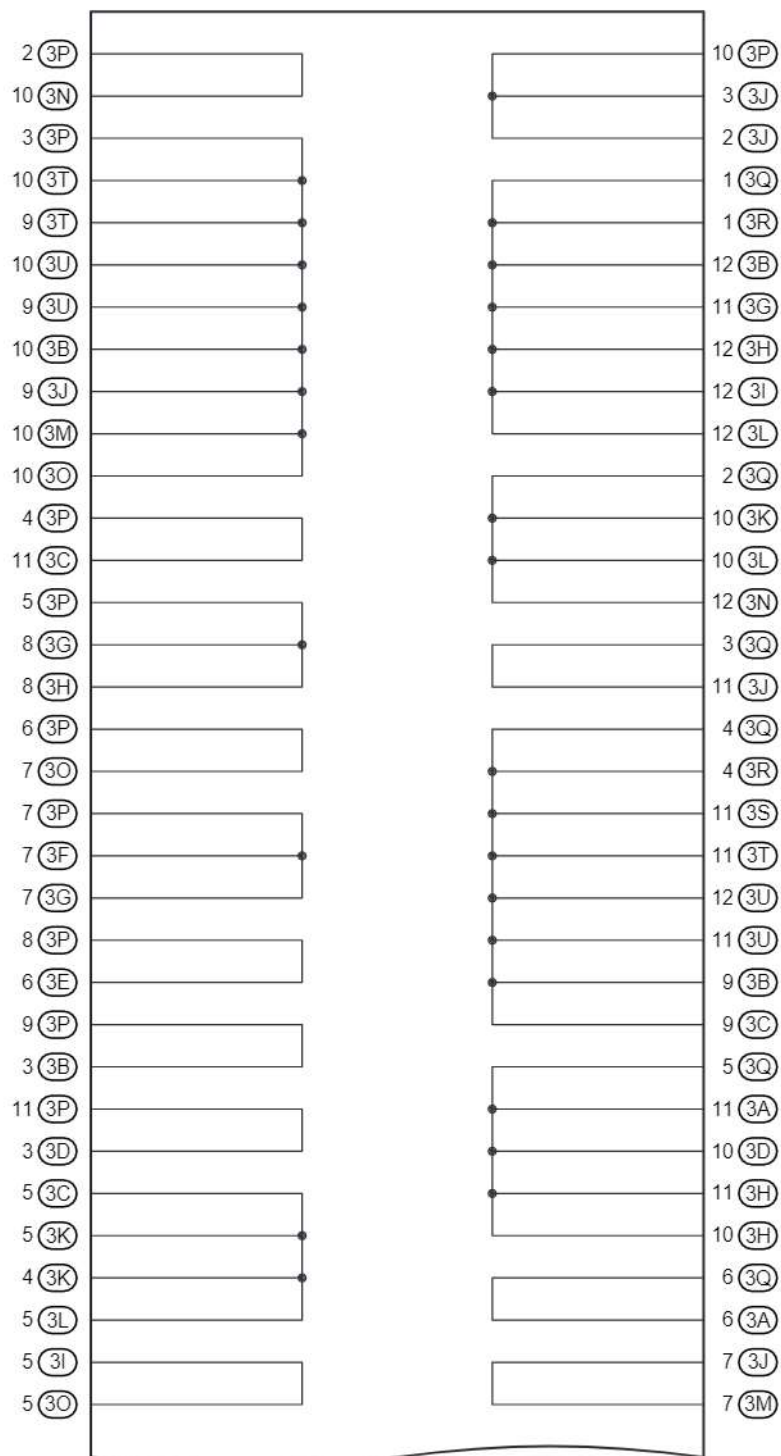

(Cont. Next Page)

(Cont'd)

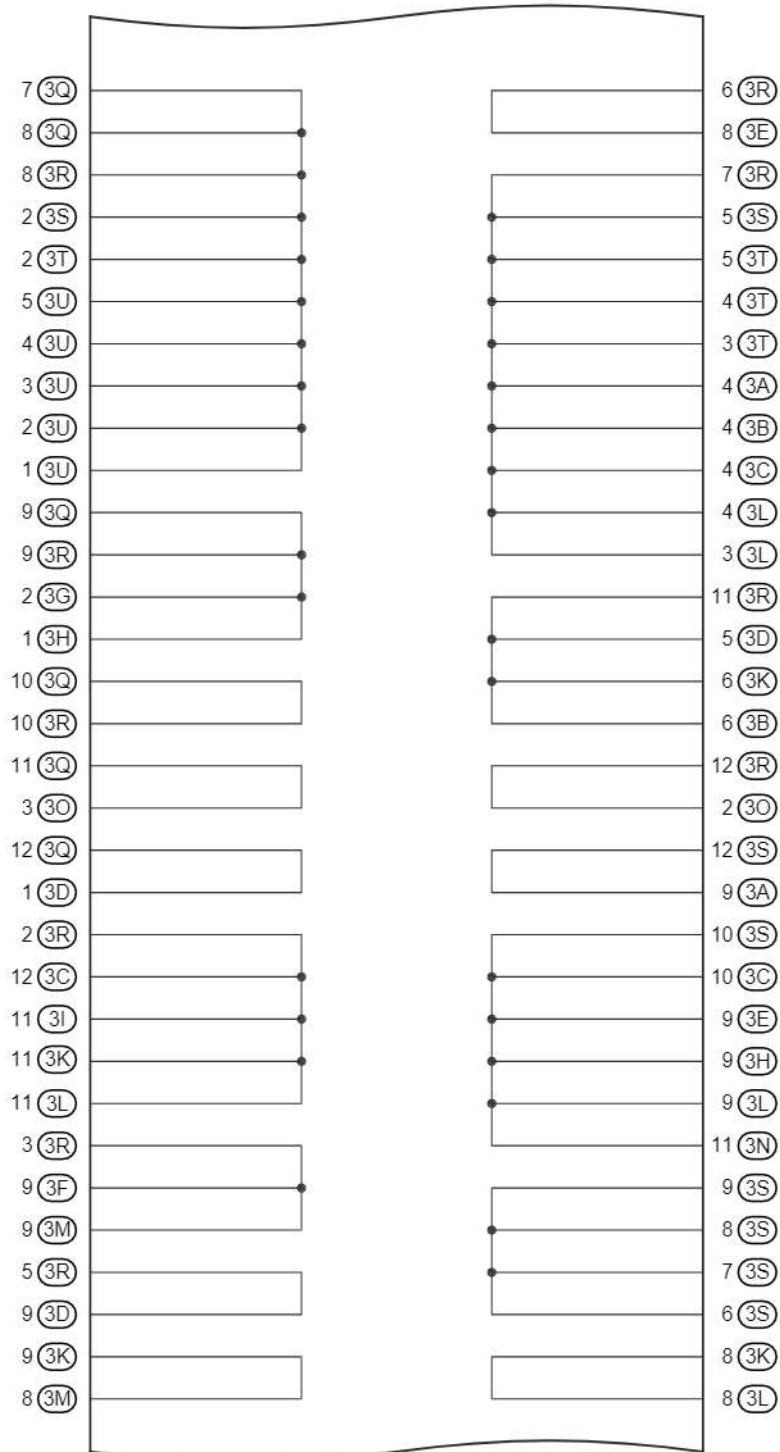


(Cont. Next Page)

F RELAY LOCATIONS

[J/B No.3 Inner Circuit]

(Cont'd)

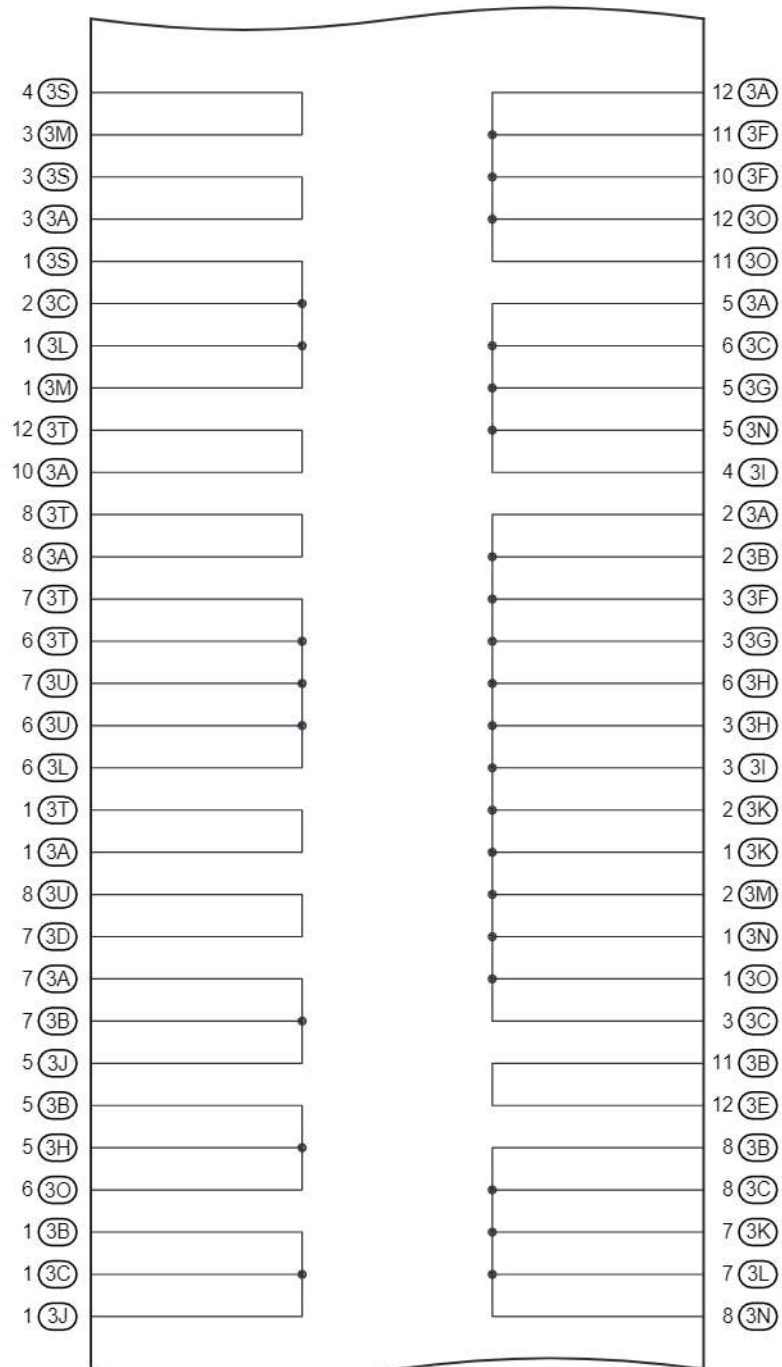

(Cont. Next Page)


(Cont'd)

7 (3C)						12 (3F)
7 (3I)						12 (3J)
6 (3N)						12 (3K)
12 (3D)						8 (3F)
6 (3M)						9 (3O)
11 (3D)						8 (3O)
11 (3M)						4 (3F)
8 (3D)						4 (3J)
6 (3D)						2 (3F)
7 (3E)						3 (3N)
6 (3F)						1 (3F)
6 (3J)						2 (3L)
4 (3D)						12 (3G)
4 (3O)						9 (3N)
2 (3D)						10 (3G)
2 (3N)						10 (3I)
11 (3E)						9 (3G)
10 (3J)						4 (3G)
10 (3E)						9 (3I)
12 (3M)						6 (3G)
5 (3E)						6 (3I)
5 (3F)						1 (3G)
4 (3E)						2 (3I)
4 (3H)						1 (3I)
3 (3E)						7 (3H)
3 (3K)						8 (3J)
2 (3E)						2 (3H)
4 (3M)						5 (3M)
1 (3E)						8 (3I)
4 (3N)						7 (3N)


F RELAY LOCATIONS

○ : J/B No.4

Instrument Panel Brace Center (See Page 21)

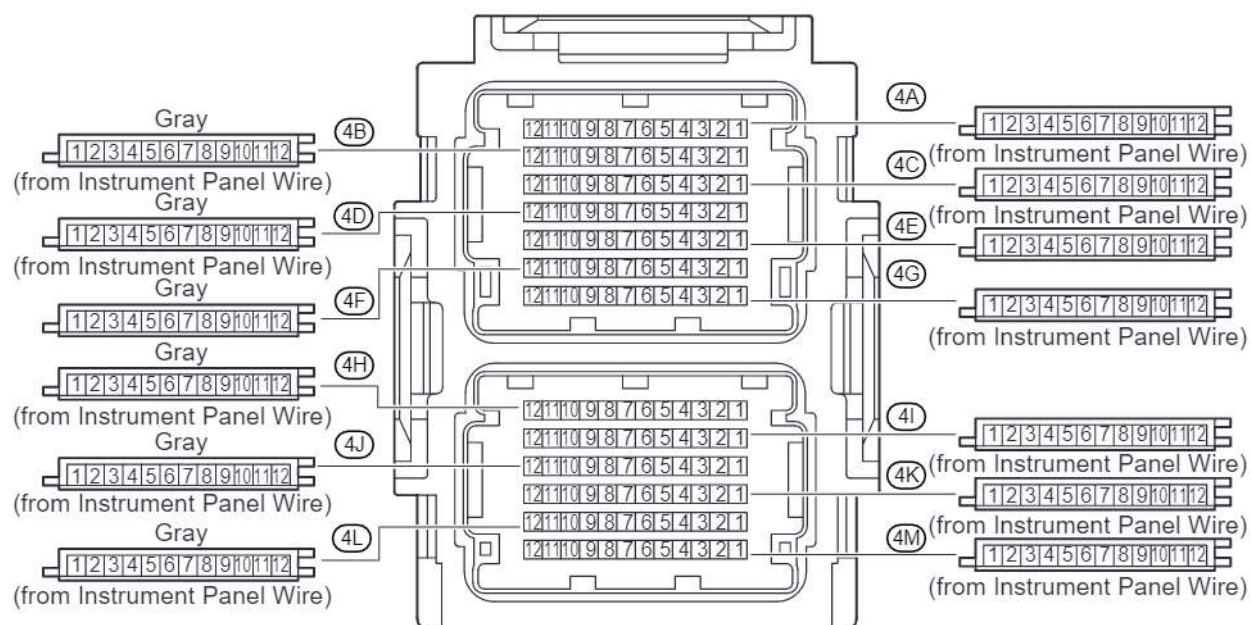


[J/B No.4 Inner Circuit]

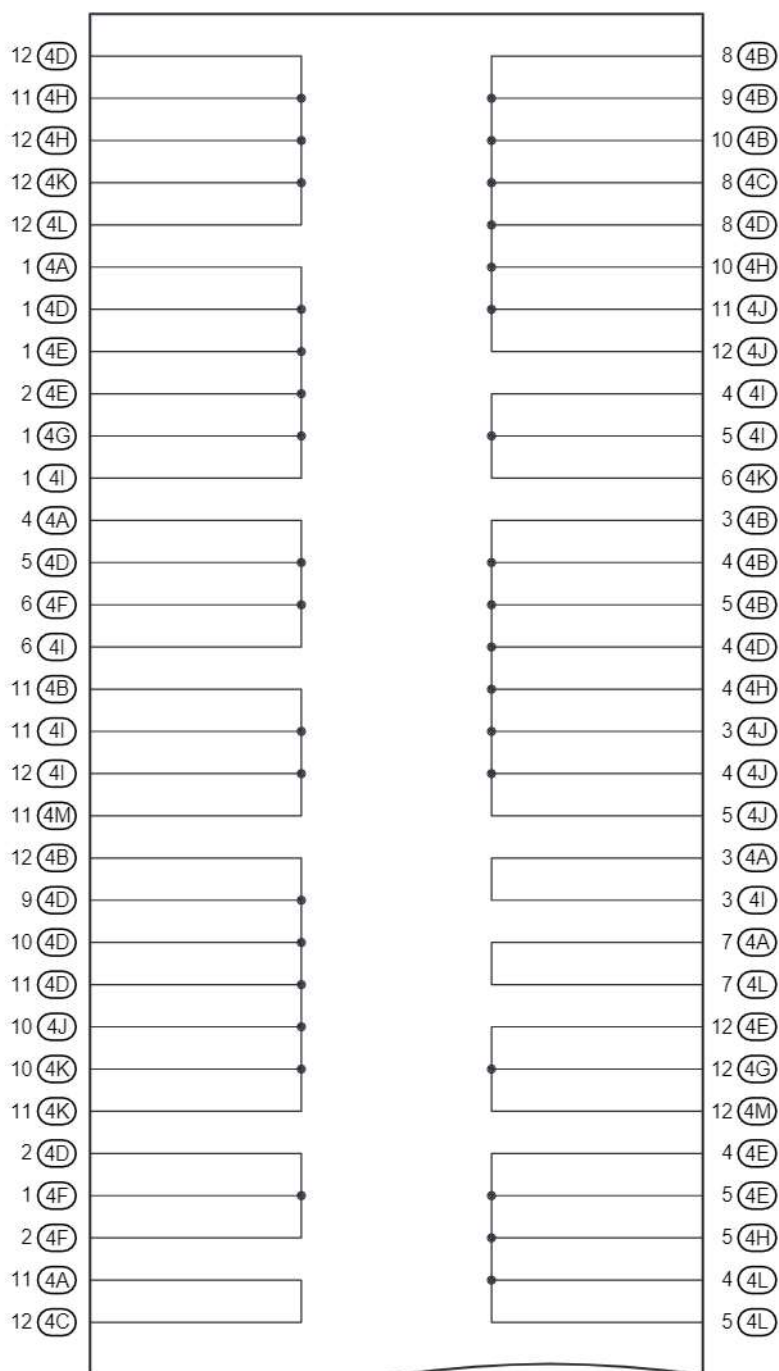

(Cont. Next Page)

F RELAY LOCATIONS

[J/B No.4 Inner Circuit]

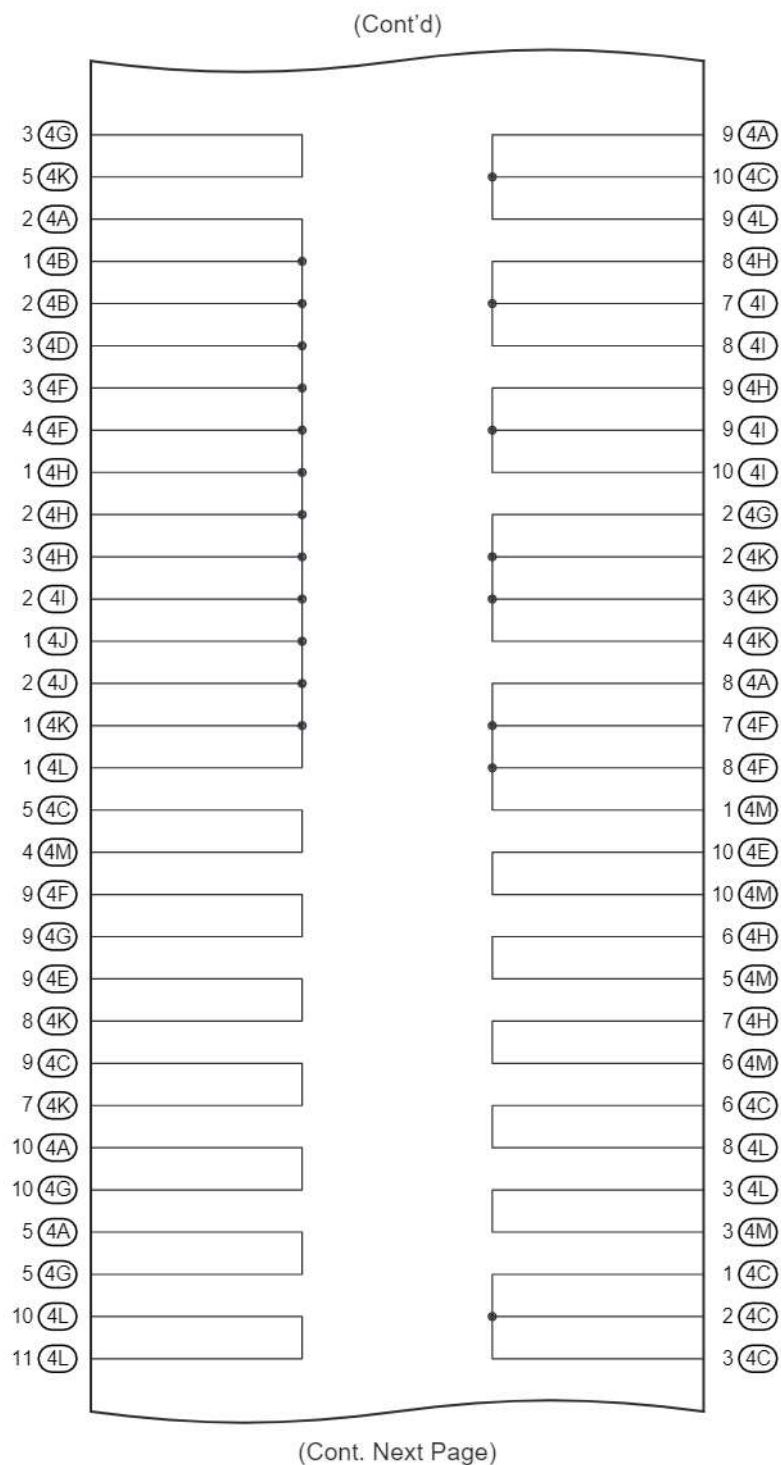


(Cont'd)

9 (4J)			4 (4C)
9 (4M)			5 (4F)
6 (4J)			6 (4E)
6 (4L)			6 (4G)
8 (4J)			11 (4F)
8 (4M)			9 (4K)
7 (4J)			12 (4A)
7 (4M)			12 (4F)
8 (4E)			2 (4L)
8 (4G)			2 (4M)
7 (4E)			6 (4A)
7 (4G)			6 (4B)
11 (4E)			7 (4B)
11 (4G)			7 (4C)
3 (4E)			6 (4D)
4 (4G)			7 (4D)
11 (4C)			
10 (4F)			

F RELAY LOCATIONS

Junction Connector (CAN)


Instrument Panel Center (See Page 21)

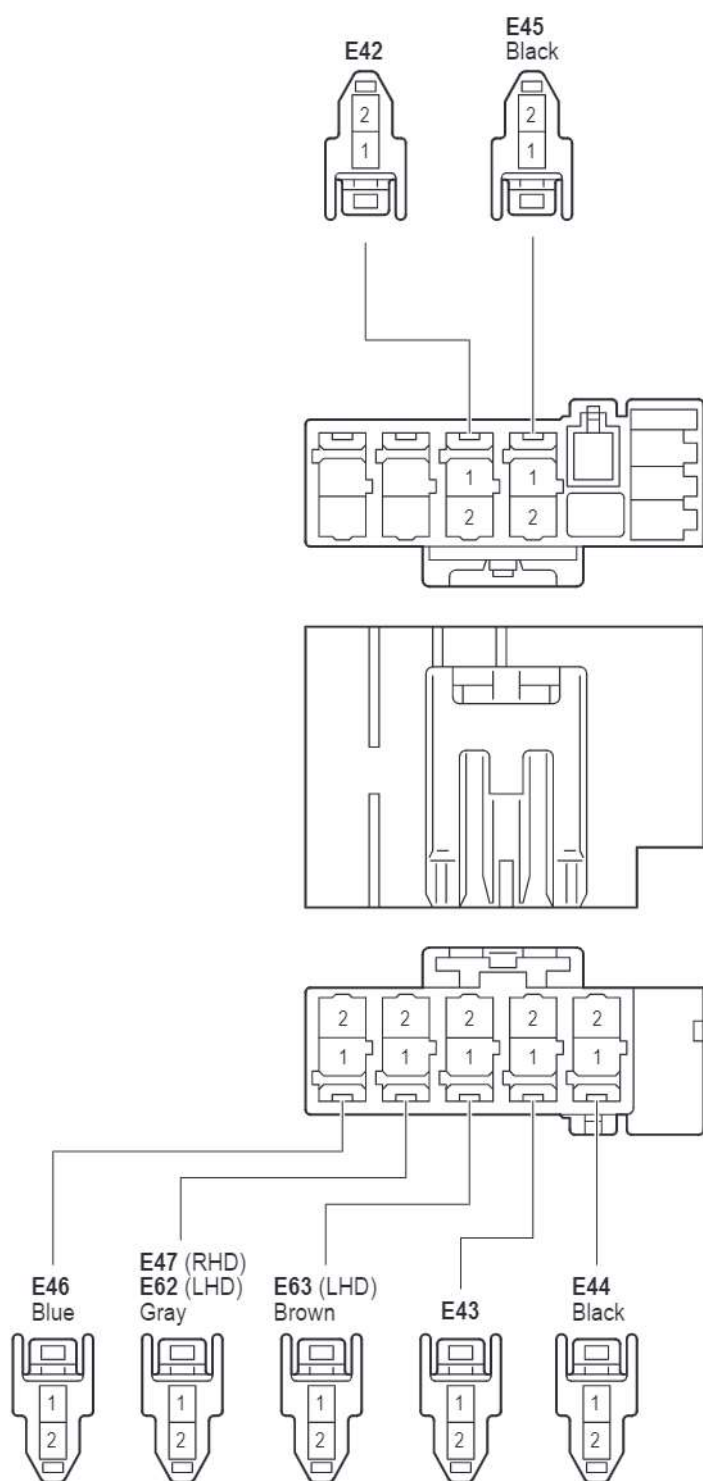

CAMRY (EM0263E)

[Junction Connector (CAN) Inner Circuit]


E42(A), E43(B), E44(C), E45(D),
E46(E), E47(F), E62(G), E63(H)
Junction Connector

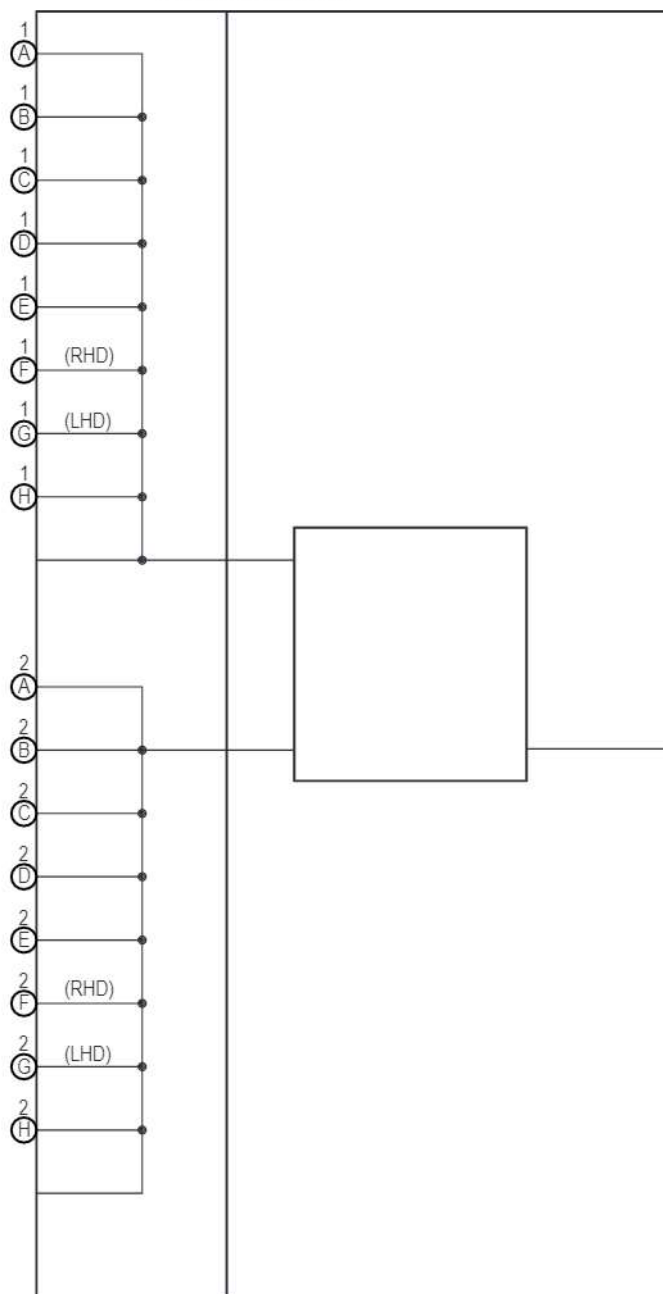

F RELAY LOCATIONS

Junction Connector (CAN No.3)

Luggage Compartment Right (See Page 22)

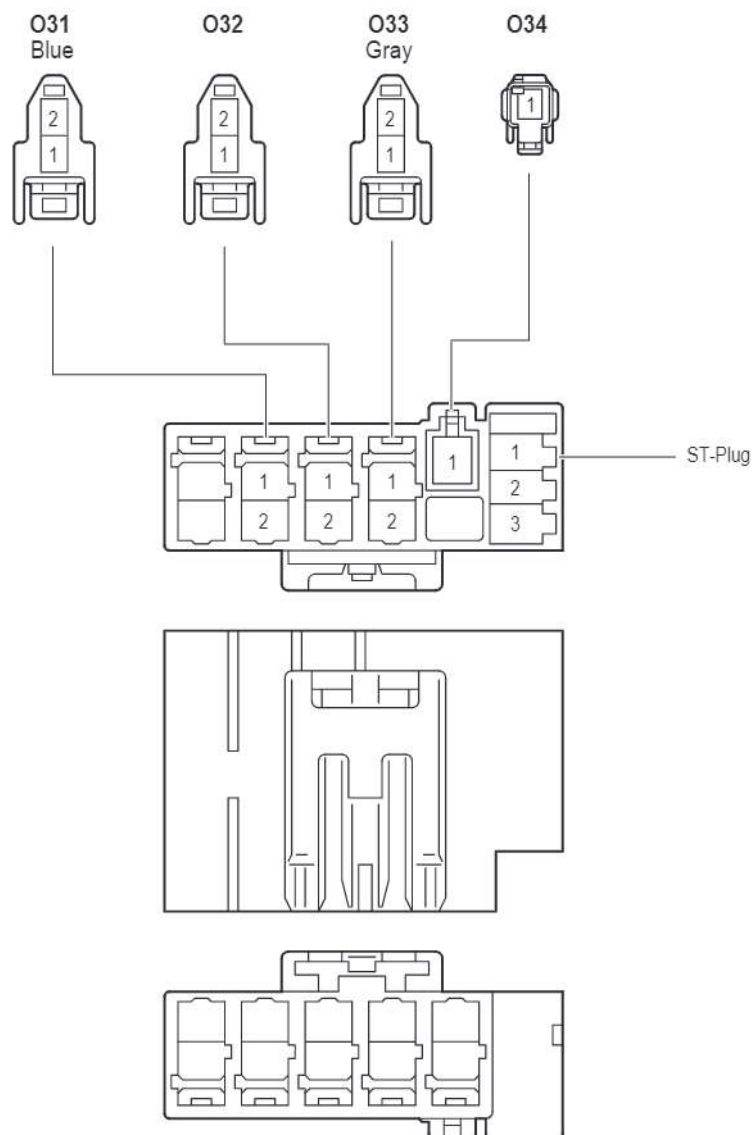

[Junction Connector (CAN No.3) Inner Circuit]