

23.A/C Filter

A: REPLACEMENT

For the A/C filter replacement procedures, refer to the AC section. <Ref. to AC-53, REPLACEMENT, A/C Filter.>

ENGINE SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)**FU(H6DO)****EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)****EC(H6DO)****INTAKE (INDUCTION)****IN(H6DO)****MECHANICAL****ME(H6DO)****EXHAUST****EX(H6DO)****COOLING****CO(H6DO)****LUBRICATION****LU(H6DO)****SPEED CONTROL SYSTEMS****SP(H6DO)****IGNITION****IG(H6DO)****STARTING/CHARGING SYSTEMS****SC(H6DO)****ENGINE (DIAGNOSTICS)****EN(H6DO)(diag)****GENERAL DESCRIPTION****GD(H6DO)**

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

	Page
1. General Description	2
2. Throttle Body	15
3. Intake Manifold	16
4. Engine Coolant Temperature Sensor	22
5. Crankshaft Position Sensor	23
6. Camshaft Position Sensor	24
7. Knock Sensor	25
8. Throttle Position Sensor	26
9. Manifold Absolute Pressure Sensor	27
10. Mass Air Flow and Intake Air Temperature Sensor	28
11. EGR Valve	29
12. Fuel Injector	30
13. Oil Flow Control Solenoid Valve	32
14. Oil Temperature Sensor	33
15. Front Oxygen (A/F) Sensor	34
16. Rear Oxygen Sensor	36
17. Engine Control Module (ECM)	38
18. Main Relay	39
19. Fuel Pump Relay	40
20. Electronic Throttle Control Relay	41
21. Fuel Pump Control Unit	42
22. Fuel	43
23. Fuel Tank	45
24. Fuel Filler Pipe	48
25. Fuel Pump	50
26. Fuel Level Sensor	52
27. Fuel Sub Level Sensor	53
28. Fuel Filter	54
29. Fuel Delivery & Evaporation Lines	58
30. Fuel System Trouble in General	61