



D RELAY LOCATIONS


[Engine Compartment]

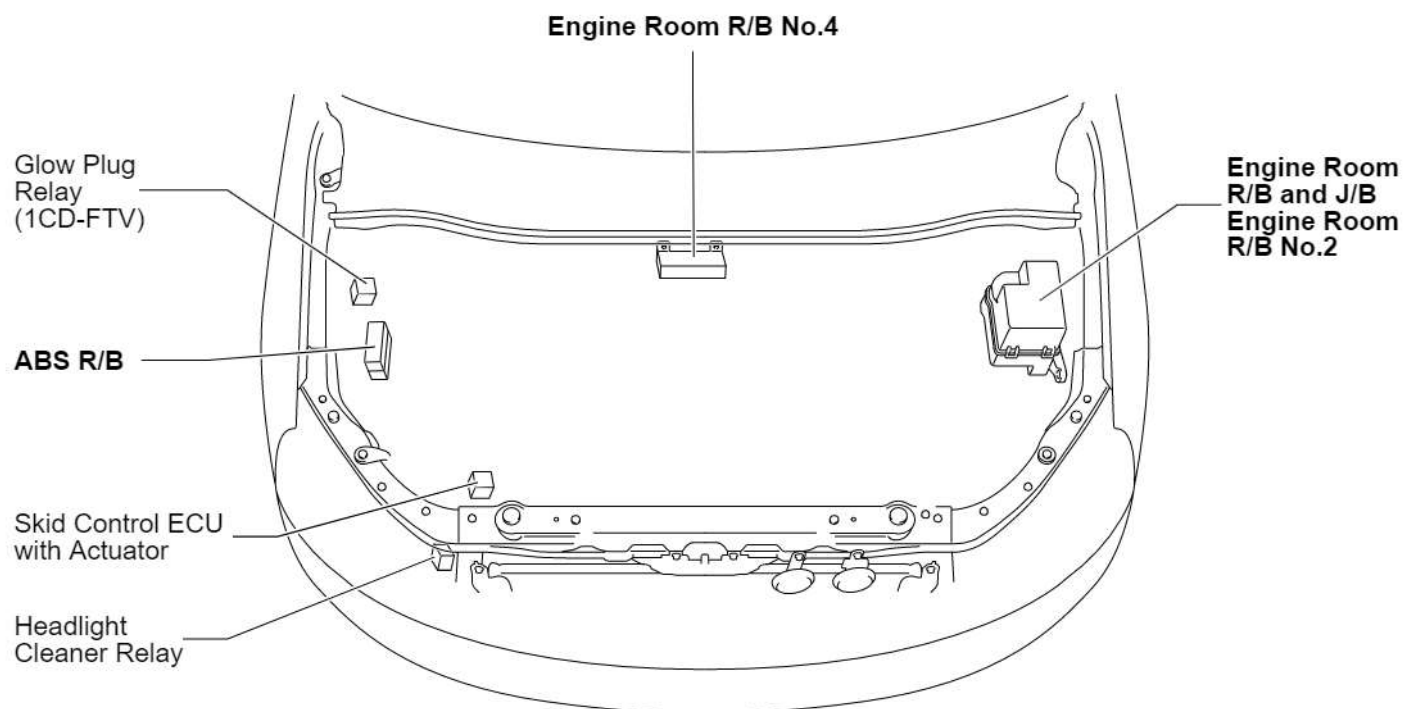


[Body]

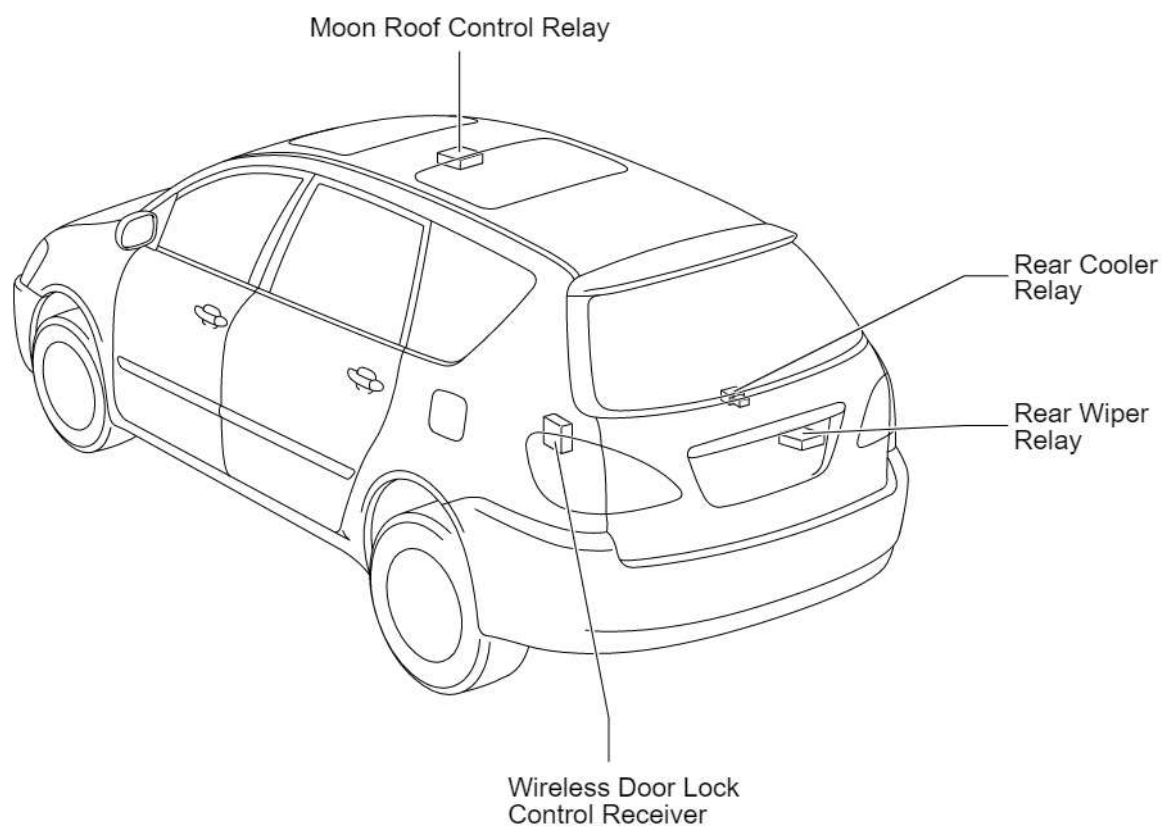

[Instrument Panel] (LHD)

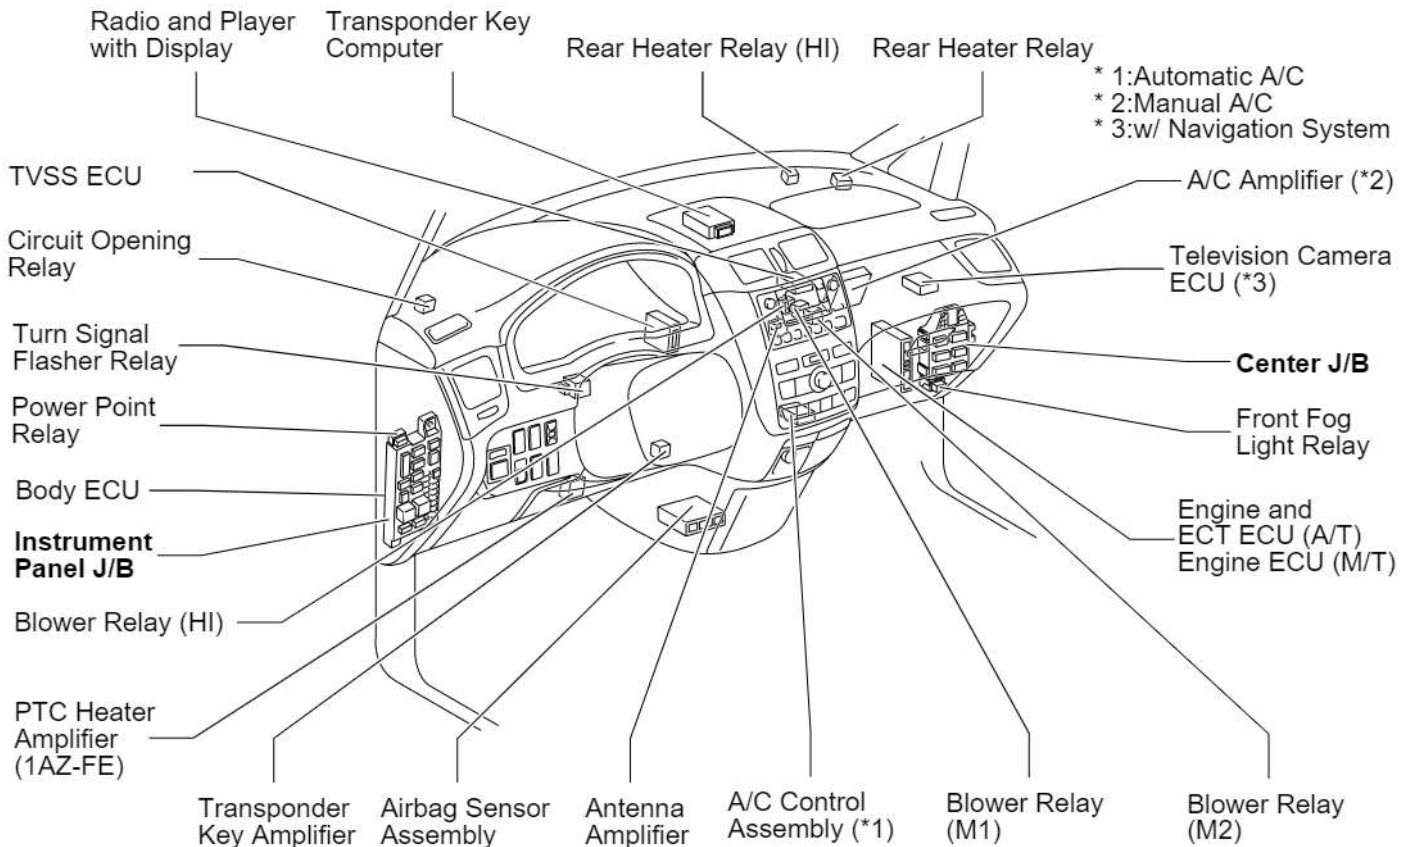

(RHD)

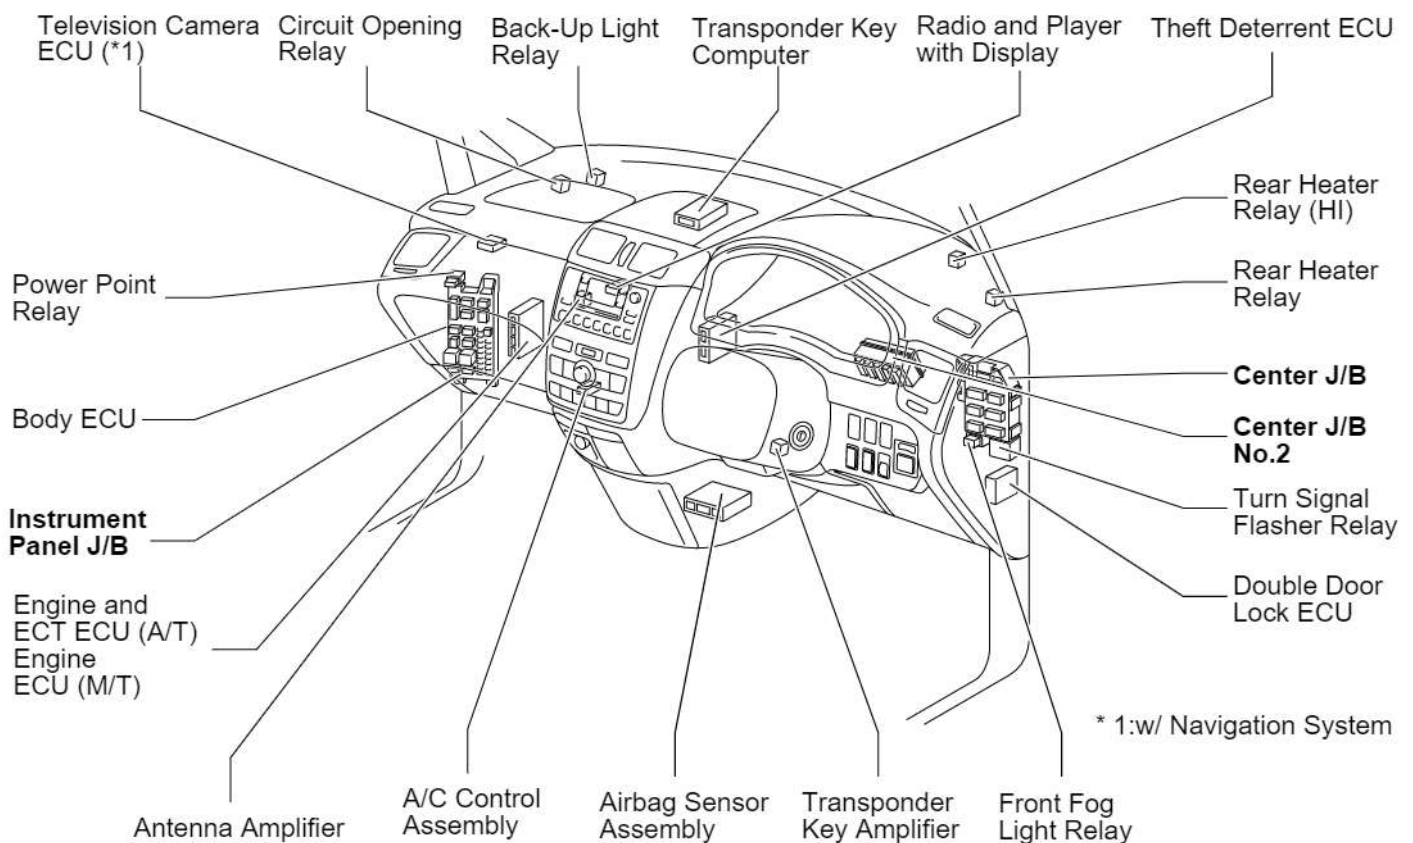


D RELAY LOCATIONS


② : Engine Room R/B and J/B

Front Side of Left Suspension Tower
(See Page 8)

- * 1: 30A HEAD LP CLN
- * 2: HEAD LH UPR
- * 3: 15A IG2 (Gasoline)
30A FUEL HTR (Diesel)

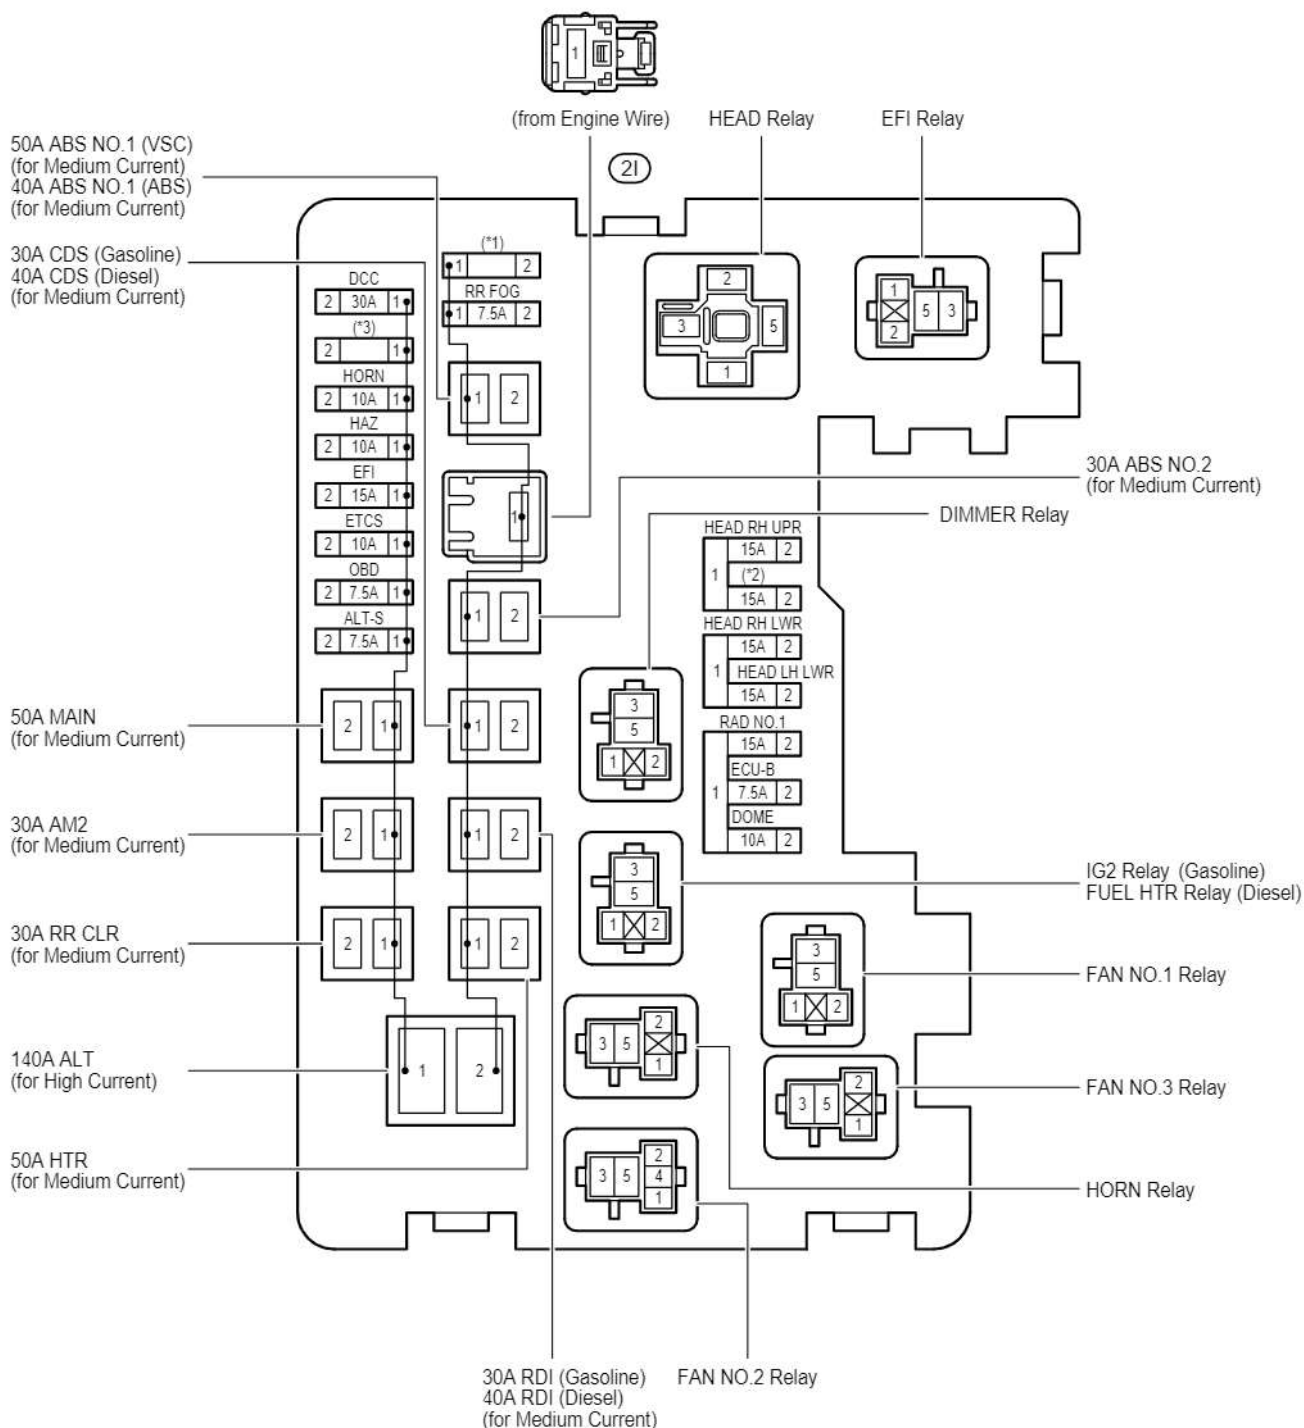


⑦ : Engine Room R/B No.2

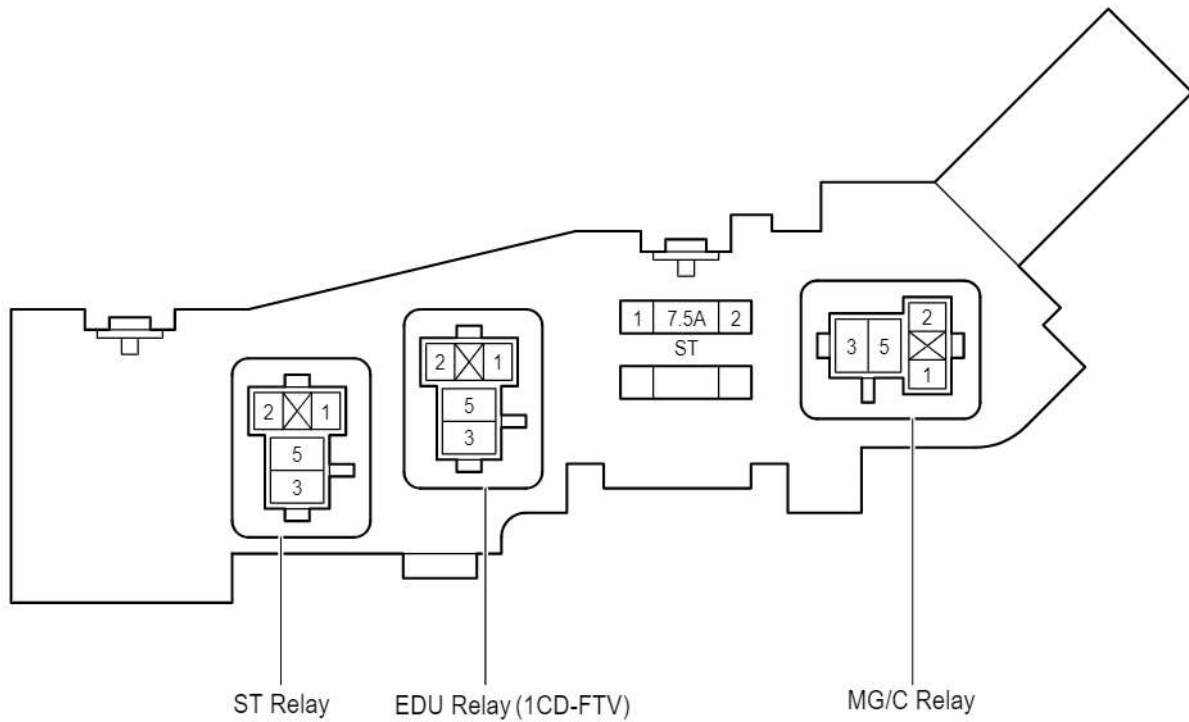Front Side of Left Suspension Tower
(See Page 8)

⑤ : Engine Room R/B No.4


Left Side of Air Cleaner (See Page 8)

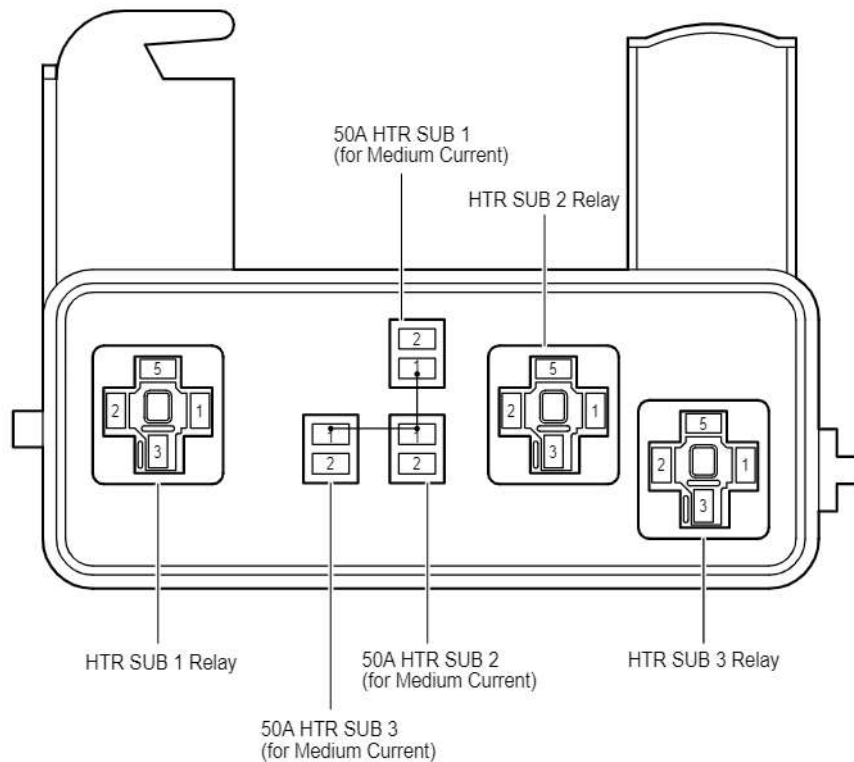

D RELAY LOCATIONS

⑥ : ABS R/B

Engine Compartment Right (See Page 8)

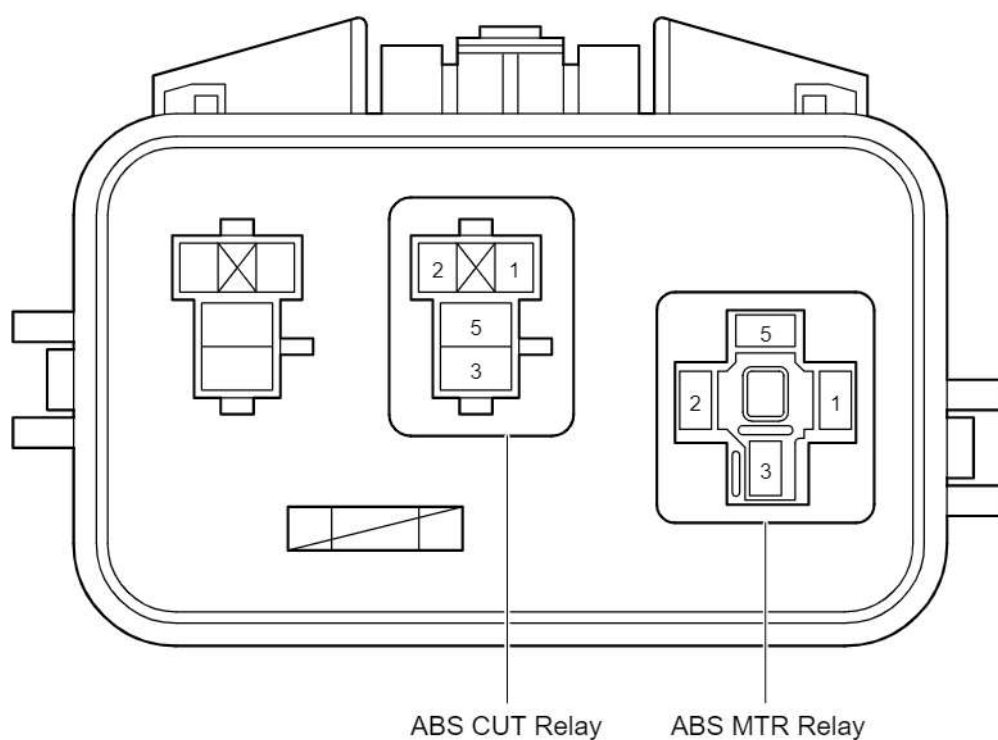



D RELAY LOCATIONS

○ : Instrument Panel J/B

LHD : Lower Finish Panel (See Page 9)


RHD : Left Side of Glove Box (See Page 9)

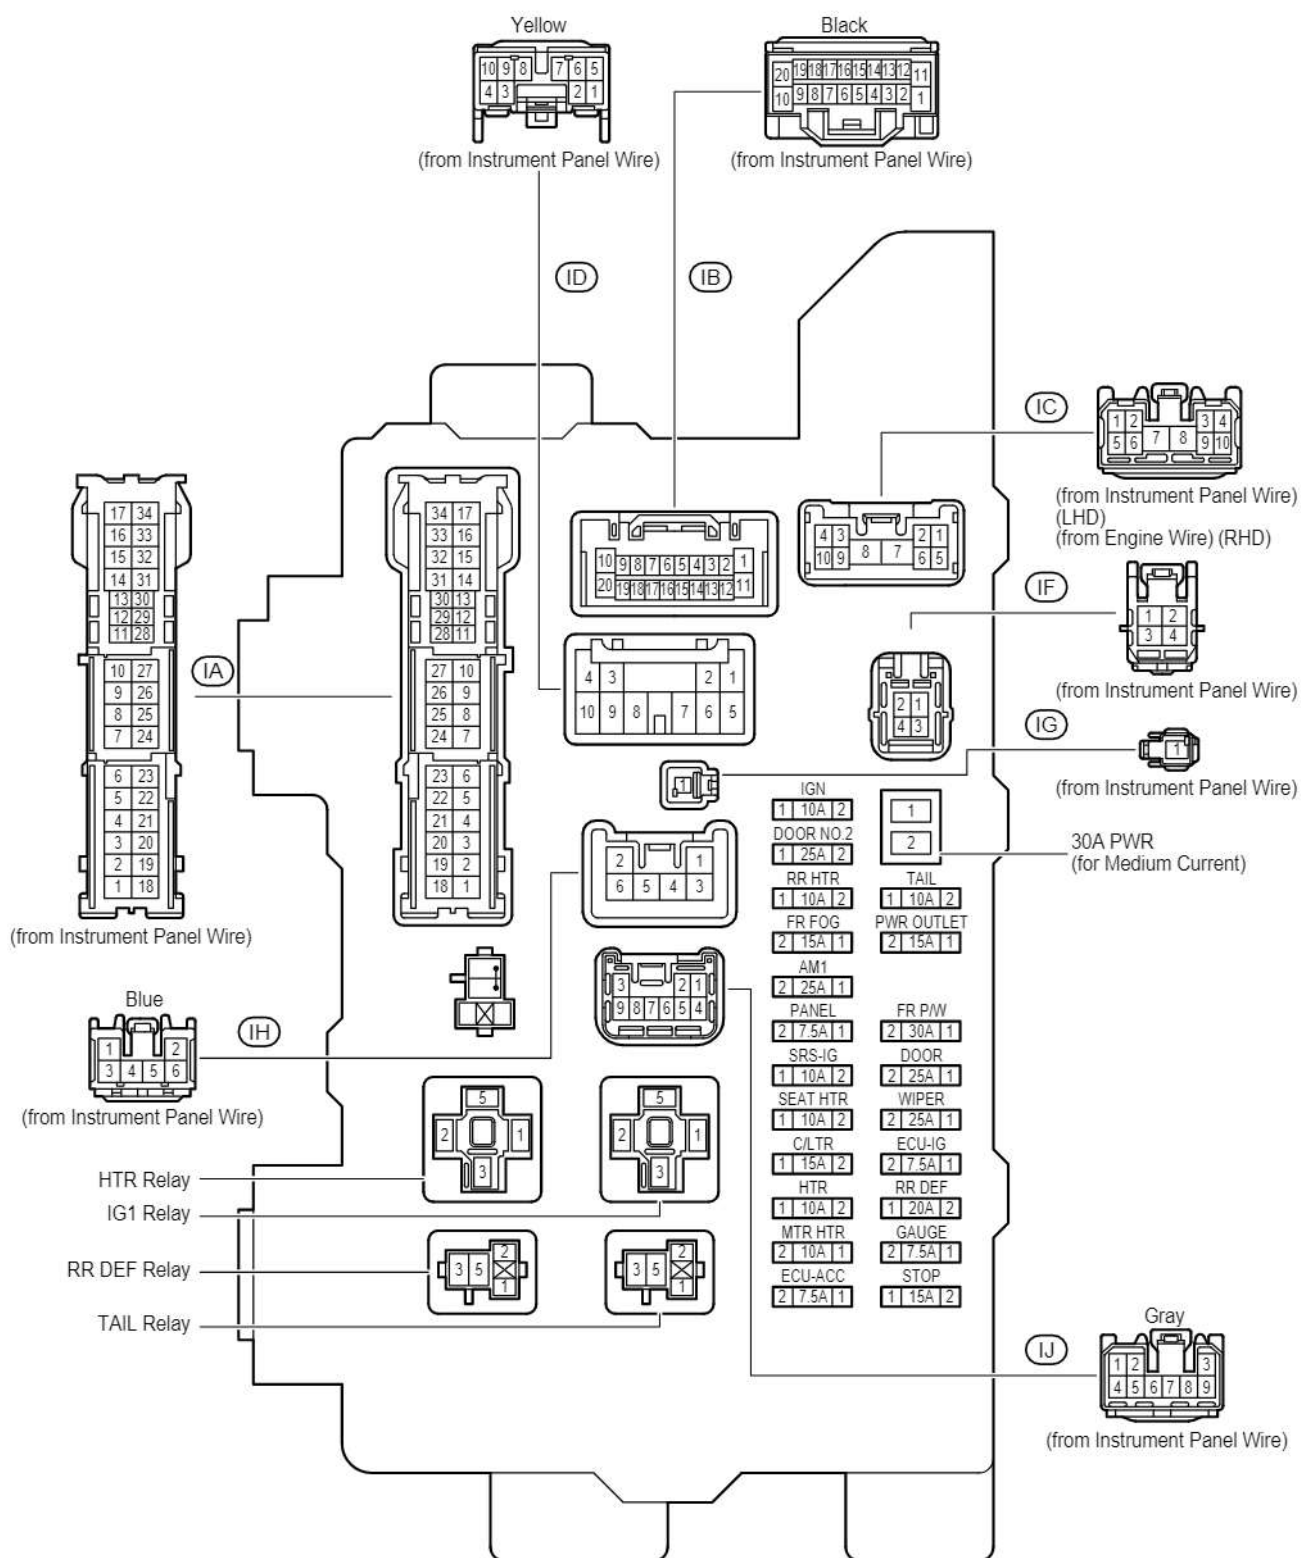

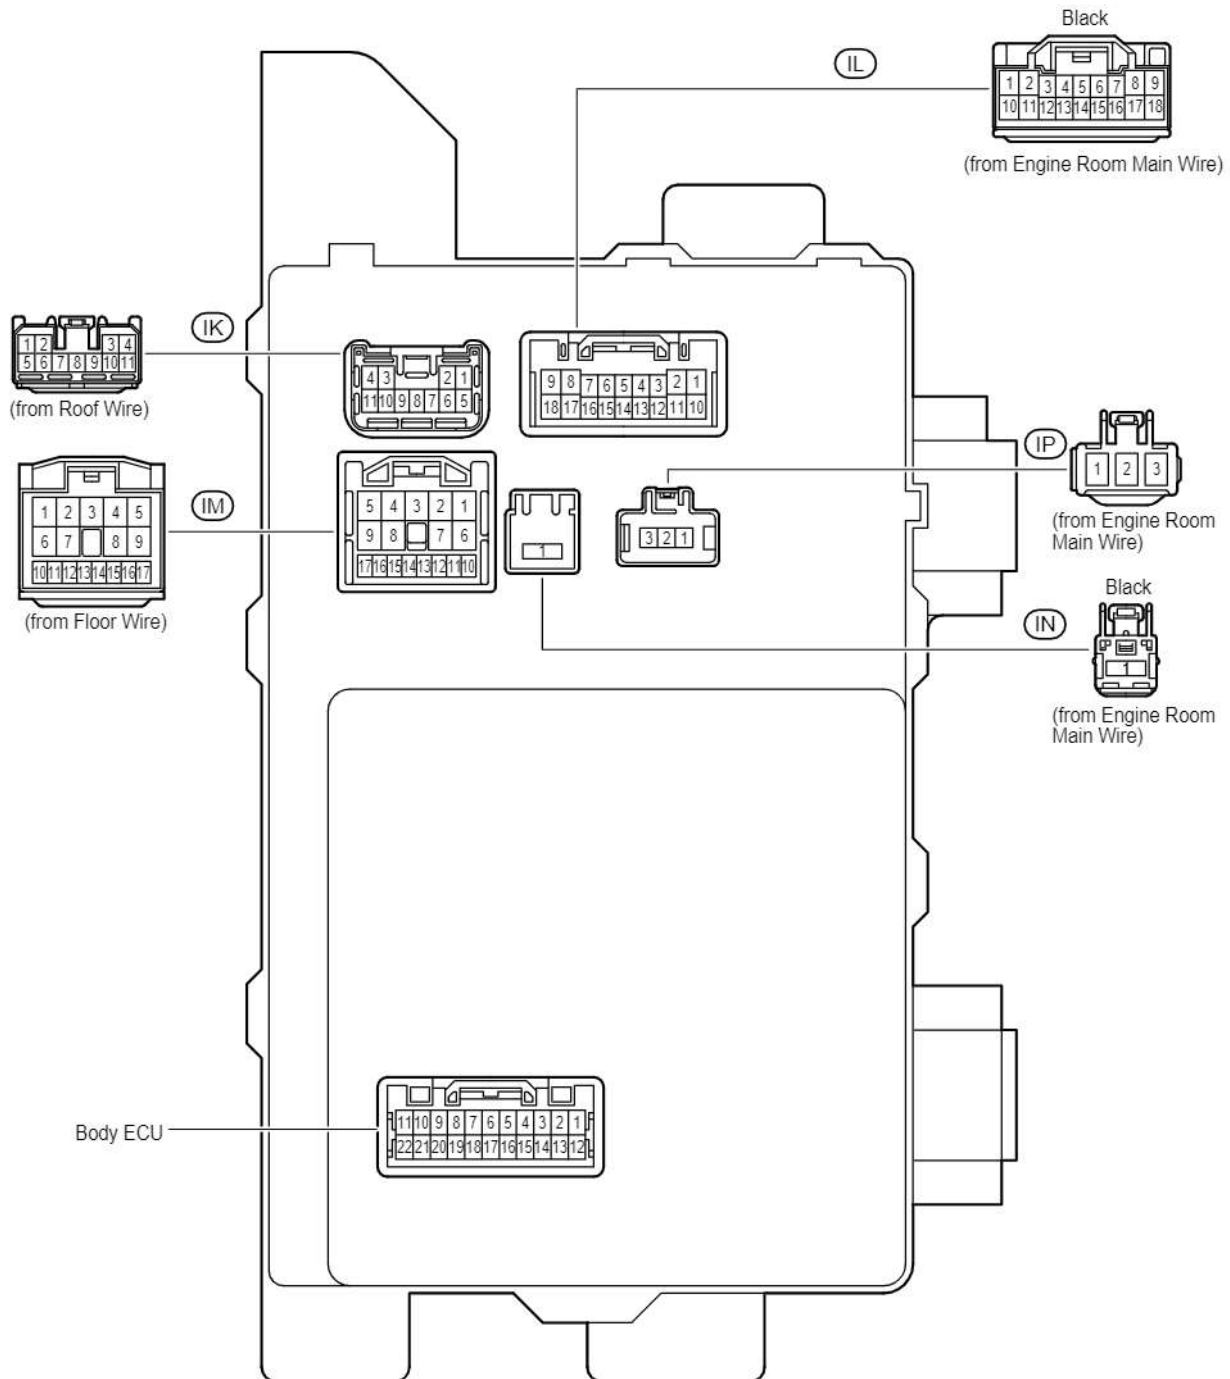


D RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

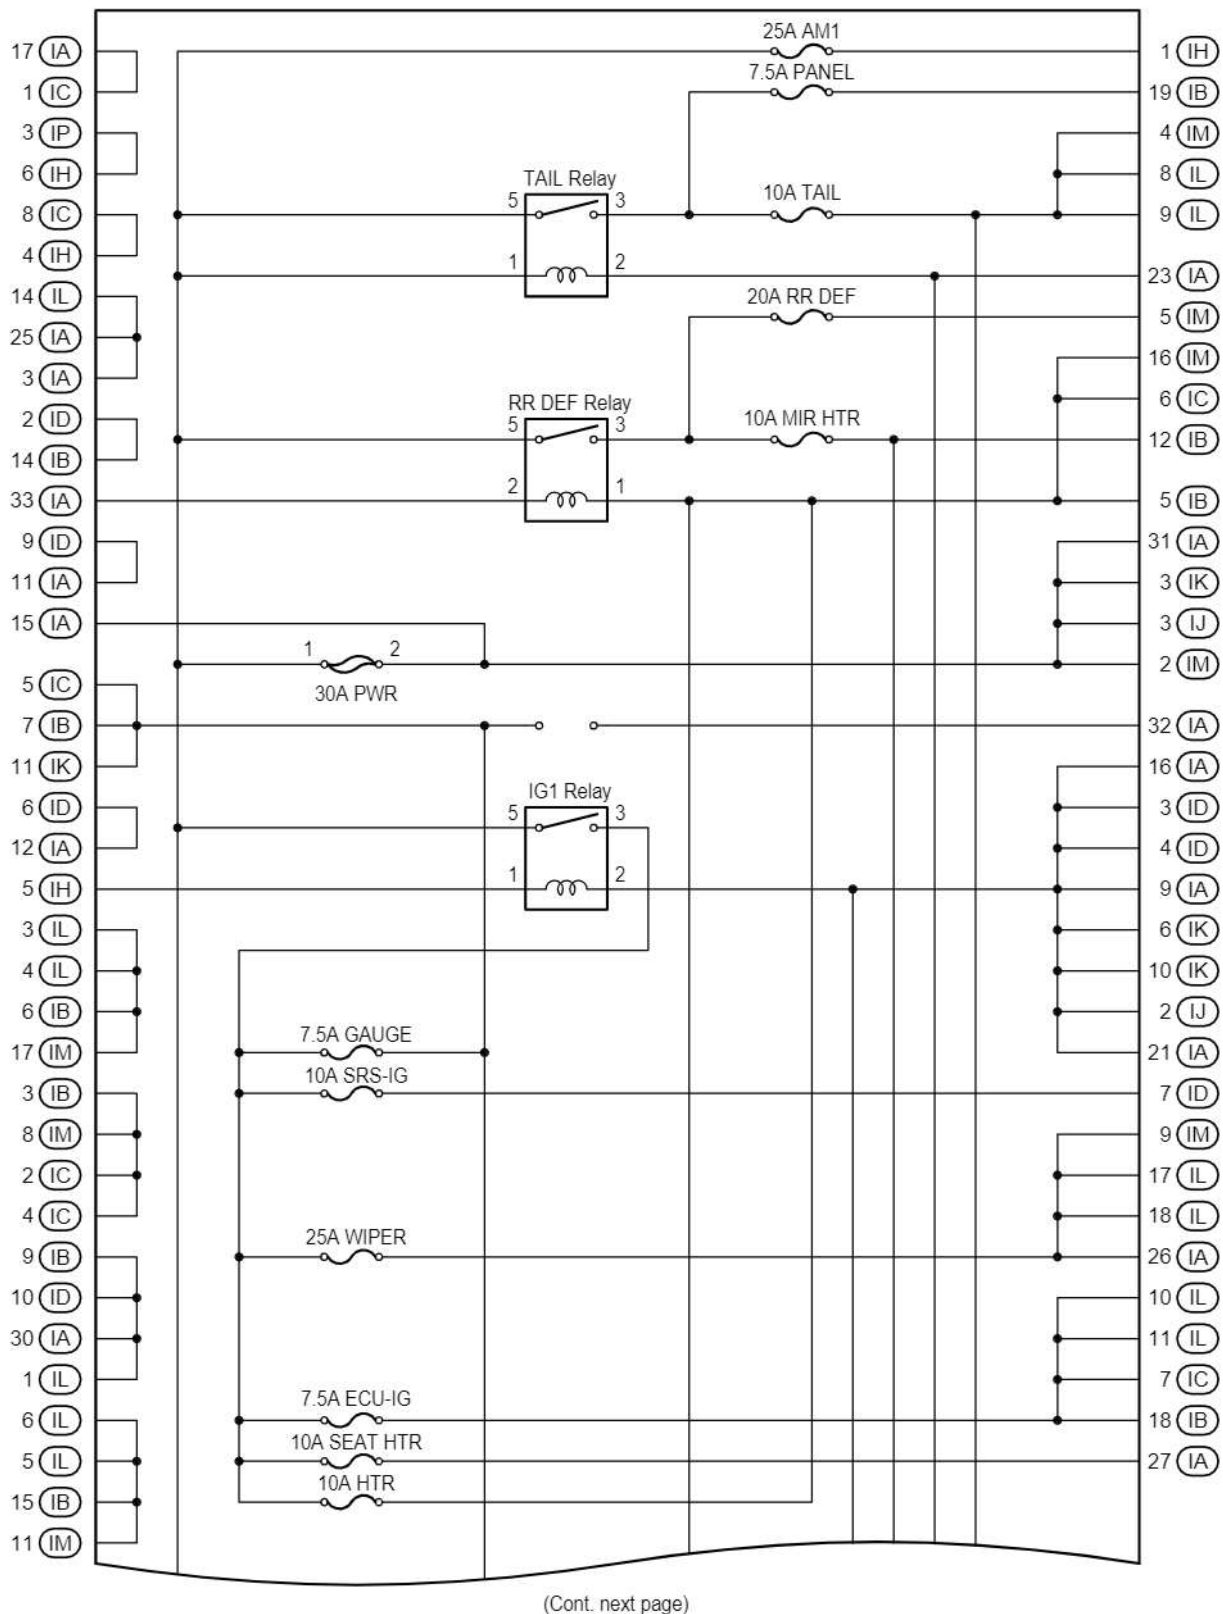


(Cont'd)

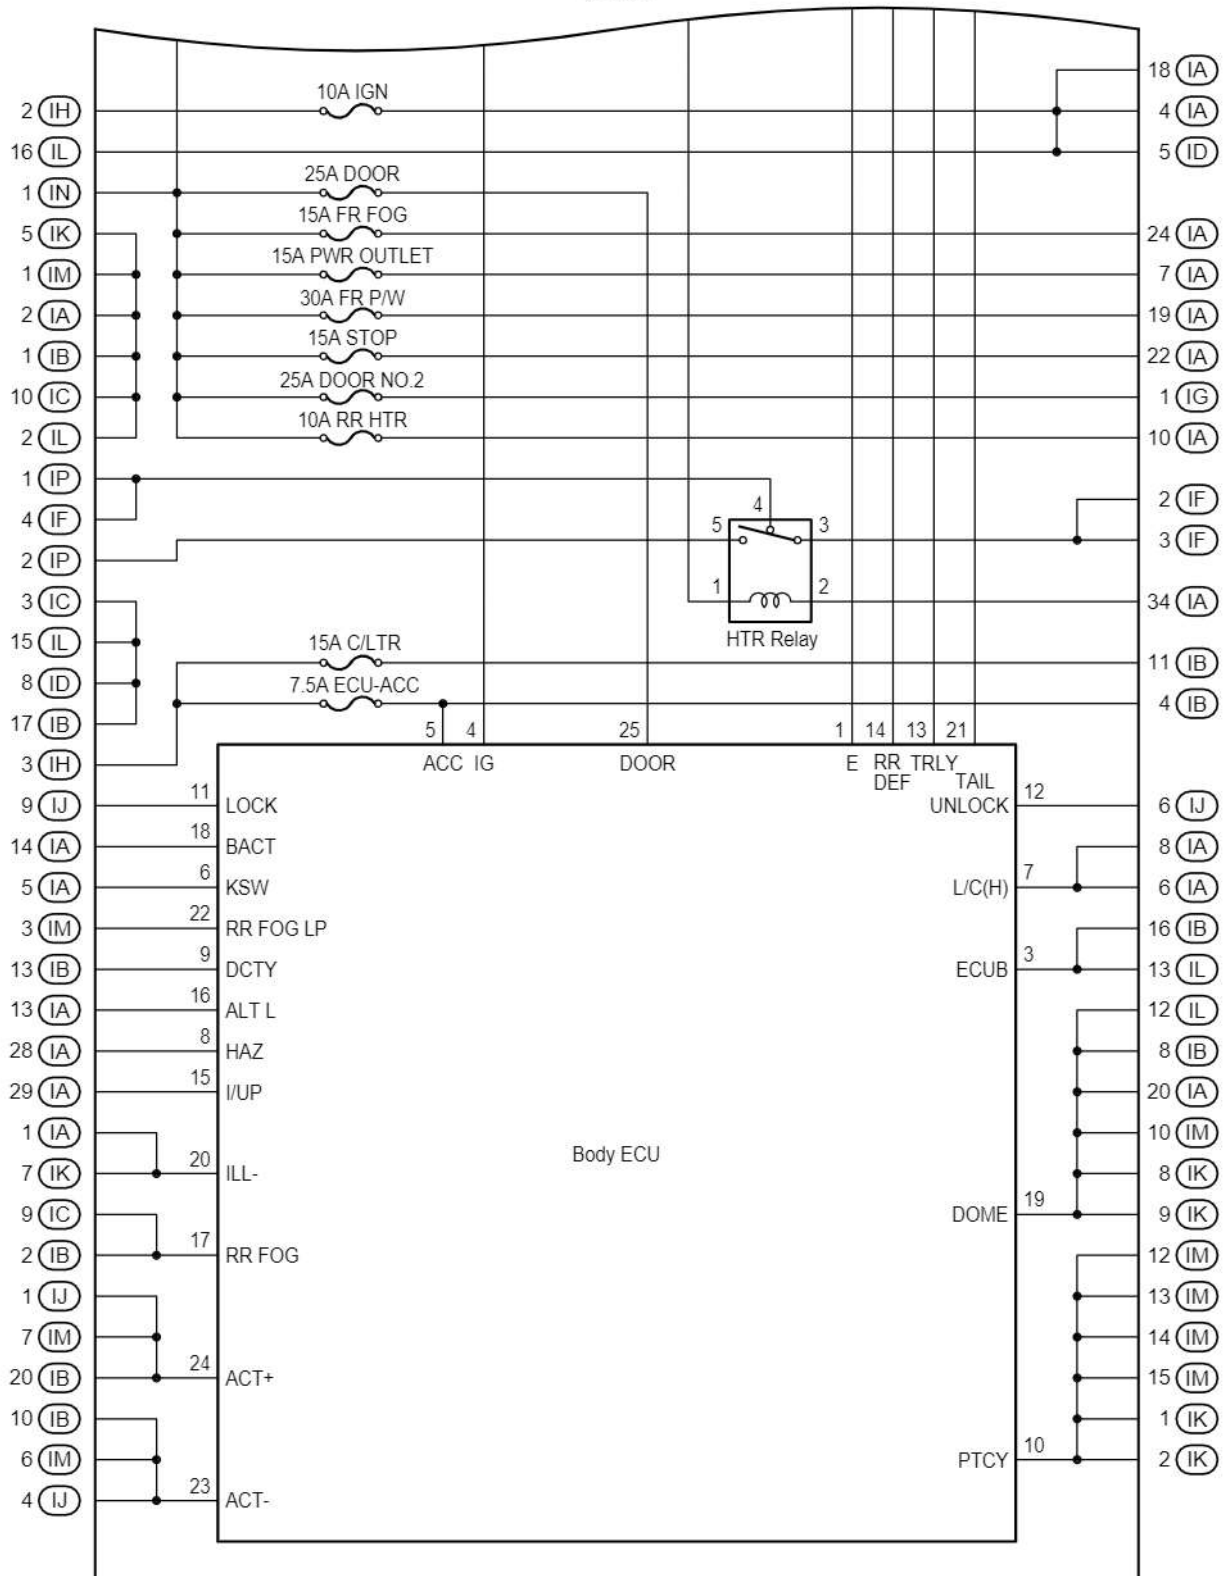


D RELAY LOCATIONS

○ : Center J/B	LHD : Right Side of Glove Box (See Page 9) RHD : Lower Finish Panel (See Page 9)
-----------------------	--

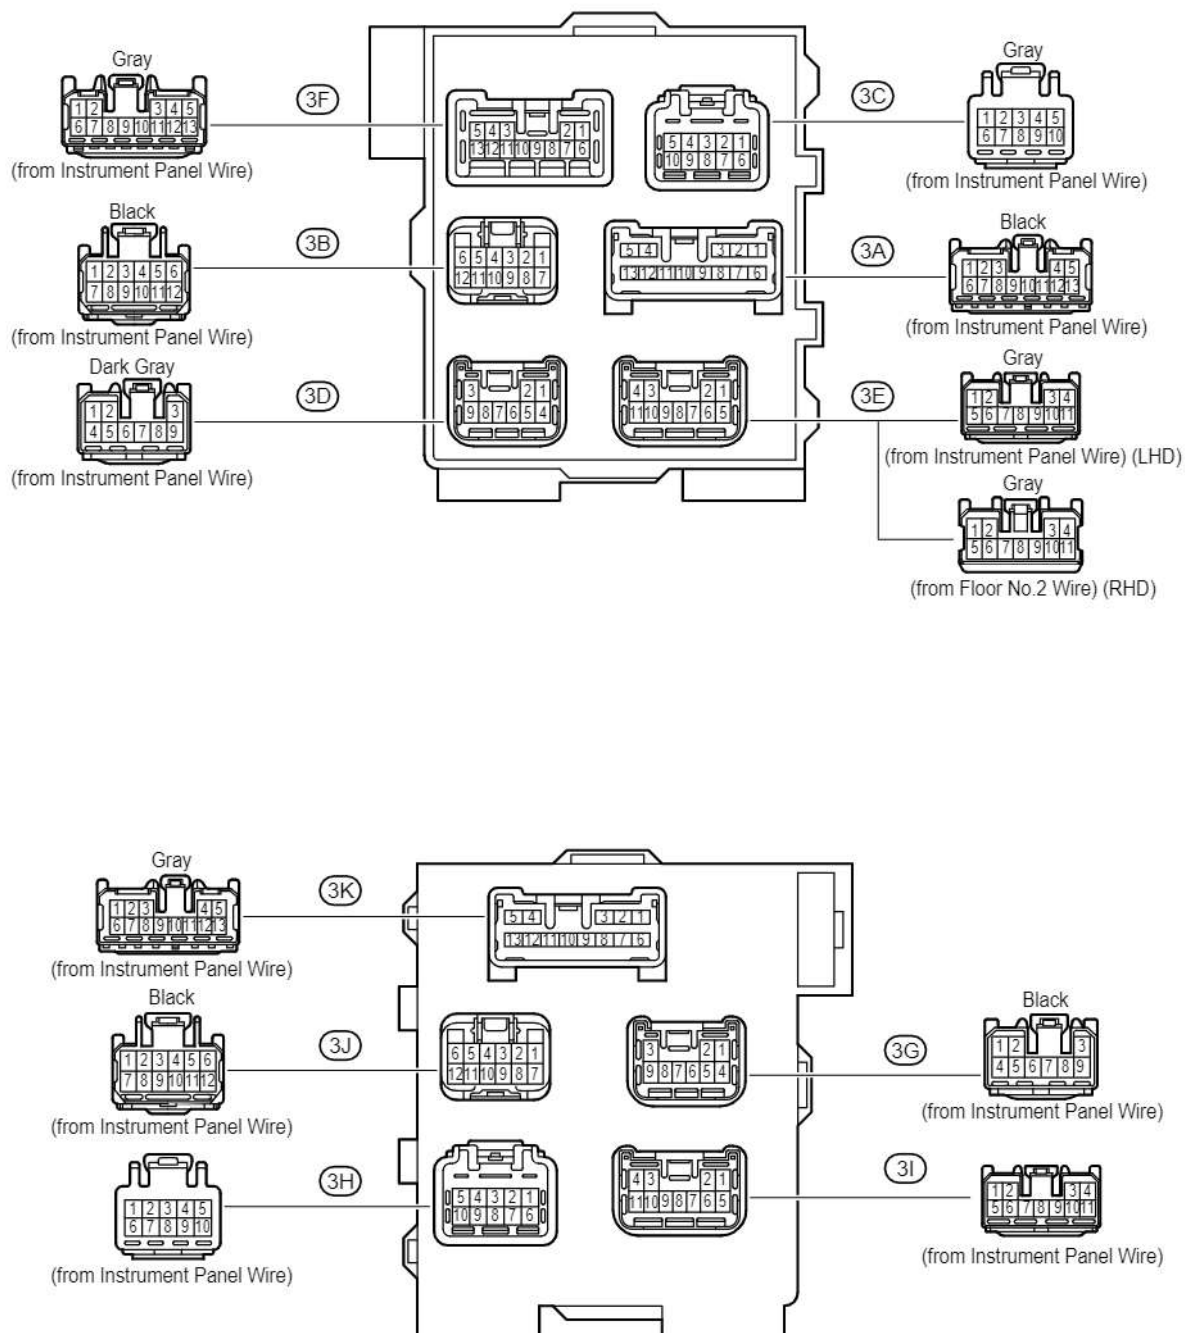


[Center J/B Inner Circuit]

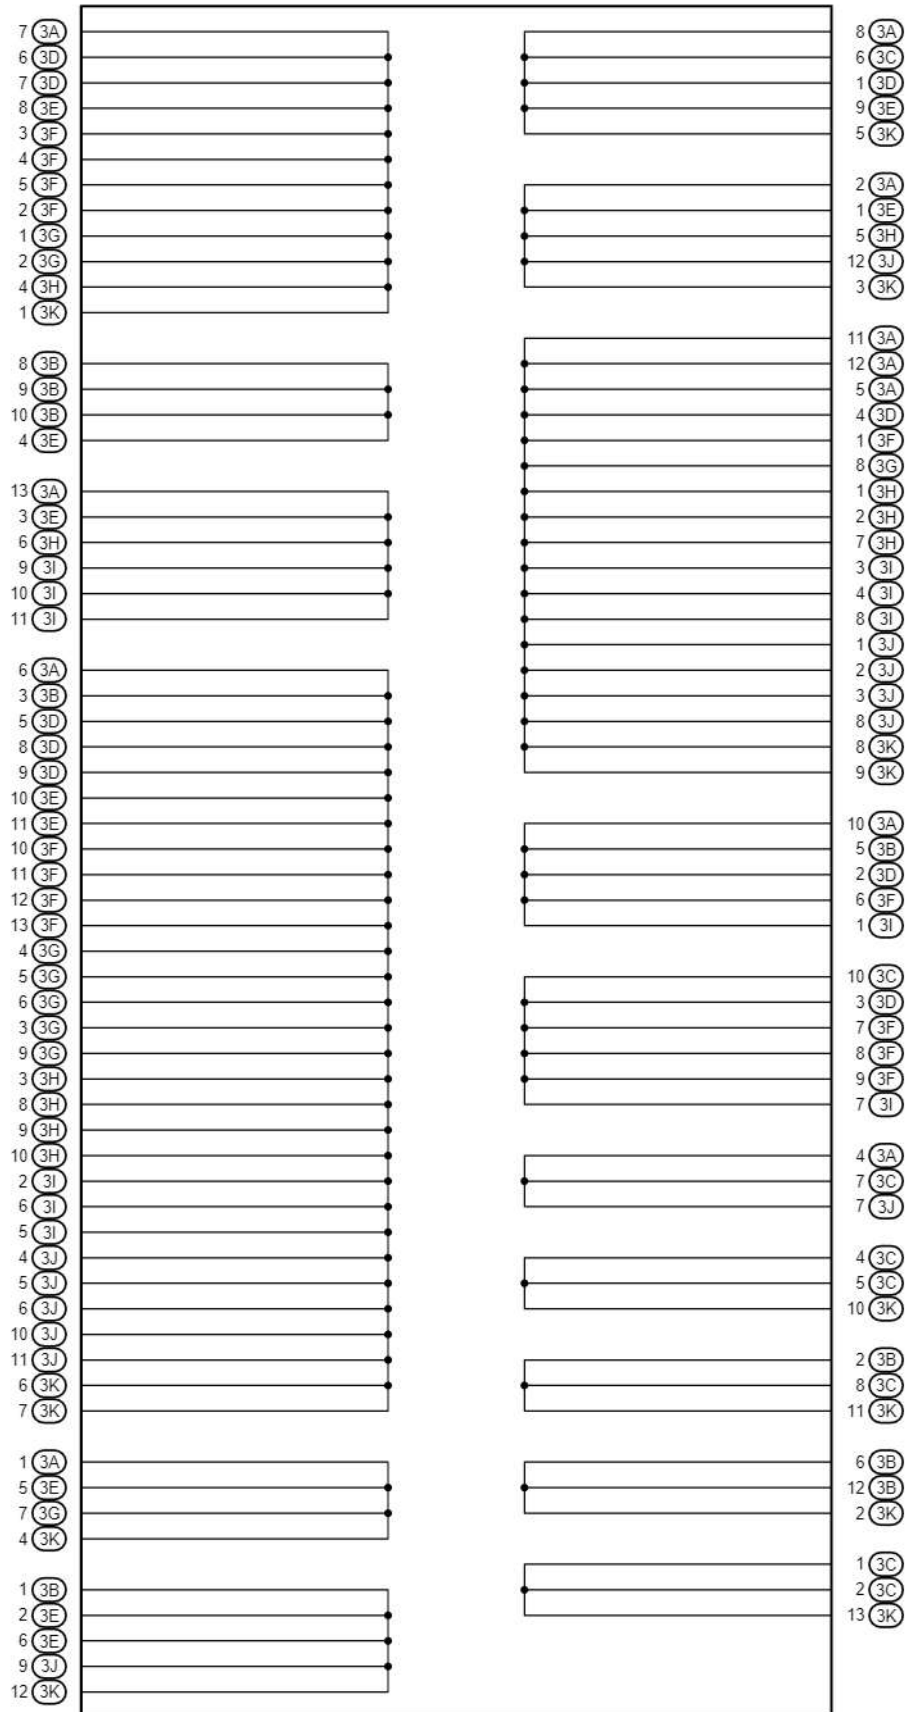

D RELAY LOCATIONS

○ : Center J/B No.2

Near the Steering Column (See Page 9)

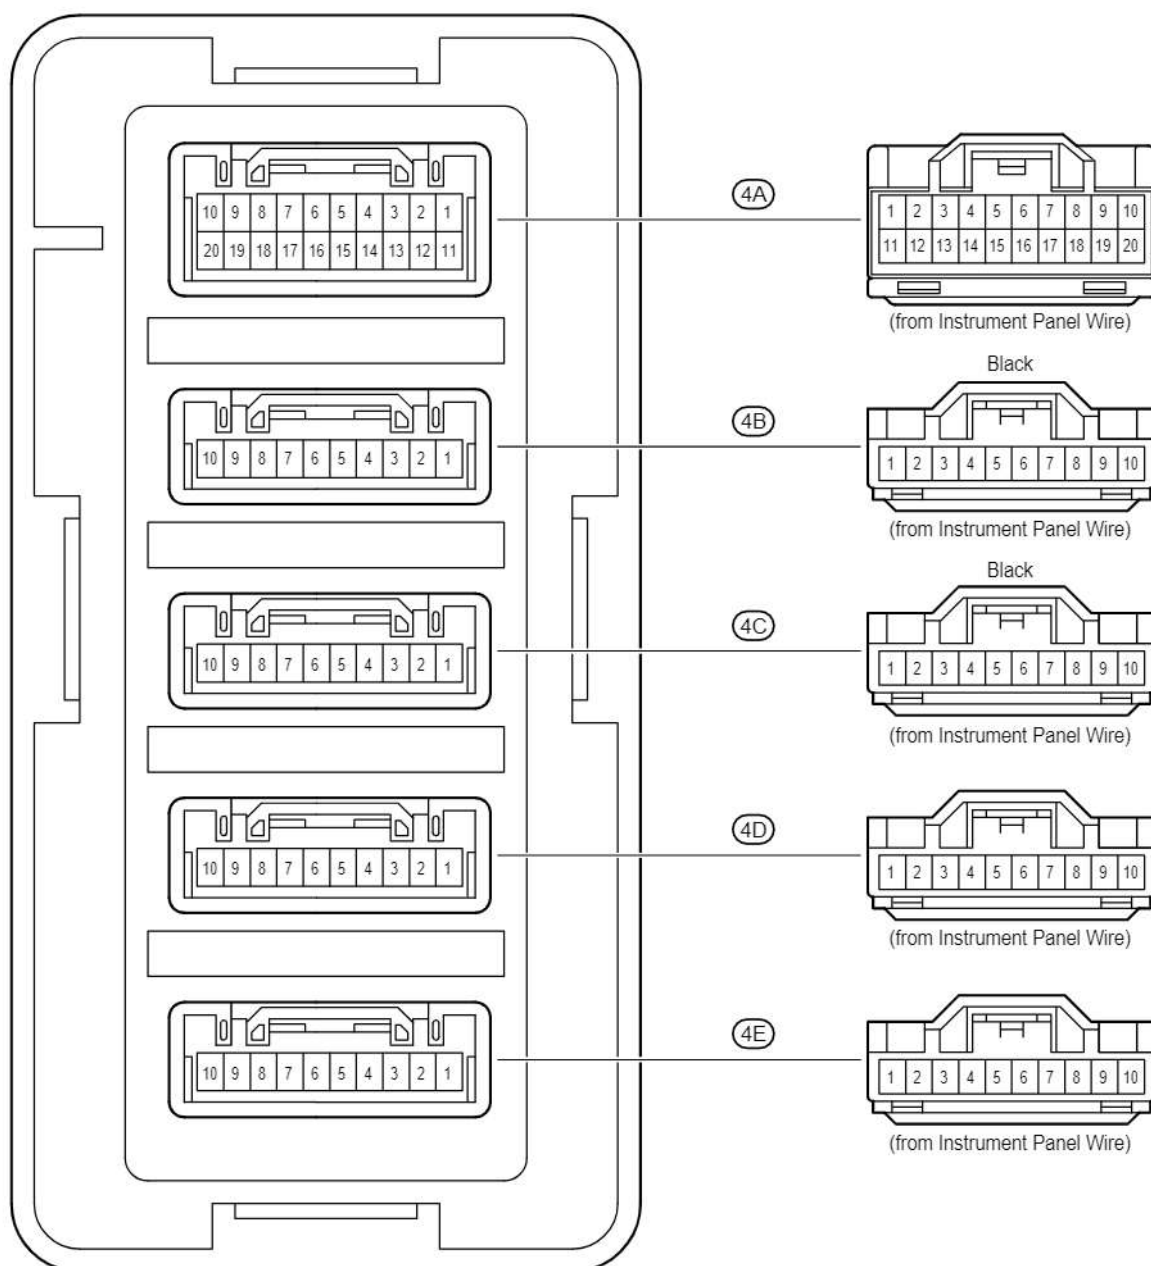

[Center J/B No.2 Inner Circuit]

