


**Necessary preliminary tasks:**


- Remove engine support arm.

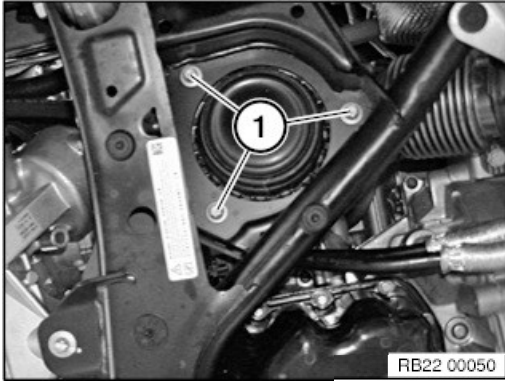

Release screws (1).

Tightening torque 22 11 1AZ.

Remove engine mount.

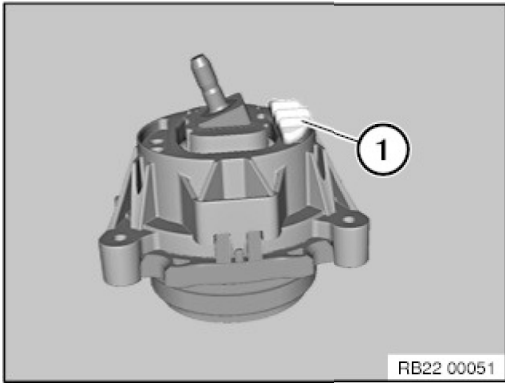
**Installation note:**

Rubber part (1) of engine mount must point to centre of vehicle.



**Necessary preliminary tasks:**

- Remove left charge air duct.
- Secure engine in installation position.

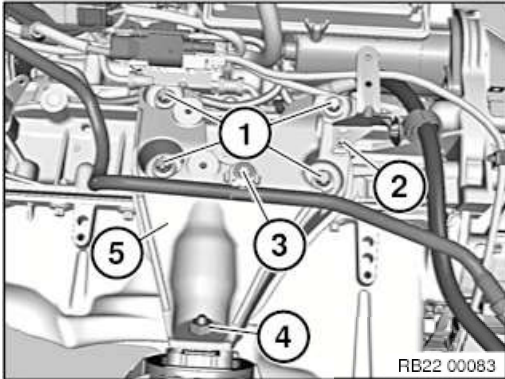

Slacken nut (4).

Tightening torque 22 11 2AZ.

Unfasten screws (2).

Release screw (3).

Tightening torque 22 11 6AZ.

Release screw (1).

Remove engine support arm.


Tightening torque 22 11 3AZ.

cardiagn.com



**Necessary preliminary tasks:**


- Remove engine support arm.

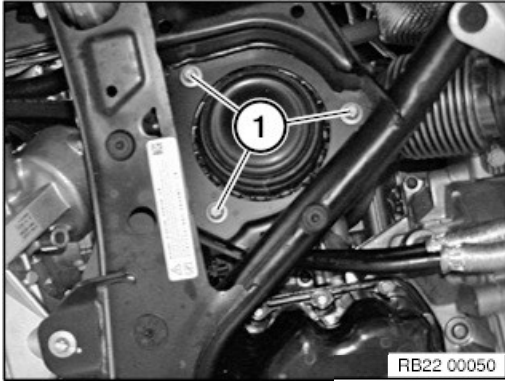

Release screws (1).

Tightening torque 22 11 1AZ.

Remove engine mount.

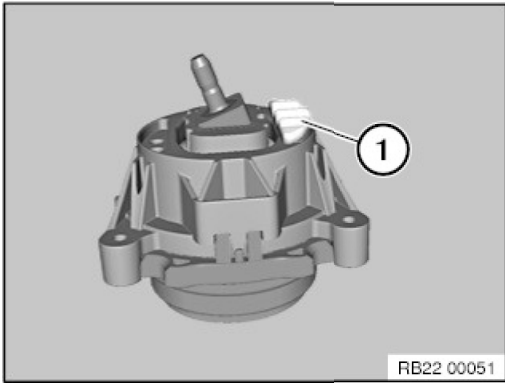
**Installation note:**

Rubber part (1) of engine mount must point to centre of vehicle.




**Necessary preliminary tasks:**

- Secure engine in installation position.

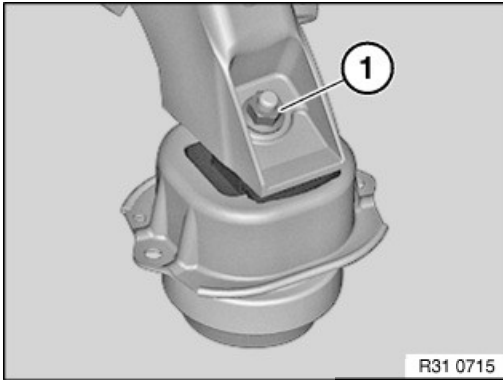


Release bolts (1) on engine mount.

Tightening torque 22 11 2AZ.

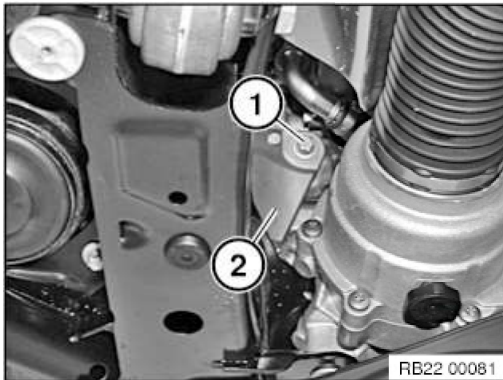

Release screw (1) from engine support arm (2).

Tightening torque 22 11 3AZ.

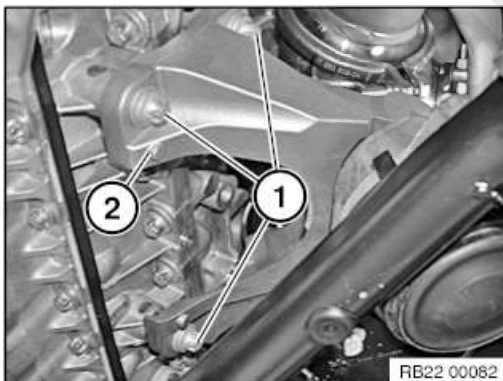

Release screws (1).


Tightening torque 22 11 3AZ.

Remove engine support arm (2).



**Necessary preliminary tasks:**

- Remove rubber mounts for gearbox mounting.

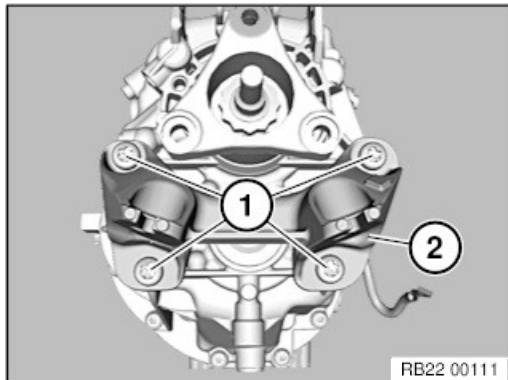

Release screws (1).

Tightening torque 22 32 1AZ.

Remove transmission mounting bracket (2) from transmission.

cardiagn.com



*Note:*

Operations are identical to Replacing rubber mount for transmission mounting.

cardiagn.com



*Note:*


Operations are identical to Replacing rubber mount for transmission mounting.

cardiagn.com



**Necessary preliminary tasks:**


- Remove rear underbody protection.
- Support transmission with lifter.

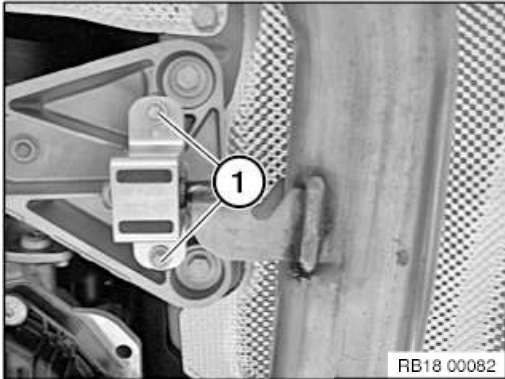

Release screws (1).

Tightening torque 18 31 6AZ.

Detach rubber mount of exhaust system.

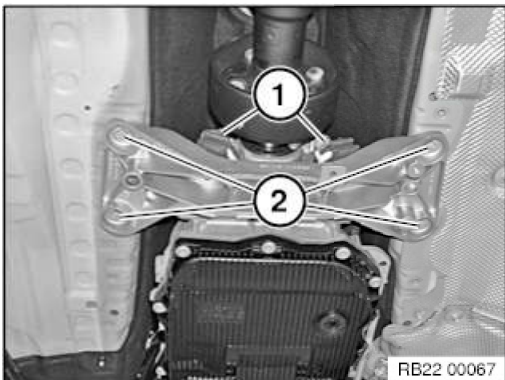

Unscrew nuts (1).

Tightening torque 22 32 2AZ.

Unfasten screws (2).

Tightening torque 22 32 3AZ.

Remove transmission cross member.


Remove rubber mount from transmission cross-member.

Tightening torque 22 32 4AZ.



**Necessary preliminary tasks:**

- Remove rear underbody protection.
- Support transmission with lifter.

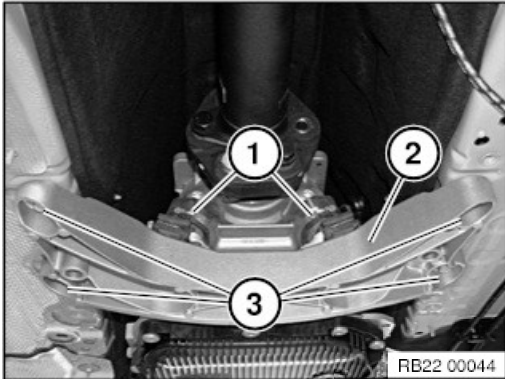

Unscrew nuts (1).

Tightening torque 22 32 2AZ.


Release screws (3).

Tightening torque 22 32 3AZ.

Remove gearbox cross member (2).

Remove rubber mount from transmission cross-member.

Tightening torque 22 32 4AZ.

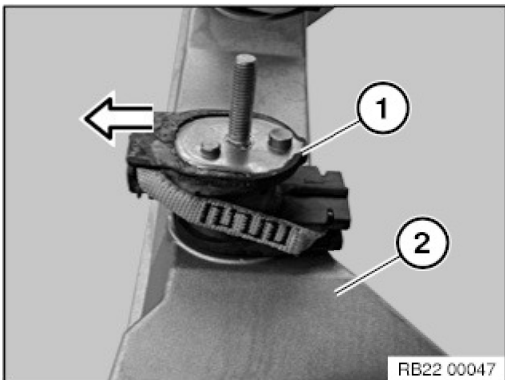


Note the installation position of rubber mount (1) relative to transmission cross-member (2).

Arrow shows in direction of engine/front of vehicle.



**Necessary preliminary tasks:**


- Remove rear underbody protection.
- Support transmission with lifter.

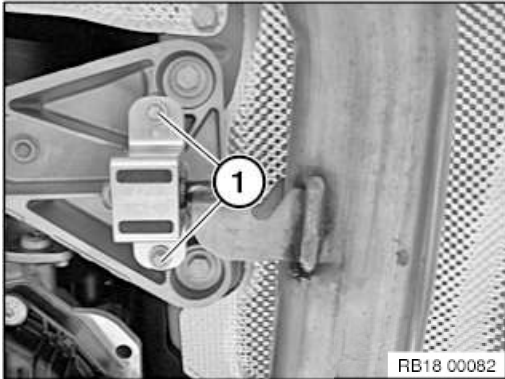

Release screws (1).

Tightening torque 18 20 2AZ.

Detach rubber mount of exhaust system.

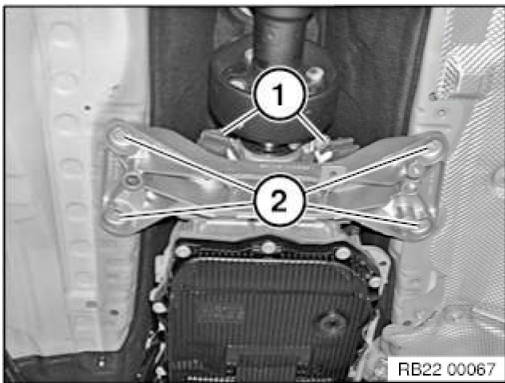

Unscrew nuts (1).

Tightening torque 22 32 2AZ.


Unfasten screws (2).

Tightening torque 22 32 3AZ.

Remove transmission cross member.

Remove rubber mount from transmission cross-member.

Tightening torque 22 32 4AZ.

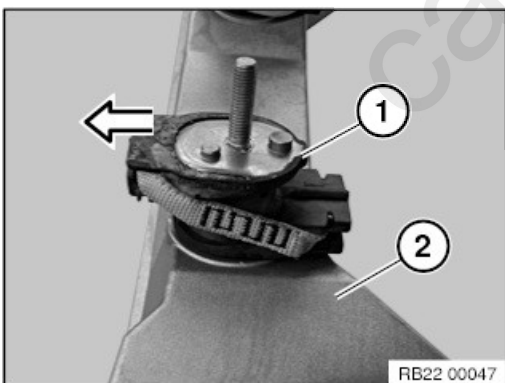

Note the installation position of rubber mount (1) relative to transmission cross-member (2).

Arrow shows in direction of engine/front of vehicle.




22 32 055 Removing and installing/replacing the transmission mounting block (N47/N55/N57)



Necessary preliminary work:

- Remove rubber mounts for gearbox mounting.

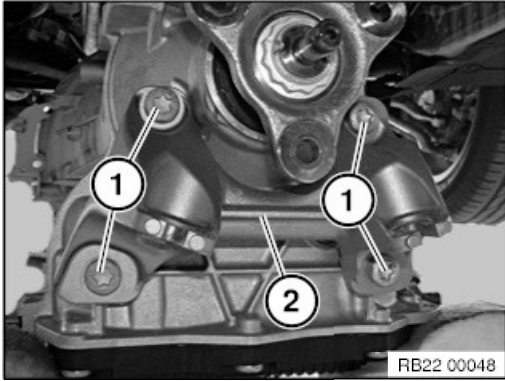

Release screws (1).

Tightening torque 22 32 1AZ.


Remove transmission mounting bracket (2) from transmission.

cardiagn.com



**Necessary preliminary tasks:**

- Remove rubber mounts for gearbox mounting.

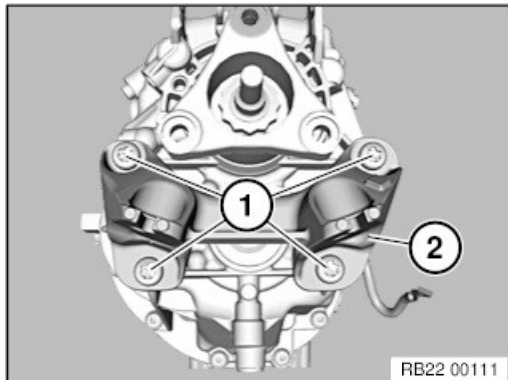

Release screws (1).

Tightening torque 22 32 1AZ.

Remove transmission mounting bracket (2) from transmission.

cardiagn.com



*Note:*

Operations are identical to Replacing rubber mount for transmission mounting.

cardiagn.com



*Note:*


Operations are identical to Replacing rubber mount for transmission mounting.

cardiagn.com



**Necessary preliminary tasks:**


- Remove rear underbody protection.
- Support transmission with lifter.

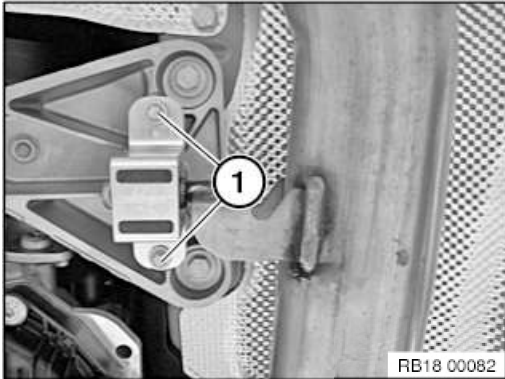

Release screws (1).

Tightening torque 18 31 6AZ.

Detach rubber mount of exhaust system.

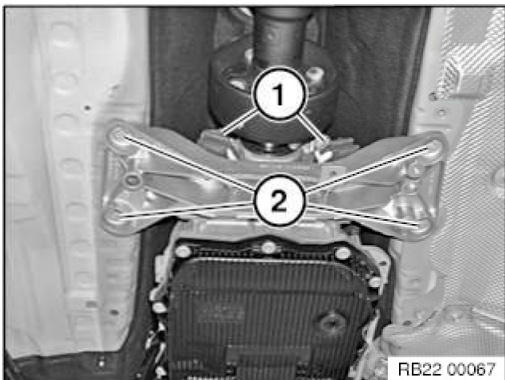

Unscrew nuts (1).

Tightening torque 22 32 2AZ.

Unfasten screws (2).

Tightening torque 22 32 3AZ.

Remove transmission cross member.


Remove rubber mount from transmission cross-member.

Tightening torque 22 32 4AZ.



**Necessary preliminary tasks:**

- Remove rear underbody protection.
- Support transmission with lifter.

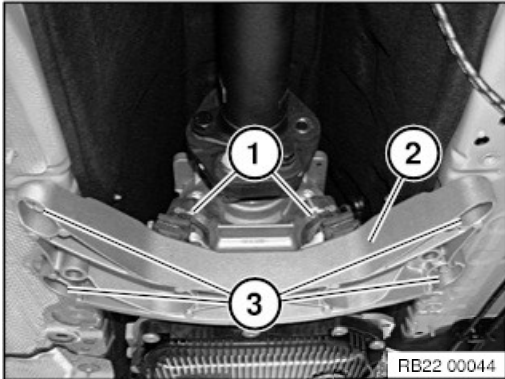

Unscrew nuts (1).

Tightening torque 22 32 2AZ.


Release screws (3).

Tightening torque 22 32 3AZ.

Remove gearbox cross member (2).

Remove rubber mount from transmission cross-member.

Tightening torque 22 32 4AZ.

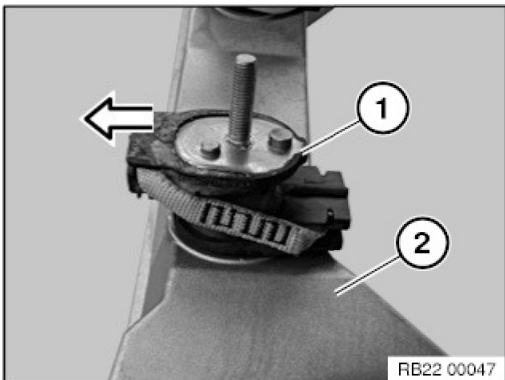


Note the installation position of rubber mount (1) relative to transmission cross-member (2).

Arrow shows in direction of engine/front of vehicle.



**Necessary preliminary tasks:**


- Remove rear underbody protection.
- Support transmission with lifter.

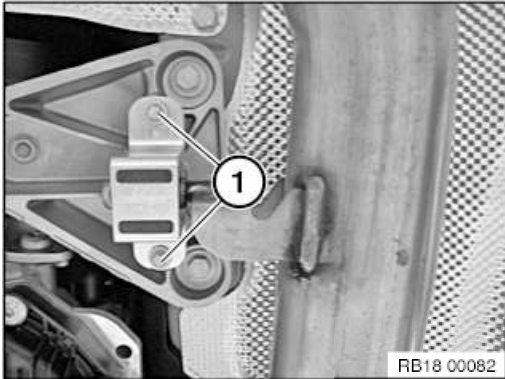

Release screws (1).

Tightening torque 18 20 2AZ.

Detach rubber mount of exhaust system.

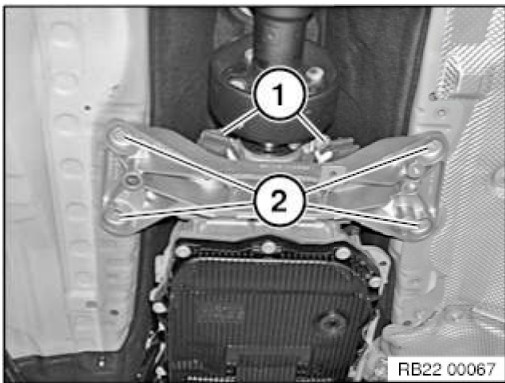

Unscrew nuts (1).

Tightening torque 22 32 2AZ.


Unfasten screws (2).

Tightening torque 22 32 3AZ.

Remove transmission cross member.

Remove rubber mount from transmission cross-member.

Tightening torque 22 32 4AZ.

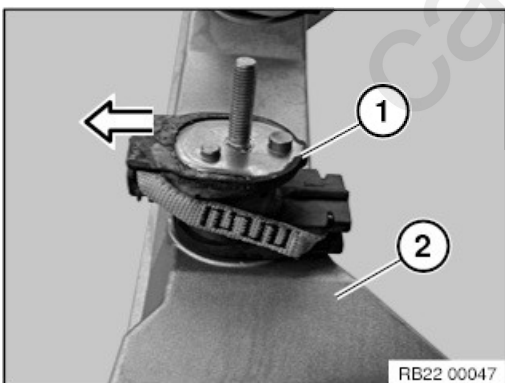


Note the installation position of rubber mount (1) relative to transmission cross-member (2).

Arrow shows in direction of engine/front of vehicle.



22 Overview of engine/gearbox mounting

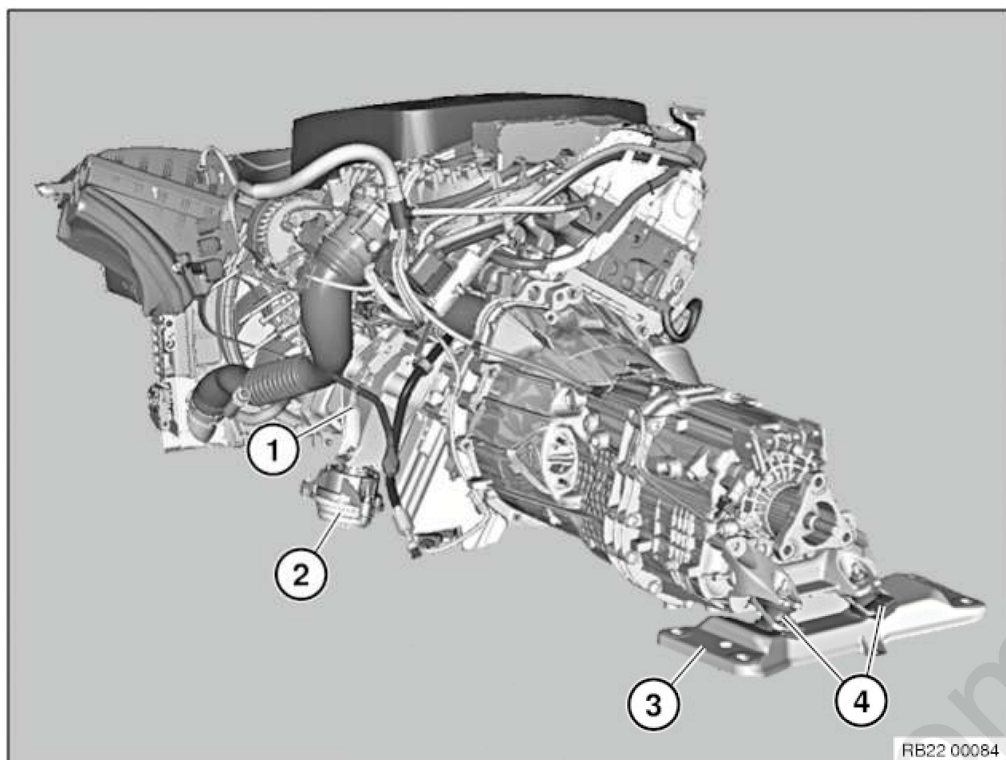

Engine mounting:

- 1 Engine support arm (left / right)
- 2 Engine mount (left / right)


Gearbox mounting:

- 3 Gearbox cross member
 - 4 Gearbox mount
- Transmission mounting bracket



**Necessary preliminary tasks:**

- Remove left charge air duct.
- Secure engine in installation position.

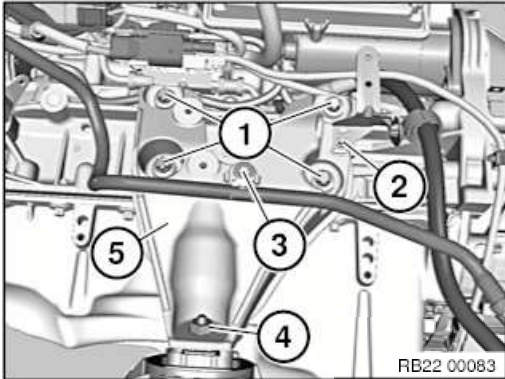

Slacken nut (4).

Tightening torque 22 11 2AZ.

Unfasten screws (2).

Release screw (3).

Tightening torque 22 11 6AZ.

Release screw (1).

Remove engine support arm.


Tightening torque 22 11 3AZ.

cardiagn.com




**Necessary preliminary tasks:**

- Secure engine in installation position.

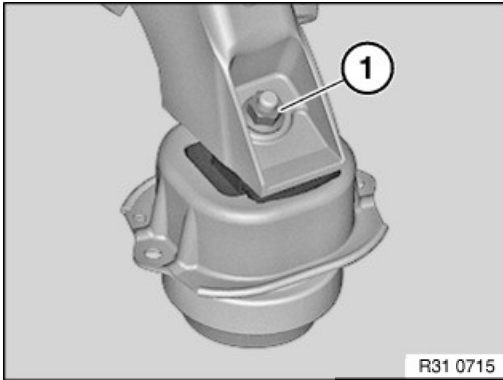


Release bolts (1) on engine mount.

Tightening torque 22 11 2AZ.

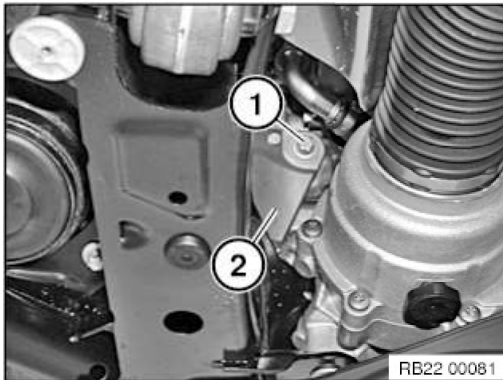

Release screw (1) from engine support arm (2).

Tightening torque 22 11 3AZ.

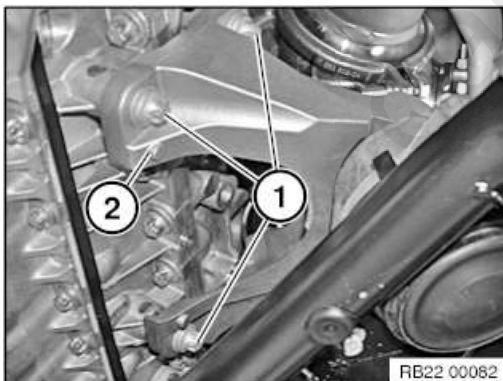

Release screws (1).

Tightening torque 22 11 3AZ.

Remove engine support arm (2).

