


Lincoln MKS 2013 – 2016 fuse box diagram

Engine Compartment Fuse Box

The power distribution box is located in the engine compartment.

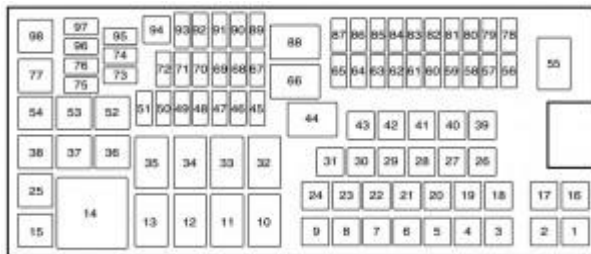

Lincoln MKS – fuse box diagram – engine

compartment

No.	A	Protected Components
1	—	Not used
2	—	Not used
3	—	Not used
4	30	Wiper motor relay
5	50	Anti-lock brake system pump
6	—	Not used
7	—	Not used
8	20	Moonroof, Power sunshade
9	20	Second row power point

16	—	Not used
17	—	Not used
18	40	Front blower motor relay
19	30	Starter relay
20	20	Storage bin power point
21	20	Rear heated seat module
23	30	Driver power seat, Memory module
24	—	Not used
26	40	Heated rear window relay
27	20	Cigar lighter
28	30	Climate controlled seats
29	40	Electric fan relay 1
30	40	Electric fan relay 2
31	25	Electric fan relay 3
39	—	Not used

40	30	Left front smart window motor
41	30	Left rear smart window motor
42	30	Passenger power seat
43	20	Anti-lock brake system valves
45	5	Rain sensor
46	—	Not used
47	—	Not used
48	—	Not used
49	—	Not used
50	15	Heated mirrors
51	—	Not used
56	—	Not used
57	20	Left high-intensity discharge headlamp
58	10	Alternator A-line
59	10	Brake on/off switch

60	—	Not used
61	—	Not used
62	10	A/C clutch relay
63	—	Not used
64	15	'15-'16: Massage control seats
65	30	Fuel pump relay, Fuel injectors
67	20	Oxygen sensor heater, Mass airflow sensor, Variable camshaft timing solenoid valve, Canister vent solenoid, Canister purge solenoid
68	20	Ignition coils
69	20	Vehicle power #1 (powertrain control module)
70	15	A/C clutch, Fan control relay coils (1-3), Variable air conditioning compressor, Auxiliary transmission warmup, Turbo charge waste-gate control, Electronic compressor bypass valve, All-wheel drive module, Positive crankcase ventilation heater
71	—	Not used
72	—	Not used
73	—	Not used
74	—	Not used

75	—	Not used
76	—	Not used
78	20	Right high-intensity discharge headlamp
79	5	'13-'15: Adaptive cruise control module
80	—	Not used
81	—	Not used
82	—	Not used
83	—	Not used
84	—	Not used
85	—	Not used
86	7.5	Powertrain control module keep-alive power and relay, Canister vent solenoid
87	5	Run/start relay
89	5	Front blower relay coil, Electrical power assist steering module
90	10	Powertrain control module run/start
91	10	Adaptive cruise control module


92	10	Anti-lock brake system module, Adaptive headlamp module
93	5	Rear window defroster relay
94	30	Passenger compartment fuse panel run/start
95	—	Not used
96	—	Not used
97	—	Not used
Relay		
10	Not used	
11	Heated rear window relay	
12	Not used	
13	Starter motor relay	
14	Left-hand cooling fan #2 relay	
15	Fuel pump relay	
22	'15: Massage control seat relay	
25	Not used	

32	'16: Massage control seat relay
33	Right-hand cooling fan relay
34	Blower motor relay
35	Left-hand cooling fan #1 relay
36	Not used
37	Not used
38	Not used
44	Not used
52	Not used
53	Not used
54	Not used
55	Wiper relay
66	Powertrain control module relay
77	Not used
88	Run/start relay

98	A/C clutch relay
----	------------------

Passenger compartment fuse panel

The fuse panel is located under the instrument panel to the left of the steering wheel.

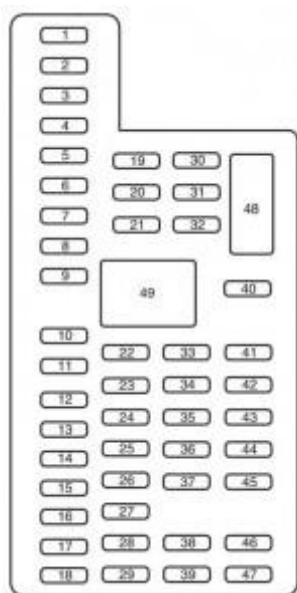

Lincoln MKS – fuse box diagram – passenger compartment

No.	A	Protected Components
1	30	Left front and right rear smart window motors
2	15	Driver seat switch
3	30	Right front smart window motor
4	10	Demand lamps battery saver relay
5	20	Audio amplifier, Active noise control module
6	5	Not used (spare)

7	7.5	Driver seat module logic, Left front door zone module, Keypad
8	10	Not used (spare)
9	10	SYNC® module, Electronic finish panel, Radio frequency transceiver module
10	10	Run accessory relay, Wiper relay, Rain-sense subfuse
11	10	Intelligent access module logic, Heads-up display
12	15	Puddle lamp, Backlighting LED, Interior lighting
13	15	Right turn signals
14	15	Left turn signals
15	15	Stop lamp, Backup lamp
16	10	Right front low beam
17	10	Left front low beam
18	10	Start button, Keypad illumination, Brake shift interlock, Powertrain control module wake-up, Immobilizer transceiver module
19	20	Audio amplifiers
20	20	All lock motor relay and coil, Driver lock motor relay and coil

21	10	Not used (spare)
22	20	Horn relay
23	15	Steering wheel control module logic, Instrument cluster
24	15	Steering wheel control module, Datalink
25	15	Decklid release
26	5	Push button start switch
27	20	Intelligent access module power
28	15	Not used (spare)
29	20	Radio, Global positioning system module
30	15	Front park lamps
31	5	Not used (spare)
32	15	Smart window motors, Master window and mirror switch, Rear window power sunshade module, Lock switch illumination
33	10	Suspension module
34	10	Reverse park aid module, Automatic high beam and lane departure module, Rear heated seat module, Blind spot monitor module, Rear video camera

35	5	Motorized humidity sensor, Heads-up display
36	10	Heated steering wheel
37	10	Not used (spare)
38	10	Moonroof module and switch
39	15	High beams
40	10	Rear park lamps
41	7.5	Occupant classification sensor, Restraint control module
42	5	Not used (spare)
43	10	Not used (spare)
44	10	Not used (spare)
45	5	Not used (spare)
46	10	Climate control module
47	15	Fog lamp relay
48	30	Circuit Breaker: Front passenger power window, Rear power windows