

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 4	Body ECU	90980-12151
A 2	A/C Lock Sensor	90980-11016	B 5	Body ECU	90980-12149
	A/C Magnetic Clutch		B 6	Body ECU	90980-12150
A 3	A/T Fluid Temp. Sensor	90980-11025	B 7	Back Door Courtesy SW	90980-11452
A 4	ABS & BA & TRAC & VSC Actuator	90980-11151		Back Door Half Latch SW	
A 5	ABS & BA & TRAC & VSC Actuator	90980-10895		Back Door Lock Detection SW	
A 6	ABS & BA & TRAC & VSC Actuator	90980-11413		Back Door Lock Motor	
A 7	ABS & BA & TRAC & VSC Actuator	90980-11009	B 8	Back Door ECU	90980-10799
A 8	ABS & BA & TRAC & VSC Actuator	90980-11451	B 9	Back Door ECU	90980-11877
A 9	ABS Speed Sensor Front LH	90980-11003	B10	Back Door Opener SW	90980-11178
A10	ABS Speed Sensor Front RH			License Plate Light	
A11	ADD Actuator	90980-11858	B11	Back Door Power Window Motor	90980-10797
A12	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	B12	Buckle SW LH	90980-12257
A13	Air Fuel Ratio Sensor (Bank 2 Sensor 1)			Seat Position Airbag Sensor	
A14	Airbag Sensor Front LH	90980-11856	B13	Buckle SW RH	90980-10795
A15	Airbag Sensor Front RH			Occupant Detection Sensor	
A16	A/C Control Assembly	90980-12150	C 1	Camshaft Position Sensor	90980-10947
A17	A/C Control Assembly	90980-12149	C 2	Camshaft Timing Oil Control Valve LH	90980-11162
A18	A/C Evaporator Temp. Sensor	90980-11918	C 3	Camshaft Timing Oil Control Valve RH	
A19	A/C Room Temp. Sensor		C 4	Crankshaft Position Sensor (1GR-FE)	90980-12028
A20	A/C Solar Sensor			Crankshaft Position Sensor (2UZ-FE)	90980-11162
A21	A/C Solar Sensor	90980-11987	C 5	Center Speaker	90980-11013
A22	A/T Shift Lever Illumination	90980-12063	C 6	Cigarette Lighter	90980-10760
A23	Absorber Control SW	90980-10789	C 7	Cigarette Lighter Illumination	90980-11148
A24	Accel Position Sensor	90980-11858	C 8	Combination Meter	82824-35040
A25	Air Inlet Control Servo Motor	90980-11909	C 9	Combination Meter	82824-35030
A26	Air Mix Control Servo Motor		C10	Combination Meter	82824-35040
A27	Air Mix Control Servo Motor LH		C11	Combination Meter	82824-35030
A28	Air Mix Control Servo Motor RH		C12	Combination SW	90980-11672
A29	Air Vent Mode Control Servo Motor		C13	Combination SW	90980-12183
A30	Airbag Sensor Assembly	82824-50160	C14	Combination SW	90980-11594
A31	Airbag Sensor Assembly	90980-11869	C15	Cup Holder Illumination	90980-11299
A32	Airbag Sensor Assembly	90980-11872	C16	Curtain Shield Airbag Squib LH	90980-12219
A33	Airbag Sensor Assembly	82824-50150	C17	Curtain Shield Airbag Squib RH	
A34	Airbag Sensor Assembly	90980-11867	C18	Curtain Airbag Cutoff SW	90980-11013
A35	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	D 1	Data Link Connector 3	90980-11978
A36	Airbag Squib (Steering Wheel Pad)		D 2	Daytime Running Light Relay	90980-10803
A37	Antenna Amplifier	90980-10870		Turn Signal Flasher Relay	
A38	Ashtray Illumination	90980-12111	D 3	Defogger SW	90980-11911
A39	Automatic Light Control Sensor	90980-11107		Heater Control Panel	
A40	ABS Speed Sensor Rear LH	90980-11900		Passenger Seat Belt Warning Light	
A41	ABS Speed Sensor Rear RH			Security Indicator Light	
B 1	Back Door Power Window Control SW	90980-10957	D 4	Diff. Lock SW	90980-11013
B 2	Blower Motor	90980-10385	D 5	Downhill Assist Control SW	
B 3	Blower Motor Controller	90980-11676	D 6	DVD Automatic Changer	90980-12262

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D 7	Door Control Receiver	90980-11909	F 8	Fuel Pump Resistor	90980-11156
D 8	Door Courtesy Light Front LH	90980-11148	F 9	4WD Control ECU	90980-12149
D 9	Door Courtesy Light Front RH		F10	4WD Control ECU	90980-12150
D10	Door Courtesy Light Rear LH		F11	4WD Control SW	90980-11909
D11	Door Courtesy Light Rear RH		F12	Foot Light LH	90980-11075
D12	Door Courtesy SW Front LH	90980-10871	F13	Foot Light RH	
D13	Door Courtesy SW Front RH		F14	Fuel Pump	90980-11077
D14	Door Courtesy SW Rear LH			Fuel Sender	
D15	Door Courtesy SW Rear RH		G 1	Generator	90980-09365
D16	Door Key Lock and Unlock SW Front LH	90980-12226	G 2	Generator	90980-11964
	Door Lock Detection SW Front LH		G 3	Glove Box Light	90980-11148
	Door Lock Motor Front LH		H 1	Headlight LH (High)	90980-11095
D17	Door Lock Control SW Front LH	90980-12122	H 2	Headlight LH (Low)	90980-11096
	Power Window Master SW		H 3	Headlight RH (High)	90980-11095
D18	Door Lock Control SW Front RH	90980-10797	H 4	Headlight RH (Low)	90980-11096
D19	Door Lock Detection SW Front RH	90980-12226	H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
	Door Lock Motor Front RH		H 6	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
D20	Door Lock Detection SW Rear LH		H 7	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869
	Door Lock Motor Rear LH		H 8	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
D21	Door Lock Detection SW Rear RH		H 9	Horn (High)	90980-10619
	Door Lock Motor Rear RH		H10	Horn (Low)	
D22	Door Speaker Front LH	90980-10935	H11	Hazard SW	90980-10789
D23	Door Speaker Front RH		H12	Height Control SW	90980-10797
E 1	Electronically Controlled Transmission Solenoid (1GR-FE)	90980-10891	H13	Height Control Compressor	90980-11156
	Electronically Controlled Transmission Solenoid (2UZ-FE)	90980-12293	H14	Height Control Motor	90980-10990
E 2	Engine Coolant Temp. Sensor (1GR-FE)	90980-10735	H15	Height Control Sensor Rear LH	90980-11016
	Engine Coolant Temp. Sensor (2UZ-FE)	90980-10736	H16	Height Control Sensor Rear RH	
E 3	Engine Hood Courtesy SW	90980-10942	H17	Height Control Valve	90980-11143
E 4	Engine Control Module	90980-12144	H18	High Mounted Stop Light (w/ Rear Spoiler)	90980-11272
E 5	Engine Control Module	90980-12145		High Mounted Stop Light (w/o Rear Spoiler)	90980-11162
E 6	Engine Control Module	90980-12143	I 1	Ignition Coil and Igniter No.1	90980-11885
E 7	Engine Control Module	90980-12146	I 2	Ignition Coil and Igniter No.2	
E 8	Engine Control Module	90980-12142	I 3	Ignition Coil and Igniter No.3	
F 1	Front Fog Light LH	90980-11096	I 4	Ignition Coil and Igniter No.4	
	Front Fog Light RH		I 5	Ignition Coil and Igniter No.5	
F 2	Front Parking Light LH	90980-11156	I 6	Ignition Coil and Igniter No.6	
F 3	Front Parking Light LH		I 7	Ignition Coil and Igniter No.7	
F 4	Front Parking Light RH		I 8	Ignition Coil and Igniter No.8	
F 5	Front Turn Signal Light LH (w/ Daytime Running Light)	90980-11020	I 9	Injector No.1 (1GR-FE)	90980-11875
	Front Turn Signal Light LH (w/o Daytime Running Light)	90980-11019		Injector No.1 (2UZ-FE)	90980-11153
F 6	Front Turn Signal Light RH (w/ Daytime Running Light)	90980-11020	I10	Injector No.2 (1GR-FE)	90980-11875
	Front Turn Signal Light RH (w/o Daytime Running Light)	90980-11019		Injector No.2 (2UZ-FE)	90980-11153
F 7	Front Wiper Motor	90980-11599	I11	Injector No.3 (1GR-FE)	90980-11875
				Injector No.3 (2UZ-FE)	90980-11153

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I12	Injector No.4 (1GR-FE)	90980-11875	J34	Junction Connector	90980-11661
	Injector No.4 (2UZ-FE)	90980-11153	J35	Junction Connector	90980-11915
I13	Injector No.5 (1GR-FE)	90980-11875	J36	Junction Connector	
	Injector No.5 (2UZ-FE)	90980-11153	J37	Junction Connector	90980-10976
I14	Injector No.6 (1GR-FE)	90980-11875	J38	Junction Connector	90980-11542
	Injector No.6 (2UZ-FE)	90980-11153	J39	Junction Connector	90980-11915
I15	Injector No.7	90980-11153	J40	Junction Connector	90980-11661
I16	Injector No.8		J41	Junction Connector	
I17	Ignition Key Cylinder Light	90980-12092	J42	Junction Connector	90980-11542
	Transponder Key Amplifier		J43	Junction Connector	90980-11661
I18	Ignition SW	90980-11615	J44	Junction Connector	
I19	Inner Mirror	90980-11794	J45	Junction Connector	
I20	Interior Light	90980-12321	J46	Junction Connector	
J 1	Junction Connector	90980-11915	K 1	Knock Sensor 1 (1GR-FE)	90980-11875
J 2	Junction Connector	90980-11661		Knock Sensor 1 (2UZ-FE)	90980-11166
J 3	Junction Connector		90980-11915	K 2	Knock Sensor 2 (1GR-FE)
J 4	Junction Connector	Knock Sensor 2 (2UZ-FE)			90980-11166
J 5	Junction Connector	90980-10976	K 3	Key Interlock Solenoid	90980-10794
J 6	Junction Connector	90980-11915		Unlock Warning SW	
J 7	Junction Connector	90980-11542	L 1	Low Pressure Tank Valve	90980-11156
J 8	Junction Connector	90980-11915	L 2	Luggage Compartment Light	90980-12321
J 9	Junction Connector		L 3	Lumbar Support Control SW (Driver's Seat)	90980-10789
J10	Junction Connector	90980-11661	M 1	Mass Air Flow Meter	90980-11317
J11	Junction Connector		M 2	Main SW	90980-10957
J12	Junction Connector		M 3	Mirror Heater LH	90980-12189
J13	Junction Connector			Remote Control Mirror LH	
J14	Junction Connector		M 4	Mirror Heater RH	
J15	Junction Connector			Remote Control Mirror RH	
J16	Junction Connector		M 5	Moon Roof Control ECU	90980-10997
J17	Junction Connector		N 1	Noise Filter (Ignition No.1)	90980-10843
J18	Junction Connector	N 2	Noise Filter (Ignition No.2)		
J19	Junction Connector	90980-11915	N 3	Navigation ECU	90980-11923
J20	Junction Connector		N 4	Navigation ECU	90980-11973
J21	Junction Connector		O 1	Oil Pressure SW	90980-11363
J22	Junction Connector		90980-11661	O 2	ODO/Trip SW
J23	Junction Connector	Turn Signal Indicator Light			
J24	Junction Connector	90980-10976	P 1	Park/Neutral Position SW	90980-11784
J25	Junction Connector	90980-10803	P 2	Power Steering Oil Pressure SW	90980-11428
J26	Junction Connector	90980-11542	P 3	Pressure SW	90980-11149
J27	Junction Connector		P 4	Parking Brake SW	90980-10871
J28	Junction Connector	90980-11915	P 5	Power Outlet (115V)	90980-10601
J29	Junction Connector		P 6	Power Outlet (Front)	90980-10860
J30	Junction Connector		P 7	Moon Roof Control SW	90980-10789
J31	Junction Connector	Personal Light			
J32	Junction Connector	90980-11661	P 8	Power Outlet (Rear)	90980-10760
J33	Junction Connector				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
P 9	Power Window Control SW Front RH	90980-10789	R23	Rear Wiper Motor	90980-11599
P10	Power Window Control SW Rear LH			Rear Wiper Position SW	
P11	Power Window Control SW Rear RH		R24	Remote Control Mirror SW	90980-11657
P12	Power Window Motor Front LH	90980-10797	S 2	Starter (1GR-FE)	90980-09463
P13	Power Window Motor Front RH			Starter (2UZ-FE)	90980-09585
P14	Power Window Motor Rear LH		S 3	Starter	90980-11400
P15	Power Window Motor Rear RH		S 4	Seat Heater SW LH	90980-10957
P16	Pretensioner LH	90980-12253	S 5	Seat Heater SW RH	90980-10933
P17	Pretensioner RH		S 6	Shift Lock Control ECU	90980-12183
P18	Power Seat Control SW (Driver's Seat)	Transmission Control SW			
P19	Power Seat Control SW (Front Passenger's Seat)	90980-10997	S 7	Skid Control ECU	90980-11638
P20	Power Seat Motor (Driver's Seat Front Vertical Control)		S 8	Skid Control ECU	90980-11637
P21	Power Seat Motor (Driver's Seat Lifter Control)	90980-10825	S 9	Skid Control ECU	90980-11476
P22	Power Seat Motor (Driver's Seat Lumbar Support Control)		S10	Skid Control ECU	90980-11935
P23	Power Seat Motor (Driver's Seat Reclining Control)		S11	Steering Sensor	90980-12155
P24	Power Seat Motor (Driver's Seat Slide Control)		S12	Stop Light SW	90980-11118
P25	Power Seat Motor (Front Passenger's Seat Reclining Control)		S13	Suspension Control ECU	90980-12150
P26	Power Seat Motor (Front Passenger's Seat Slide Control)		S14	Suspension Control ECU	90980-12149
			S15	Suspension Control ECU	90980-12151
			S16	Side Airbag Sensor Front LH	90980-12225
		S17	Side Airbag Sensor Front RH		
		S18	Side Airbag Sensor Rear LH		
		S19	Side Airbag Sensor Rear RH		
R 1	Radio and Player	90980-12038	S20	Squawker LH	90980-11013
R 2	Radio and Player	90980-10997	S21	Squawker RH	
R 3	Radio and Player	90980-10996	S22	Stereo Component Amplifier	90980-12200
R 4	Radio and Player	90980-12183	S23	Stereo Component Amplifier	90980-10821
R 5	Radio and Player	90980-12259	S24	Seat Heater LH	90980-10797
R 6	Radio and Player with Display	90980-12211	S25	Seat Heater RH	
R 7	Radio and Player with Display	90980-12209	S26	Side Airbag Squib LH	90980-11864
R 8	Radio and Player with Display	90980-11923	S27	Side Airbag Squib RH	
R 9	Radio and Player with Display	90980-11909	T 1	Theft Deterrent Horn	90980-10619
R10	Radio and Player with Display	90980-12259	T 2	Throttle Control Motor	90980-11858
R11	Radio and Player with Display	90980-12183		Throttle Position Sensor	
R12	Radio and Player with Display	90980-12038	T 3	Transfer Shift Actuator	90980-11664
R13	Rheostat	90980-10797	T 4	Turbine Speed Sensor	90980-11156
R14	Rear Combination Light LH		T 5	Theft Deterrent ECU	90980-12169
R15	Rear Combination Light RH		T 6	Towing Brake Controller	90980-11603
R16	Rear Door Speaker LH	90980-10935	T 7	TRAC Off SW	90980-10933
R17	Rear Door Speaker RH		T 8	Transponder Key Computer	90980-11911
R18	Rear Seat Audio Controller	90980-12267	T 9	Turn Signal Flasher Relay	90980-10799
R19	Rear Speaker LH	90980-11013	T10	Tailgate Control SW	90980-11015
R20	Rear Speaker RH		T11	Television Camera	90980-11292
R21	Rear Window Defogger	90980-10359	T12	Tension Reducer Solenoid LH	90980-12063
R22	Rear Window Defogger		T13	Tension Reducer Solenoid RH	

cardiagn.com

cardiagn.com

cardiagn.com

