 
 
 
 
 
 
 
 


SST AND SSM

 
 
 
 
 
 
 
 
 
	Page
SST (SPECIAL SERVICE TOOLS)	C-2
SSM (SPECIAL SERVICE MATERIALS)	C-7

[illegible]

 
 
 
 
 
 
 
 
SST (SPECIAL SERVICE TOOLS)(Cont'

Section			CL	MT	PF	EA	RA	BR	SR	DM	BO	AC
Illustration	Part No.	Part Name										
	09303-55010	(Input Shaft Front Bearing Puller)								●		
	09304-30012	(Input Shaft Front Bearing Replacer)	●									
	09307-12010	(Extension Housing Bushing Replacer)		●								
	09308-00010	(Oil Seal Puller)		●	●	●	●		●			
	09308-10010	(Oil Seal Puller)					●					
	09308-55010	(Oil Seal Puller)					●					
	09309-36031	(Transmission Bearing Replacer)		●								
	09309-36041	(Transmission Bearing Replacer)		●								
	09310-36021	(Countershaft Bearing Puller)		●						●		
	09312-36010	(Input Shaft Remover)		●								
	09313-30021	(Detent Ball Plug Socket)		●								
	09315-00010	(Clutch Release Bearing Remover & Replacer)	●									
	09315-00021	(Clutch Release Bearing Remover & Replacer)	●									
	09316-60010	(Transmission & Transfer Bearing Replacer)	●	●		●	●					

 
 
 
 
 
SST (SPECIAL SERVICE TOOLS)(Cont'd)

Section			CL	MT	PR	FA	A	BR	SR	DM	BO	AC
Illustration	Part No.	Part Name										
	09326-20011	(Output Shaft Bearing) Lock Nut Wrench		●								
	09330-00020	(Companion Flange) Holding Tool			●		●					
	09333-00012	(Clutch Diaphragm) Spring Aligner	●									
	09332-25010	(Universal Joint) Bearing Remover & Replacer			●							
	09504-00011	(Differential Side) Bearing Adjusting Nut Wrench					●					
	09506-30011	(Differential Drive) Pinion Bearing Cone Replacer		●								
	09510-36010	(Rear Hub & Drum) Puller					●					
	09513-36020	(Rear Axle Bearing) Lock Nut Wrench					●					
	09513-36030	(Rear Axle Bearing) Lock Nut Wrench					●					
	09514-35011	(Rear Wheel Bearing) Puller	●									
	09517-12010	(Rear Axle Shaft) Oil Seal Replacer					●					
	09520-00031	(Rear Axle Shaft) Puller					●					
	09527-30010	(Rear Axle Shaft) Bearing Remover							●			
	09550-10012	("B" Replacer Set)				●	●			●		

 
 
 
 
 
SST (SPECIAL SERVICE TOOLS)(Cont'

Section			CL	MT	PS	A	RA	BR	SR	DM	BO	AC
Illustration	• Part No.	• Part Name										
	09550-55010	(Differential Replacer Set)					●					
	09557-22022	(Companion Flange Remover & Replacer)			●							
	09601-37010	(King Pin Bushing Remover & Replacer)				●						
	09601-67010	(King Pin Bushing Remover and Replacer)				●			●			
	09608-12010	(Front Hub & Drive Pinion Bearing Replacer Set)		●					●			
	09608-20011	(Front Hub & Drive Pinion Bearing Tool Set)						●				
	09608-30011	(Front Hub & Drive Pinion Bearing Tool Set)				●		●	●			
	09608-35013	(Axle Hub & Drive Pinion Bearing Tool Set)				●	●		●			
	09609-20011	(Steering Wheel Puller)							●			
	09611-36020	(Tie Rod End Puller)				●			●			
	09612-22011	(Tilt Handle Bearing Replacer)							●			
	09612-30012	(Steering Worm Bearing Puller)						●				
	09612-65013	(Steering Worm Bearing Puller)							●			
	09613-26010	(Steering Worm Bearing Cone Remover)							●			

SST (SPECIAL SERVICE TOOLS)(Cont'd)

Section			CL	MT	PR	FA	A	BR	SR	DM	BO	AC
Illustration	• Part No.	• Part Name										
	09616-00010	(Steering Worm Bearing Adjusting Socket)							●			
	09620-30010	(Steering Gear Box Replacer Set)							●	●		
	09632-36010	(Steering Vane Pump Bearing Replacer)							●			
	09703-30010	(Brake Shoe Return Spring Tool)						●				
	09707-37010	(Spring Bushing Remover & Replacer)					●					
	09709-29017	(LSPV Gauge Set)						●				
	09710-22020	(Front Suspension Bushing Tool Set)					●					
	09717-20010	(Brake Shoe Return Spring Remover)						●				
	09718-00010	(Shoe Hold Down Spring Driver)						●				
	09718-20010	(Brake Shoe Return Spring Replacer)						●				
	09736-27010	(Booster Diaphragm Remover & Replacer)						●				
	09737-00010	(Brake Booster Push Rod Gauge)	●					●				
	09751-36011	(Brake Tube Union Nut 10 x 12 Wrench)	●			●		●			●	
	09753-00012	(Brake Booster Overhaul Tool)	●					●				

SST (SPECIAL SERVICE TOOLS)(Cont'd)

Section			CL	MT	PR	A	RA	BR	SR	DM	BO	AC
Illustration	• Part No.	• Part Name										
	09753-30020	(Oil Seal Replacer)						●				
	09753-40010	(Base Plate)						●				
	09812-00010	(Door Hinge Set Bolt Wrench Set)									●	
	09830-36010	(Front Mounting Cushion Remover & Replacer)									●	
	09910-00015	(Puller Set)		●								
	09921-00010	(Spring Tension Tool)		●				●				
	09923-00020	(Hexagon 8 mm Wrench)								●		
	09950-00020	(Bearing Remover)		●			●					
	09950-20015	(Universal Puller)		●			●		●			

SSM (SPECIAL SERVICE MATERIALS)

Part Name	Part No.	Sec.	Use, etc.
Seal packing yellow (THREE BONDO 1102)	08826-00012	DM	at cylinder head
Anaerobic adhesive and sealant (THREE BONDO 1324)	08833-00070	DM	On and Oil pump set bolts or check valve No. 2 of power control valve. Upper of plunger