 




Seat Belt
Warning



Back-u

7

FUEL
LEVEL SENDER
W-B

WATER
TEMP. SENDER

From Igniter
(1-6)

PICKUP SENSOR
B-R

SEAT BELT WARNING LIGHT
(COMB. METER)

SEAT BELT
WARNING RELAY

BUCKLE SW
W-B

From "TAIL"
Fuse (3-1)

G-R
R-L
BACK-UP BUZZER

LH
WB
R-L
BACK-UP LIGHTS



ts

Stop Lights


8

LHD 24V) 7.5A
Ex. LHD 24V) 15A
STOP

STOP LIGHT SW
G-R
G-L



RH



 
LH
WB
G-L
STOP LIGHTS
WB
G-L
RH





Combination Meter


5

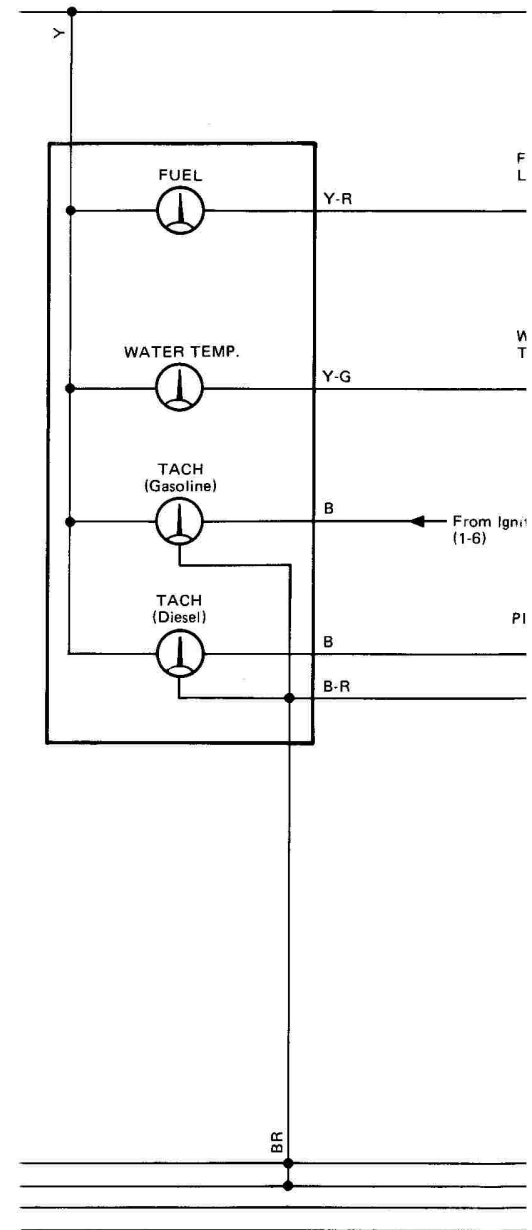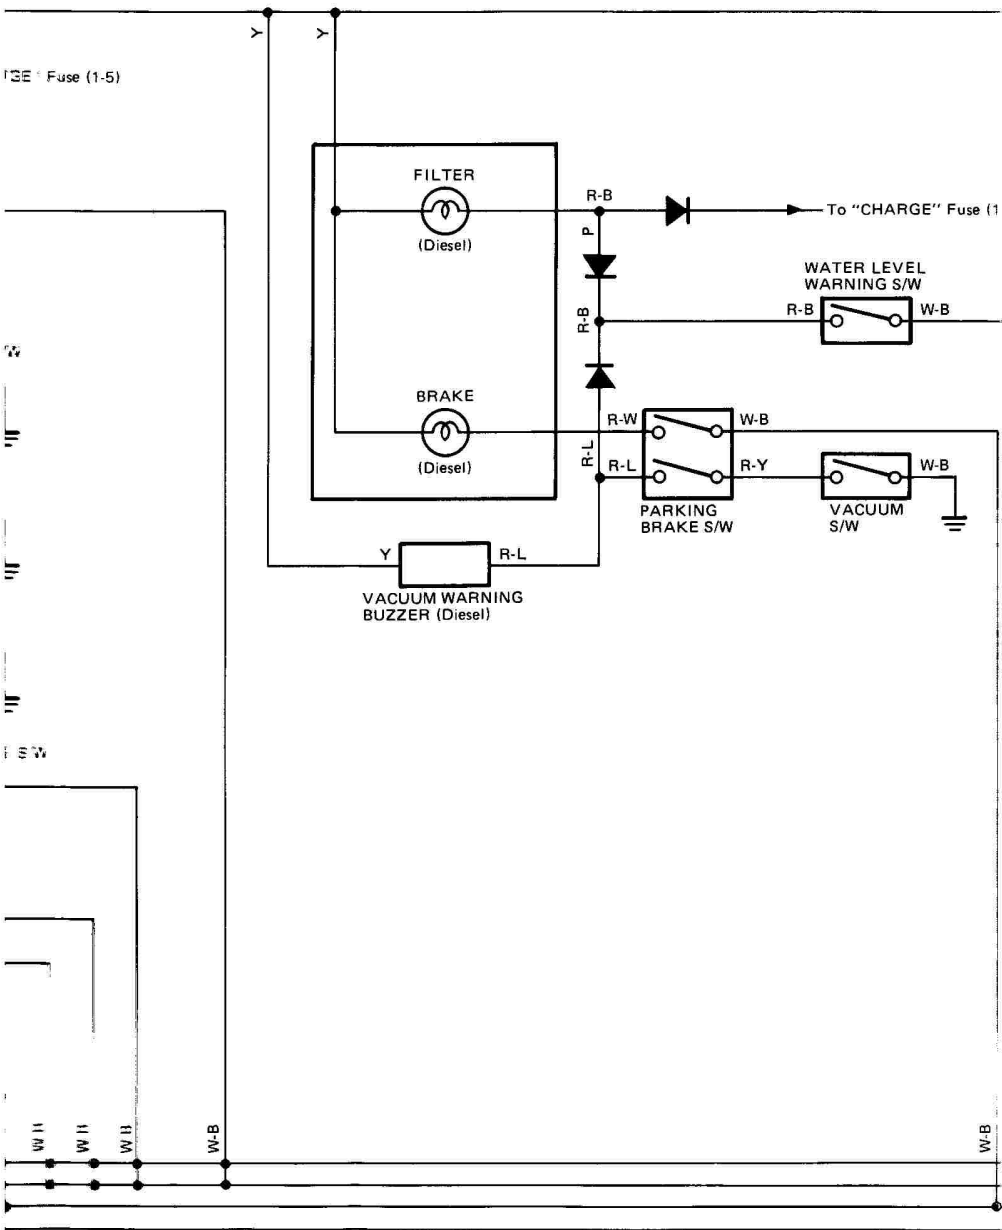

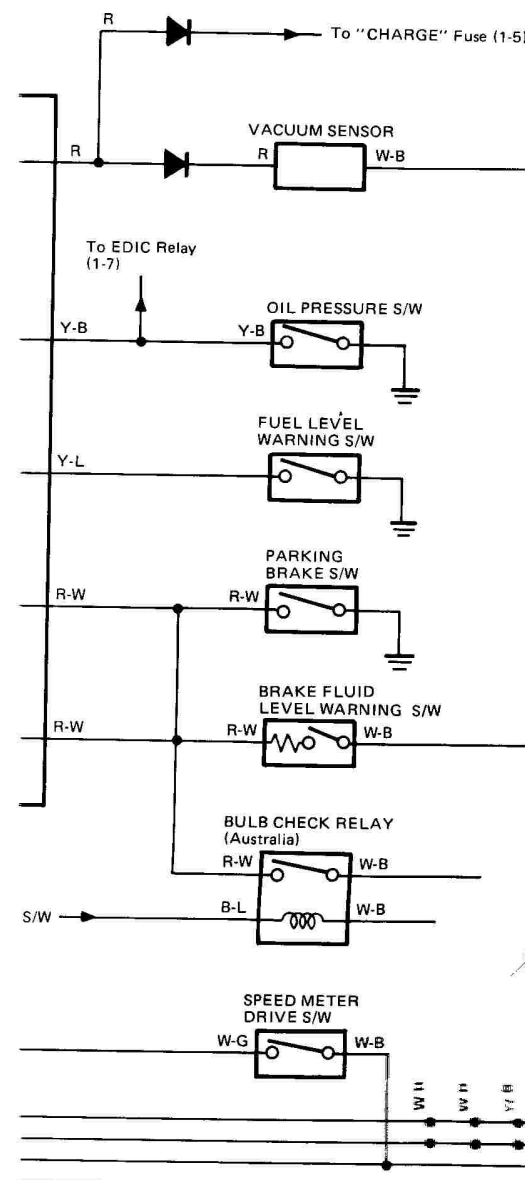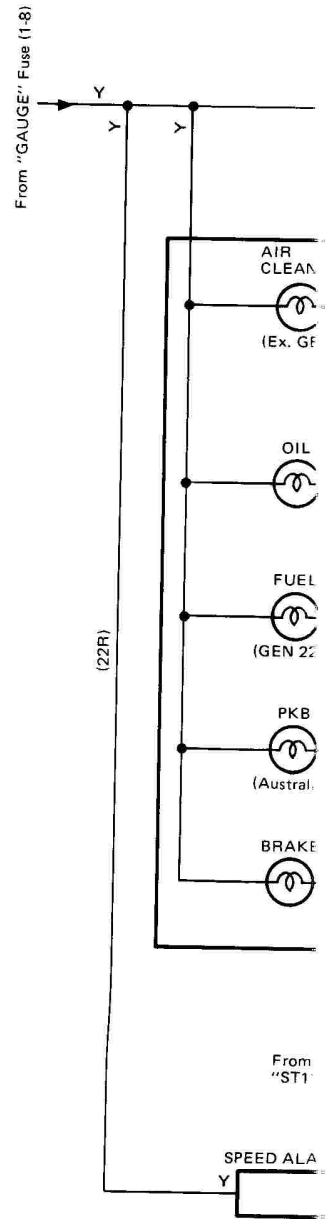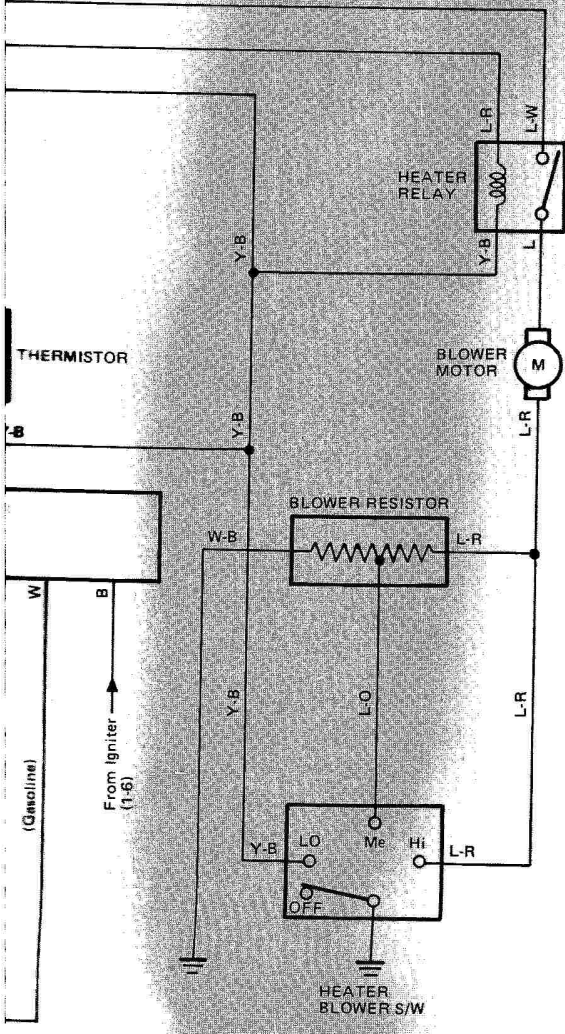

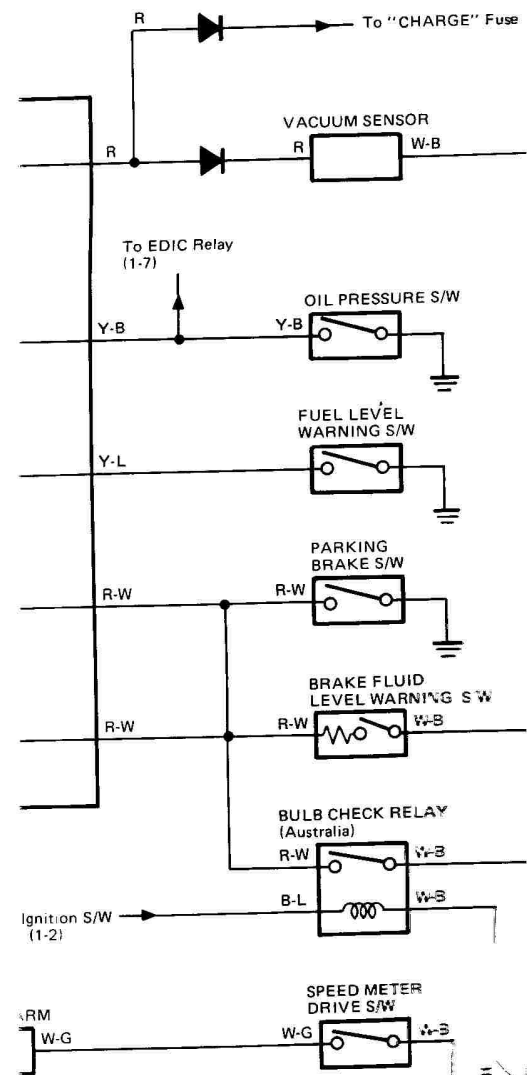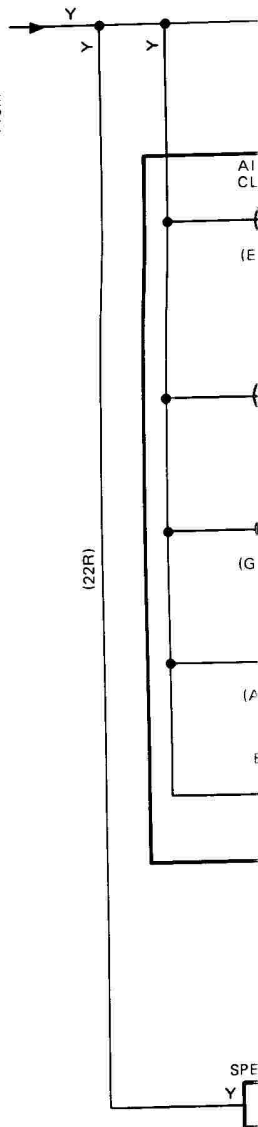

2 DYNA, Wide Cab (Cont'd)

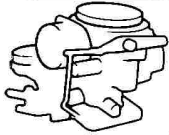



Carburetor

B

E

F

G

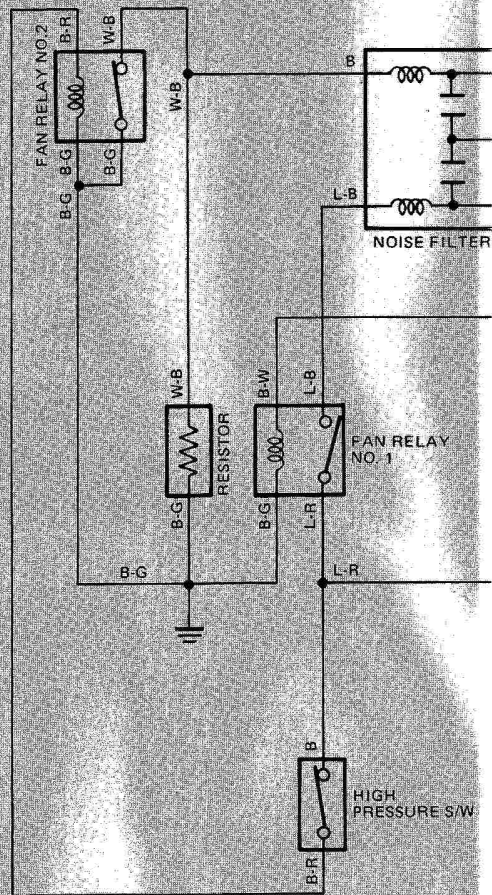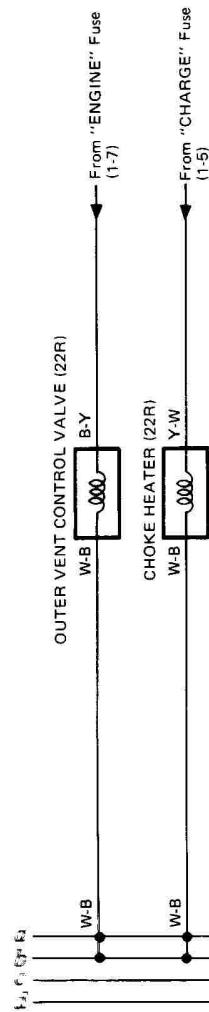

Grounding


a = Located on front frame

b = Located on front frame

c = Located



Air Conditioner, Cooler and Heater

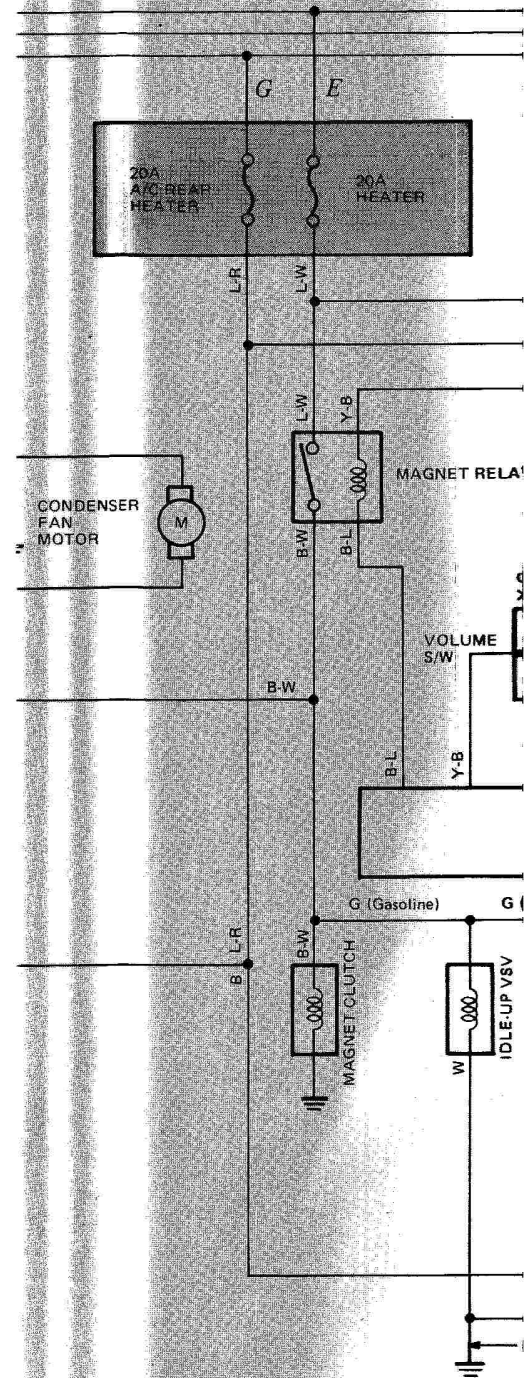

er of instrument panel

a = Located in frame of last crossmember