





F RELAY LOCATIONS

[Engine Compartment]

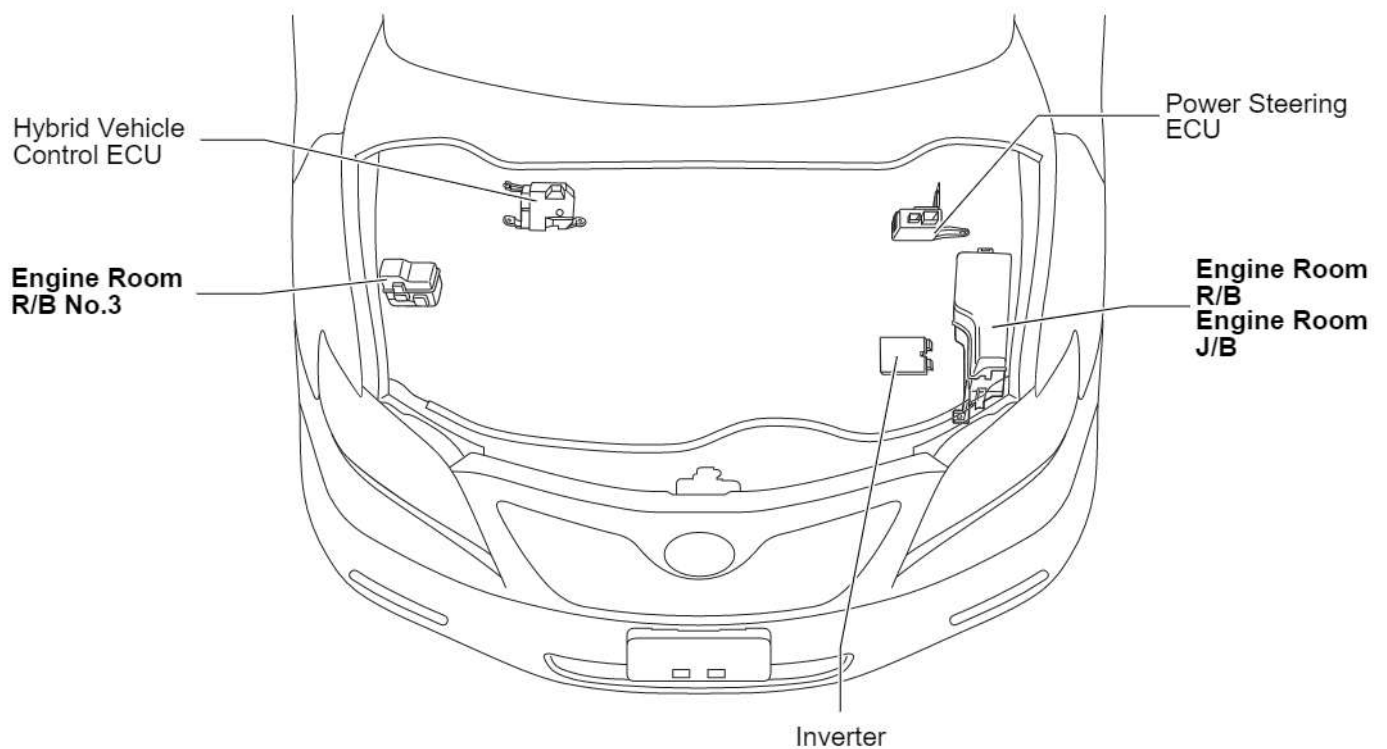


[Instrument Panel]

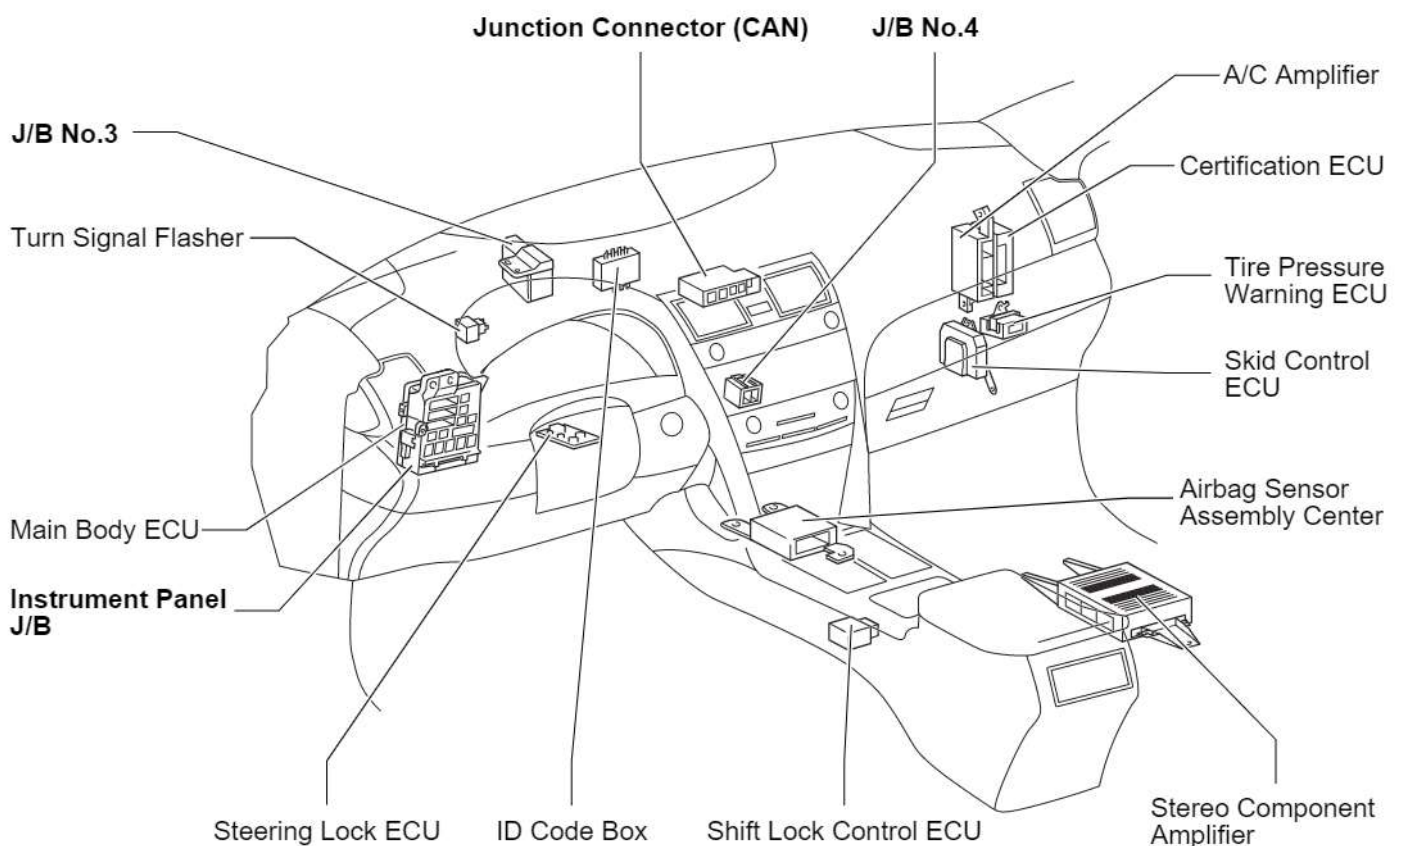

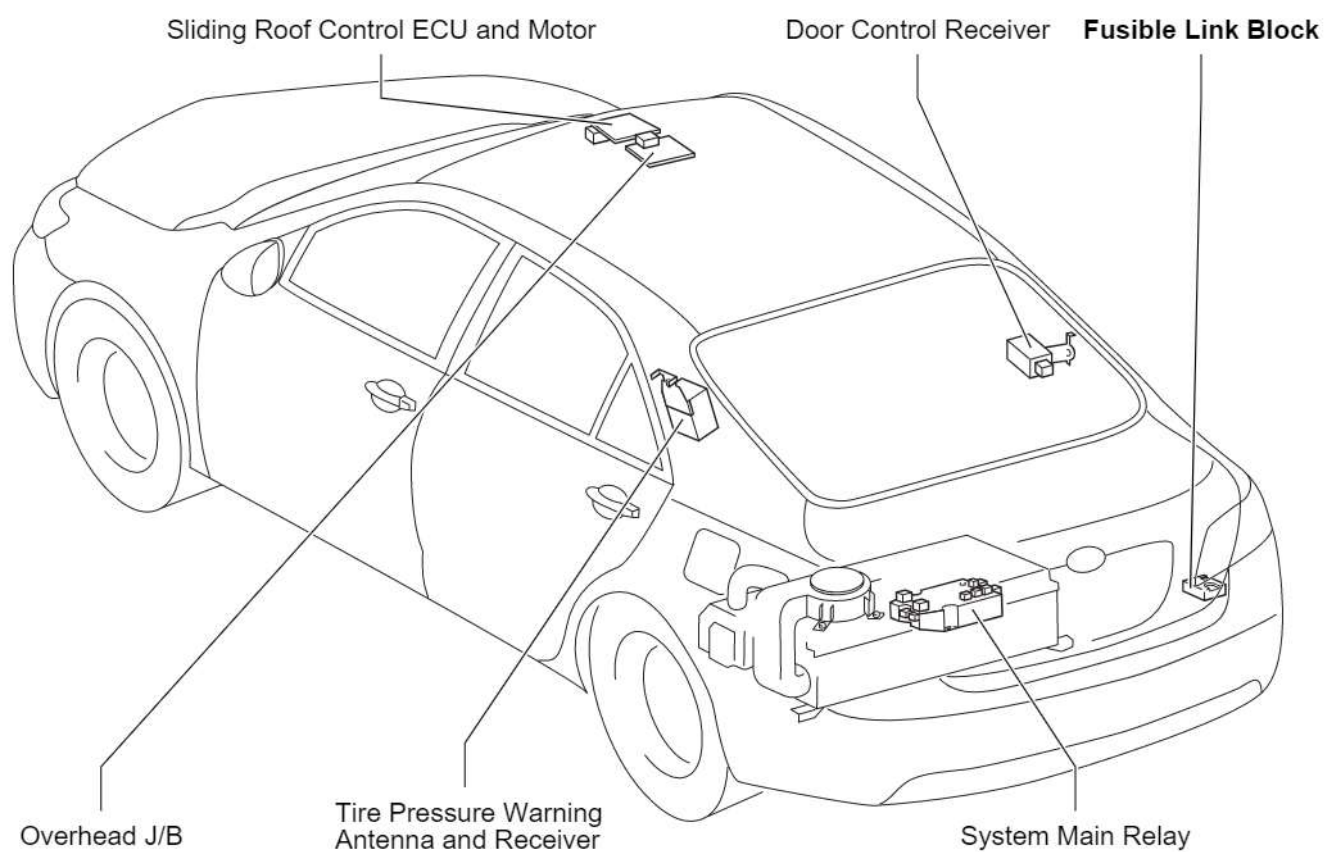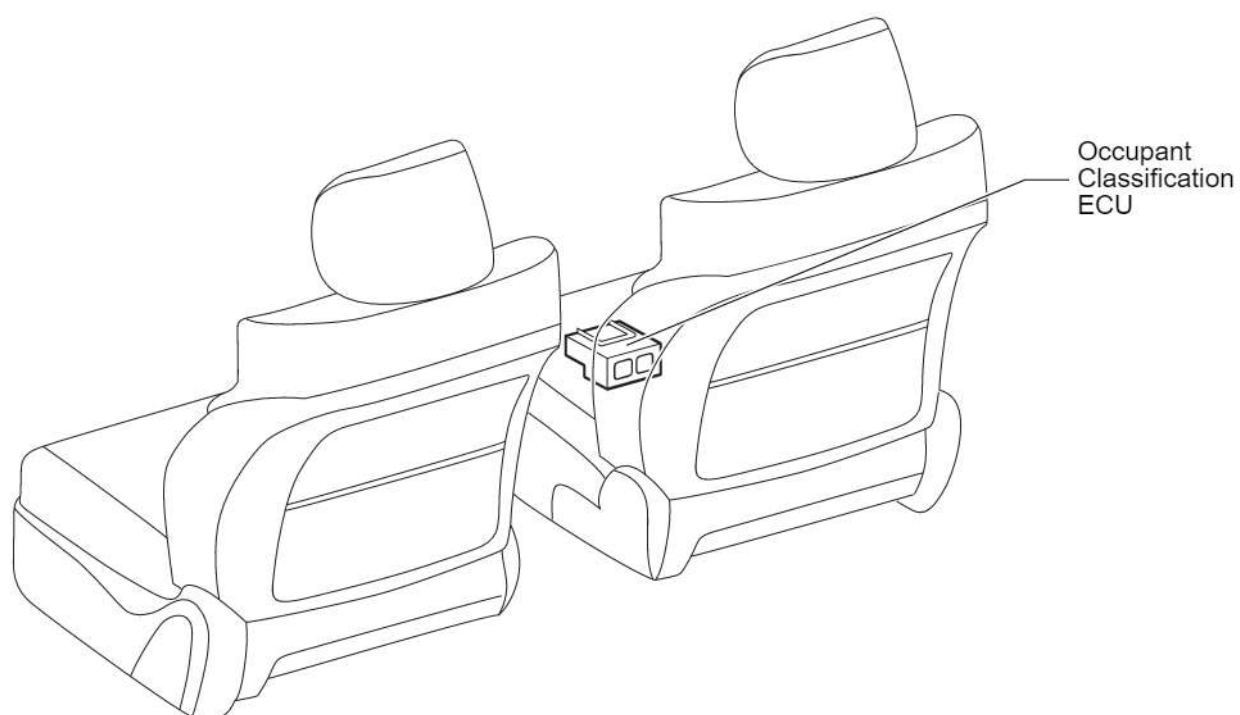[Body]**[Seat]**

F RELAY LOCATIONS


③ : Engine Room R/B No.3 Engine Compartment Right (See Page 20)

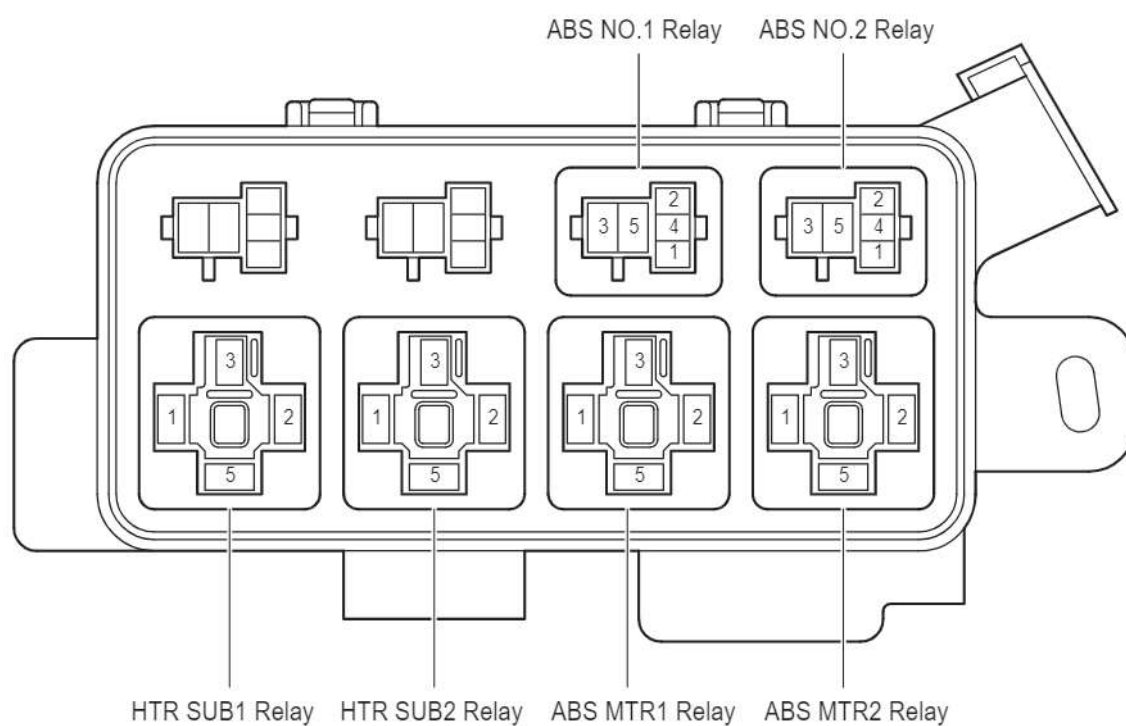

① : Engine Room R/B

○ : Engine Room J/B


Engine Compartment Left (See Page 20)

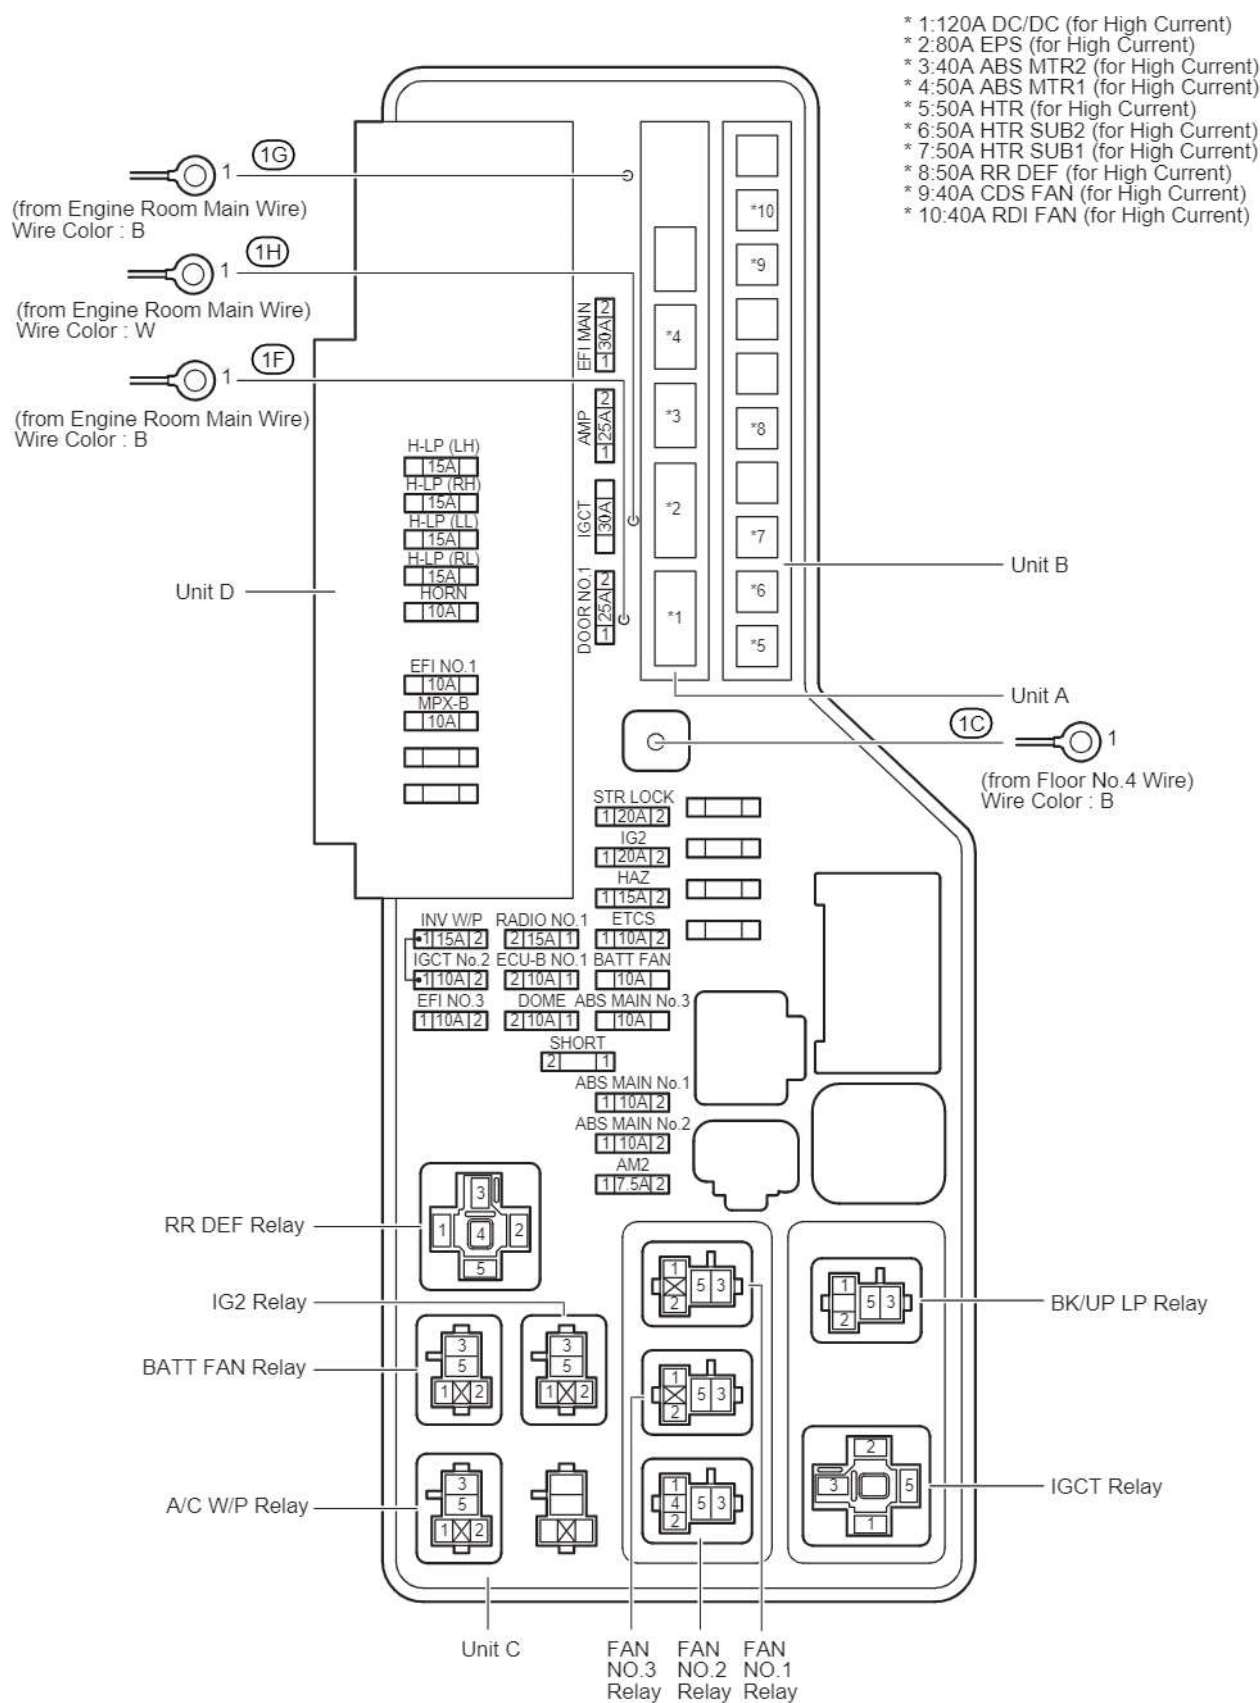


F RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Left (See Page 20)
○ : Engine Room J/B	

Unit D

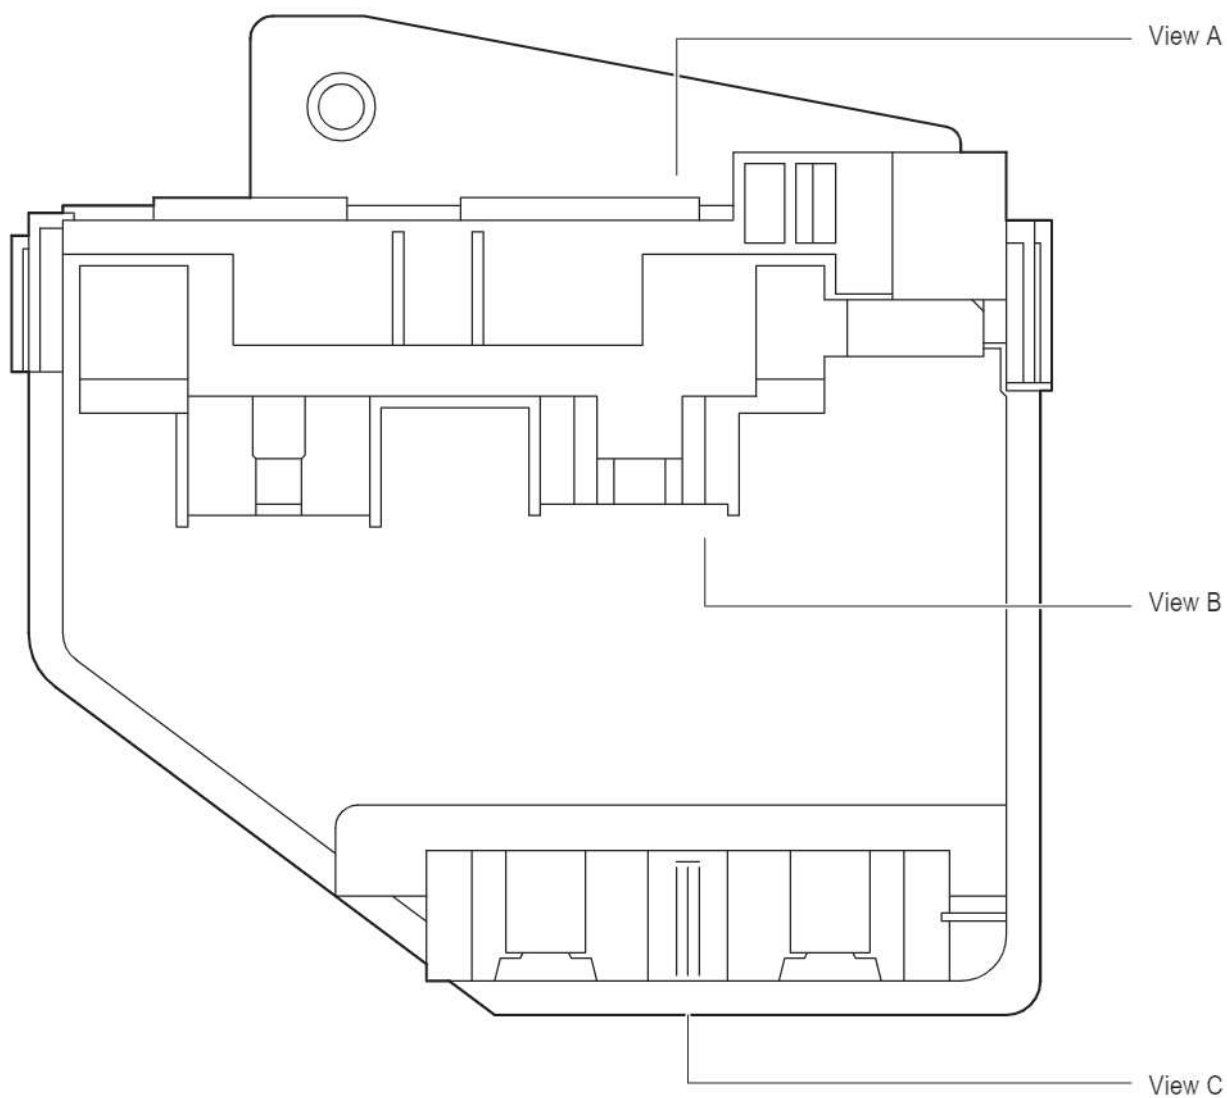


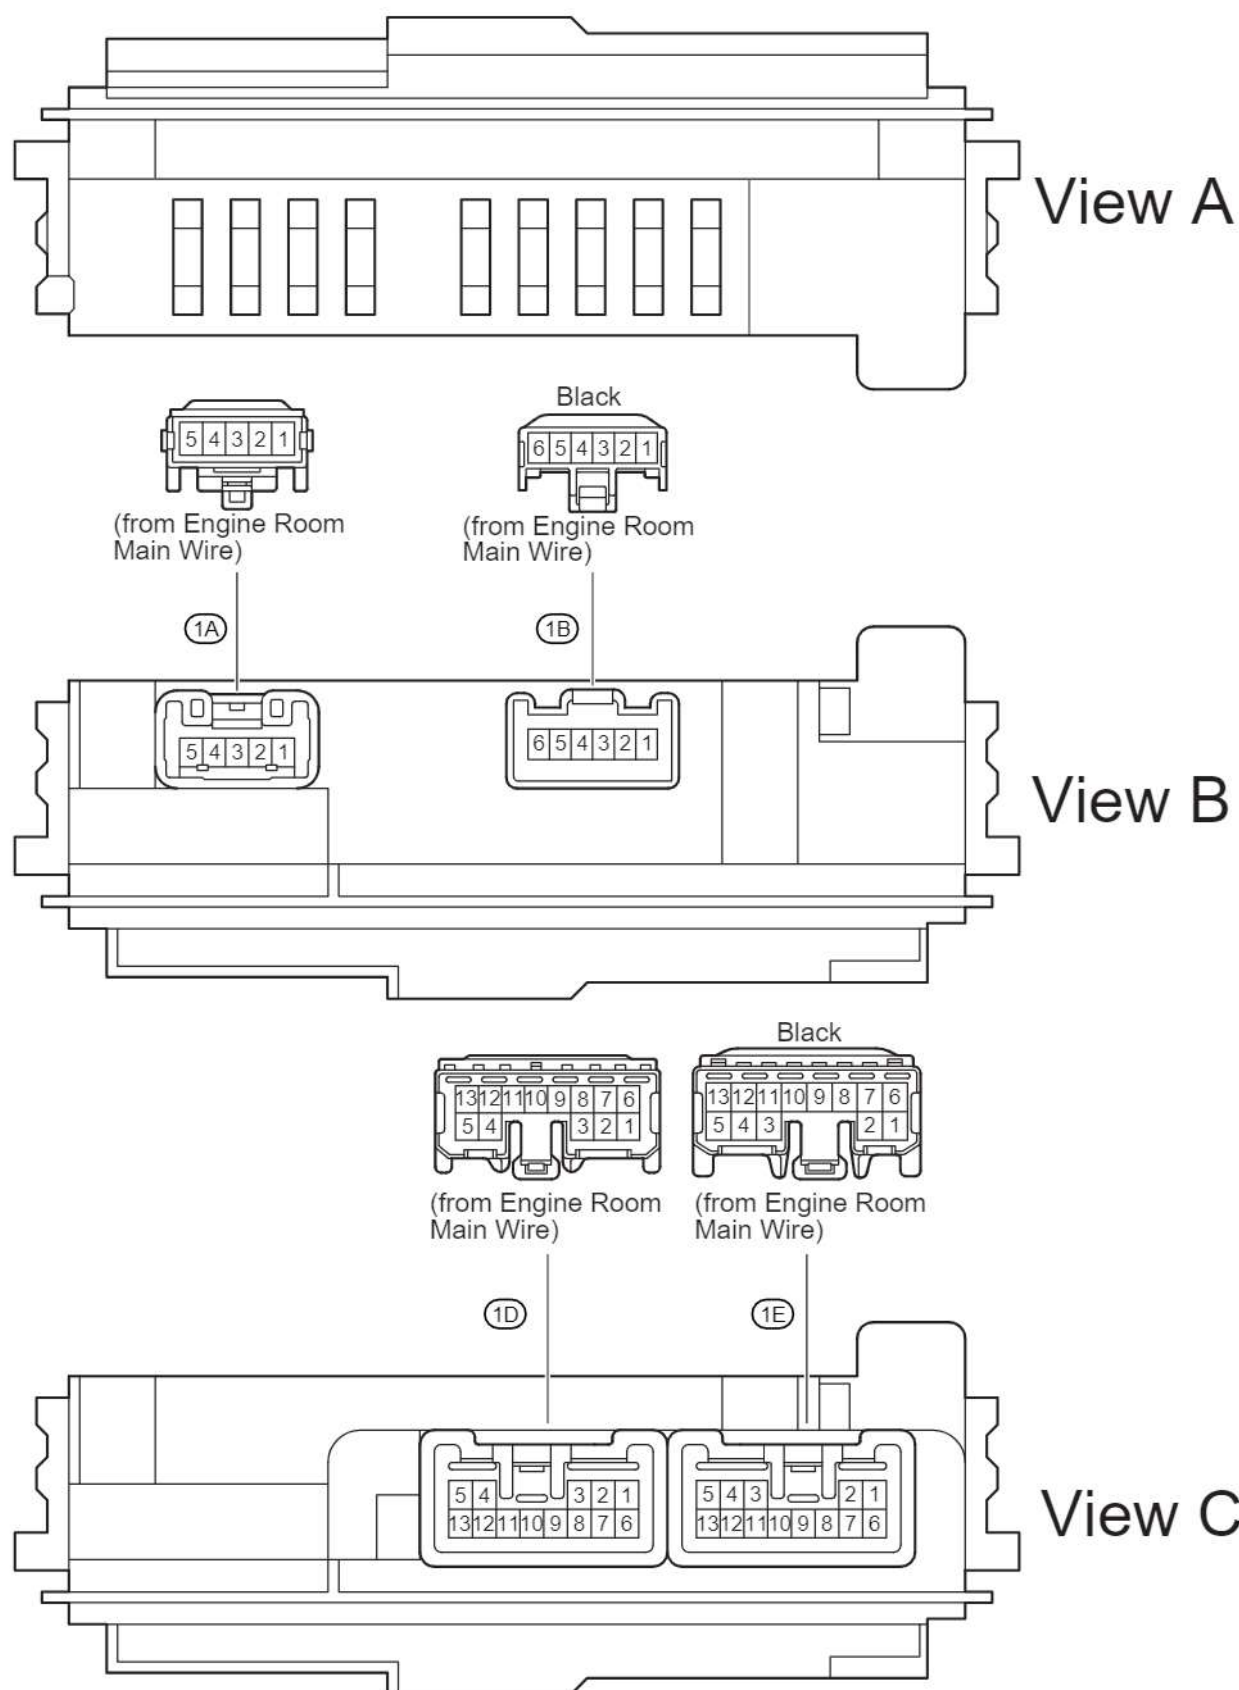

[Engine Room R/B and Engine Room J/B Inner Circuit]




(Cont'd)

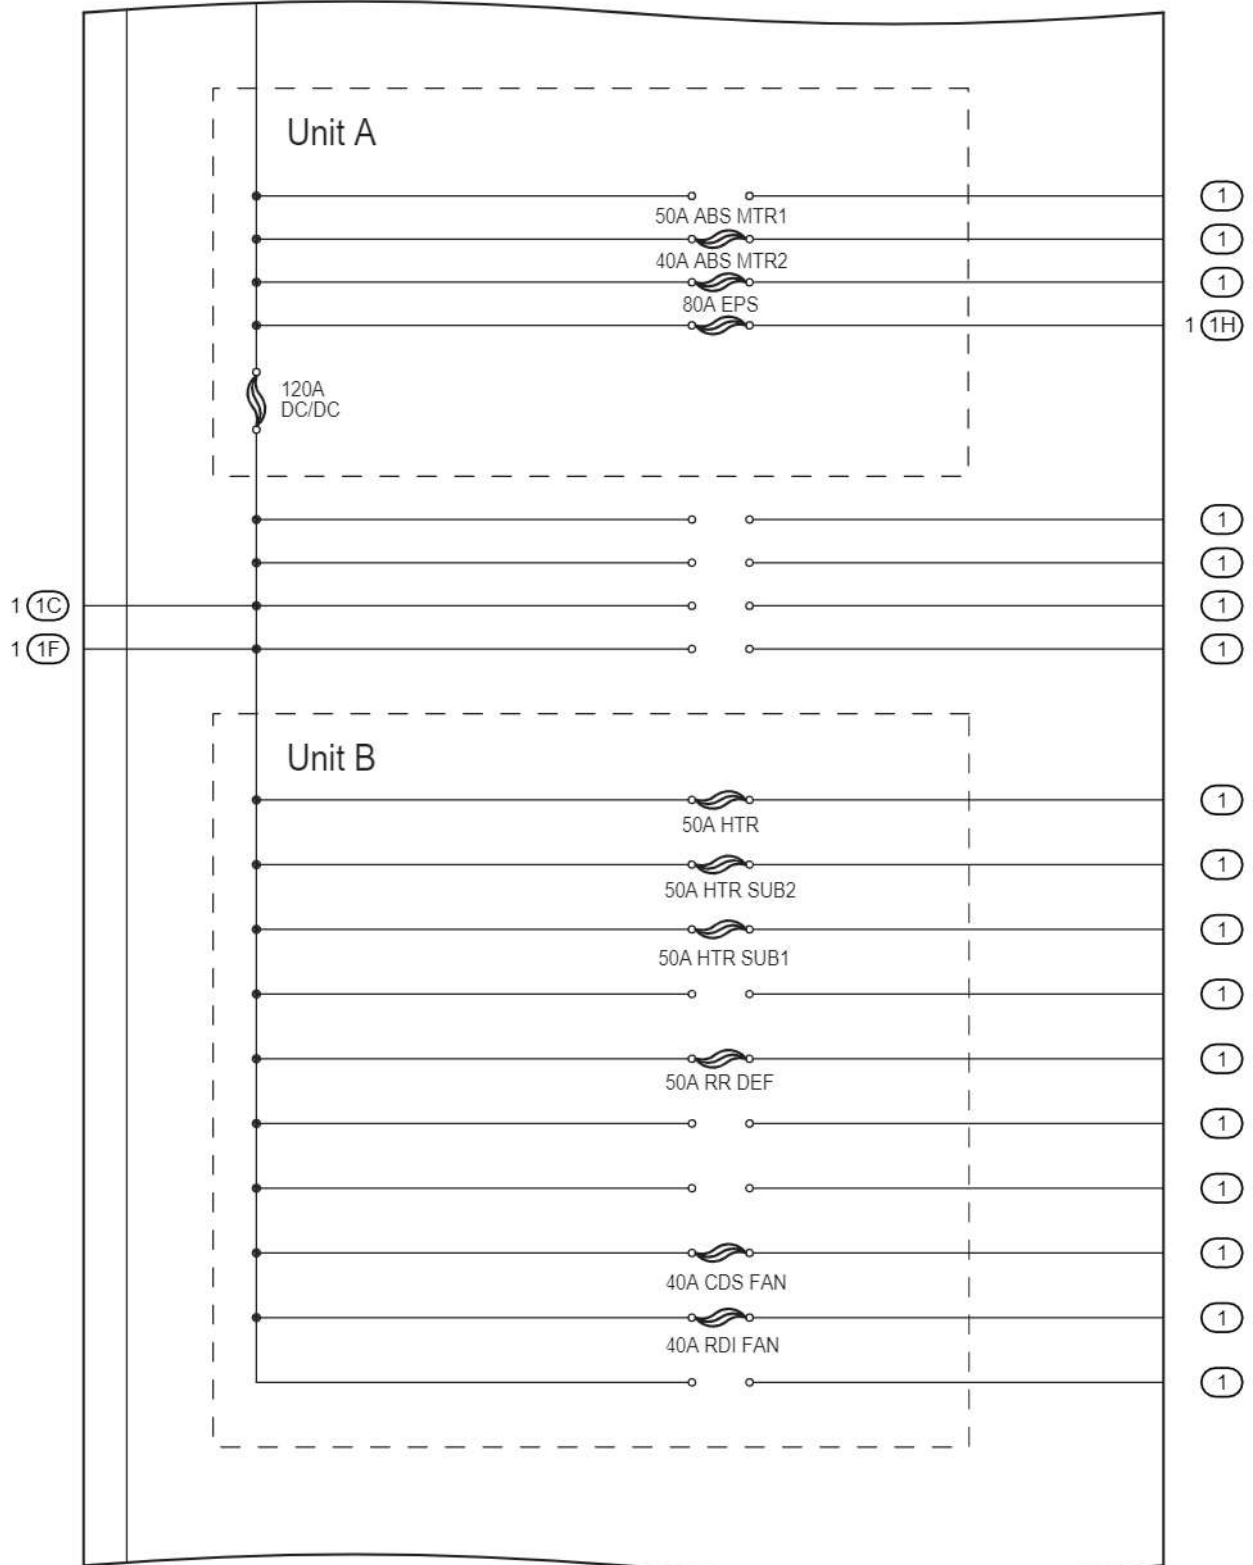


(Cont. Next Page)

F RELAY LOCATIONS


[Engine Room R/B and Engine Room J/B Inner Circuit]

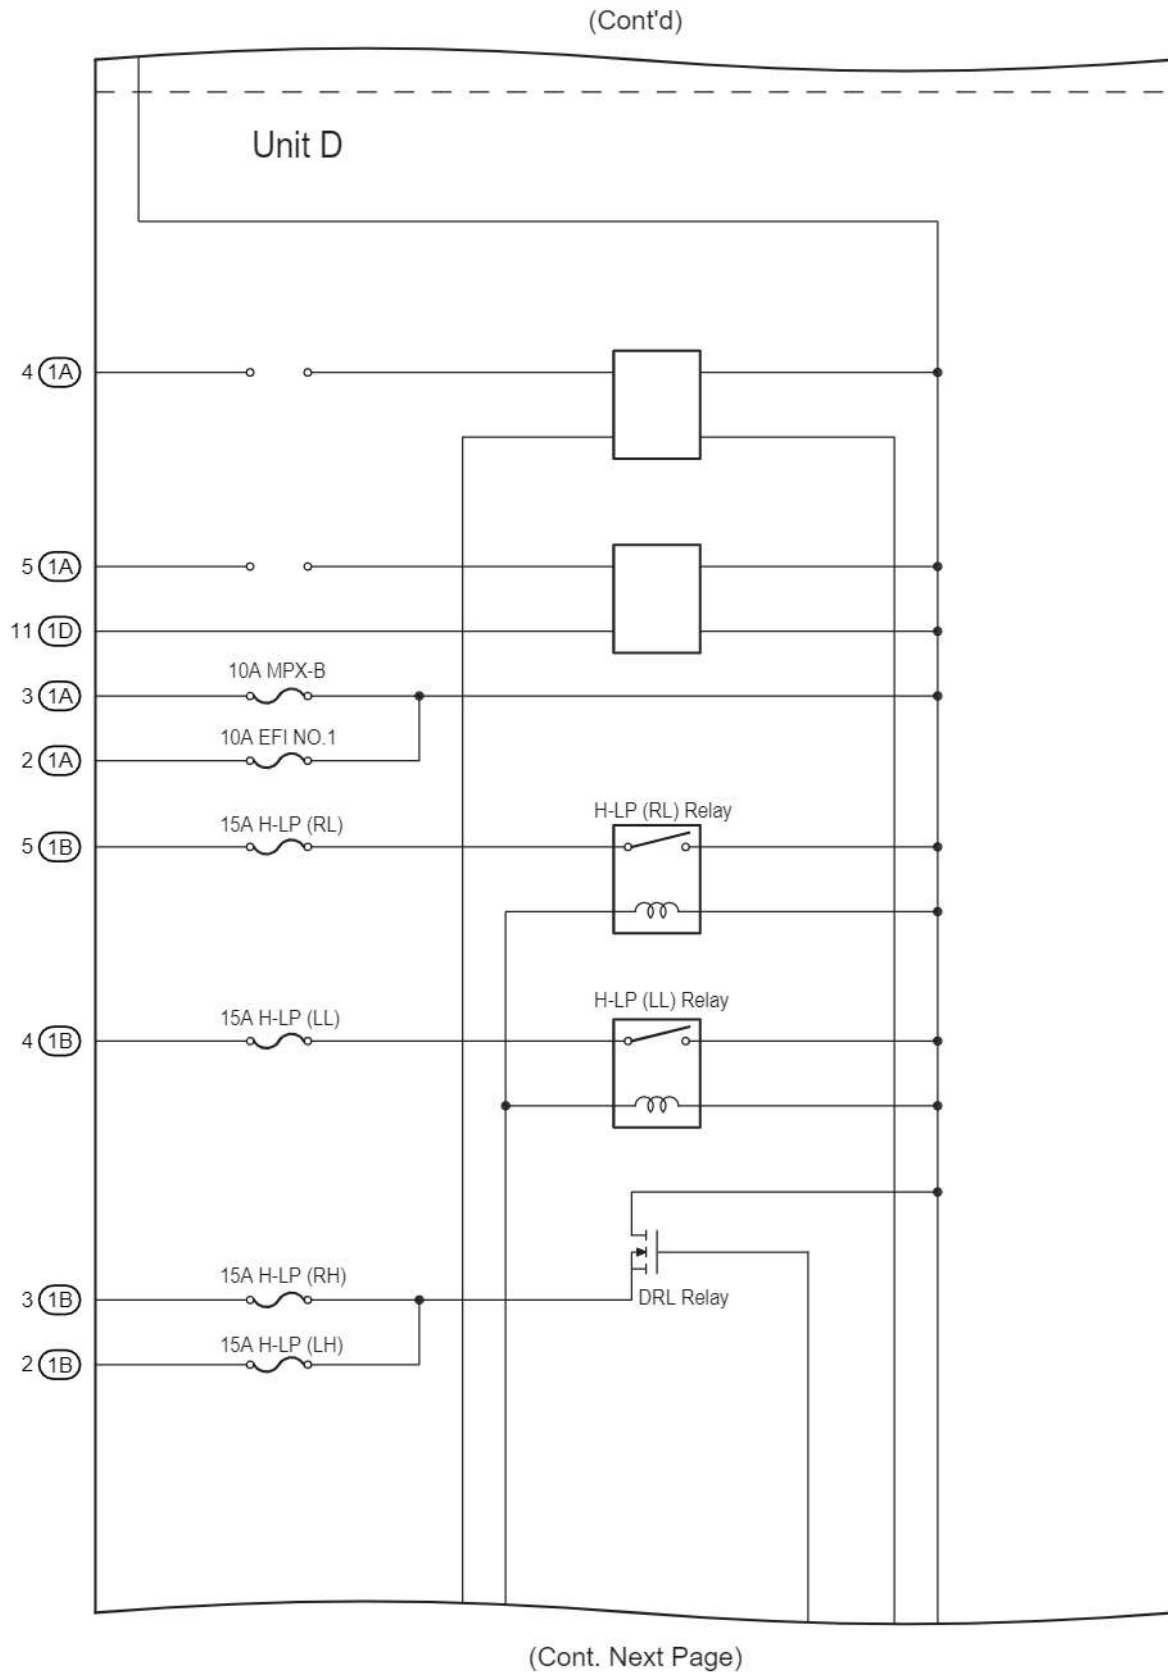


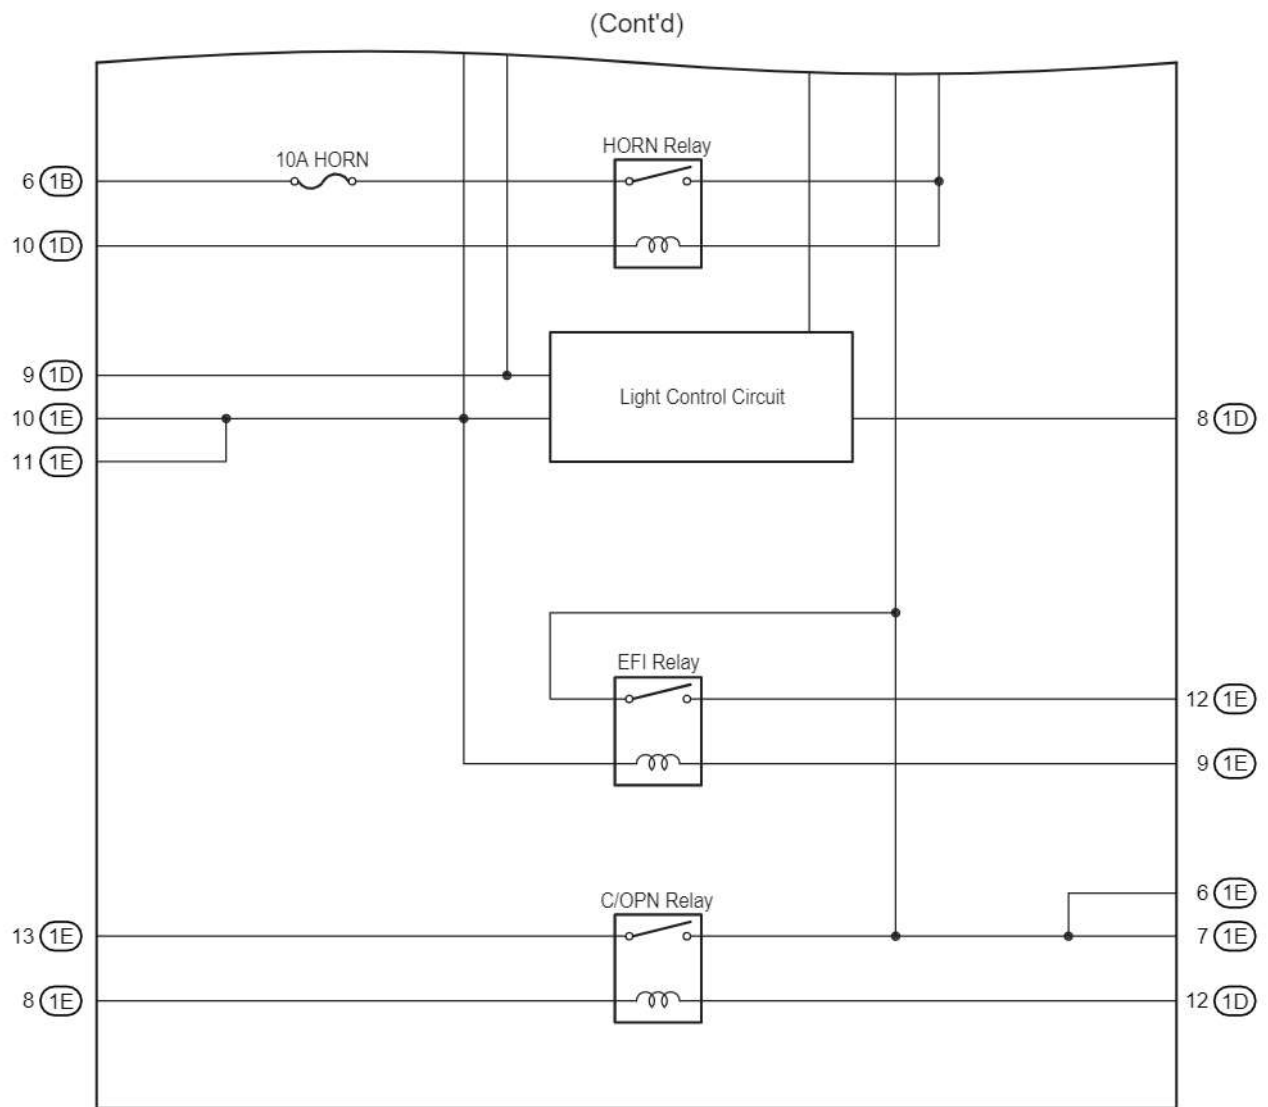

F RELAY LOCATIONS


 : Instrument Panel J/B Cowl Side Left (See Page 20)

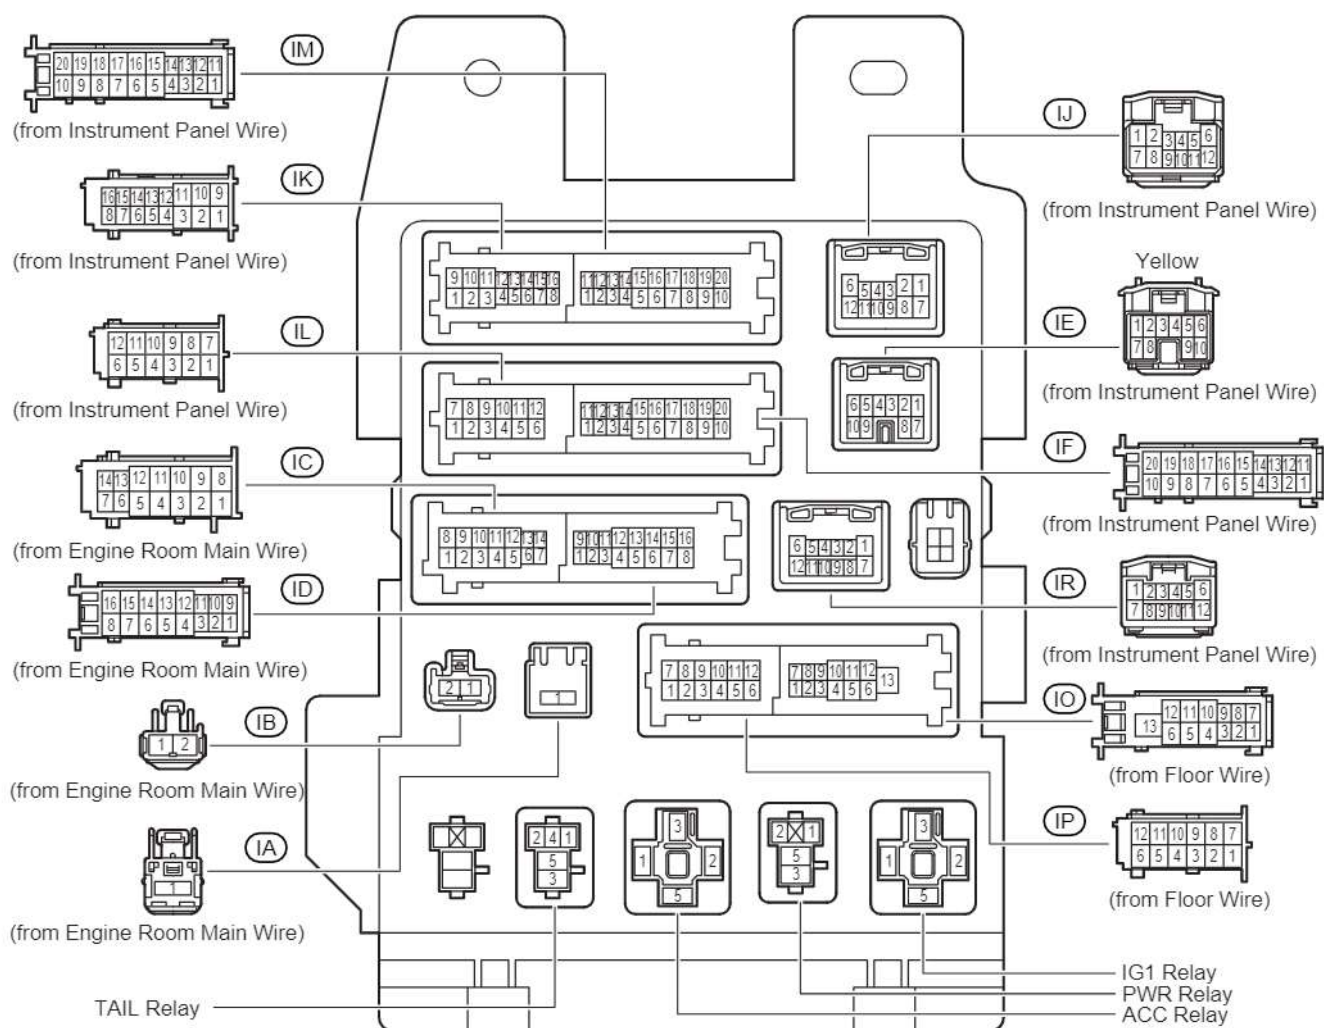

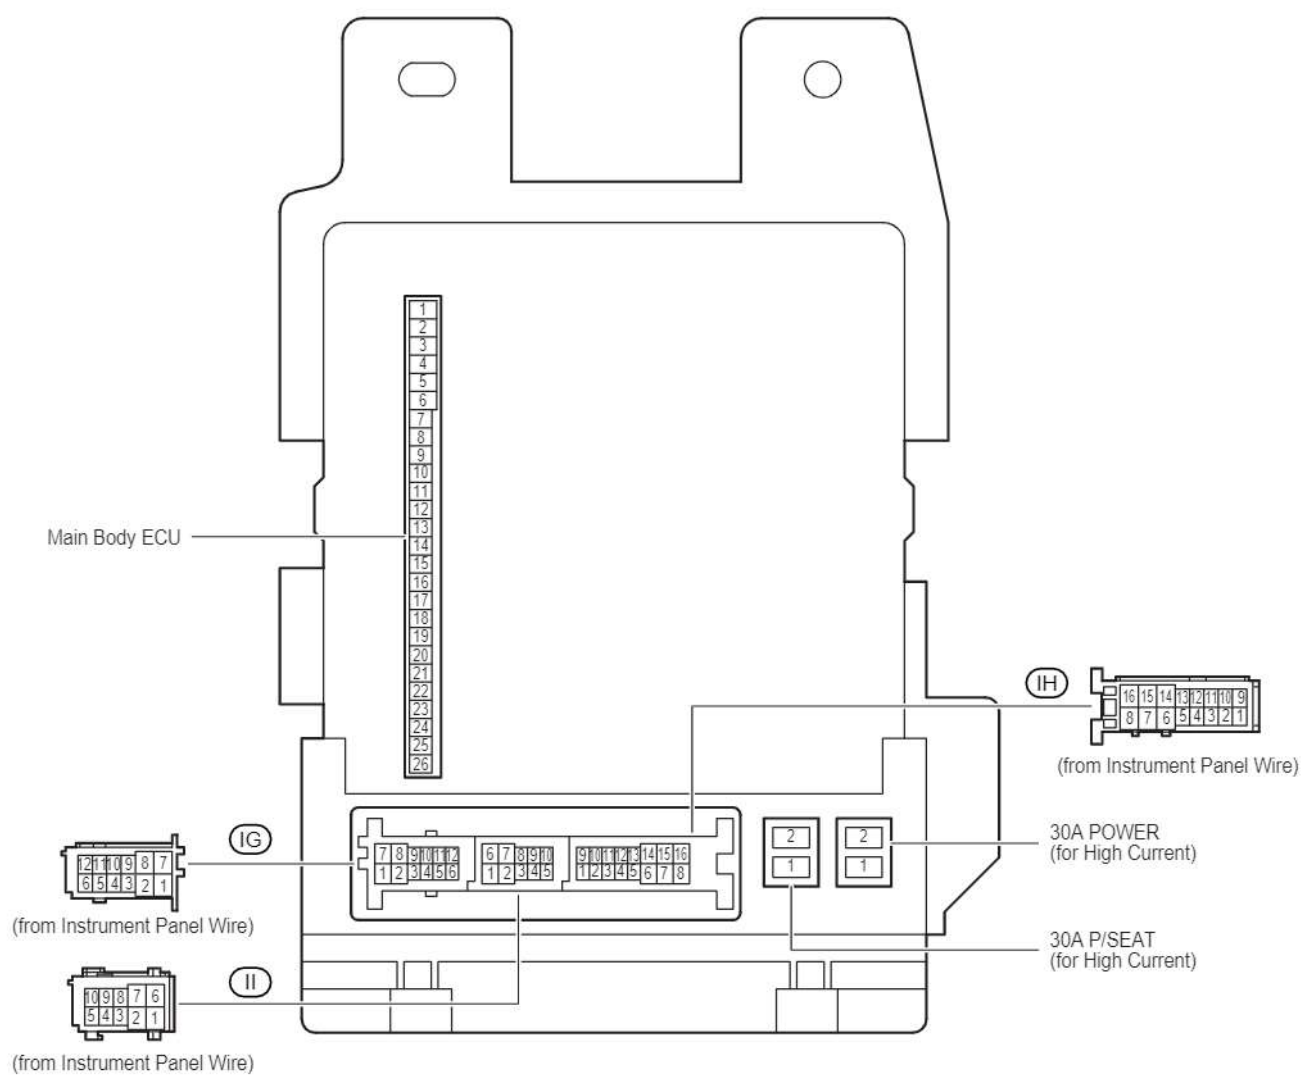


F RELAY LOCATIONS

 : Instrument Panel J/B Cowl Side Left (See Page 20)

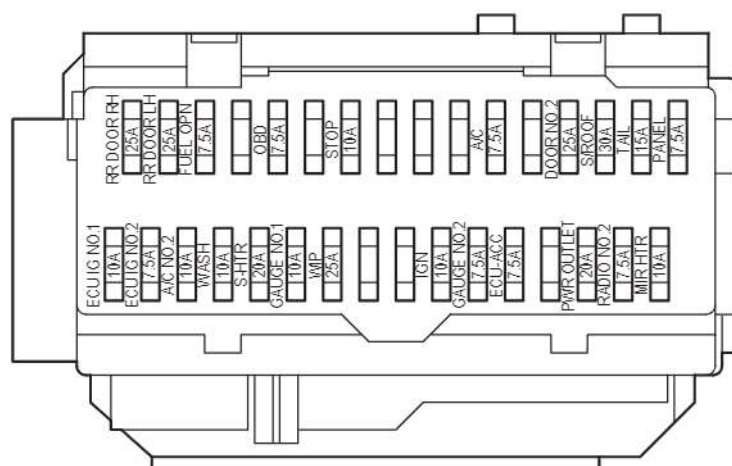


[Instrument Panel J/B Inner Circuit]

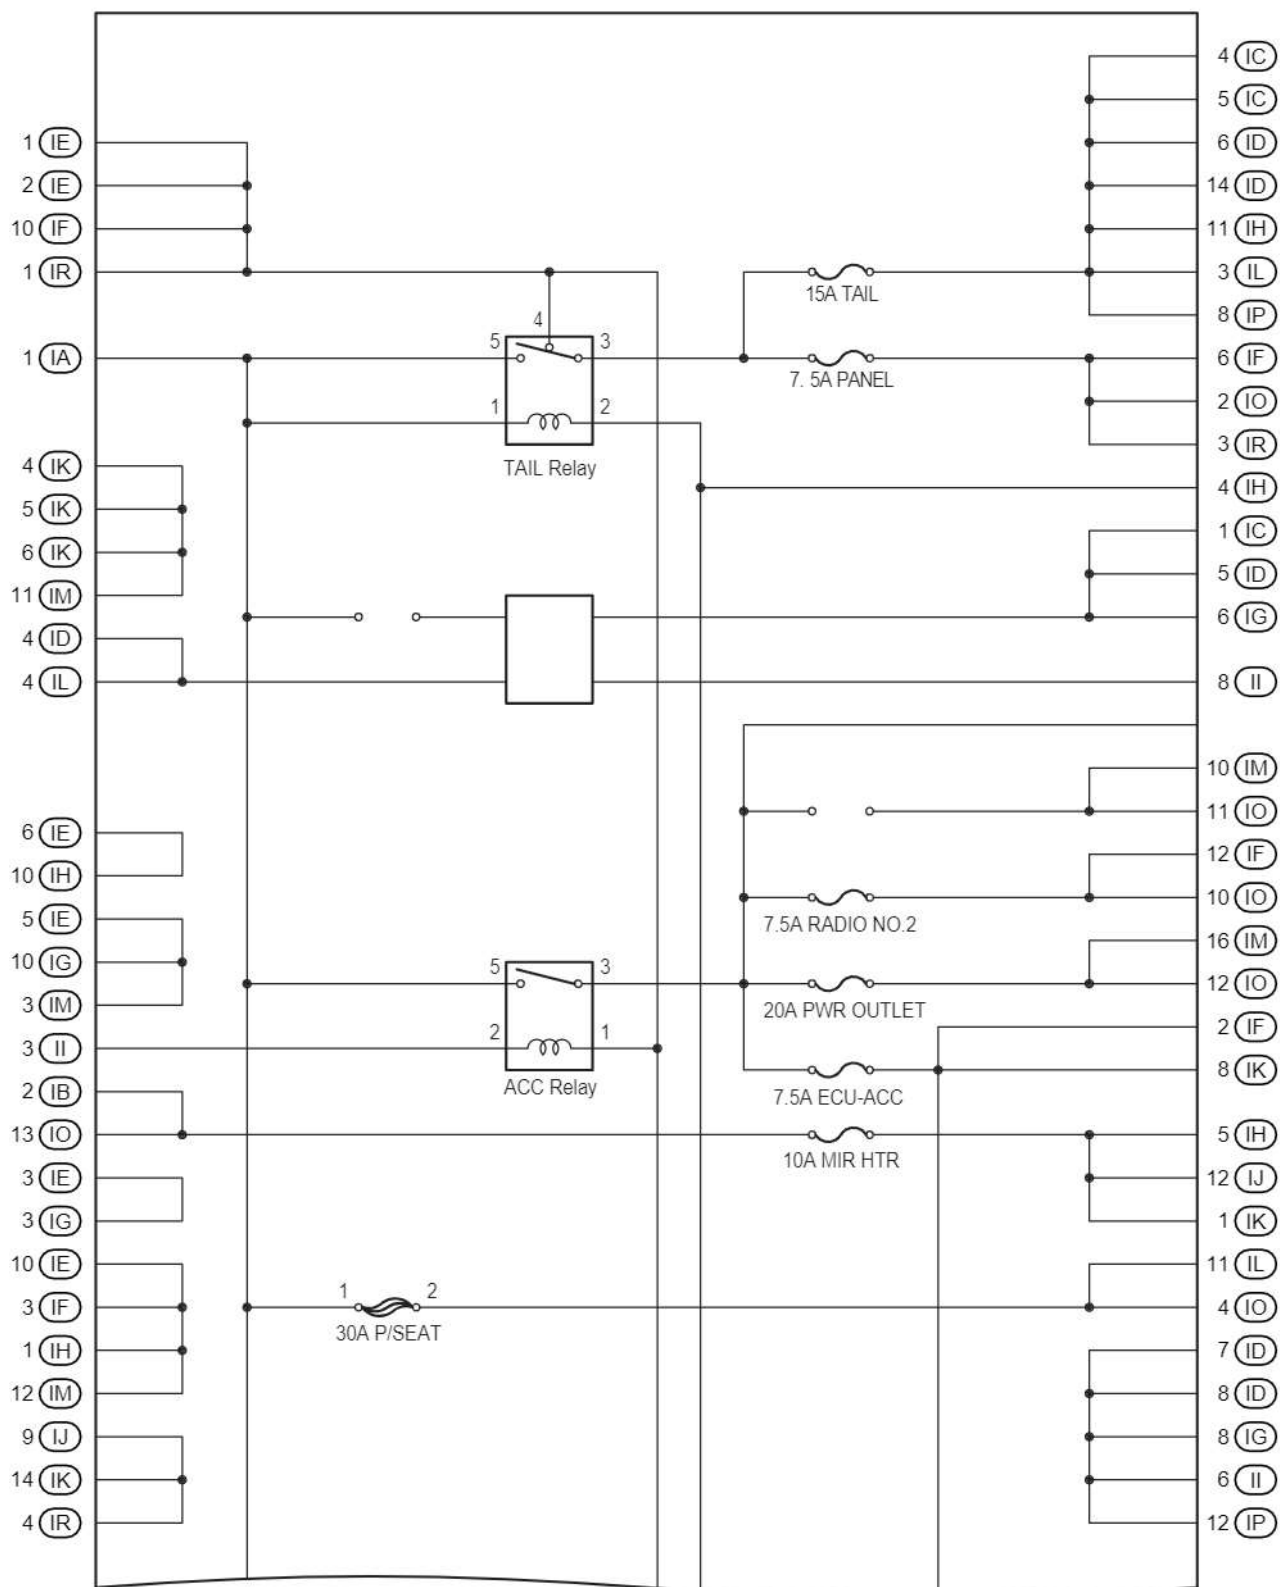

(Cont. Next Page)

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

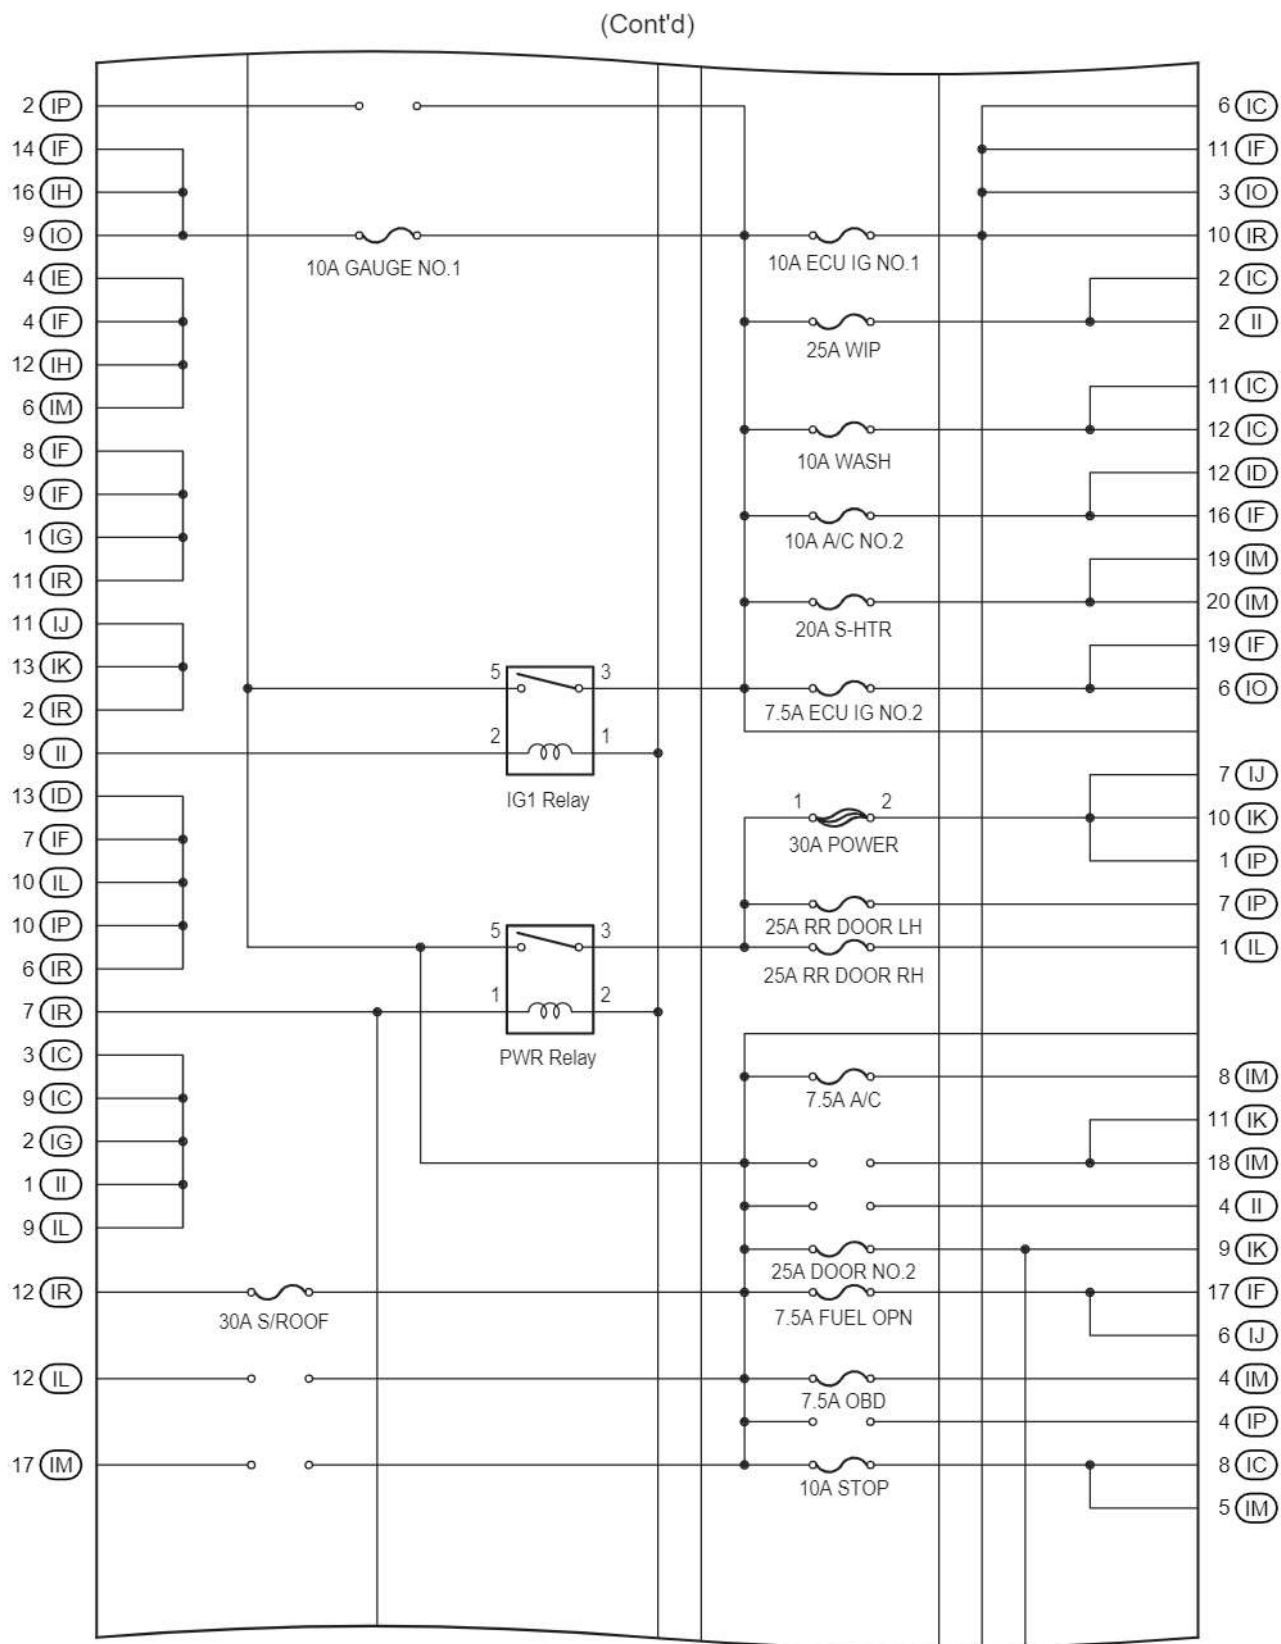


The diagram illustrates the internal wiring of the Main Body ECU. It features a central horizontal bus with various pins labeled: 12, 3, 18, 21, 13, 23, 24, 19, 5, 7, 1, 22, 15, 2. Below this bus, specific functions are assigned to pins: 14 (UL1 LIN1), 16 (LCTY), 17 (LSWL), 20 (HORN), 25 (HORN), and 26 (HORN). To the right of the bus, additional functions are listed: 6 (ALTB), 4 (GND2), 8 (HRLY), 9 (L1), 10 (L2), and 11 (DRL). The diagram also shows two fuses: a 7.5A GAUGE NO.2 fuse and a 10A IGN fuse. The central label 'Main Body ECU' is prominently displayed.

F RELAY LOCATIONS


○ : J/B No.3

Behind the Combination Meter (See Page 20)

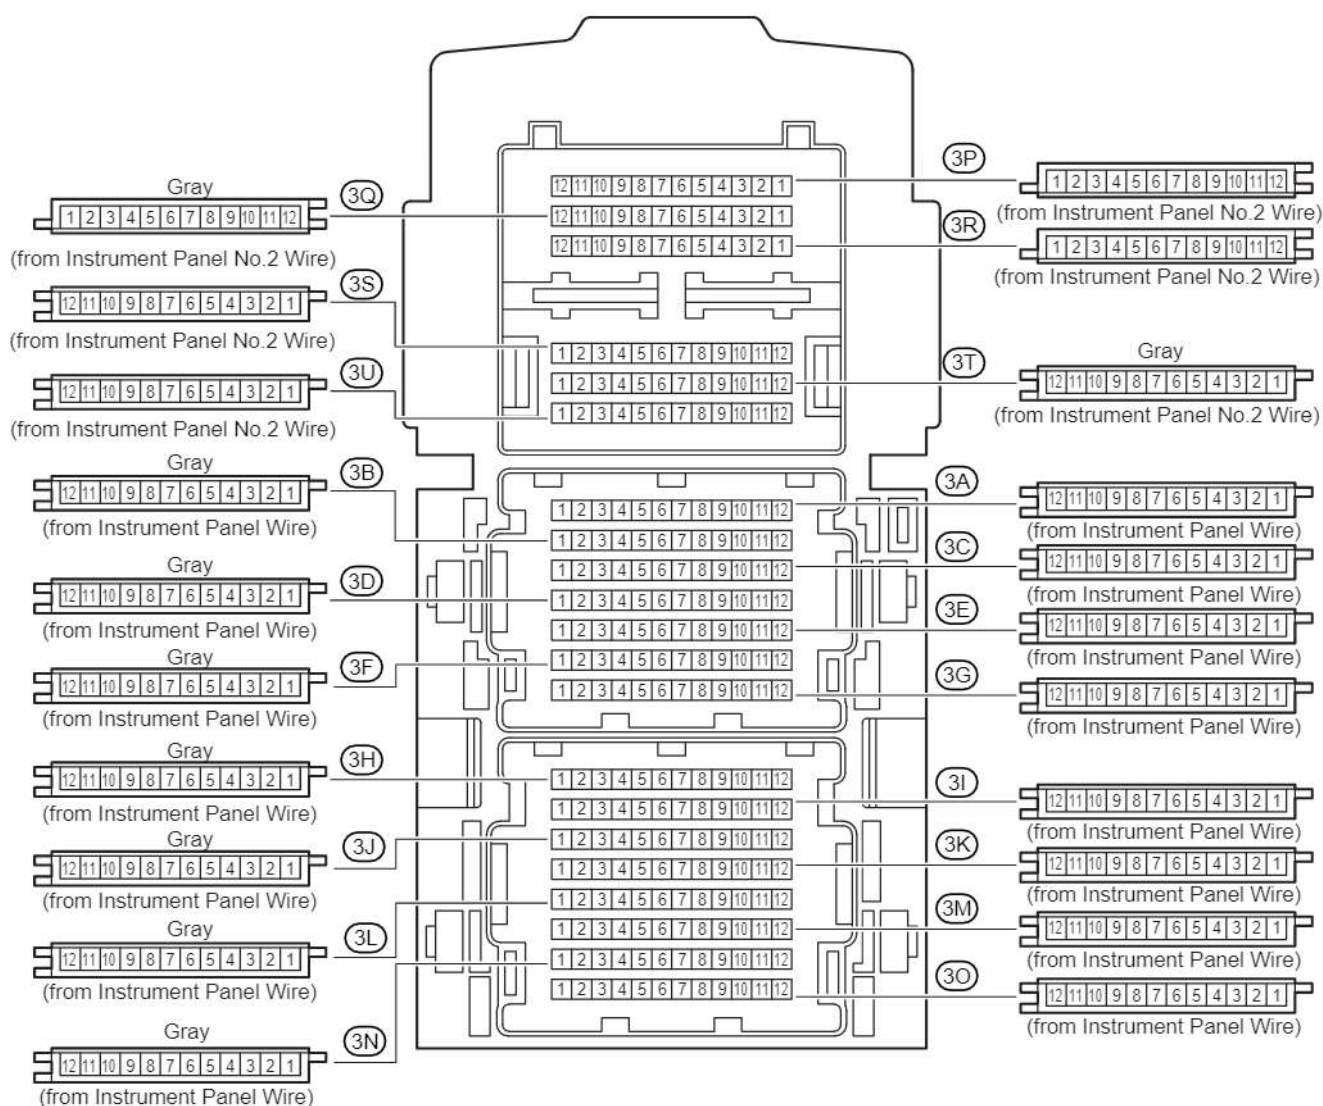


F RELAY LOCATIONS

[J/B No.3 Inner Circuit]

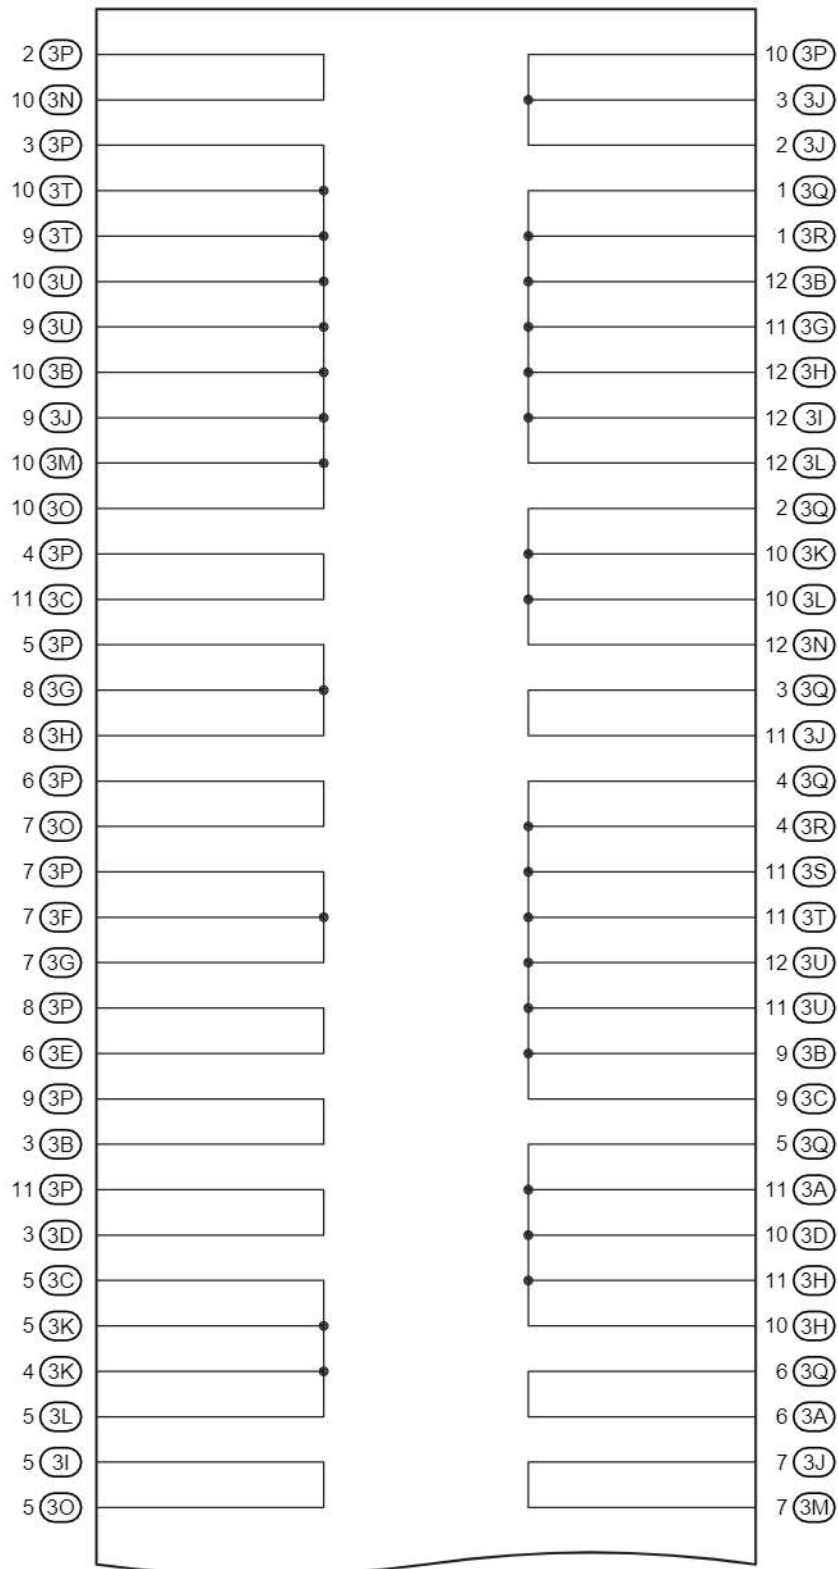

(Cont. Next Page)


(Cont'd)

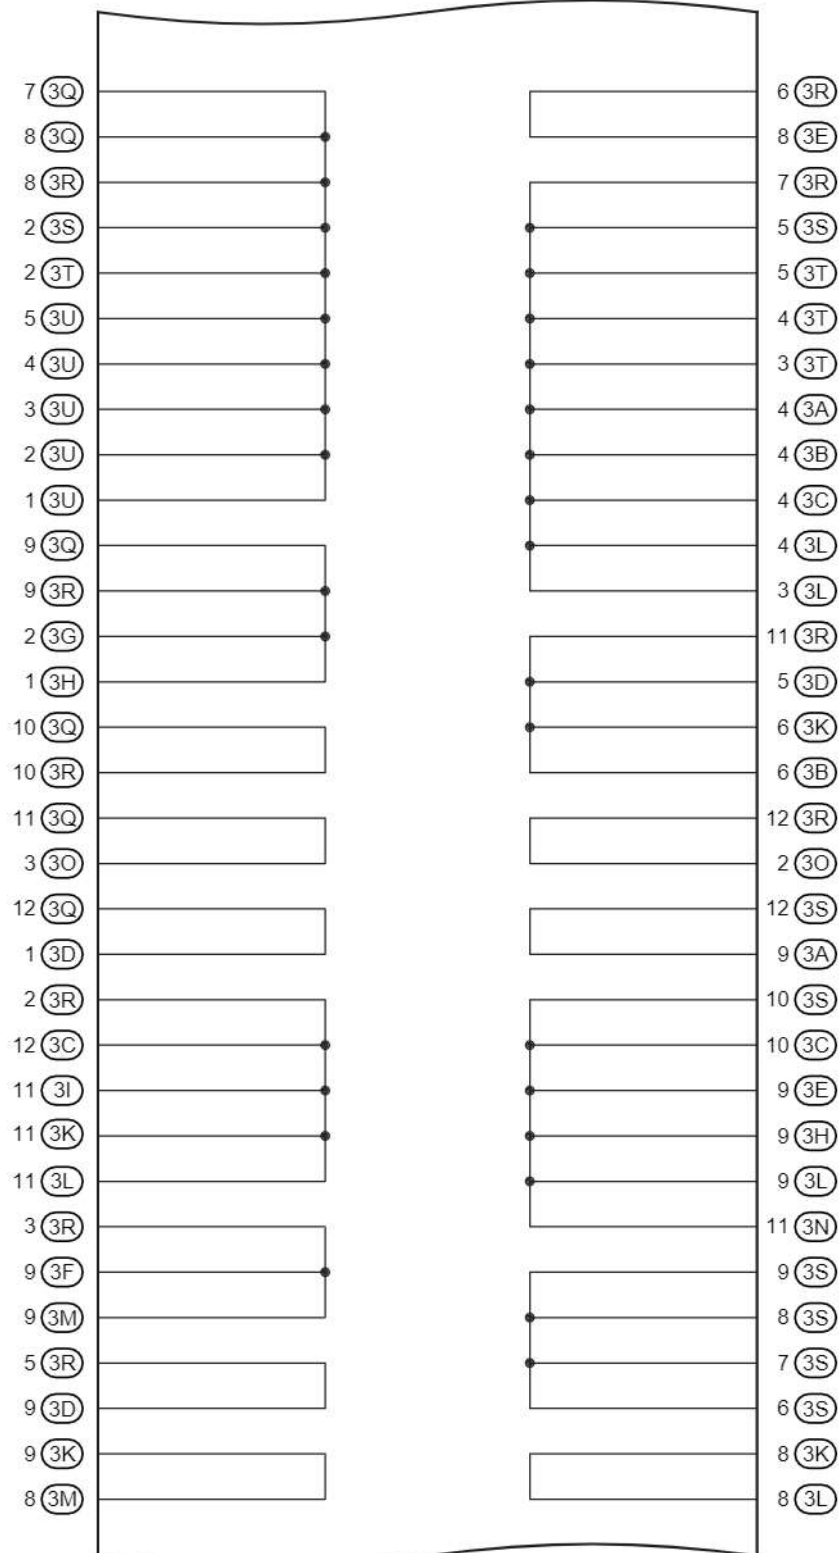


(Cont. Next Page)

F RELAY LOCATIONS

[J/B No.3 Inner Circuit]

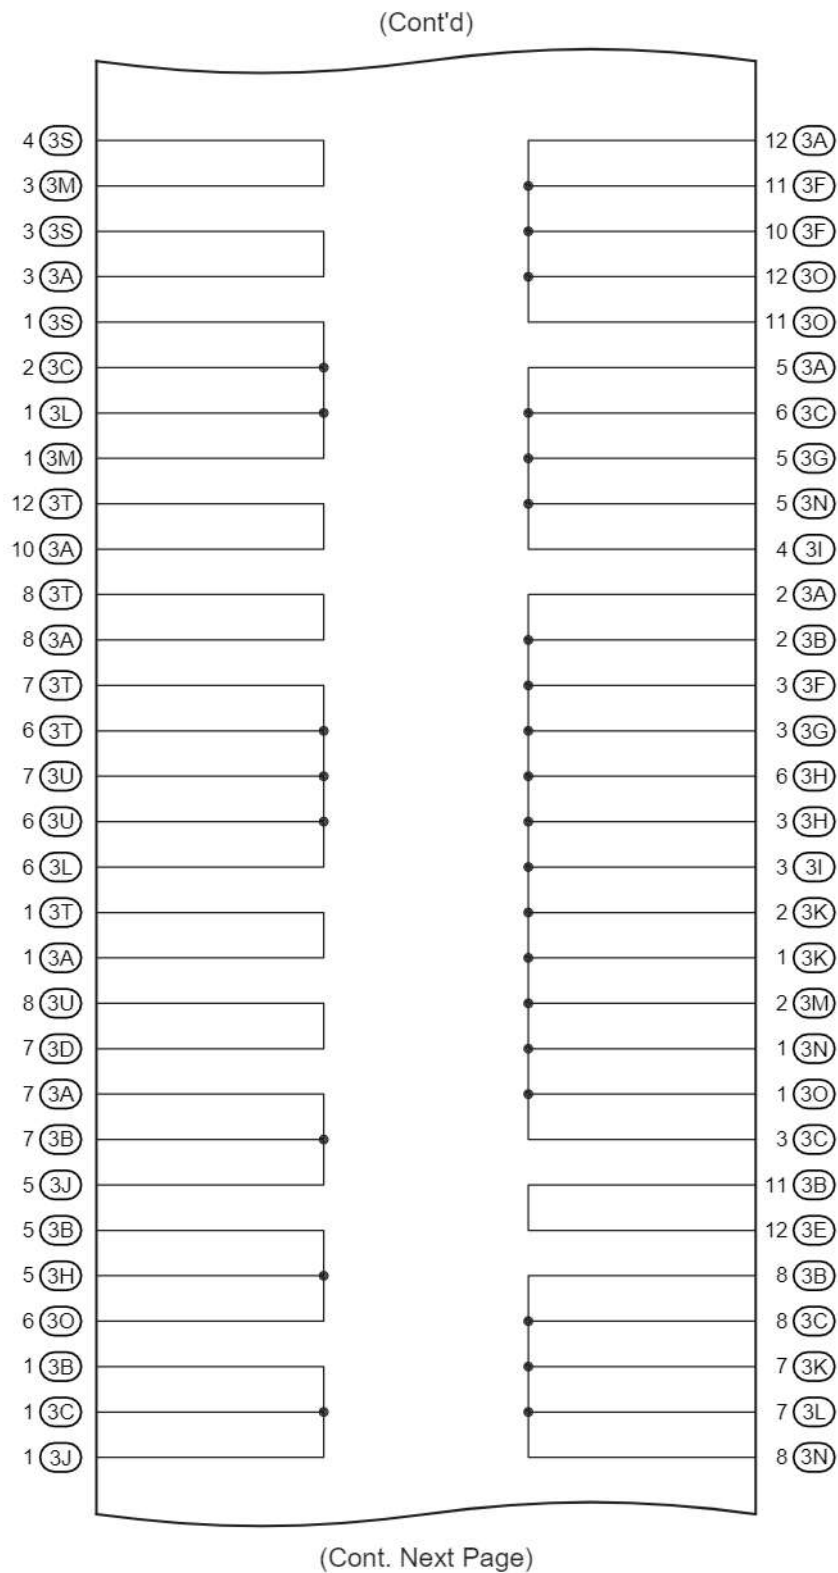


(Cont'd)

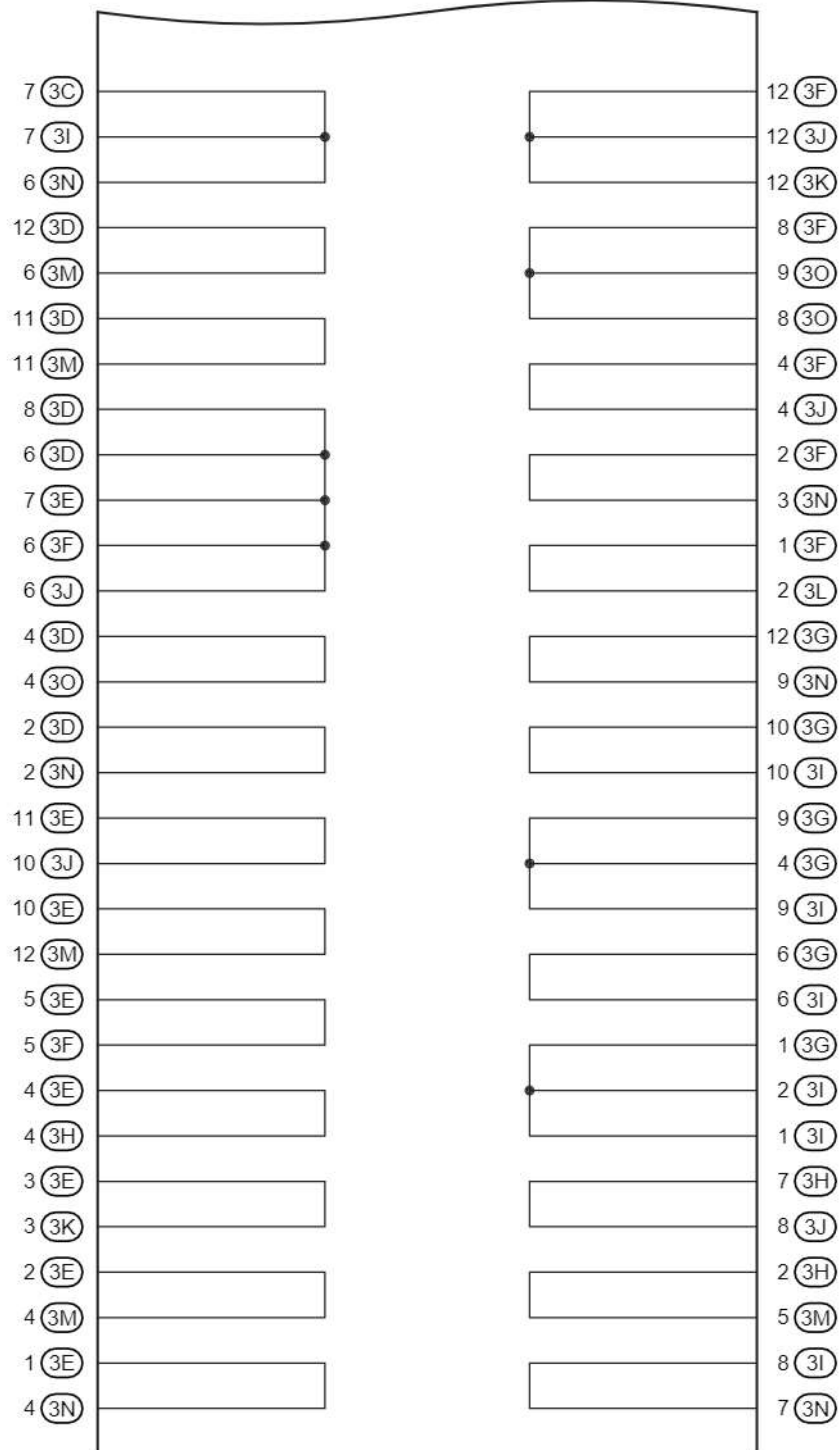


F RELAY LOCATIONS

○ : J/B No.4

Instrument Panel Brace Center (See Page 20)

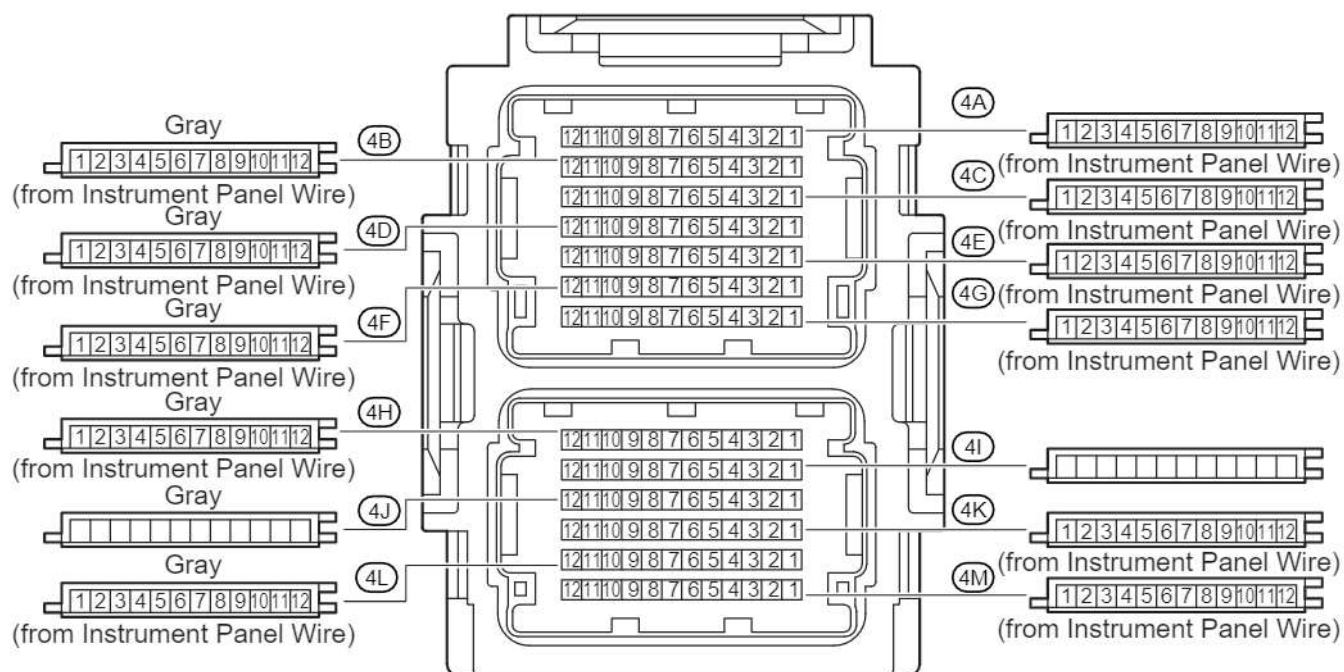


[J/B No.4 Inner Circuit]

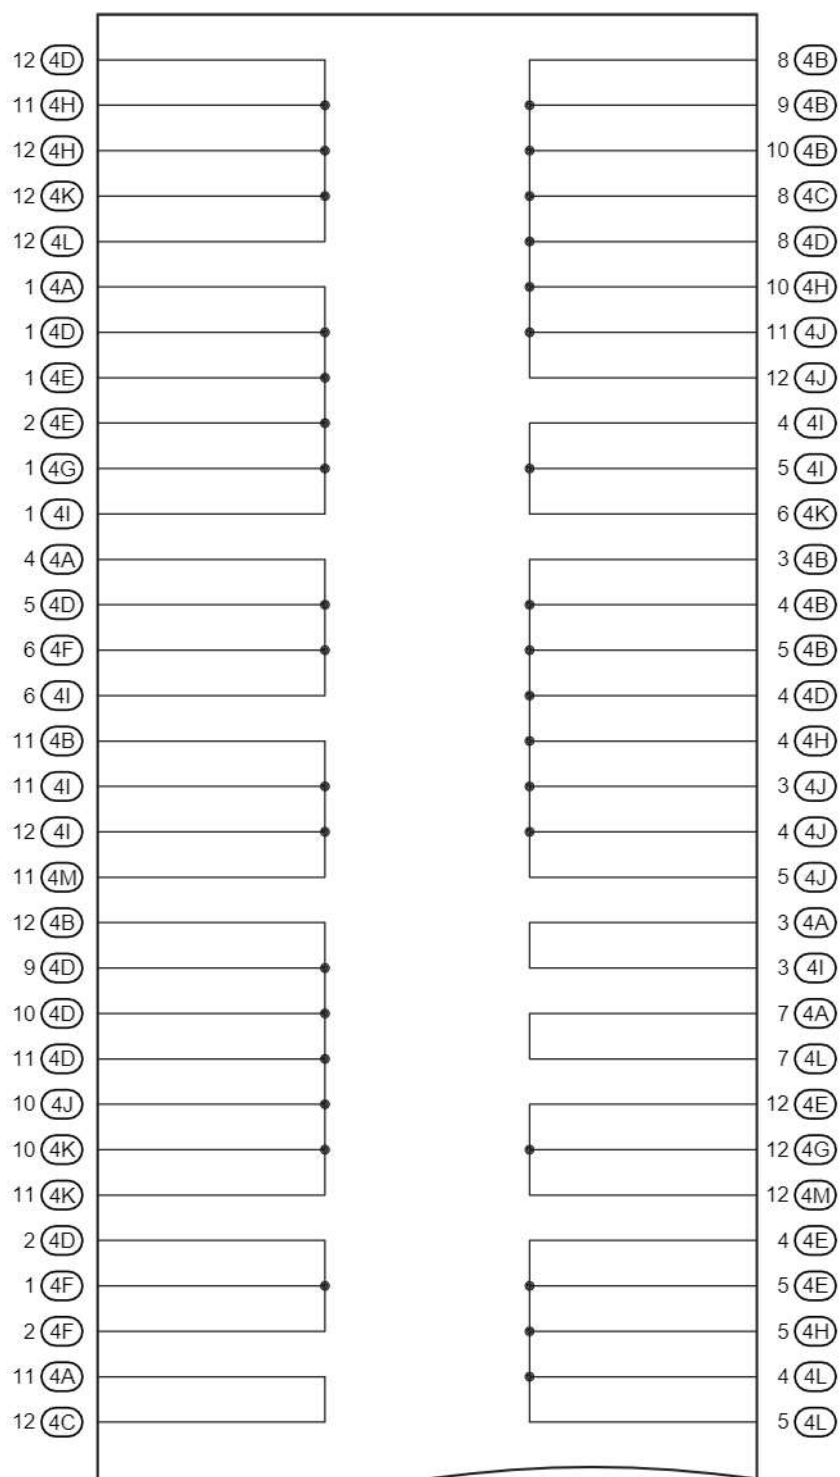

(Cont. Next Page)

F RELAY LOCATIONS

[J/B No.4 Inner Circuit]

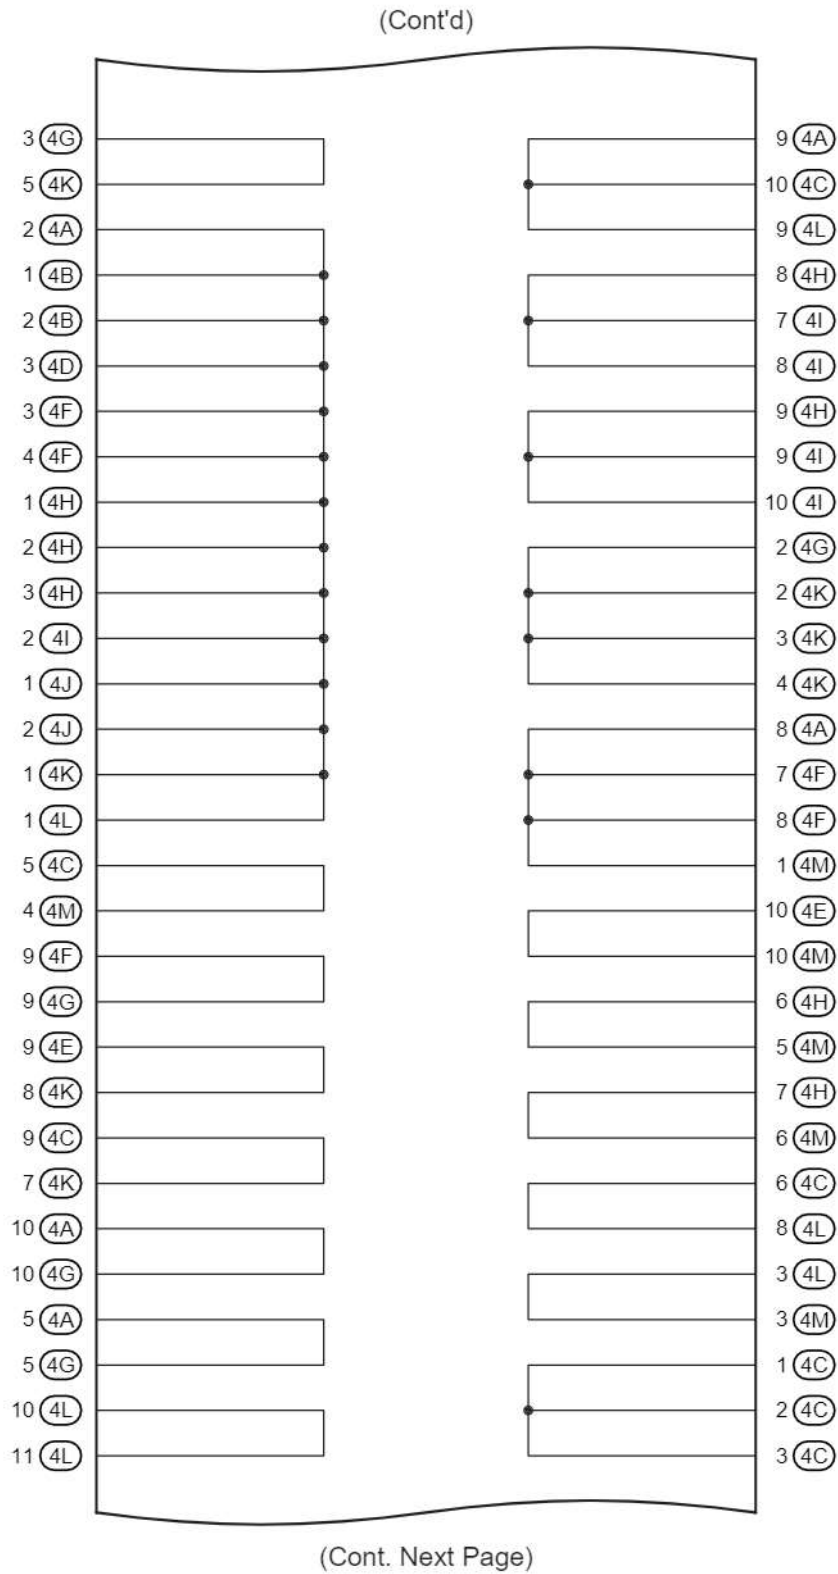


(Cont'd)

9 (4J)			4 (4C)
9 (4M)			5 (4F)
6 (4J)			6 (4E)
6 (4L)			6 (4G)
8 (4J)			11 (4F)
8 (4M)			9 (4K)
7 (4J)			12 (4A)
7 (4M)			12 (4F)
8 (4E)			2 (4L)
8 (4G)			2 (4M)
7 (4E)			6 (4A)
7 (4G)			6 (4B)
11 (4E)			7 (4B)
11 (4G)			7 (4C)
3 (4E)			6 (4D)
4 (4G)			7 (4D)
11 (4C)			
10 (4F)			

F RELAY LOCATIONS

Fusible Link Block


Near the Battery (See Page 21)

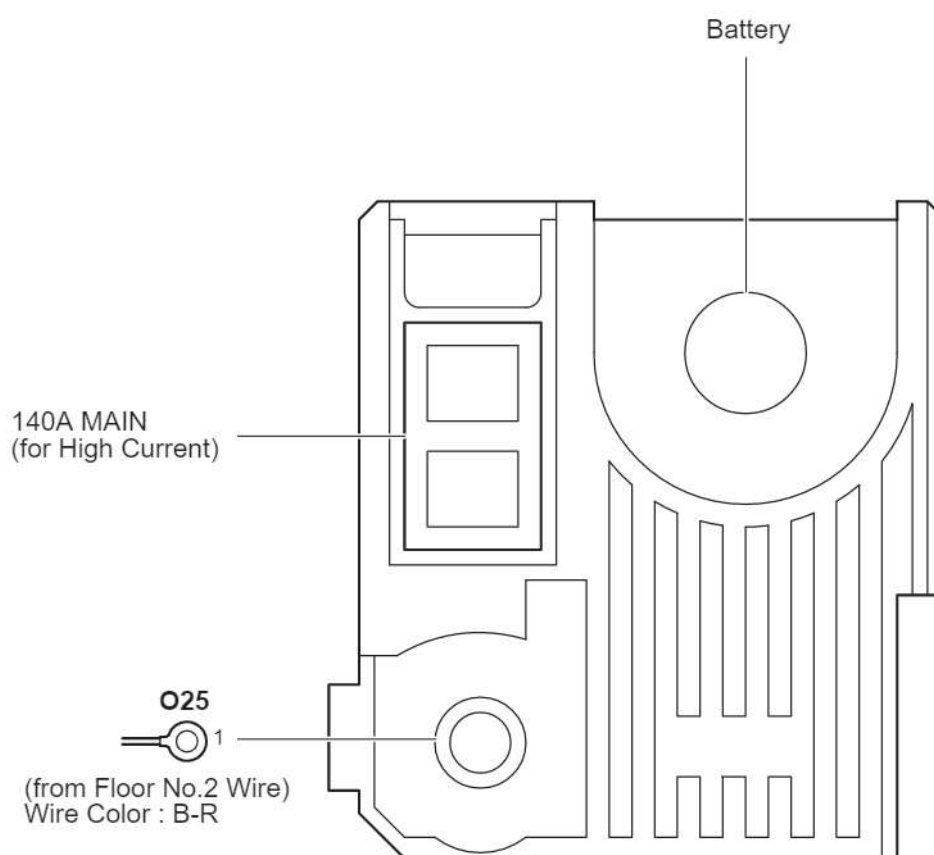

F RELAY LOCATIONS

Junction Connector (CAN)

Instrument Panel Brace Center (See Page 20)

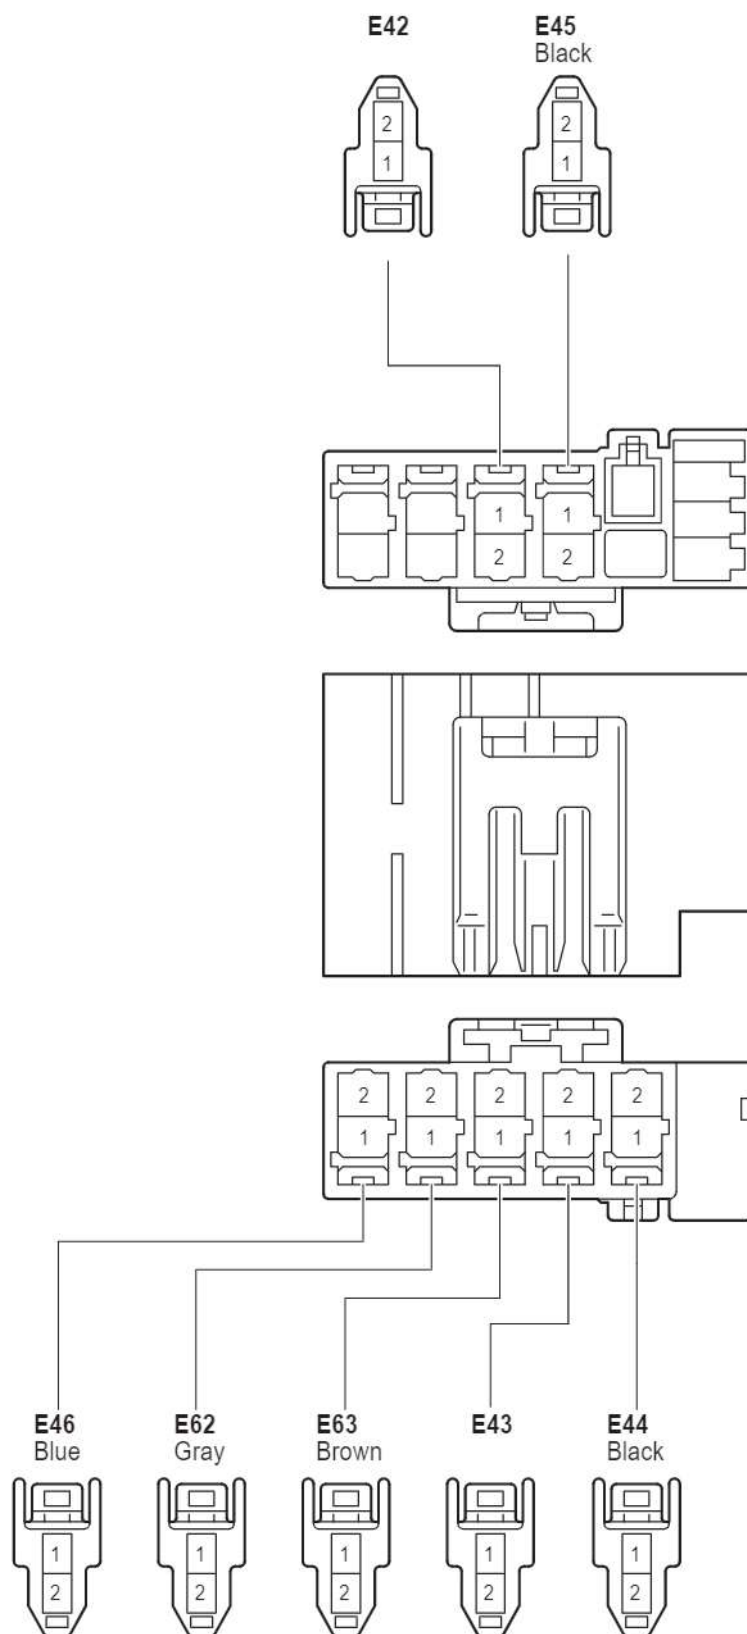

[Junction Connector Inner Circuit]