

Vauxhall Mokka 2016 fuse box diagram

Engine compartment fuse box



Vauxhall Mokka – fuse box – engine compartment

The fuse box is in the engine compartment. Disengage the cover, lift it upwards and remove.

Mini Fuses

Number	Circuit
1	Sunroof
2	Exterior mirrors
3	—
4	—
5	Electrical brake control module

6	Intelligent battery sensor
7	—
8	Transmission control module
9	—
10	Headlight levelling
11	Rear window wiper
12	Heated rear window
13	Headlight actuator (left hand)
14	Heated exterior mirrors
15	—
16	Seat heating
17	Transmission control module
18	Engine control module
19	Fuel pump
20	—

21	Cooling fan
22	—
23	Ignition coil, Engine control module
24	Washer pump
25	Headlamp actuator (right hand)
26	Engine control module
27	—
28	Ignition
29	Ignition
30	Exhaust system
31	Left-hand high beam
32	Right-hand high beam
33	Engine control module
34	Horn
35	Air conditioning system

36	Front fog lamp
----	----------------

J-cases Fuses

Number	Circuit
1	Electrical brake control module
2	Front wiper
3	Power module
4	Power terminal of instrument panel fuse box
5	—
6	Fuel heater
7	—
8	Cooling fan
9	Cooling fan
10	Engine control module, Glow plug
11	Starter

Instrument panel fuse box



Vauxhall Mokka – fuse box – instrument panel

Interior fuse block is located on the underside of the driver's side instrument panel. To access the fuses, remove the storage. To remove the storage, open and pull it.

Mini Fuses

Number	Circuit
1	Body control module
2	Body control module
3	Body control module
4	Body control module
5	Body control module
6	Body control module
7	Body control module

8	Body control module
9	Ignition switch
10	Safety diagnosis module
11	Data link connector
12	Climate control
13	Tailgate
14	Park assist
15	Lane departure warning/Interior mirror
16	Adaptive forward lighting
17	Power window driver
18	Rain sensor
19	Body control module/Regulated voltage control
20	Steering wheel
21	AC accessory power outlet/ Automatic transmission
22	Cigarette lighter/DC accessory power outlet


23	Spare
24	Spare
25	Spare
26	Spare
27	Instrument panel cluster/Auxiliary heater/Clutch switch
28	Adaptive forward lighting/ Voltage converter/Headlamp switch
29	Spare
30	Spare
31	Instrument panel cluster
32	Infotainment system/Chime
33	Display, Infotainment system
34	Onstar UHP/DAB

S/B Fuses

Number	Circuit
01	Spare
02	Spare

03	Power windows front
04	Power windows rear
05	Logistic mode
06	Spare
07	Spare
08	Spare

Load compartment fuse box

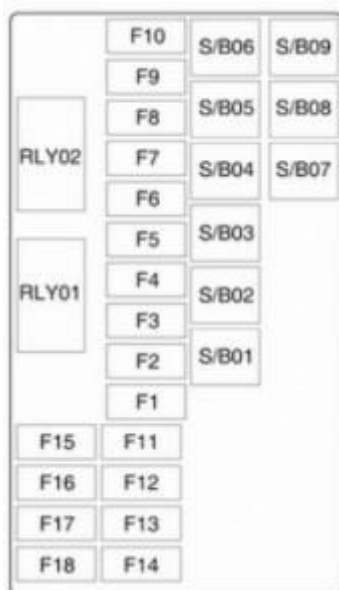

Vauxhall Mokka – fuse box – load compartment

It is located in the left side of rear compartment. To access the fuses, remove the cover.

Mini Fuses

Number	Circuit
1	Seat, lumbar support, driver

2	Seat, lumbar support, passenger
3	Amplifier
4	Trailer socket
5	All-wheel drive
6	Spare
7	LPG system
8	Spare
9	Spare
10	Spare
11	Trailer control module
12	Spare
13	Heated steering wheel
14	Trailer socket
15	Spare
16	Water in fuel sensor

17	Interior mirror/Rear view camera
18	LPG system

S/B Fuses

Number	Circuit
01	Power seat driver
02	Power seat passenger
03	Trailer control module
04	Voltage converter
05	Battery
06	Headlight washer
07	Spare
08	Spare
09	Spare