


Cadillac SRX 2009 fuse box diagram

Underhood Fuse Block

The underhood fuse block is located in the engine compartment on the passenger's side of the vehicle.

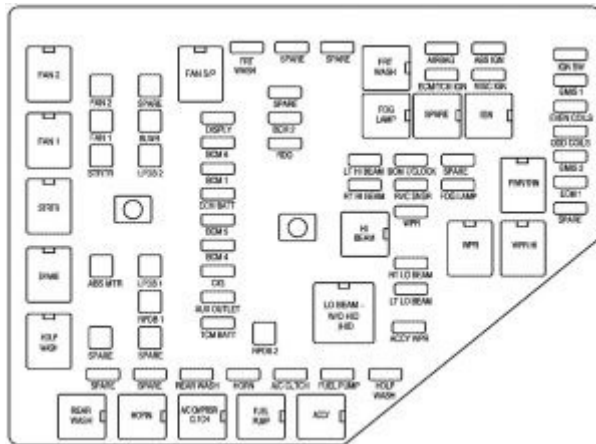

Cadillac SRX mk1 – fuse box – engine

compartment

Relays	Usage
A/C CMPSR CLTCH	Air Conditioning Compressor Clutch
ACCY	Accessory Power (Rear Wipers, Inside Rearview Mirror)
FAN S/P	Series/Parallel Engine Cooling Fan
FAN 1	Engine Cooling Fan Motors
FAN 2	Engine Cooling Fan Motors
FOG LAMP	Front Fog Lamps
FRT WASHER	Front Washer Pump
FUEL PUMP	Fuel Pump
HDLP WASH	Headlamp Washer Pump (Optional)
HI BEAM	High-Beam Headlamps
HORN	Horn
IGN	Ignition Switch (ON)
LO BEAM – W/O HID/HID	Low-Beam Headlamps
PWR/TRN	Powertrain/Engine Control Module (ECM)
REAR WASH	Rear Washer Pump
SPARE	Spare
SPARE	Spare
STRTR	Starter Solenoid
WPR	Windshield Wiper System – On/Off
WPR HI	Windshield Wiper System – Low/High

J Case Fuses	Usage
ABS MOTOR	Antilock Braking System (ABS) Module
BLWR	Front Blower Motor Assembly
FAN 1	Left Cooling Fan Motor
FAN 2	Right Cooling Fan Motor
LPDB 1	LRPDB (Left Side Rear Power Distribution Box)
LPDB 2	LRPDB (Left Side Rear Power Distribution Box)
RPDB 1	RRPDB (Right Side Rear Power Distribution Box)
RPDB 2	RRPDB (Right Side Rear Power Distribution Box)
SPARE	Spare
SPARE	Spare
SPARE	Spare
STRTR	Starter Solenoid

Mini Fuses	Usage
A/C CLTCH	Air Conditioning Compressor Clutch
ABS IGN	ABS Ignition, Variable Effort Steering
ACCY WPR	Rear Wiper Motor & Switch, Inside Rearview Mirror
AIRBAG	Sensing Diagnostic Module (SDM), Occupant Sensor Display, Instrument Cluster
AUX OUTLET	Center Console Accessory Power Outlet
BCM 1	Body Control Module (BCM) Power
BCM 2	LED Instrument Panel Dimming, Overhead Lamps, Vanity Lamps
BCM 4	Center High-Mounted Stoplamp (CHMSL), Back-up Lamps
BCM 5	Left Side Front Turn Lamps, Rear Stoplamps, Turn Lamps
BCM 6	Right Side Rear Stoplamps, Turn Lamps, Key Capture Solenoid
BCM 7/CLOCK	Switch Dimming, Analog Clock
CIG	Instrument Panel Accessory Power Outlet (Cigarette Lighter)
DISPLY	Instrument Panel Cluster, Climate Control Module, Diagnostic Link Connector
ECM BATT	ECM BATT

ECM 1	ECM
ECM/TCM IGN	ECM/Transmission Control Module Ignition Power, Mass Airflow Sensor (V6)
EMIS 1	Pre O2 Sensors, Cam Phasor (V6), canister Purge (V6), Intake Manifold Tuning Valve (V6)
EMIS 2	Cooling Fan Relays, Air Conditioning Clutch Relay, Post O2 Sensors, Mass Airflow Sensor (V8), Canister Purge (V8)
EVEN COILS	Even Ignition Coils, Even Fuel Injectors
FOG LAMP	Front Fog Lamps
FRT WASH	Front Washer Pump
FUEL PUMP	Fuel Pump
HORN	Horn Assembly
IGN SW	Ignition Switch, Immobilizer Module
LT HI BEAM	Left Side High-Beam Headlamp
LT LO BEAM	Left Side Low-Beam Headlamp
MISC IGN	Air Quality Sensor
ODD COILS	Odd Ignition Coils, Odd Fuel Injectors
RDO	Radio
REAR WASH	Rear Washer Pump
RT HI BEAM	Right Side High-Beam Headlamp
RT LO BEAM	Right Side Low-Beam Headlamp
RVC SNSR	Battery Regulated Voltage Control Sense
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
TCM BATT	Transmission Control Module (TCM)
WPR	Windshield Wiper Motor

Circuit Breakers	Usage
HDLP WASH	Headlamp Washer Pump

Rear Underseat Fuse Block (Left Side)

The driver's side rear fuse block is located under the rear seat on the driver's side of the vehicle. The carpet must be lifted up to access the rear fuse block.



Cadillac SRX mk1 – fuse box – rear compartment
(left side)

To access the fuse block, push in the two tabs located at each end of the fuse block cover. Then lift the cover off.

Relays	Usage
ELC	Electronic Level Control (ELC) Compressor Motor
LH/POS/PRK LAMP	Front & Rear Park Lamps
PRK LAMP	Not Used
REAR/FOG	Not Used
RT POS	Not Used
SPARE	Spare
SPARE	Spare
STOP	Not Used

Mini Fuses	Usage
3RD ROW SW/RFA	Flip Fold Seat Switches, Remote Keyless Entry System Module
AMP	Audio Amplifier
AUX PWR OUTLET	Rear Auxiliary Power Outlet
DRIVER DR MDL	Driver Door Module (Locks, Outside Rearview Mirror, Window Switches)
LH/PRK POS LAMPS	Left Side Taillamp, Left Side Front Park Lamps, Sidemarker Lamps
MRK LAMP	License Lamps
MSM/RPA	Memory Seat Module, Ultrasonic Rear Parking Assist (URPA) Module
ONSTAR TV/XM	OnStar® Module, XM™ Radio
PRK LAMP LH/POS RLY	Parking Lamp Relay
REAR SEAT MDL	Rear Seat Module, Flip/Fold Motors
REAR/FOG LAMP	Not Used

SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
UNLCK	Rear Door Locks

Mini Fuses	Usage
AIRBAG	Sensing Diagnostic Module (SDM), Occupant Sensor, Rollover Sensor
BCM 3	Hush Panel Lamps, Overhead Courtesy Lamp Assembly, Right Side Front Turn Lamp
CNSTR/VENT	Canister Vent Solenoid
DR/LCK	Rear Door Locks
ELC	Electronic Leveling Compressor (ELC) Exhaust Solenoid, ELC Relay
TD/STR/WHL	Heated Steering Wheel
MRTD	Suspension Module
PDM	Passenger Door Module (Locks, Outside Mirror, Window Switches)
PWR L/GATE	Power Liftgate Module
REAR A/C	Rear Air Conditioning System
REAR DEFOG	Rear Window Defogger
RUN	Climate Control Module
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
THEFT UGDO	Garage Door Opener
WPR ISRVM VICS	Rear Wiper Switch, Inside Rearview Mirror

J Case	Usage
S/ROOF/MDL	Power Sunroof Module
PWR LIFT GATE	Power Liftgate Motors

Circuit Breakers	Usage
PWR/SEATS	Power Seat Motors

Misc.	Usage
FUSE PLR	Fuse Puller
J/C	Joint Connector