



COMPONENTS

ILLUSTRATION

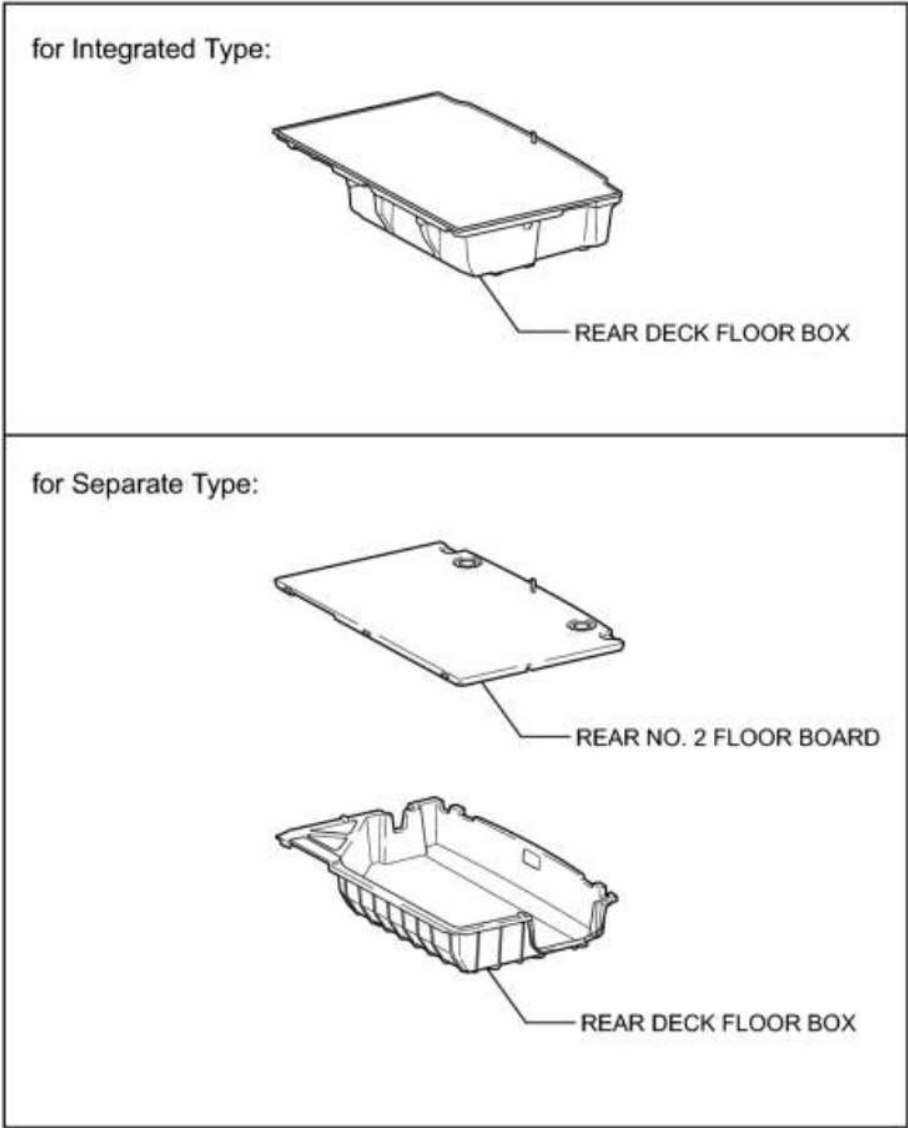

P


ILLUSTRATION

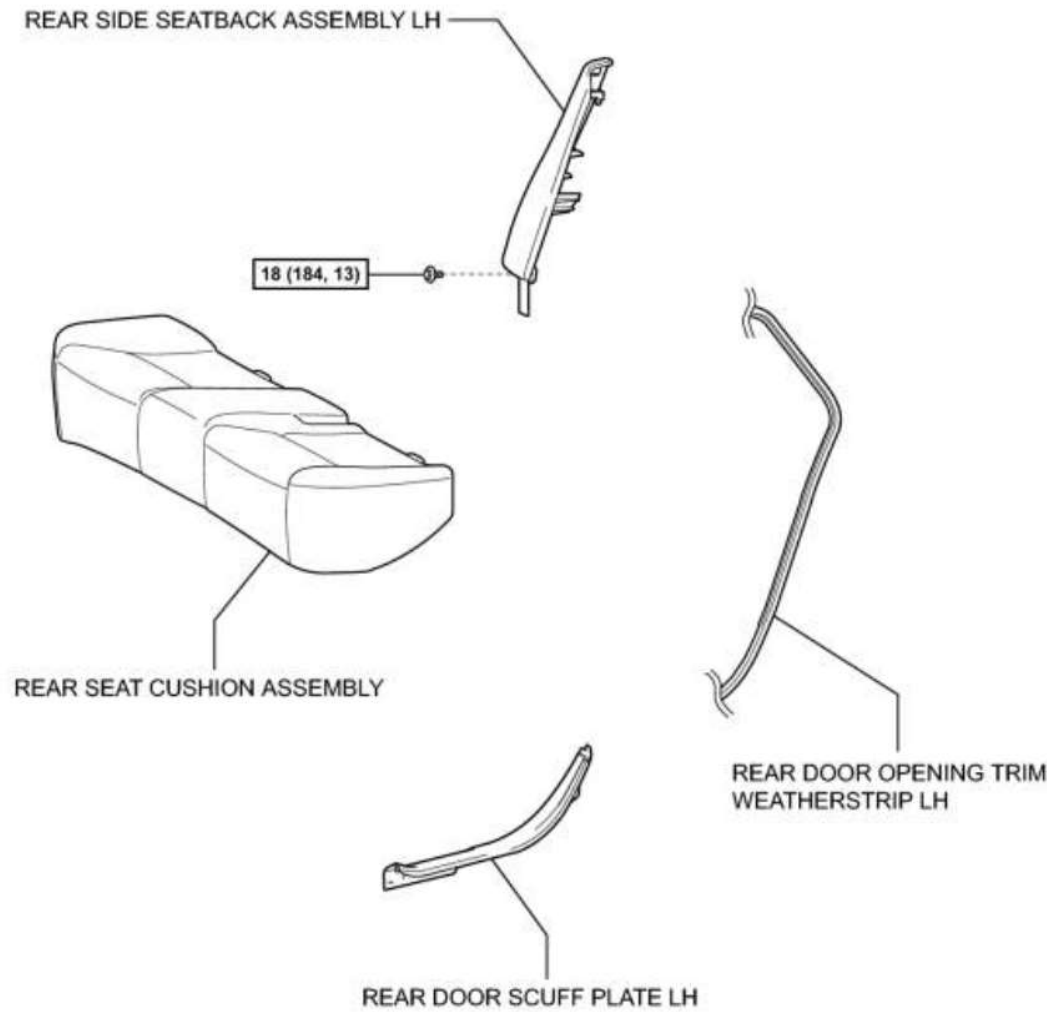

**N\*m (kgf\*cm, ft.\*lbf)**: Specified torque


P

ILLUSTRATION

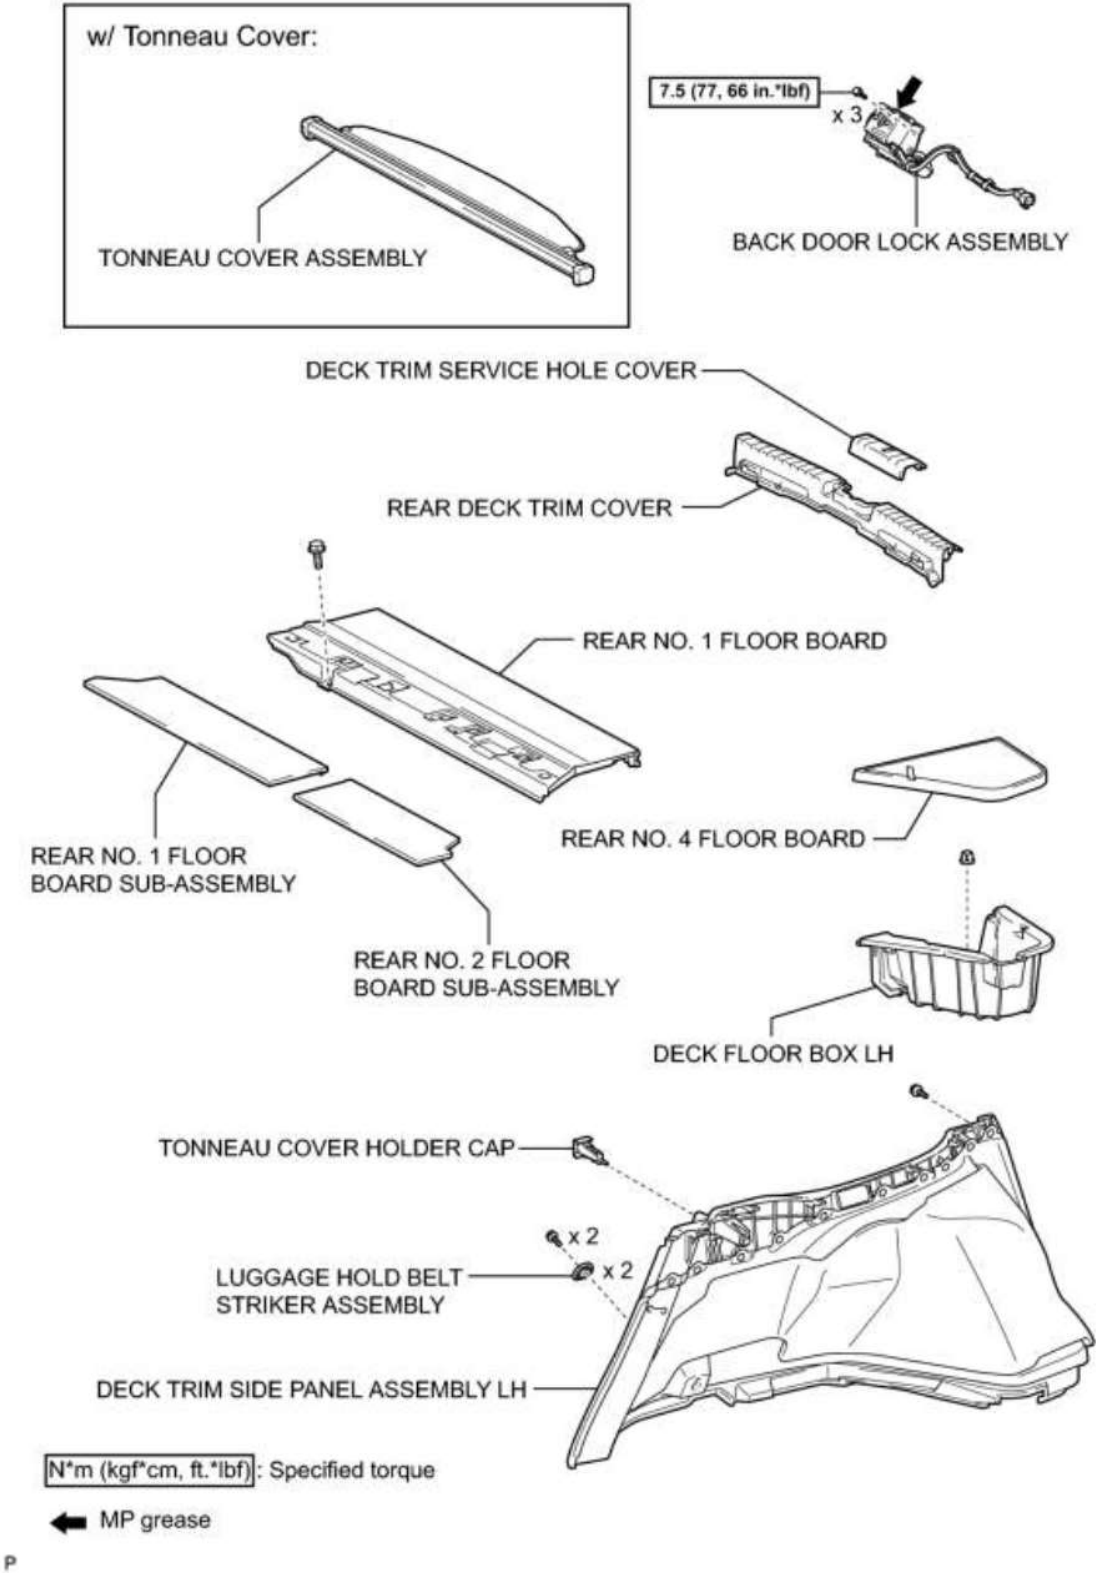


## REMOVAL

1. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) [INFO](#)
2. REMOVE REAR DECK FLOOR BOX [INFO](#)
3. REMOVE REAR DOOR SCUFF PLATE LH [INFO](#)
4. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH
5. REMOVE REAR SEAT CUSHION ASSEMBLY [INFO](#)
6. REMOVE REAR SIDE SEATBACK ASSEMBLY LH [INFO](#)
7. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover) [INFO](#)
8. REMOVE REAR NO. 4 FLOOR BOARD [INFO](#)
9. REMOVE DECK FLOOR BOX LH [INFO](#)
10. REMOVE REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY [INFO](#)
11. REMOVE REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY [INFO](#)
12. REMOVE REAR NO. 1 FLOOR BOARD [INFO](#)
13. REMOVE DECK TRIM SERVICE HOLE COVER [INFO](#)
14. REMOVE REAR DECK TRIM COVER [INFO](#)
15. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY [INFO](#)
16. REMOVE TONNEAU COVER HOLDER CAP [INFO](#)
17. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH [INFO](#)
18. REMOVE BACK DOOR LOCK ASSEMBLY

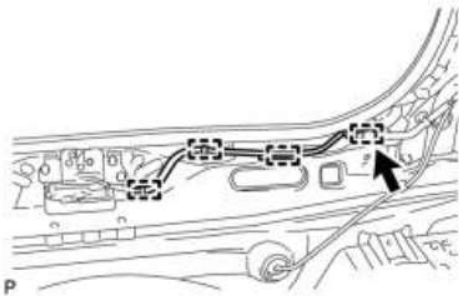


(a) Disconnect the connector and disengage the 4 clamps.

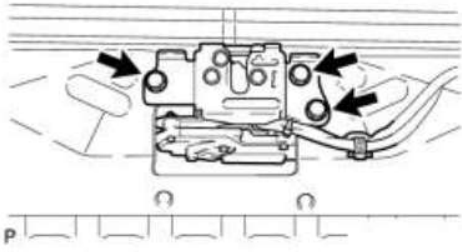

(b) Remove the 3 bolts and back door lock assembly.

INSPECTION

1. INSPECT BACK DOOR COURTESY SWITCH (BACK DOOR LOCK ASSEMBLY)

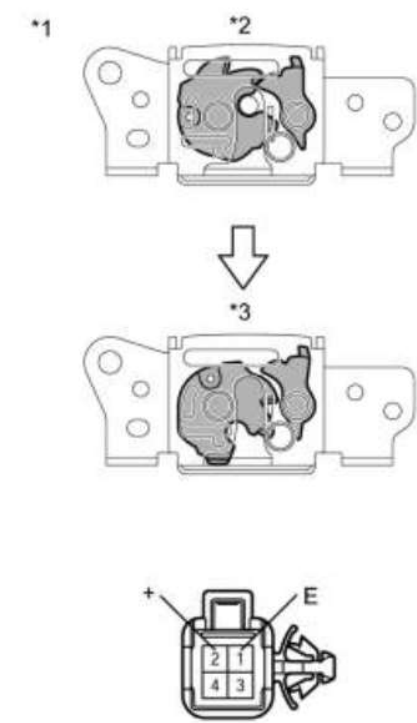

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

| Tester Connection | Switch Condition | Specified Condition |
|-------------------|------------------|---------------------|
| 1 (E) - 2 (+)     | Locked           | 10 kΩ or higher     |
|                   | Unlocked         | Below 1 Ω           |

Text in Illustration

|    |                                                                  |
|----|------------------------------------------------------------------|
| *1 | Component without harness connected<br>(Back Door Lock Assembly) |
| *2 | Lock                                                             |
| *3 | Unlock                                                           |


If the result is not specified, replace the back door lock assembly.

P

# INSTALLATION


## 1. INSTALL BACK DOOR LOCK ASSEMBLY

(a) Apply MP grease to the sliding parts of the back door lock assembly.

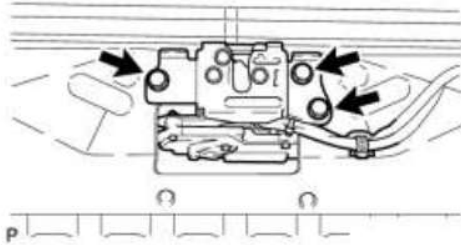

(b) Install the back door lock assembly with the 3 bolts.

Torque: 7.5 N·m (77 kgf·cm, 66in·lbf)

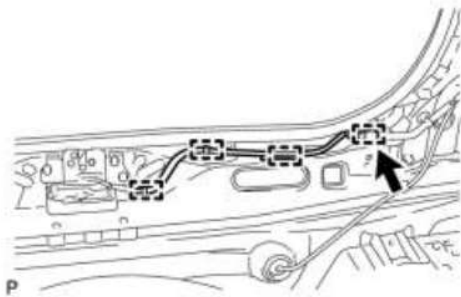

(c) Engage the 4 clamps and connect the connector.

2. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH\_ [INFO](#)

3. INSTALL TONNEAU COVER HOLDER CAP\_ [INFO](#)

4. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY\_ [INFO](#)

5. INSTALL REAR DECK TRIM COVER\_ [INFO](#)

6. INSTALL DECK TRIM SERVICE HOLE COVER\_ [INFO](#)

7. INSTALL REAR NO. 1 FLOOR BOARD\_ [INFO](#)

8. INSTALL REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY\_ [INFO](#)

9. INSTALL REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY\_ [INFO](#)

10. INSTALL DECK FLOOR BOX LH\_ [INFO](#)


11. INSTALL REAR NO. 4 FLOOR BOARD\_ [INFO](#)

12. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)\_ [INFO](#)

13. INSTALL REAR SIDE SEATBACK ASSEMBLY LH\_ 
14. INSTALL REAR SEAT CUSHION ASSEMBLY\_ 
15. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH\_ 
16. INSTALL REAR DOOR SCUFF PLATE LH\_ 
17. INSTALL REAR DECK FLOOR BOX\_ 
18. INSTALL REAR NO. 2 FLOOR BOARD (for Separate Type)\_ 

COMPONENTS

ILLUSTRATION

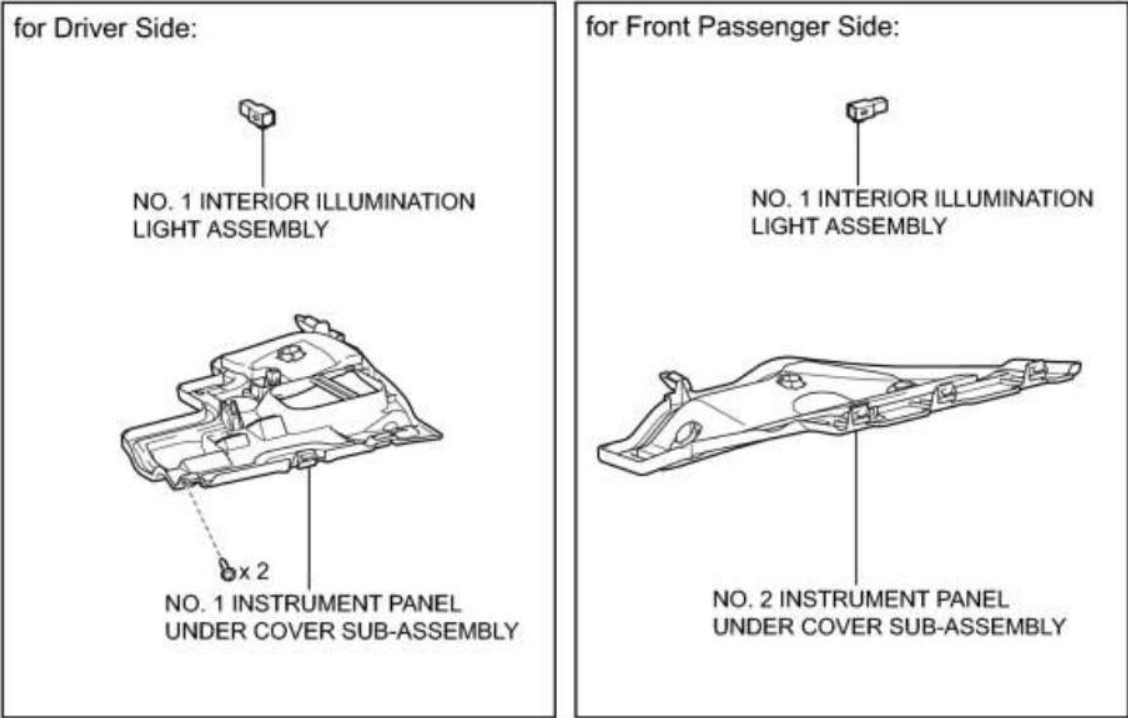

P


cardiagn.com

## REMOVAL

1. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (for Driver Side)

INFO

2. REMOVE NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Driver Side)

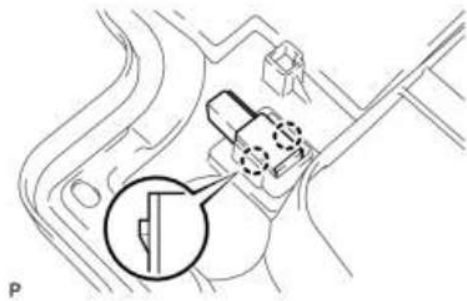


(a) Using a screwdriver, disengage the 2 claws and remove the No. 1 interior illumination light assembly.

3. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (for Front Passenger Side)

INFO

4. REMOVE NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Front Passenger Side)

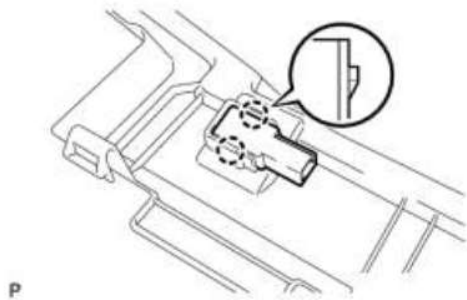

(a) Using a screwdriver, disengage the 2 claws and remove the No. 1 interior illumination light assembly.

INSPECTION

1. INSPECT FOOTWELL LIGHT (NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY)

\*1



(a) Connect a positive (+) lead from the battery to terminal 1 and a negative (-) lead to terminal 2.

(b) Check that the footwell light comes on.

OK:

Footwell light comes on.


Text in Illustration

|    |                                                                                                      |
|----|------------------------------------------------------------------------------------------------------|
| *1 | Component without harness connected<br>(Footwell Light (No. 1 Interior Illumination Light Assembly)) |
|----|------------------------------------------------------------------------------------------------------|

If the result is not as specified, replace the bulb or light socket.

## INSTALLATION

### 1. INSTALL NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Driver Side)

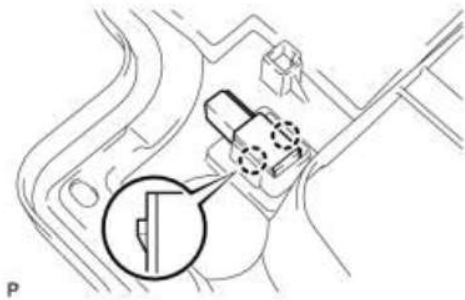


(a) Engage the 2 claws and install the No. 1 interior illumination light assembly.

### 2. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (for Driver Side)

INFO

### 3. INSTALL NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (for Front Passenger Side)

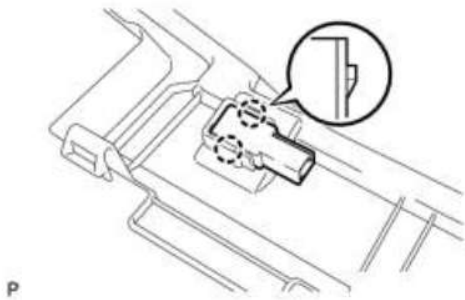


(a) Engage the 2 claws and install the No. 1 interior illumination light assembly.

### 4. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (for Front Passenger Side)

INFO

COMPONENTS

ILLUSTRATION

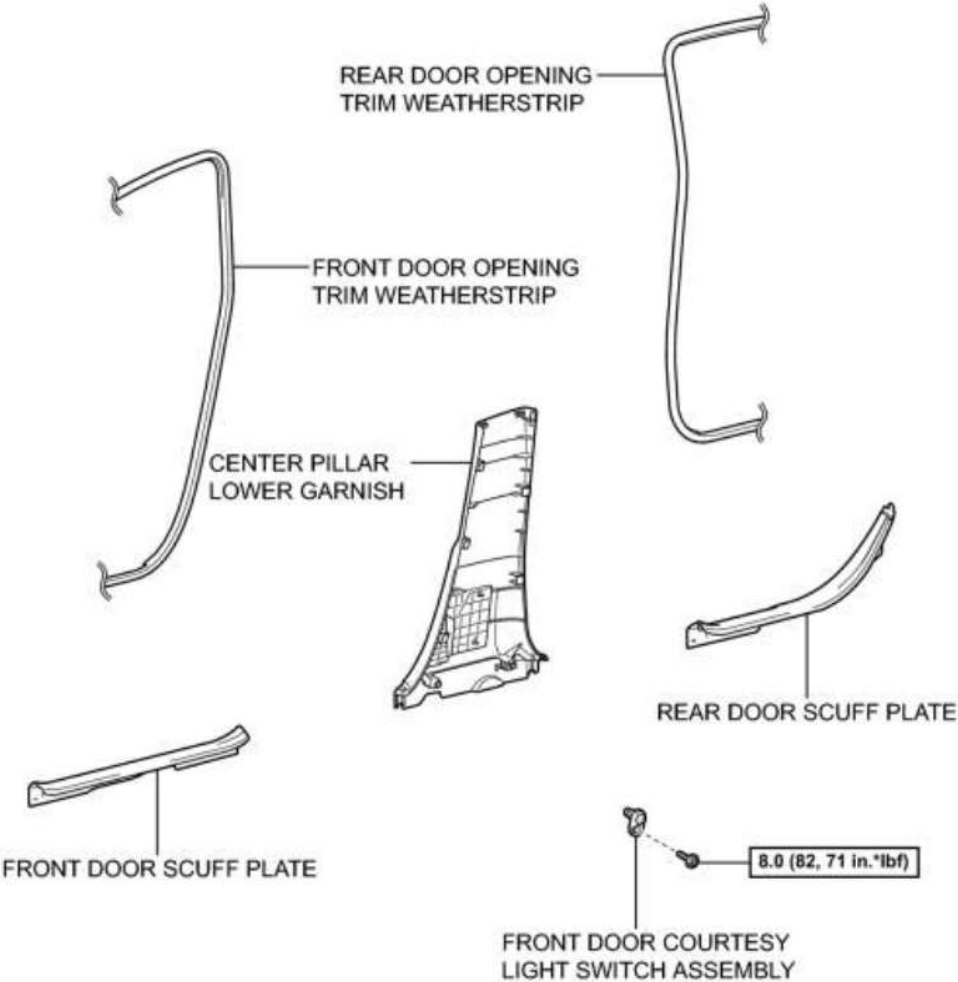

**N\*m (kgf\*cm, ft.\*lbf)**: Specified torque

P

cardiagn.com

## REMOVAL

1. REMOVE FRONT DOOR SCUFF PLATE\_ [INFO](#)
2. REMOVE REAR DOOR SCUFF PLATE\_ [INFO](#)
3. DISCONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP\_ [INFO](#)
4. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP\_ [INFO](#)
5. REMOVE CENTER PILLAR LOWER GARNISH\_ [INFO](#)
6. REMOVE FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY
  - (a) Disconnect the connector.



- (b) Using a T30 "TORX" socket wrench, remove the bolt and front door courtesy light switch assembly.


INSPECTION

1. INSPECT FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

| Tester Connection | Switch Condition | Specified Condition |
|-------------------|------------------|---------------------|
| 1 - Switch body   | Pushed           | 10 kΩ or higher     |
| 1 - Switch body   | Not pushed       | Below 1 Ω           |

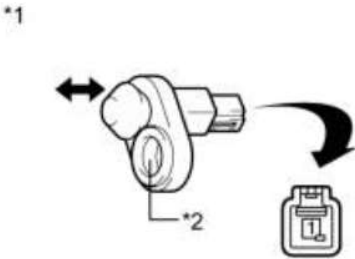

Text in Illustration

|    |                                                                                    |
|----|------------------------------------------------------------------------------------|
| *1 | Component without harness connected<br>(Front Door Courtesy Light Switch Assembly) |
| *2 | Switch Body                                                                        |

If the result is not as specified, replace the front door courtesy light switch assembly.

# INSTALLATION

## 1. INSTALL FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY



(a) Using a T30 "TORX" socket wrench, install the front door courtesy light switch assembly with the bolt.

Torque: **8.0 N·m (82 kgf·cm, 71in·lbf)**

(b) Connect the connector.

2. INSTALL CENTER PILLAR LOWER GARNISH\_ [INFO](#)

3. CONNECT REAR DOOR OPENING TRIM WEATHERSTRIP\_ [INFO](#)


4. CONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP\_ [INFO](#)

5. INSTALL REAR DOOR SCUFF PLATE\_ [INFO](#)

6. INSTALL FRONT DOOR SCUFF PLATE\_ [INFO](#)

COMPONENTS

ILLUSTRATION

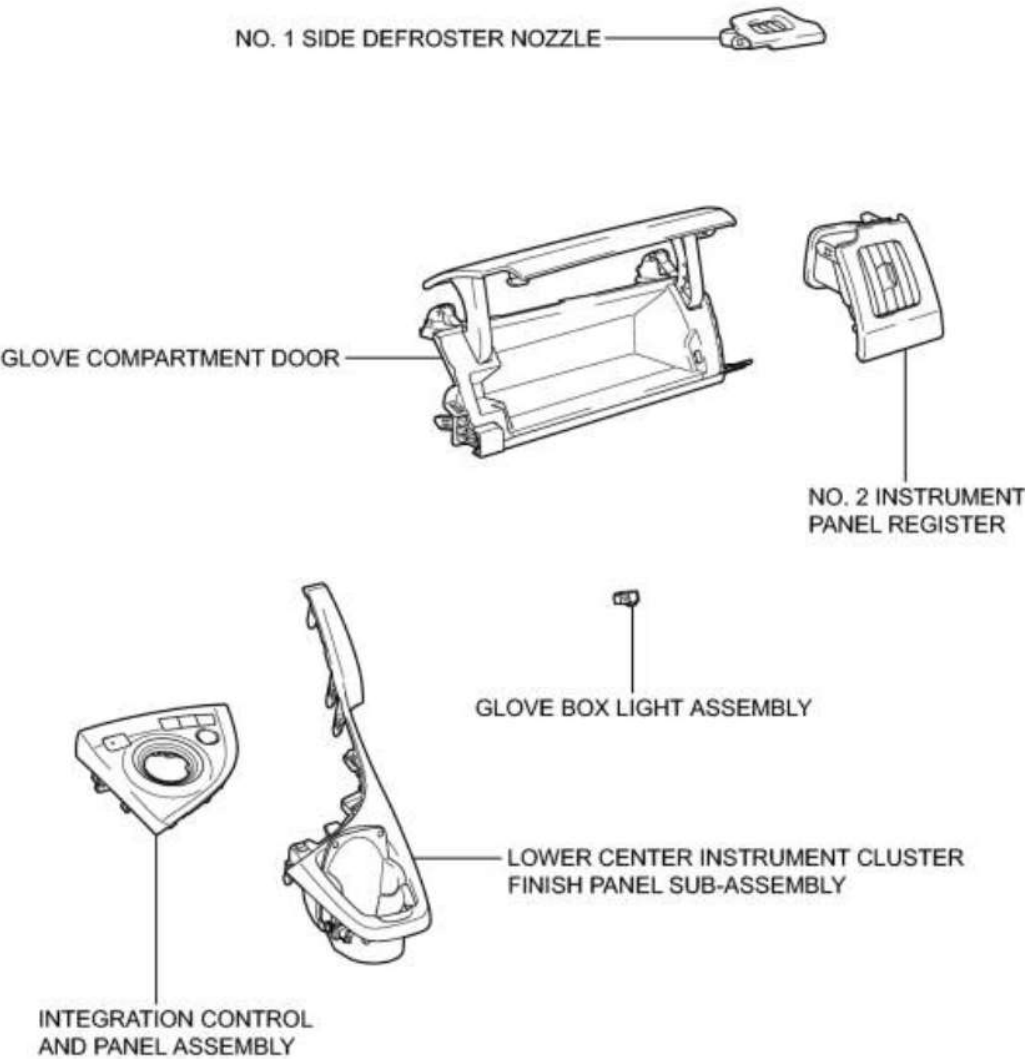

P

## REMOVAL

1. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY\_ [INFO](#)


2. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY\_ [INFO](#)

3. REMOVE NO. 1 SIDE DEFROSTER NOZZLE\_ [INFO](#)

4. REMOVE NO. 2 INSTRUMENT PANEL REGISTER\_ [INFO](#)

5. REMOVE GLOVE COMPARTMENT DOOR\_ [INFO](#)

6. REMOVE GLOVE BOX LIGHT ASSEMBLY

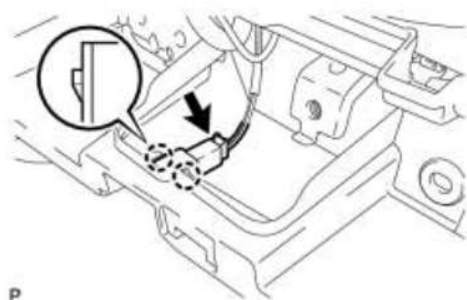

(a) Disconnect the connector.

(b) Using a screwdriver, disengage the 2 claws and remove the glove box light assembly.

INSPECTION

1. INSPECT GLOVE BOX LIGHT ASSEMBLY

\*1



(a) Connect a positive (+) lead from the battery to terminal 2 and a negative (-) lead to terminal 1.

(b) Check that the glove box light comes on.

OK:

Glove box light comes on.


Text in Illustration

|    |                                                                   |
|----|-------------------------------------------------------------------|
| *1 | Component without harness connected<br>(Glove Box Light Assembly) |
|----|-------------------------------------------------------------------|

If the result is not as specified, replace the glove box light assembly.

# INSTALLATION

## 1. INSTALL GLOVE BOX LIGHT ASSEMBLY

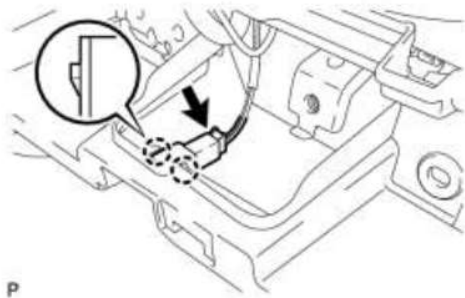

(a) Engage the 2 claws and install the glove box light assembly.

(b) Connect the connector.

2. INSTALL GLOVE COMPARTMENT DOOR\_ [INFO](#)

3. INSTALL NO. 2 INSTRUMENT PANEL REGISTER\_ [INFO](#)



4. INSTALL NO. 1 SIDE DEFROSTER NOZZLE\_ [INFO](#)

5. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY\_ [INFO](#)

6. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY\_ [INFO](#)

COMPONENTS

ILLUSTRATION

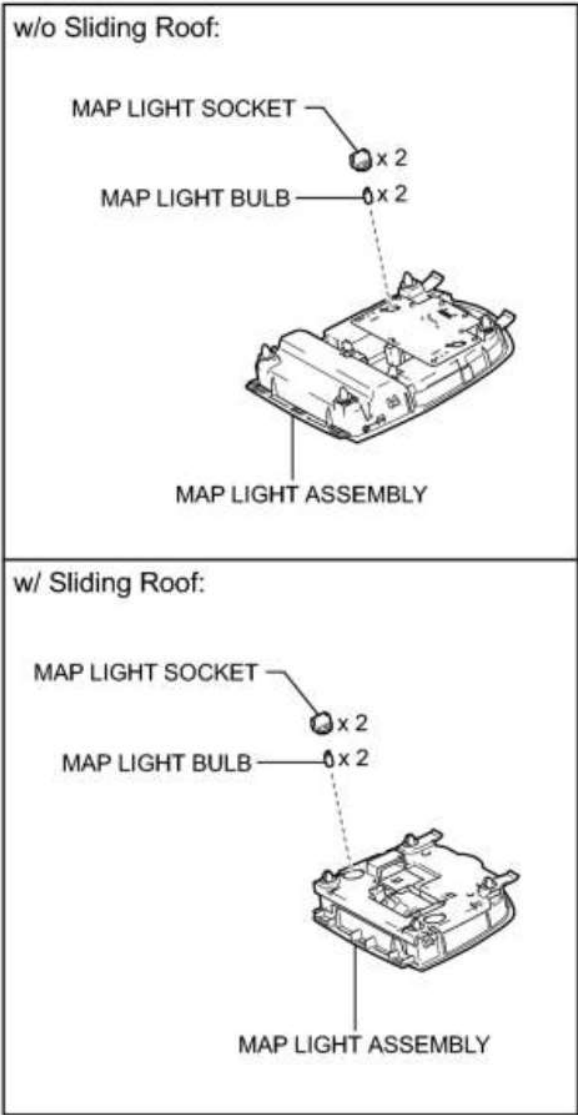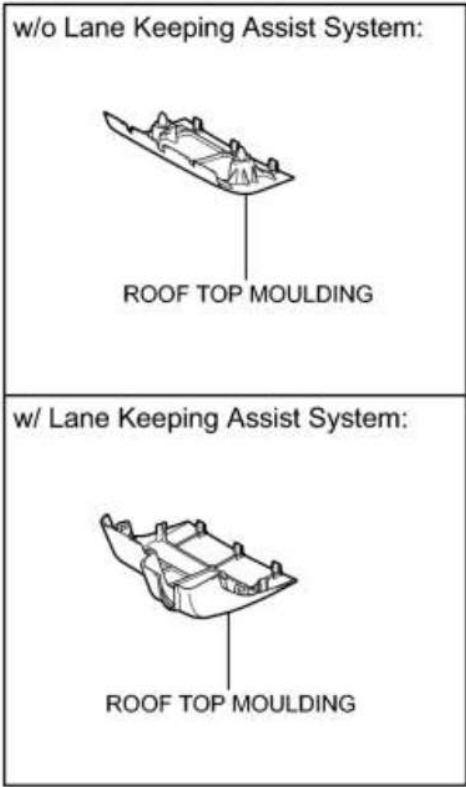


P

## REMOVAL

1. REMOVE ROOF TOP MOULDING (w/o Lane Keeping Assist System) INFO

2. REMOVE ROOF TOP MOULDING (w/ Lane Keeping Assist System) INFO


3. REMOVE MAP LIGHT ASSEMBLY (w/o Sliding Roof)

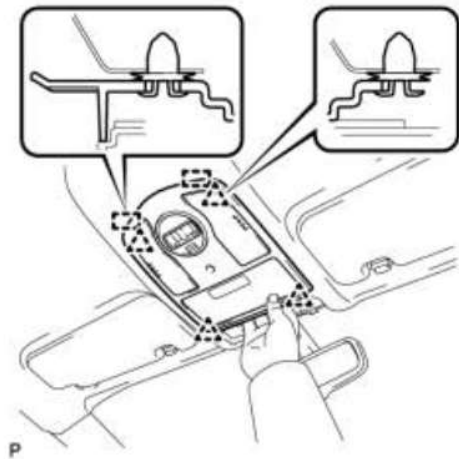

(a) Disengage the 4 clips and 2 guides as shown in the illustration.

(b) Disconnect the connector and remove the map light assembly.

4. REMOVE MAP LIGHT ASSEMBLY (w/ Sliding Roof)

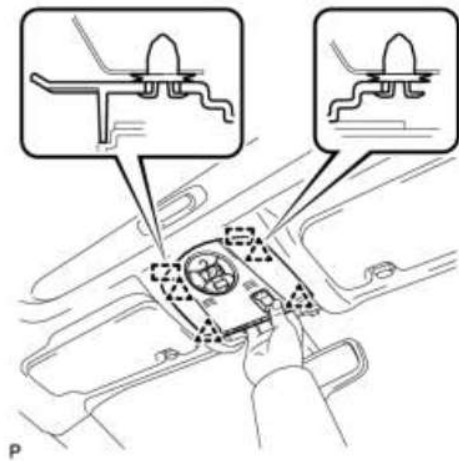


(a) Disengage the 4 clips and 2 guides as shown in the illustration.

(b) Disconnect the connector and remove the map light assembly.

5. REMOVE MAP LIGHT BULB

(a) Turn the 2 map light bulbs and 2 map light sockets in the direction indicated by the arrows in the illustration and remove them as a unit.

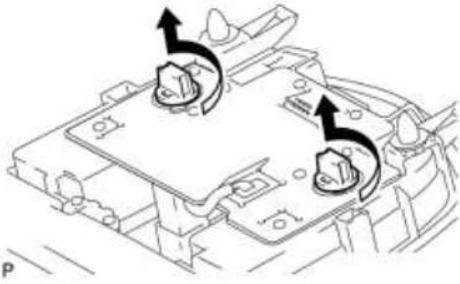


(b) Remove the 2 map light bulbs from the 2 map light sockets.

INSPECTION

1. INSPECT MAP LIGHT ASSEMBLY (w/o Sliding Roof)

(a) Inspect the interior light operation.

\*1

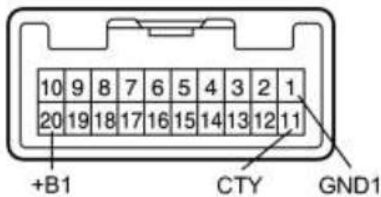

(1) Connect a positive (+) lead from the battery to terminal 20 (+B1) and a negative (-) lead to terminal 11 (CTY).

P

(2) Turn the interior light door switch on.

(3) Turn the personal light switch off.

(4) Check that the interior lights come on.

OK:

Interior lights come on.

Text in Illustration

|    |                                                                 |
|----|-----------------------------------------------------------------|
| *1 | Component without harness connected<br><br>(Map Light Assembly) |
|----|-----------------------------------------------------------------|

If the result is not as specified, replace the bulb or map light assembly.

(b) Inspect the personal light operation.

(1) Connect a positive (+) lead from the battery to terminal 20 (+B1) and a negative (-) lead to terminal 1 (GND1).

(2) Check that the personal lights come on.

OK:


| Condition | Specified Condition |
|-----------|---------------------|
|-----------|---------------------|

| Condition                    | Specified Condition                |
|------------------------------|------------------------------------|
| Personal light switch LH on  | Personal light LH comes on         |
| Personal light switch LH off | Personal light LH does not come on |
| Personal light switch RH on  | Personal light RH comes on         |
| Personal light switch RH off | Personal light RH does not come on |

If the result is not as specified, replace the bulb or map light assembly.

2. INSPECT MAP LIGHT ASSEMBLY (w/ Sliding Roof)

(a) Inspect the interior light operation.

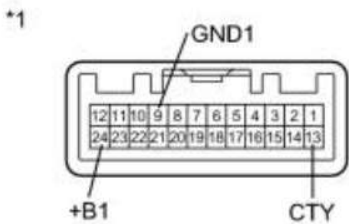

(1) Connect a positive (+) lead from the battery to terminal 24 (+B1) and a negative (-) lead to terminal 13 (CTY).

(2) Turn the interior light door switch on.

(3) Turn the personal light switch off.

(4) Check that the interior lights come on.

OK:

Interior lights come on.

Text in Illustration

|    |                                                             |
|----|-------------------------------------------------------------|
| *1 | Component without harness connected<br>(Map Light Assembly) |
|----|-------------------------------------------------------------|

If the result is not as specified, replace the bulb or map light assembly.

(b) Inspect the personal light operation.

(1) Connect a positive (+) lead from the battery to terminal 24 (+B1) and a negative (-) lead to terminal 9 (GND1).

(2) Check that the personal lights come on.

OK:


| Condition                    | Specified Condition                |
|------------------------------|------------------------------------|
| Personal light switch LH on  | Personal light LH comes on         |
| Personal light switch LH off | Personal light LH does not come on |
| Personal light switch RH on  | Personal light RH comes on         |
| Personal light switch RH off | Personal light RH does not come on |

If the result is not as specified, replace the bulb or map light assembly.

# INSTALLATION

## 1. INSTALL MAP LIGHT BULB


(a) Install the 2 map light bulbs to the 2 map light sockets.

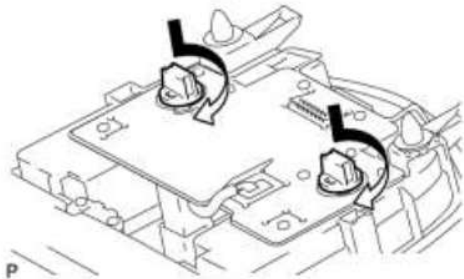

(b) Turn the 2 map light bulbs and 2 map light sockets in the direction indicated by the arrows in the illustration and install them as a unit.

## 2. INSTALL MAP LIGHT ASSEMBLY (w/o Sliding Roof)

(a) Connect the connector.

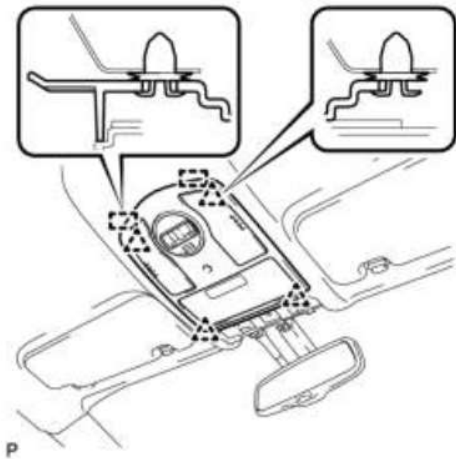


(b) Engage the 2 guides and 4 clips, and install the map light assembly.

## 3. INSTALL MAP LIGHT ASSEMBLY (w/ Sliding Roof)

(a) Connect the connector.

(b) Engage the 2 guides and 4 clips, and install the map light assembly.



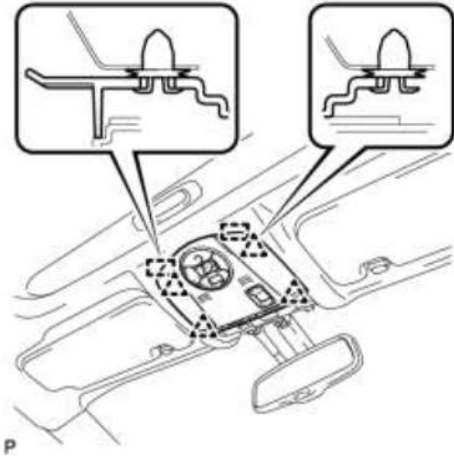


4. INSTALL ROOF TOP MOULDING (w/o Lane Keeping Assist System) [INFO](#)

5. INSTALL ROOF TOP MOULDING (w/ Lane Keeping Assist System) [INFO](#)

COMPONENTS

ILLUSTRATION

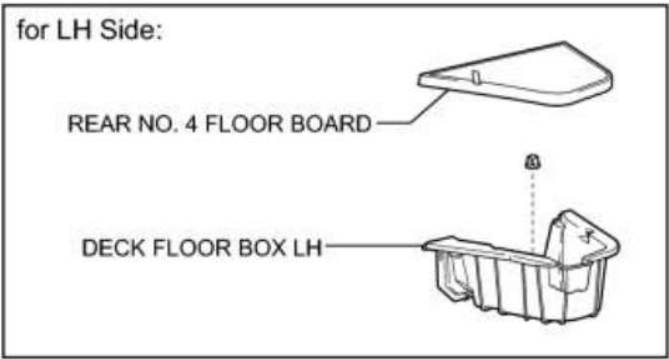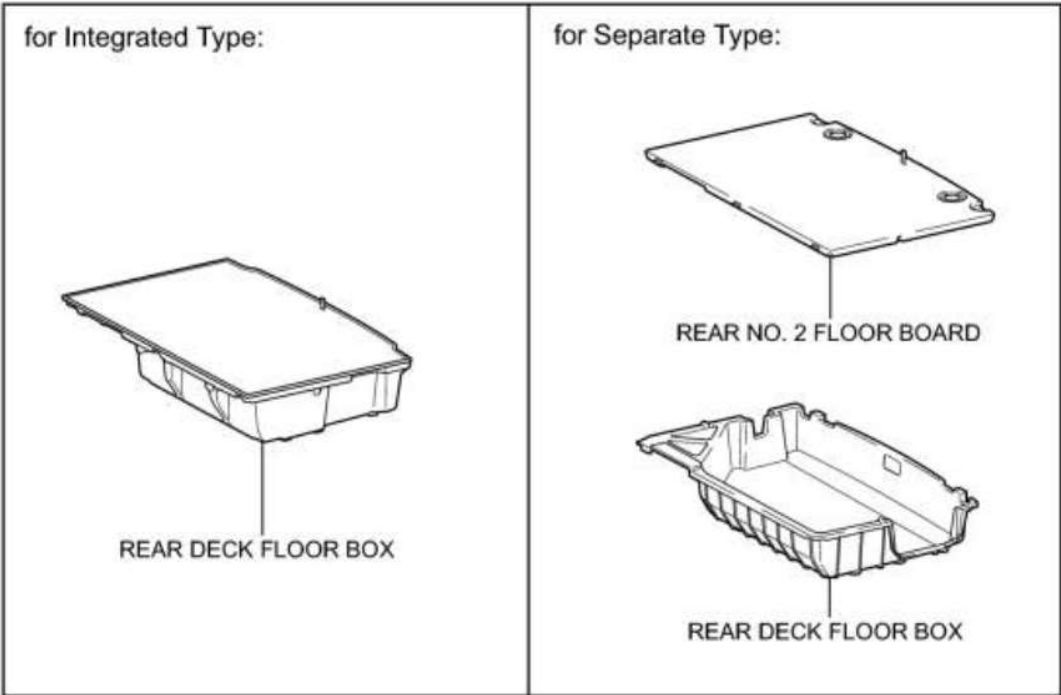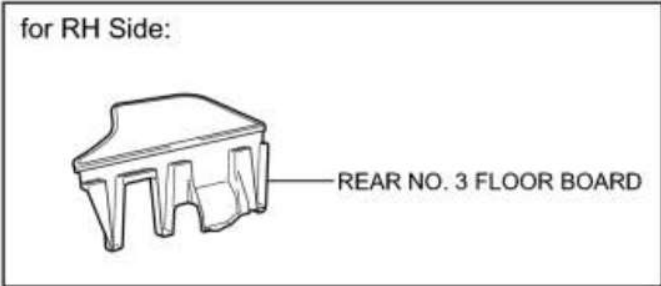


P

ILLUSTRATION


2010 Toyota Prius

Repair Manual

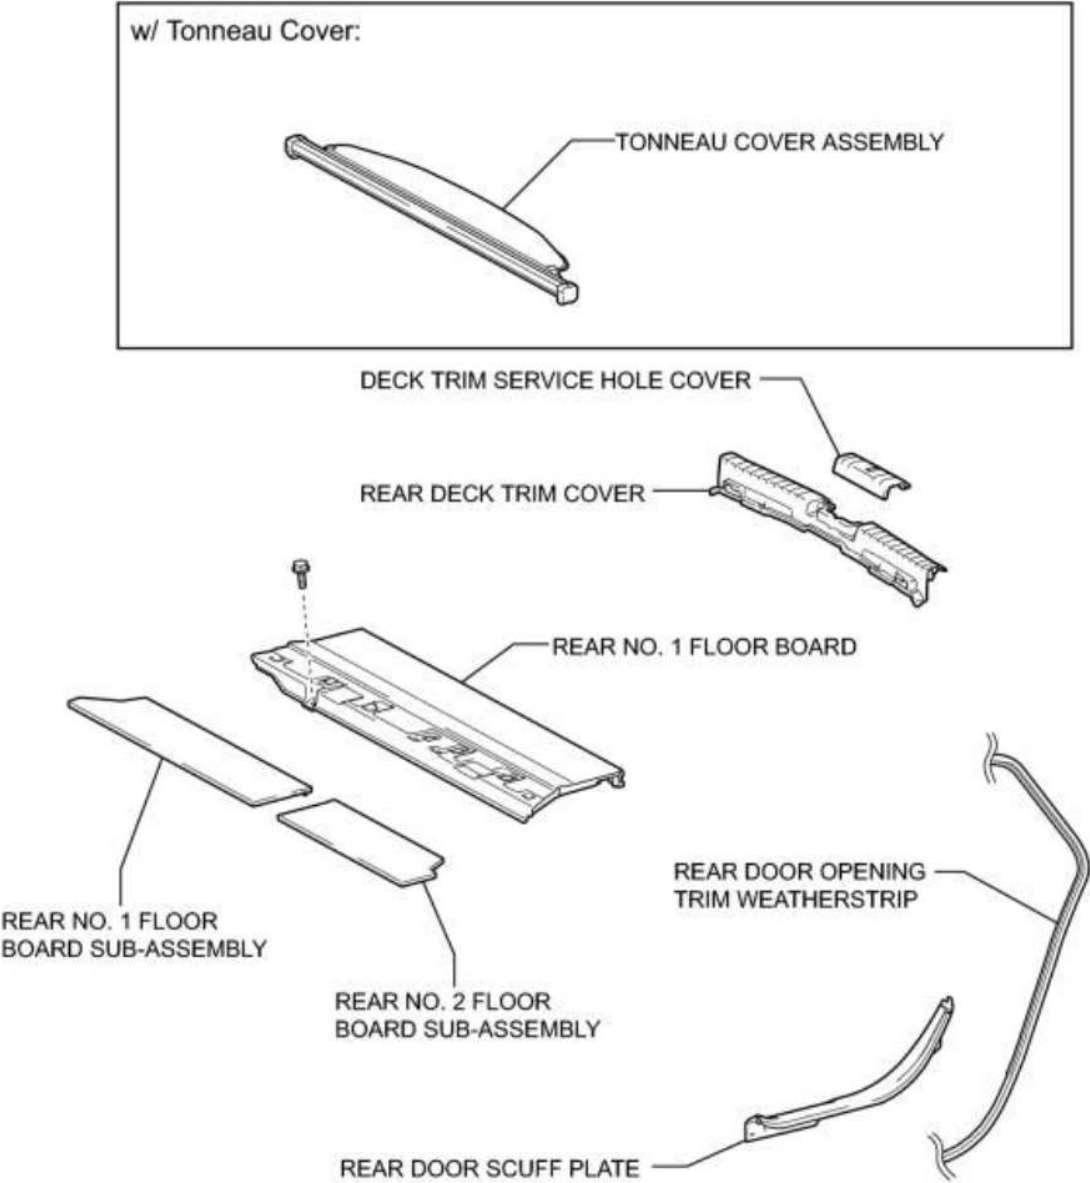

P

ILLUSTRATION


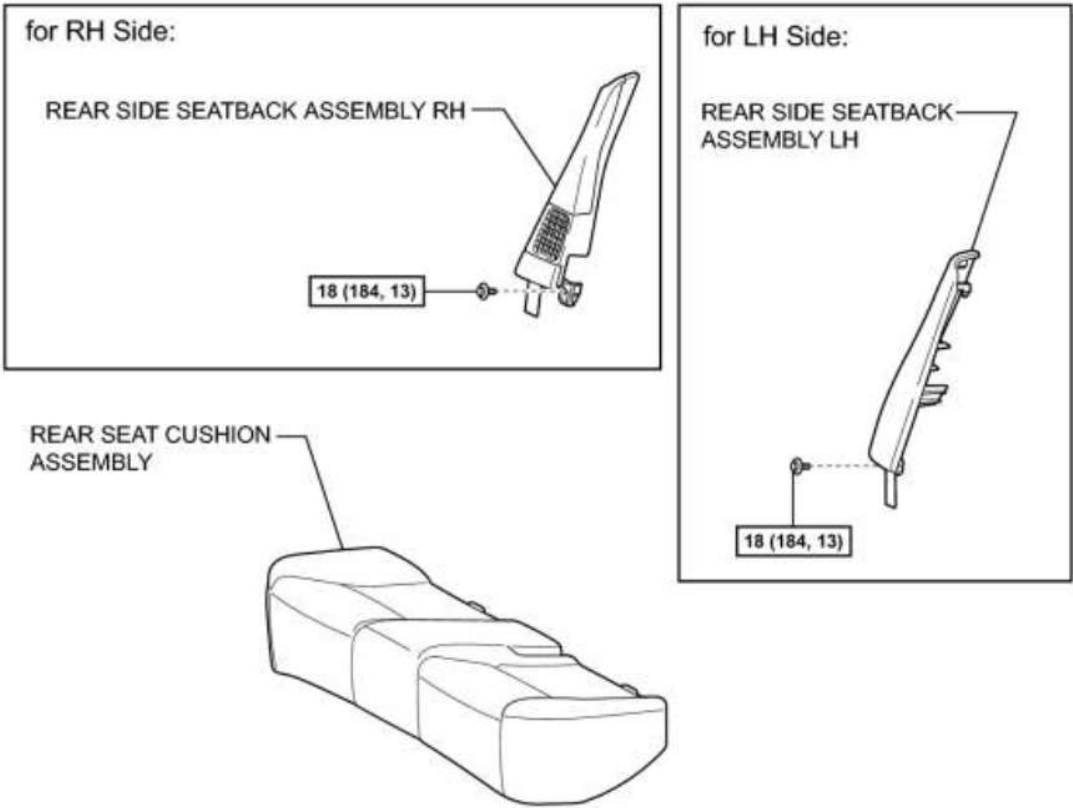


**N\*m (kgf\*cm, ft.\*lbf):** Specified torque

P

ILLUSTRATION

cardiagn.com

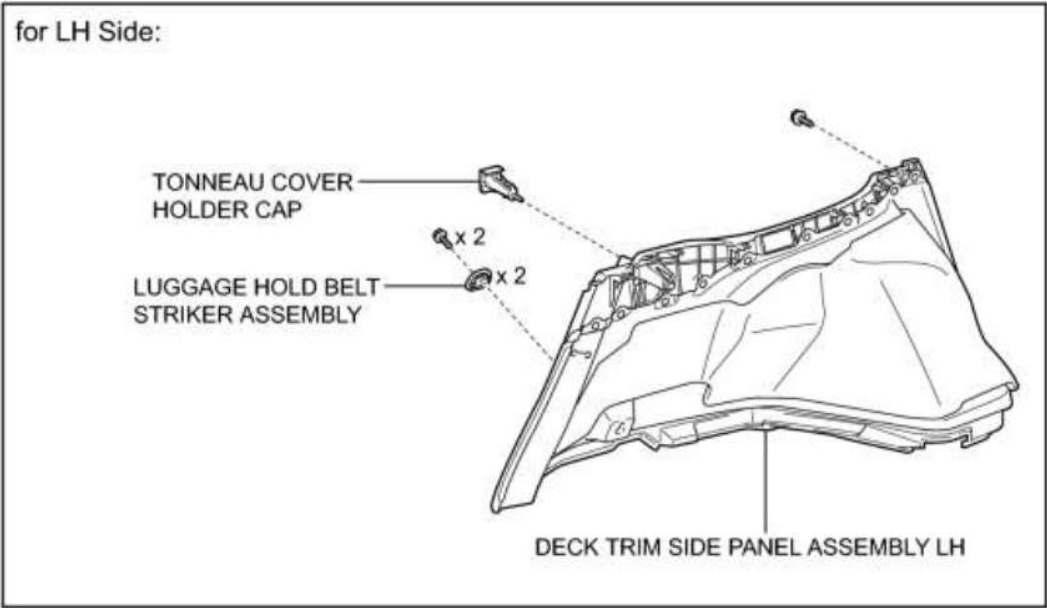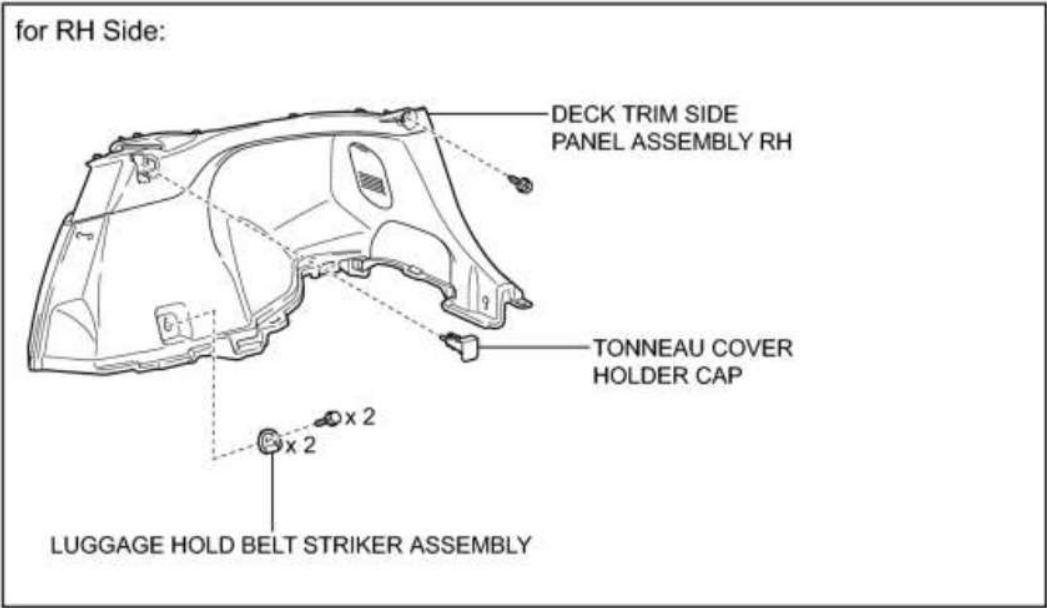

**N\*m (kgf\*cm, ft.\*lbf):** Specified torque

P

## REMOVAL

1. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) [INFO](#)
2. REMOVE REAR DECK FLOOR BOX [INFO](#)
3. REMOVE REAR NO. 3 FLOOR BOARD (for RH Side) [INFO](#)
4. REMOVE REAR NO. 4 FLOOR BOARD (for LH Side) [INFO](#)
5. REMOVE DECK FLOOR BOX LH (for LH Side) [INFO](#)
6. REMOVE REAR DOOR SCUFF PLATE [INFO](#)
7. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP [INFO](#)
8. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover) [INFO](#)
9. REMOVE REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY [INFO](#)
10. REMOVE REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY [INFO](#)
11. REMOVE REAR NO. 1 FLOOR BOARD [INFO](#)
12. REMOVE DECK TRIM SERVICE HOLE COVER [INFO](#)
13. REMOVE REAR DECK TRIM COVER [INFO](#)
14. REMOVE REAR SEAT CUSHION ASSEMBLY [INFO](#)
15. REMOVE REAR SIDE SEATBACK ASSEMBLY LH (for LH Side) [INFO](#)
16. REMOVE REAR SIDE SEATBACK ASSEMBLY RH (for RH Side)

### HINT:

Use the same procedure described for the LH side.

17. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side) [INFO](#)
18. REMOVE TONNEAU COVER HOLDER CAP (for LH Side) [INFO](#)
19. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (for LH Side) [INFO](#)
20. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for RH Side)

### HINT:

Use the same procedure described for the LH side.

2010 Toyota Prius

Repair Manual

## 21. REMOVE TONNEAU COVER HOLDER CAP (for RH Side)


### HINT:

Use the same procedure described for the LH side.

## 22. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (for RH Side) INFO

## 23. REMOVE REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY

(a) Disconnect the connector.

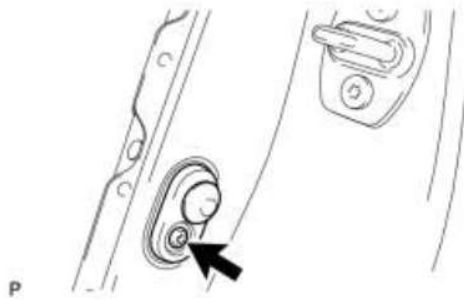

(b) Using a T30 "TORX" socket wrench, remove the bolt and rear door courtesy light switch assembly.


INSPECTION

1. INSPECT REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

| Tester Connection | Switch Condition | Specified Condition |
|-------------------|------------------|---------------------|
| 1 - Switch body   | Pushed           | 10 kΩ or higher     |
| 1 - Switch body   | Not pushed       | Below 1 Ω           |

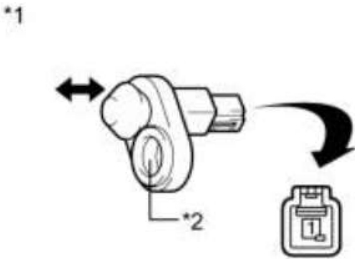


Text in Illustration

|    |                                                                                   |
|----|-----------------------------------------------------------------------------------|
| *1 | Component without harness connected<br>(Rear Door Courtesy Light Switch Assembly) |
| *2 | Switch Body                                                                       |

If the result is not as specified, replace the rear door courtesy light switch assembly.

# INSTALLATION

## 1. INSTALL REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY

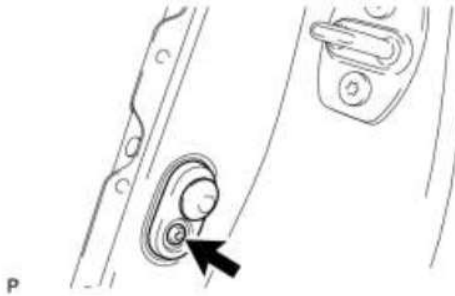

(a) Using a T30 "TORX" socket wrench, install the rear door courtesy light switch assembly with the bolt.

Torque: **8.0 N·m (82 kgf·cm, 71in·lbf)**

(b) Connect the connector.

2. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (for LH Side) [INFO](#)

3. INSTALL TONNEAU COVER HOLDER CAP (for LH Side) [INFO](#)

4. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side) [INFO](#)

5. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (for RH Side) [INFO](#)

6. INSTALL TONNEAU COVER HOLDER CAP (for RH Side)

HINT:

Use the same procedure described for the LH side.

7. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (for RH Side)

HINT:

Use the same procedure described for the LH side.

8. INSTALL REAR SIDE SEATBACK ASSEMBLY LH (for LH Side) [INFO](#)

9. INSTALL REAR SIDE SEATBACK ASSEMBLY RH (for RH Side)

HINT:

Use the same procedure described for the LH side.


10. INSTALL REAR SEAT CUSHION ASSEMBLY [INFO](#)

11. INSTALL REAR DECK TRIM COVER [INFO](#)

12. INSTALL DECK TRIM SERVICE HOLE COVER\_ [INFO](#)
13. INSTALL REAR NO. 1 FLOOR BOARD\_ [INFO](#)
14. INSTALL REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY\_ [INFO](#)
15. INSTALL REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY\_ [INFO](#)
16. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)\_ [INFO](#)
17. INSTALL DECK FLOOR BOX LH (for LH Side)\_ [INFO](#)
18. INSTALL REAR NO. 4 FLOOR BOARD (for LH Side)\_ [INFO](#)
19. CONNECT REAR DOOR OPENING TRIM WEATHERSTRIP\_ [INFO](#)
20. INSTALL REAR DOOR SCUFF PLATE\_ [INFO](#)
21. INSTALL REAR NO. 3 FLOOR BOARD (for RH Side)\_ [INFO](#)
22. INSTALL REAR DECK FLOOR BOX\_ [INFO](#)
23. INSTALL REAR NO. 2 FLOOR BOARD (for Separate Type)\_ [INFO](#)

COMPONENTS

ILLUSTRATION

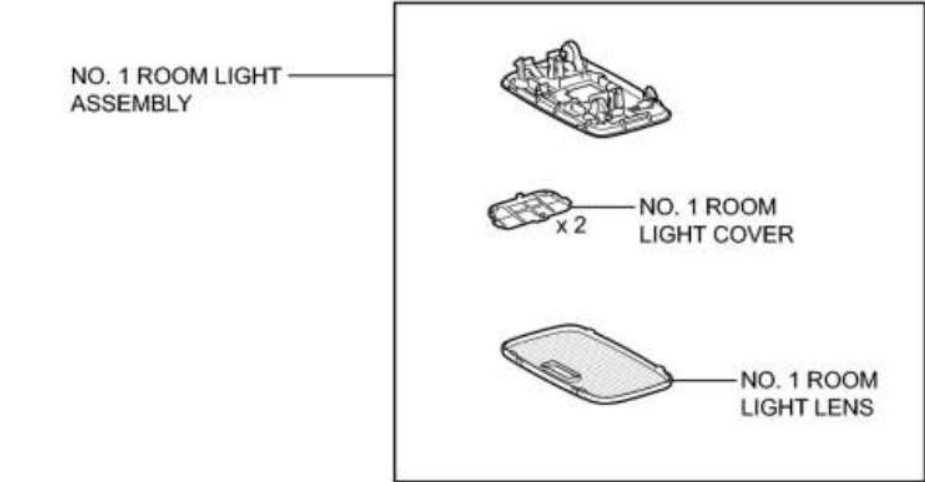


P

cardiagn.com

REMOVAL


1. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

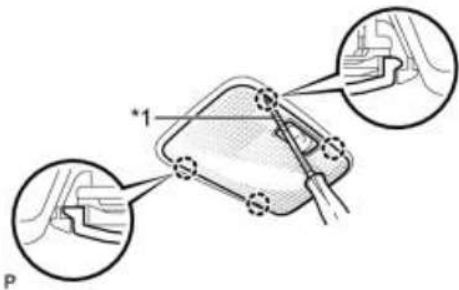

(a) Using a screwdriver wrapped with protective tape, disengage the 4 claws and remove the No. 1 room light lens.

Text in Illustration


|    |                 |
|----|-----------------|
| *1 | Protective Tape |
|----|-----------------|

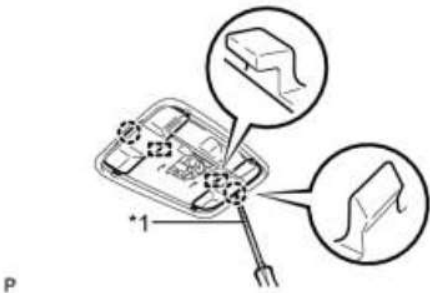

(b) Using a screwdriver wrapped with protective tape, disengage the 2 claws and 2 guides, and remove the 2 No. 1 room light covers.

Text in Illustration


|    |                 |
|----|-----------------|
| *1 | Protective Tape |
|----|-----------------|

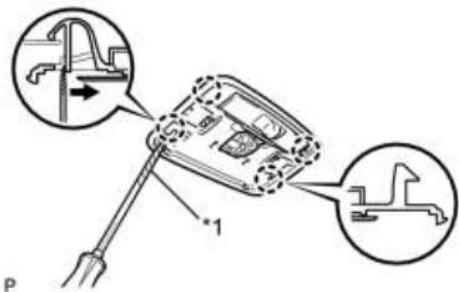

(c) Using a screwdriver wrapped with protective tape, disengage the 4 claws and disconnect the No. 1 room light assembly as shown in the illustration.

Text in Illustration


|    |                 |
|----|-----------------|
| *1 | Protective Tape |
|----|-----------------|

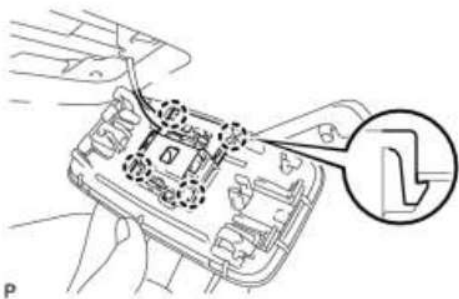

(d) Using a screwdriver, disengage the 4 claws and disconnect the room light switch base from the No. 1 room light assembly.

# INSTALLATION


## 1. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

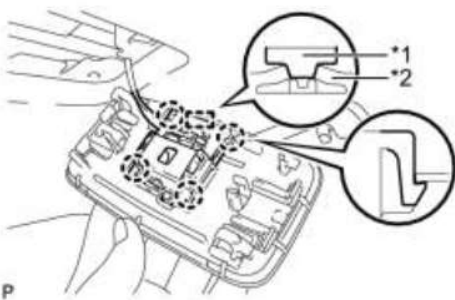

(a) Align the switch parts shown in the illustration and engage the 4 claws to install the room light switch base to the No. 1 room light assembly.

### Text in Illustration


|    |                                          |
|----|------------------------------------------|
| *1 | Switch Part of Room Light Switch Base    |
| *2 | Switch Part of No. 1 Room Light Assembly |

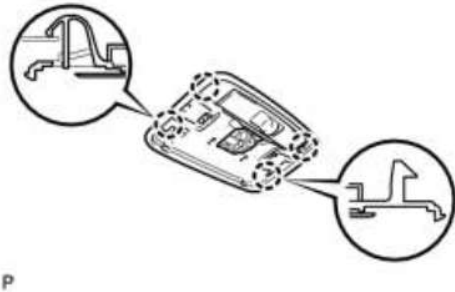

(b) Engage the 4 claws and install the No. 1 room light assembly.




(c) Engage the 2 claws and 2 guides to install the 2 No. 1 room light covers.

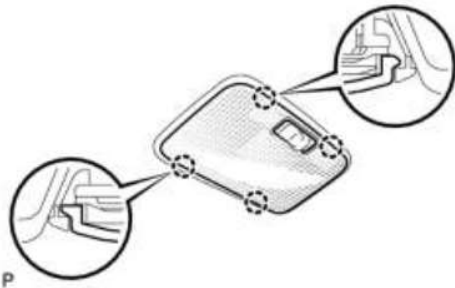

(d) Engage the 4 claws to install the No. 1 room light lens.

COMPONENTS

ILLUSTRATION

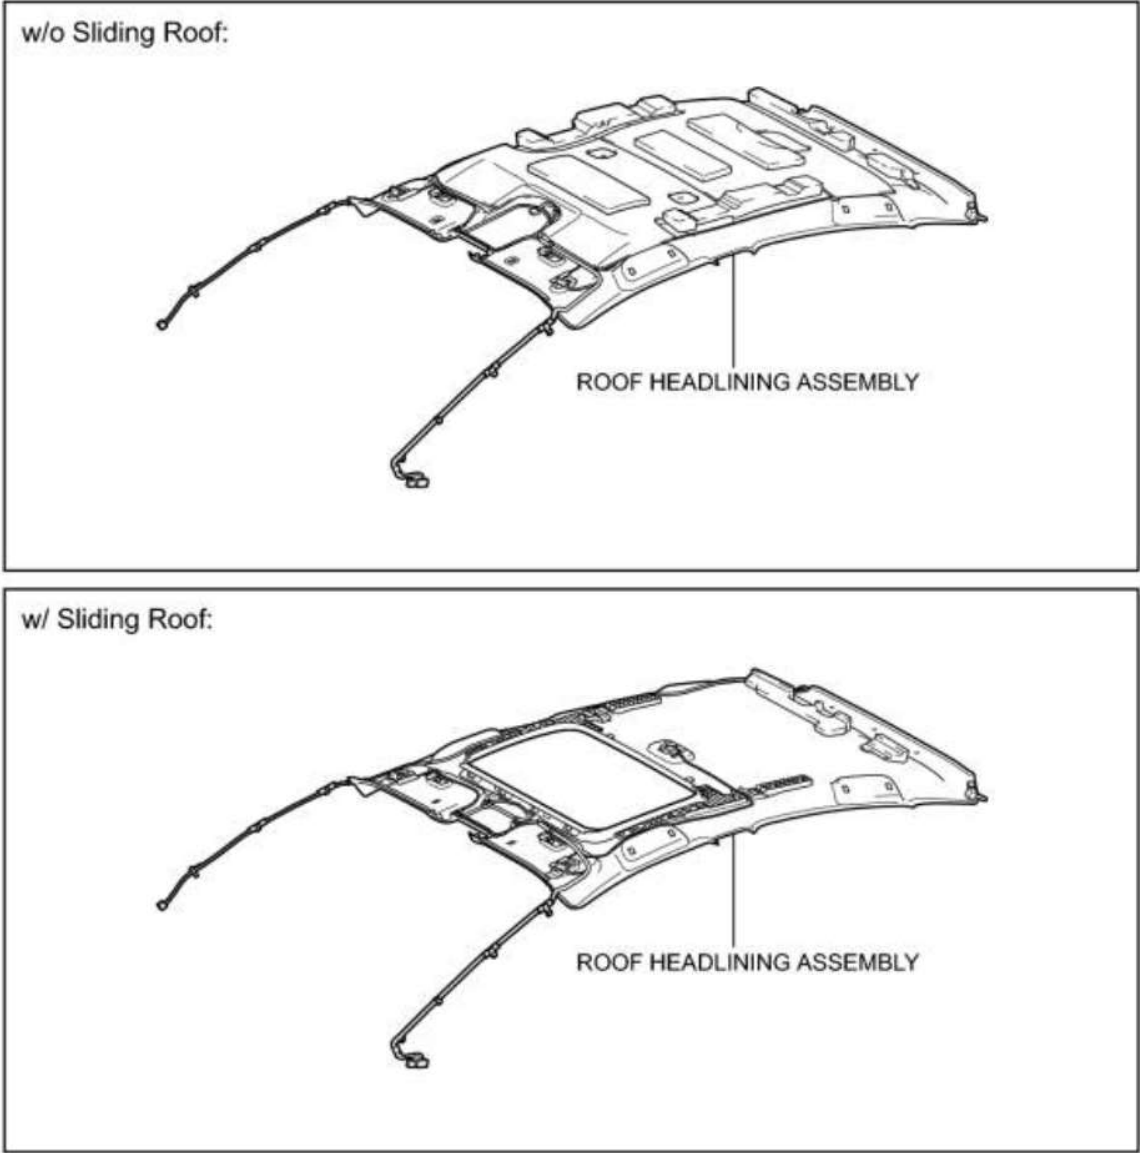

 VANITY LIGHT ASSEMBLY

P

# REMOVAL


## 1. REMOVE ROOF HEADLINING ASSEMBLY

HINT:

Refer to the procedure up to Remove Roof Headlining Assembly INFO.

## 2. REMOVE VANITY LIGHT ASSEMBLY

(a) Tilt the tab to disengage the 2 claws <A> and separate the bulb holder from the vanity light as shown in the illustration.

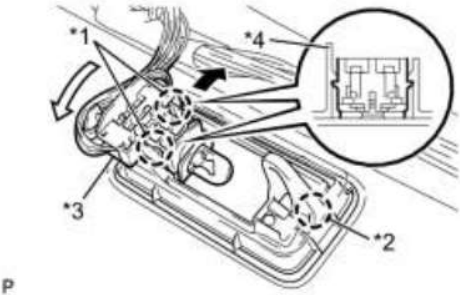


### Text in Illustration

|    |             |
|----|-------------|
| *1 | Claw <A>    |
| *2 | Claw <B>    |
| *3 | Bulb Holder |
| *4 | Tab         |

(b) Disengage the claw <B> and remove the vanity light assembly.

# INSTALLATION

## 1. INSTALL VANITY LIGHT ASSEMBLY

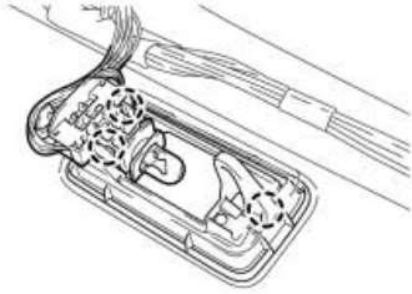

(a) Engage the 3 claws and install the vanity light assembly.

P

## 2. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

Refer to the procedure from Install Roof Headlining Assembly [INFO](#).