

Lincoln Navigator (2003 – 2006) – fuse box diagram

Fuse panel

No.	A	Circuit Protected
1	10	2003-2004: Run/Accessory – Instrument cluster, Front wiper motor, Rear wiper motor, Tire Pressure Monitor System (TPMS) module
	7.5	2005-2006: Run/Accessory – Instrument cluster, Front wiper motor, Rear wiper motor
2	20	Brake On/Off (stoplamp) switch, Turn signal/Hazard flasher, AdvanceTrac®stoplamps relay (2003-2004), Stoplamps, Center High-Mounted Stoplamp (CHMSL), Turn signal lamps
3	7.5	Power mirror switch, Memory module (logic power), Driver seat switch (memory)
4	15	Rear seat audio controls, Navigation module, DVD player
5	7.5	Brake On/Off (stoplamp) switch, Powertrain Control Module (PCM) (keep alive power), EATC control head, Body Security Module (BSM) (keep alive power), Speed control deactivation switch, Speed control servo (2003-2004), SecuriLock LED, 3rd row seat relay coils, Power liftgate module, Clock, Brake Shift Interlock (BSI) solenoid
6	15	Headlamp switch (parklamps and switch backlighting feed), Parklamps, License lamps, Foglamp relay coil, Trailer tow electric brake controller (illumination), BSM (autolamp parklamps), Floor console gear selector lighting, Switch backlighting module (2003-2004), Foglamp indicator

7	7.5	2003-2004: Radio (Start signal)
	5	2005-2006: Radio (Start signal)
8	10	Rear window defroster switch, Heated outside mirrors, Rear window defroster indicator (climate control head)
9	15	2004: Fuel pump relay, Fuel pump shut-off switch, Fuel pump motor 2005-2006: Transmission control module
10	20	Trailer tow back-up lamps relay, Trailer tow 7-wire connector (back-up lamps), Trailer tow parklamps relay, Trailer tow 7-and 4-wire connectors (parklamps)
11	10	A/C compressor clutch relay, A/C compressor clutch solenoid, Air suspension compressor relay (2003-2004), 4×4 Integrated Wheel Ends (IWE) solenoid
12	10	2003-2004: Speed control relay, Speed control servo
	15	2005-2006: Fuel pump relay, Fuel pump shut-off switch, Fuel pump driver module, Fuel pump motor
13	10	Rear window defroster relay coil, A/C refrigerant containment switch, A/C compressor thermistor (2003-2004), A/C de-icing switch (2005-2006), A/C low pressure switch (2005-2006), DEATC/DATC control head, DEATC/DATC solenoids, DEATC/DATC blower controller, Trailer tow battery charge relay coil
14	10	Daytime Running Lamps (DRL) ignition relay coil, Digital Transmission Range Sensor (DTRS back-up lamps (2003-2004)), Trailer tow back-up lamps relay coil, Electrochromatic mirror, Back-up lamps relay (2005-2006), Back-up lamps (2005-2006)

15	5	AdvanceTrac® switch, Instrument cluster (Run/Start feed)
16	10	ABS/AdvanceTrac® module (Run/Start feed)
17	15	Foglamps
18	10	Auxiliary A/C temperature blend door actuator, Auxiliary A/C front auxiliary control, Park brake release relay coils, Turn signal flasher, Electrochromatic mirror, Auxiliary mode motor, Climate controlled seat modules (2003-2004)
19	10	Restraints Control Module (RCM)
20	30	2003-2004: 4×4 module, Air suspension module (air spring solenoids and height sensors) 2005-2006: BSM (door locks, liftgate glass release relay), Liftgate glass release motor, Left front window motor, Door/Liftgate lock motors
21	15	Instrument cluster (B+), Interior (courtesy) lamps, TPMS module (2003-2004), Park brake release relays, Park brake release motor, Puddle lamps (outside mirrors)
22	10	Moonroof switch illumination, Flip window switch, Flip window relays, Flip window motors, Electronic Hidden Antenna Module (EHAM) antenna amplifier (navigation radio), Radio (delayed accessory feed), Left front window motor, Navigation module
23	10	RH low beam
24	15	Interior demand lamps (front map/dome lamps, glove compartment lamp, cargo lamp, roof rail lamps, vanity mirror lamps), Battery saver relay coil, Battery saver relay power, Heated Positive Crankcase Ventilation (PCV) valve (2005-2006), Heated PCV valve relay (2005-2006)

25	10	LH low beam
26	20	Horn relay, Horns
27	5	Brake Shift Interlock solenoid, Overdrive cancel switch (2003-2004), Reverse park aid system module, Air suspension module (Run/Start), Compass module
28	5	PCM relay coil, Speed control relay coil (2003-2004), SecuriLock transceiver, Heated PCV valve relay coil (2005-2006)
29	30	Trailer tow electric brake controller, Trailer tow 7-wire connector (electric brake)
30	30	2003-2004: BSM (door locks, liftgate glass release relay), Liftgate glass release motor, Left front window motor, Door/Liftgate lock motors
	25	2005-2006: PCM (4x4 transfer case clutch), Air suspension module (air spring solenoids and height sensors)
31	25	2003: Radio (B+), Subwoofer, Navigation radio audio amplifier
	20	2004-2006: Radio (B+), Subwoofer, Navigation radio audio amplifier
32	15	2003-2004: Catalyst Monitor Sensors (CMS), Transmission solenoids 2005-2006: Catalyst Monitor Sensors (CMS), 6-speed transmission (ignition sense), HEGO sensors, Canister vent solenoid, Vapor Management valve (VMV) solenoid, A/C compressor clutch relay coil, CMCV, VCT actuators
33	20	2003-2004: HEGO sensors, EGR vacuum regulator (EVR) solenoid, Intake Manifold Tuning valve (IMTV) solenoid, Canister vent solenoid, Vapor Management valve (VMV) solenoid, A/C compressor clutch relay coil

34	20	2003: PCM, Idle Air Control (IAC) solenoid, Mass Air Flow (MAF) sensor, Fuel injectors, Fuel pump relay, Fuel pump shut-off switch, Fuel pump motor
	15	2004: PCM, Idle Air Control (IAC) solenoid, Mass Air Flow (MAF) sensor, Fuel injectors 2005-2006: PCM, Mass Air Flow (MAF) sensor, Fuel injectors
35	20	High beam headlamps, Instrument cluster high beam indicator
36	10	Trailer tow right turn/stop lamps
37	20	Cargo area power point
38	25	Rear wiper motor, Washer pump (rear window wash)
39	20	Console power points
40	20	DRL relays, DRL foglamps, DRL headlamp relay coil, Headlamp switch (headlamps), Multifunction switch (flash-to-pass), BSM (autolamp headlamps relay), High beam relay coil, Fuse 25 (LH low beam), Fuse 23 (RH low beam)
41	20	Cigar lighter, OBD II diagnostic connector
42	10	Trailer tow left turn/stop lamps
101	30	Starter motor relay, Starter motor solenoid
102	30	Ignition switch power

103	30	ABS/AdvanceTrac® module (pump motor)
104	30	LH 3rd row seat relay, LH 3rd row seat switch, LH 3rd row seat motor
105	40	2003: Power liftgate module, Power liftgate motors, Power running boards control
	30	2004-2006: Power liftgate module, Power liftgate motors, Power running boards control
106	30	Trailer tow battery charge relay, Trailer tow 7-wire connector (battery charge)
107	30	Auxiliary A/C blower relay, Auxiliary A/C blower motor
108	30	Passenger seat motor switch, Passenger seat lumbar switch and motor
109	30	Driver seat lumbar switch and motor, Memory module, Power memory mirrors, Adjustable pedals switch and motor
110	30	Power running boards
111	50	Air suspension compressor relay, Air suspension compressor
112	30	ABS/AdvanceTrac® module (valves)
113	30	Front wiper motor, Washer pump (windshield wash)
114	40	Rear window defroster relay, Rear window defroster grid, Heated mirrors (Fuse 8)

115	30	4×4 module (2003-2004), Transfer case shift motor, 4×4 relays (2005-2006)
116	40	Front blower motor relay, Front blower motor
117	30	RH 3rd row seat relay, RH 3rd row seat switch, RH 3rd row seat motor
118	30	Driver and passenger climate control seat module
401	30	Circuit Breaker: Power windows (circuit breaker), Main window switch, Window motors, Window switches, Moonroof module
Relay		
R01	Starter	
R02	Delayed accessory (Fuse 22, CB 401, Power windows, Moonroof, Flip windows, Radio, DVD (2003), Navigation module, Navigation antenna amplifier)	
R03	Hi-beam	
R04	Rear window defrost (Rear window defroster, Heated outside mirrors)	
R05	Trailer tow battery charge	
R06	Front blower	
R201	Trailer tow park lamp	
R202	Foglamp	

R203	2003-2004: PCM (Fuse 32, Fuse 33, Fuse 34, Fuel pump relay, Fuel pump, PCM solenoids and sensors) 2005-2006: PCM (Fuse 32, Fuse 34, PCM solenoids and sensors)
R301	Trailer tow back-up lamp
R302	2003-2004: Speed control 2005-2006: Heated PCV valve
R303	Fuel pump
R304	Battery saver relay (Roof rail lamps, Vanity mirror lamps, Map/Dome lamp, Glove box lamp, Cargo area lamp, Outside mirror puddle lamps, Instrument cluster (interior lamps))
R305	Horn