


ST

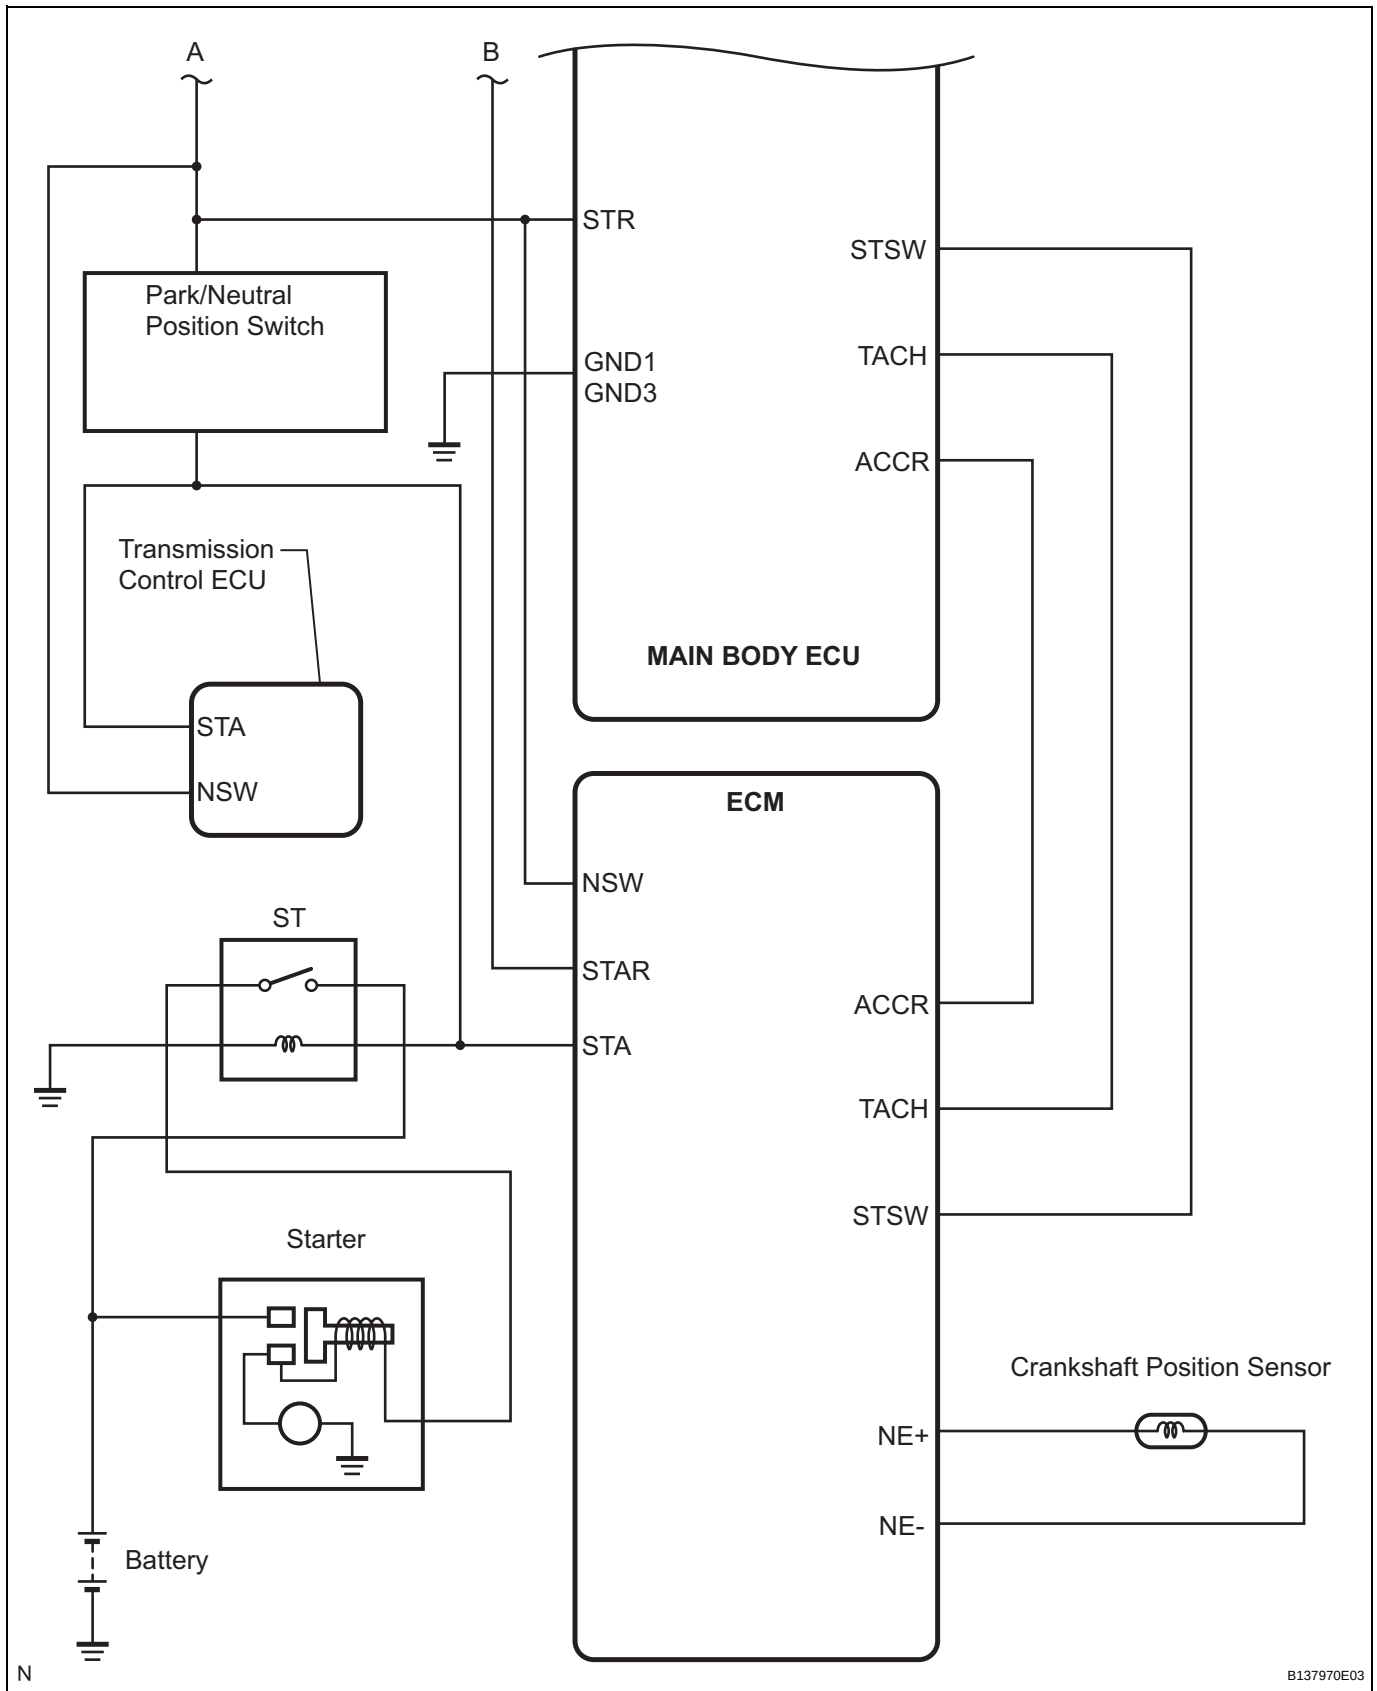



N

B137970E03

Communication table:

Transmitting ECU (Transmitter)	Receiving ECU (Receiver)	Signal	Communication method
Combination meter	Main body ECU	Vehicle speed signal	CAN/Local communication
Steering lock ECU	Main body ECU	Steering lock/unlock signal	LIN/Local communication

ST

Transmitting ECU (Transmitter)	Receiving ECU (Receiver)	Signal	Communication method
ECM	Main body ECU	Starter signal	CAN
		Shift position signal	
		Engine revolution speed signal	
Main body ECU	Certification ECU	Engine switch position signal	CAN
		Courtesy light switch signal	
		Wireless door lock buzzer request signal	
Main body ECU	Combination meter	Entry start key signal	CAN
Main body ECU	Combination meter	Wireless door lock buzzer request signal	CAN
Certification ECU	Main body ECU	Illumination light request signal	CAN
Certification ECU	Driver seat ECU	Memory call replay request signal	CAN
Certification ECU	Main body ECU	Light answer back signal	CAN
Certification ECU	Combination meter	Meter buzzer single-shot request signal	CAN
		Meter buzzer intermittence request signal	
		Meter buzzer continuation request signal	
		Door open display signal	
		Key loss warning signal	
		Low key battery warning signal	
		Shift position warning signal	
		Steering lock abnormal warning	
		Steering lock unlock warning	
Combination meter	Certification ECU/Main body ECU	Vehicle speed signal	CAN
Certification ECU	Main body ECU	Key ID matching request signal	LIN
Main body ECU	Certification ECU	ID required signal	LIN