

| CIRCUIT BREAKERS       | SWC BACKLIGHT            | RR TUP       | LR TUP                     |                      |                           |
|------------------------|--------------------------|--------------|----------------------------|----------------------|---------------------------|
| HEADLAMP               | PCM PASS KEY<br>GUEST IN | RR FOG LP    | RR OFFSIDE<br>HTD SURFACES | ELC TRAILER          |                           |
|                        | PWR MIRROR               | CIGAR CIG    | FRT PWR SCOT               | CTRY LAMP            | WAP RELAY                 |
|                        | CRUISE                   | TSIG         | SH                         | IGN 1                |                           |
| PWR WDO                |                          | PWR GER VENT | HEAC BLOWER                | RR HEAC<br>TEMP CONT | HVAC/DIGRL<br>HEATED SEAT |
|                        | PCM ORANK                | FRT WPR WSHR | MALL CLUSTER               | RR WPR WSHR          | SCM PRGRM                 |
| PWR HEATED<br>SEAT P22 | PASS KEY                 | HAZARD       | STOP LAMP                  | LR HEADLP LOW        | RR HEADLP LOW             |
|                        | PWR LOCK                 | FRT PWR SCOT | CLUSTER BATT               | LR HEADLP HIGH       | RR HEADLP<br>HIGH         |
| FRT HEAC<br>-H BLWR    | HTD MIRROR               | DR           | CAN VENT SOL               |                      | PCM WRS                   |

For More Information, See Owner's Manual


Printed in

|                   |                                                                                                                                            |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| FRT WPR/WSHR      | Windshield Wiper/Washer Motor and Switch                                                                                                   |
| HAZARD            | Turn Signal Switch                                                                                                                         |
| RR PWR SCKT       | Rear Electric Accessory Plug Housing                                                                                                       |
| DRL               | Daytime Running Lamp (DRL) Control Module                                                                                                  |
| LH T/LP           | Not Used                                                                                                                                   |
| RR DEFOG/         | Rear Window Defogger Relay,                                                                                                                |
| HTD MIRRORS       | Heated Mirrors                                                                                                                             |
| FRT PWR SCKT      | Front Electric Accessory Plug Housing                                                                                                      |
| SIR               | Inflatable Restraint Control Module                                                                                                        |
| HVAC BLOWER       | Heater-A/C Control                                                                                                                         |
| MALL/             | Instrument Cluster, BCM,                                                                                                                   |
| CLUSTER           | Electronic Level Control (ELC) Sensor and Relay                                                                                            |
| STOP LAMP         | Stoplamp Switch                                                                                                                            |
| CLUSTER BATT      | Module/Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)                                               |
| CAN VENT SOL      | Evaporative Emissions (EVAP) Canister Vent Solenoid Valve                                                                                  |
| ELC/TRAILER       | Electronic Level Control (ELC) Air Compressor and ELC Relay, Trailer Harness                                                               |
| CTSY LAMP         | BCM                                                                                                                                        |
| IGN 1             | BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Control Module, Rear Windows |
| RR HVAC TEMP CONT | Rear HVAC-A/C Control                                                                                                                      |
| RR WPR/WSHR       | Rear Window Wiper Motor, Rear Window Wiper/Washer and Multifunction Switch (Rear Window Wiper/Washer Switch)                               |
| LH HEADLP LOW     | Not Used                                                                                                                                   |
| LH HEADLP HIGH    | Not Used                                                                                                                                   |
| RAP RELAY         | Retained Accessory Power (RAP) Relay                                                                                                       |
| HVAC/DIC/DRL      | Air Inlet Actuator, Driver                                                                                                                 |
| HEATED SEAT       | Information Display, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Relay              |
| BCM PRGRM         | BCM                                                                                                                                        |
| RH HEADLP LOW     | Not Used                                                                                                                                   |
| RH HEADLP HIGH    | Not Used                                                                                                                                   |

|         |                                                         |
|---------|---------------------------------------------------------|
| PCM/ABS | IGN MAIN Relay and PCM, Electronic Break Control Module |
|---------|---------------------------------------------------------|

## Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir.

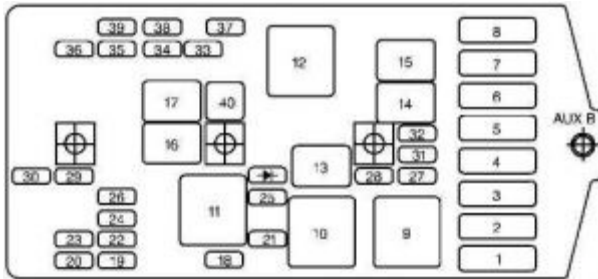

Oldsmobile Silhouette – fuse box diagram –

engine compartment

| Maxi Fuse        | Usage                                                                                                                                                                                                          |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1-COOL FAN<br>2  | Coolant Fans                                                                                                                                                                                                   |
| 2                | Not Used                                                                                                                                                                                                       |
| 3-HEADLAMPS      | Circuit Breakers: FRT HVAC HI BLWR, and HEADLAMP Fuses (Instrument Panel): HAZARD and STOPLAMP                                                                                                                 |
| 4-BATT MAIN<br>2 | Circuit Breaker: PWR SEAT/PSD. Fuses (Instrument Panel): ELC and RR DEFOG                                                                                                                                      |
| 5-IGN MAIN 1     | Ignition Switch to Fuses (Instrument Panel): ABS/TCS IGN, CRUISE, DRL, ELEC PRNDL, IGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK IGN, IGN 1-U/H, INJ, TCC)] |
| 6-COOL FAN<br>1  | Coolant Fans                                                                                                                                                                                                   |
| 7-BATT MAIN<br>1 | Fuses (Instrument Panel): ABS MOD BATT, CIGAR/DLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT                                                                                               |
| 8-IGN MAIN 2     | Ignition Switch to Fuses (I/P): B CM PRGRM, FRT HVAC LOW/MED BLWR, FRT WPR/WSHR, HVAC/DRL, MALL/RADIO/DIC, PWR QRT VENT, RR HVAC, RR WPR/WSHR, SWC ACCY and PWR WDO Circuit Breaker                            |
| Mini Relays      | Usage                                                                                                                                                                                                          |
| 9-COOL FAN       | RH FAN 1, LH FAN 2                                                                                                                                                                                             |
| 10-COOL FAN<br>2 | LH FAN 2                                                                                                                                                                                                       |
| 11 -IGN MAIN     | FUSES: A/C CLU, IGN 1-U/H, INS, ELEK IGN, TCC                                                                                                                                                                  |
| 12-COOL FAN<br>1 | RH FAN 1, LH FAN 2                                                                                                                                                                                             |

| <b>Micro Relays</b> | <b>Usage</b>                                                                                                                                                                                      |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 13-A/C CLU          | A/C Clutch                                                                                                                                                                                        |
| 14-FUEL PUMP        | Fuel Pump                                                                                                                                                                                         |
| 15-F/PMP SPD CONT   | Not Used                                                                                                                                                                                          |
| 16-HORN             | Horn                                                                                                                                                                                              |
| 17-FOG LAMP         | LH Fog Lamp, RH Fog Lamp, Fog Lamp Indicator                                                                                                                                                      |
| <b>Mini Fuse</b>    | <b>Usage</b>                                                                                                                                                                                      |
| 18-INJ              | Fuel Injectors 1-6                                                                                                                                                                                |
| 19-SPARE            | Not Used                                                                                                                                                                                          |
| 20                  | Not Used                                                                                                                                                                                          |
| 21-IGN1-UH          | Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor                                                                                      |
| 22-SPARE            | Not Used                                                                                                                                                                                          |
| 23-SPARE            | Not Used                                                                                                                                                                                          |
| 24-SPARE            | Not Used                                                                                                                                                                                          |
| 25-ELEK IGN         | Ignition Control Module (ICM)                                                                                                                                                                     |
| 26-SPARE            | Not Used                                                                                                                                                                                          |
| 27-B/U LAMP         | Transaxle Range Switch to Back-up Lamps                                                                                                                                                           |
| 28-A/C CLU          | A/C CLU Relay to A/C Compressor Clutch Oil                                                                                                                                                        |
| 29-RADIO            | Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft-Deterrent Shock Sensor |
| 30-ALT SENSE        | Generator                                                                                                                                                                                         |
| 31-TCC              | Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM                                                                                                                    |
| 32-FUEL PUMP        | Fuel Pump Relay                                                                                                                                                                                   |
| 33-ECM SENSE        | Powertrain Control Module (PCM)                                                                                                                                                                   |
| 34                  | Not Used                                                                                                                                                                                          |
| 35-FOG LP           | Fog Lamp Relay                                                                                                                                                                                    |
| 36-HORN             | Horn Relay                                                                                                                                                                                        |
| 37-PARK LP          | Daytime Running Lamps (DRL) Control Module, Headlamps and Instrument Panel Dimmer Switch Theft-Deterrent Relay to Headlamps                                                                       |
| 38                  | Not Used                                                                                                                                                                                          |
| 39-SPARE            | Not Used                                                                                                                                                                                          |

|    |                  |
|----|------------------|
| 40 | Mini Fuse Puller |
|----|------------------|