





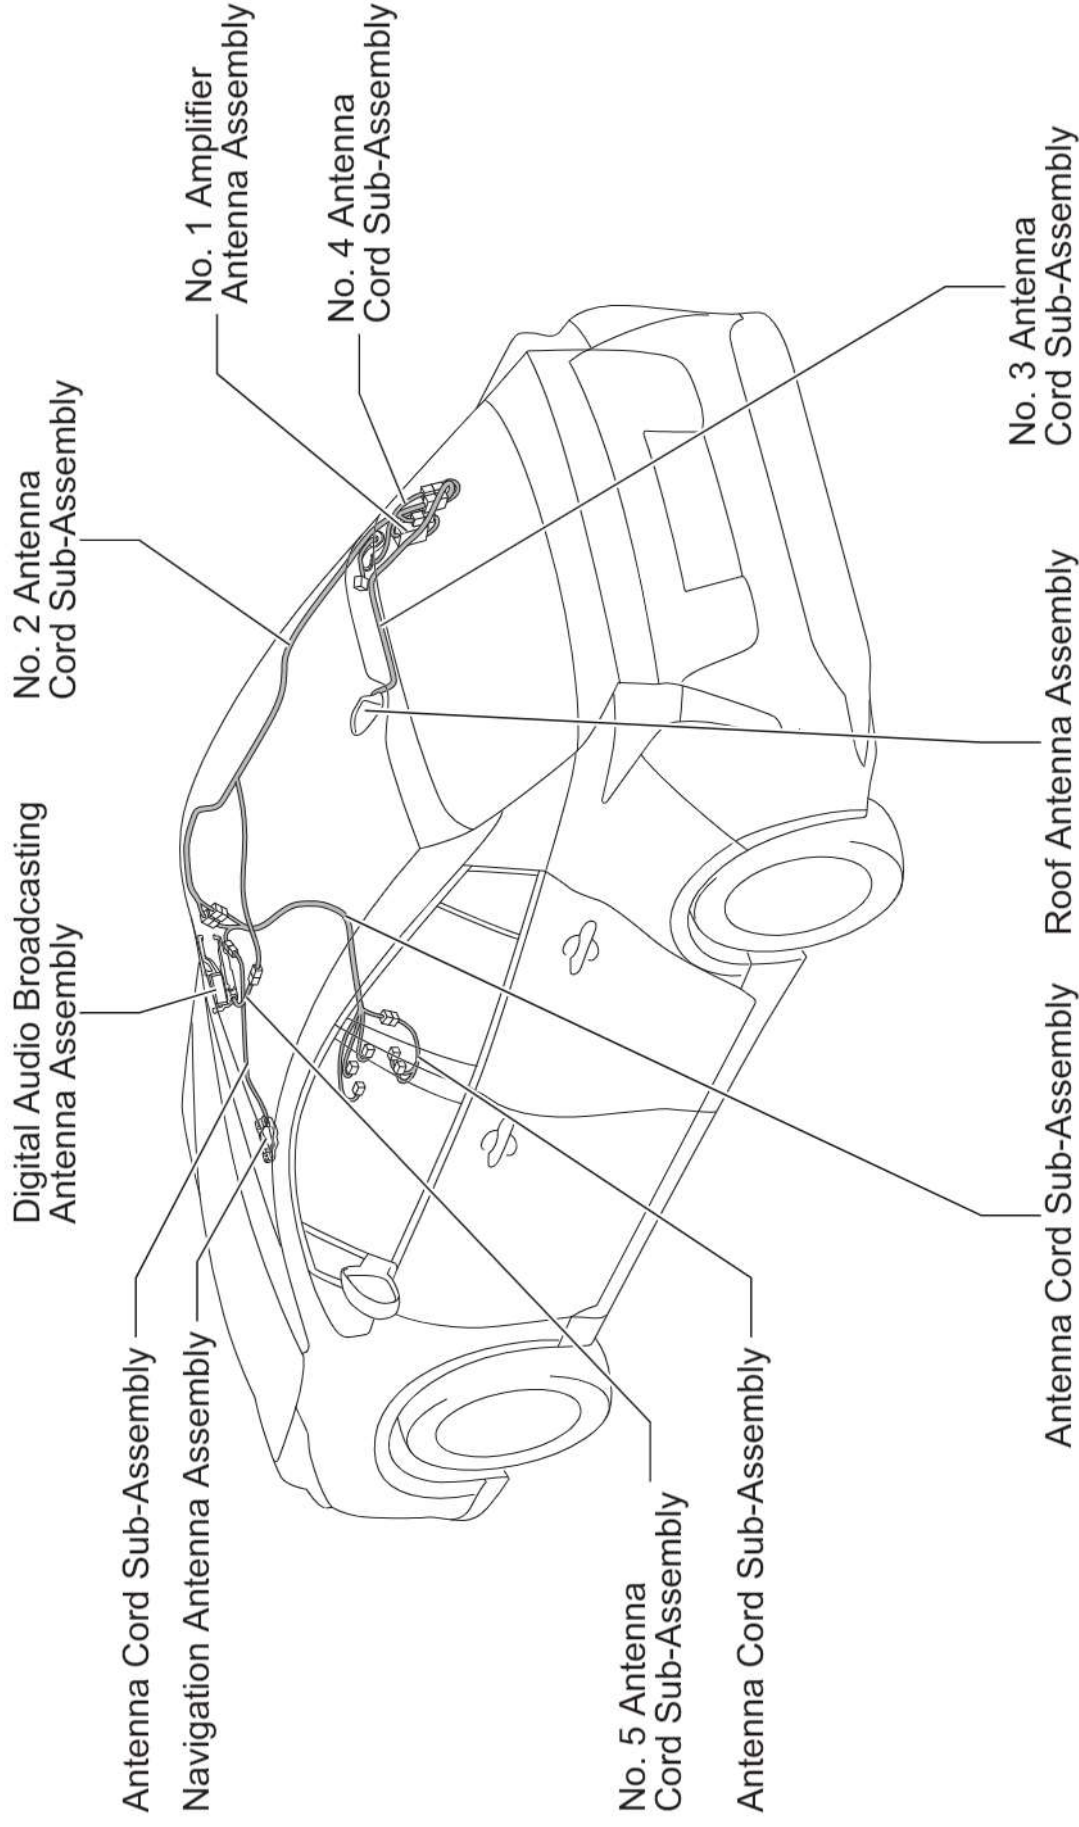

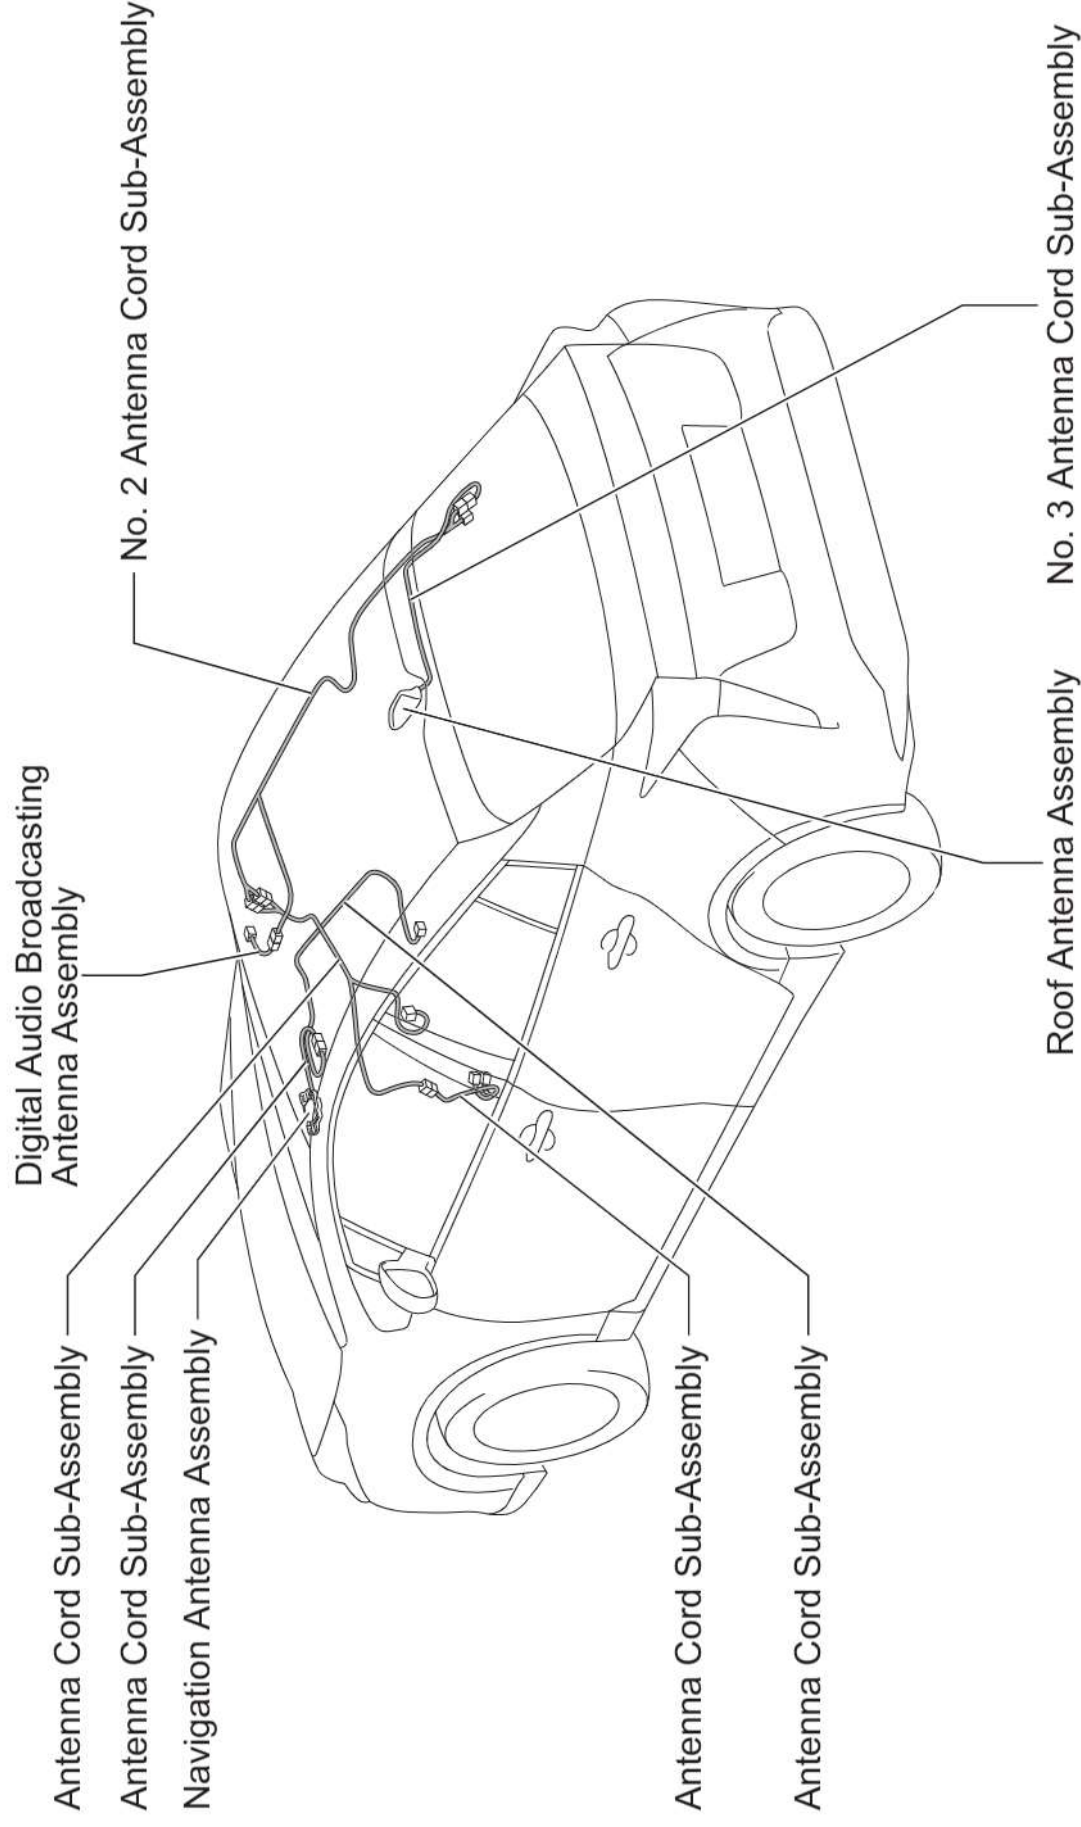
















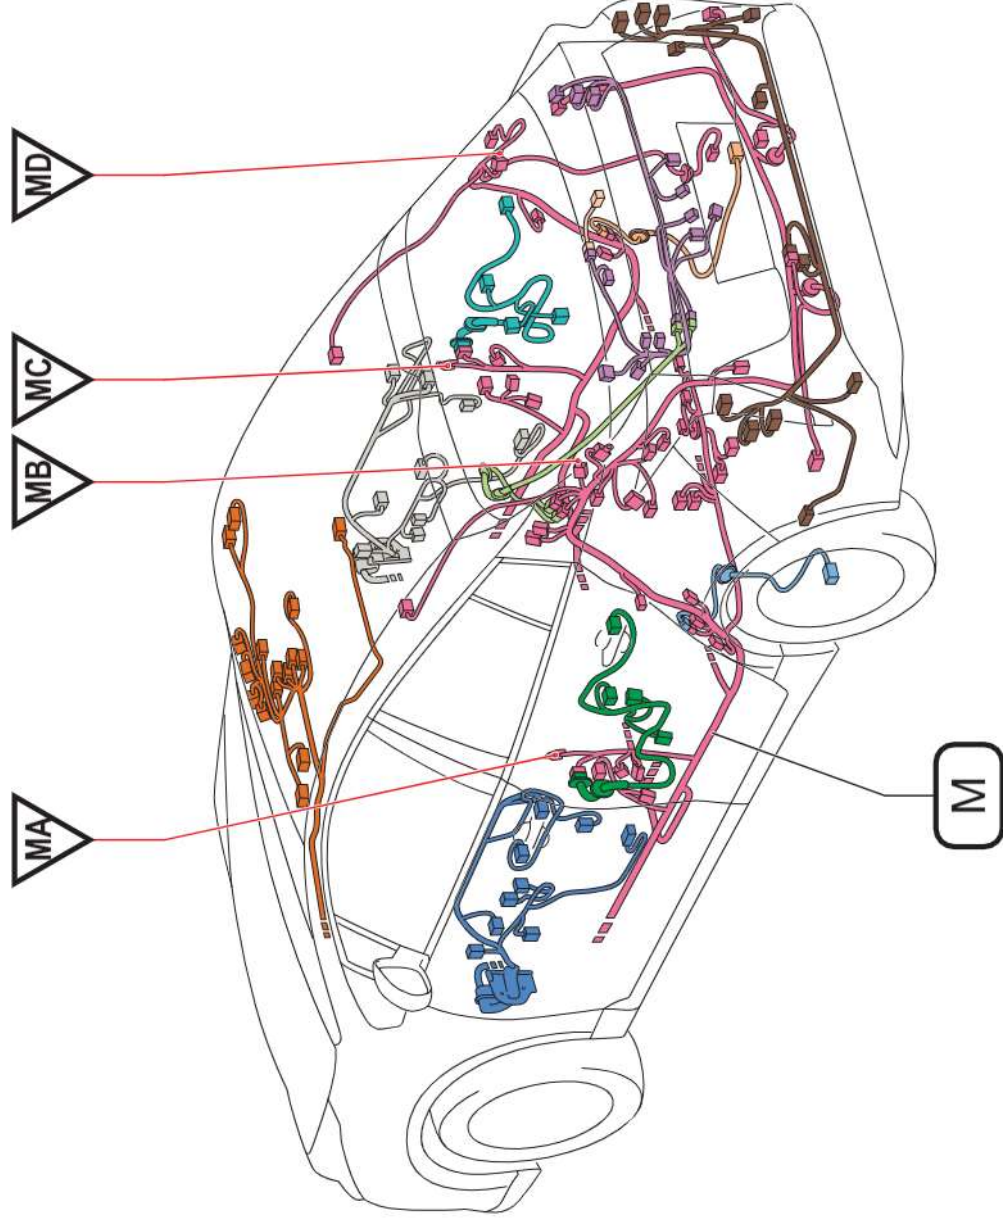


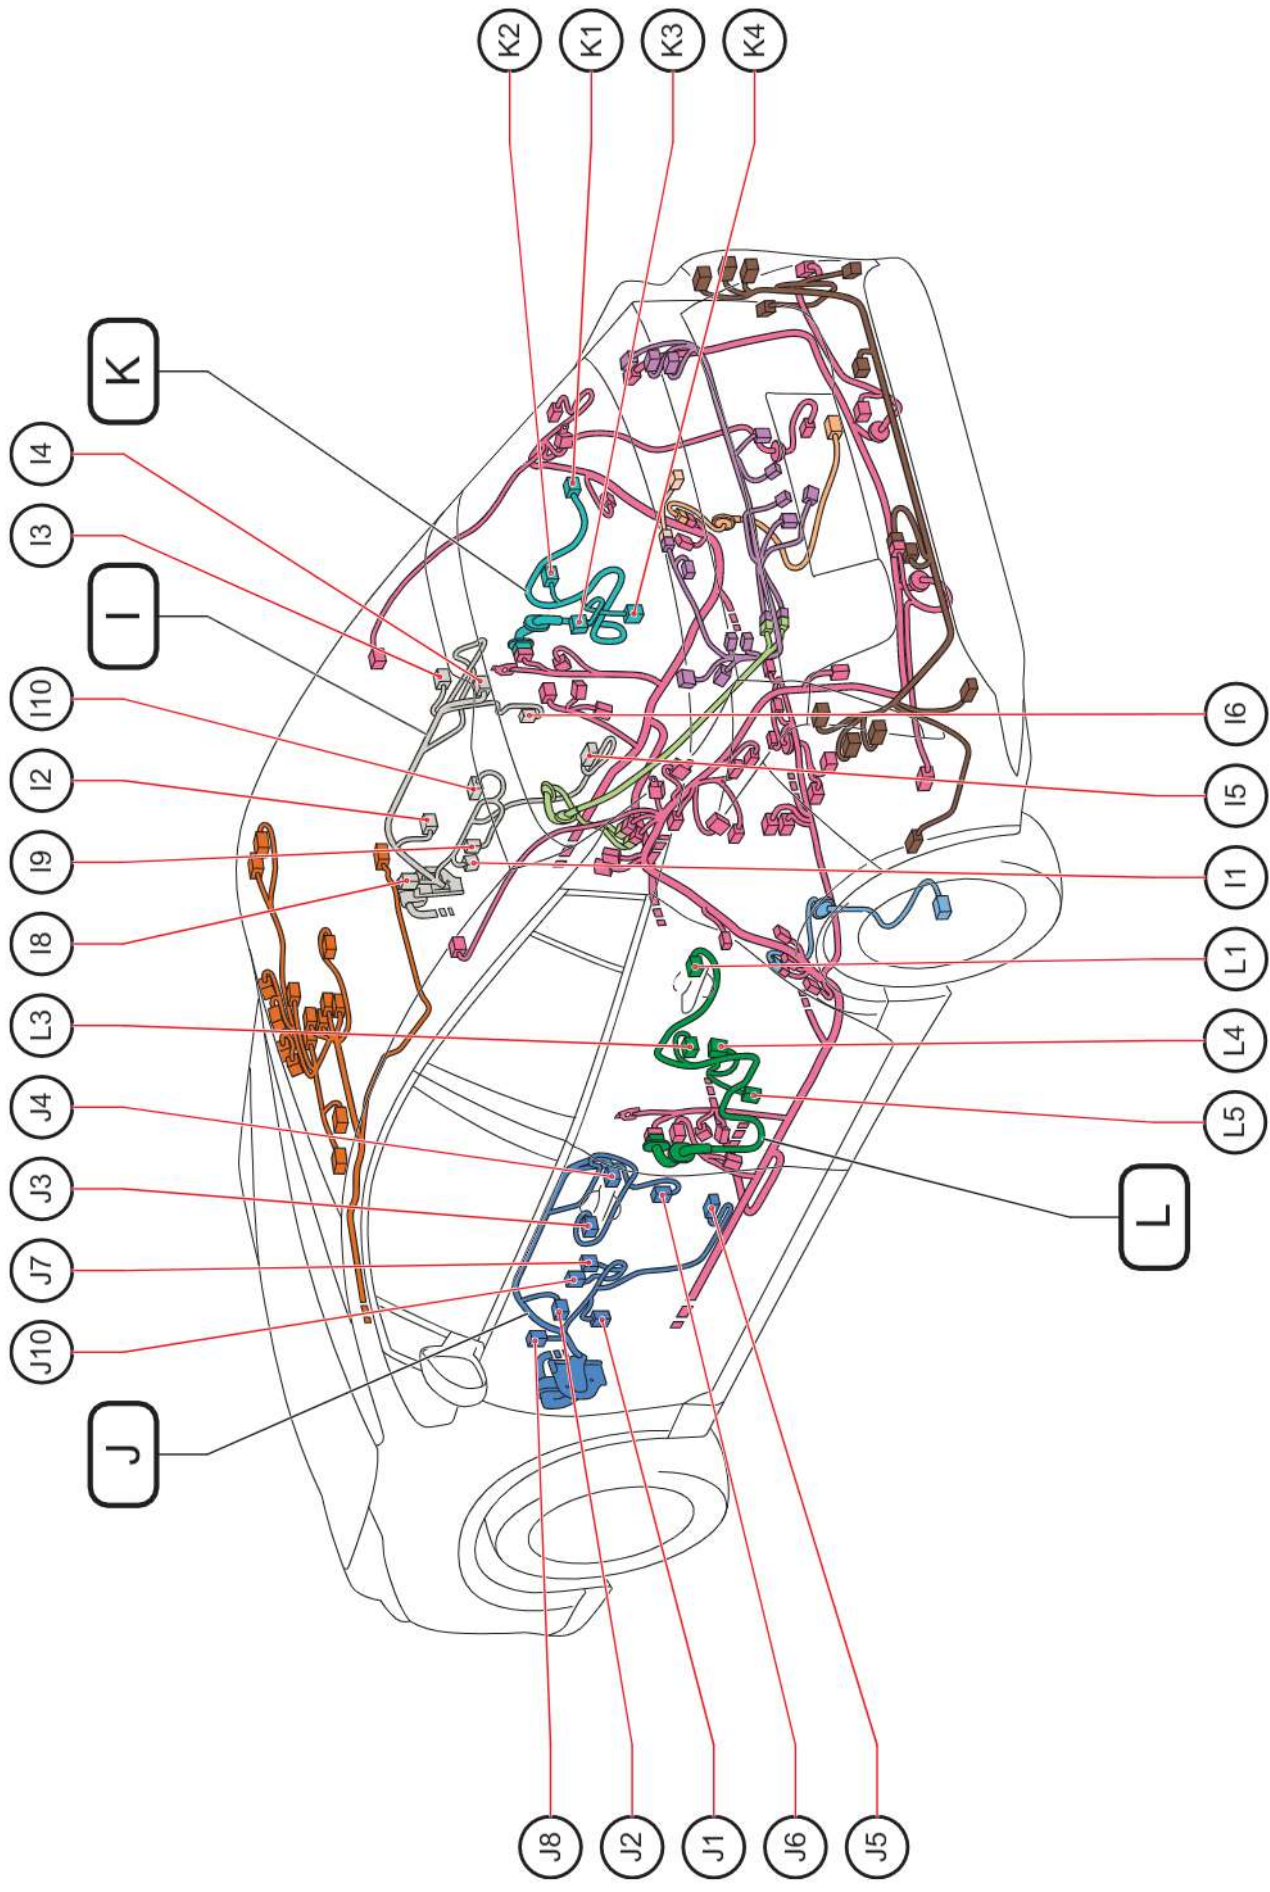

Position of Parts in Body (LHD)


I1	Front No. 1 Speaker Assembly RH
I2	Front Power Window Regulator Motor Assembly RH
I3	Front Door Outside Handle Assembly RH
I4	Front Door Lock with Motor Assembly RH
I5	Front Courtesy Light Assembly RH
I6	Door Side Airbag Sensor RH
I8	Outer Rear View Mirror Assembly RH
I9	Door Control Switch Assembly
I10	Front Power Window Regulator Switch Assembly RH
J1	Front No. 1 Speaker Assembly LH
J2	Front Power Window Regulator Motor Assembly LH
J3	Front Door Outside Handle Assembly LH
J4	Front Door Lock with Motor Assembly LH
J5	Front Courtesy Light Assembly LH
J6	Door Side Airbag Sensor LH
J7	Multiplex Network Master Switch Assembly
J8	Outer Rear View Mirror Assembly LH
J10	Outer Mirror Switch Assembly
K1	Rear Door Lock with Motor Assembly RH
K2	Rear Power Window Regulator Motor Assembly RH
K3	Rear Power Window Regulator Switch Assembly RH
K4	Rear Speaker Assembly RH
L1	Rear Door Lock with Motor Assembly LH
L3	Rear Power Window Regulator Motor Assembly LH
L4	Rear Power Window Regulator Switch Assembly LH
L5	Rear Speaker Assembly LH

  Position of Parts in Body (LHD)

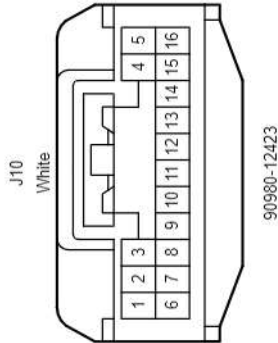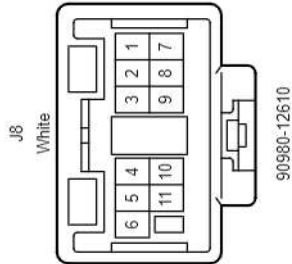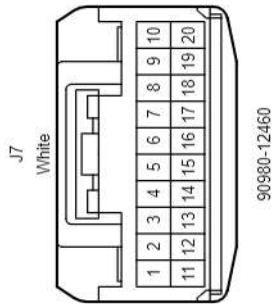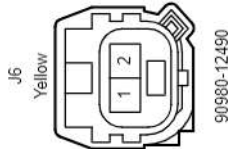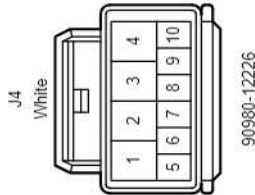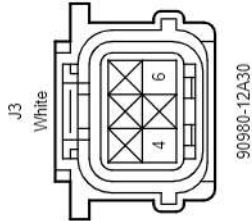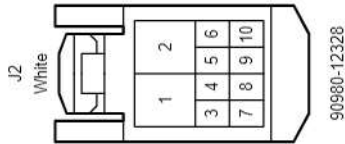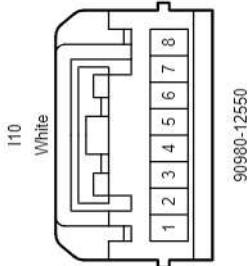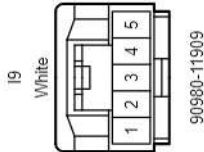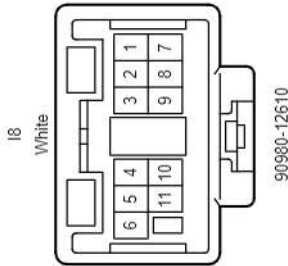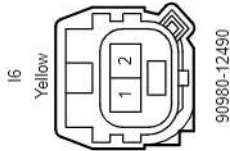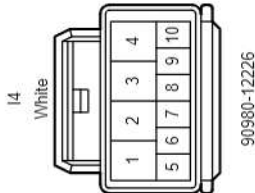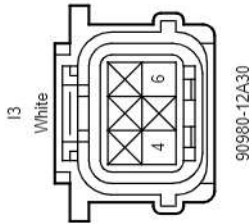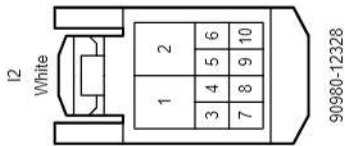


Position of Parts in Body (LHD)

L3
White

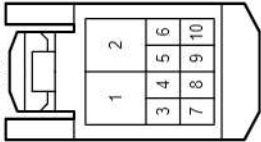


90980-12328

L4
White

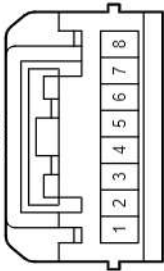


90980-12550

 L5
White





























90980-10935

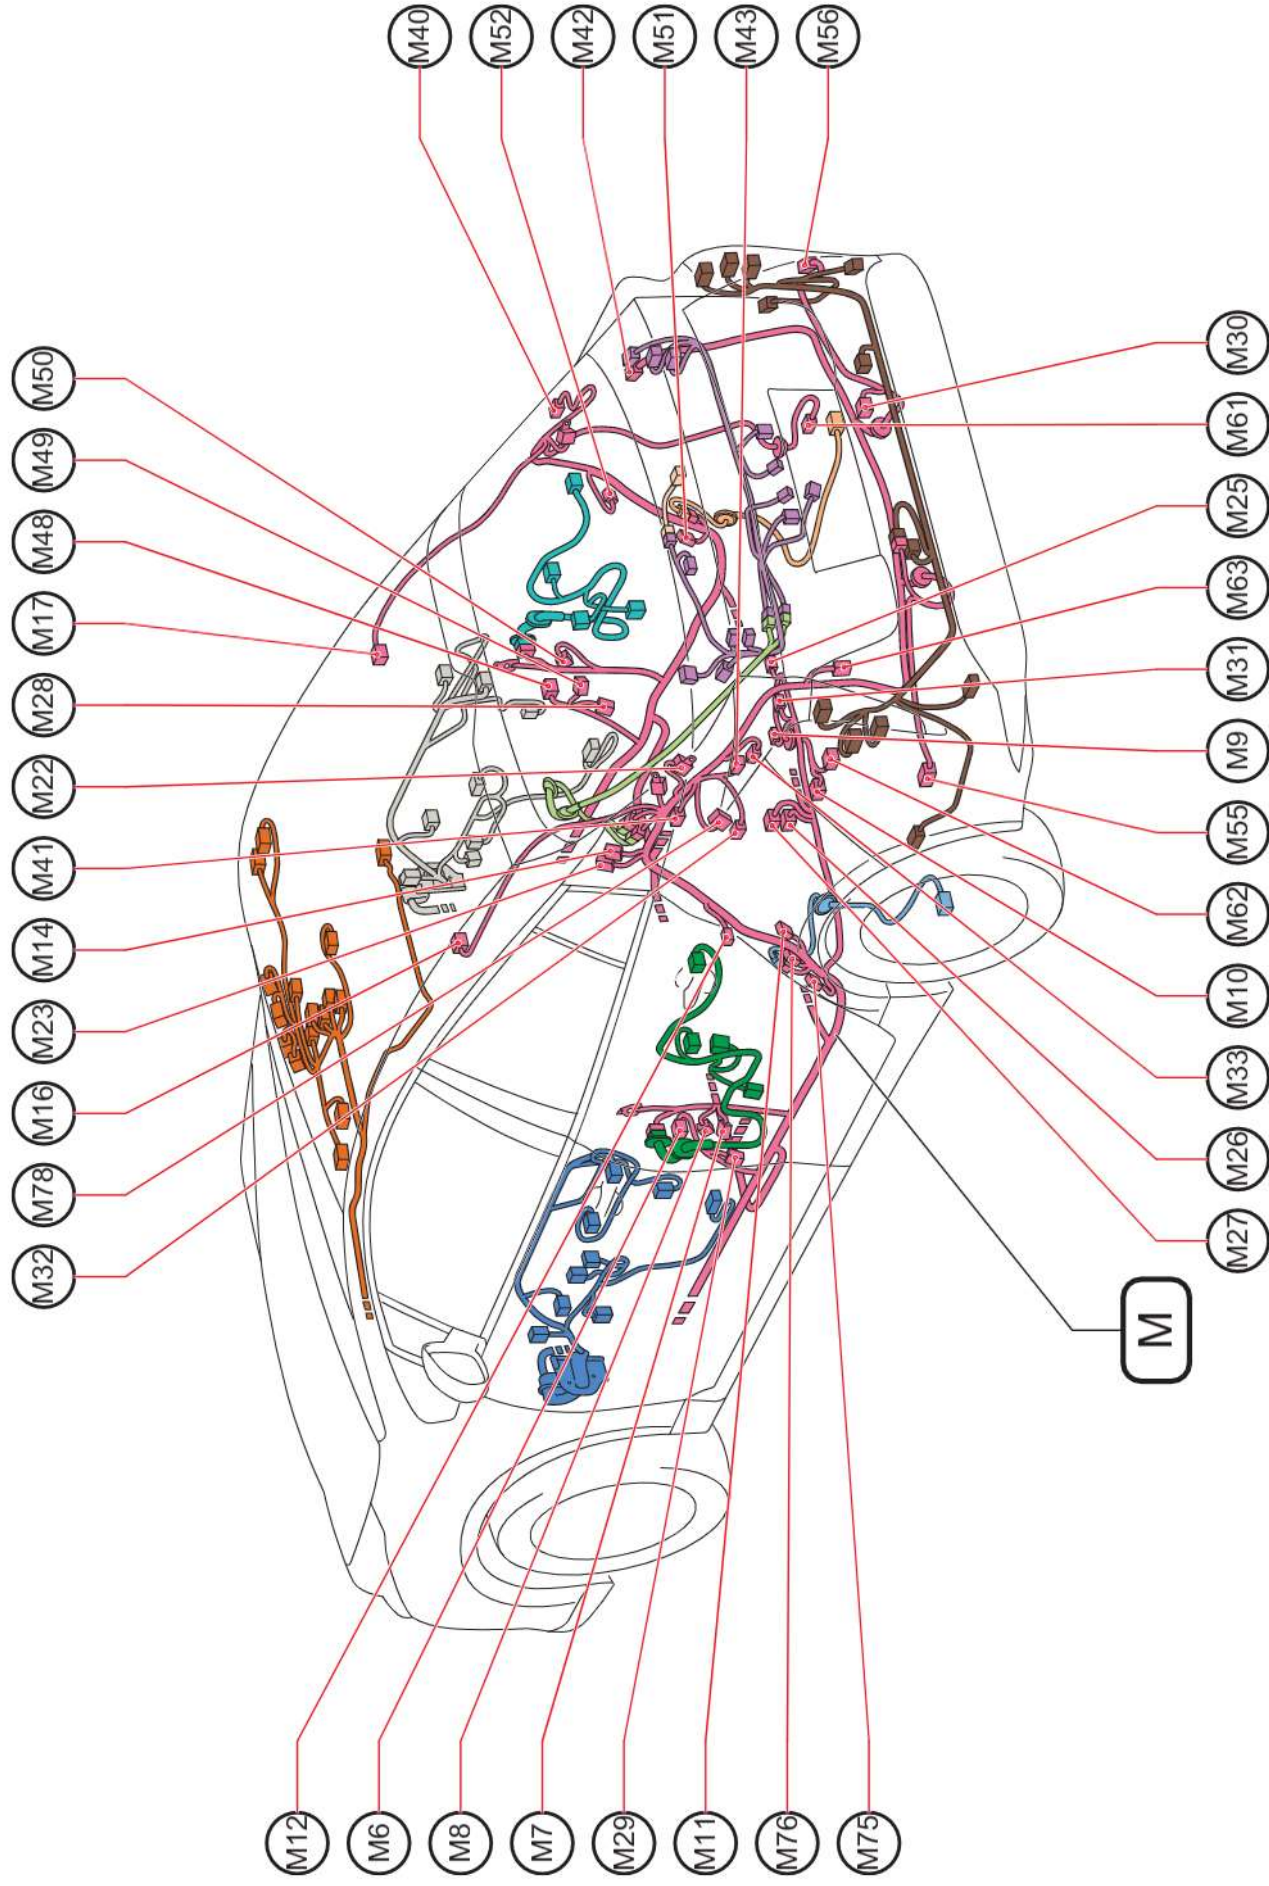







Position of Parts in Body (LHD)


M6	Front Door Courtesy Light Switch Assembly LH
M7	Front Seat Outer Belt Assembly LH
M8	Side Airbag Sensor Assembly LH
M9	No. 2 Indoor Electrical Key Antenna Assembly
M10	Fuel Suction Tube with Pump & Gage Assembly
M11	Rear Airbag Sensor LH
M12	Rear Door Courtesy Light Switch Assembly LH
M14	Tire Pressure Warning Antenna and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)
M16	Curtain Shield Airbag Assembly LH
M17	Curtain Shield Airbag Assembly RH
M22	Radio Setting Condenser
M23	Smart Door Control Receiver Assembly
M25	Rear Seat Inner Belt Assembly RH
M26	Rear Seat Inner Belt with Center Assembly LH
M27	Rear Seat Inner Belt with Center Assembly LH
M28	No. 2 Side Airbag Sensor Assembly RH
M29	No. 2 Side Airbag Sensor Assembly LH
M30	Electrical Key Antenna
M31	No. 3 Indoor Electrical Key Antenna Assembly
M32	Fuel Lid Lock with Motor Assembly
M33	No. 1 Luggage Compartment Light Assembly
M40	Rear Seat 3 Point Type Outer Belt Assembly RH
M41	Rear Seat 3 Point Type Belt Assembly Outer LH
M42	Rear Combination Light Assembly RH
M43	Rear Combination Light Assembly LH
M48	Front Door Courtesy Light Switch Assembly RH
M49	Front Seat Outer Belt Assembly RH
M50	Side Airbag Sensor Assembly RH
M51	Rear Airbag Sensor RH
M52	Rear Door Courtesy Light Switch Assembly RH
M55	Blind Spot Monitor Sensor LH
M56	Blind Spot Monitor Sensor RH
M61	Purge Flow Switching Valve
M62	Vapor Pressure Sensor
M63	Option Connector (Trailer Towing)
M75	No. 23 Junction Connector
M76	No. 24 Junction Connector
M78	No. 7 CAN Junction Connector

          Position of Parts in Body (LHD)

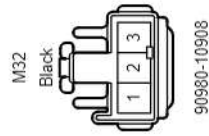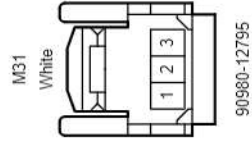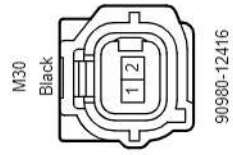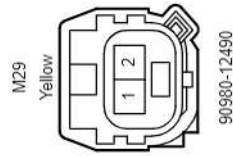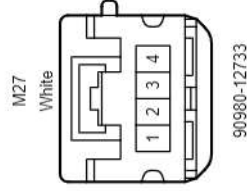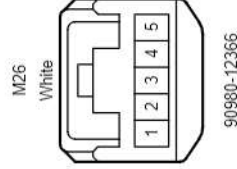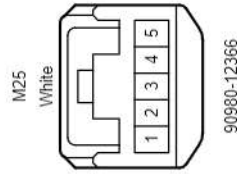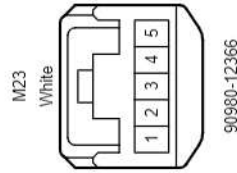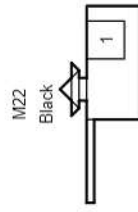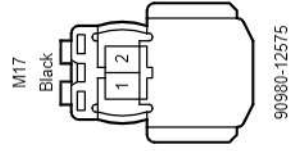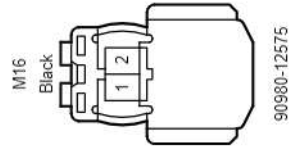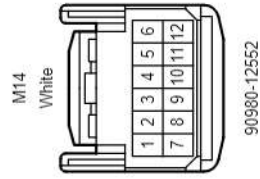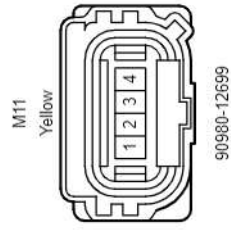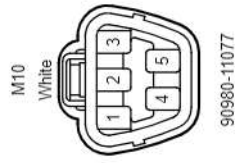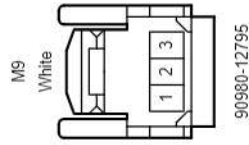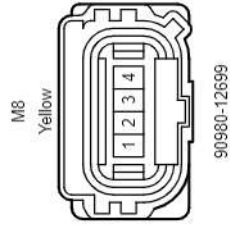

Position of Parts in Body (LHD)









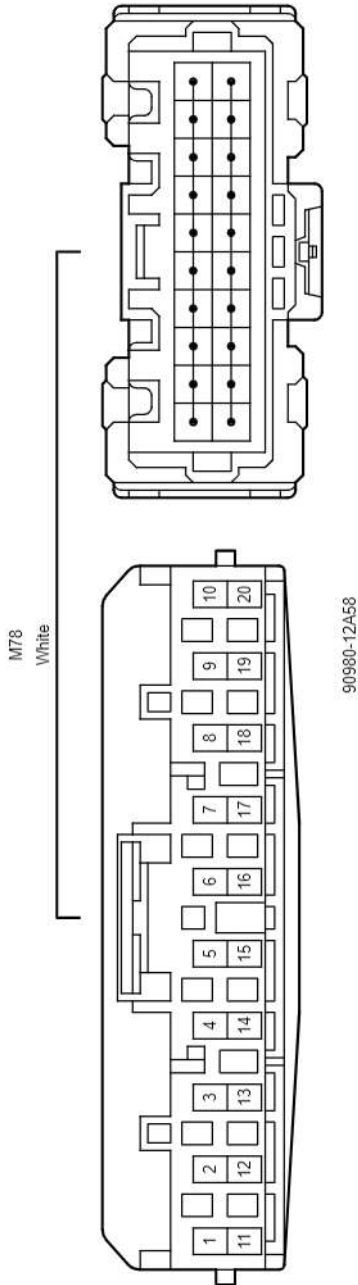
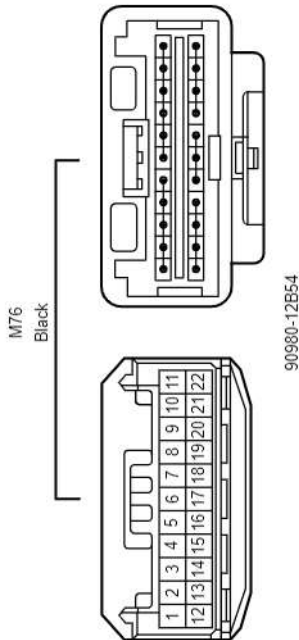
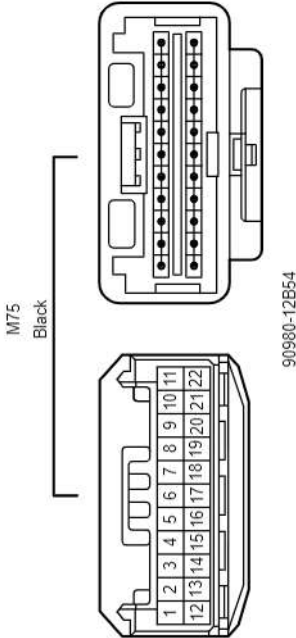
 
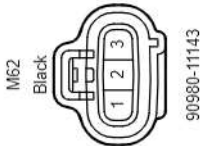
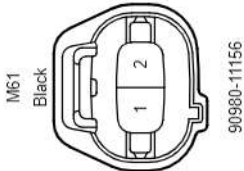


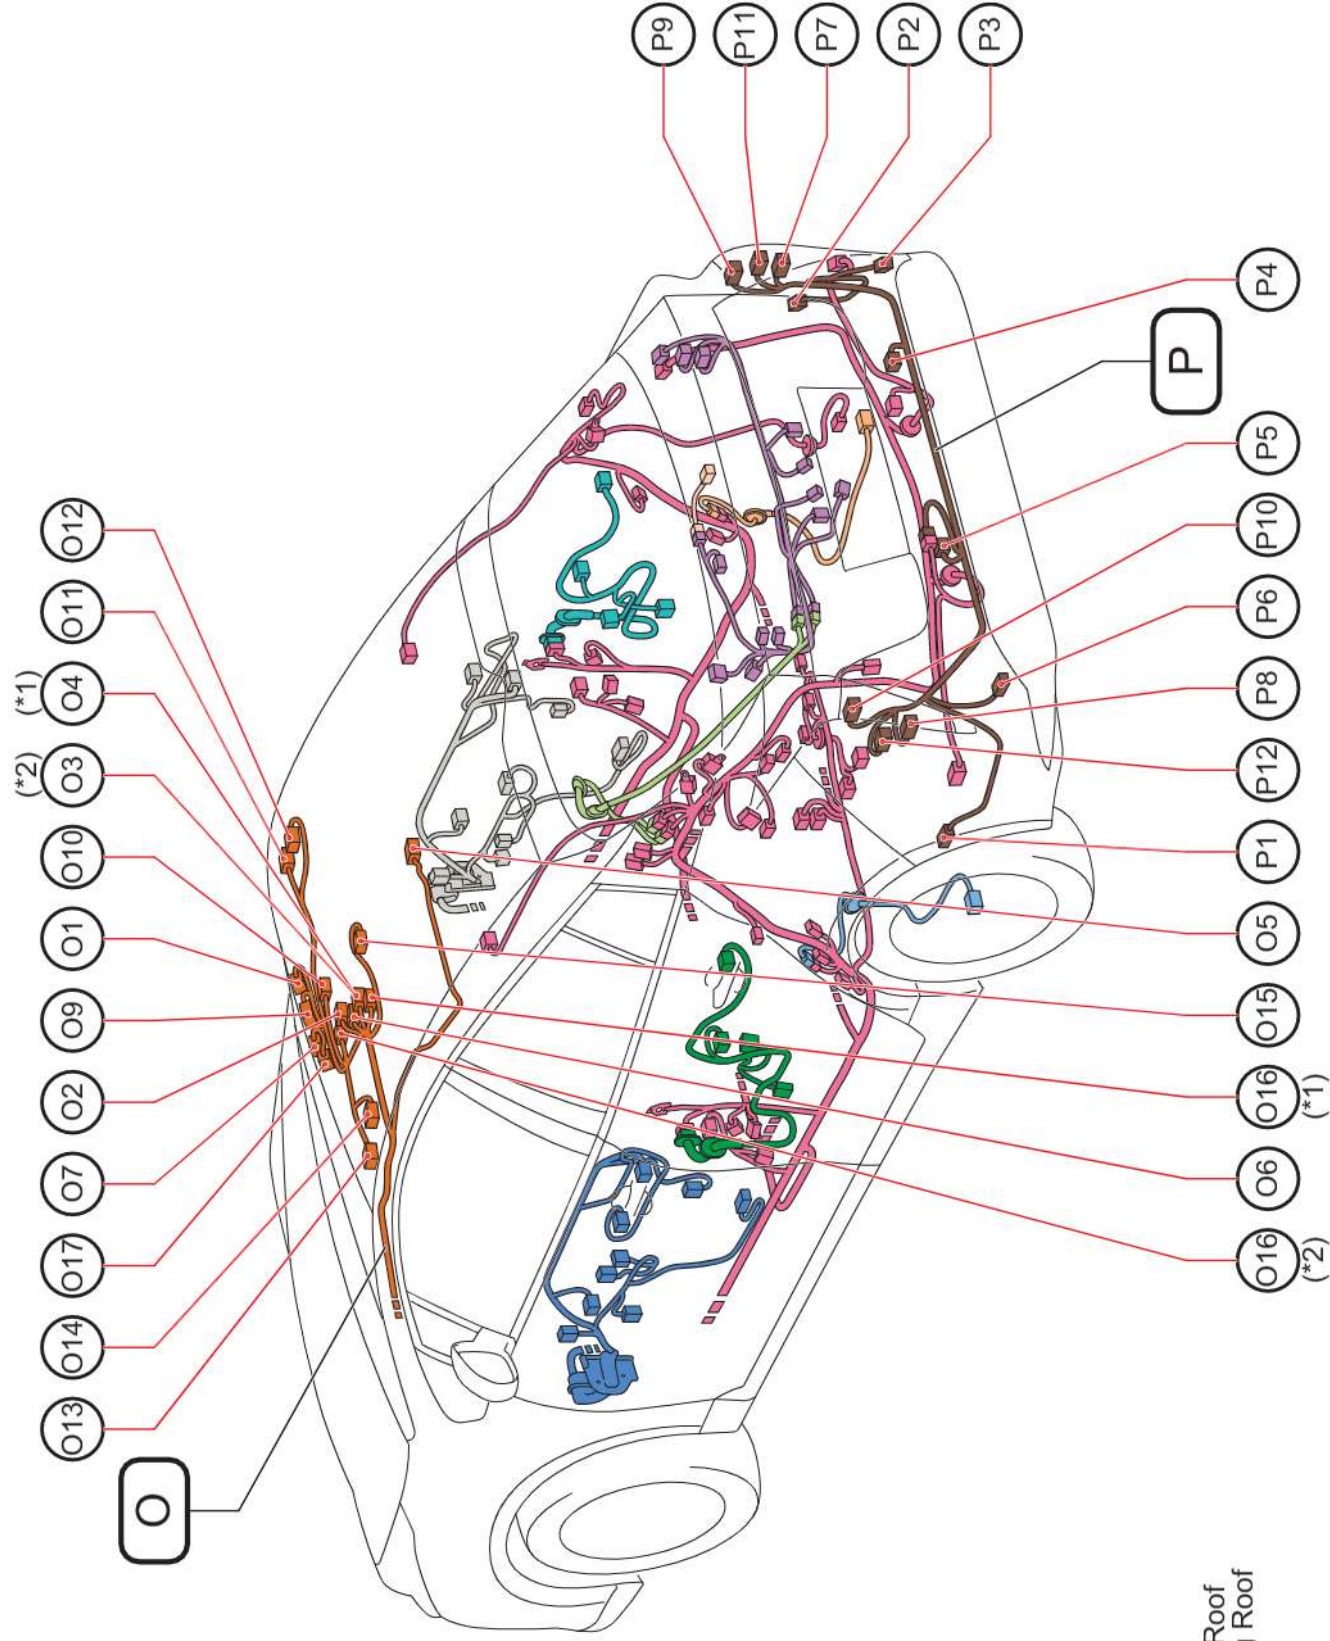












* 1:w/ Sliding Roof
 * 2:w/o Sliding Roof

O1	Rain Sensor
O2	Map Light Assembly
O3	Map Light Assembly
O4	Map Light Assembly
O5	No. 1 Room Light Assembly
O6	Map Light Assembly
O7	Forward Recognition Camera
O9	Inner Rear View Mirror Assembly
O10	Sliding Roof Control ECU (Sliding Roof Drive Gear Sub-Assembly)
O11	Visor Assembly RH
O12	Vanity Light Assembly RH
O13	Visor Assembly LH
O14	Vanity Light Assembly LH
O15	Theft Warning Ultrasonic Sensor
O16	No. 26 Junction Connector
O17	Forward Recognition with Heater Hood Sub-Assembly
P1	Rear Ultrasonic Sensor Side LH
P2	Rear Ultrasonic Sensor Side RH
P3	Rear Ultrasonic Sensor Corner RH
P4	Rear Ultrasonic Sensor Center RH
P5	Rear Ultrasonic Sensor Center LH
P6	Rear Ultrasonic Sensor Corner LH
P7	Rear Light Assembly RH
P8	Rear Light Assembly LH
P9	Rear Light Assembly RH
P10	Rear Light Assembly LH
P11	Rear Light Assembly RH
P12	Rear Light Assembly LH

  
Position of Parts in Body (LHD)

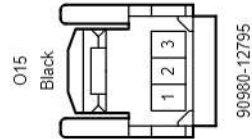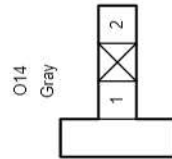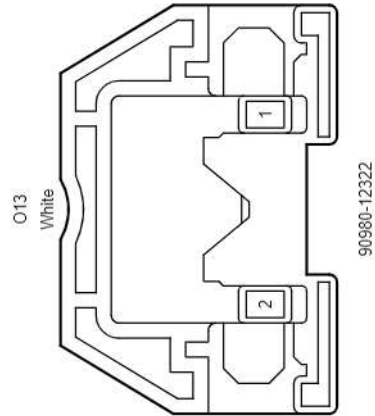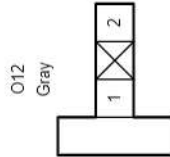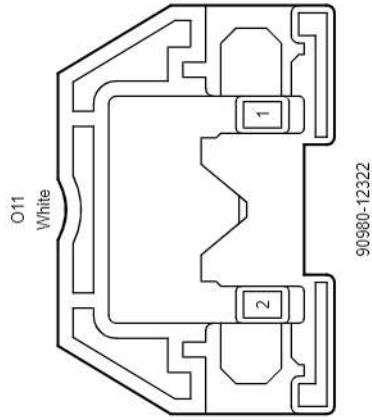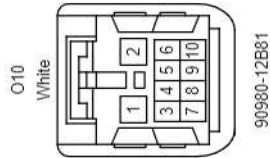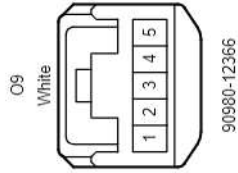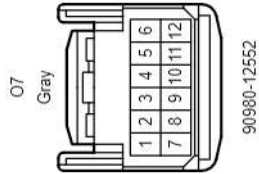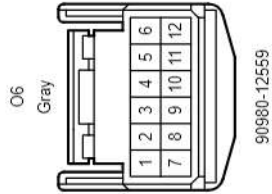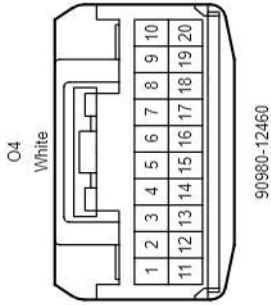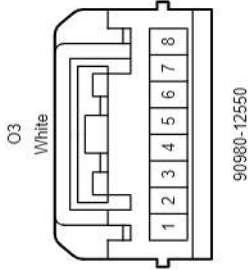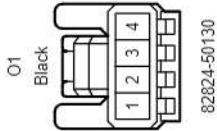

Position of Parts in Body (LHD)

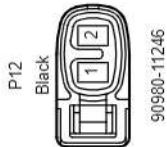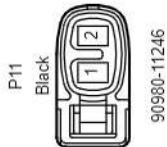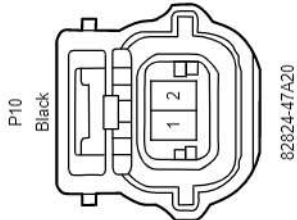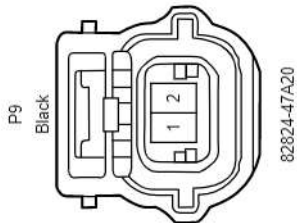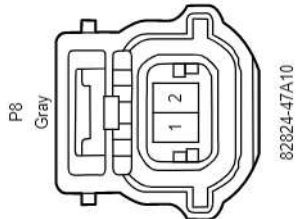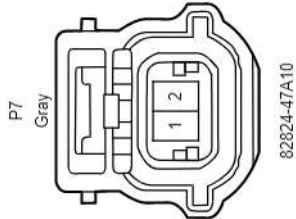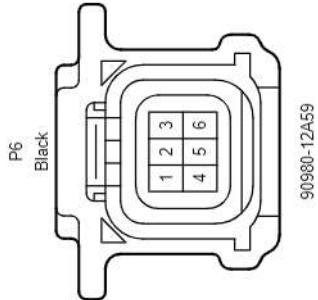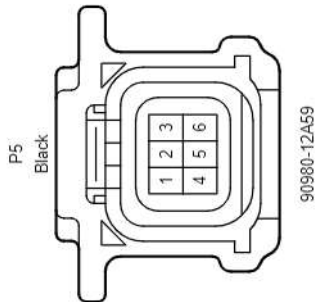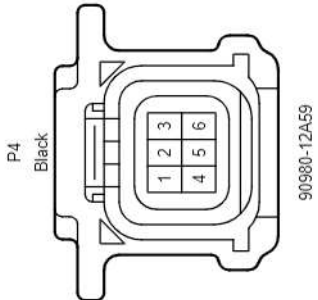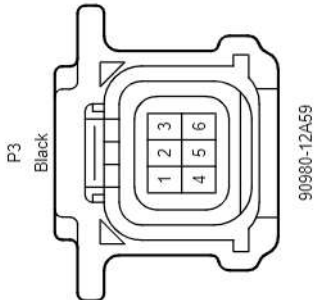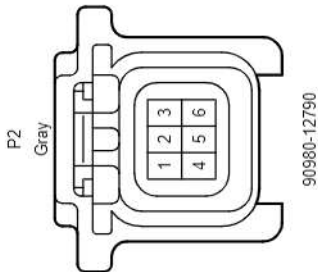

- * 3:w/ Back Guide Monitor System
- * 4:w/ Rear View Monitor System

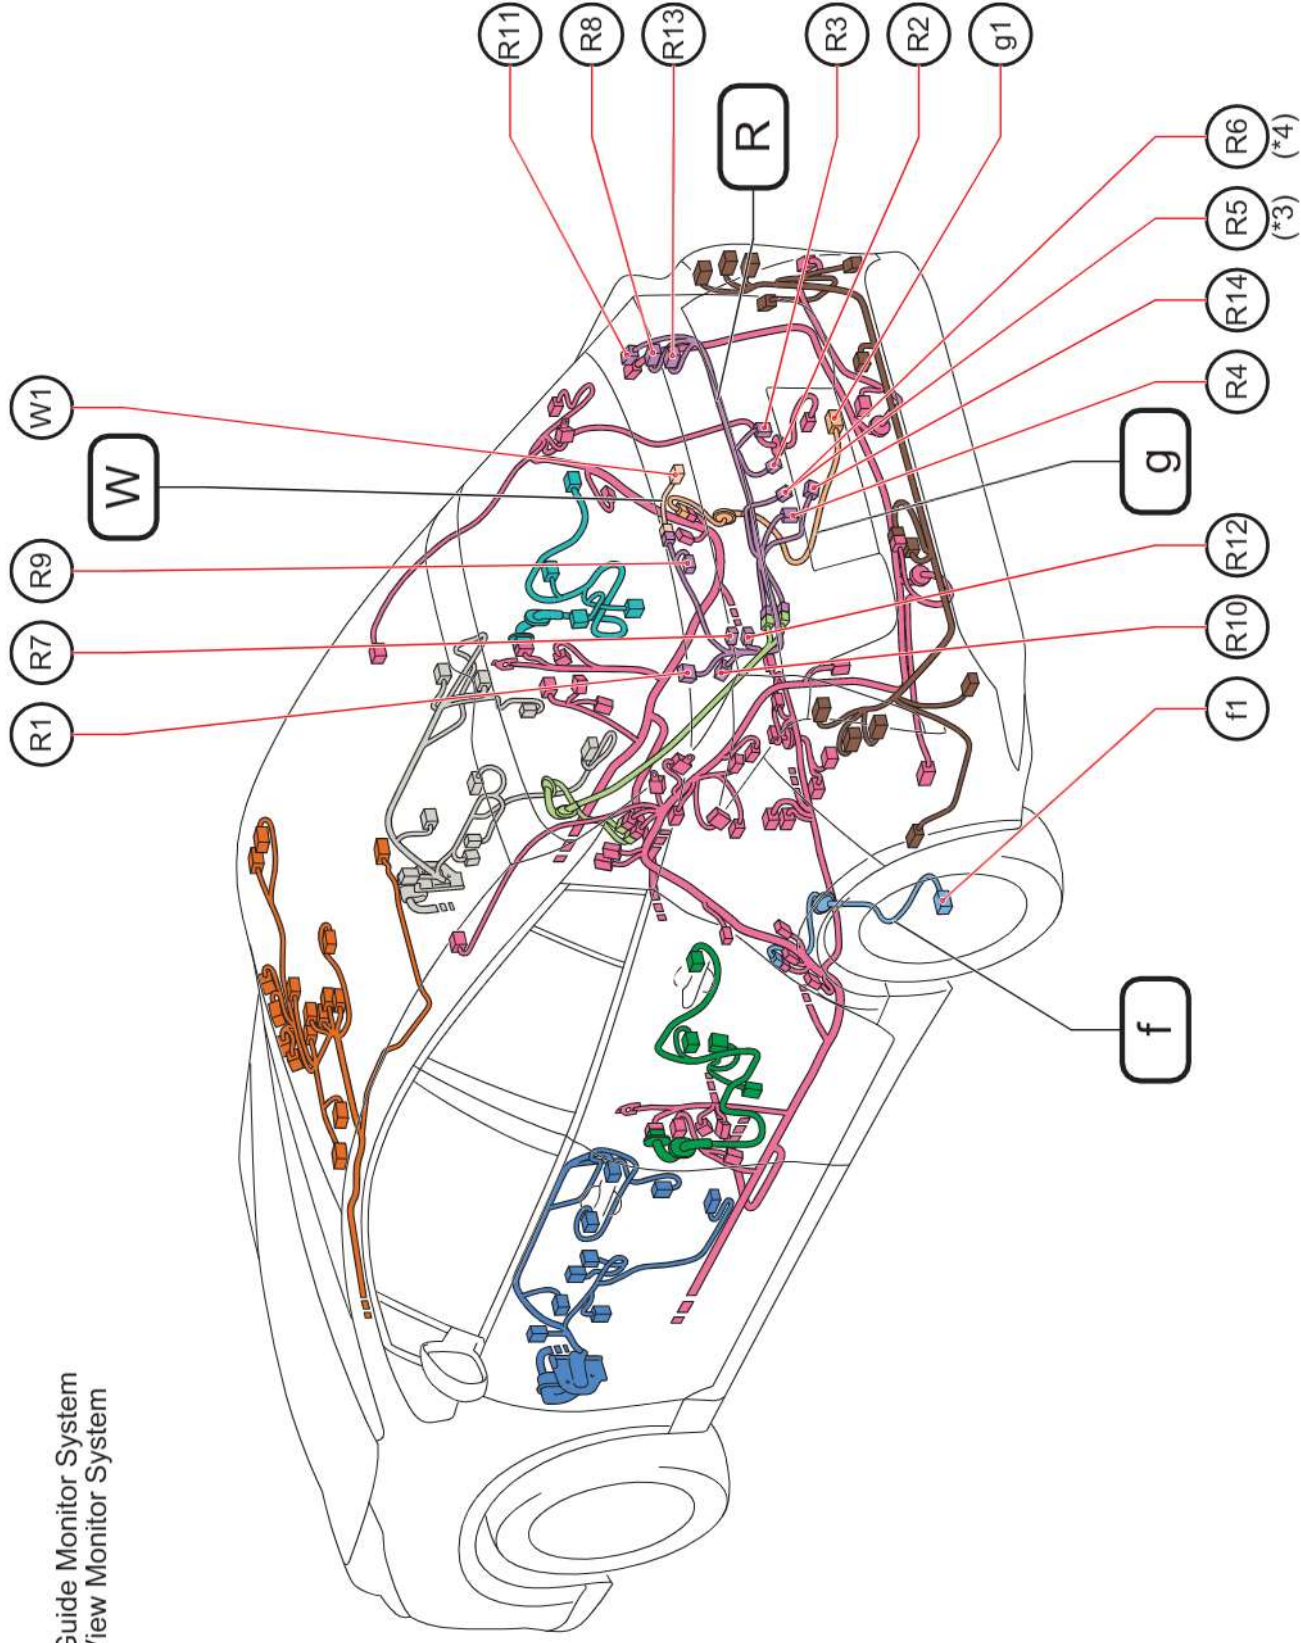

Position of Parts in Body (LHD)


















R1	Rear Wiper Motor Assembly
R2	Back Door Opener Switch Assembly
R3	License Plate Light Assembly RH
R4	License Plate Light Assembly LH
R5	Rear Television Camera Assembly
R6	Rear Television Camera Assembly
R7	Glass Breakage Sensor (Back Door Glass)
R8	Glass Breakage Sensor (Back Door Glass)
R9	Glass Breakage Sensor (Back Window Fix Glass)
R10	Rear Window Defogger (Back Window Fix Glass)
R11	Rear Window Defogger (Back Window Fix Glass)
R12	Rear Window Defogger (Back Window Fix Glass)
R13	Rear Window Defogger (Back Window Fix Glass)
R14	Back Door Lock Assembly


W1 Center Stop Light

f1 Rear Speed Sensor LH

g1 Rear Speed Sensor RH

          Position of Parts in Body (LHD)

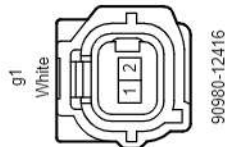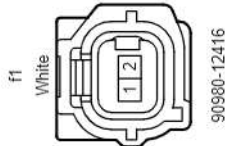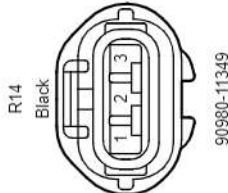






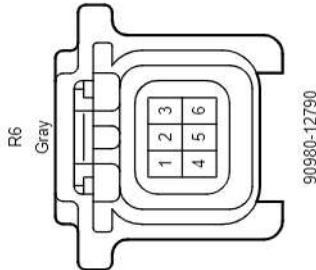
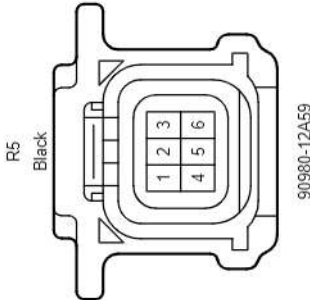


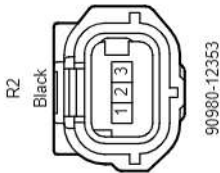
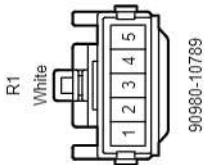


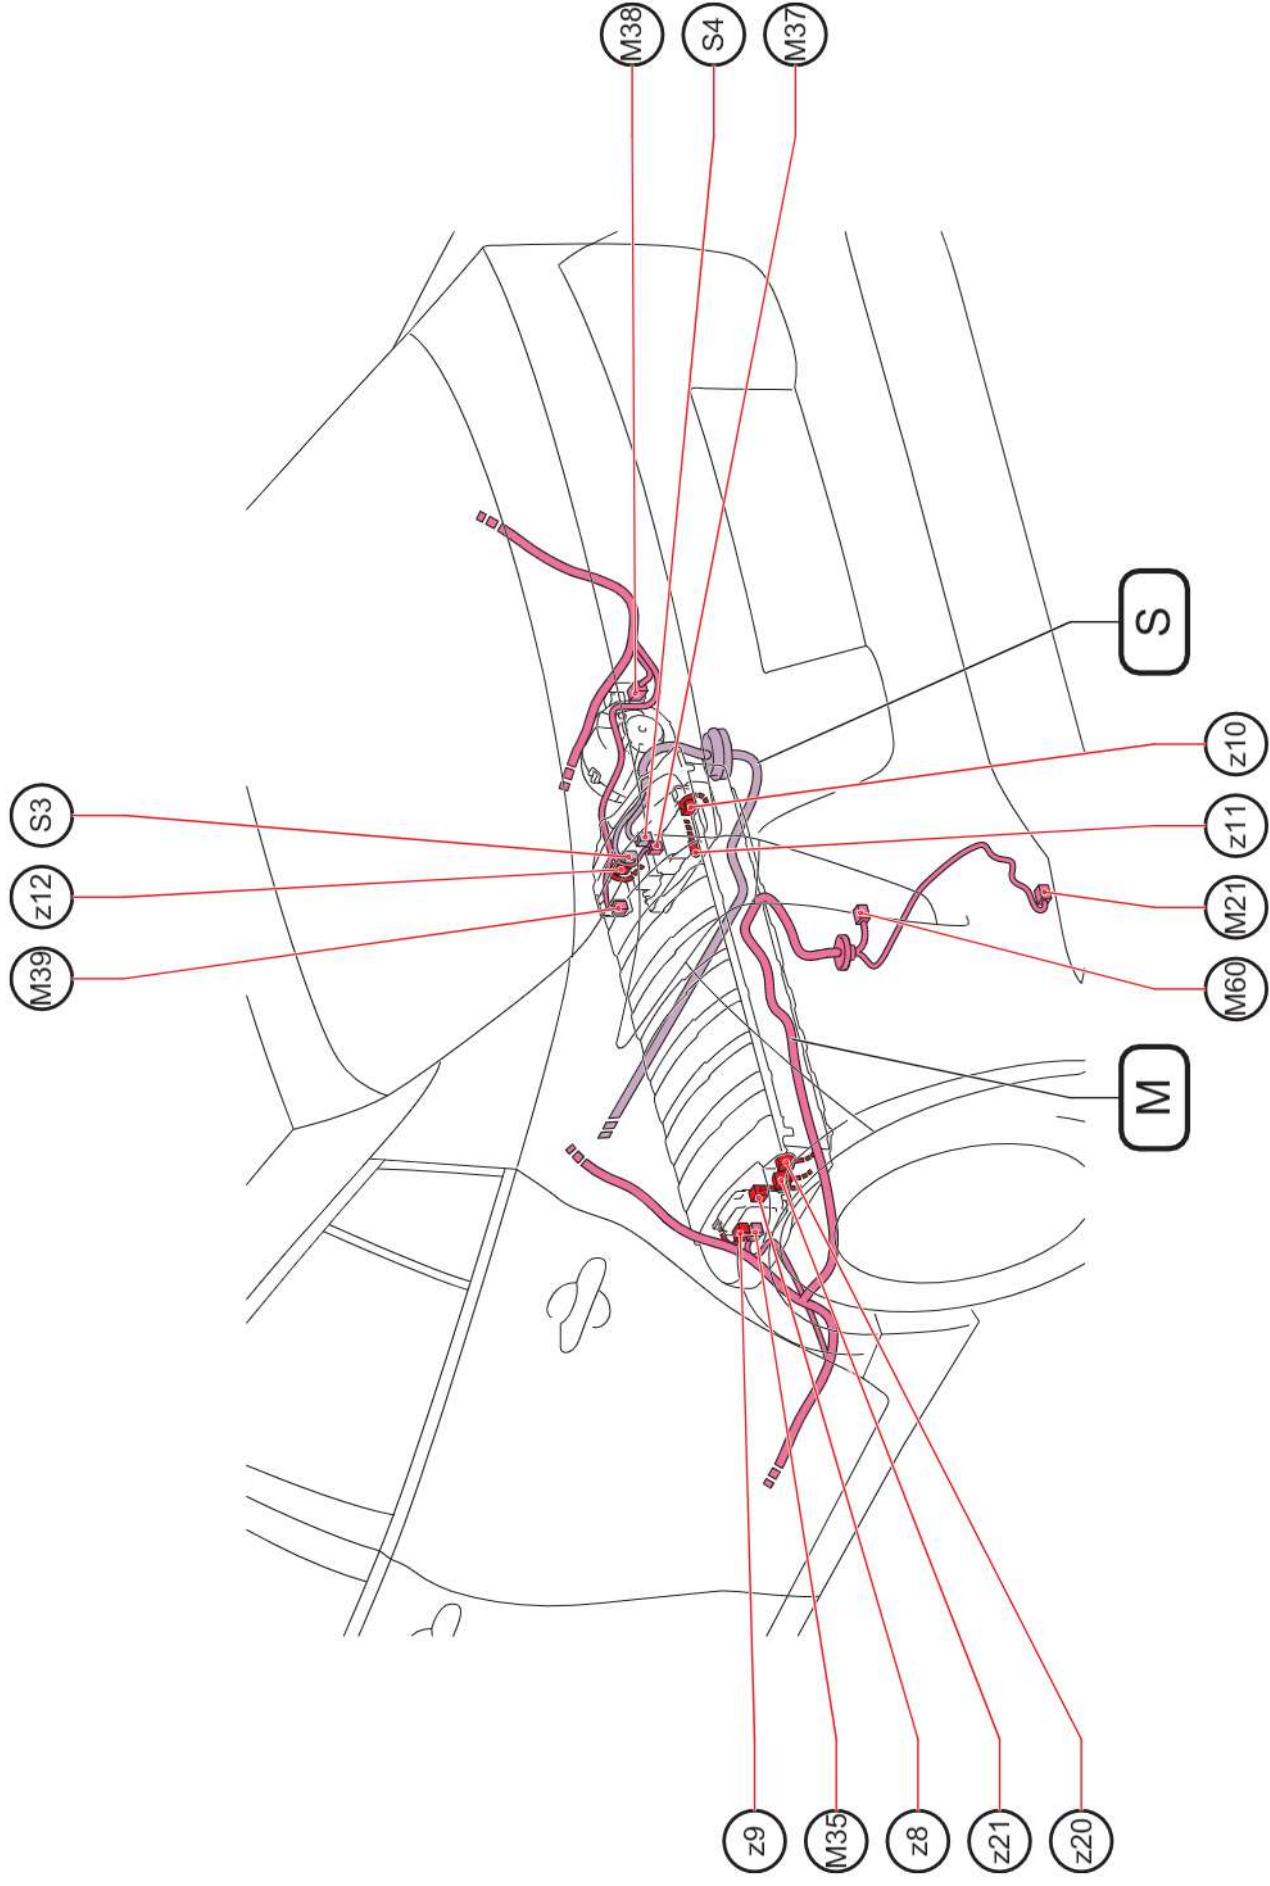


Position of Parts in Body (LHD)

M21	Rear Height Control Sensor Sub-Assembly LH
M35	Battery Voltage Sensor
M37	HV Battery Junction Block Assembly
M38	Battery Cooling Blower Assembly
M39	Inter Lock Switch
M60	Canister Pump Module
S3	HV Battery Junction Block Assembly
S4	HV Battery Junction Block Assembly
z8	HV Supply Battery Assembly , Battery Voltage Sensor
z9	HV Supply Battery Assembly , Battery Voltage Sensor
z10	HV Supply Battery Assembly , HV Battery Junction Block Assembly
z11	HV Supply Battery Assembly
z12	HV Battery Junction Block Assembly
z20	Hybrid Battery Terminal Block , HV Supply Battery Assembly
z21	Hybrid Battery Terminal Block , HV Supply Battery Assembly

  
Position of Parts in Body (LHD)

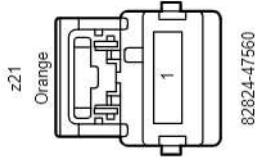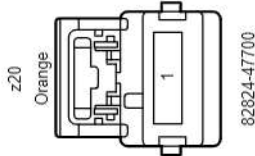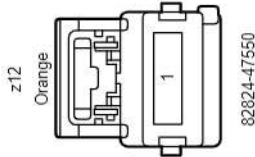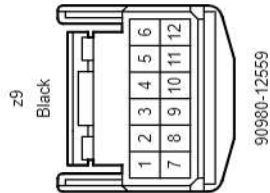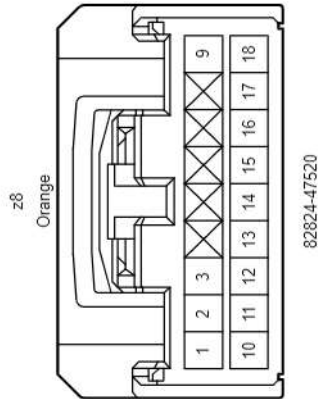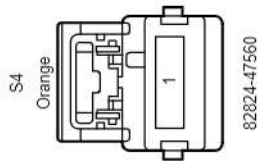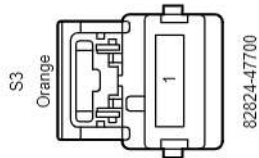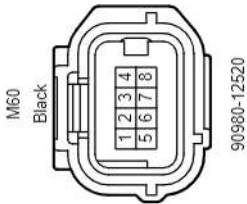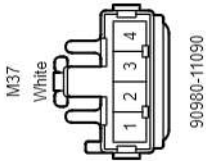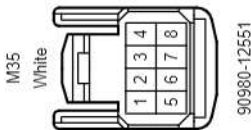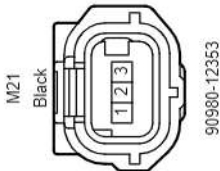

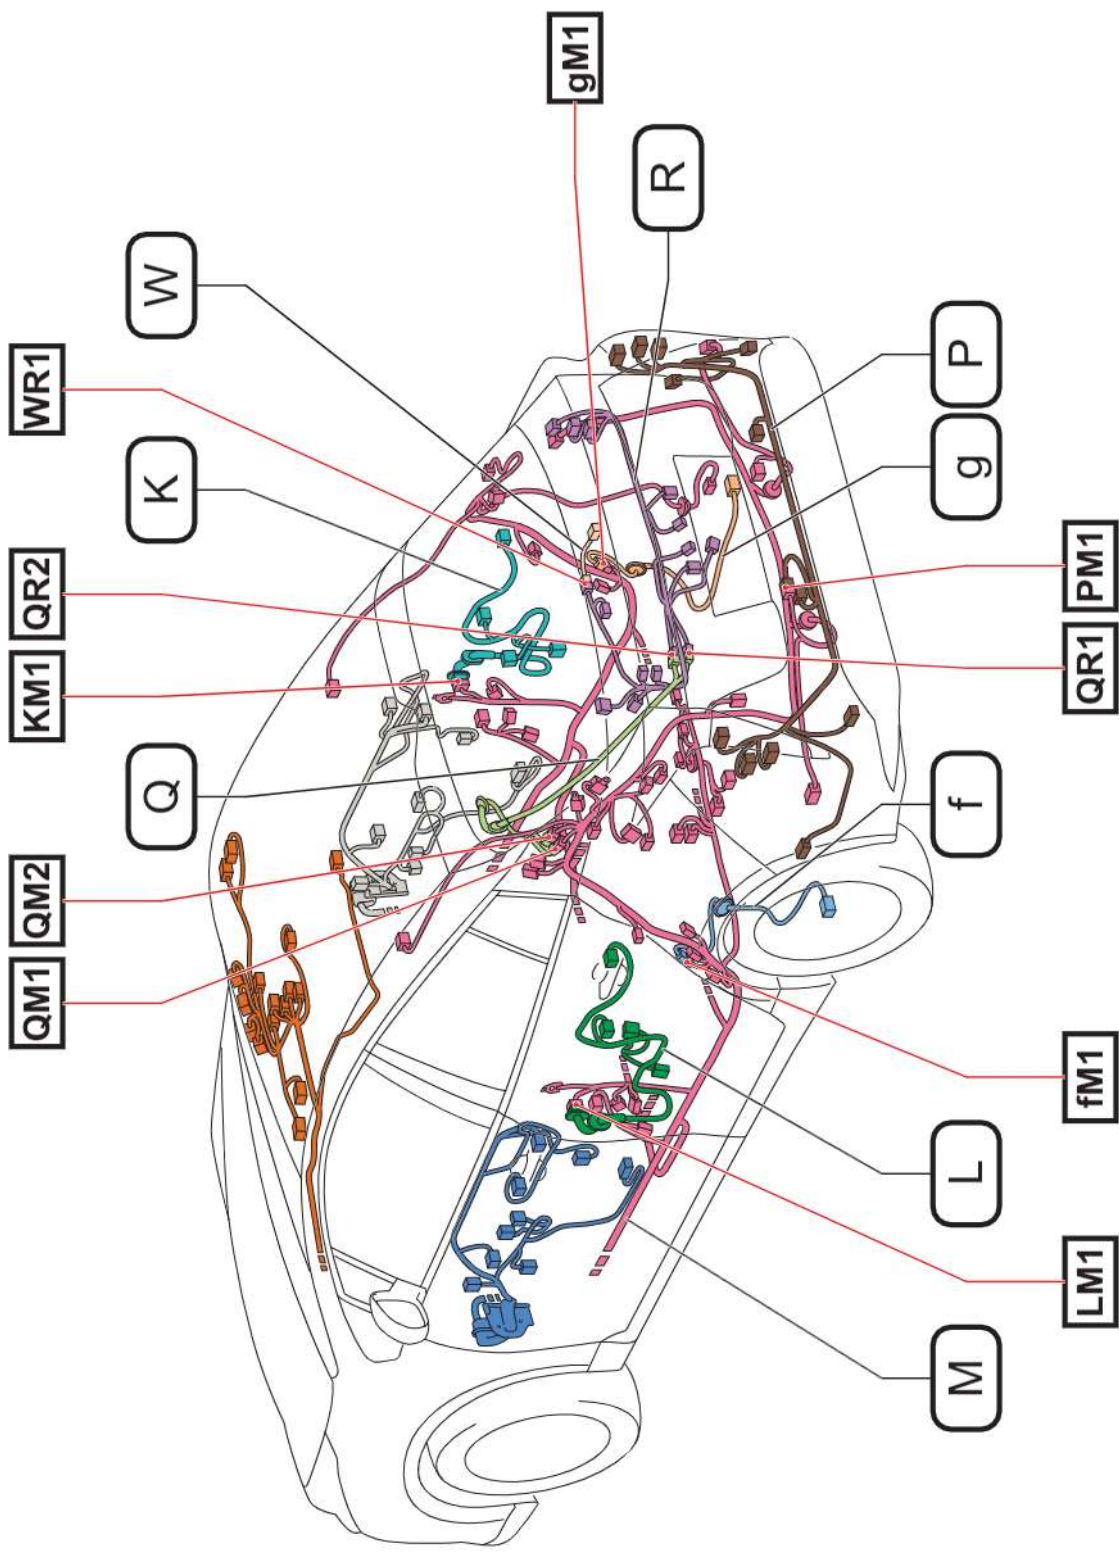


Wire and Wire in Body (LHD)

KM1
White

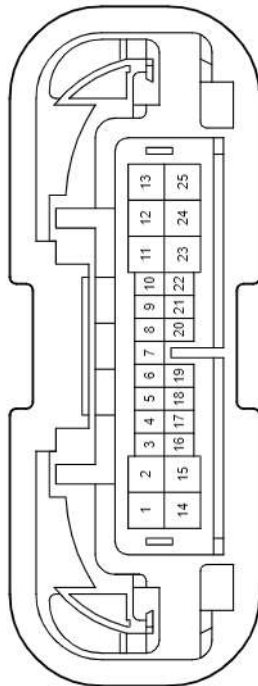


90980-12802

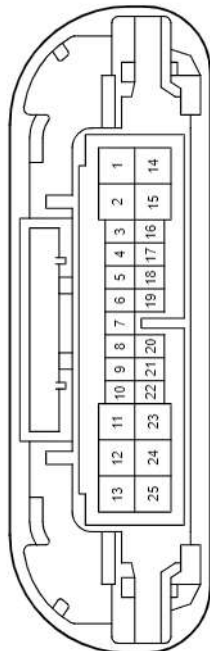


90980-12801

LM1
White

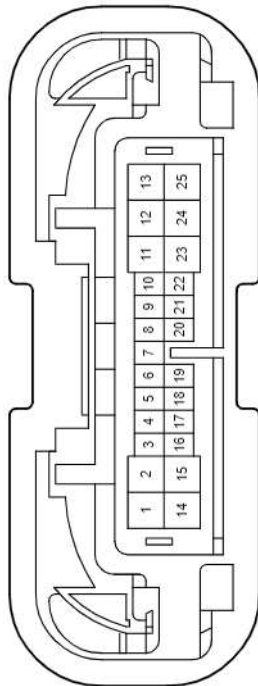


90980-12802

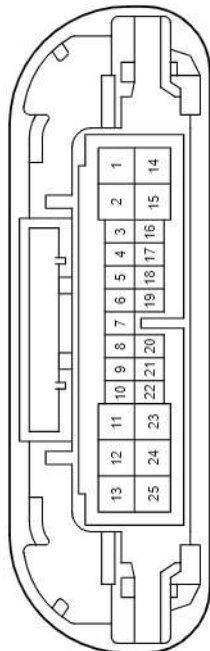


90980-12801

PM1
Black

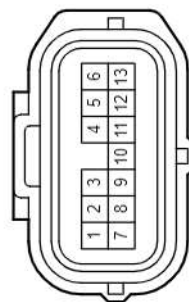

90980-12326

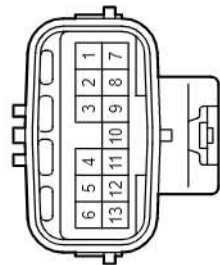



90980-12716


QM1
White

QM2
White

Wire and Wire in Body (LHD)
















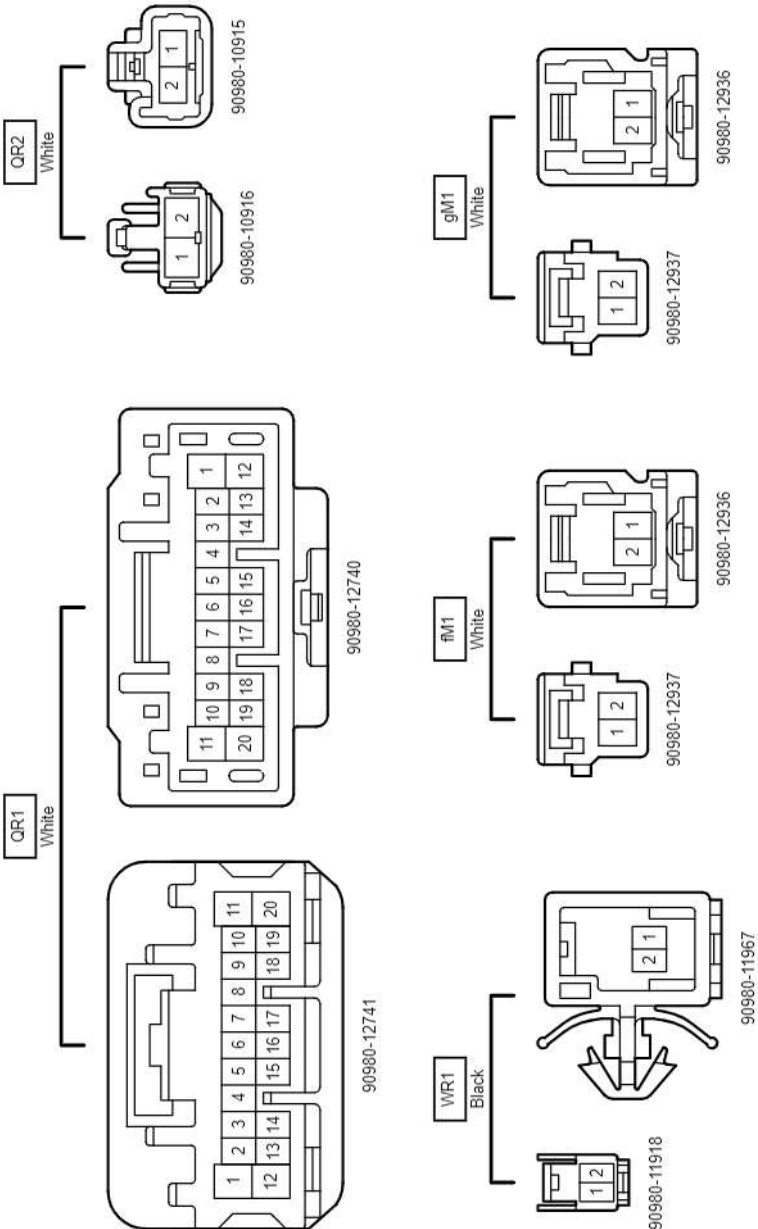


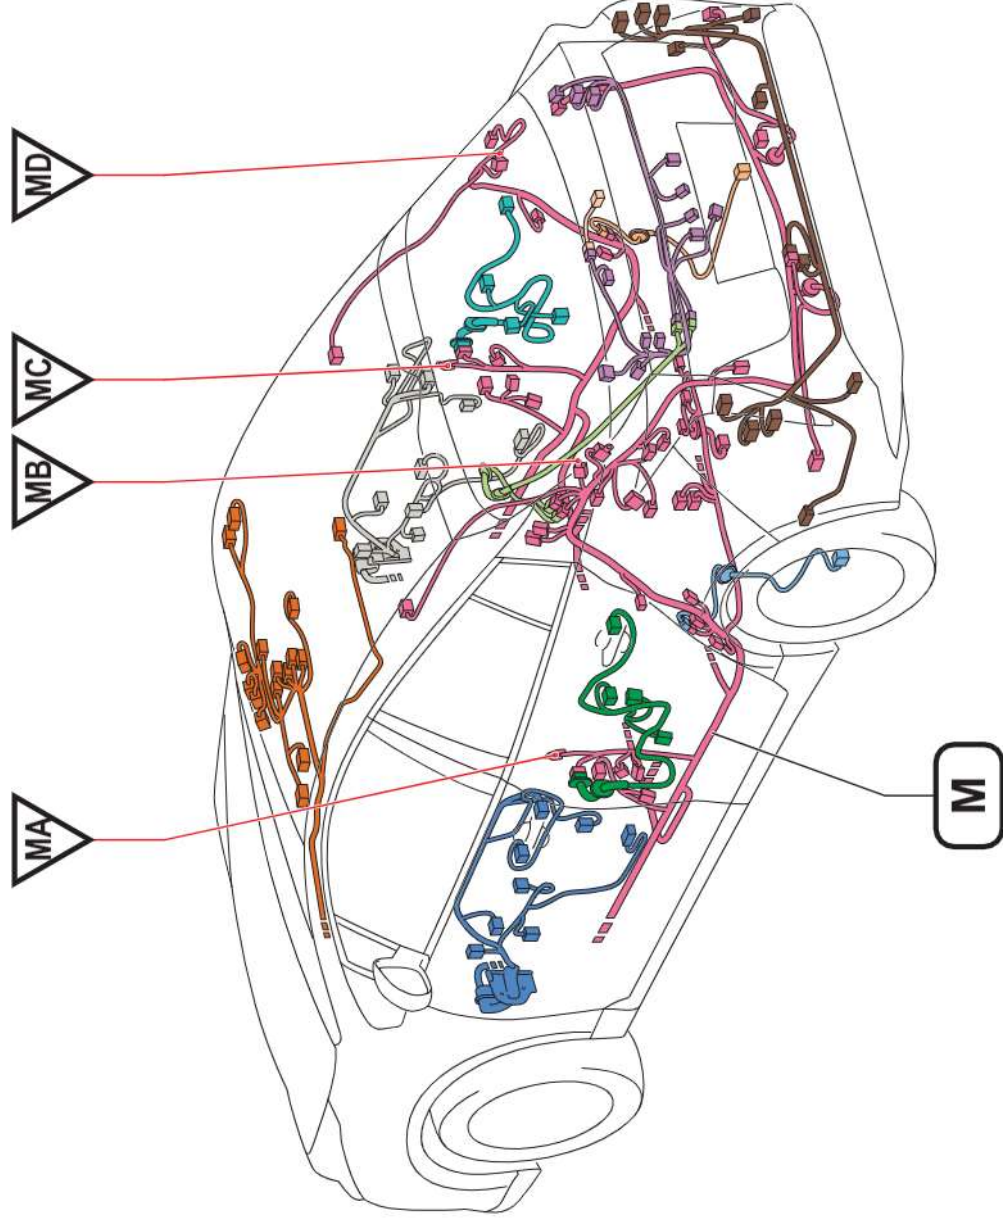


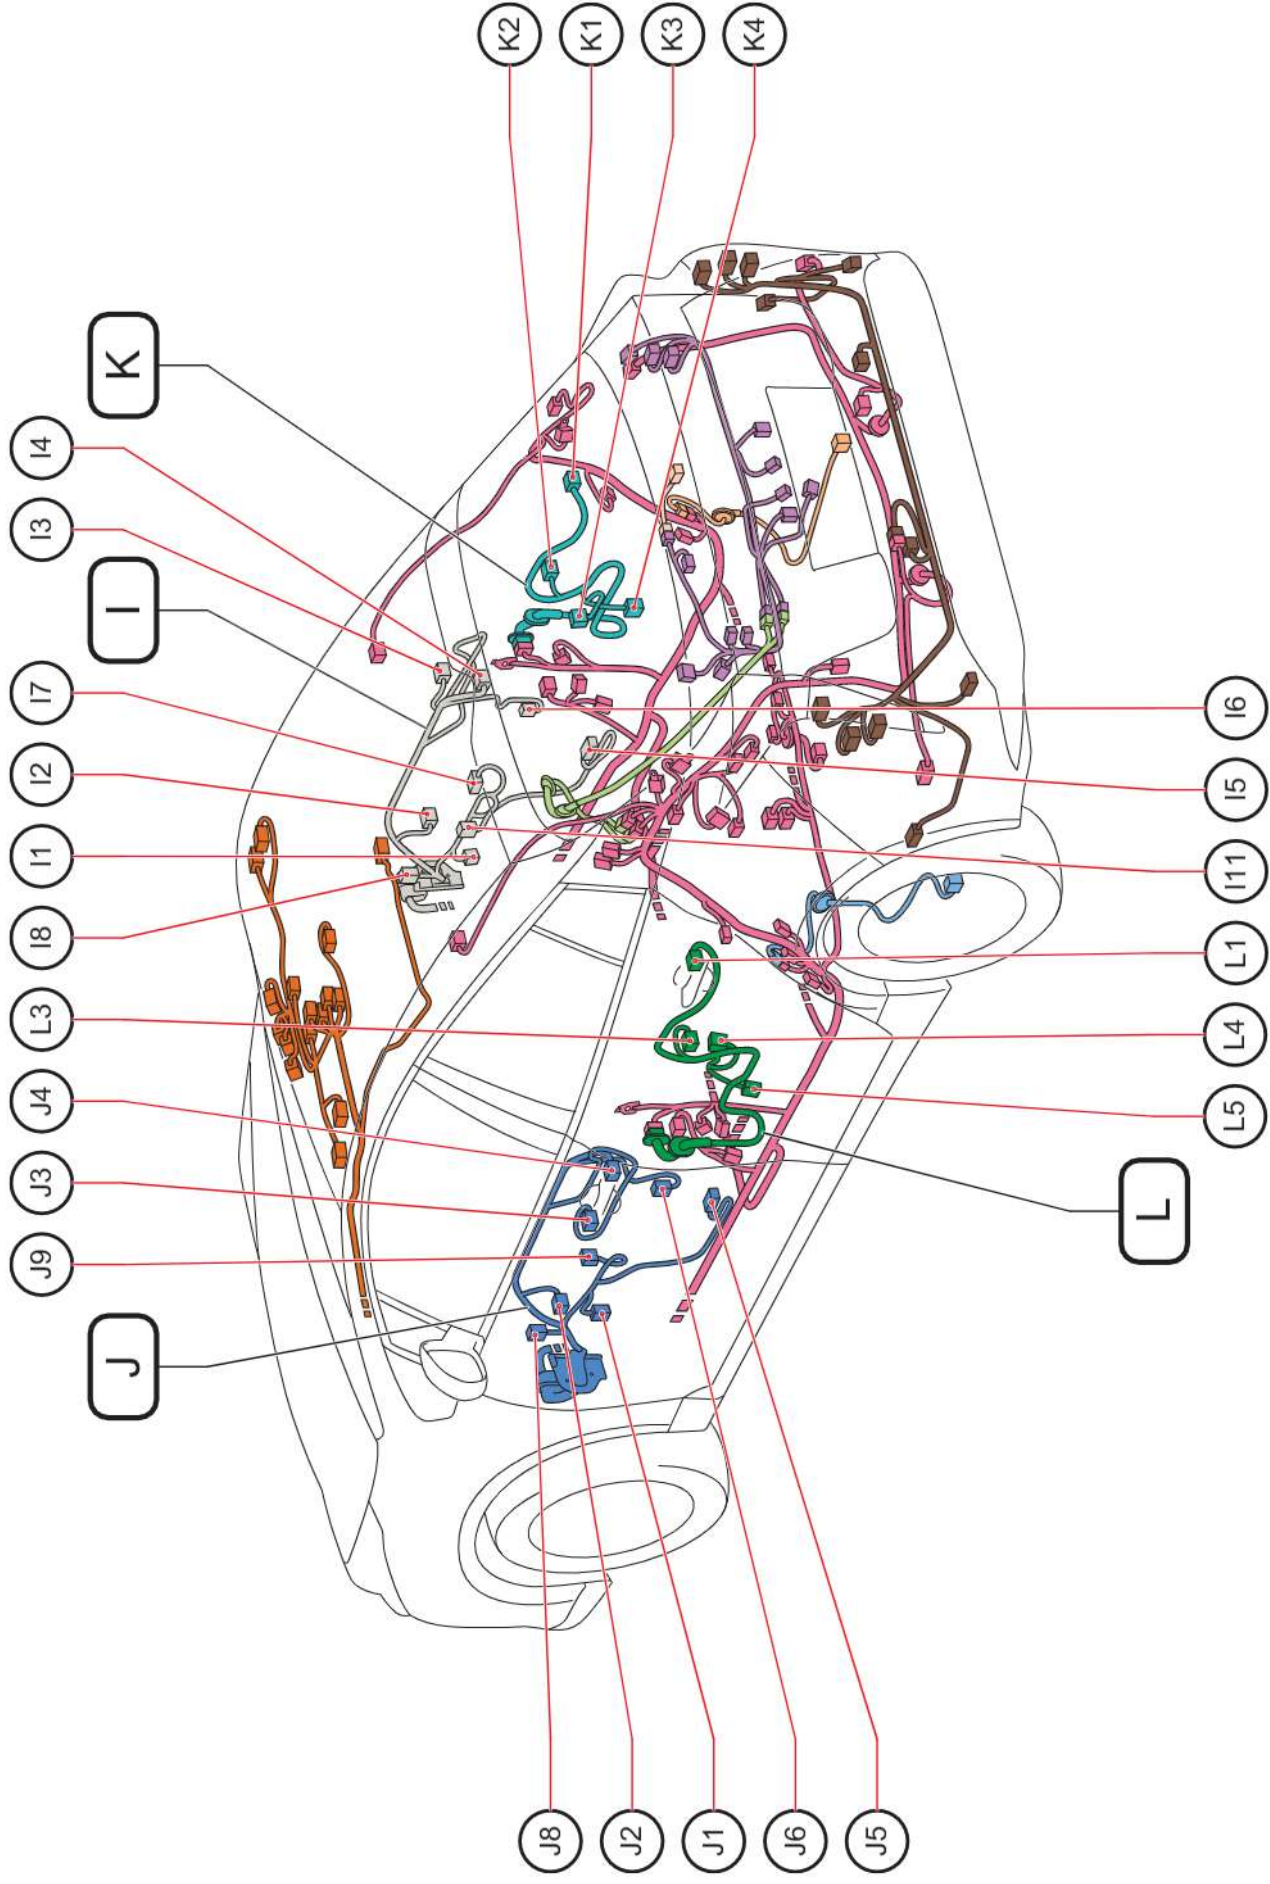



I1	Front No. 1 Speaker Assembly RH
I2	Front Power Window Regulator Motor Assembly RH
I3	Front Door Outside Handle Assembly RH
I4	Front Door Lock with Motor Assembly RH
I5	Front Courtesy Light Assembly RH
I6	Door Side Airbag Sensor RH
I7	Multiplex Network Master Switch Assembly
I8	Outer Rear View Mirror Assembly RH
I11	Outer Mirror Switch Assembly
J1	Front No. 1 Speaker Assembly LH
J2	Front Power Window Regulator Motor Assembly LH
J3	Front Door Outside Handle Assembly LH
J4	Front Door Lock with Motor Assembly LH
J5	Front Courtesy Light Assembly LH
J6	Door Side Airbag Sensor LH
J8	Outer Rear View Mirror Assembly LH
J9	Front Power Window Regulator Switch Assembly LH
K1	Rear Door Lock with Motor Assembly RH
K2	Rear Power Window Regulator Motor Assembly RH
K3	Rear Power Window Regulator Switch Assembly RH
K4	Rear Speaker Assembly RH
L1	Rear Door Lock with Motor Assembly LH
L3	Rear Power Window Regulator Motor Assembly LH
L4	Rear Power Window Regulator Switch Assembly LH
L5	Rear Speaker Assembly LH

  Position of Parts in Body (RHD)

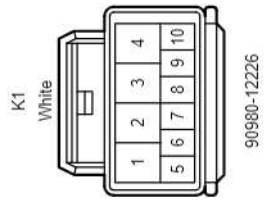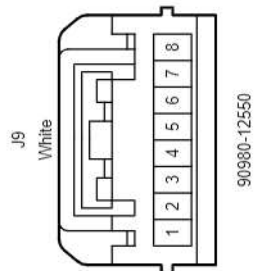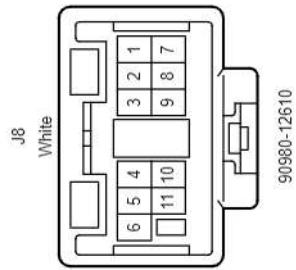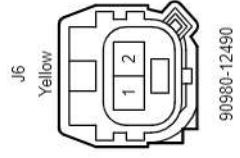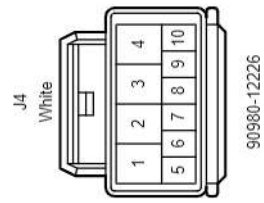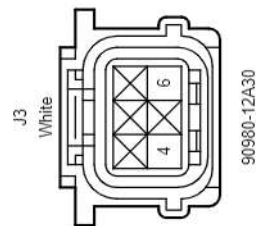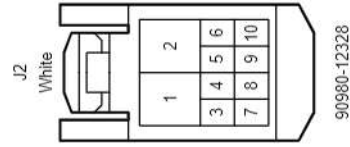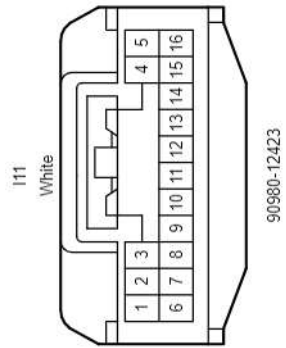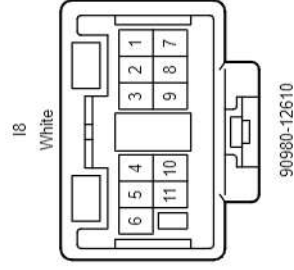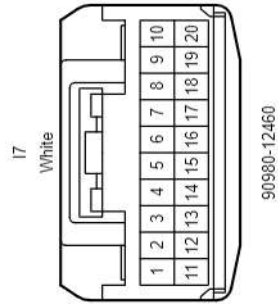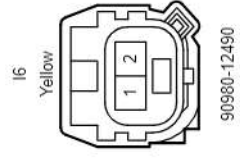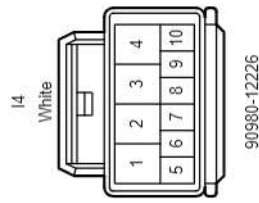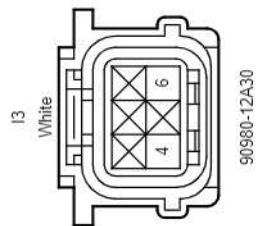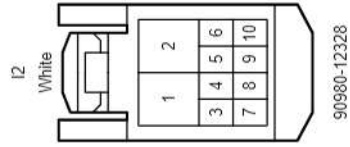

Position of Parts in Body (RHD)






















 
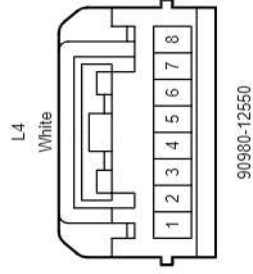


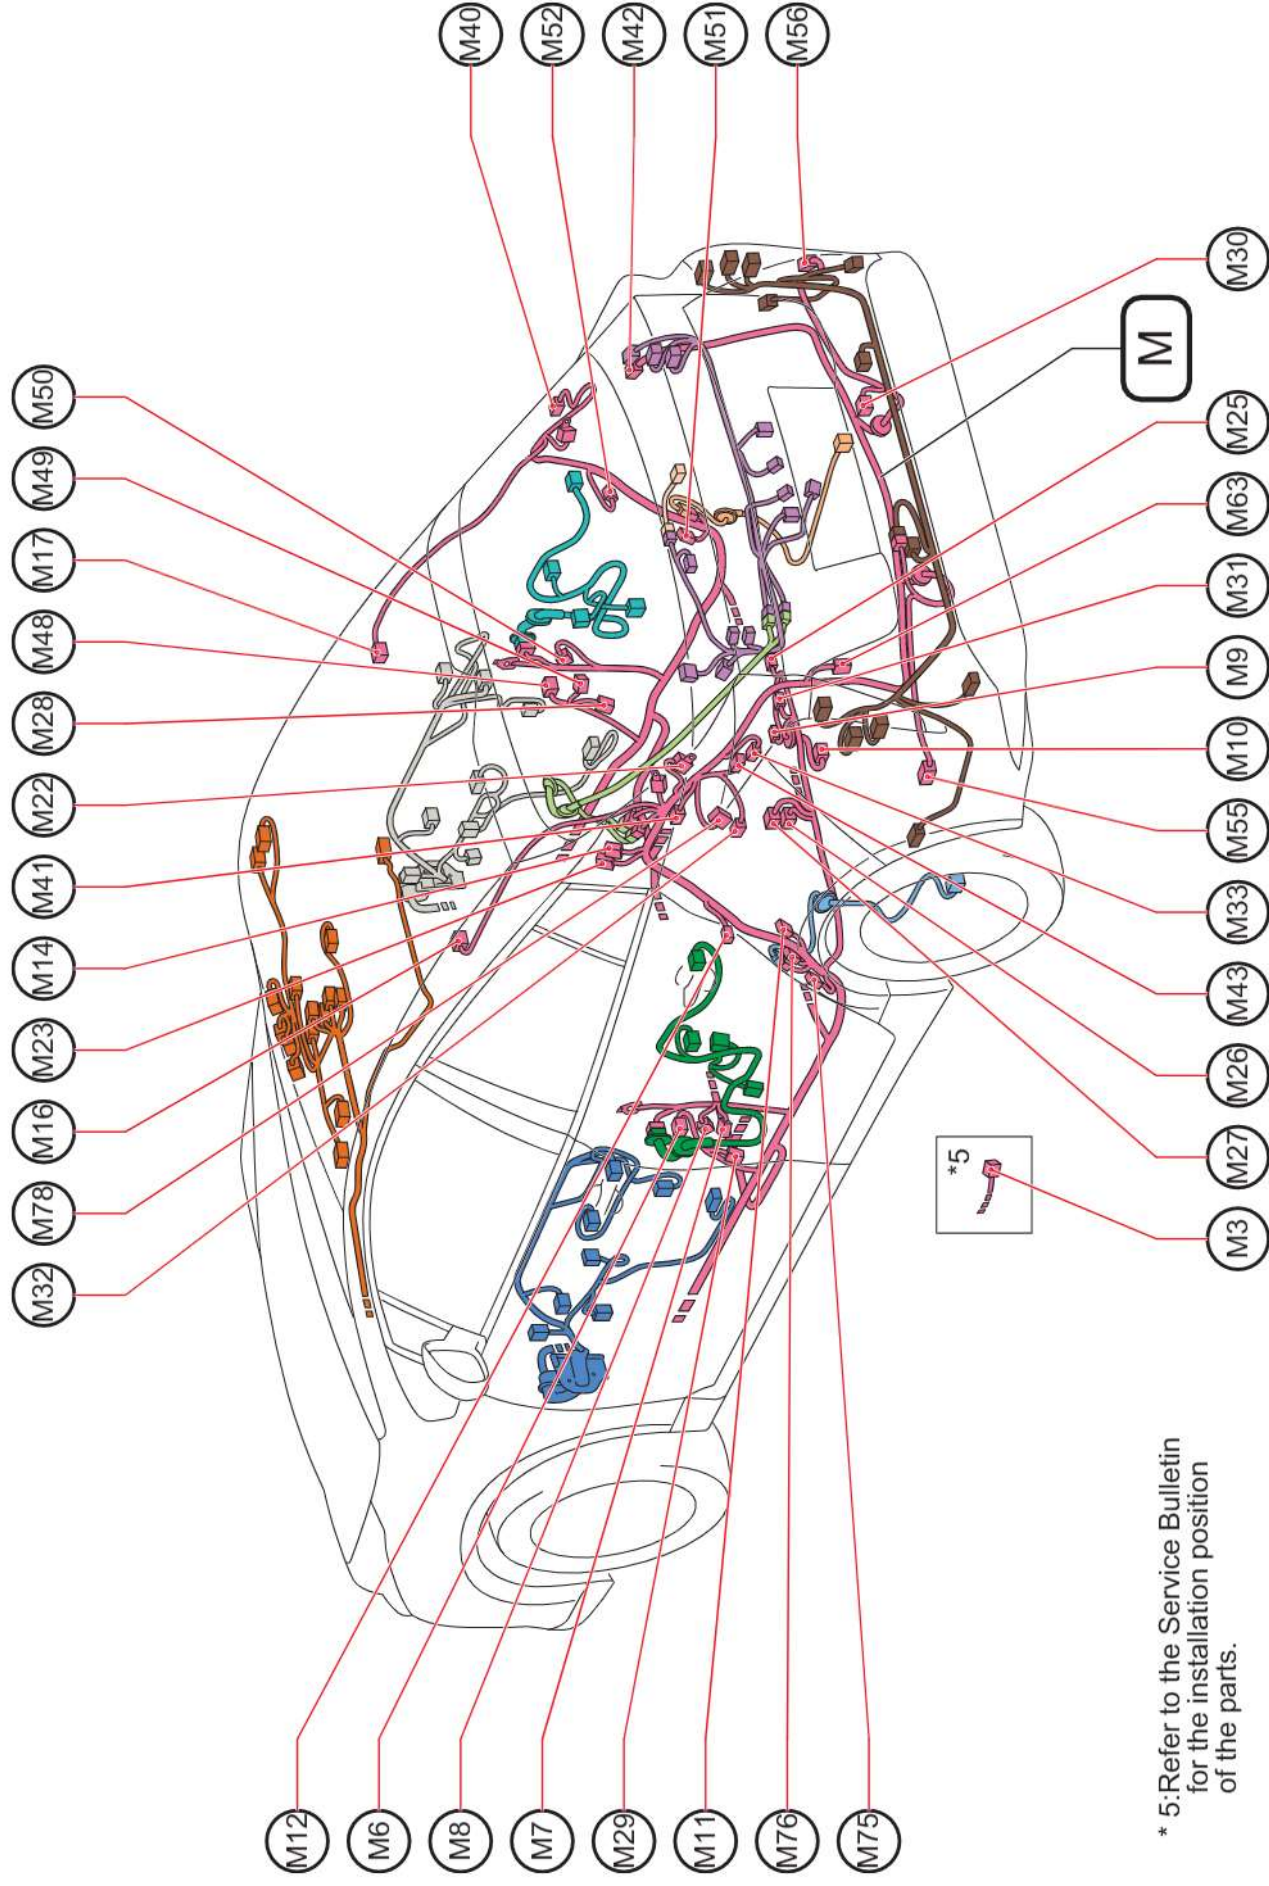















Position of Parts in Body (RHD)


M3	Theft Warning Siren Assembly	
M6	Front Door Courtesy Light Switch Assembly LH	
M7	Front Seat Outer Belt Assembly LH	
M8	Side Airbag Sensor Assembly LH	
M9	No. 2 Indoor Electrical Key Antenna Assembly	
M10	Fuel Suction Tube with Pump & Gage Assembly	
M11	Rear Airbag Sensor LH	
M12	Rear Door Courtesy Light Switch Assembly LH	
M14	Tire Pressure Warning Antenna and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)	
M16	Curtain Shield Airbag Assembly LH	
M17	Curtain Shield Airbag Assembly RH	
M22	Radio Setting Condenser	
M23	Smart Door Control Receiver Assembly	
M25	Rear Seat Inner Belt Assembly RH	
M26	Rear Seat Inner Belt with Center Assembly LH	
M27	Rear Seat Inner Belt with Center Assembly LH	
M28	No. 2 Side Airbag Sensor Assembly RH	
M29	No. 2 Side Airbag Sensor Assembly LH	
M30	Electrical Key Antenna	
M31	No. 3 Indoor Electrical Key Antenna Assembly	
M32	Fuel Lid Lock with Motor Assembly	
M33	No. 1 Luggage Compartment Light Assembly	
M40	Rear Seat 3 Point Type Outer Belt Assembly RH	
M41	Rear Seat 3 Point Type Belt Assembly Outer LH	
M42	Rear Combination Light Assembly RH	
M43	Rear Combination Light Assembly LH	
M48	Front Door Courtesy Light Switch Assembly RH	
M49	Front Seat Outer Belt Assembly RH	
M50	Side Airbag Sensor Assembly RH	
M51	Rear Airbag Sensor RH	
M52	Rear Door Courtesy Light Switch Assembly RH	
M55	Blind Spot Monitor Sensor LH	
M56	Blind Spot Monitor Sensor RH	
M63	Option Connector (Trailer Towing)	
M75	No. 23 Junction Connector	
M76	No. 24 Junction Connector	
M78	No. 7 CAN Junction Connector	

      Position of Parts in Body (RHD)

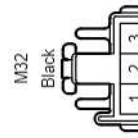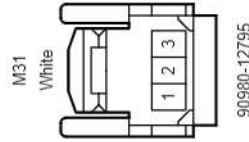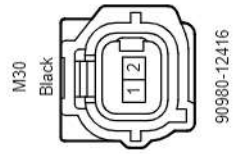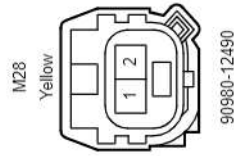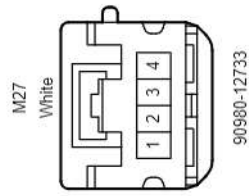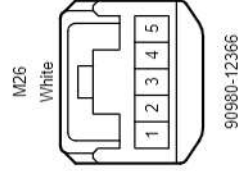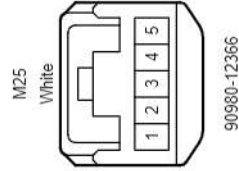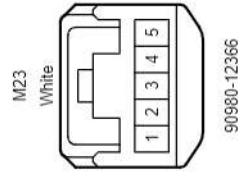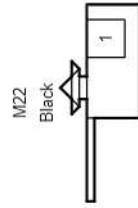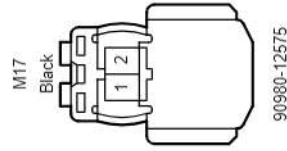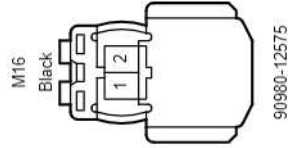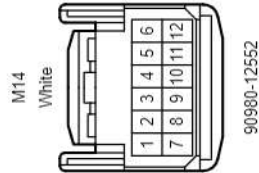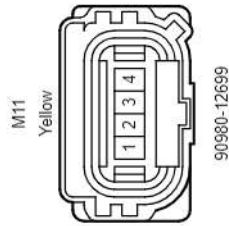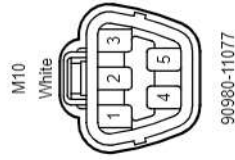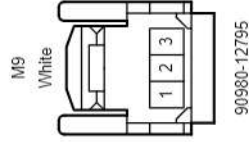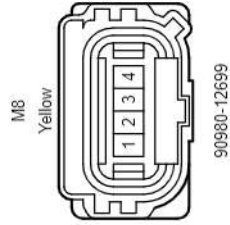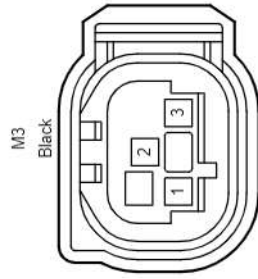

Position of Parts in Body (RHD)

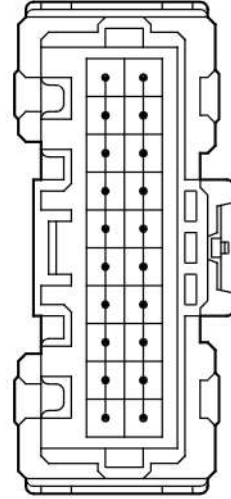
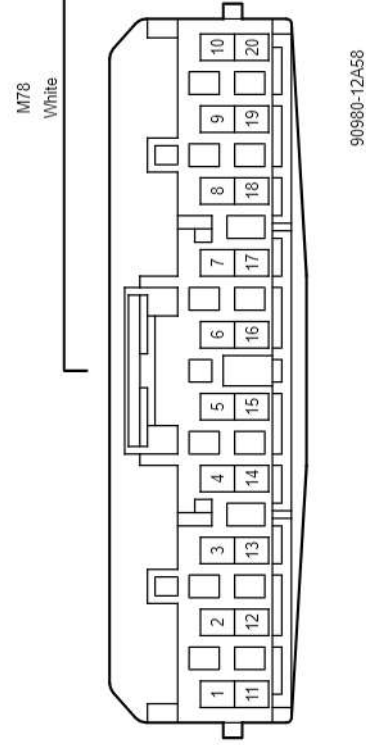
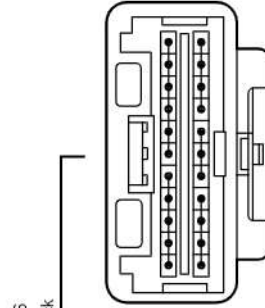
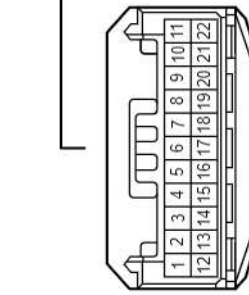
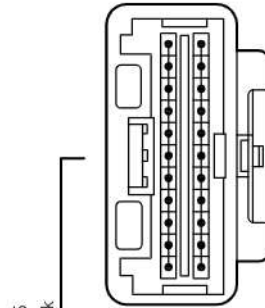
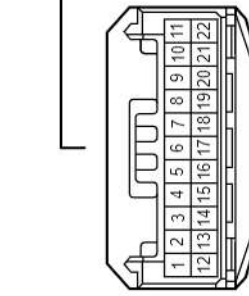
 
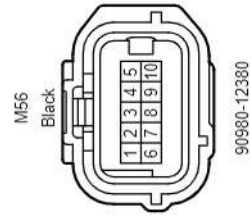
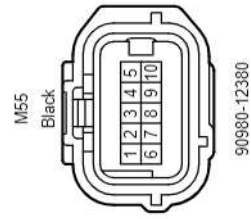
 
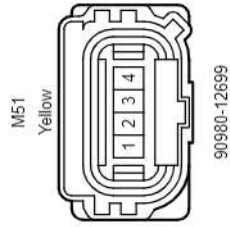
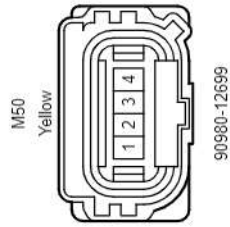
 
 


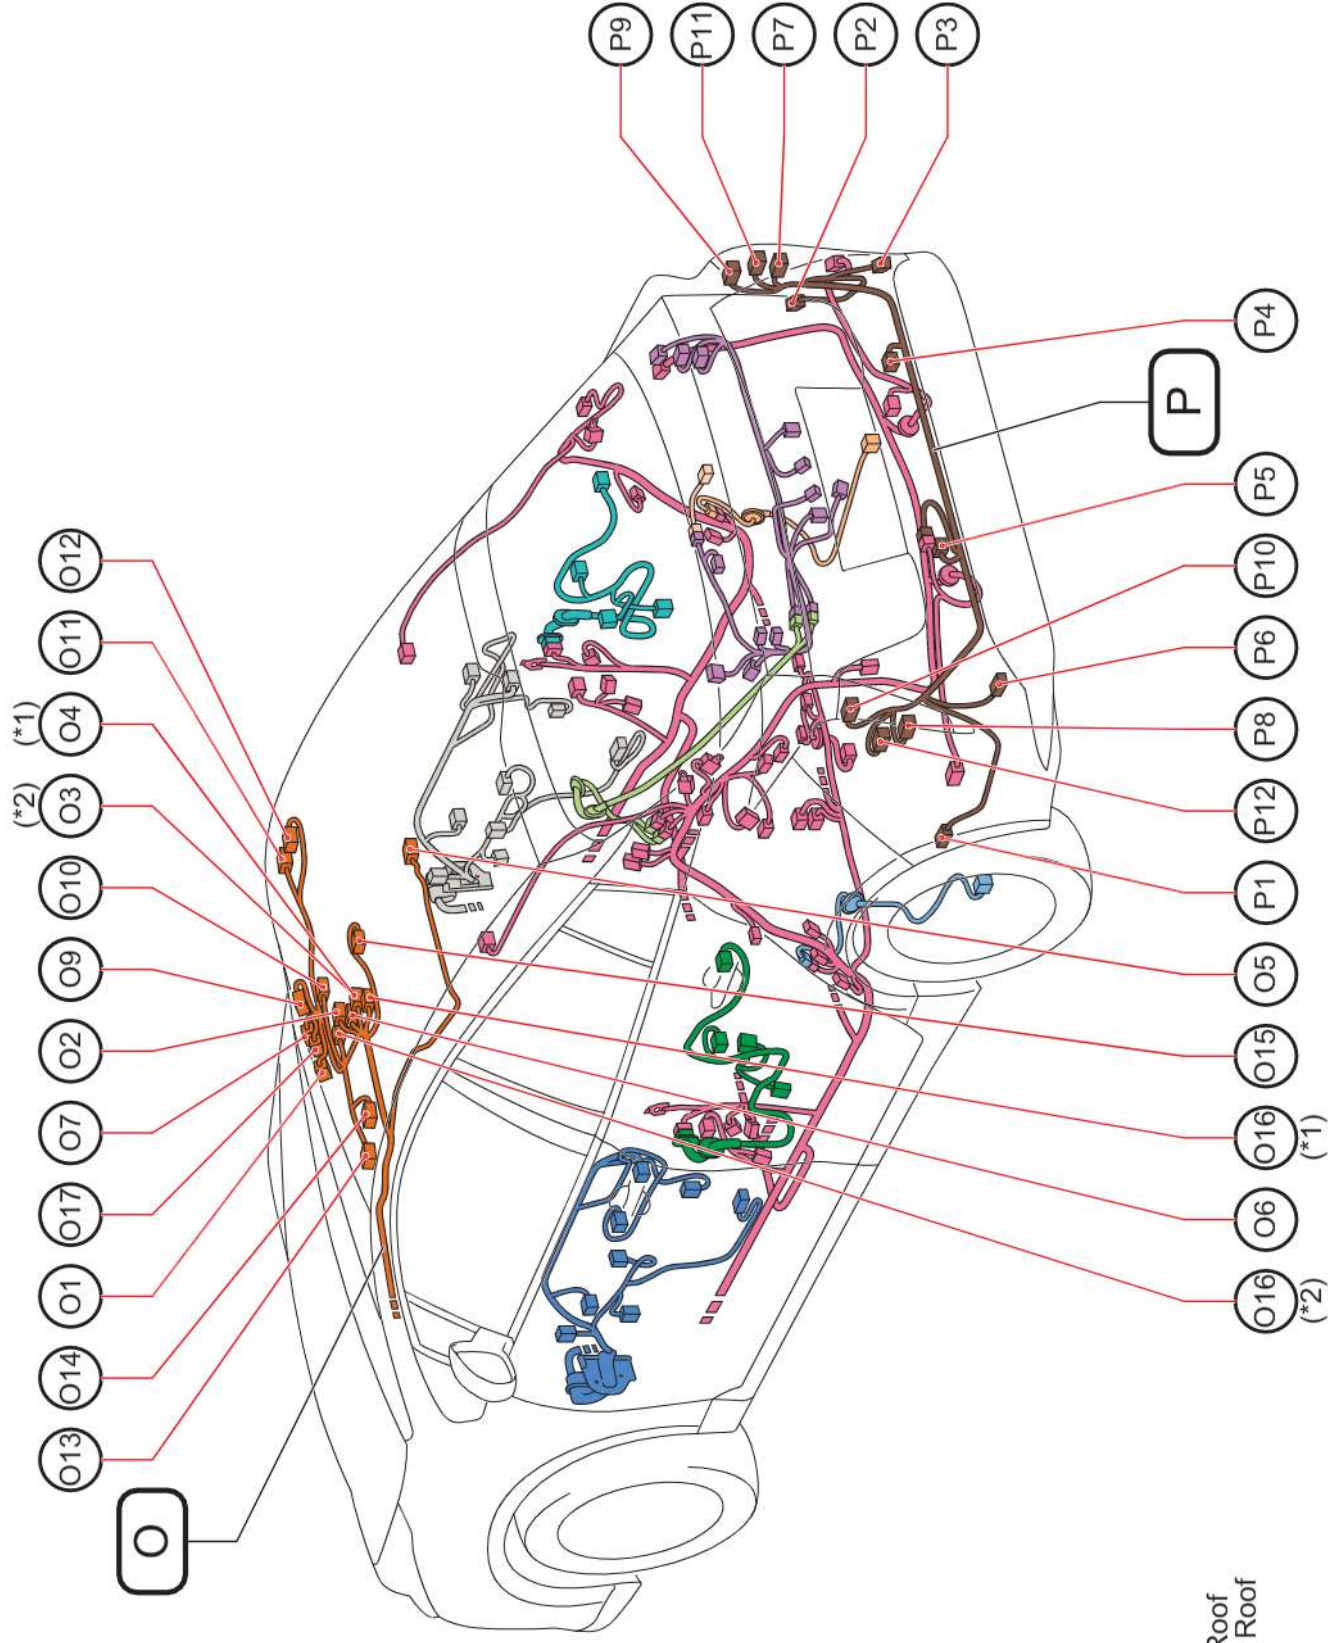

* 1:w/ Sliding Roof
 * 2:w/o Sliding Roof

O1	Rain Sensor
O2	Map Light Assembly
O3	Map Light Assembly
O4	Map Light Assembly
O5	No. 1 Room Light Assembly
O6	Map Light Assembly
O7	Forward Recognition Camera
O9	Inner Rear View Mirror Assembly
O10	Sliding Roof Control ECU (Sliding Roof Drive Gear Sub-Assembly)
O11	Visor Assembly RH
O12	Vanity Light Assembly RH
O13	Visor Assembly LH
O14	Vanity Light Assembly LH
O15	Theft Warning Ultrasonic Sensor
O16	No. 26 Junction Connector
O17	Forward Recognition with Heater Hood Sub-Assembly
P1	Rear Ultrasonic Sensor Side LH
P2	Rear Ultrasonic Sensor Side RH
P3	Rear Ultrasonic Sensor Corner RH
P4	Rear Ultrasonic Sensor Corner RH
P5	Rear Ultrasonic Sensor Center LH
P6	Rear Ultrasonic Sensor Corner LH
P7	Rear Light Assembly RH
P8	Rear Light Assembly LH
P9	Rear Light Assembly RH
P10	Rear Light Assembly LH
P11	Rear Light Assembly RH
P12	Rear Light Assembly LH

  
Position of Parts in Body (RHD)

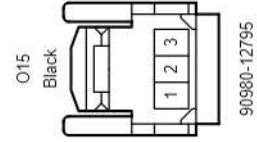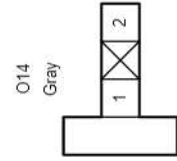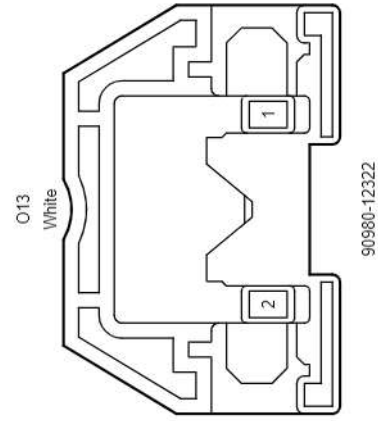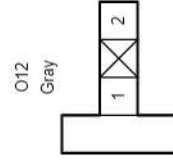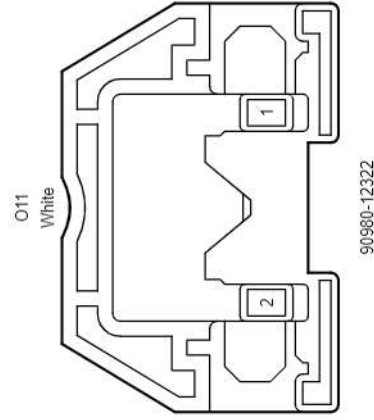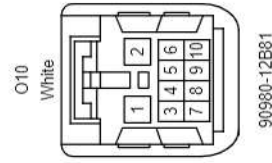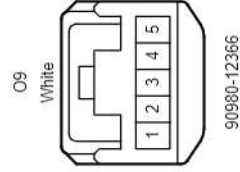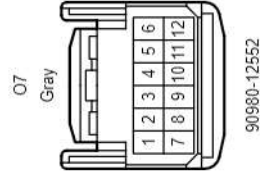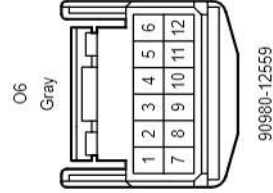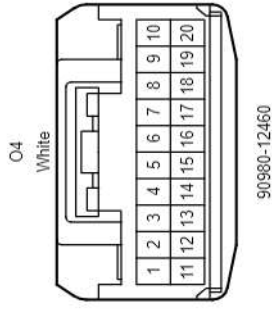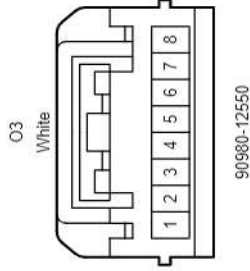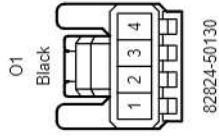

Position of Parts in Body (RHD)

P2


Gray

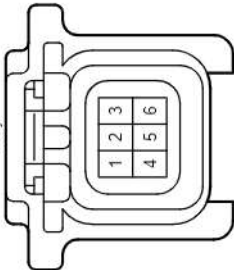

90980-12790

P3


Black

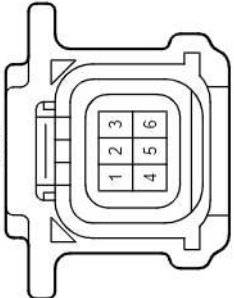

90980-12A59

P4


Black

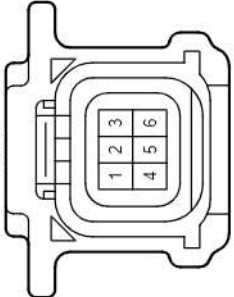

90980-12A59

P5


Black

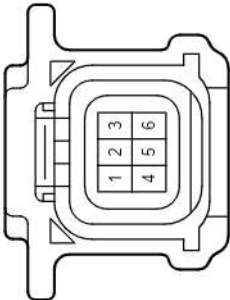

90980-12A59

P6


Black

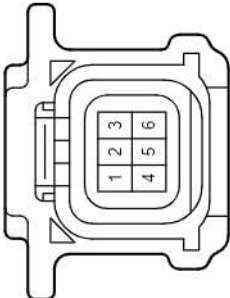

90980-12A59

P7


Gray

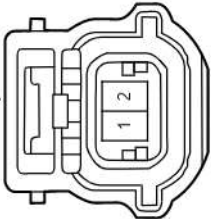

82824-47A10

P8


Gray

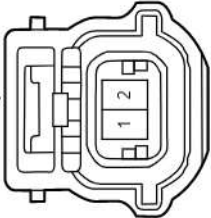

82824-47A10

P9


Black

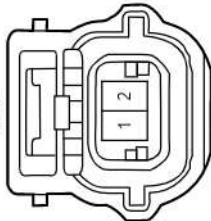

82824-47A20

P10

Black

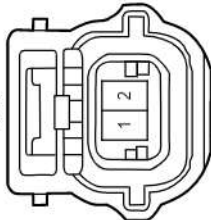

82824-47A20

P11

Black



90980-11246


P12

Black



90980-11246

- * 3:w/ Back Guide Monitor System
- * 4:w/ Rear View Monitor System

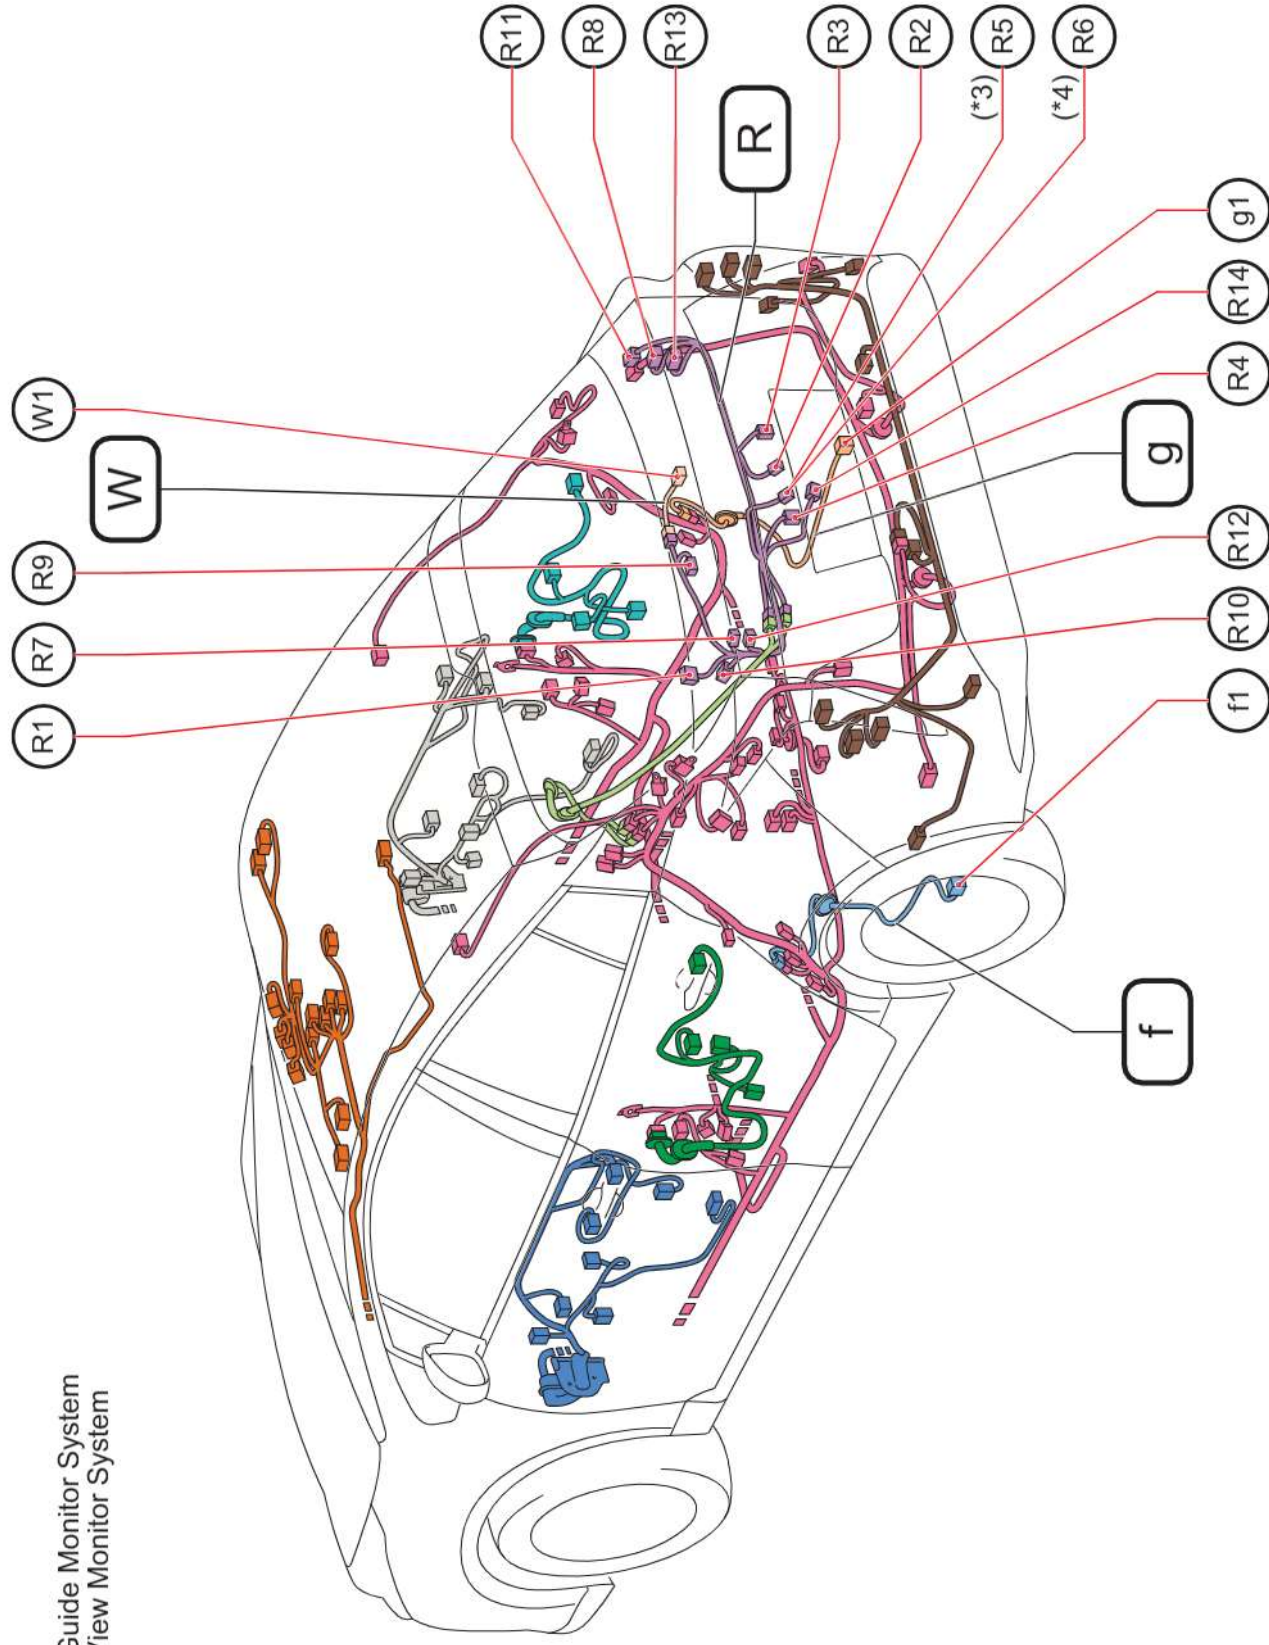

Position of Parts in Body (RHD)


















R1	Rear Wiper Motor Assembly
R2	Back Door Opener Switch Assembly
R3	License Plate Light Assembly RH
R4	License Plate Light Assembly LH
R5	Rear Television Camera Assembly
R6	Rear Television Camera Assembly
R7	Glass Breakage Sensor (Back Door Glass)
R8	Glass Breakage Sensor (Back Door Glass)
R9	Glass Breakage Sensor (Back Window Fix Glass)
R10	Rear Window Defogger (Back Window Fix Glass)
R11	Rear Window Defogger (Back Window Fix Glass)
R12	Rear Window Defogger (Back Window Fix Glass)
R13	Rear Window Defogger (Back Window Fix Glass)
R14	Back Door Lock Assembly


W1 Center Stop Light

f1 Rear Speed Sensor LH

g1 Rear Speed Sensor RH

          Position of Parts in Body (RHD)

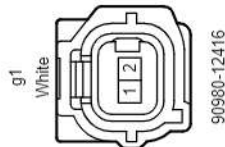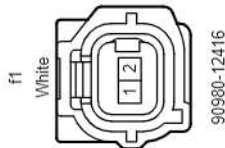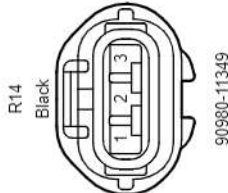






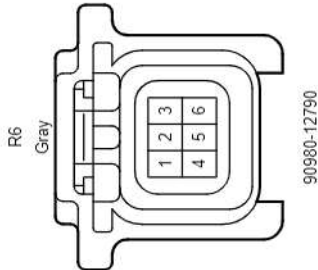
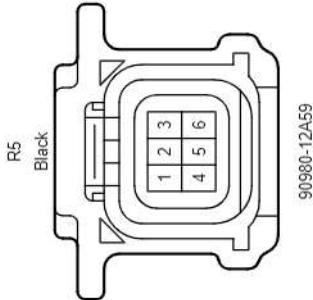


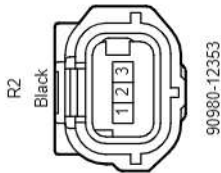
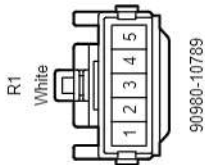


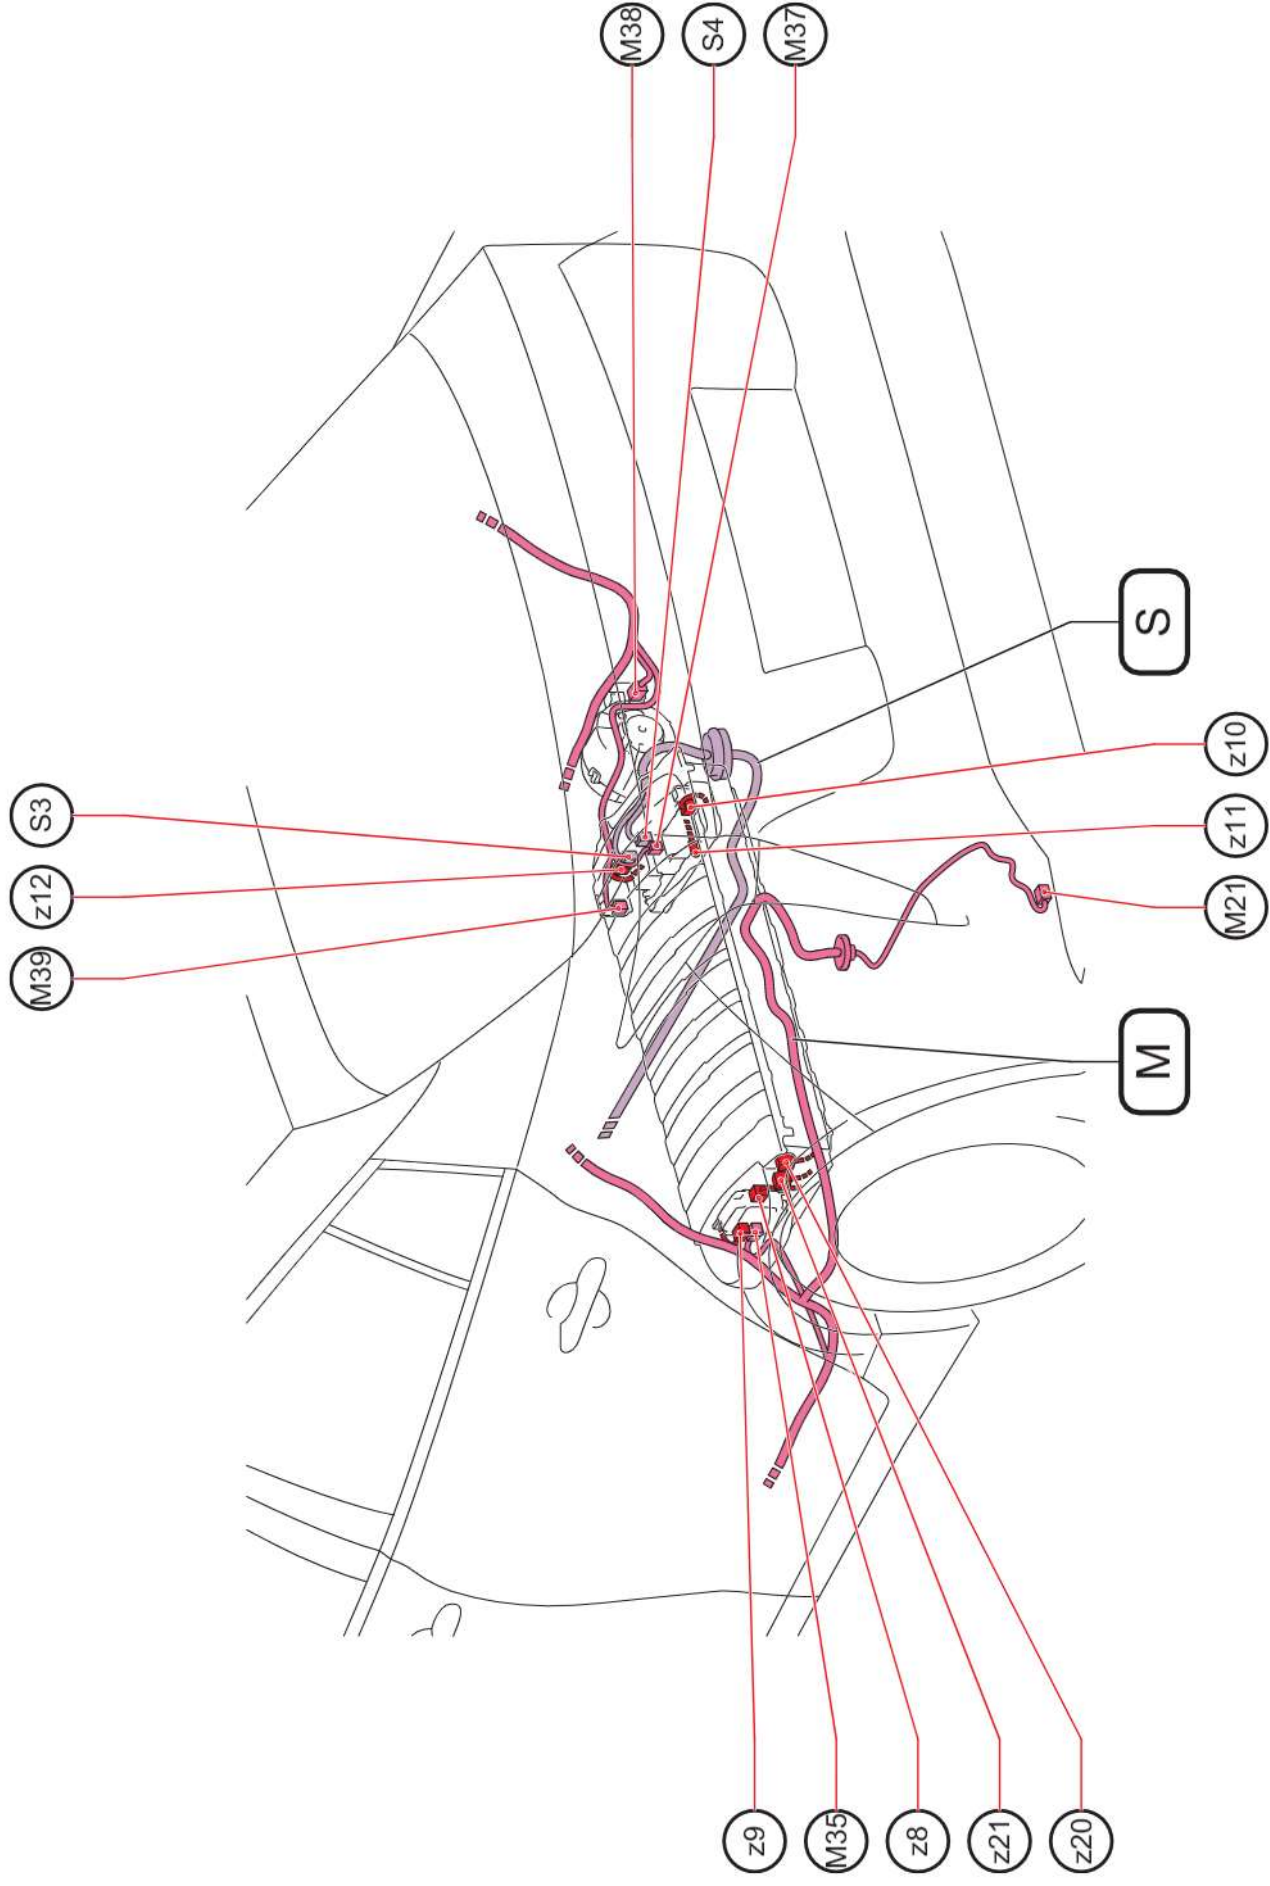


Position of Parts in Body (RHD)

M21	Rear Height Control Sensor Sub-Assembly LH
M35	Battery Voltage Sensor
M37	HV Battery Junction Block Assembly
M38	Battery Cooling Blower Assembly
M39	Inter Lock Switch
S3	HV Battery Junction Block Assembly
S4	HV Battery Junction Block Assembly
z8	HV Supply Battery Assembly , Battery Voltage Sensor
z9	HV Supply Battery Assembly , Battery Voltage Sensor
z10	HV Supply Battery Assembly , HV Battery Junction Block Assembly
z11	HV Supply Battery Assembly
z12	HV Battery Junction Block Assembly
z20	Hybrid Battery Terminal Block , HV Supply Battery Assembly
z21	Hybrid Battery Terminal Block , HV Supply Battery Assembly

  
Position of Parts in Body (RHD)

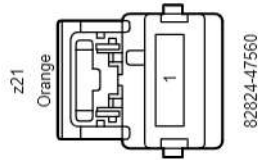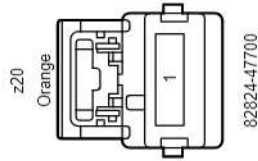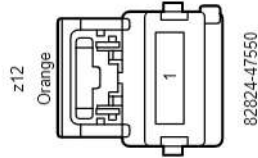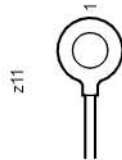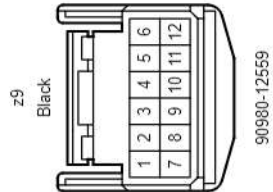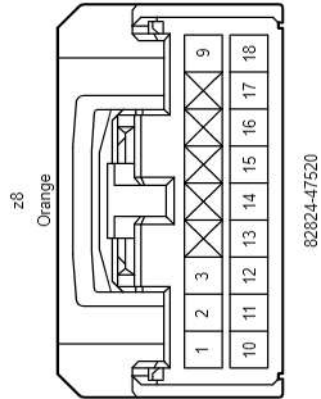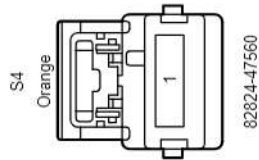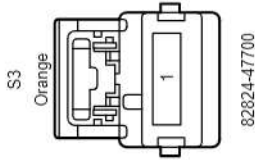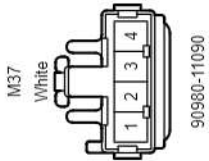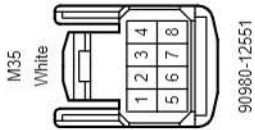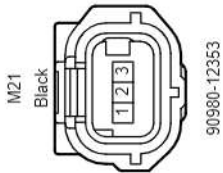

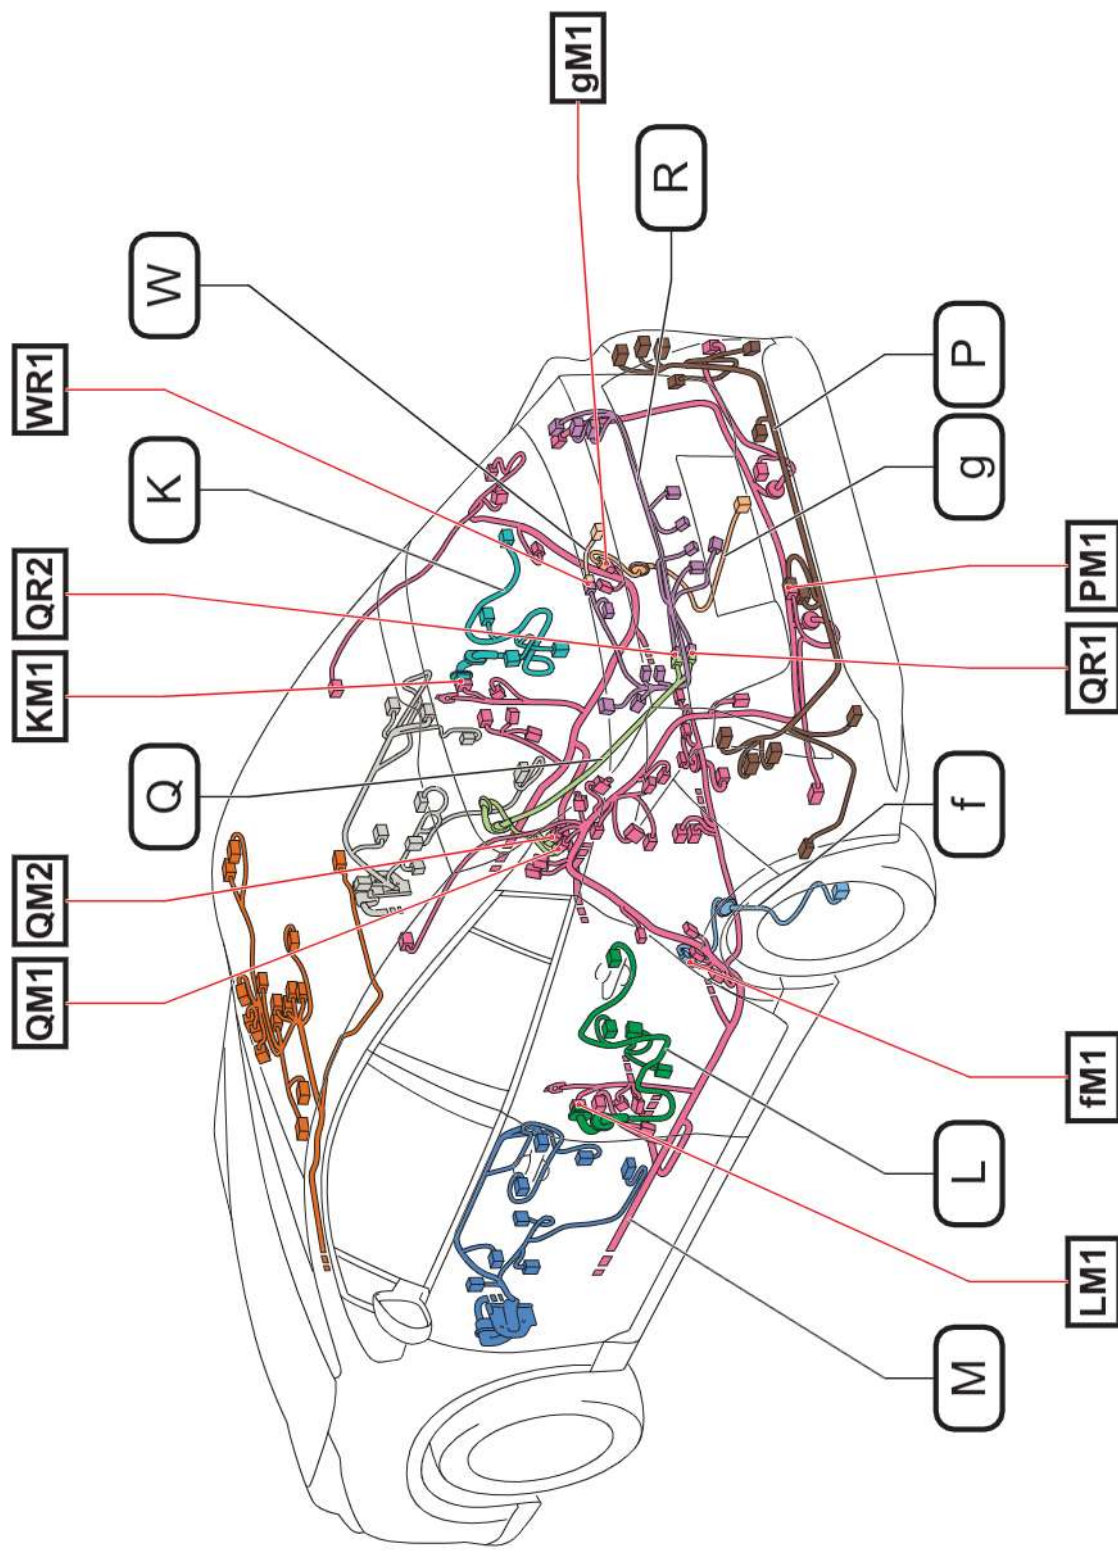


Wire and Wire in Body (RHD)

KM1
White

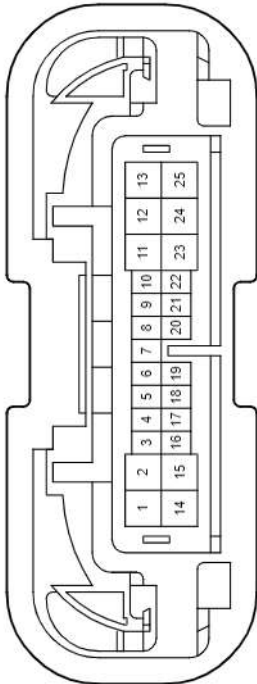


90980-12802

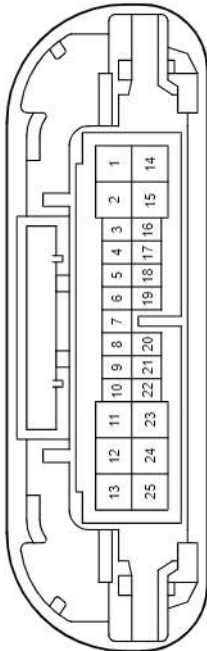


90980-12801

LM1
White

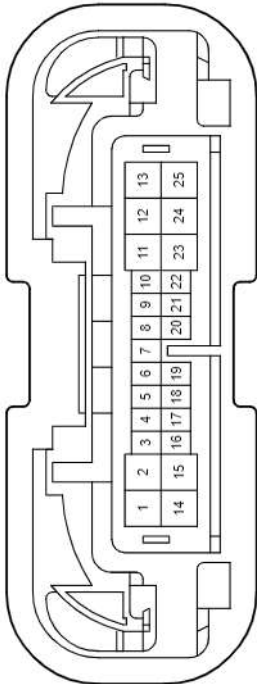


90980-12802

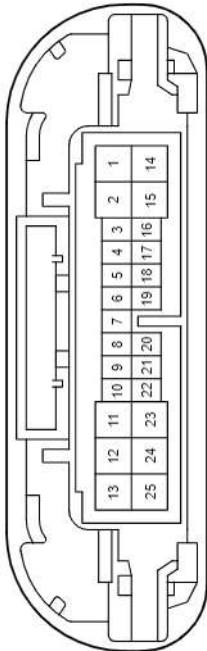


90980-12801

PM1
Black

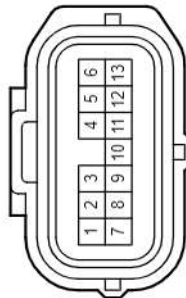

90980-12326

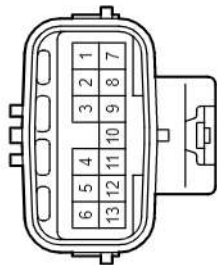



90980-12716

QM1
White


QM2
White

Wire and Wire in Body (RHD)

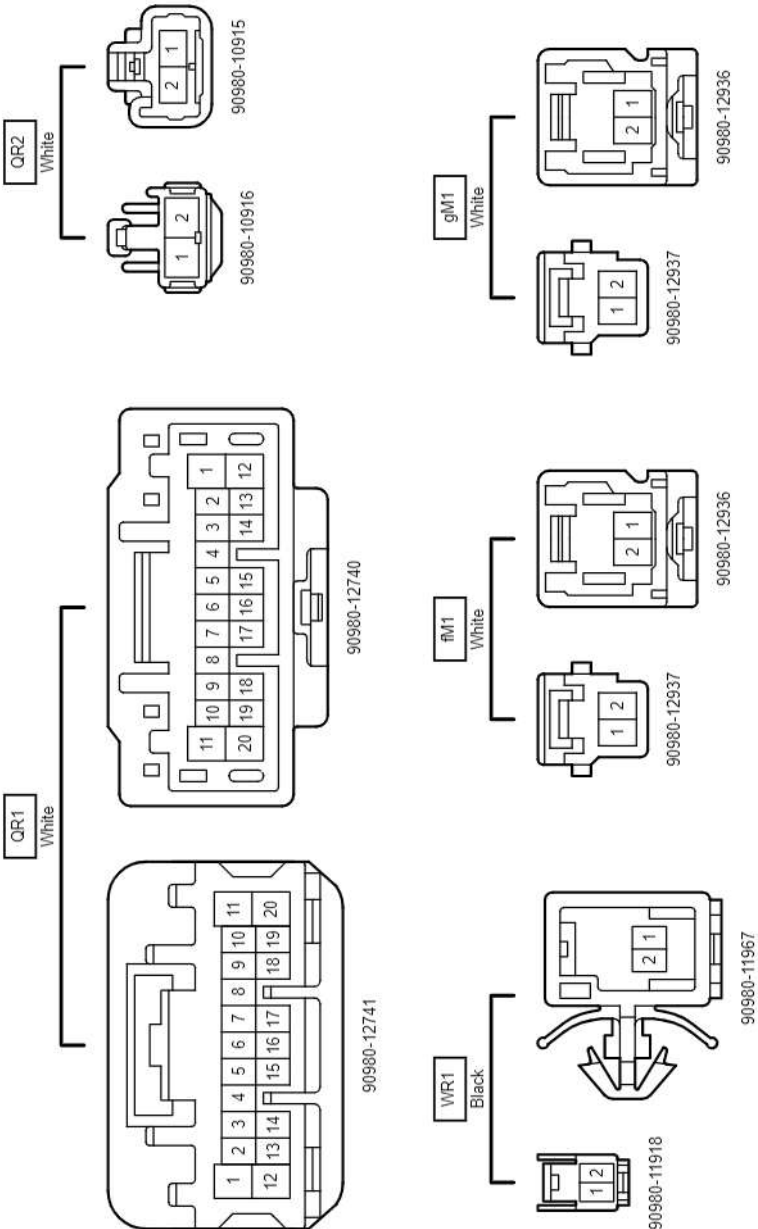

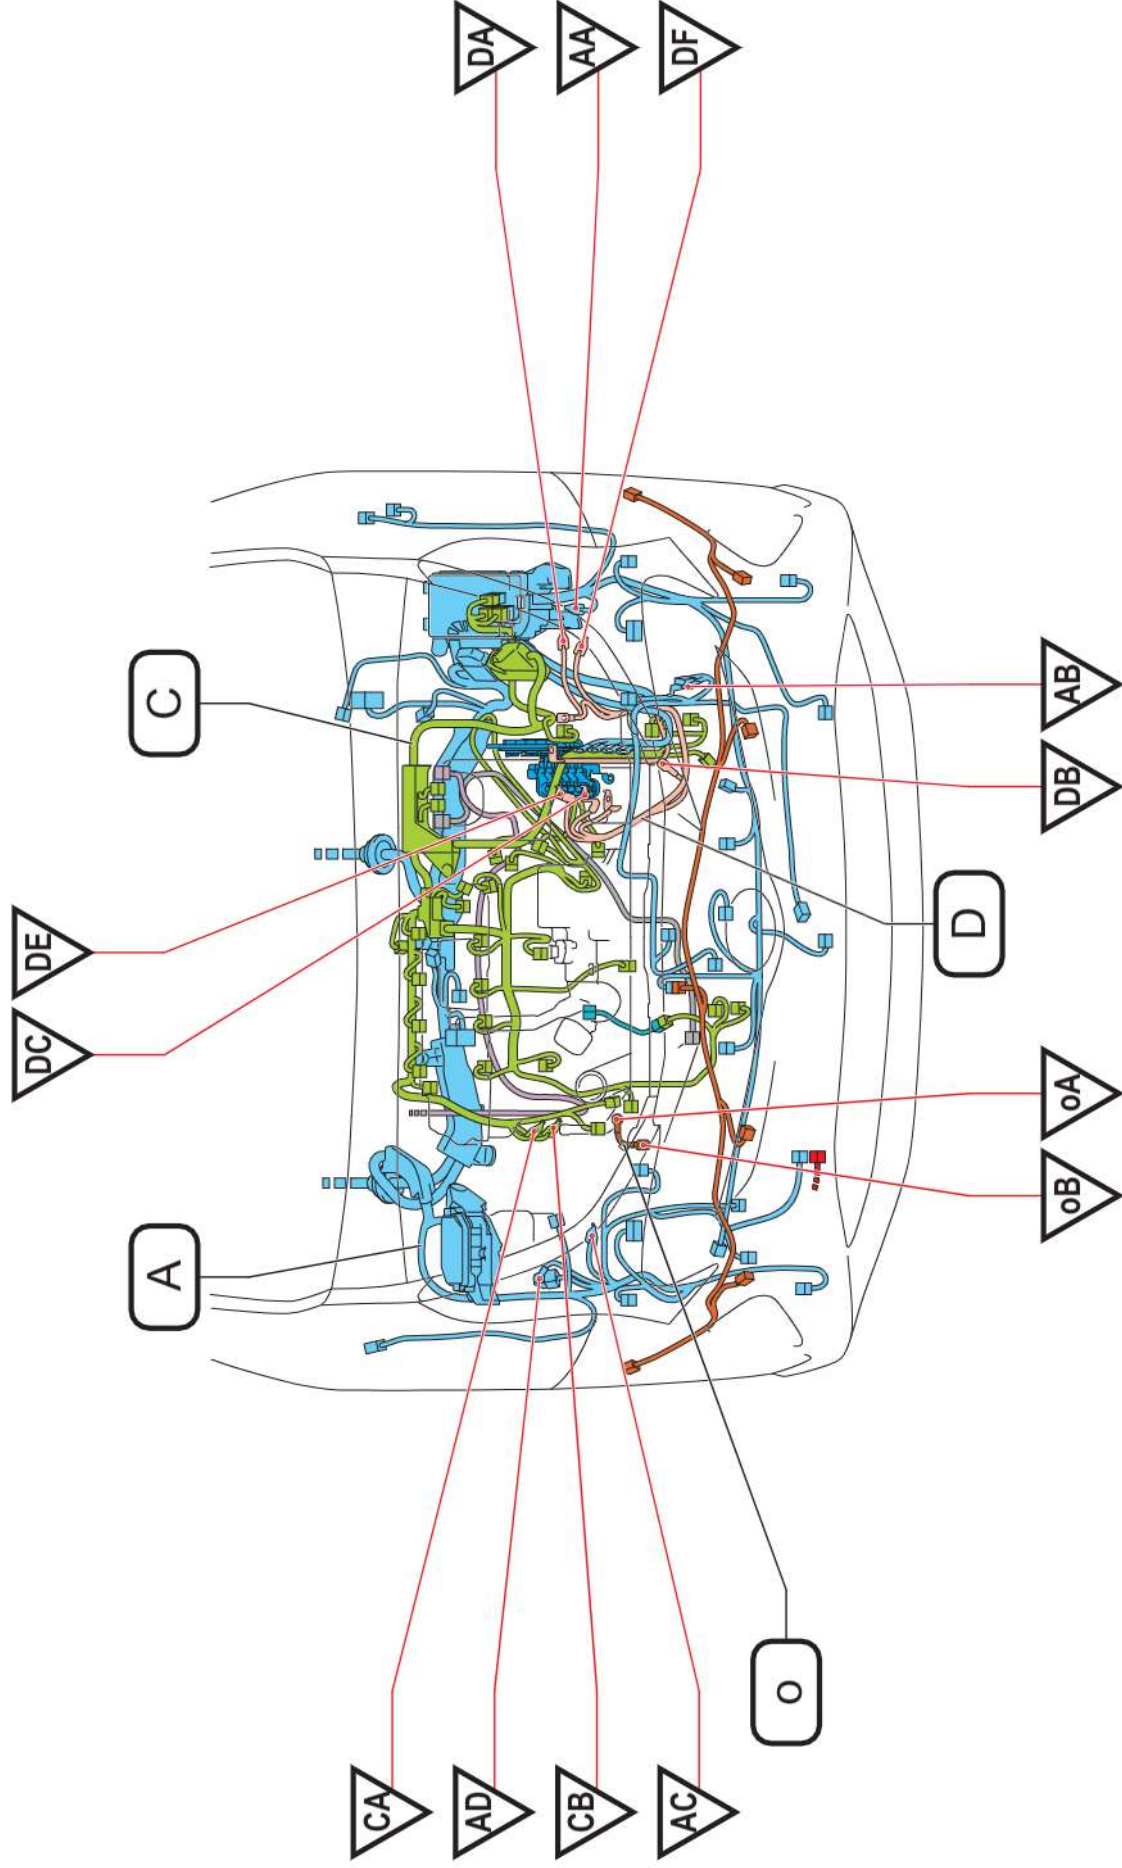












* 1:w/ Grille Shutter System
 * 2:w/o Grille Shutter System

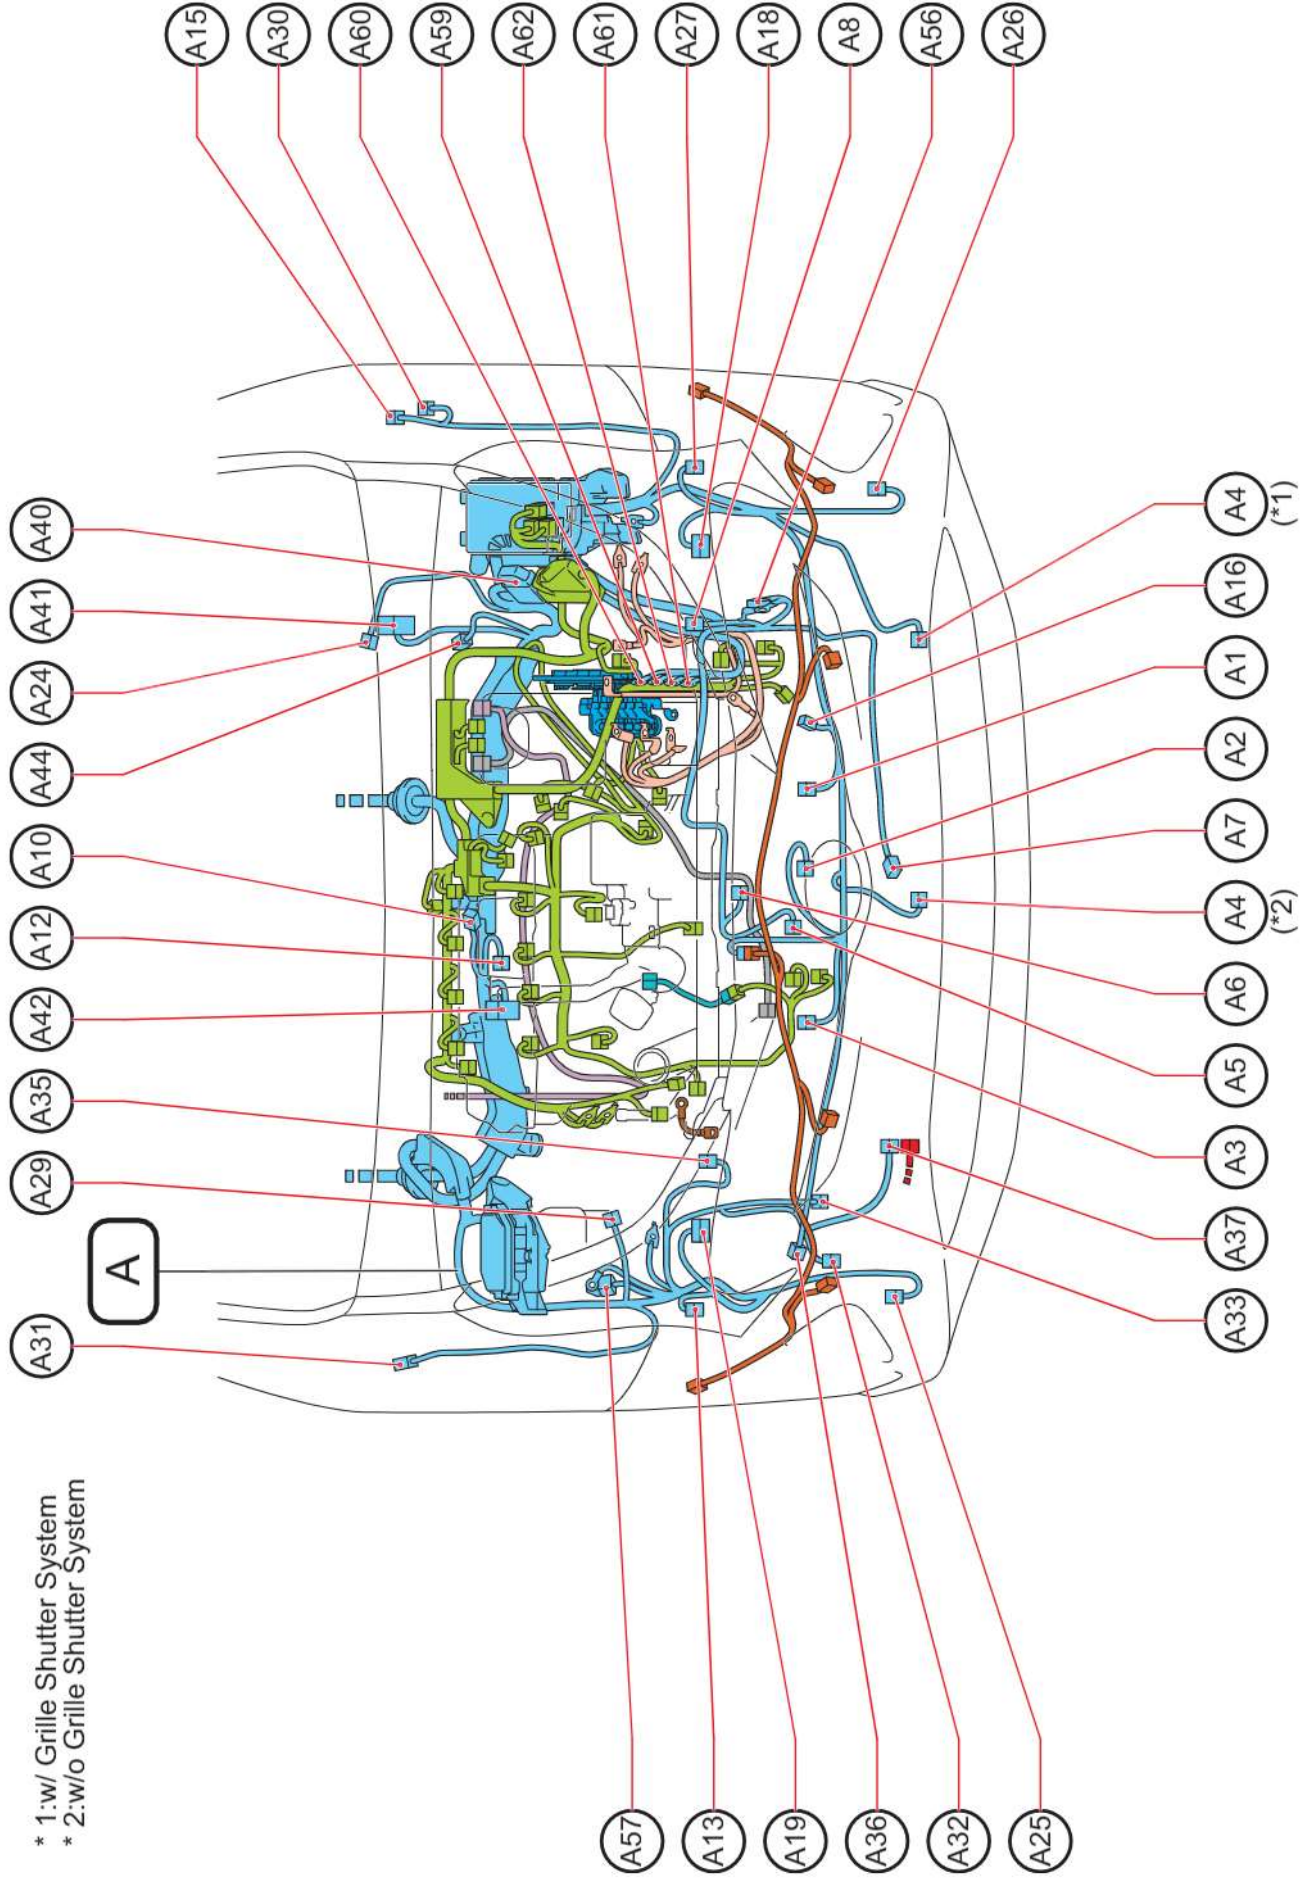

Position of Parts in Engine Compartment (LHD)


A1	Low Pitched Horn Assembly
A2	Millimeter Wave Radar Sensor Assembly
A3	High Pitched Horn Assembly
A4	No. 1 Cooler Thermistor
A5	Cooling Fan Motor RH
A6	Cooling Fan Motor LH
A7	Inverter Water Pump Assembly (with Motor)
A8	Front Airbag Sensor LH
A10	Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
A12	Brake Booster Pump Assembly
A13	Front Turn Signal Light Assembly RH (Headlight Assembly RH)
A15	Front Speed Sensor LH
A16	Vehicle Approaching Speaker Assembly
A18	Headlight Light Control ECU Assembly LH (Headlight Assembly LH)
A19	Headlight Light Control ECU Assembly RH (Headlight Assembly RH)
A24	Windshield Wiper Motor Assembly
A25	Fog Light Assembly RH
A26	Fog Light Assembly LH
A27	Front Turn Signal Light Assembly LH (Headlight Assembly LH)
A29	A/C Tube & Accessory Assembly
A30	Wireless Door Lock Buzzer
A31	Front Speed Sensor RH
A32	Level Warning Switch Assembly
A33	Windshield Washer Motor and Pump Assembly
A35	Front Airbag Sensor RH
A36	Radiator Shutter Sub-Assembly
A37	Swing Grille Actuator Assembly
A40	ECM
A41	Brake Booster with Master Cylinder Assembly
A42	Brake Actuator Assembly
A44	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A56	No. 1 Ground Junction Connector
A57	No. 2 Ground Junction Connector
A59	Fusible Link Block Assembly
A60	Fusible Link Block Assembly
A61	Fusible Link Block Assembly
A62	Fusible Link Block Assembly

  Position of Parts in Engine Compartment (LHD)


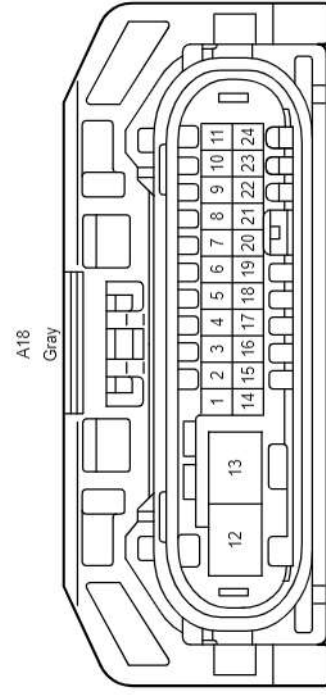
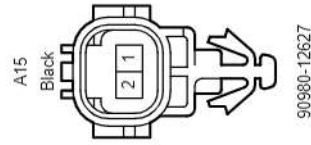
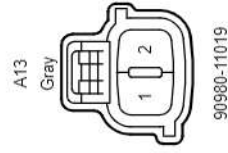
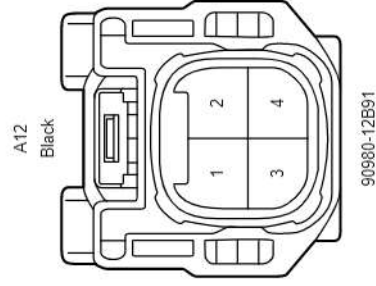
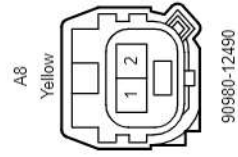
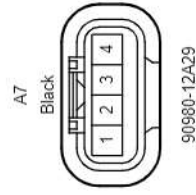
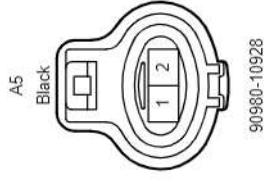
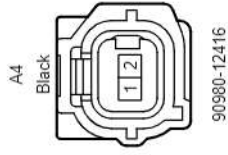

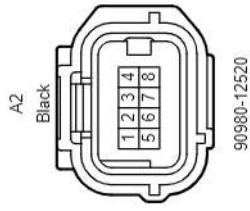



cardiagn.com

Position of Parts in Engine Compartment (LHD)

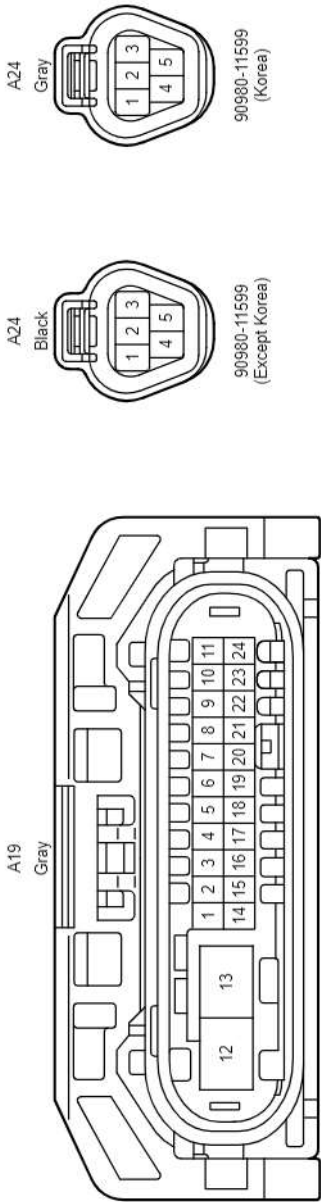


90980-12A92

 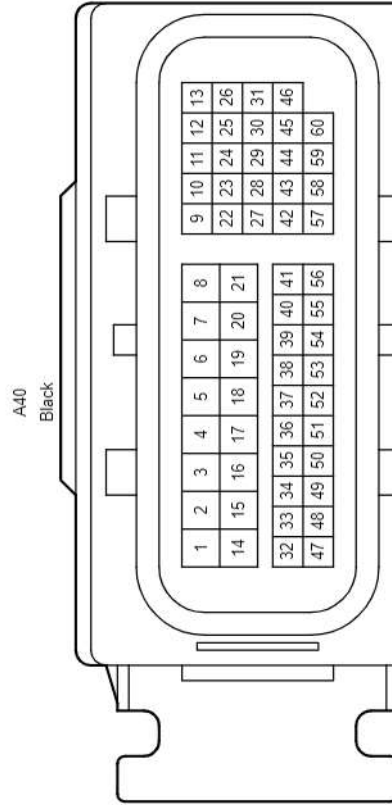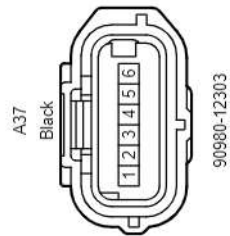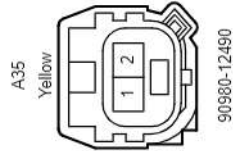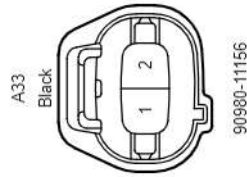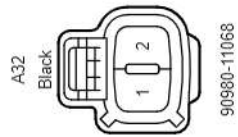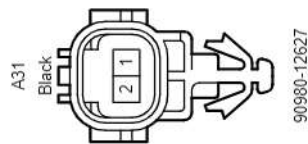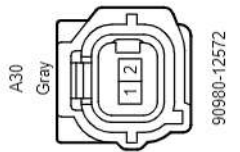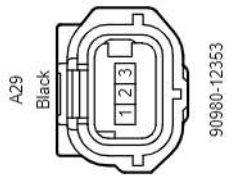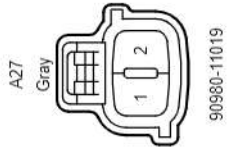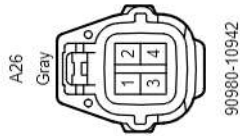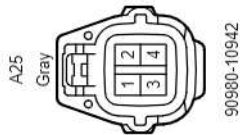


Position of Parts in Engine Compartment (LHD)

A41
Black

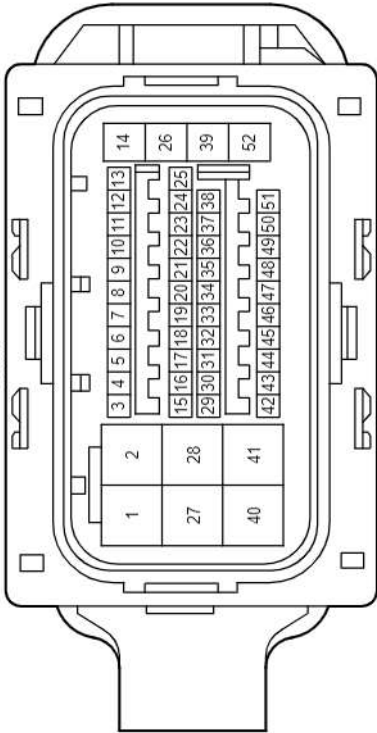


90980-12B87

A42
Black

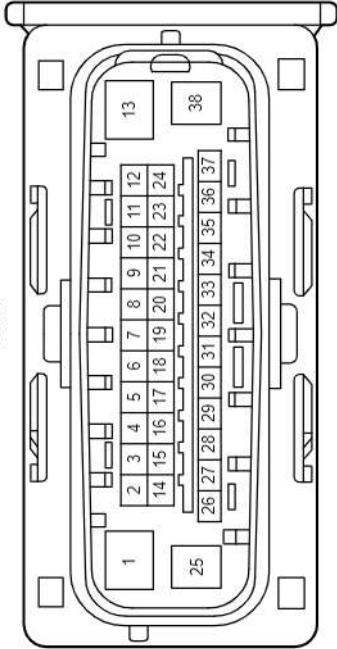

90980-12B01

A56
Black

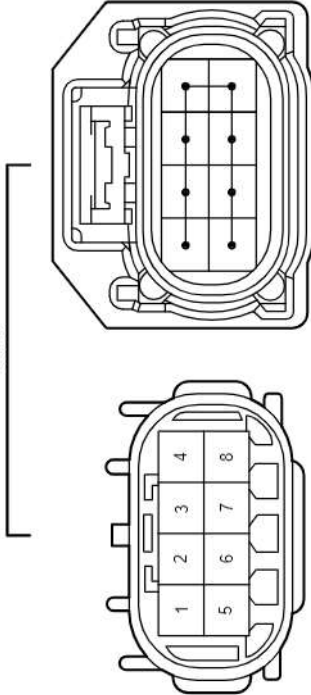

90980-12B56



90980-11207

Position of Parts in Engine Compartment (LHD)

A61




A62








cardiagn.com

Position of Parts in Engine Compartment (LHD)



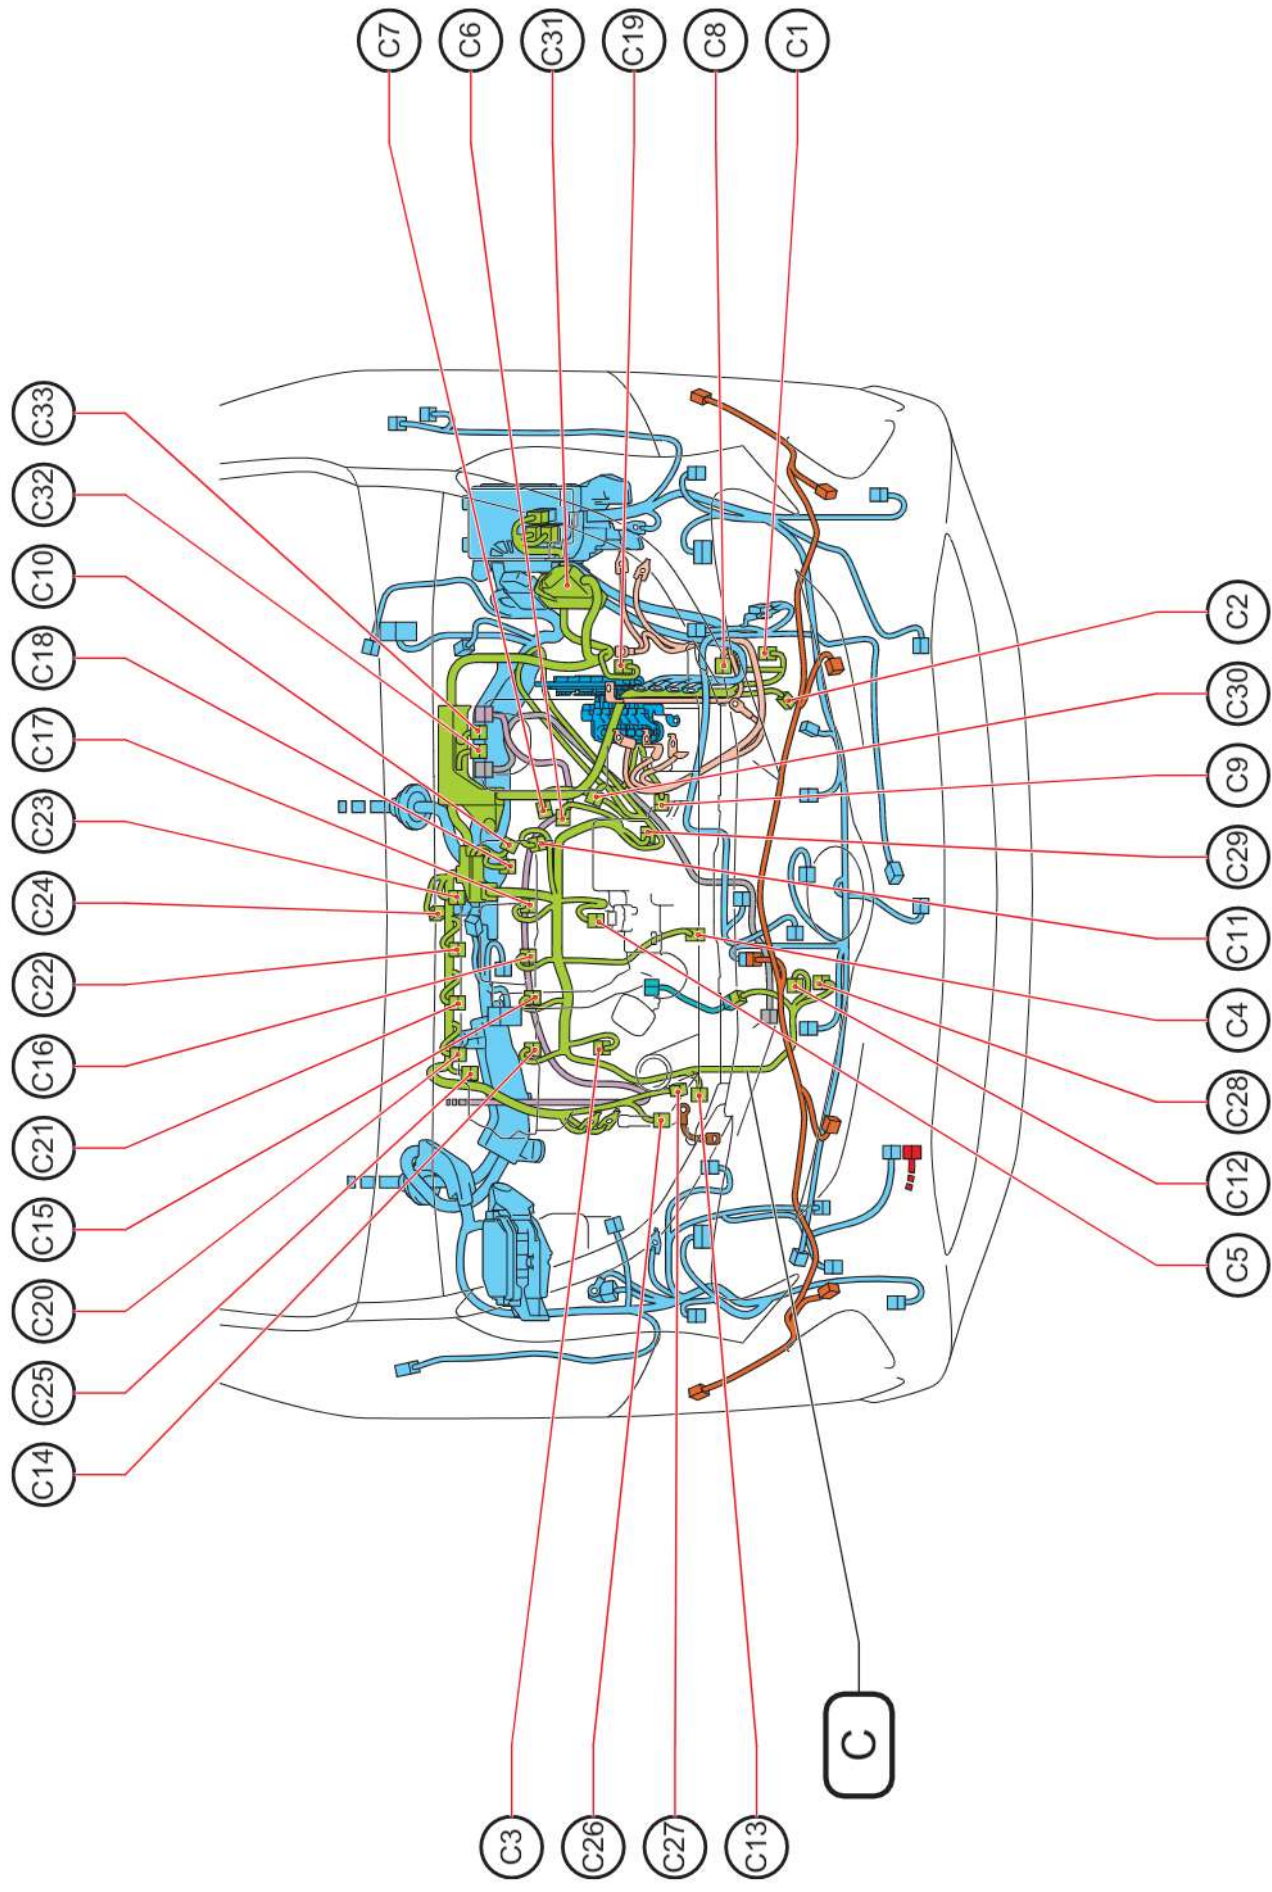


C1	Hybrid Vehicle Transaxle Assembly
C2	Shift Control Actuator Assembly
C3	E.F.I. Vacuum Sensor Assembly
C4	Throttle Body Assembly
C5	Intake Mass Air Flow Meter Sub-Assembly
C6	E.F.I. Engine Coolant Temperature Sensor
C7	Engine Coolant Temperature Sensor (Heater)
C8	Hybrid Vehicle Transaxle Assembly
C9	Oxygen Sensor (Bank 1 Sensor 2)
C10	EGR Valve Assembly
C11	Purge VSV
C12	Compressor with Motor Assembly
C13	Engine Water Pump Assembly
C14	Fuel Injector Assembly No. 1
C15	Fuel Injector Assembly No. 2
C16	Fuel Injector Assembly No. 3
C17	Fuel Injector Assembly No. 4
C18	Cam Position Sensor
C19	Battery State Sensor Assembly
C20	Ignition Coil Assembly No. 1
C21	Ignition Coil Assembly No. 2
C22	Ignition Coil Assembly No. 3
C23	Ignition Coil Assembly No. 4
C24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C25	Camshaft Timing Oil Control Valve Assembly
C26	Engine Oil Pressure Switch Assembly
C27	Crank Position Sensor
C28	Engine Oil Level Sensor
C29	Engine Coolant Temperature Sensor
C30	Water Valve
C31	ECM
C32	Inverter with Converter Assembly
C33	Inverter with Converter Assembly

 
Position of Parts in Engine Compartment (LHD)

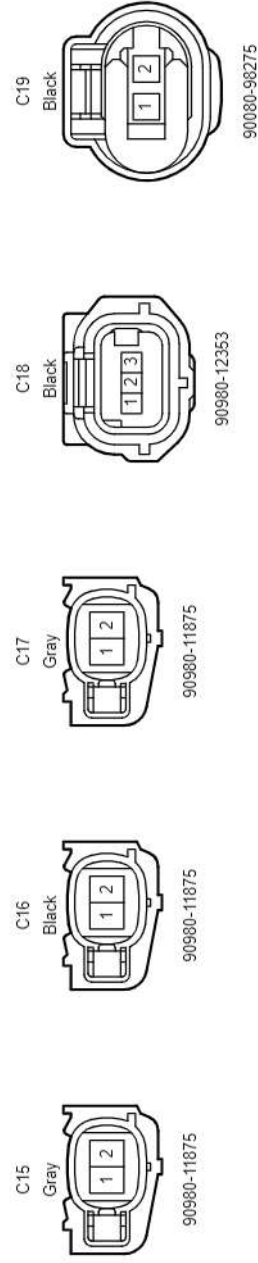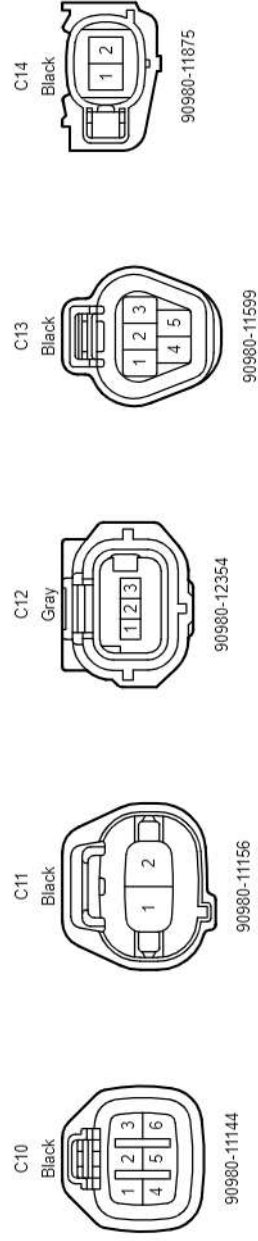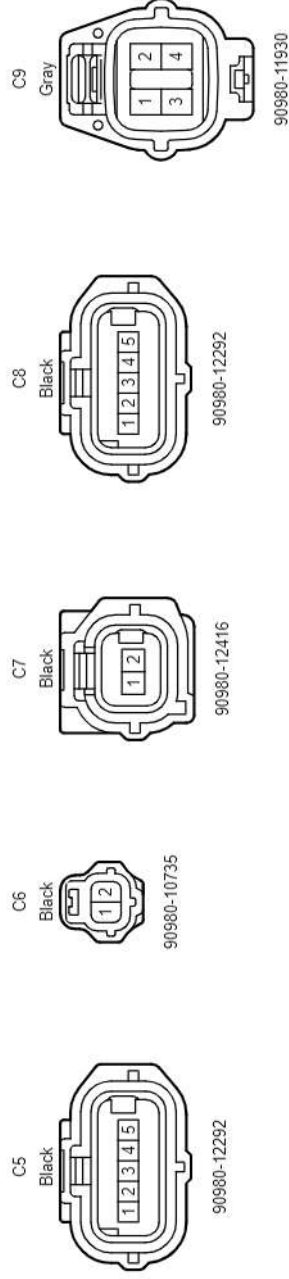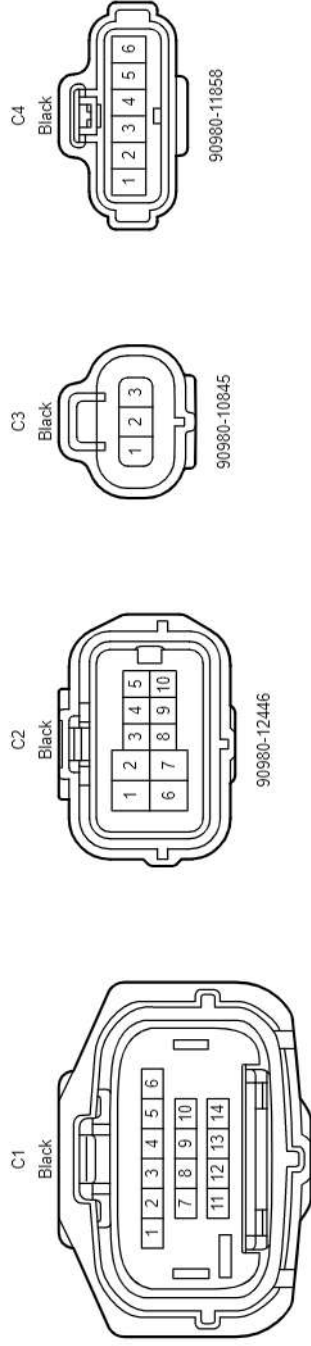


Position of Parts in Engine Compartment (LHD)

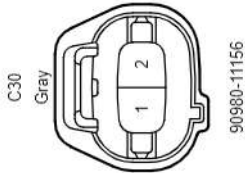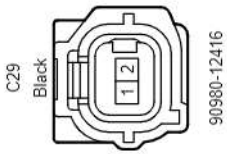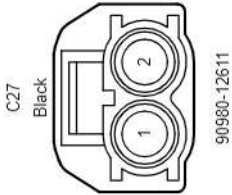


C31
Black

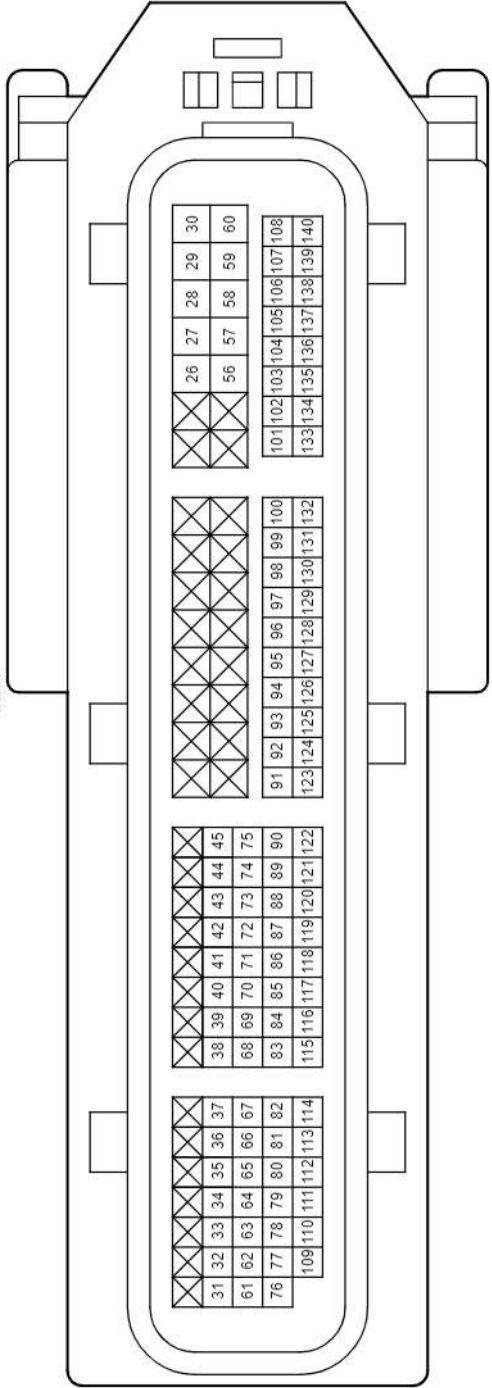


C32
Black

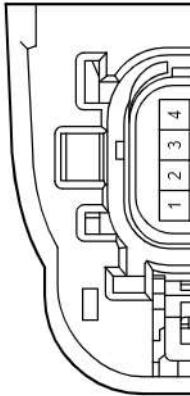

C33
Black

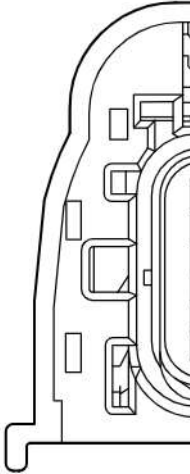


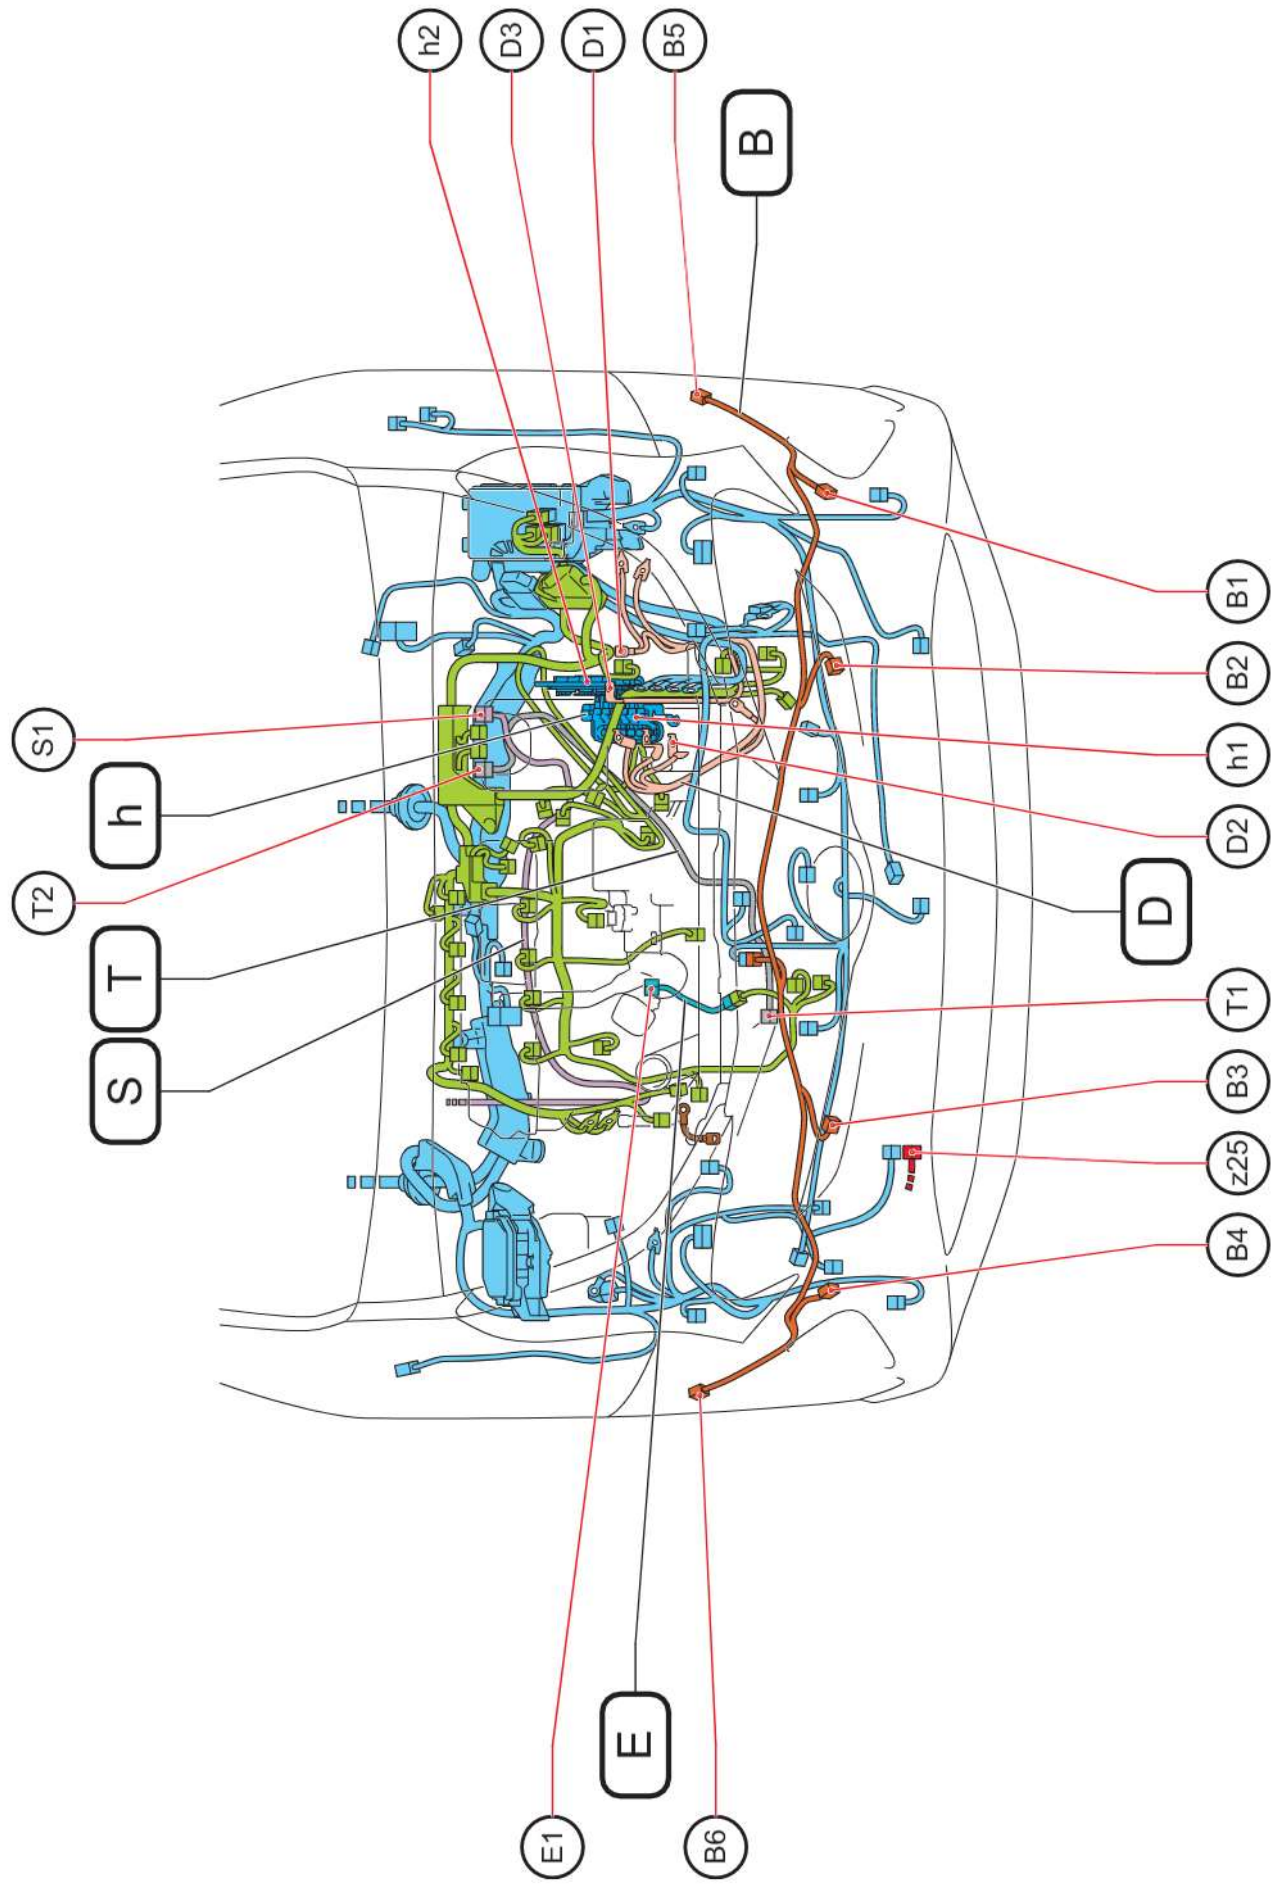


Position of Parts in Engine Compartment (LHD)

B1	Front Ultrasonic Sensor Corner LH
B2	Front Ultrasonic Sensor Center LH
B3	Front Ultrasonic Sensor Center RH
B4	Front Ultrasonic Sensor Corner RH
B5	Front Ultrasonic Sensor Side LH
B6	Front Ultrasonic Sensor Side RH
D1	Battery
D2	Inverter with Converter Assembly
D3	Fusible Link Block Assembly
E1	Knock Control Sensor (Bank 1)
S1	Inverter with Converter Assembly
T1	Compressor with Motor Assembly
T2	Inverter with Converter Assembly
h1	Hybrid Vehicle Transaxle Assembly
h2	Inverter with Converter Assembly
z25	Swing Grille Actuator Assembly , Radiator Shutter Sub-Assembly


Position of Parts in Engine Compartment (LHD)

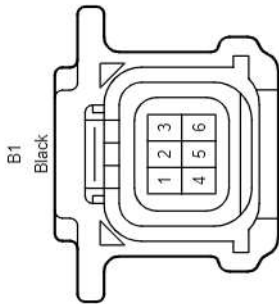


90980-12A59

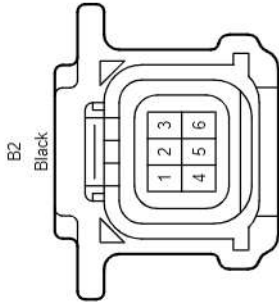


90980-12A59

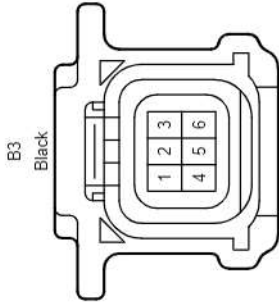


90980-12A59

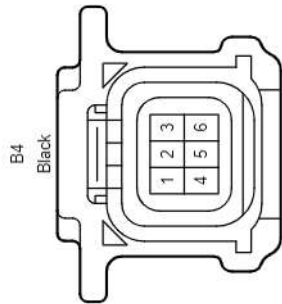


90980-12A59

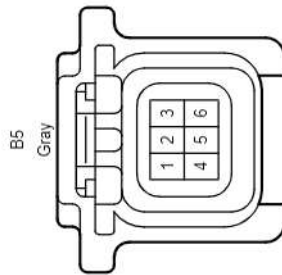


90980-12790

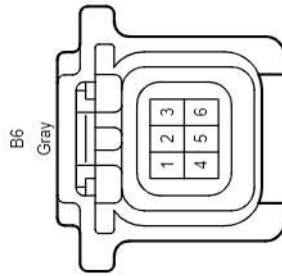


90980-12790

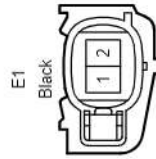



90980-11875

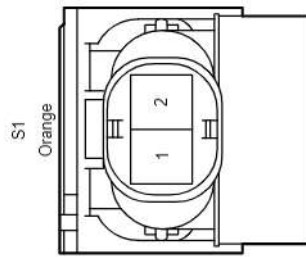

90980-12C21


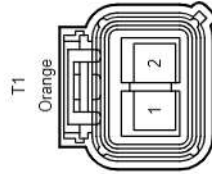



82824-0R330

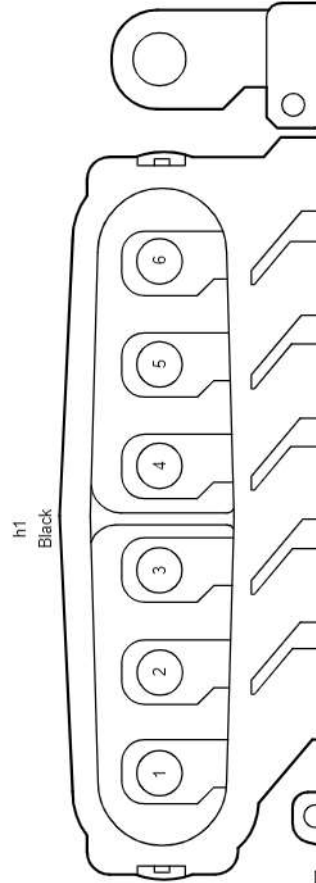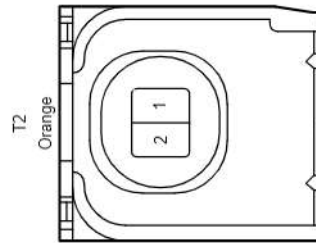

cardiagn.com


Position of Parts in Engine Compartment (LHD)

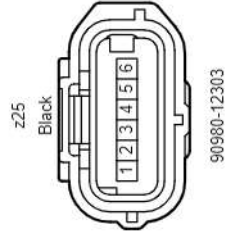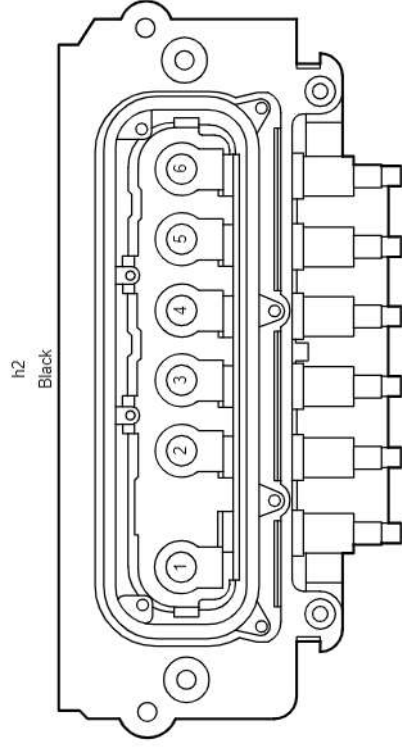

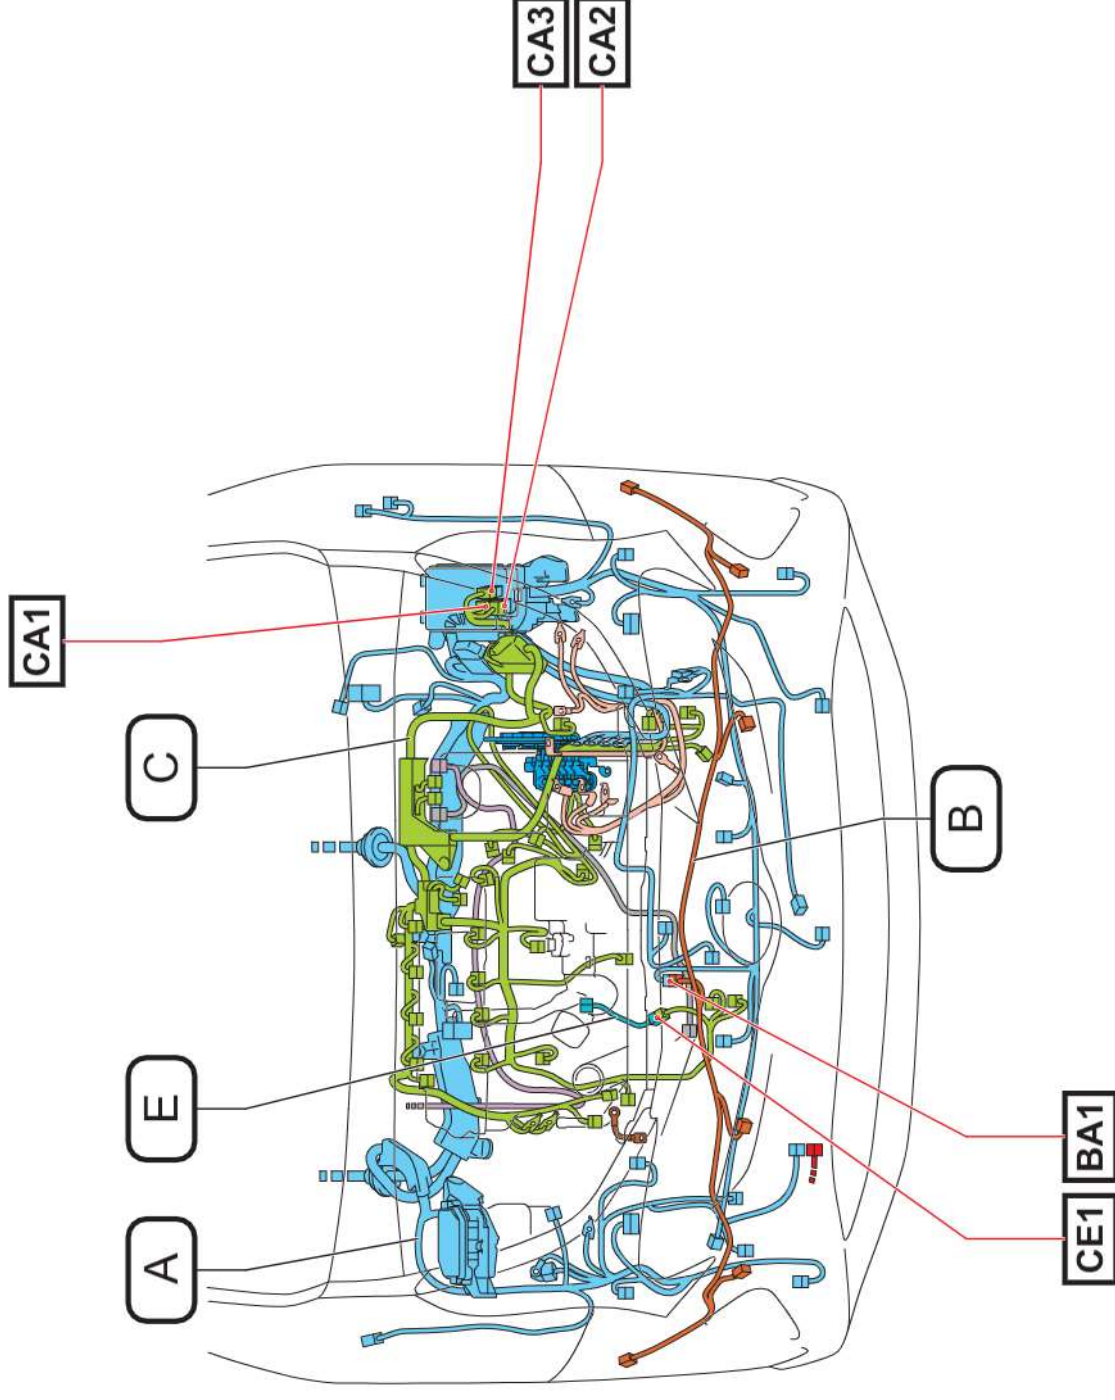


Wire and Wire in Engine Compartment (LHD)


BA1
Black

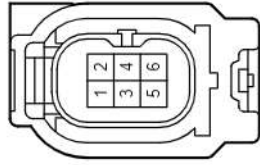


90980-12381

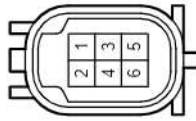

CA1
Gray

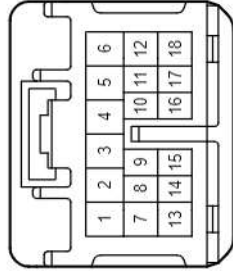


90980-12745

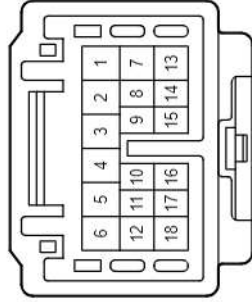


90980-12744

CA2
Black

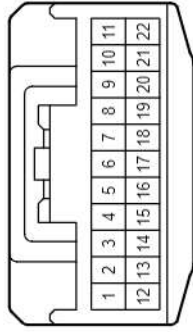


90980-12372

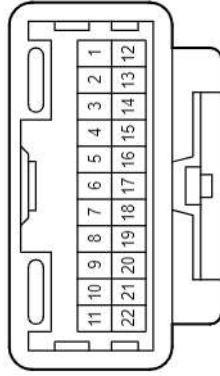


90980-12371

CA3
White

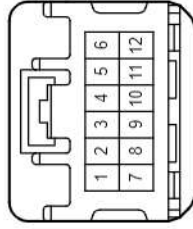


90980-12737

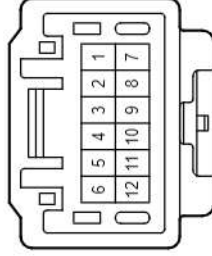


90980-12736


CE1
Gray

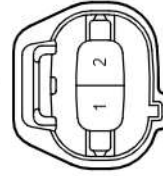


90980-11156

 

90980-11155

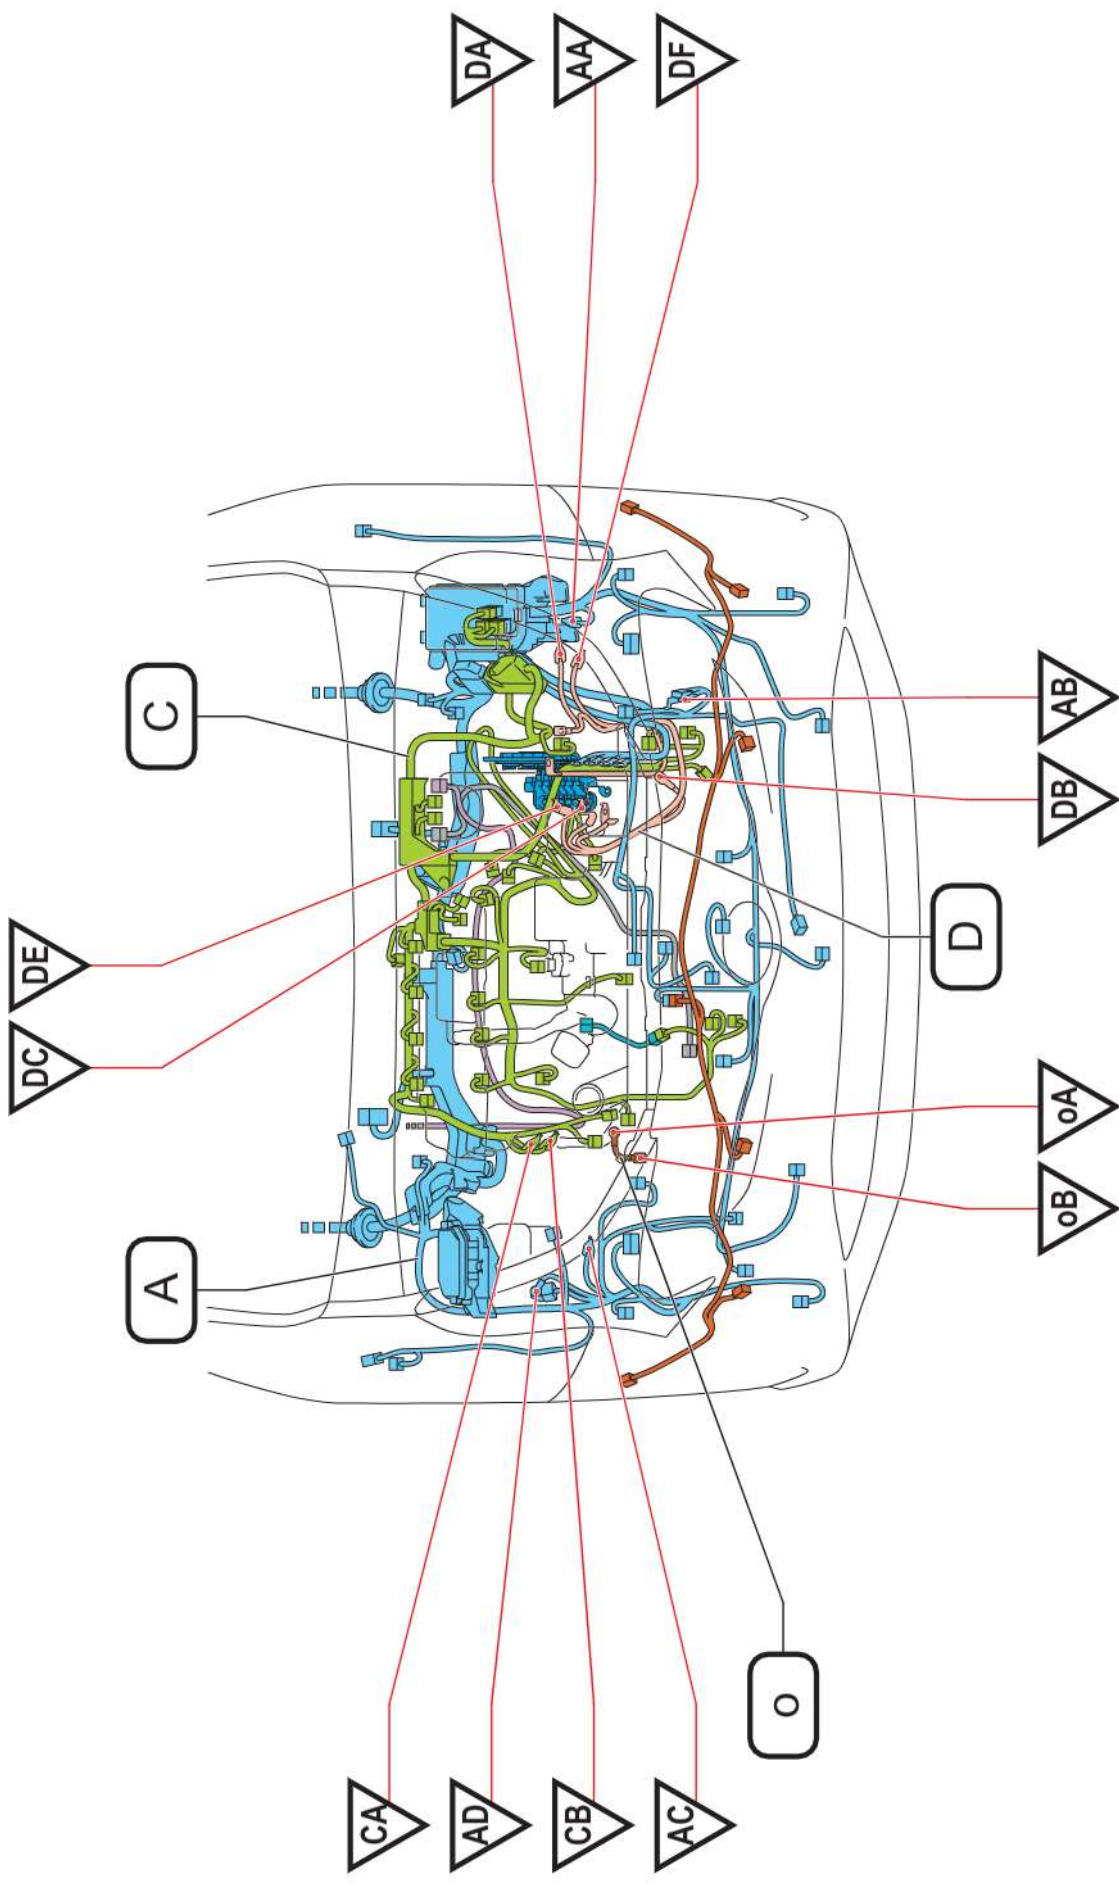













* 1:w/ Grille Shutter System
 * 2:w/o Grille Shutter System

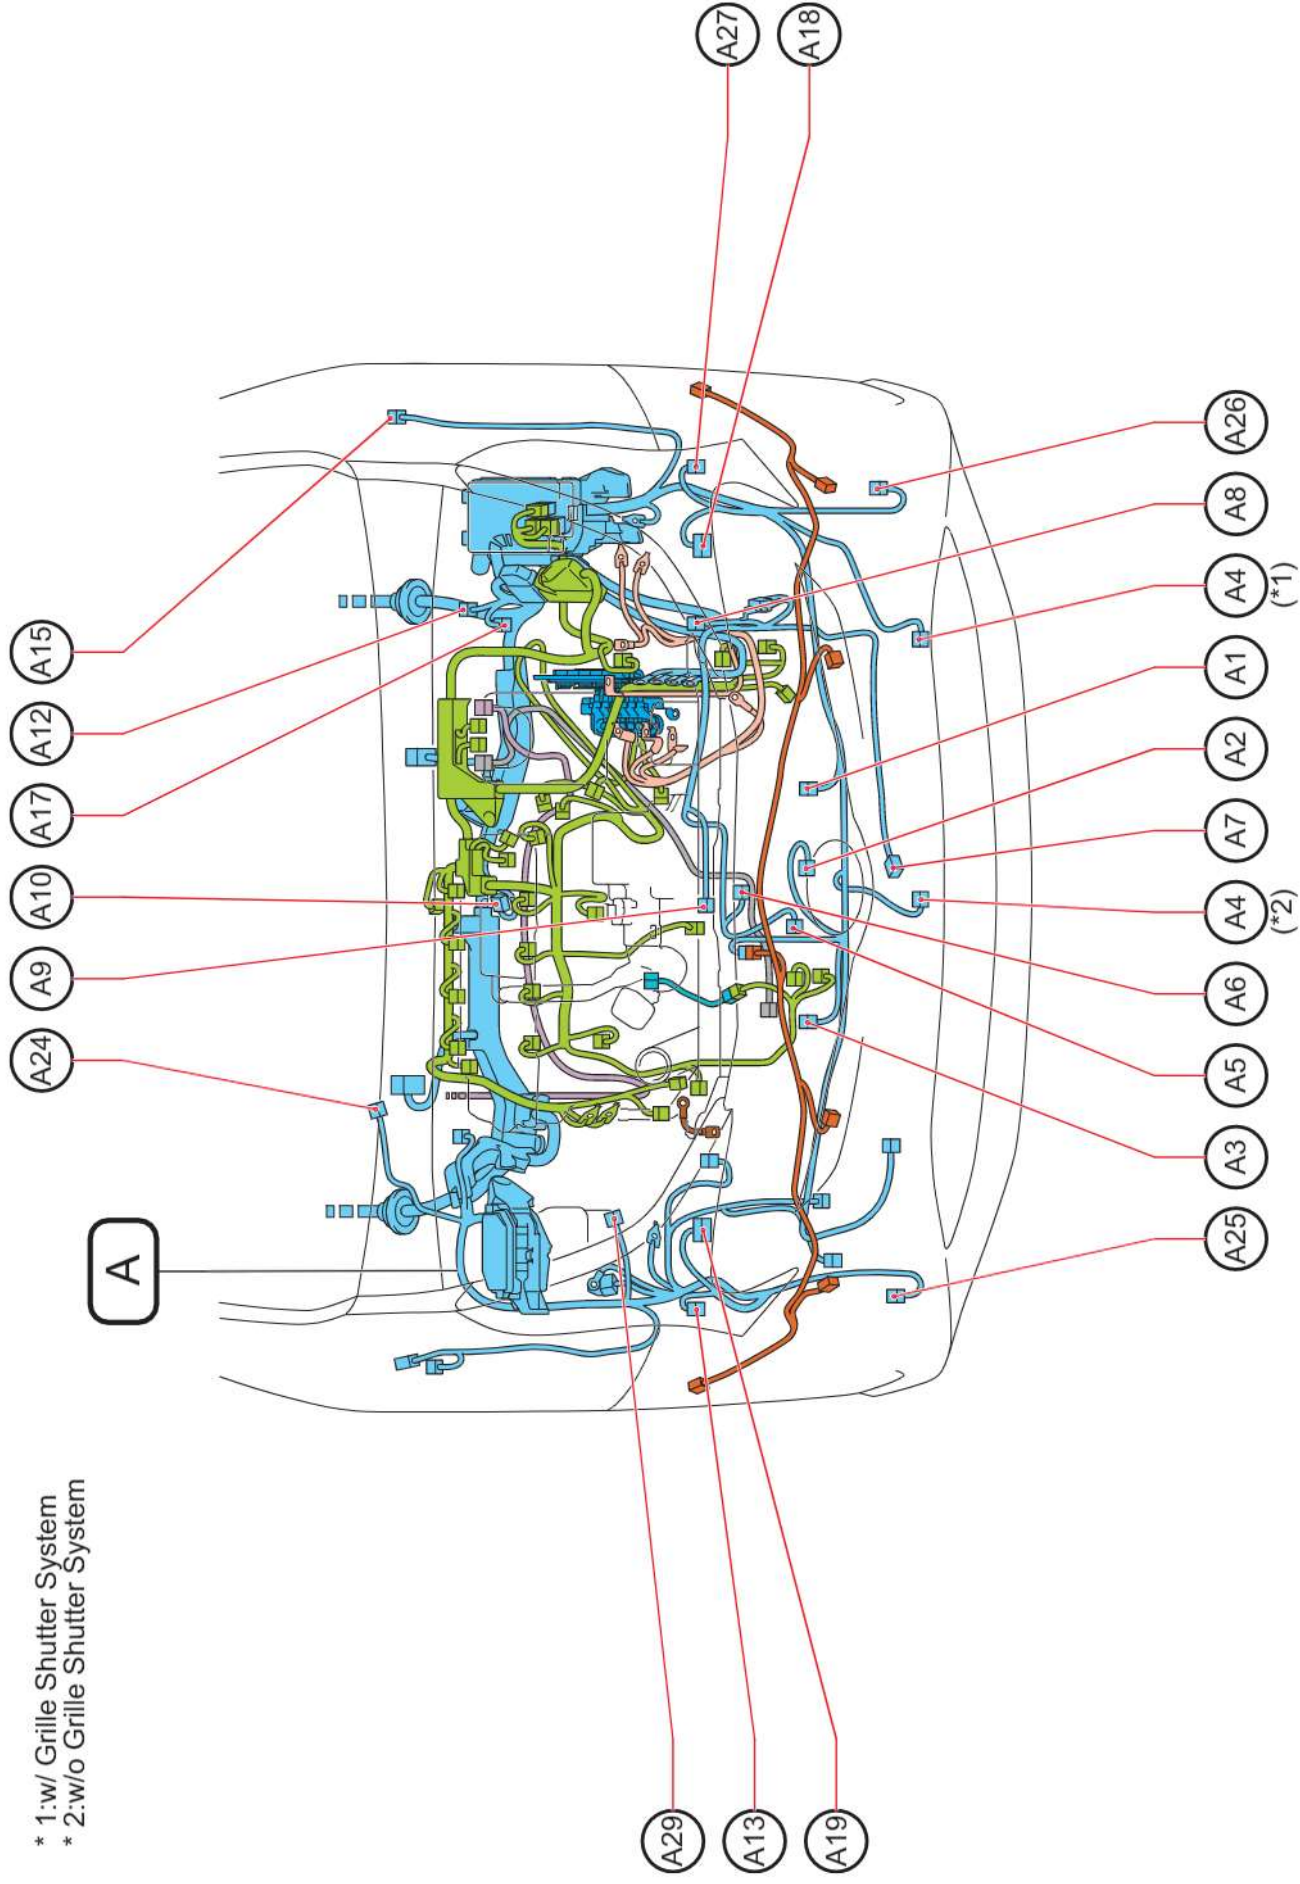




Position of Parts in Engine Compartment (RHD)


A1	Low Pitched Horn Assembly
A2	Millimeter Wave Radar Sensor Assembly
A3	High Pitched Horn Assembly
A4	No. 1 Cooler Thermistor
A5	Cooling Fan Motor RH
A6	Cooling Fan Motor LH
A7	Inverter Water Pump Assembly (with Motor)
A8	Front Airbag Sensor LH
A9	Hood Courtesy Switch (Hood Lock Assembly)
A10	Engine Coolant Temperature Sensor (for Exhaust Heat Recirculation System)
A12	Brake Booster Pump Assembly
A13	Front Turn Signal Light Assembly RH (Headlight Assembly RH)
A15	Front Speed Sensor LH
A17	Security Horn Assembly
A18	Headlight Light Control ECU Assembly LH (Headlight Assembly LH)
A19	Headlight Light Control ECU Assembly RH (Headlight Assembly RH)
A24	Windshield Wiper Motor Assembly
A25	Fog Light Assembly RH
A26	Fog Light Assembly LH
A27	Front Turn Signal Light Assembly LH (Headlight Assembly LH)
A29	A/C Tube & Accessory Assembly

  Position of Parts in Engine Compartment (RHD)

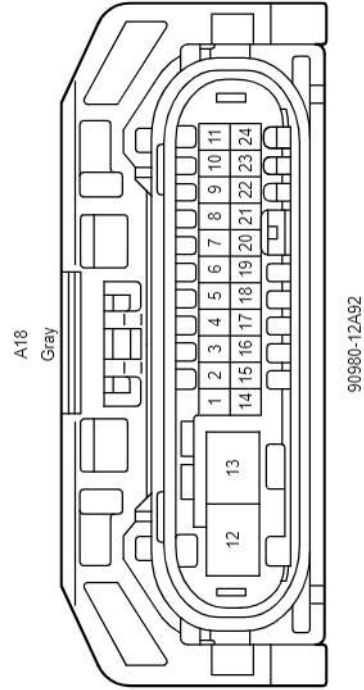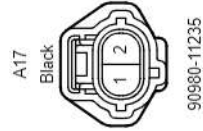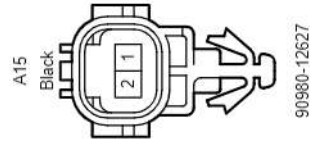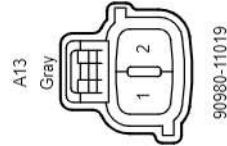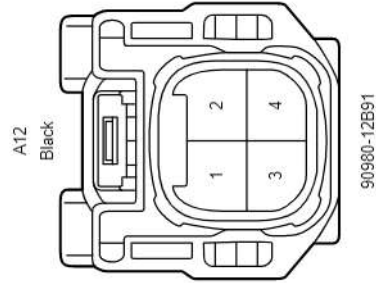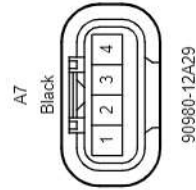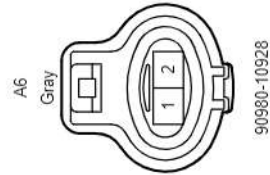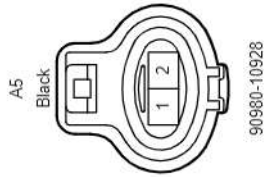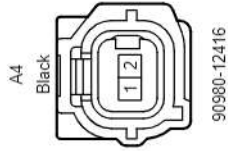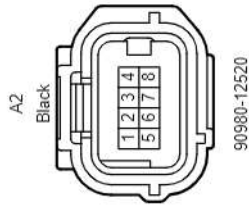

Position of Parts in Engine Compartment (RHD)






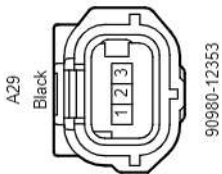
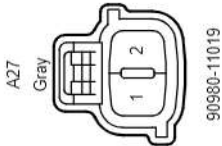
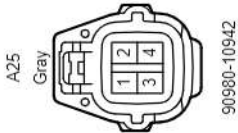


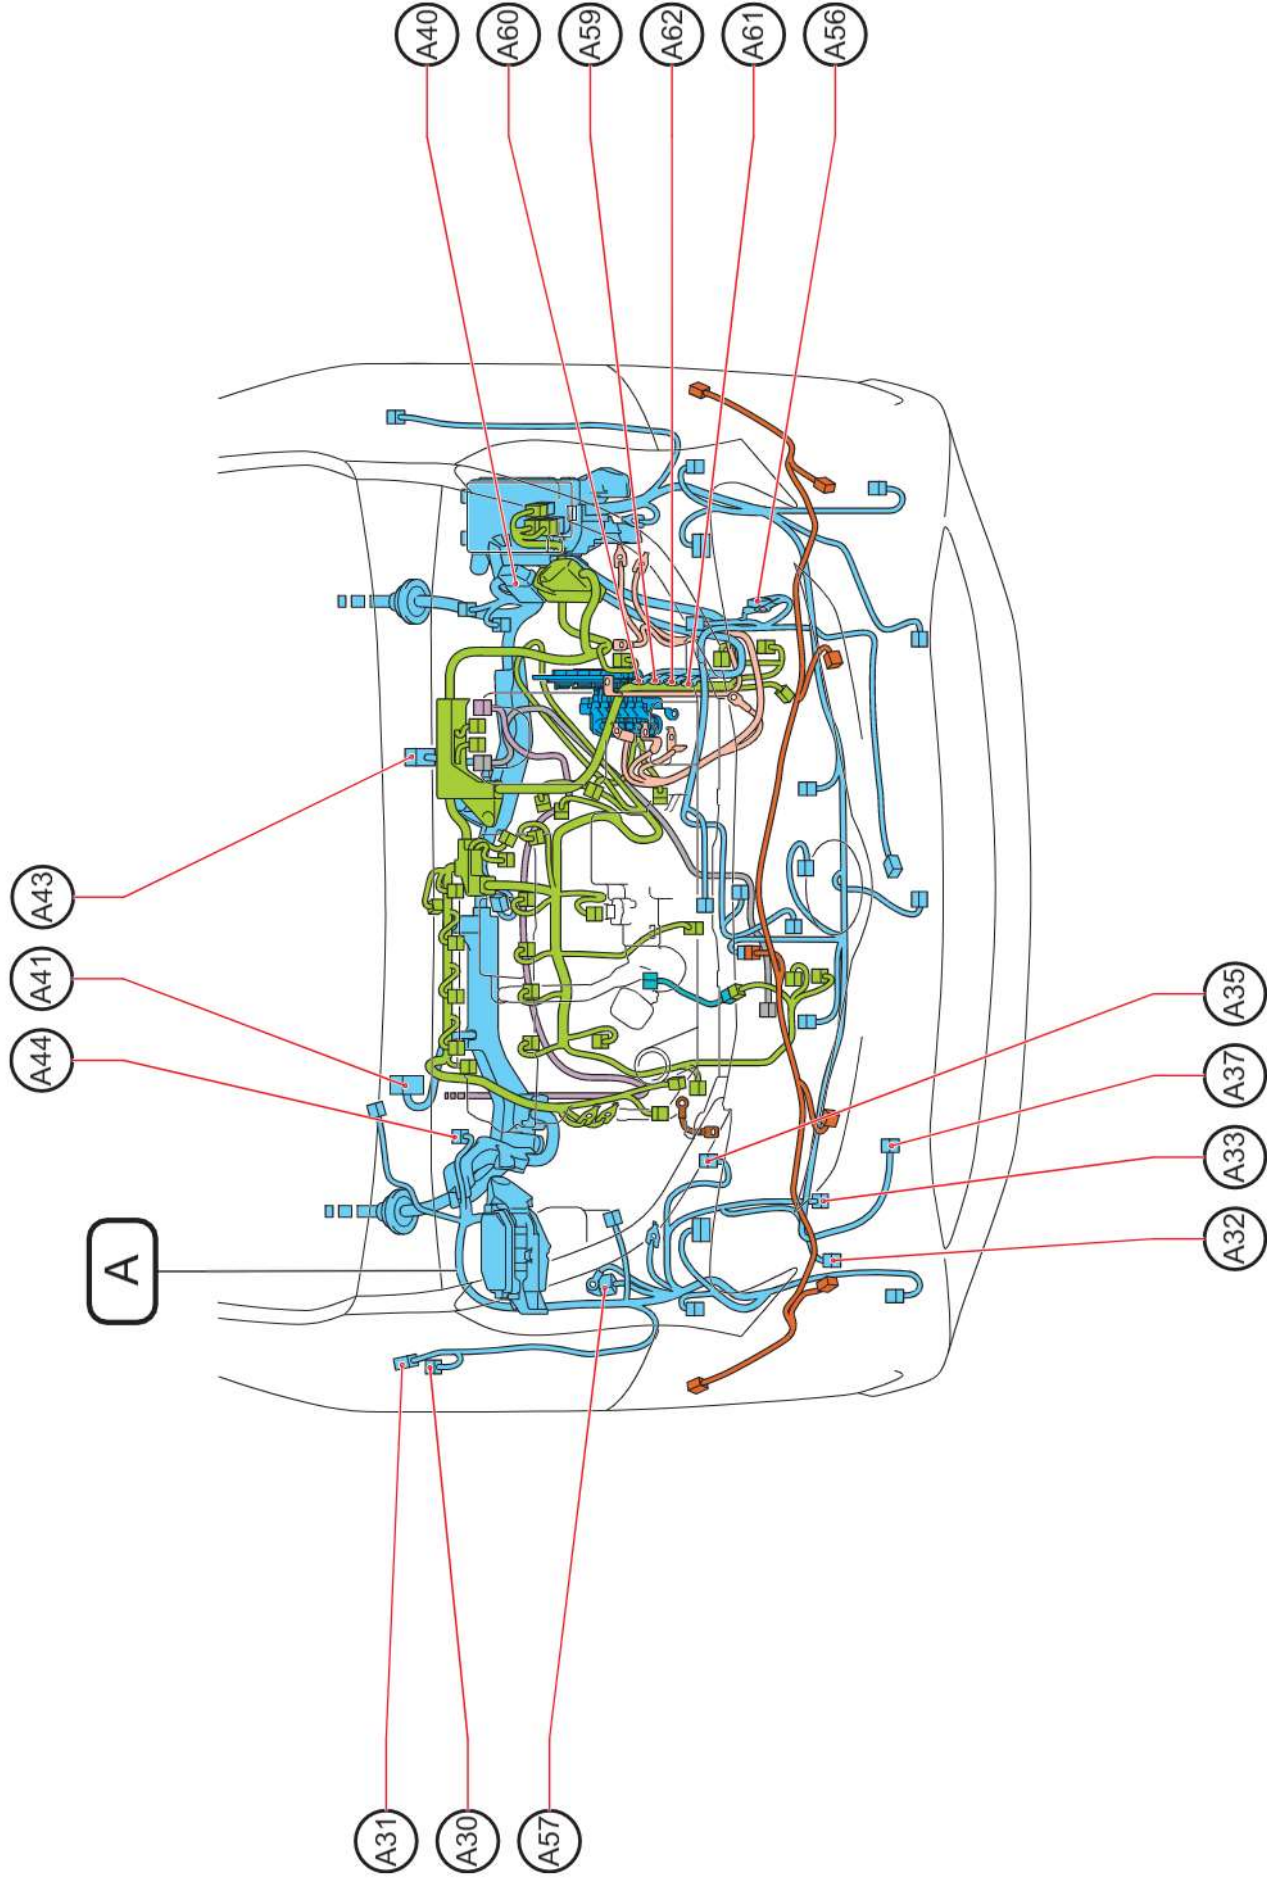

Position of Parts in Engine Compartment (RHD)



A30	Wireless Door Lock Buzzer
A31	Front Speed Sensor RH
A32	Level Warning Switch Assembly
A33	Windshield Washer Motor and Pump Assembly
A35	Front Airbag Sensor RH
A37	Swing Grille Actuator Assembly
A40	ECM
A41	Brake Booster with Master Cylinder Assembly
A43	Brake Actuator Assembly
A44	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A56	No. 1 Ground Junction Connector
A57	No. 2 Ground Junction Connector
A59	Fusible Link Block Assembly
A60	Fusible Link Block Assembly
A61	Fusible Link Block Assembly
A62	Fusible Link Block Assembly

Position of Parts in Engine Compartment (RHD)

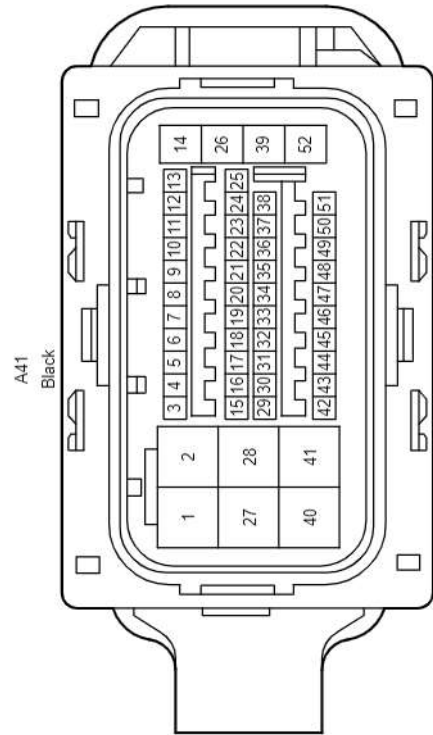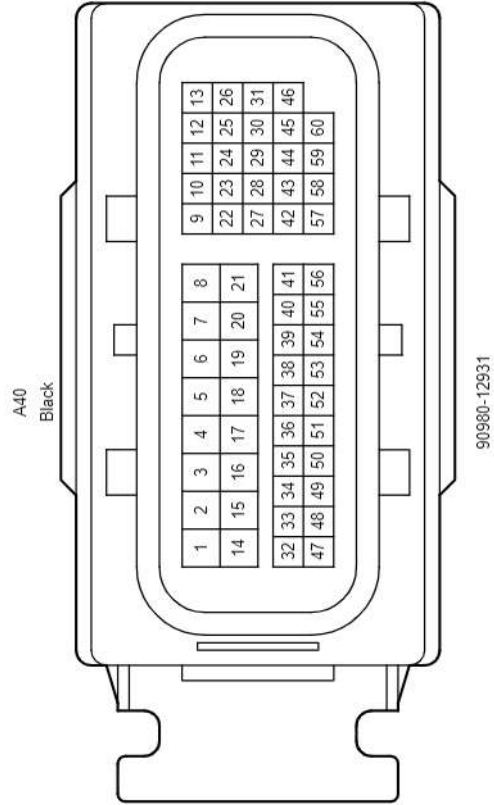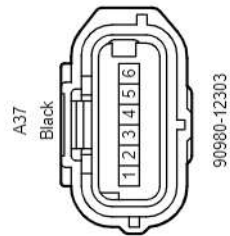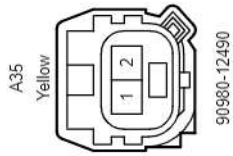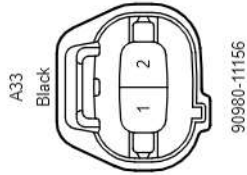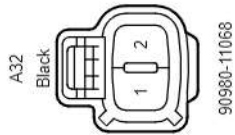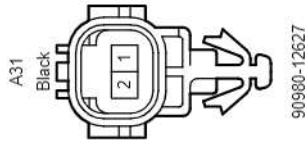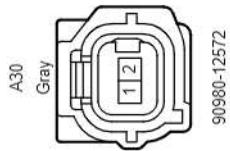



Position of Parts in Engine Compartment (RHD)

A56
Black

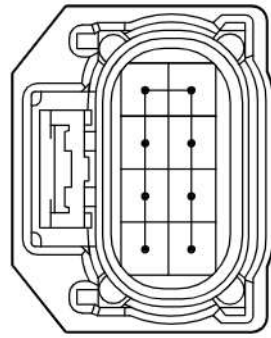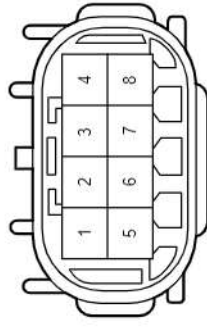

90980-12B56

A57
Black

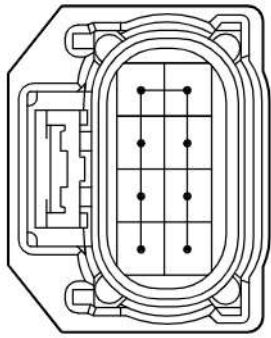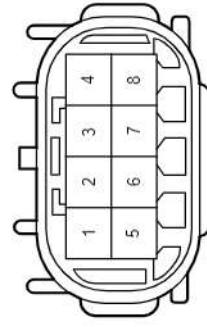

90980-12B56

A61



A62




A59



A60








Position of Parts in Engine Compartment (RHD)





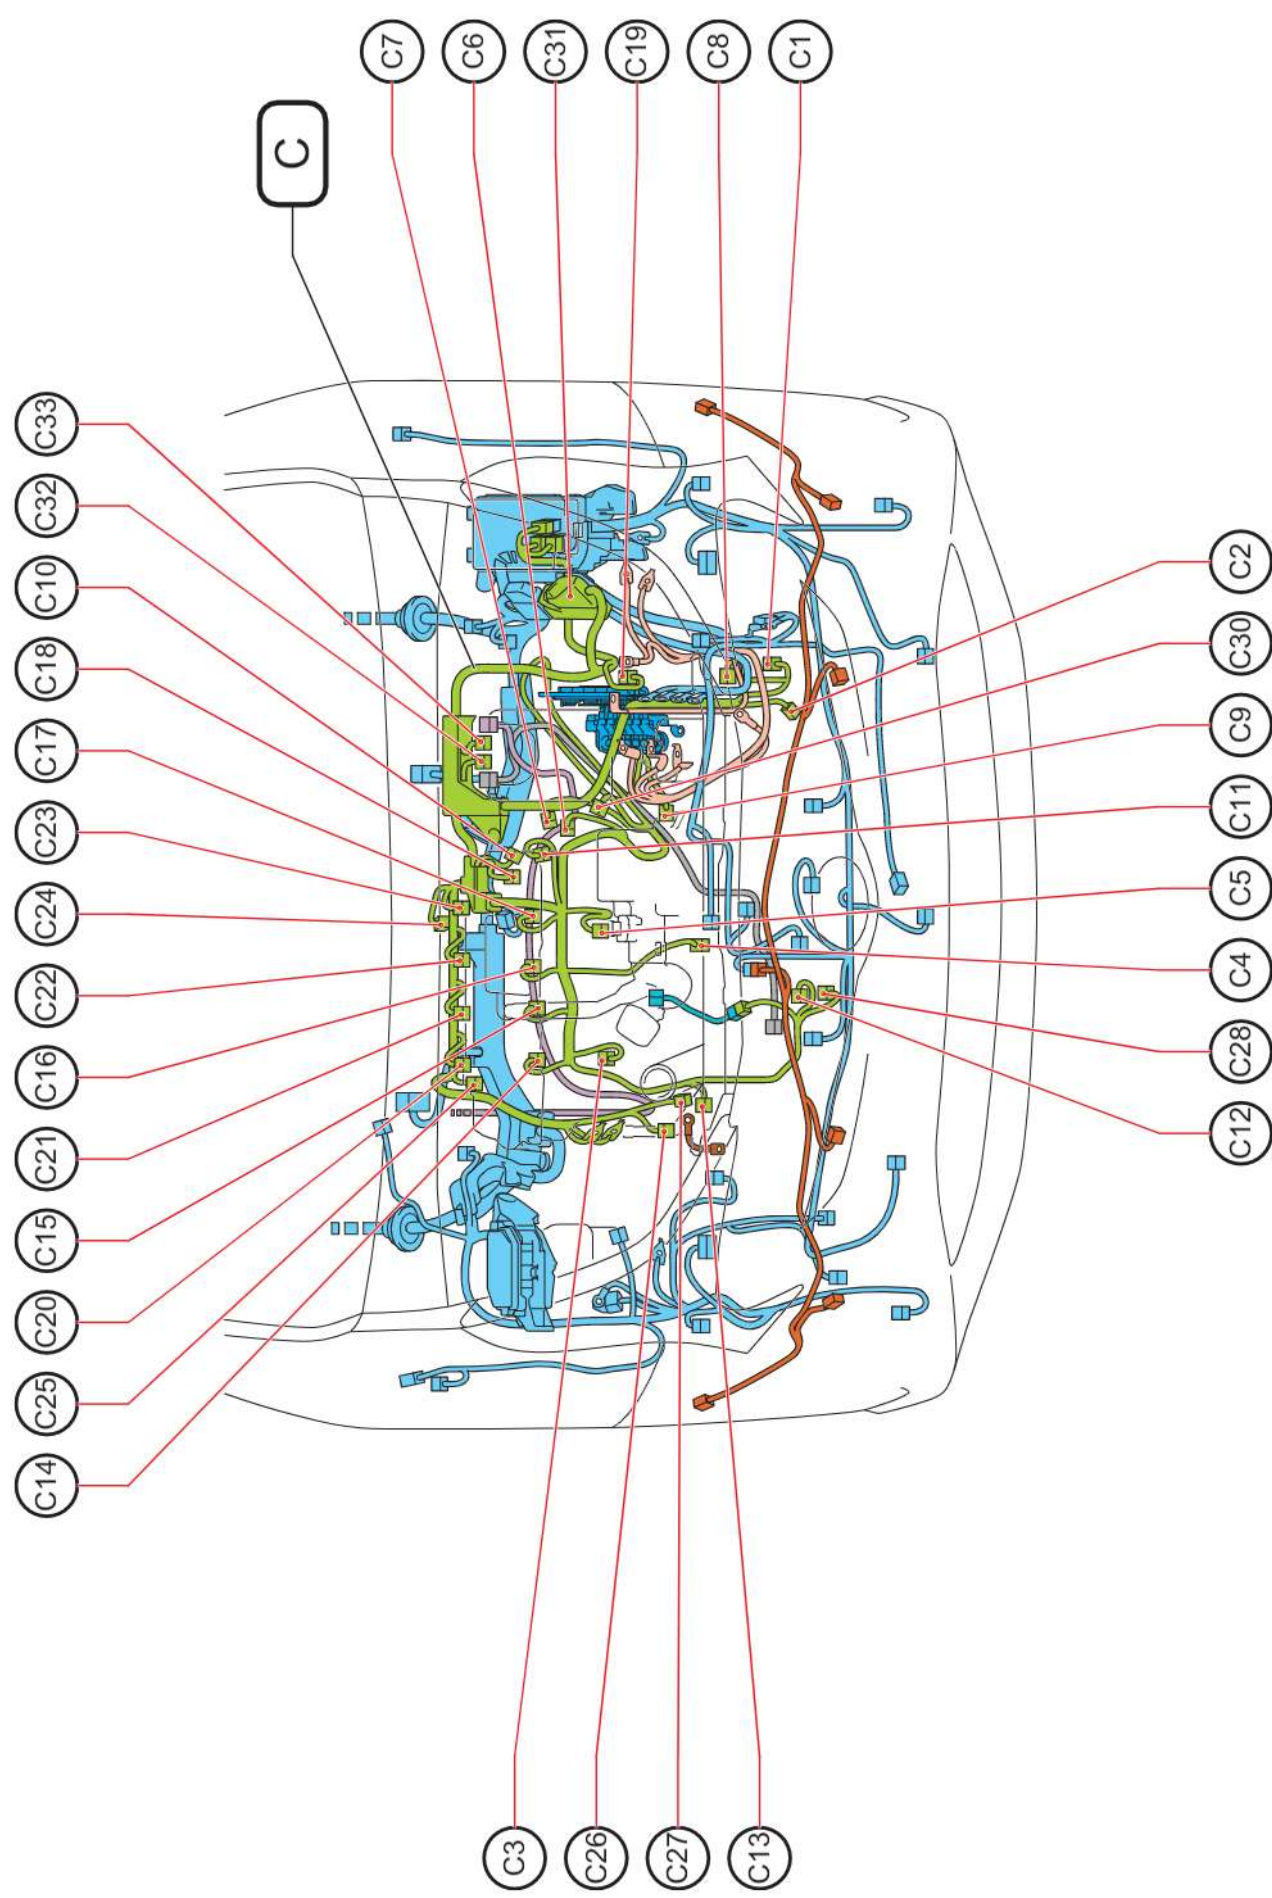



C1	Hybrid Vehicle Transaxle Assembly
C2	Shift Control Actuator Assembly
C3	E.F.I. Vacuum Sensor Assembly
C4	Throttle Body Assembly
C5	Intake Mass Air Flow Meter Sub-Assembly
C6	E.F.I. Engine Coolant Temperature Sensor
C7	Engine Coolant Temperature Sensor (Heater)
C8	Hybrid Vehicle Transaxle Assembly
C9	Oxygen Sensor (Bank 1 Sensor 2)
C10	EGR Valve Assembly
C11	Purge VSV
C12	Compressor with Motor Assembly
C13	Engine Water Pump Assembly
C14	Fuel Injector Assembly No. 1
C15	Fuel Injector Assembly No. 2
C16	Fuel Injector Assembly No. 3
C17	Fuel Injector Assembly No. 4
C18	Cam Position Sensor
C19	Battery State Sensor Assembly
C20	Ignition Coil Assembly No. 1
C21	Ignition Coil Assembly No. 2
C22	Ignition Coil Assembly No. 3
C23	Ignition Coil Assembly No. 4
C24	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C25	Camshaft Timing Oil Control Valve Assembly
C26	Engine Oil Pressure Switch Assembly
C27	Crank Position Sensor
C28	Engine Oil Level Sensor
C30	Water Valve
C31	ECM
C32	Inverter with Converter Assembly
C33	Inverter with Converter Assembly

 Position of Parts in Engine Compartment (RHD)

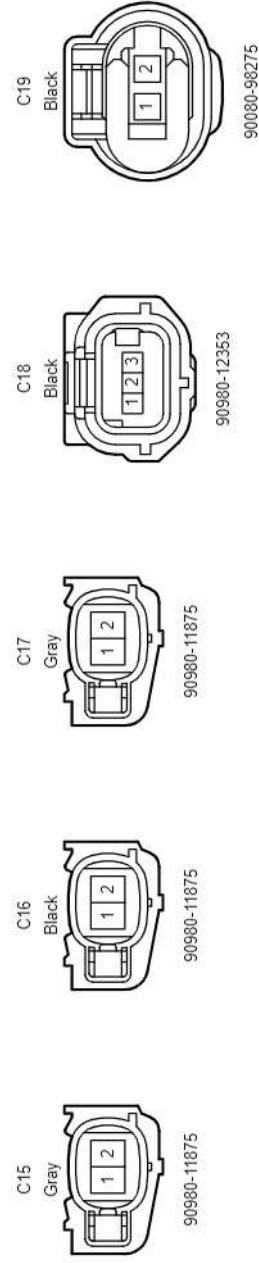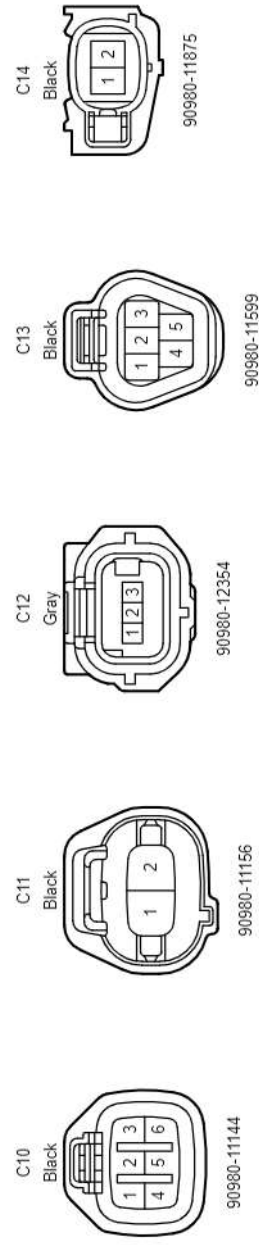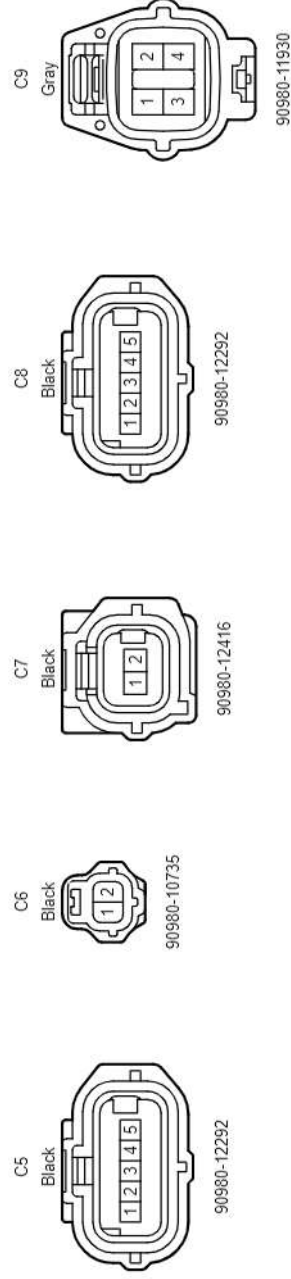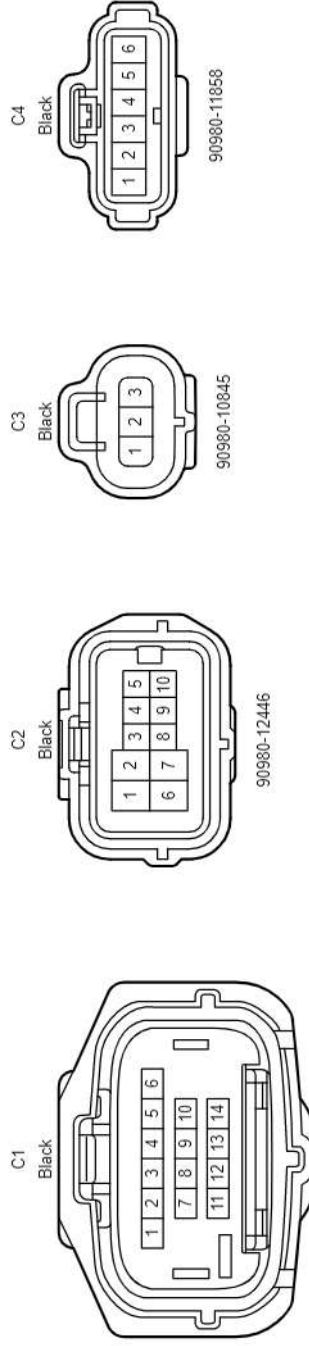












Position of Parts in Engine Compartment (RHD)

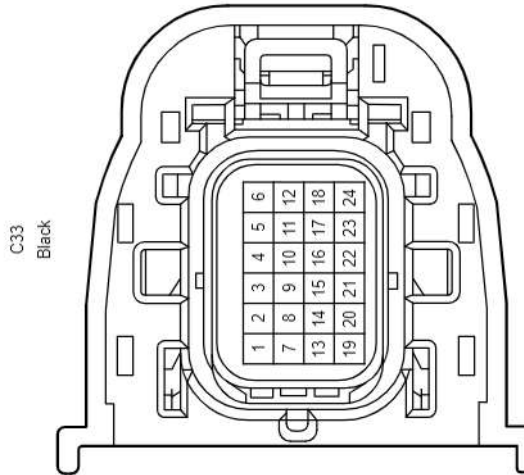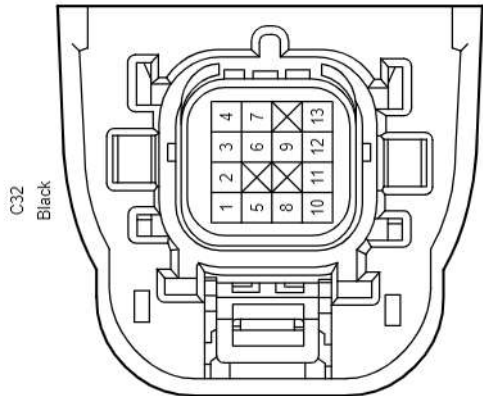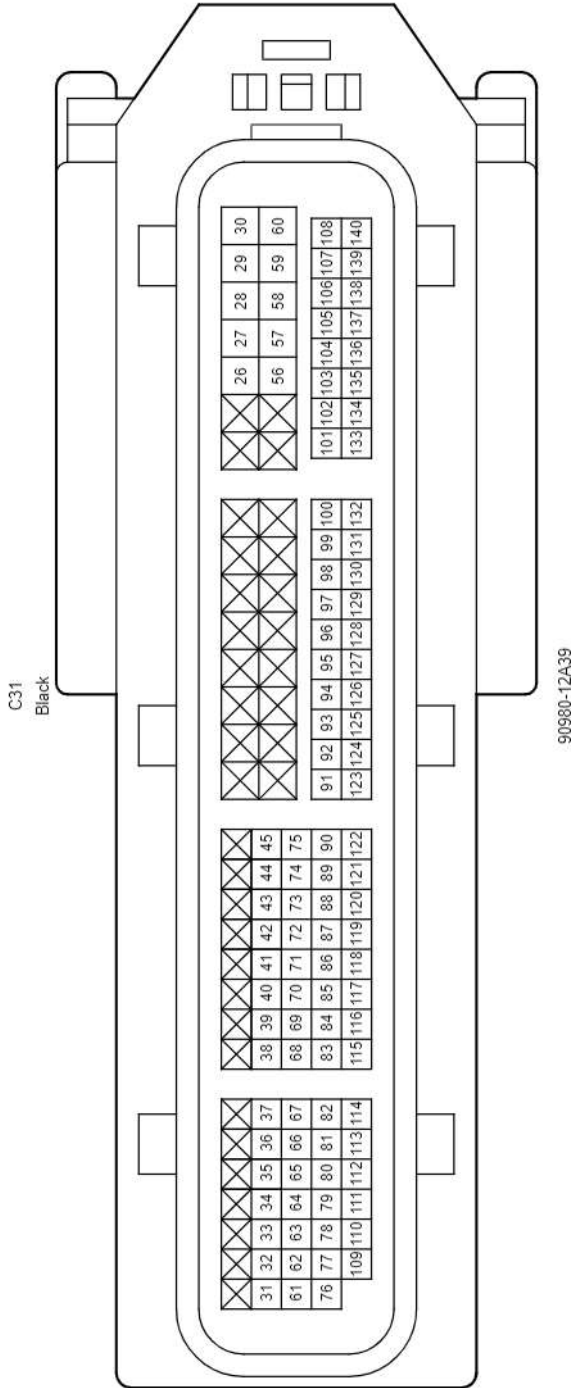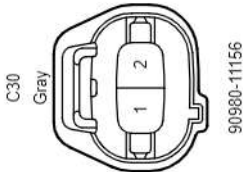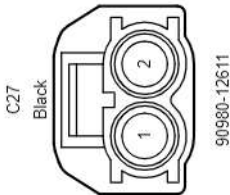


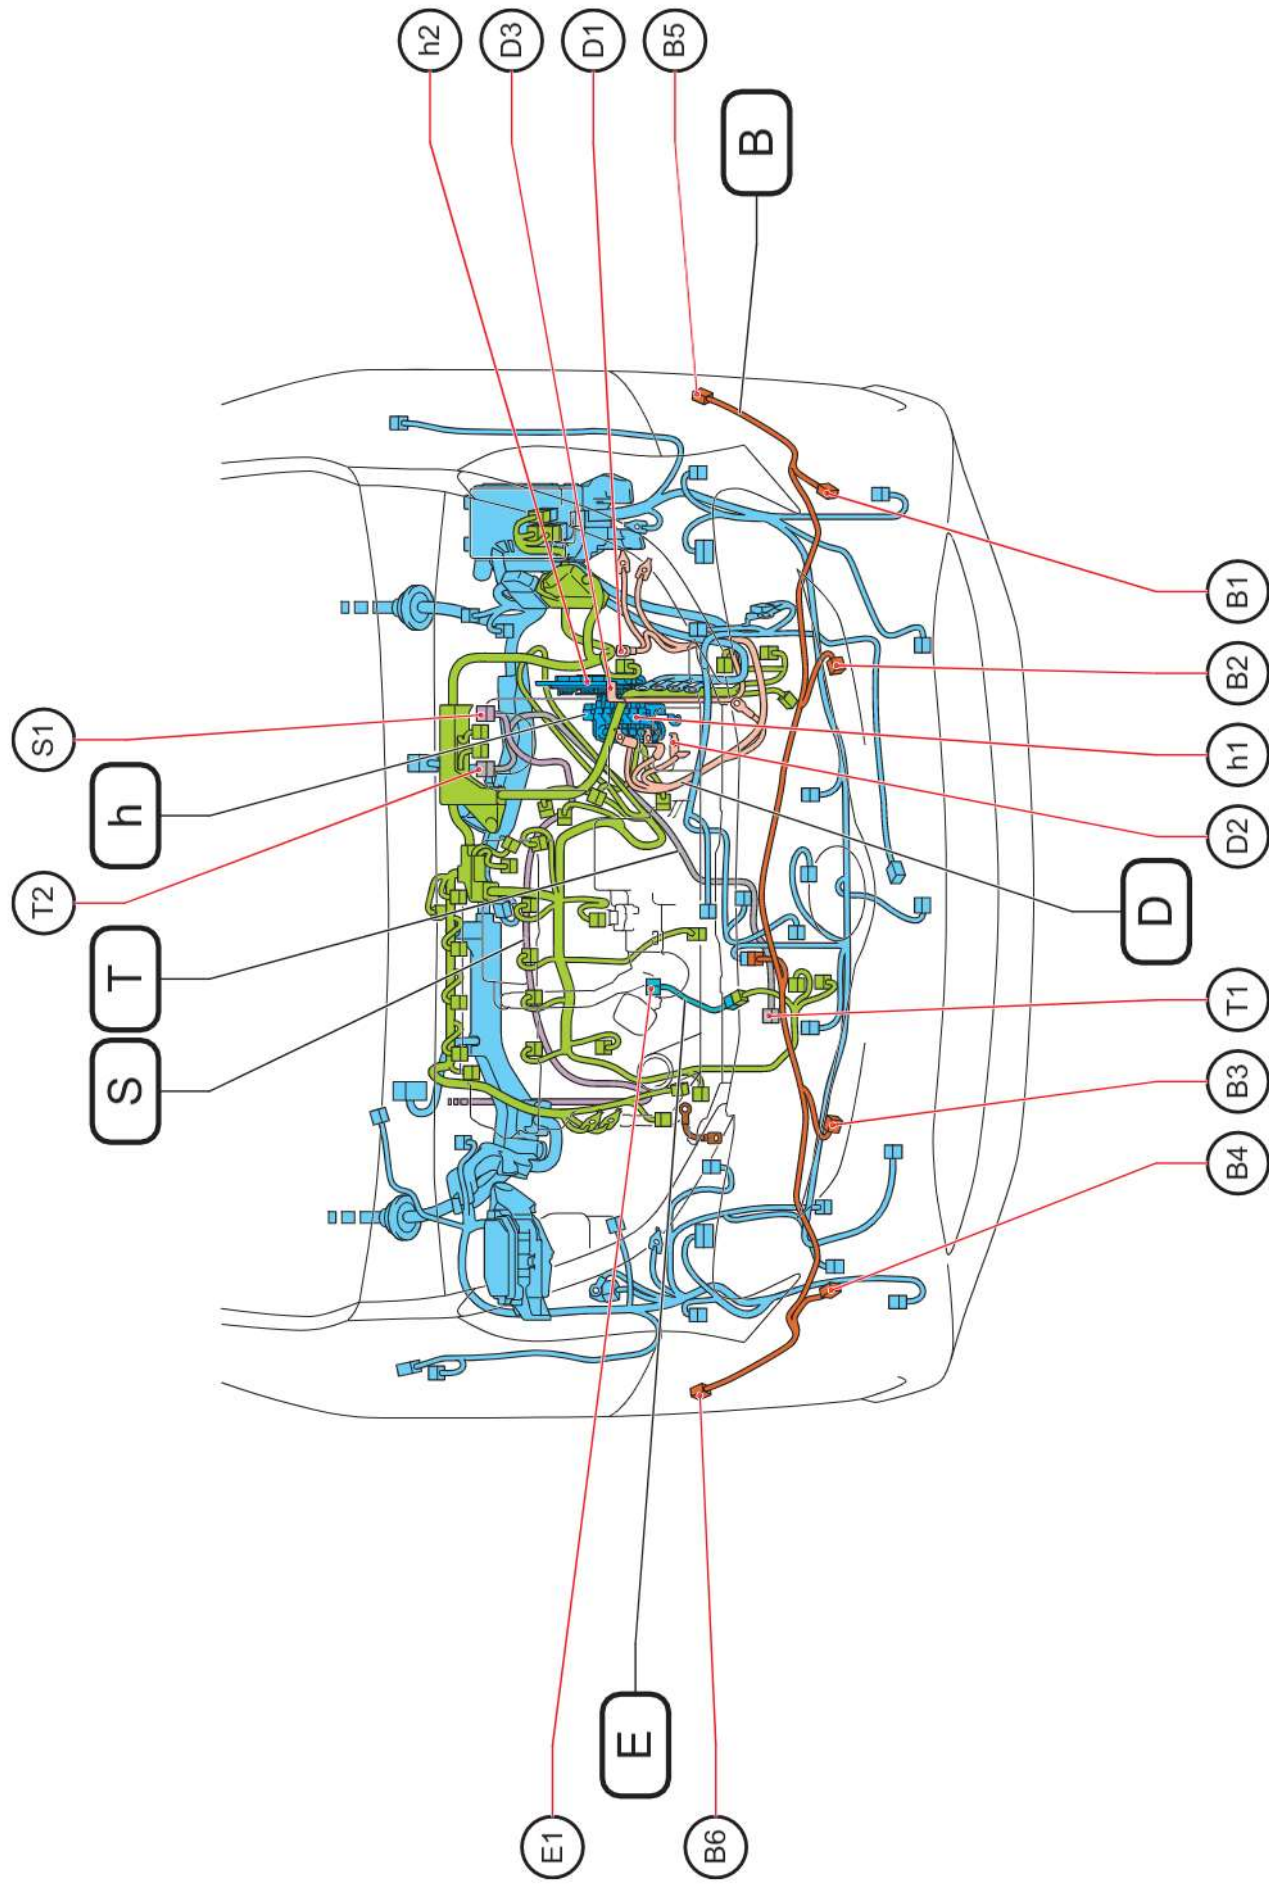


B1	Front Ultrasonic Sensor Corner LH
B2	Front Ultrasonic Sensor Center LH
B3	Front Ultrasonic Sensor Center RH
B4	Front Ultrasonic Sensor Corner RH
B5	Front Ultrasonic Sensor Side LH
B6	Front Ultrasonic Sensor Side RH
D1	Battery
D2	Inverter with Converter Assembly
D3	Fusible Link Block Assembly
E1	Knock Control Sensor (Bank 1)
S1	Inverter with Converter Assembly
T1	Compressor with Motor Assembly
T2	Inverter with Converter Assembly
h1	Hybrid Vehicle Transaxle Assembly
h2	Inverter with Converter Assembly

Position of Parts in Engine Compartment (RHD)

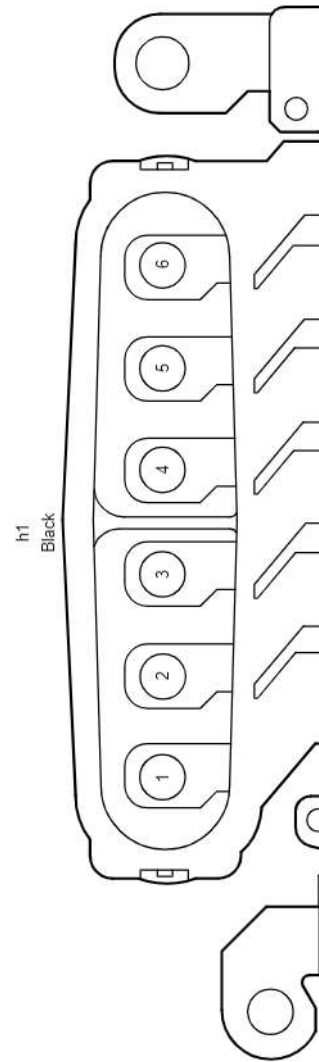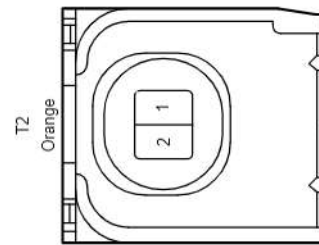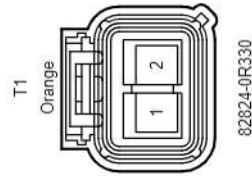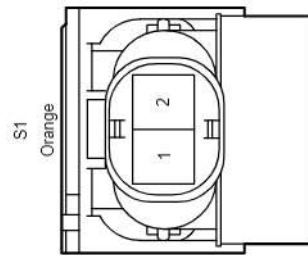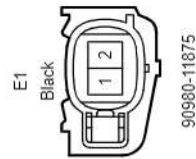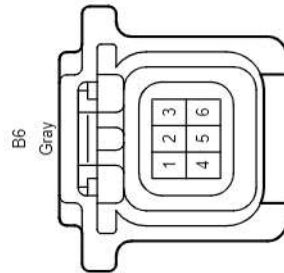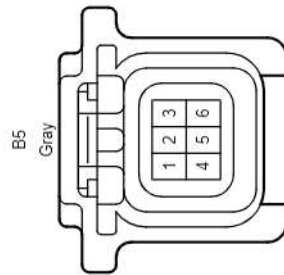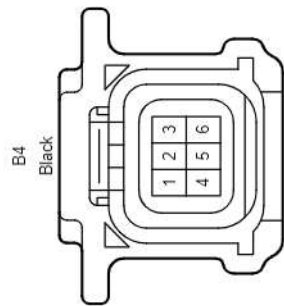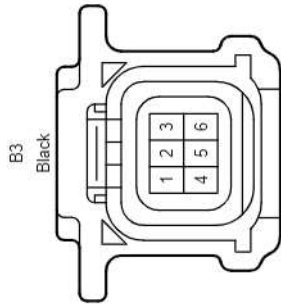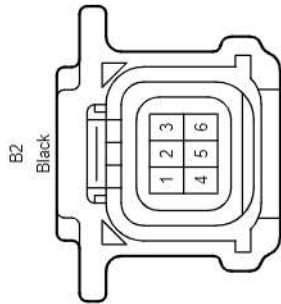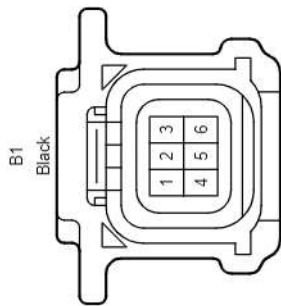


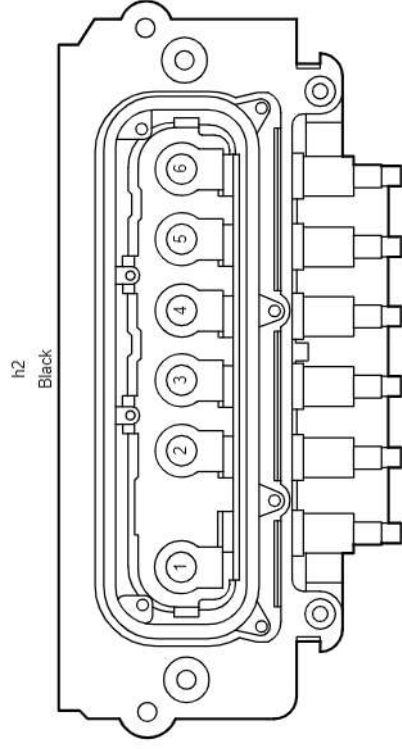

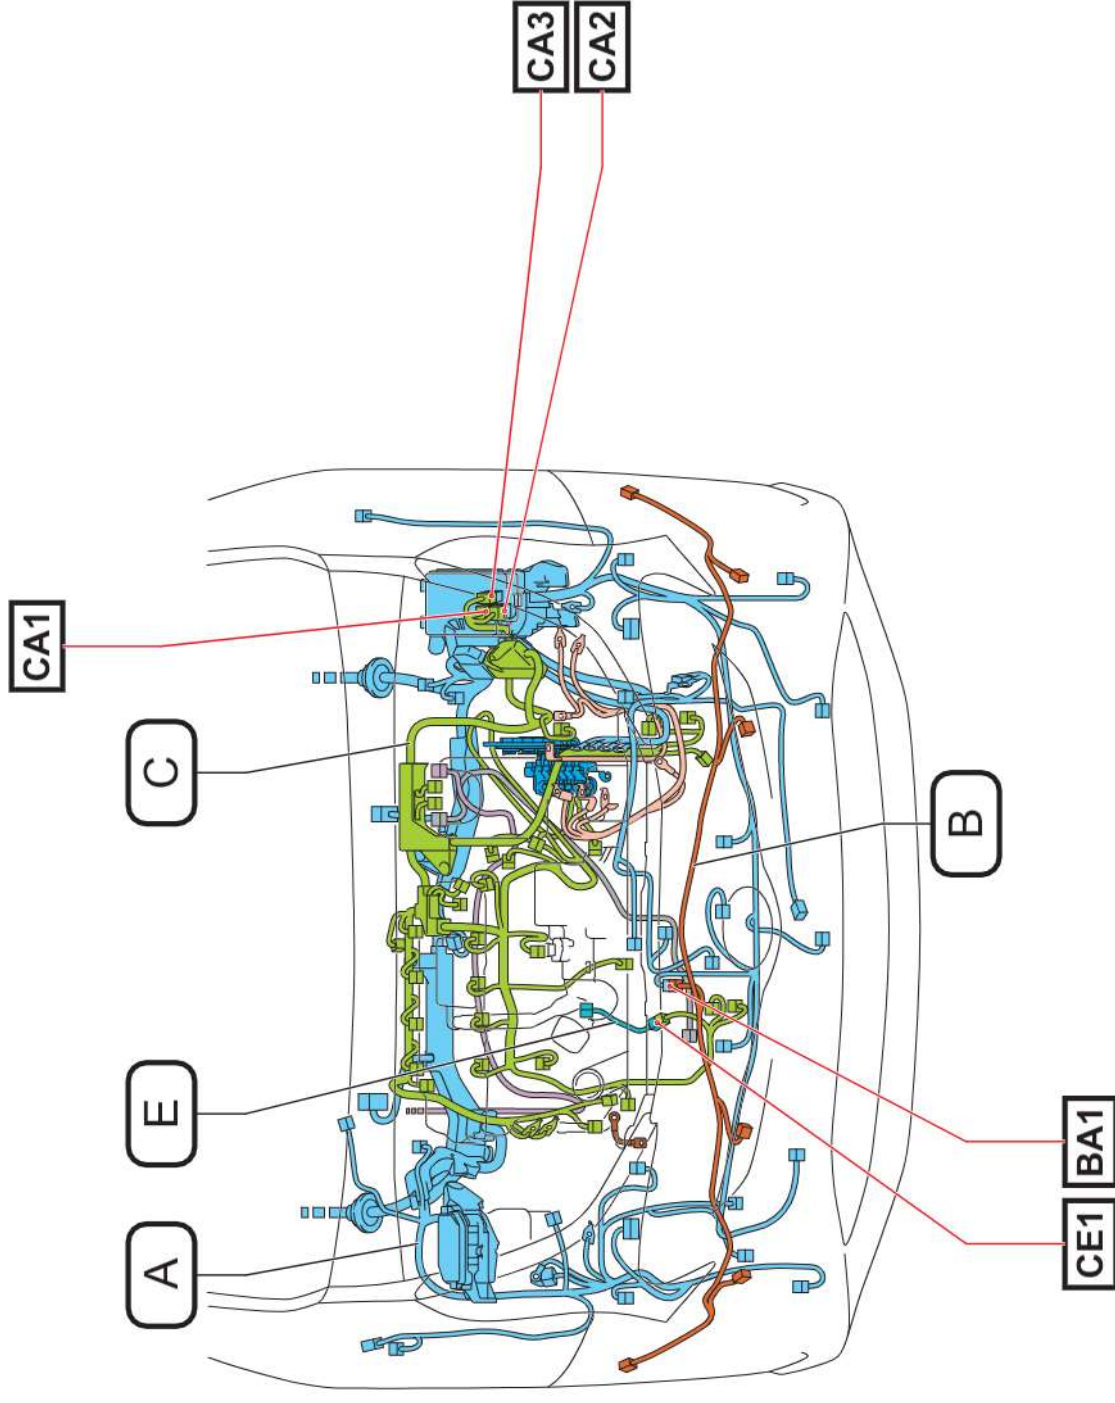


Wire and Wire in Engine Compartment (RHD)


BA1
Black

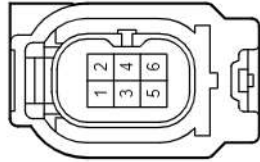


90980-12381

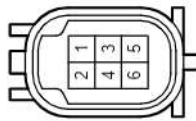

CA1
Gray

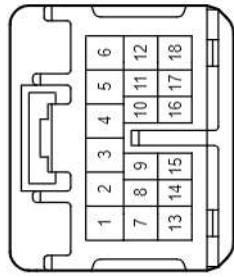


90980-12745

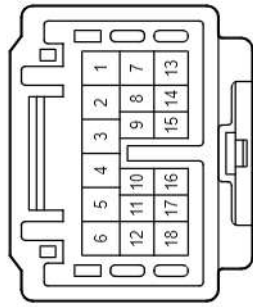


90980-12744

CA2
Black

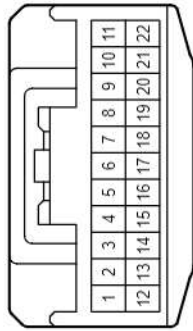


90980-12372

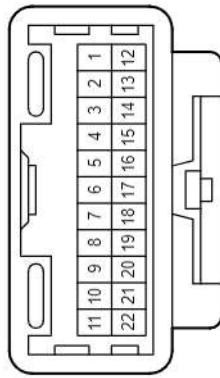


90980-12371

CA3
White

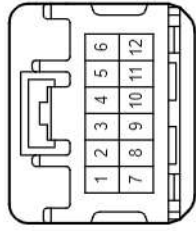


90980-12737

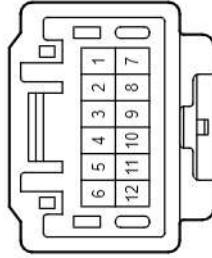

90980-12736

CE1
Gray

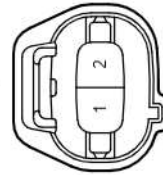



90980-11156



90980-11155


Ground Points in Instrument Panel (LHD)

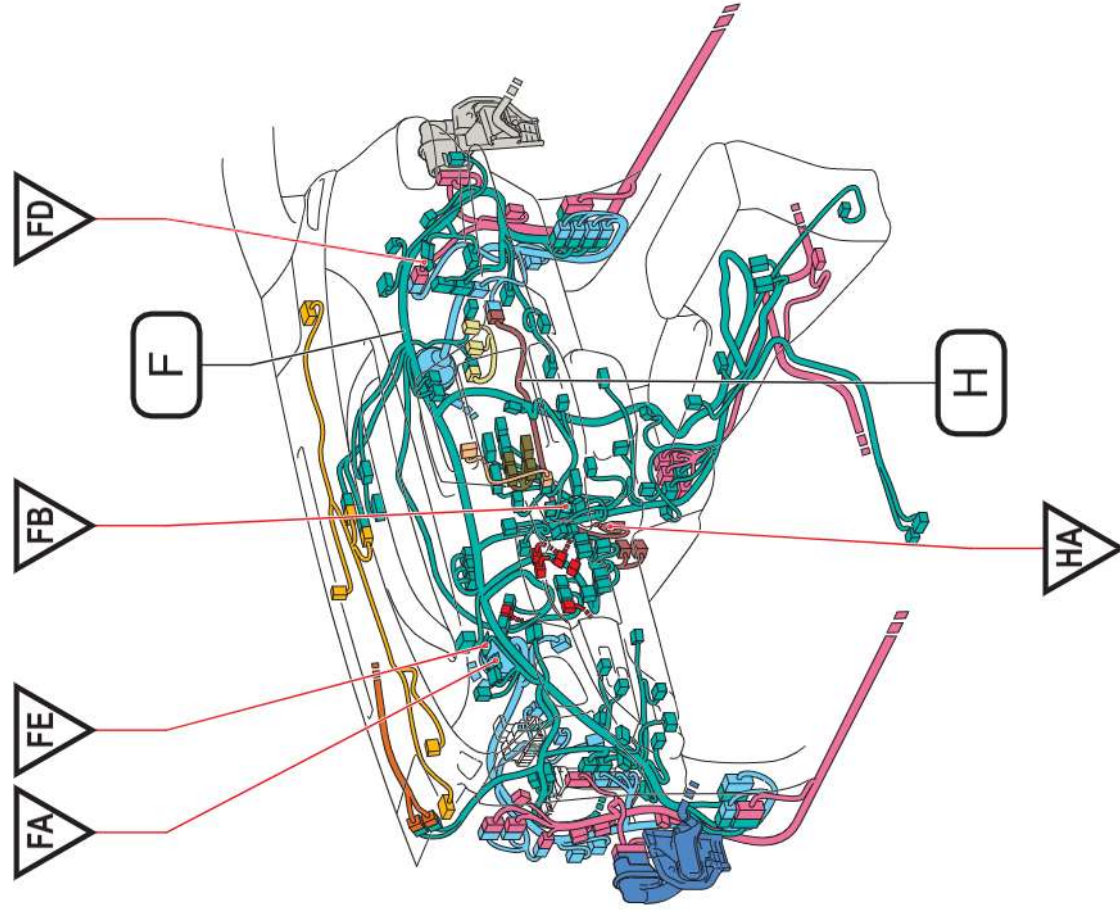

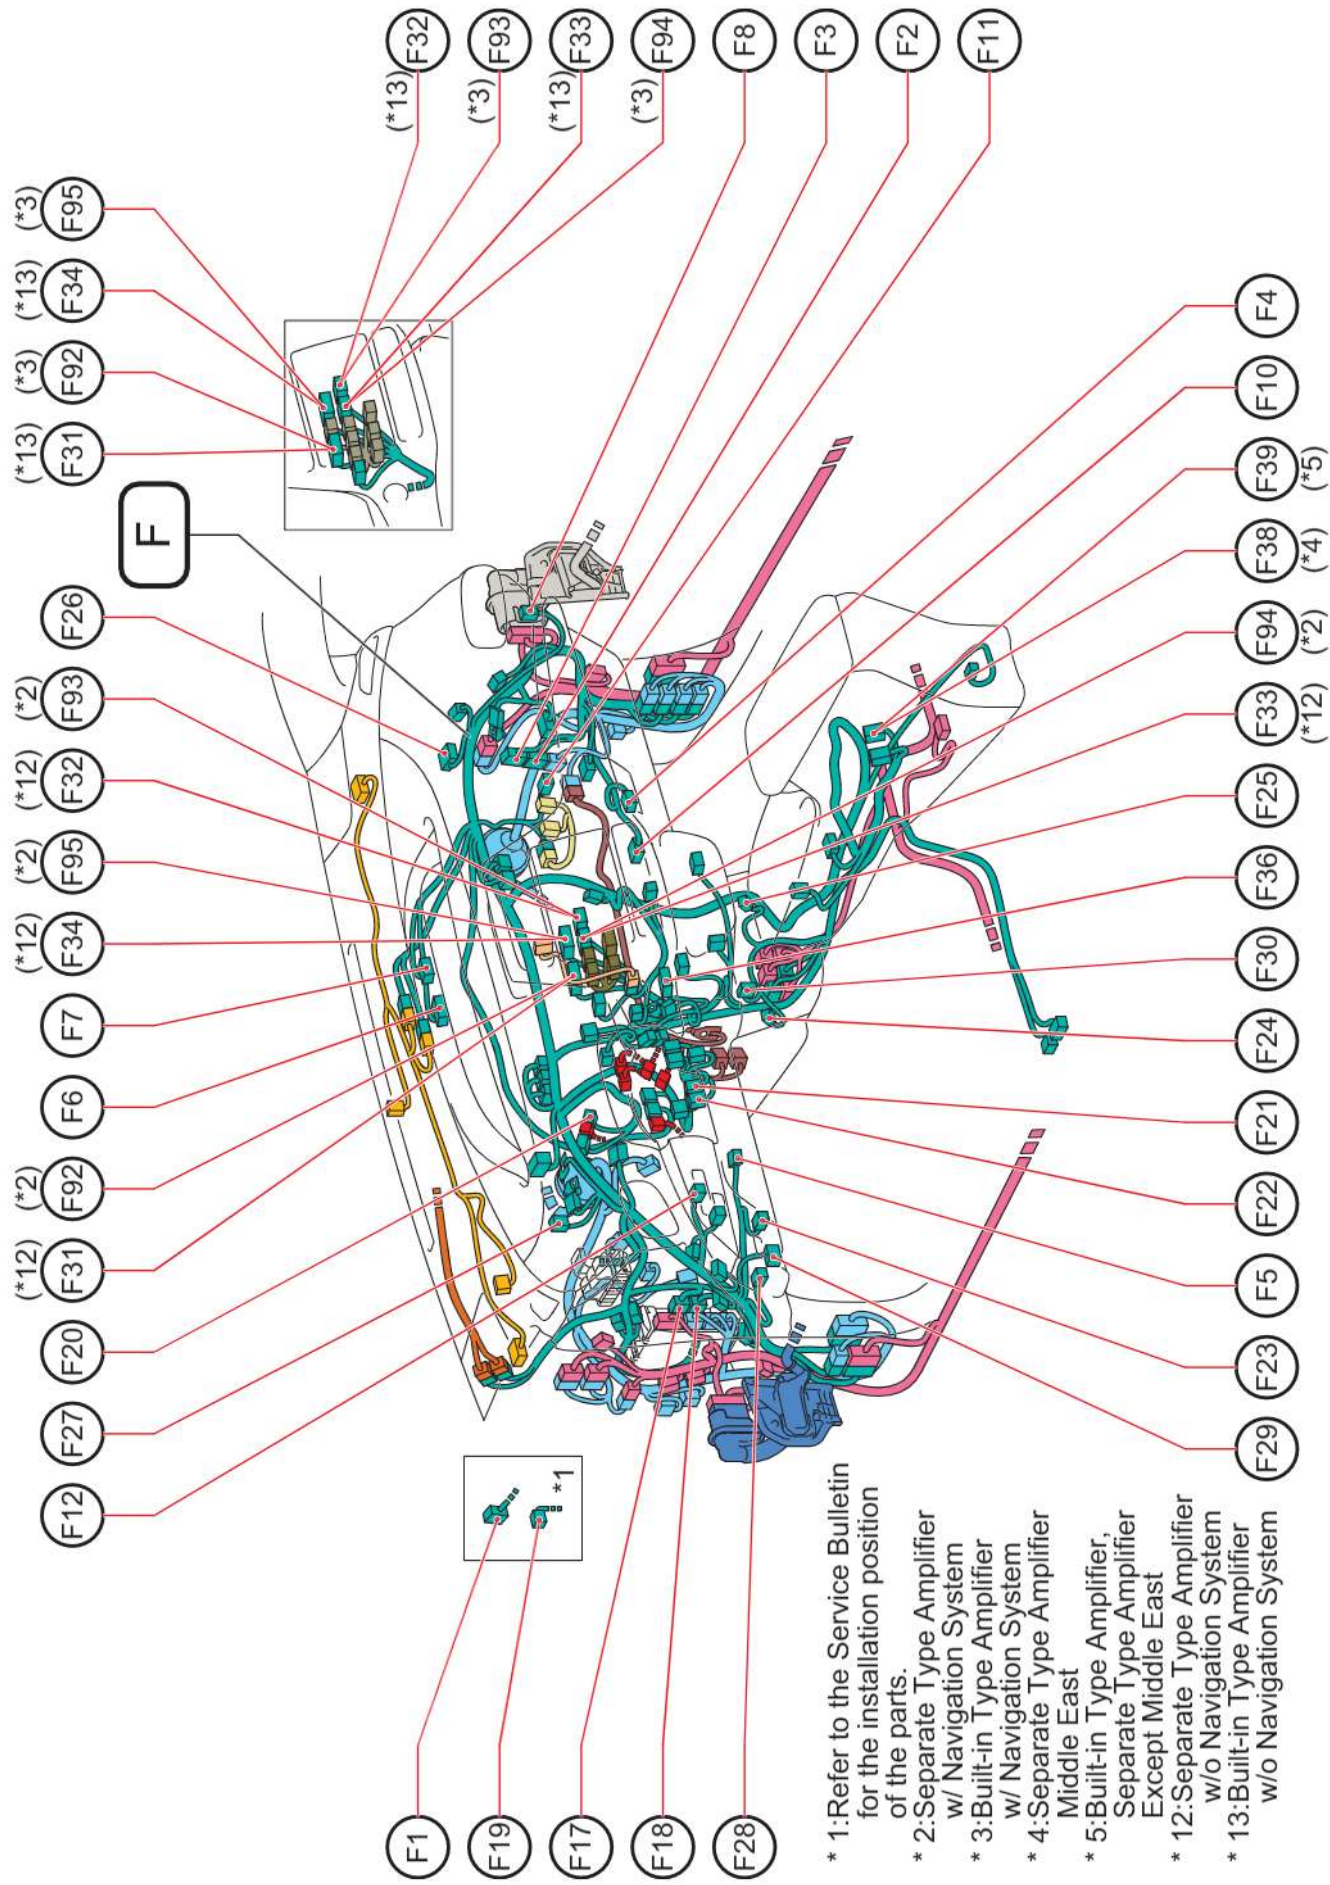


F1	Certification ECU
F2	Hybrid Vehicle Control ECU
F3	Hybrid Vehicle Control ECU
F4	No. 1 Interior Illumination Light Assembly RH
F5	No. 1 Interior Illumination Light Assembly LH
F6	Combination Meter Assembly
F7	Combination Meter Assembly
F8	Airbag Cut Off Switch Cylinder Sub-Assembly
F10	Blower Motor with Fan Sub-Assembly
F11	Glove Box Light Assembly
F12	Combination Switch Assembly
F17	Main Body ECU
F18	Main Body ECU
F19	ID Code Box
F20	Power Steering ECU Assembly
F21	Spiral Cable with Sensor Sub-Assembly
F22	Spiral Cable with Sensor Sub-Assembly
F23	No. 1 Instrument Panel Airbag Assembly Lower
F24	Seat Heater Switch LH
F25	Seat Heater Switch RH
F26	Clearance Warning ECU Assembly
F27	No. 1 Clearance Warning Buzzer
F28	Fuel Lid Opener Switch
F29	DLC3
F30	Indicator Light Assembly
F31	Radio & Display Receiver Assembly
F32	Radio & Display Receiver Assembly
F33	Radio & Display Receiver Assembly
F34	Radio & Display Receiver Assembly
F36	Telematics Transceiver
F38	No. 1 Stereo Jack Adapter Assembly
F39	No. 1 Stereo Jack Adapter Assembly
F92	Navigation Receiver Assembly
F93	Navigation Receiver Assembly
F94	Navigation Receiver Assembly
F95	Navigation Receiver Assembly


Position of Parts in Instrument Panel (LHD)

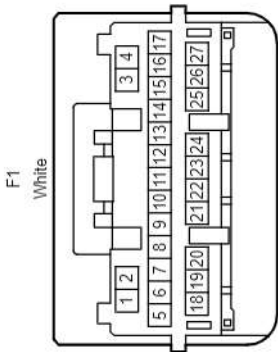


90980-12B78

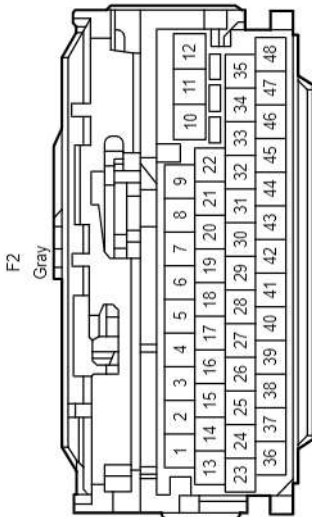


90980-12C23

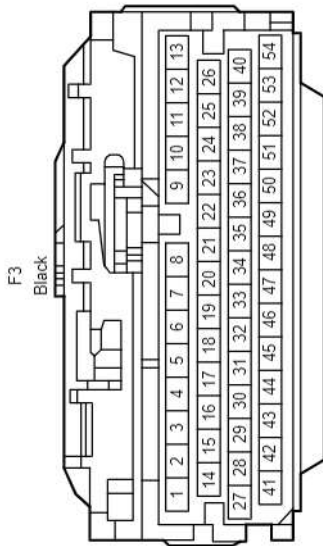


90980-12B96

 


90980-11918

 

90980-11918

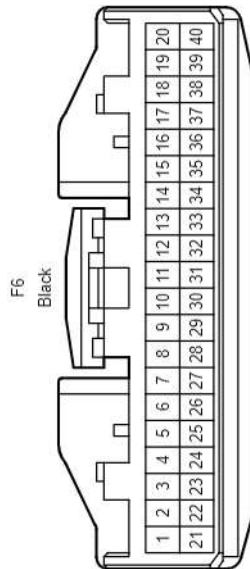


90980-12557

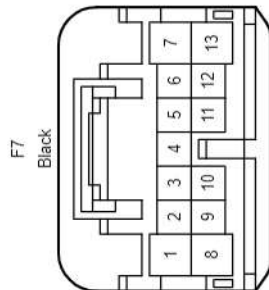

90980-12767





90980-12063

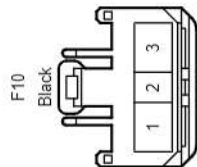


90980-11667



90980-11918

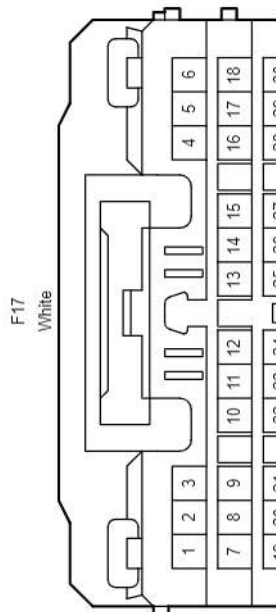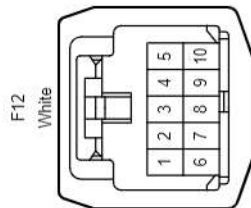


Position of Parts in Instrument Panel (LHD)

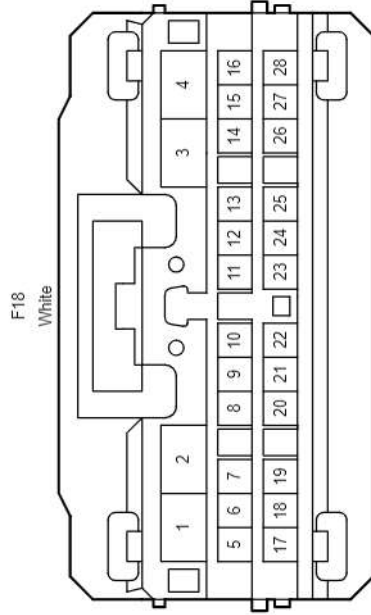


F18
White

90980-12908

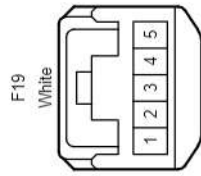


F19
White

90980-12366

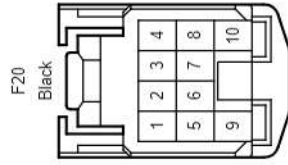


F20
Black

90980-12898

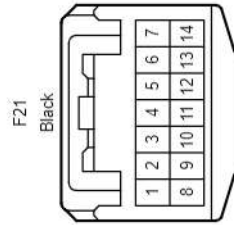


F21
Black

90980-12370

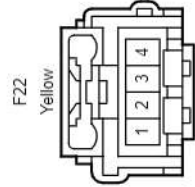


F22
Yellow

90980-12160

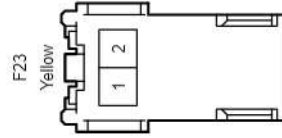


F23
Yellow

 90980-12253




F24
Blue

90980-12012

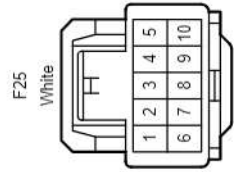


F25
White

90980-12135

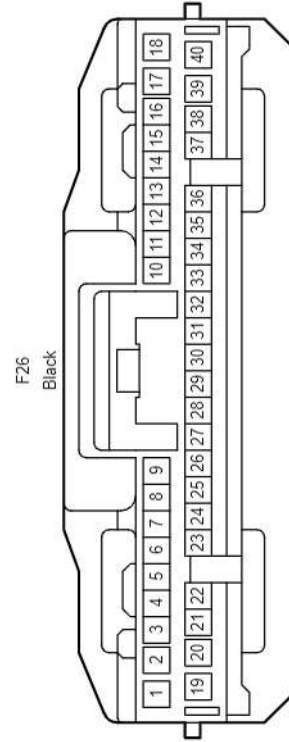


F26
Black

 90980-12524




F27
Black

90980-10825

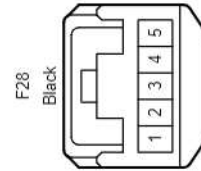


F28
Black

90980-12366

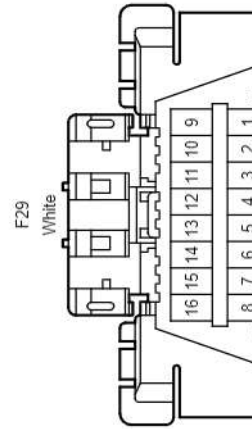


F29
White

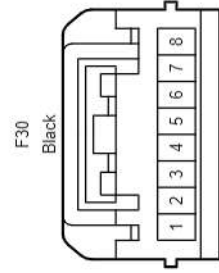

F30
Black


90980-12550

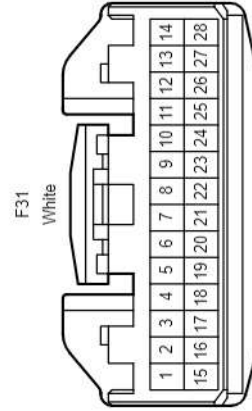

F31
White


Position of Parts in Instrument Panel (LHD)

 F32
White




90980-10997

 F33
White




90980-10996

F34
White

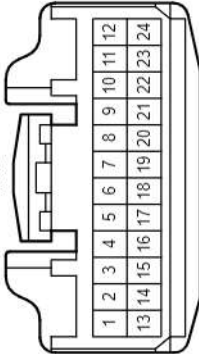


90980-12554

F36
White

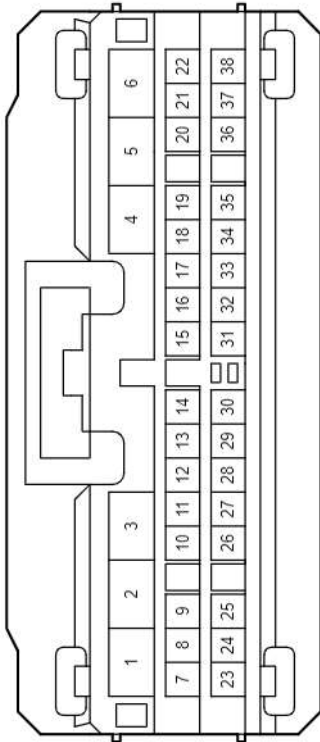


90980-12817

F38
Black

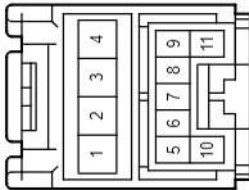


90980-12A69

F39
Black

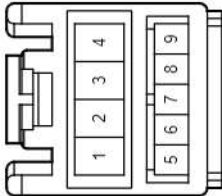


90980-12849

F92
White

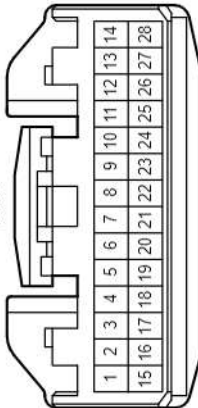


90980-12555

 F93
White




90980-10997

 F94
White




90980-10996

F95
White

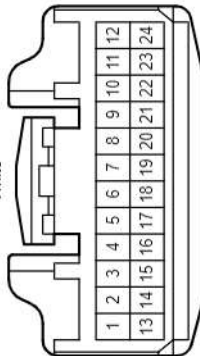

90980-12554


- * 6: Korea
- * 7: Except Korea
- * 8: Middle East
- * 9: Europe, Korea
- * 14: Before Aug. 2016 Production
- * 15: From Aug. 2016 Production

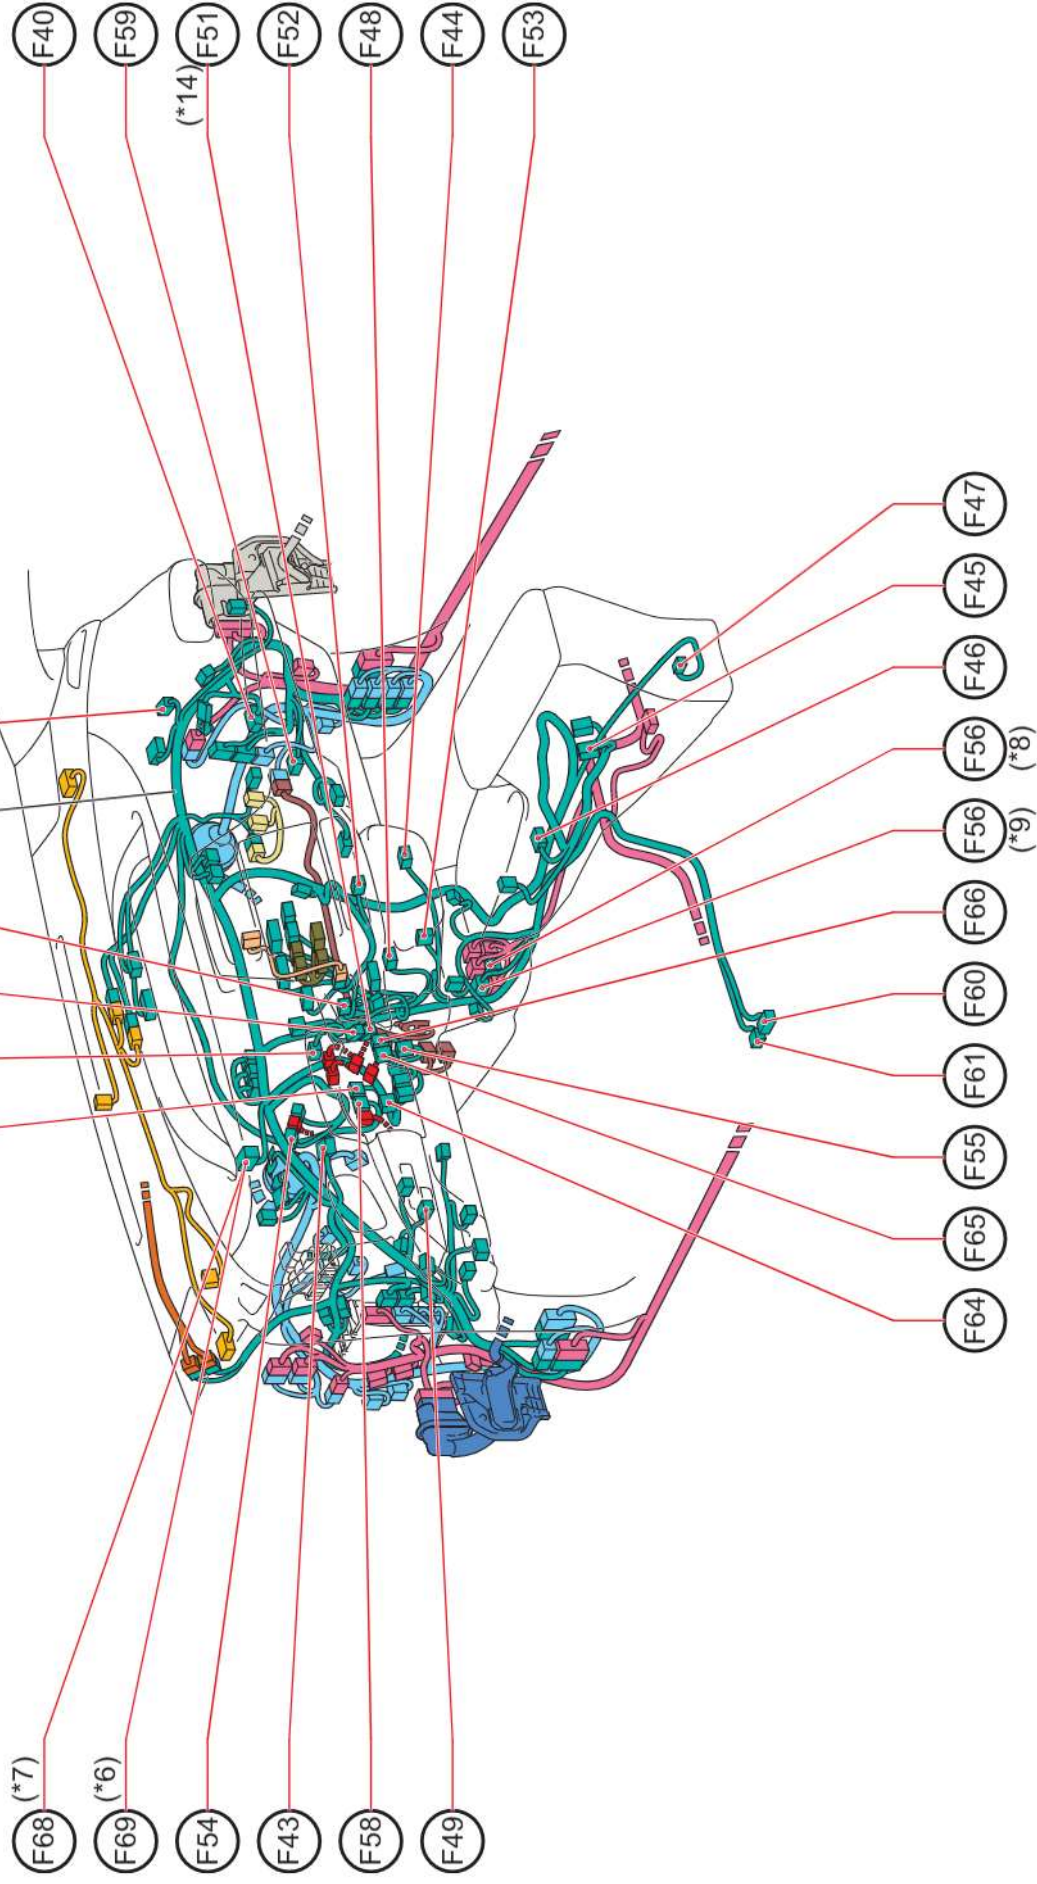


Position of Parts in Instrument Panel (LHD)

F40	Driving Support ECU Assembly
F41	Pre-Crash Safety City Buzzer
F42	No. 2 Clearance Warning Buzzer
F43	Windshield Wiper Relay Assembly
F44	Pattern Select Switch Assembly
F45	No. 1 Power Outlet Socket Assembly
F46	No. 1 Indoor Electrical Key Antenna Assembly
F47	No. 2 Power Outlet Socket Assembly
F48	Shift Lock Control Unit Assembly
F49	No. 2 Combination Switch Assembly
F50	Power Switch
F51	Cooler (Room Temperature Sensor) Thermistor
F52	A/C Control Assembly
F53	Transmission Shift Main Switch
F54	Power Steering ECU Assembly
F55	Steering Sensor
F56	Airbag ECU Assembly
F57	A/C Amplifier Assembly
F58	A/C Amplifier Assembly
F59	Network Gateway ECU
F60	Stereo Component Amplifier Assembly
F61	Stereo Component Amplifier Assembly
F64	Headlight Dimmer Switch Assembly
F65	Windshield Wiper Switch Assembly
F66	Windshield Wiper Switch Assembly
F68	No. 1 CAN Junction Connector
F69	No. 1 CAN Junction Connector


Position of Parts in Instrument Panel (LHD)

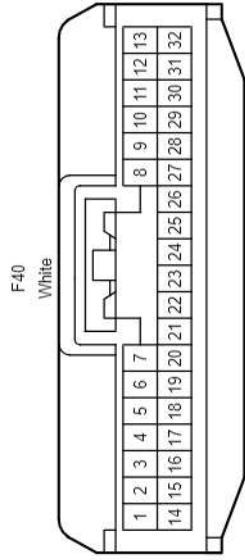


90980-12422

 


90980-10860

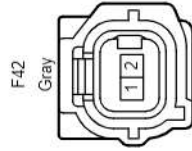

90980-12572

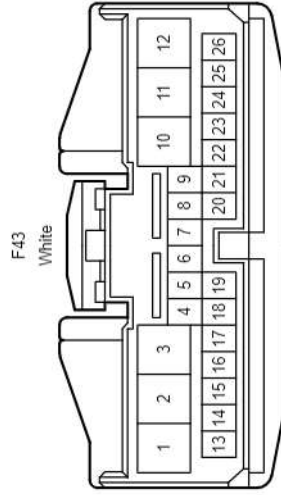


90980-12444

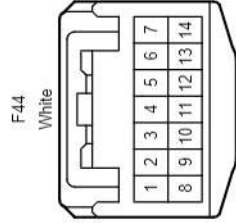

90980-12370




90980-12498

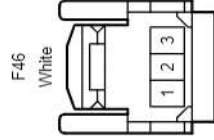


90980-12795




90980-12498

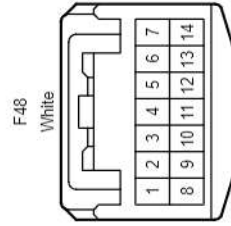

90980-12370

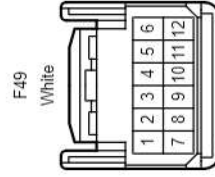


90980-12552

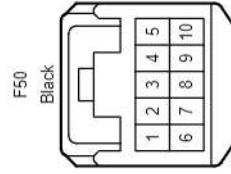


90980-12368




90980-11918

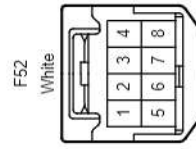


90980-12910

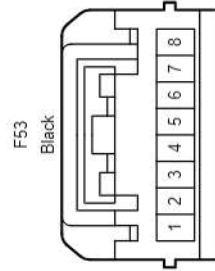


90980-12550

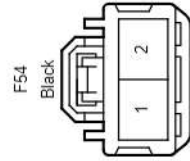

90980-12900

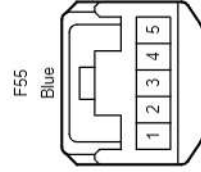

90980-12366




 


F57
Black





cardiagn.com

cardiagn.com

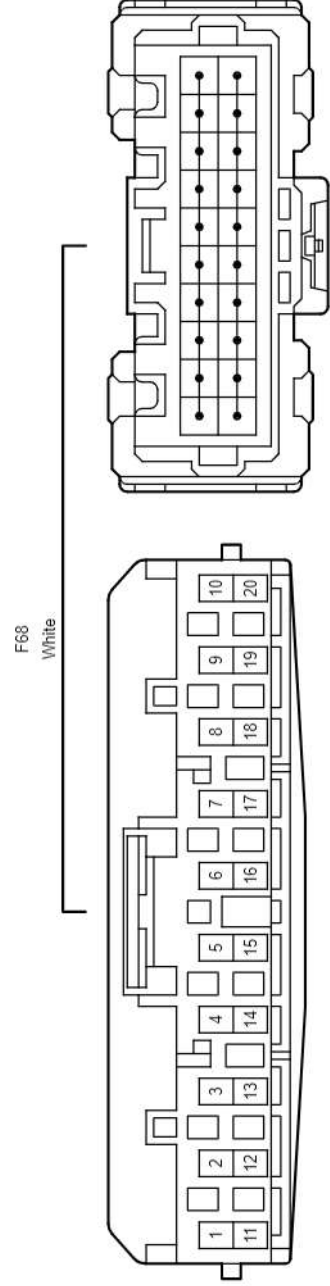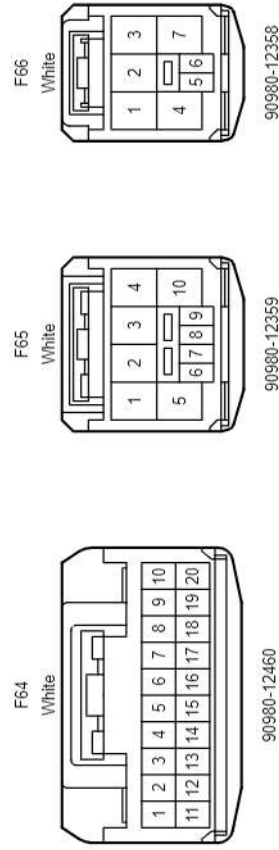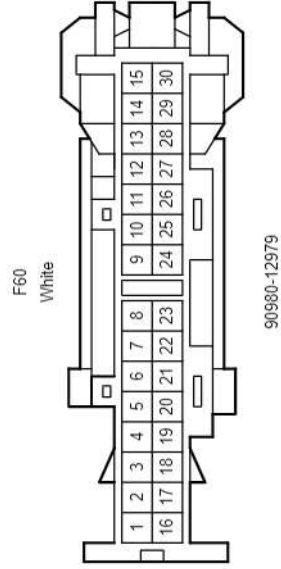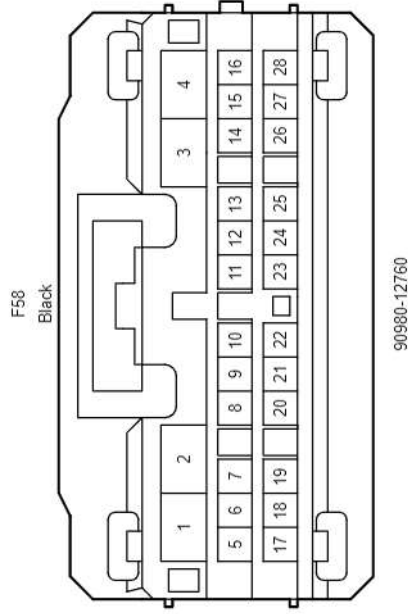

Position of Parts in Instrument Panel (LHD)

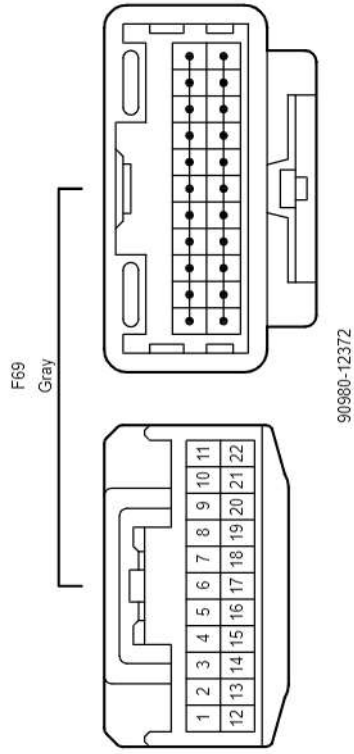

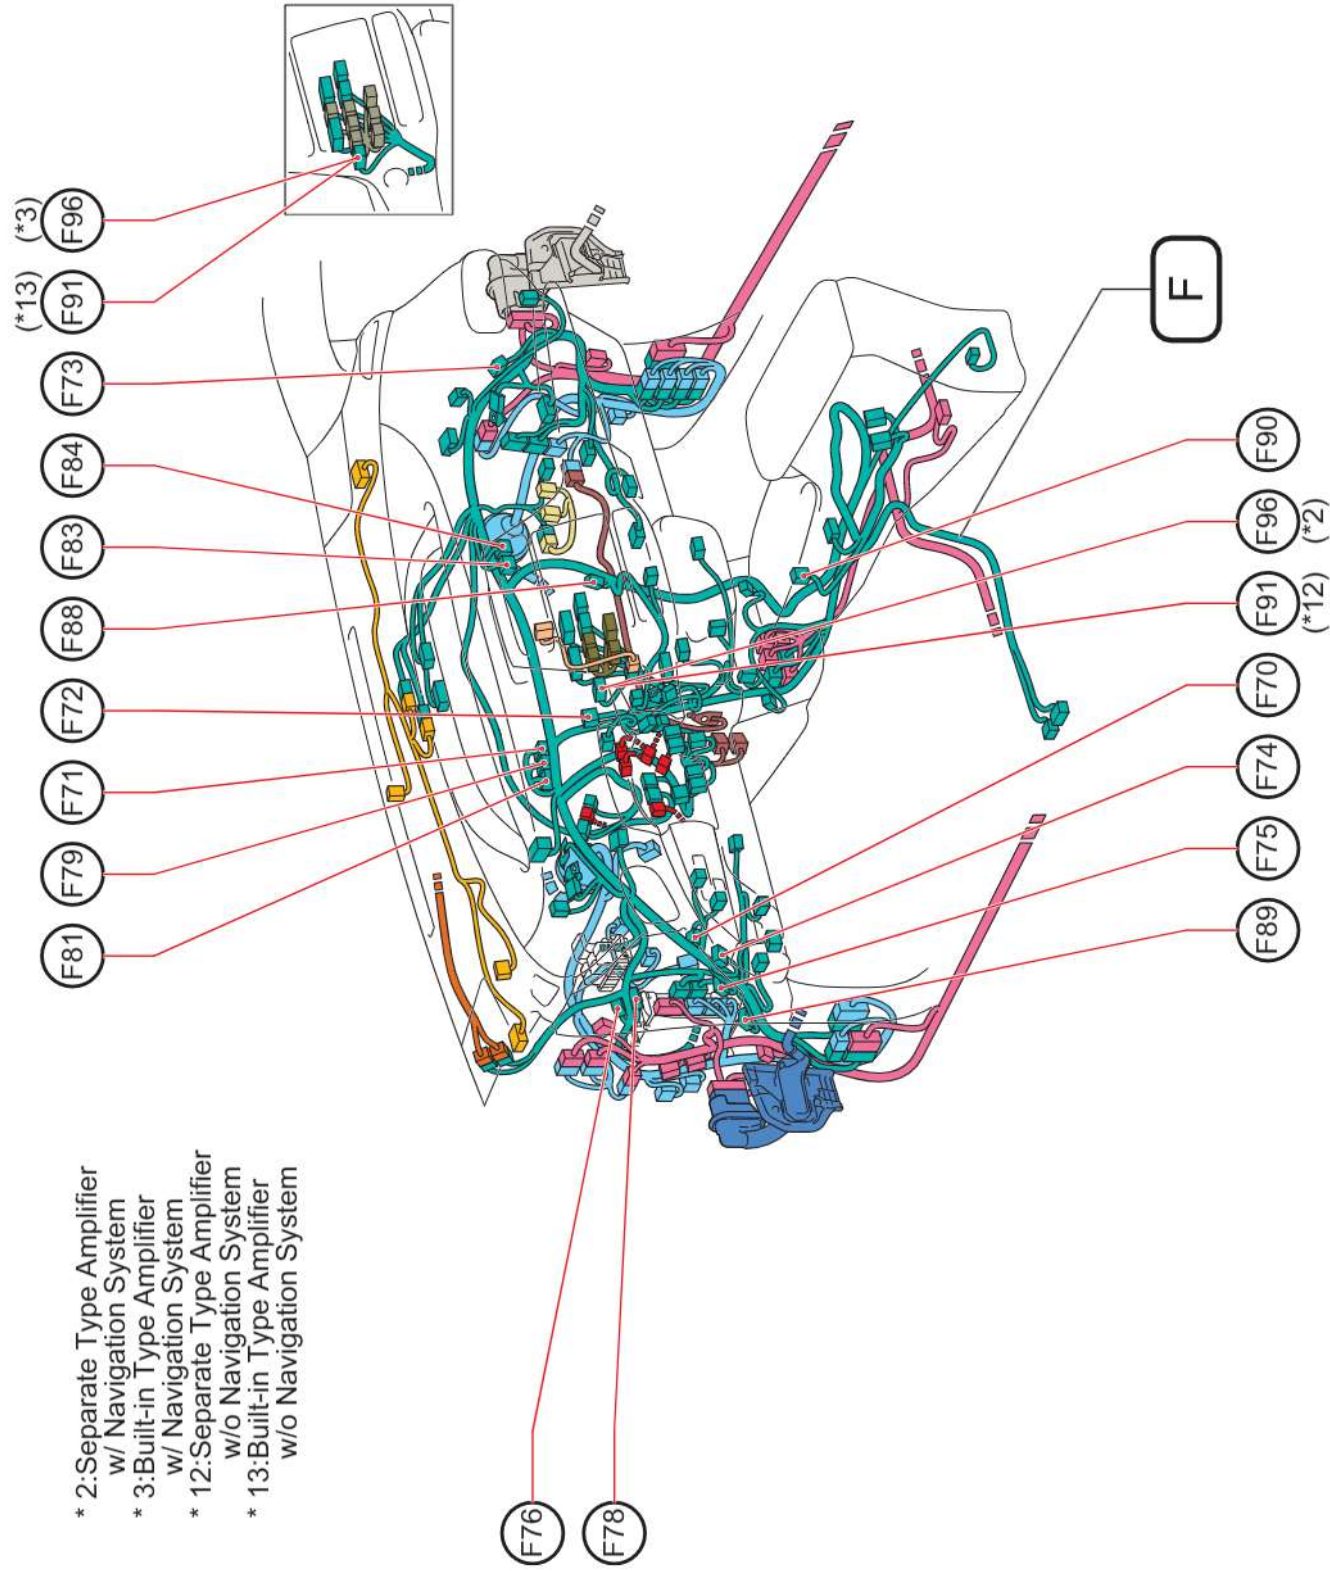


Position of Parts in Instrument Panel (LHD)


F70	No. 2 CAN Junction Connector
F71	No. 3 CAN Junction Connector
F72	No. 4 CAN Junction Connector
F73	No. 5 CAN Junction Connector
F74	No. 6 Junction Connector
F75	No. 7 Junction Connector
F76	No. 8 Junction Connector
F78	No. 10 Junction Connector
F79	No. 11 Junction Connector
F81	No. 13 Junction Connector
F83	No. 15 Junction Connector
F84	No. 16 Junction Connector
F88	No. 20 Junction Connector
F89	No. 21 Junction Connector
F90	Mobile Wireless Charger Cradle Assembly
F91	Radio & Display Receiver Assembly
F96	Navigation Receiver Assembly

Position of Parts in Instrument Panel (LHD)


F70
Black

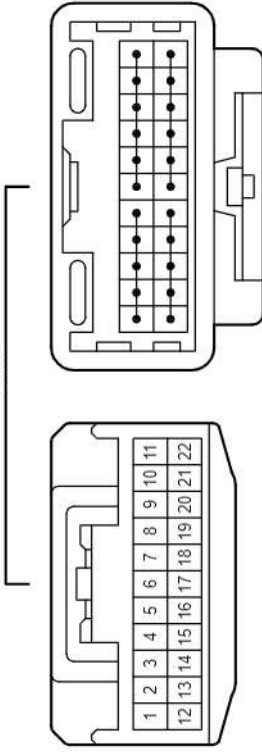


F71
Gray

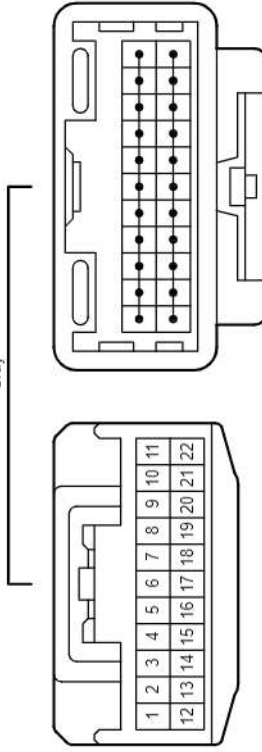





F72
Black

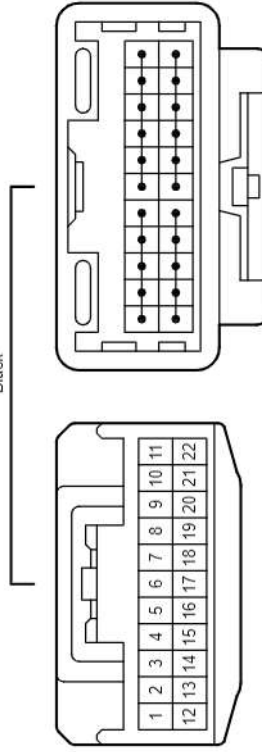

F73
Gray

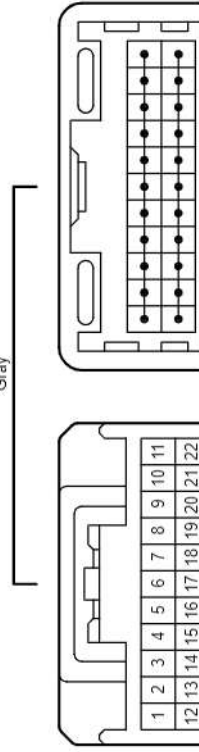


Position of Parts in Instrument Panel (LHD)

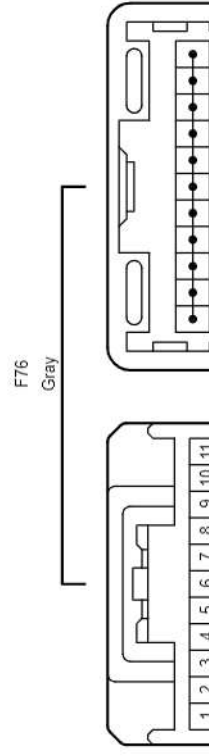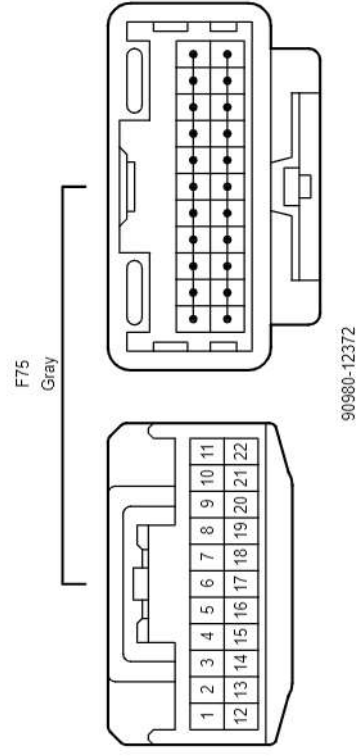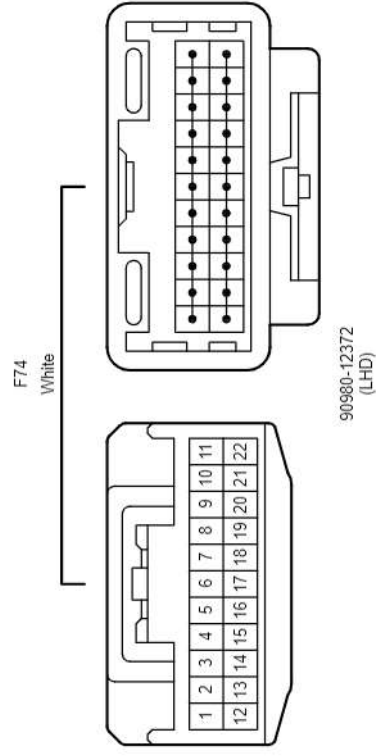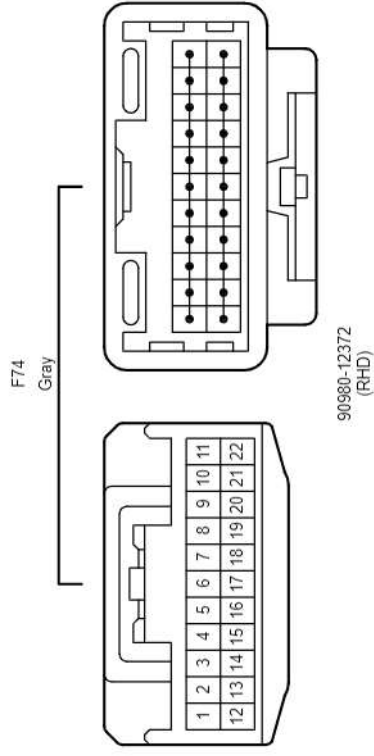


Position of Parts in Instrument Panel (LHD)

F78
Gray

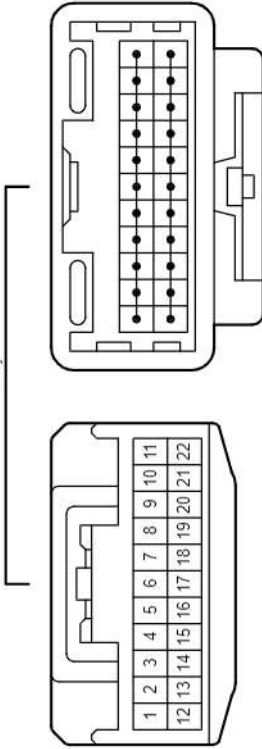


90980-12372

F79
White

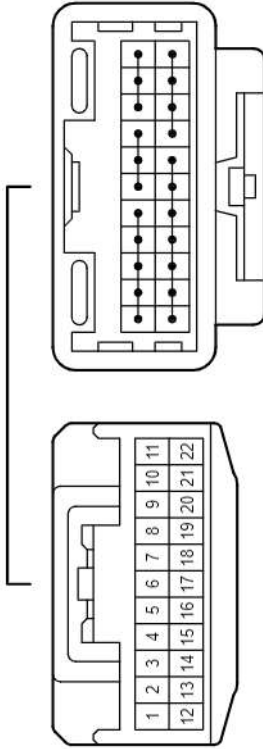


90980-12372

F81
Black

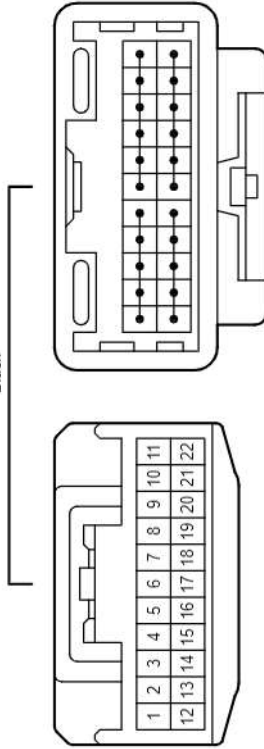


90980-12372

F83
Gray

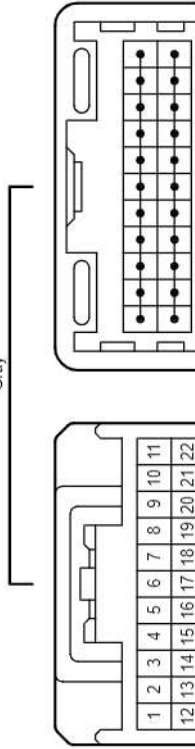


Position of Parts in Instrument Panel (LHD)

F84
Black

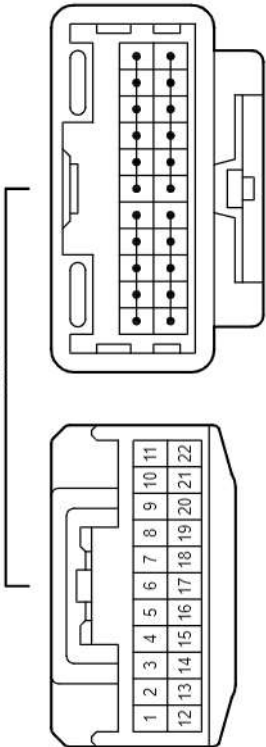


90980-12372

F88
Blue

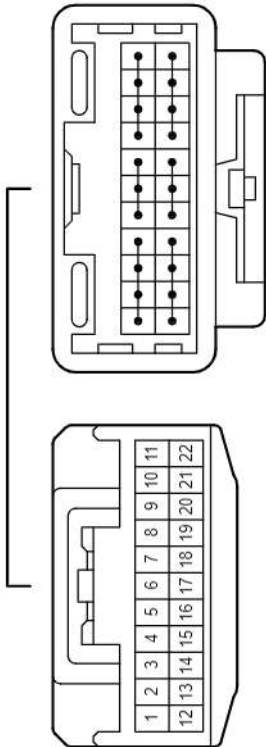


90980-12372

F89
Gray

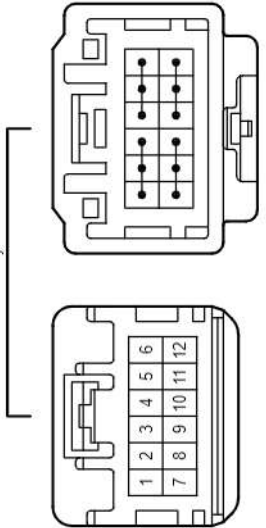


90980-12737

F90
White

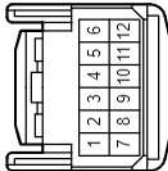


90980-12552

F91
Gray

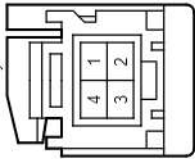


90980-12A52

F96
Gray

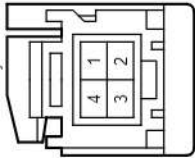


90980-12A52

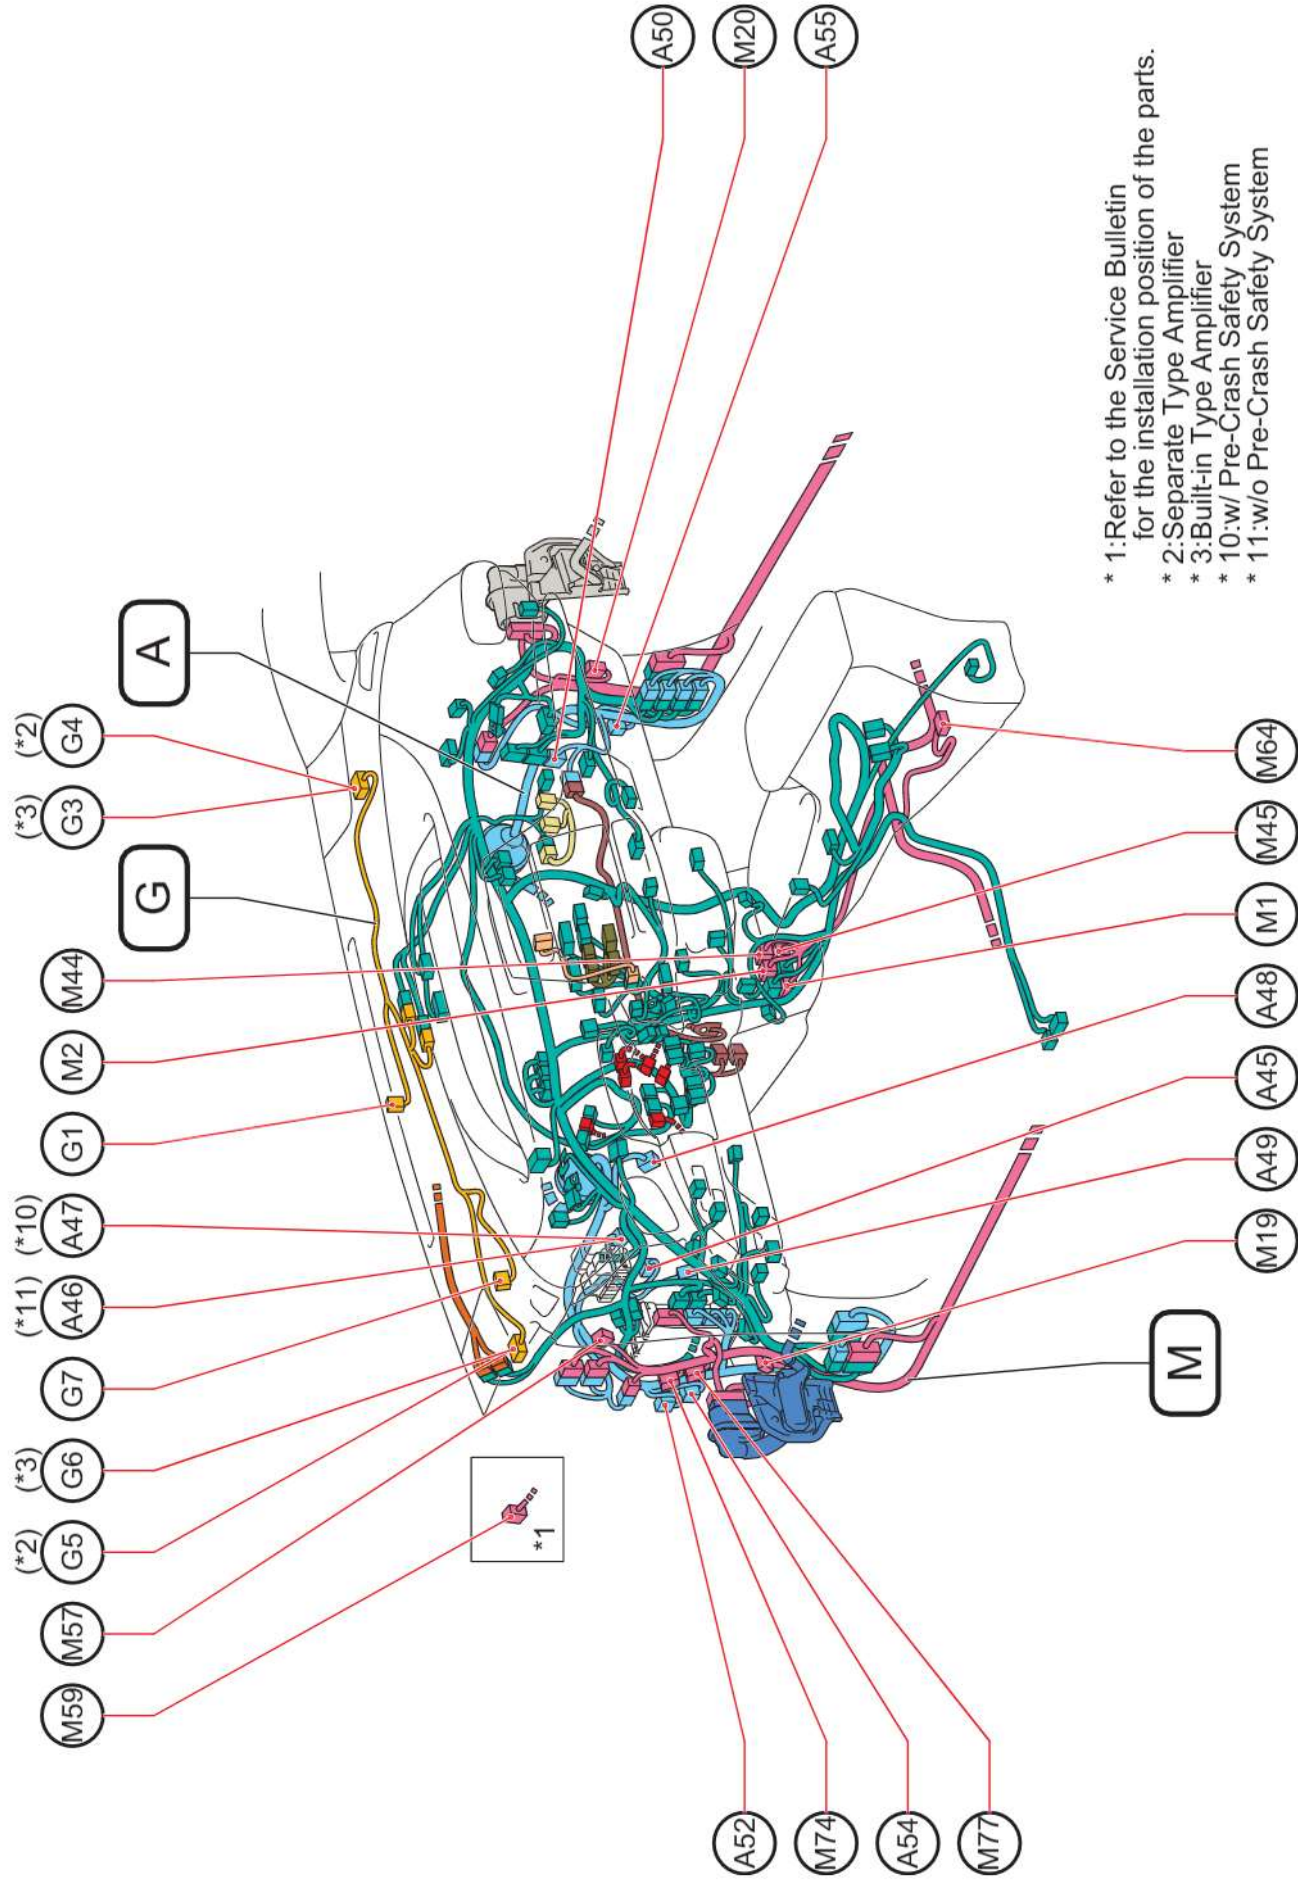


Position of Parts in Instrument Panel (LHD)

A45	Brake Pedal Stroke Sensor Assembly
A46	Stop Light Switch Assembly
A47	Stop Light Switch Assembly
A48	Accelerator Pedal Sensor Assembly
A49	Parking Brake Switch Assembly
A50	Hybrid Vehicle Control ECU
A52	No. 2 Junction Connector
A54	No. 4 Junction Connector
A55	No. 5 Junction Connector
G1	Automatic Light Control Sensor
G3	Front No. 2 Speaker Assembly RH
G4	Front No. 2 Speaker Assembly RH
G5	Front No. 2 Speaker Assembly LH
G6	Front No. 2 Speaker Assembly LH
G7	Combination Meter Mirror ECU
M1	Airbag ECU Assembly
M2	Airbag ECU Assembly
M19	Diode (Front Courtesy Light LH)
M20	Diode (Front Courtesy Light RH)
M44	Airbag ECU Assembly
M45	Airbag ECU Assembly
M57	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
M59	Certification ECU
M64	Inverter Battery
M74	No. 22 Junction Connector
M77	No. 25 Junction Connector


Position of Parts in Instrument Panel (LHD)

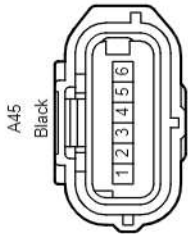


90980-12303

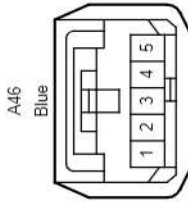


90980-12954

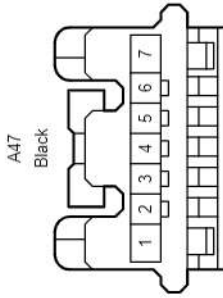


90980-12092

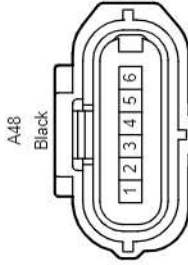

90980-12831

 


90980-10871

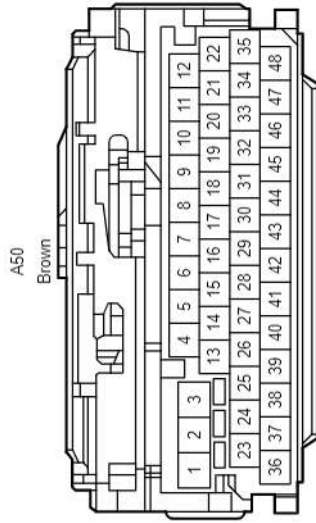


90980-12C24

A52
Black

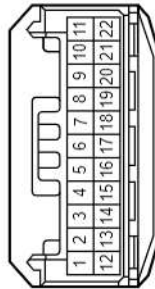


90980-12B54

A54
Black

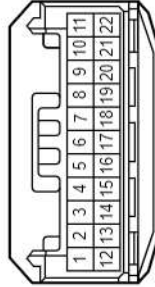


90980-12B54

A55
Black

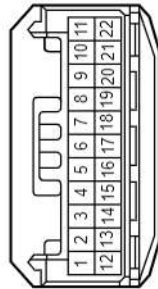


90980-12B54

G1
Black

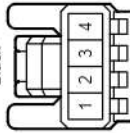


82824-50130

 G3
White




90980-12304


Position of Parts in Instrument Panel (LHD)

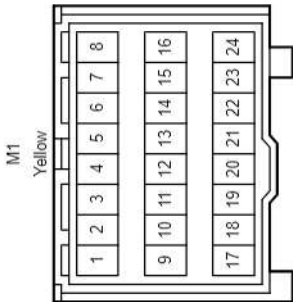


90980-12392

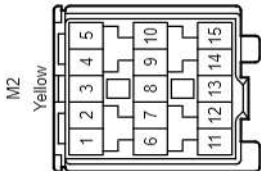


90980-12449

 


90980-10962

 

90980-10962

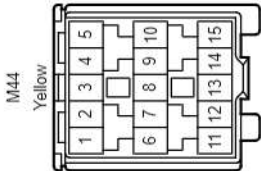


90980-12450

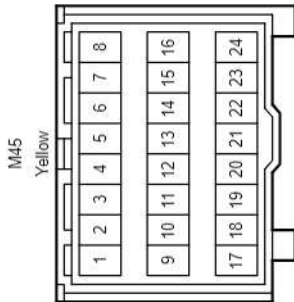


90980-12390



90980-11142

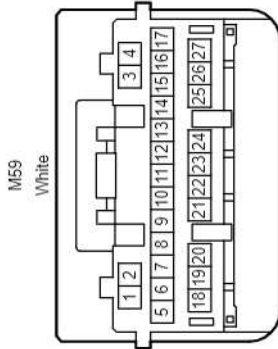


90980-12B77

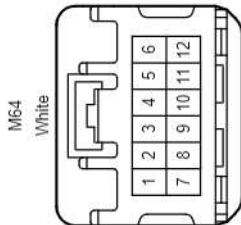


90980-12737

M74
Black

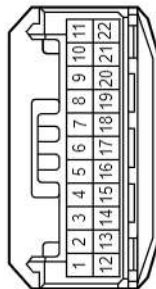


90980-12B54

M77
Black

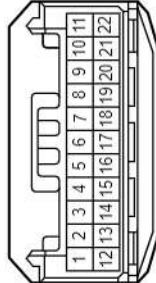

90980-12B54

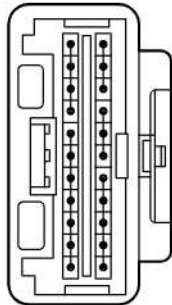


* 3: Built-in Type Amplifier

* 8: Middle East

* 9: Europe, Korea

* 16: Before May 2017 Production,
Europe From May 2017 Production,
Korea From May 2017 Production























* 17: Middle East From May 2017 Production

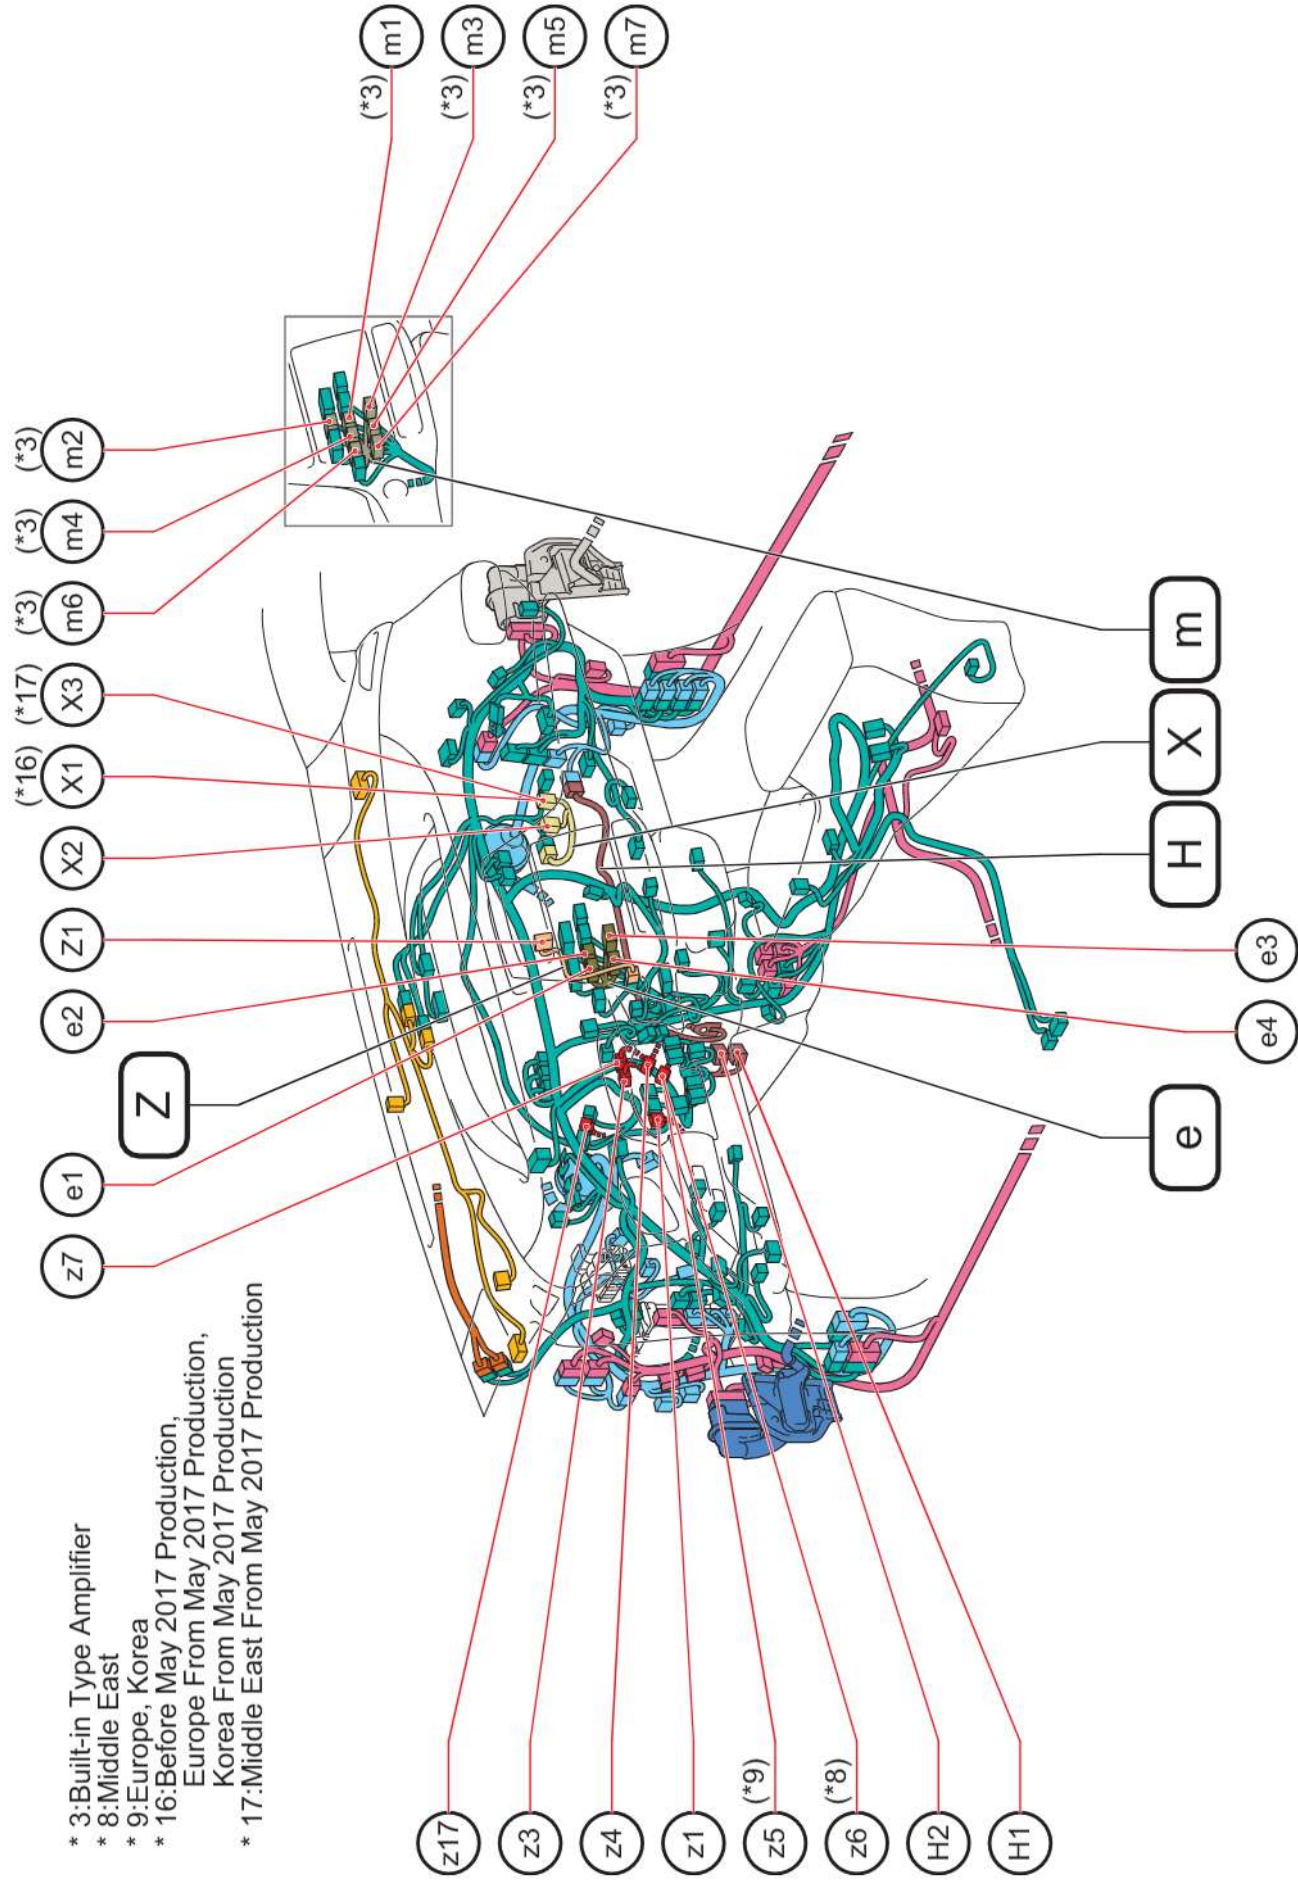


Position of Parts in Instrument Panel (LHD)

H1	Quick Heater Assembly	
H2	Quick Heater Assembly	
X1	Instrument Panel Passenger Airbag without Door Assembly	
X2	Instrument Panel Passenger Airbag without Door Assembly	
X3	Instrument Panel Passenger Airbag without Door Assembly	
Z1	Hazard Warning Signal Switch Assembly	
e1	Radio & Display Receiver Assembly	
e2	Radio & Display Receiver Assembly	
e3	Navigation ECU	
e4	Navigation ECU	
m1	Radio & Display Receiver Assembly	
m2	Radio & Display Receiver Assembly	
m3	Navigation ECU	
m4	Radio & Display Receiver Assembly	
m5	Navigation ECU	
m6	Radio & Display Receiver Assembly	
m7	Navigation ECU	
z1	A/C Harness Assembly , A/C Amplifier Assembly	
z3	Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly	
z4	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly	
z5	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly	
z6	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly	
z7	Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly	
z17	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly	

   Position of Parts in Instrument Panel (LHD)

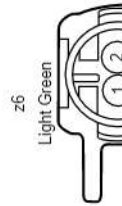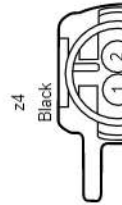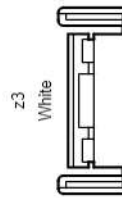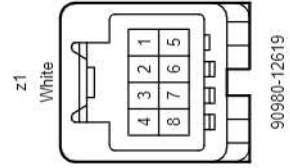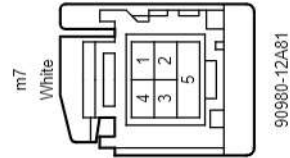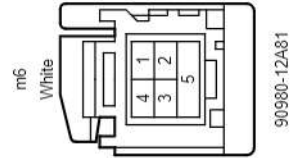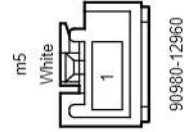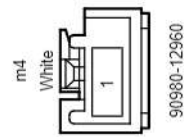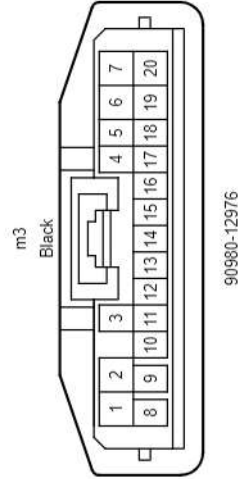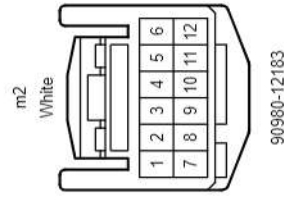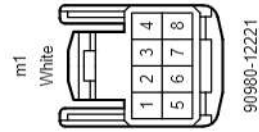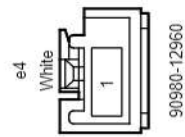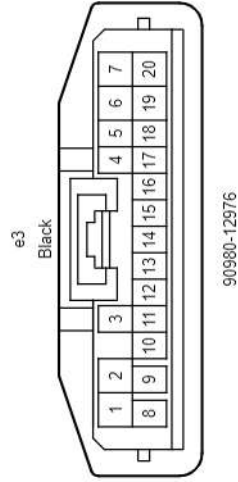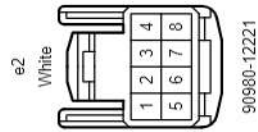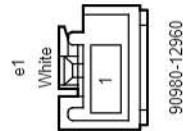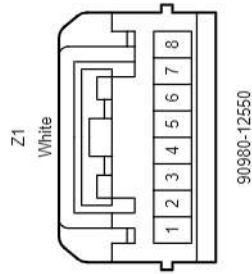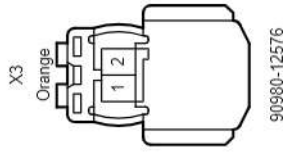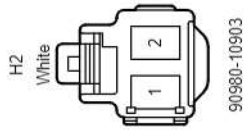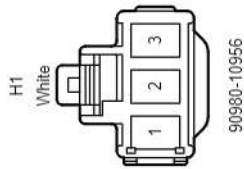


Position of Parts in Instrument Panel (LHD)

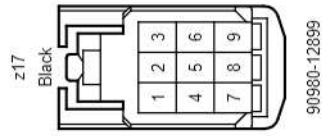


cardiagn.com

- * 1:Europe, Korea
- * 2:Middle East

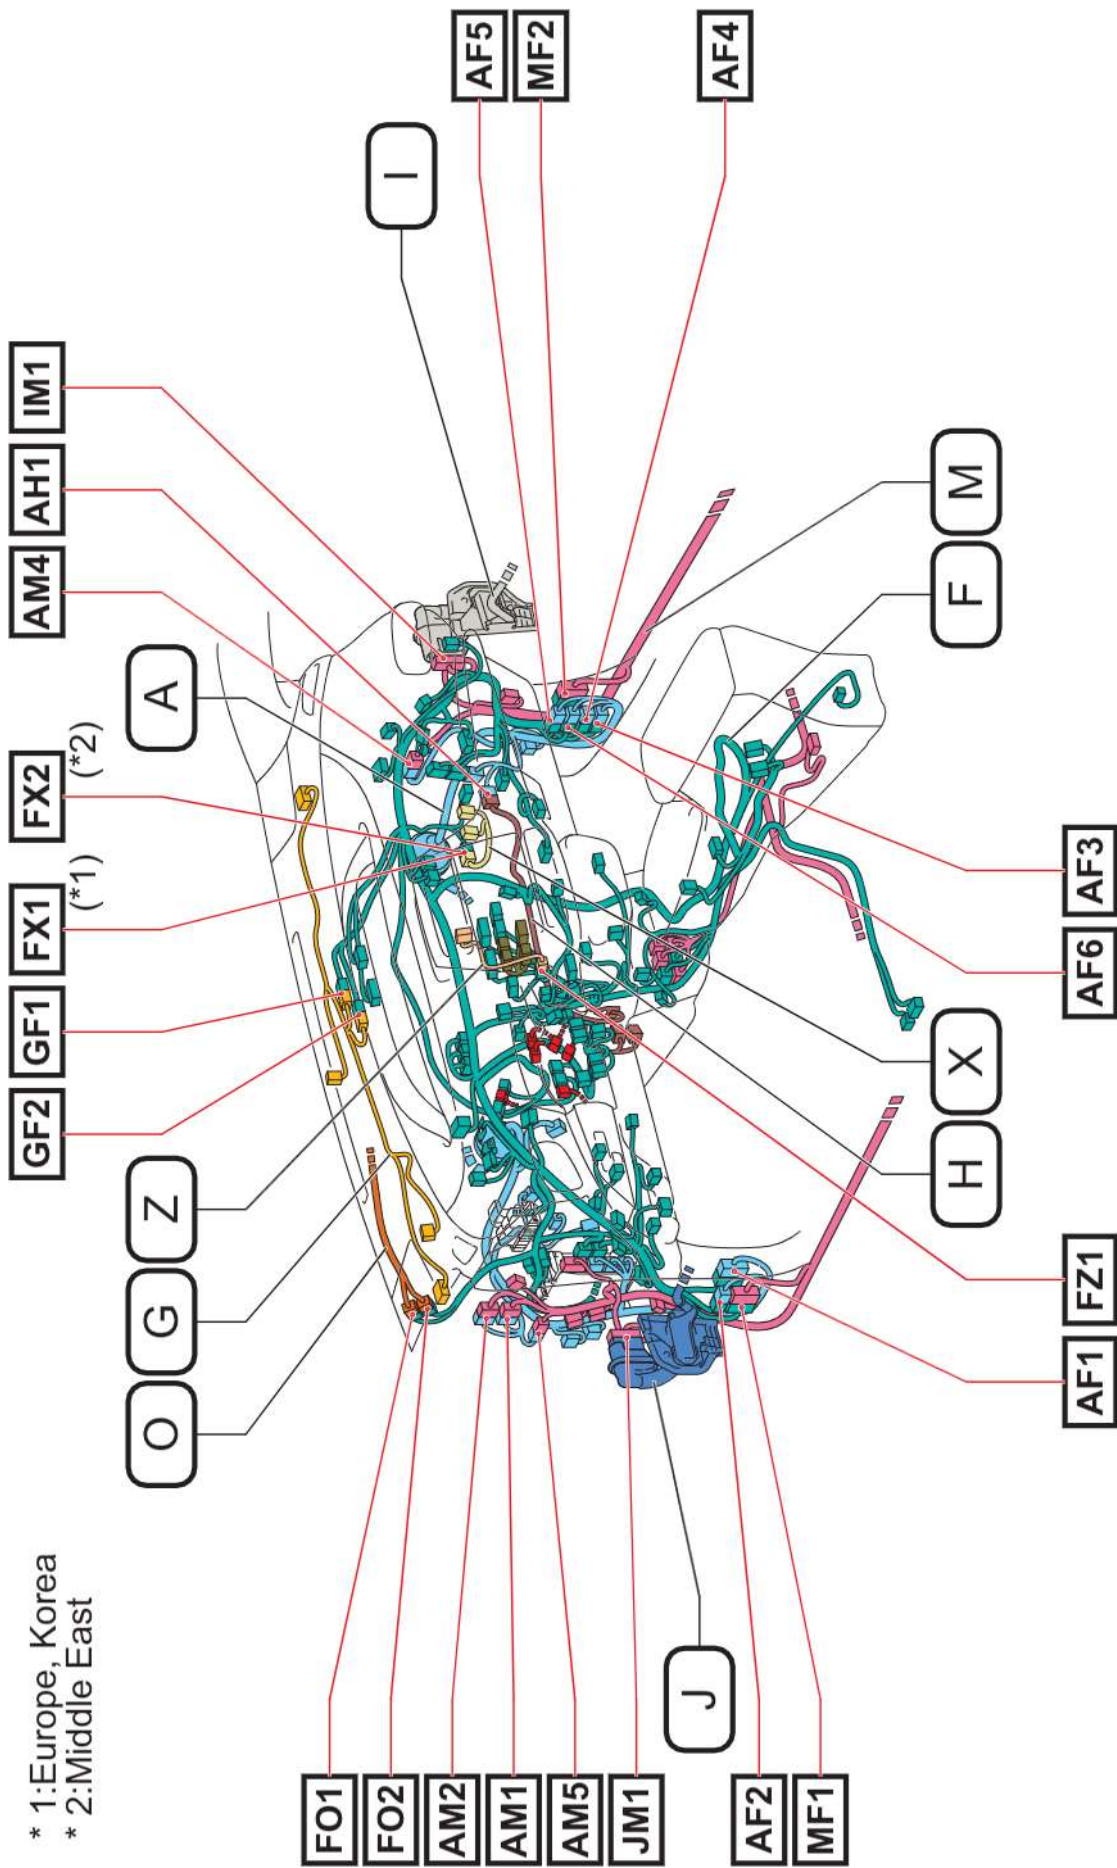


Wire and Wire in Instrument Panel (LHD)

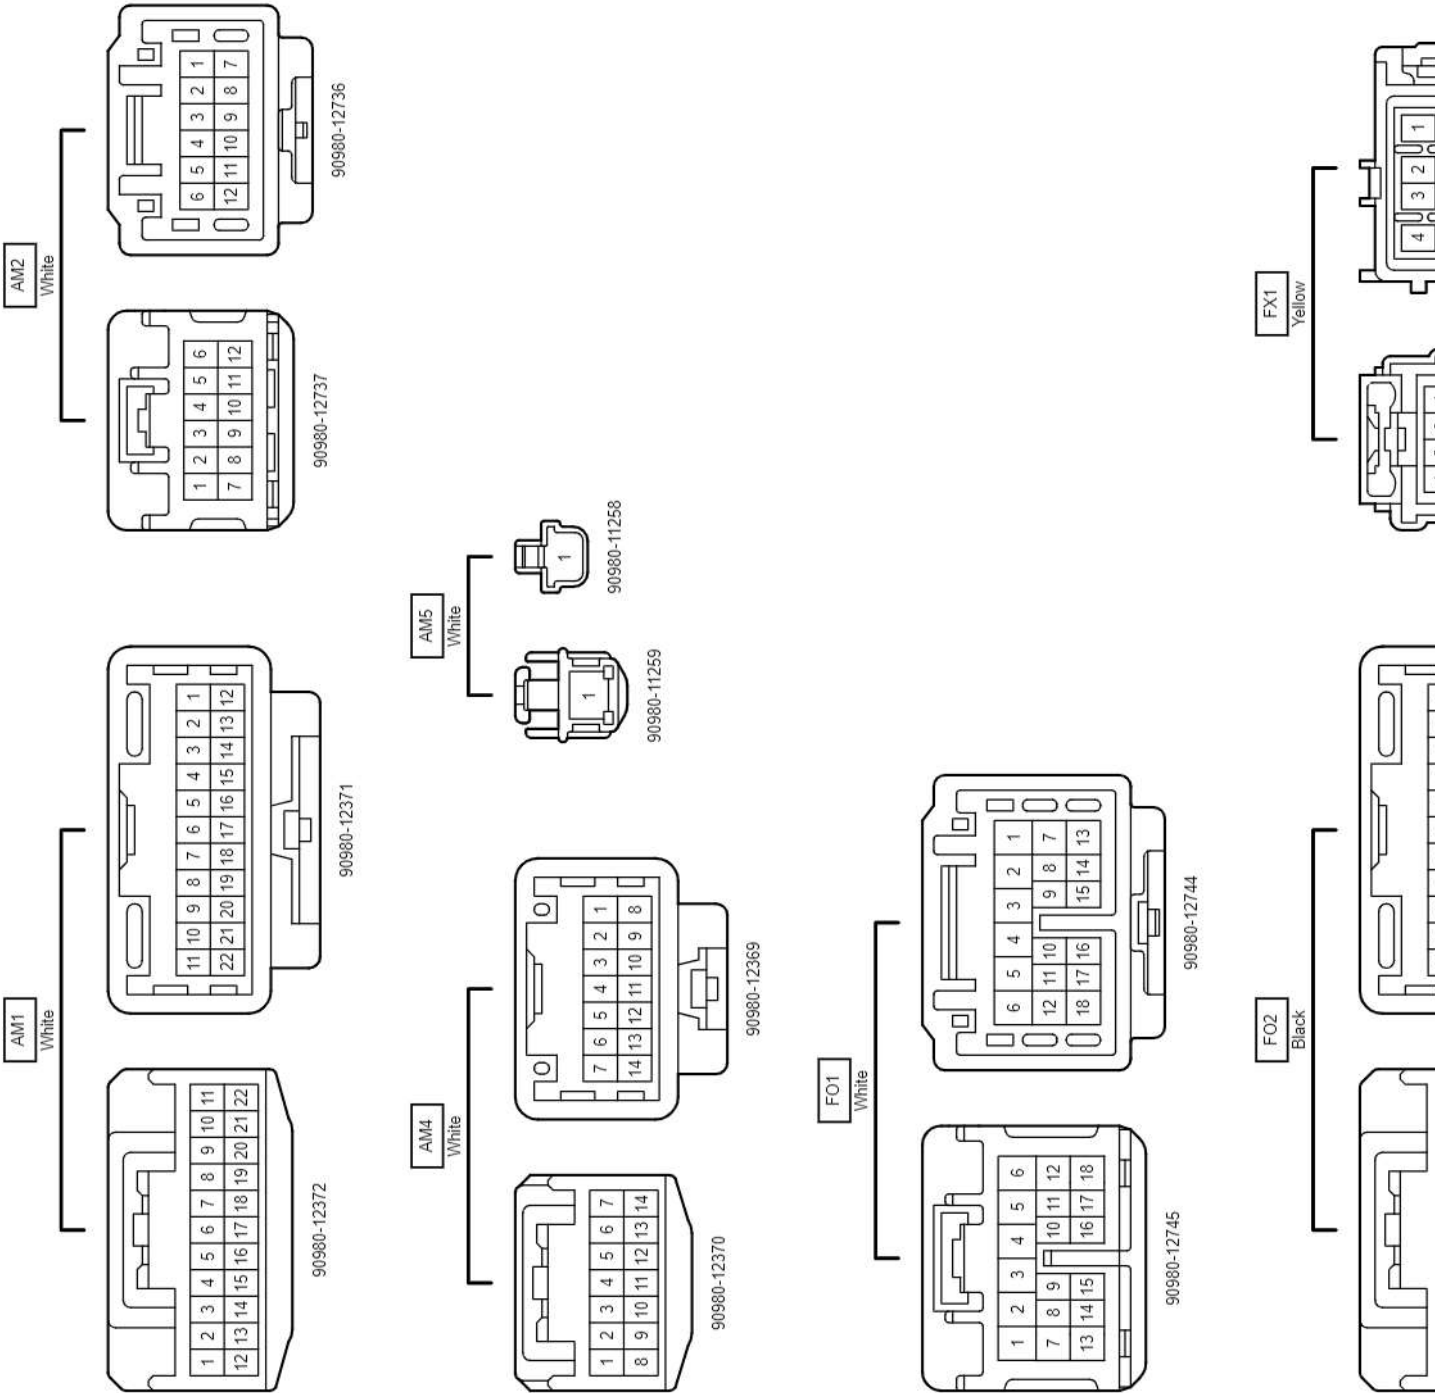


Wire and Wire in Instrument Panel (LHD)

 FX2
Yellow




90980-11886

 


90980-11992

FZ1
White

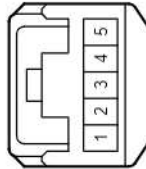


90980-12366

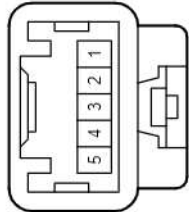


90980-12365

GF1
White

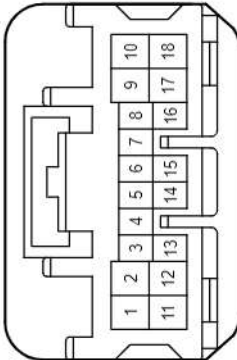


90980-12739

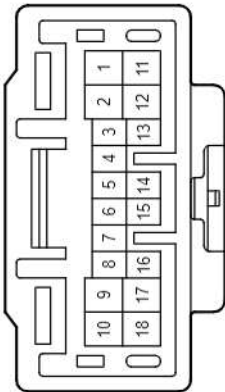


90980-12738

GF2
White

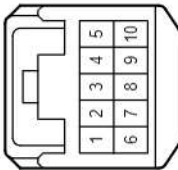


90980-12368

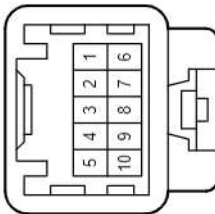


90980-12367

IM1
White

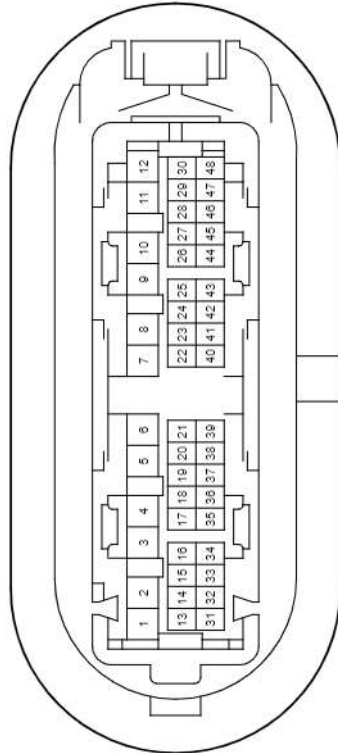

90980-12A09

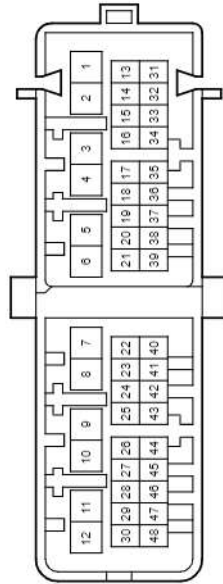


90980-12A06


JM1
White

Wire and Wire in Instrument Panel (LHD)

MF1
White

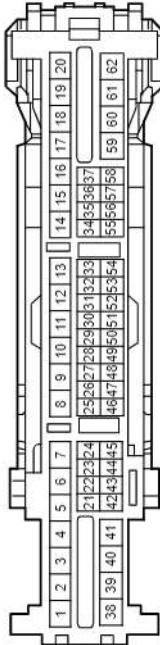


90980-12B22

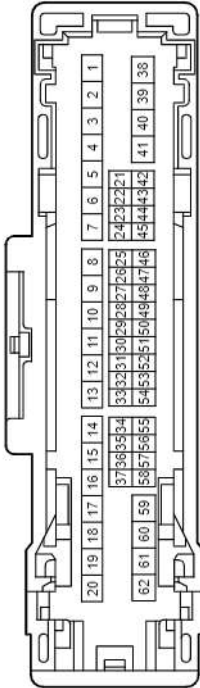


90980-12B21

MF2
White

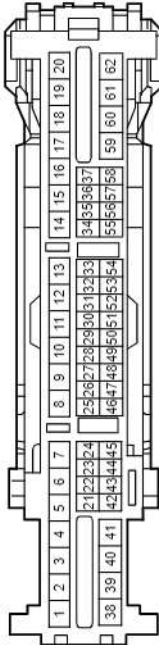


90980-12B22

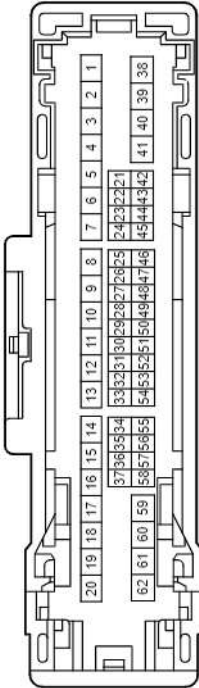


90980-12B21

Ground Points in Instrument Panel (RHD)

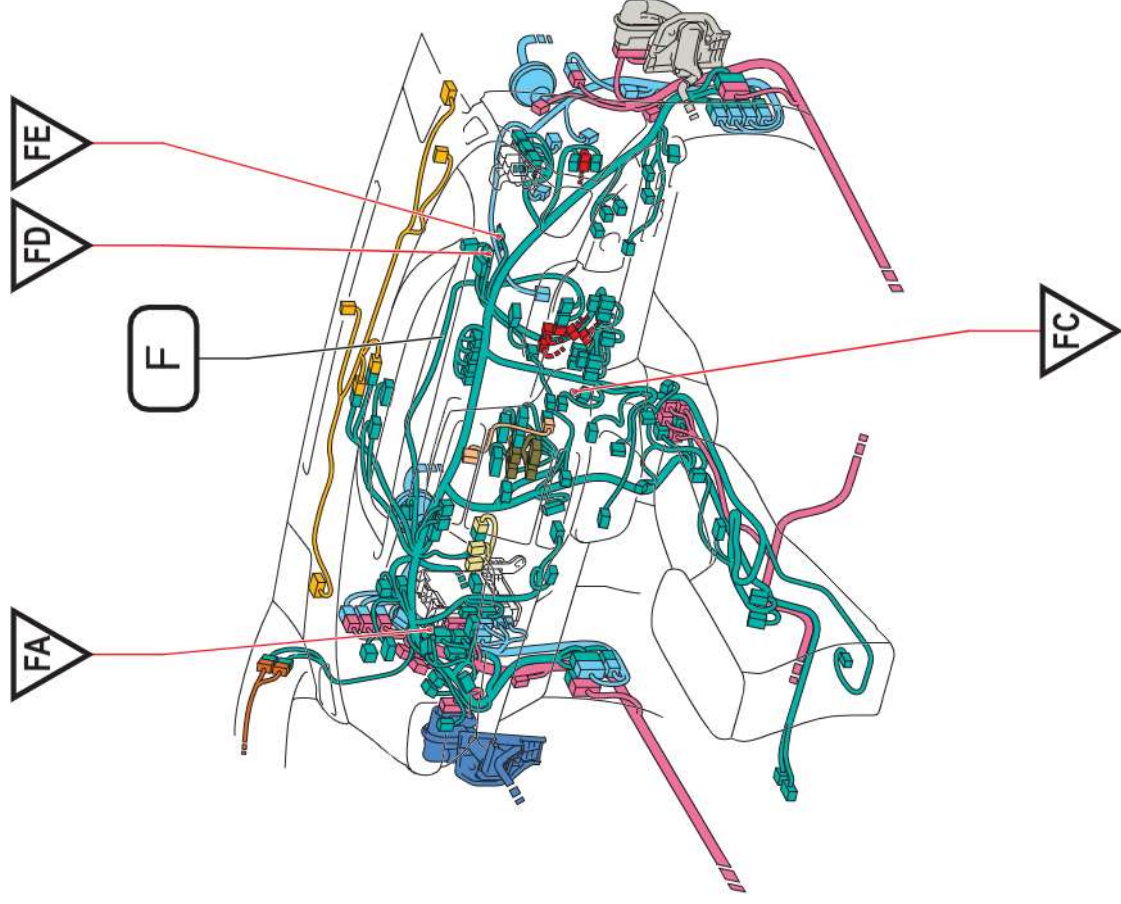


* 1:Refer to the Service Bulletin
for the installation position of the parts.

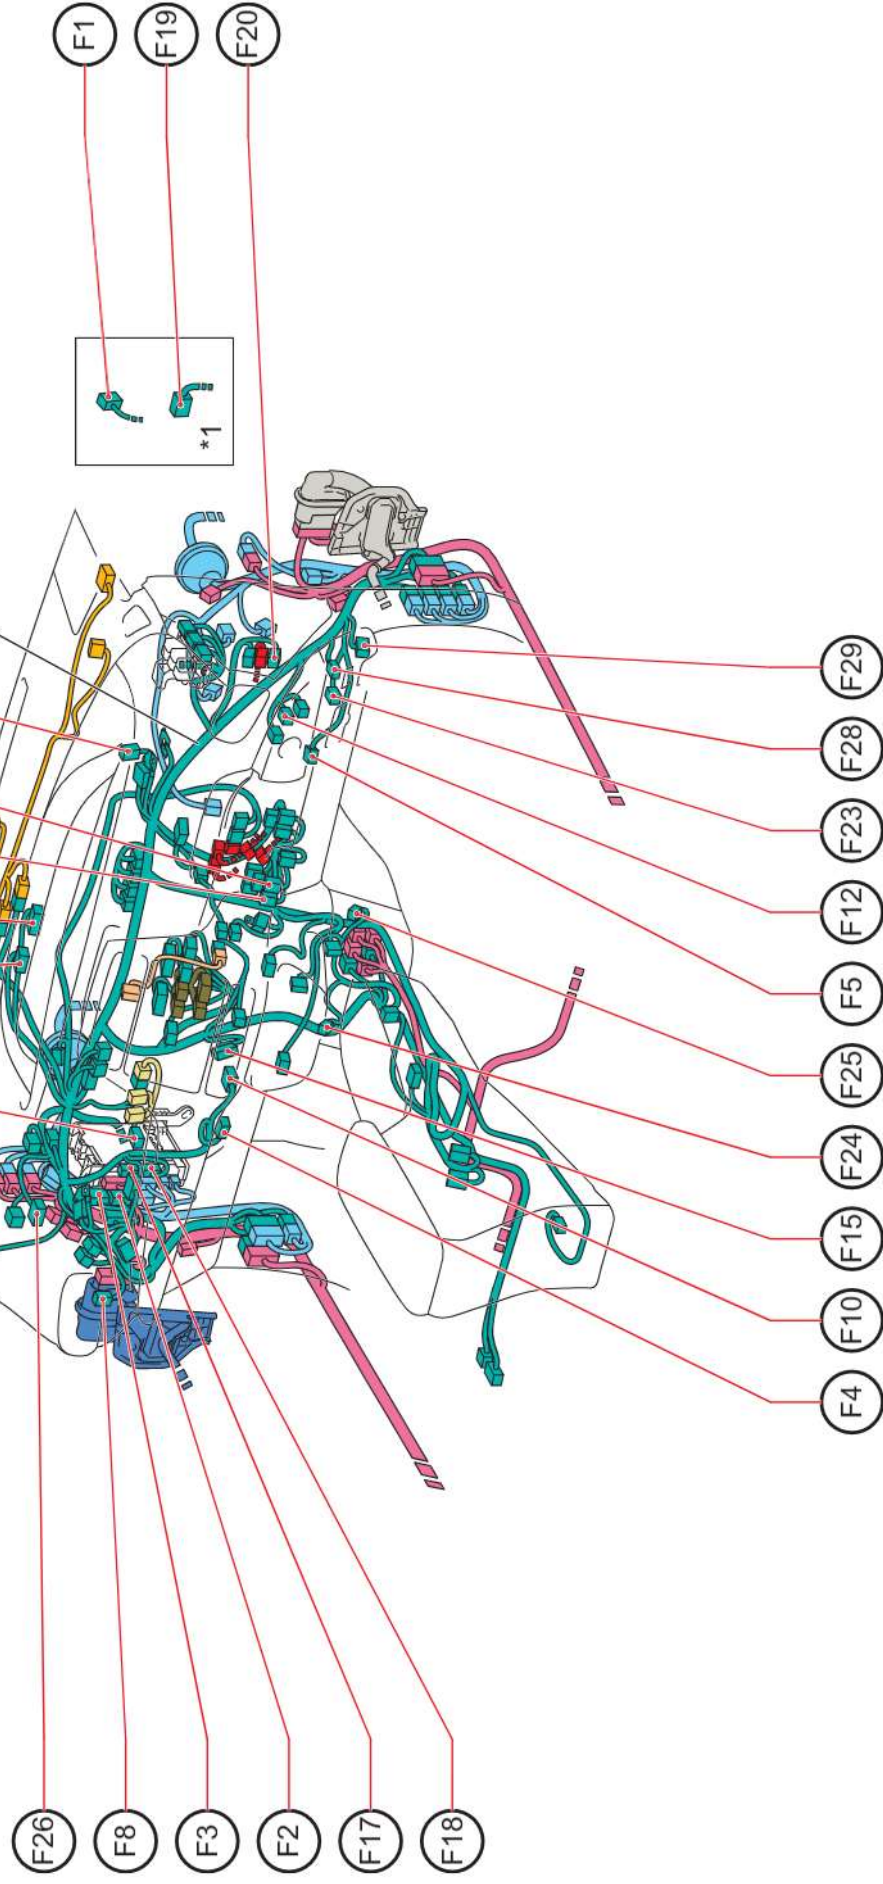


Position of Parts in Instrument Panel (RHD)

F1	Certification ECU
F2	Hybrid Vehicle Control ECU
F3	Hybrid Vehicle Control ECU
F4	No. 1 Interior Illumination Light Assembly RH
F5	No. 1 Interior Illumination Light Assembly LH
F6	Combination Meter Assembly
F7	Combination Meter Assembly
F8	Airbag Cut Off Switch Cylinder Sub-Assembly
F10	Blower Motor with Fan Sub-Assembly
F11	Glove Box Light Assembly
F12	Combination Switch Assembly
F15	Double Lock Door Control Relay Assembly
F17	Main Body ECU
F18	Main Body ECU
F19	ID Code Box
F20	Power Steering ECU Assembly
F21	Spiral Cable with Sensor Sub-Assembly
F22	Spiral Cable with Sensor Sub-Assembly
F23	No. 1 Instrument Panel Airbag Assembly Lower
F24	Seat Heater Switch LH
F25	Seat Heater Switch RH
F26	Clearance Warning ECU Assembly
F27	No. 1 Clearance Warning Buzzer
F28	Fuel Lid Opener Switch
F29	DLC3


Position of Parts in Instrument Panel (RHD)

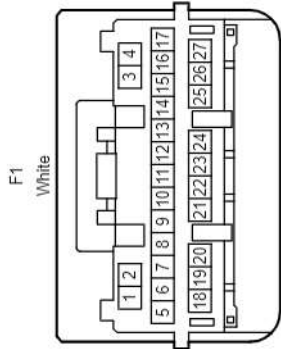


90980-12B78

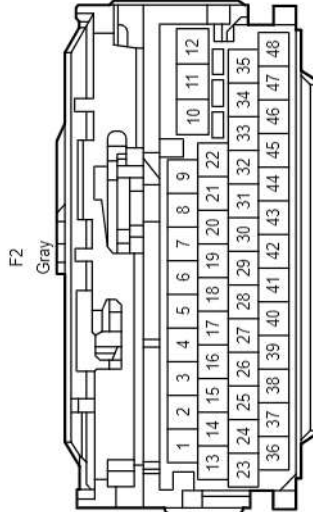


90980-12C23

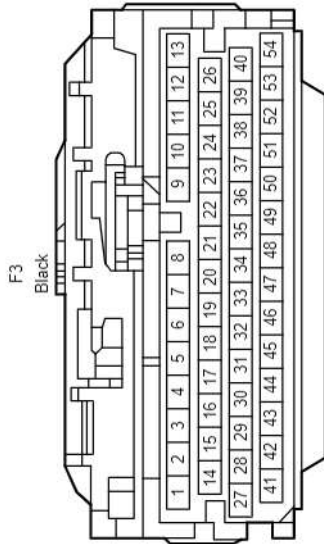


90980-12B96

 


90980-11918

 

90980-11918

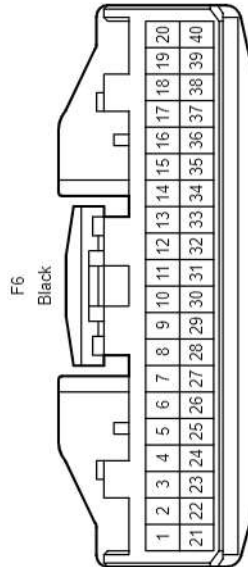


90980-12557

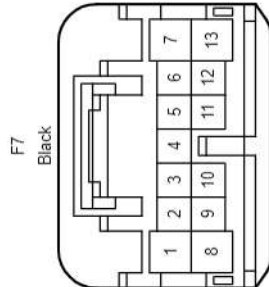

90980-12767





90980-12063

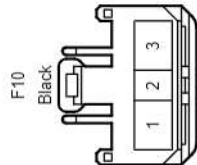

90980-11667




90980-11918

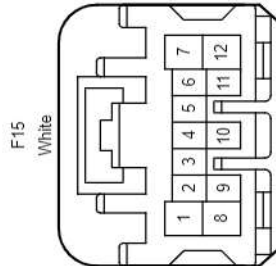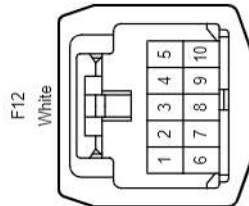


Position of Parts in Instrument Panel (RHD)

F17
White

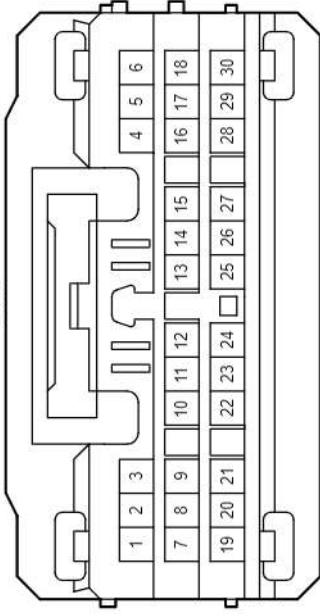


90980-12909

F18
White

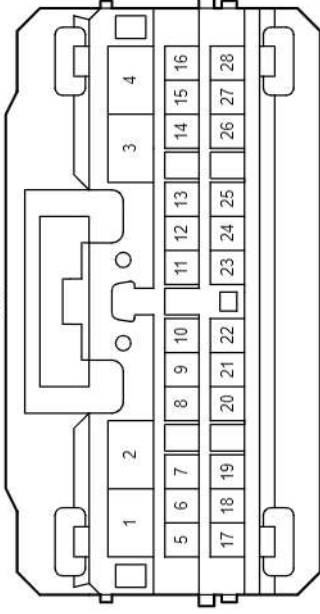


90980-12908

F19
White

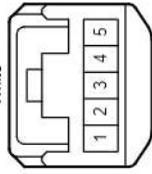


90980-12366

F20
Black

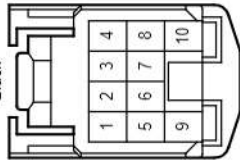


90980-12898

F21
Black

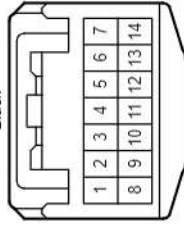

90980-12370

F22
Yellow

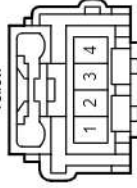


90980-12160

F23
Yellow




90980-12253

 F24
Blue




90980-12012

F25
White

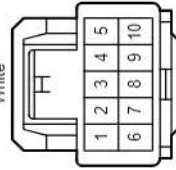


90980-12135

F26
Black

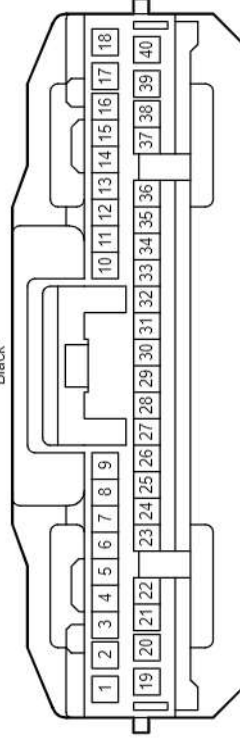


90980-12924

 F27
Black




90980-10825

F28
Black

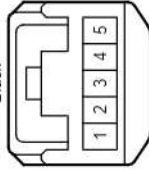


90980-12366

F29
White

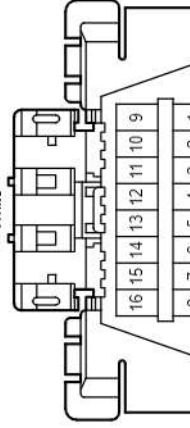

Position of Parts in Instrument Panel (RHD)


- * 2:Australia
- * 3:Europe
- * 8:w/ Navigation System
- * 9:w/o Navigation System
- * 10:Before Aug. 2016 Production
- * 11:From Aug. 2016 Production

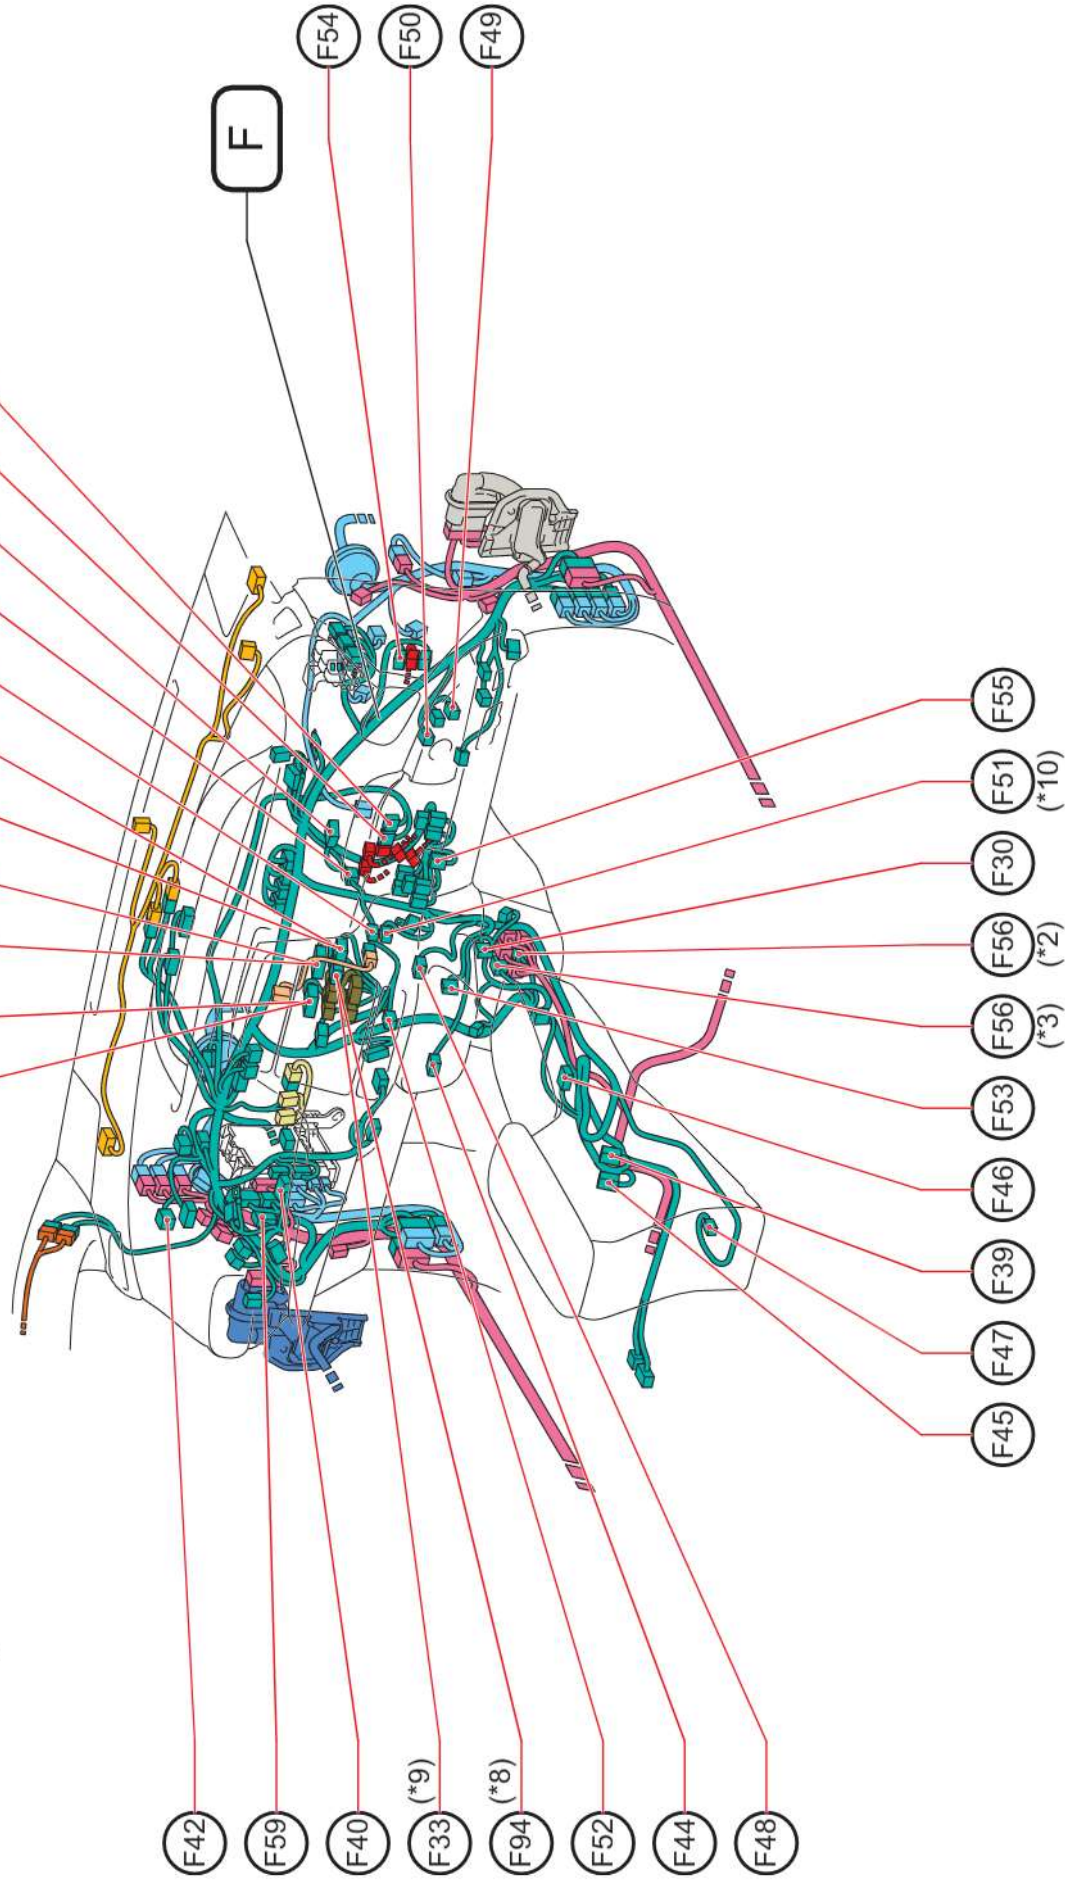


Position of Parts in Instrument Panel (RHD)

F30	Indicator Light Assembly
F31	Radio & Display Receiver Assembly
F32	Radio & Display Receiver Assembly
F33	Radio & Display Receiver Assembly
F34	Radio & Display Receiver Assembly
F39	No. 1 Stereo Jack Adapter Assembly
F40	Driving Support ECU Assembly
F41	Pre-Crash Safety City Buzzer
F42	No. 2 Clearance Warning Buzzer
F43	Windshield Wiper Relay Assembly
F44	Pattern Select Switch Assembly
F45	No. 1 Power Outlet Socket Assembly
F46	No. 1 Indoor Electrical Key Antenna Assembly
F47	No. 2 Power Outlet Socket Assembly
F48	Shift Lock Control Unit Assembly
F49	No. 2 Combination Switch Assembly
F50	Power Switch
F51	Cooler (Room Temperature Sensor) Thermistor
F52	A/C Control Assembly
F53	Transmission Shift Main Switch
F54	Power Steering ECU Assembly
F55	Steering Sensor
F56	Airbag ECU Assembly
F57	A/C Amplifier Assembly
F58	A/C Amplifier Assembly
F59	Network Gateway ECU
F92	Navigation Receiver Assembly
F93	Navigation Receiver Assembly
F94	Navigation Receiver Assembly
F95	Navigation Receiver Assembly


Position of Parts in Instrument Panel (RHD)

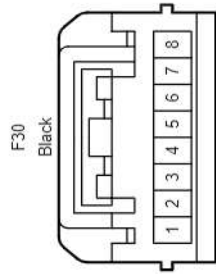


90980-12550

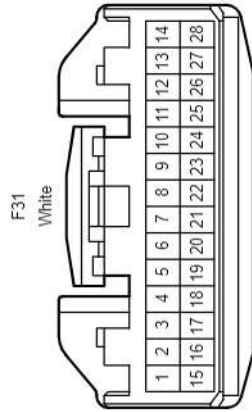


90980-12555

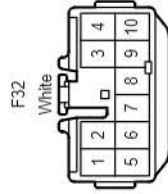


90980-10997

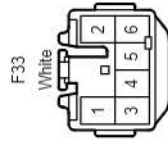


90980-10996

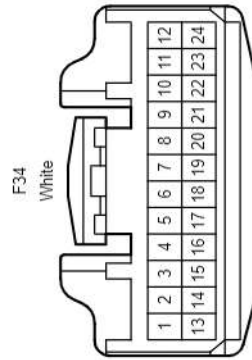


90980-12554

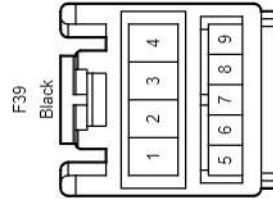


90980-12849

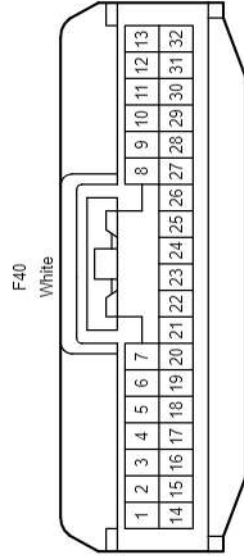


90980-12422

 


90980-10860

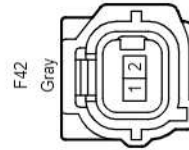

90980-12572

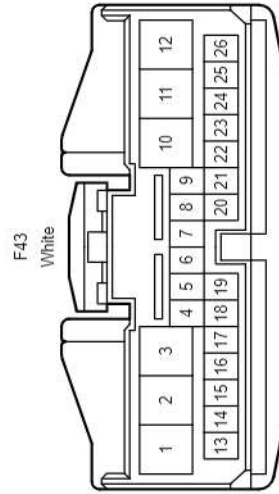


90980-12444

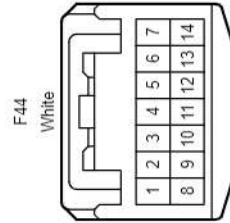


90980-12370




90980-12498

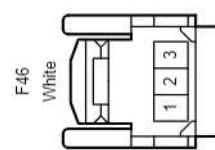


90980-12795

 

90980-12498

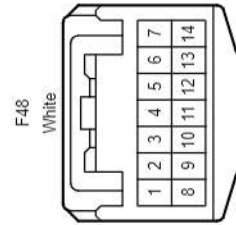

90980-12370

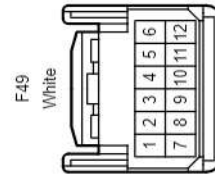

90980-12552

F50
Black

F51
Black


F52
White

F53
Black

F54
Black


Position of Parts in Instrument Panel (RHD)

F55
Blue

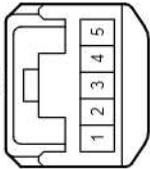


90980-12366

F56
Yellow

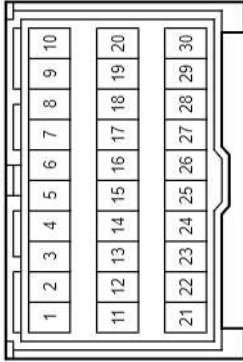


90980-12391

F57
Black

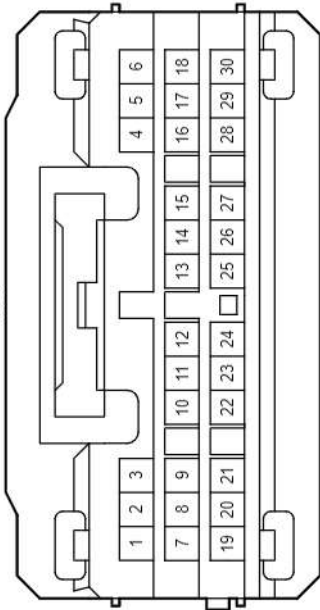


90980-12761

F58
Black

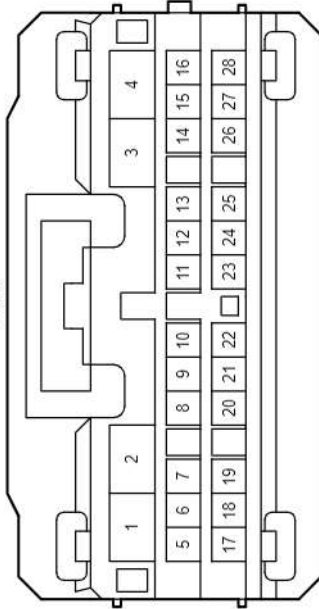


90980-12760

F59
Black

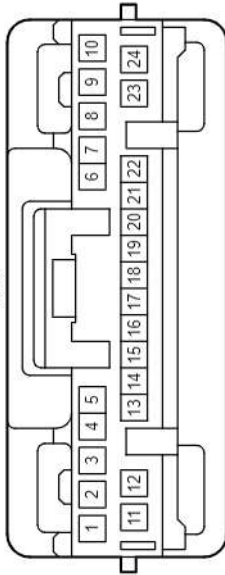


90980-12912

F92
White

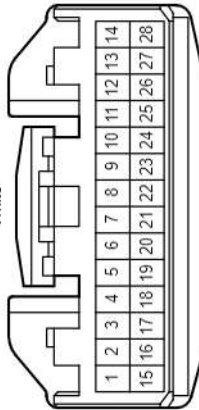


90980-12555

 F93
White




90980-10997

 F94
White




90980-10996

F95
White

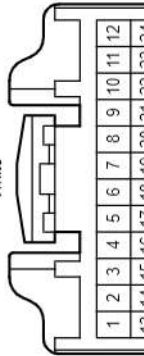

- * 4:Except U.K.
- * 5:U.K.
- * 8:w/ Navigation System
- * 9:w/o Navigation System

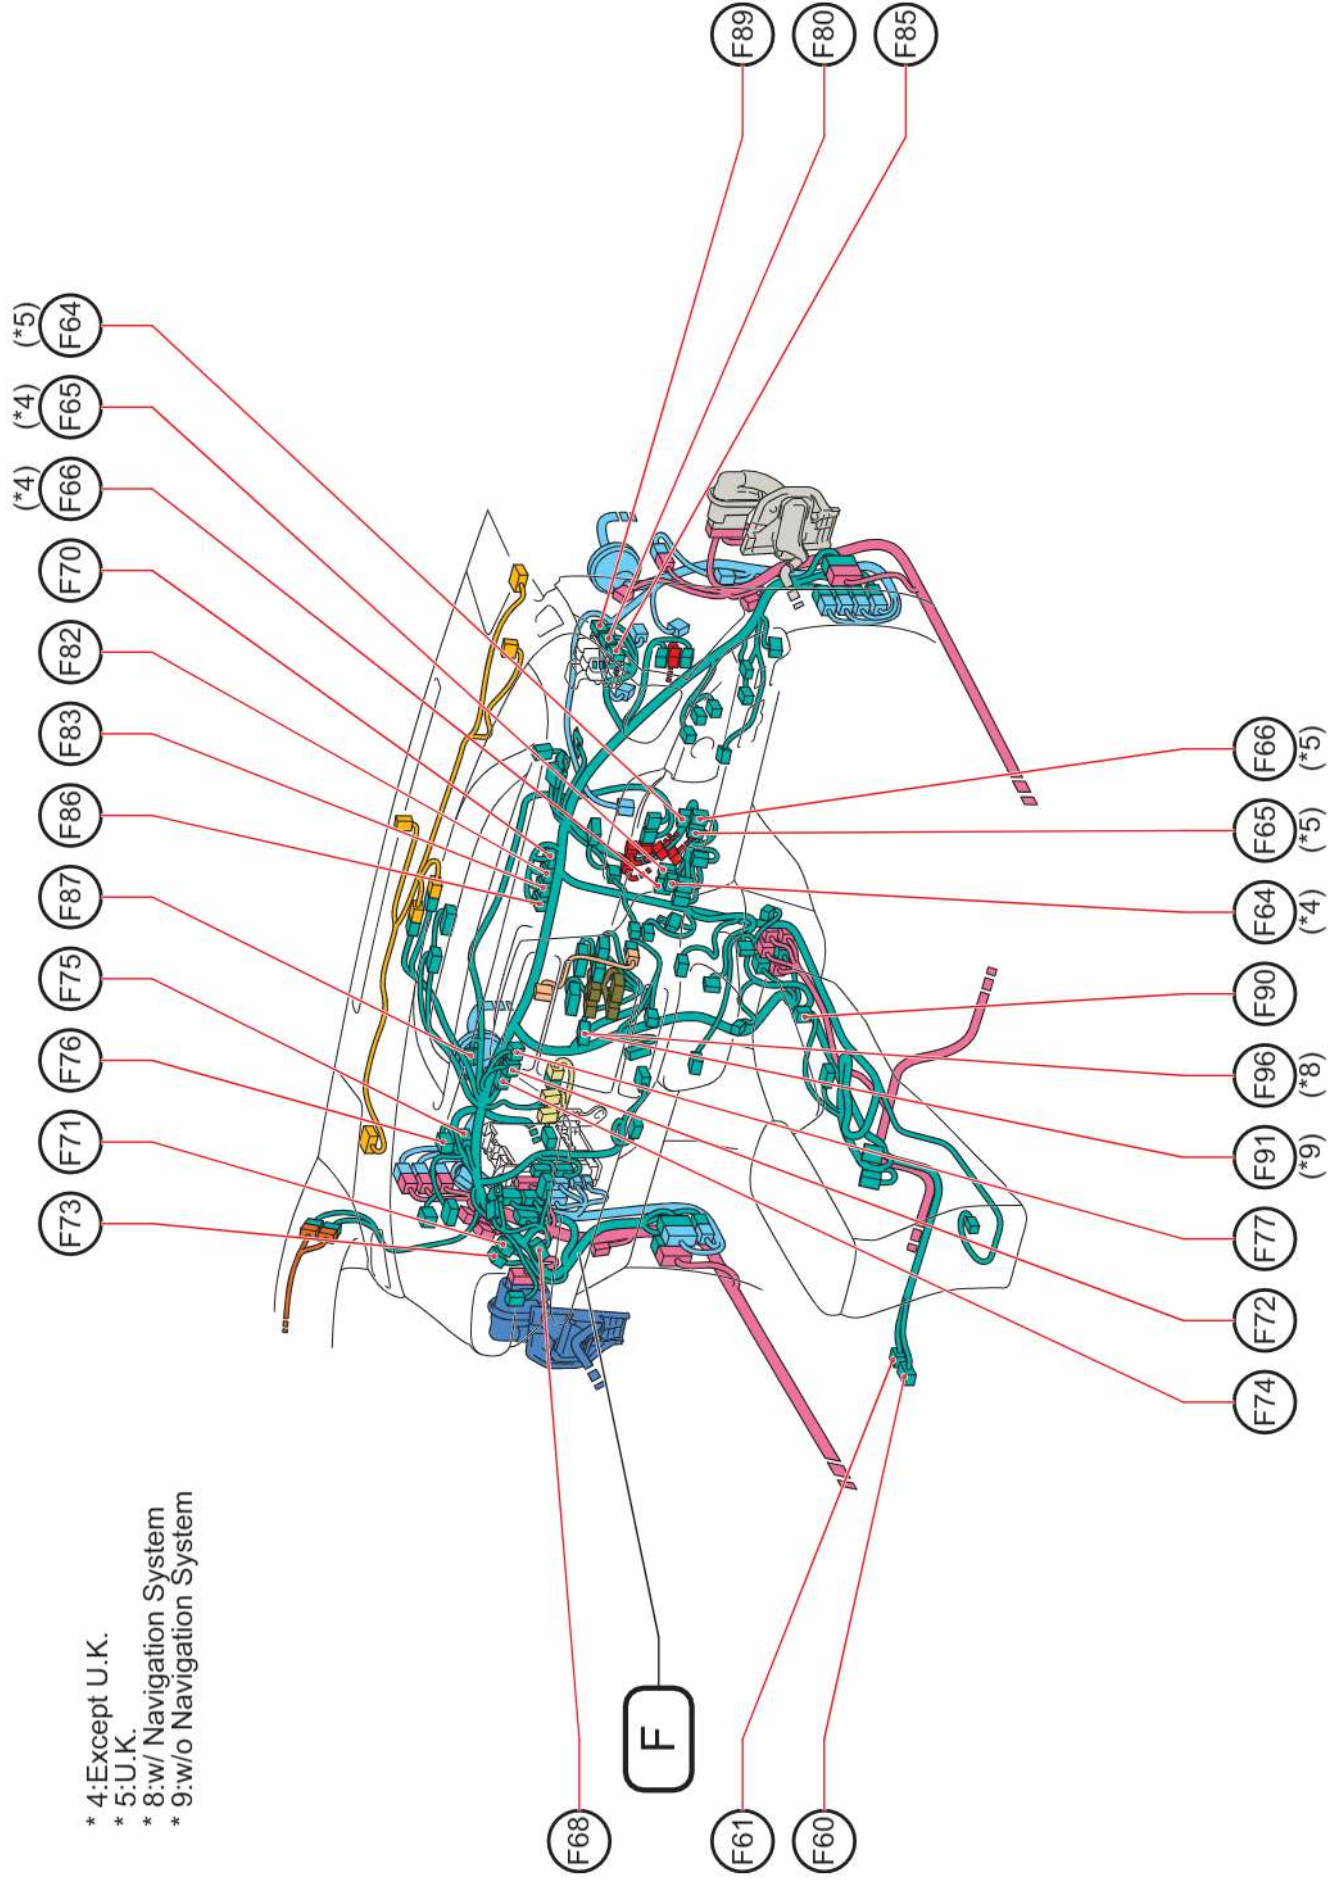


Position of Parts in Instrument Panel (RHD)

- F60 Stereo Component Amplifier Assembly
- F61 Stereo Component Amplifier Assembly
- F64 Headlight Dimmer Switch Assembly
- F65 Windshield Wiper Switch Assembly
- F66 Windshield Wiper Switch Assembly
- F68 No. 1 CAN Junction Connector
- F70 No. 2 CAN Junction Connector
- F71 No. 3 CAN Junction Connector
- F72 No. 4 CAN Junction Connector
- F73 No. 5 CAN Junction Connector
- F74 No. 6 Junction Connector
- F75 No. 7 Junction Connector
- F76 No. 8 Junction Connector
- F77 No. 9 Junction Connector
- F80 No. 12 Junction Connector
- F82 No. 14 Junction Connector
- F83 No. 15 Junction Connector
- F85 No. 17 Junction Connector
- F86 No. 18 Junction Connector
- F87 No. 19 Junction Connector
- F89 No. 21 Junction Connector
- F90 Mobile Wireless Charger Cradle Assembly
- F91 Radio & Display Receiver Assembly
- F96 Navigation Receiver Assembly


Position of Parts in Instrument Panel (RHD)

F60
White

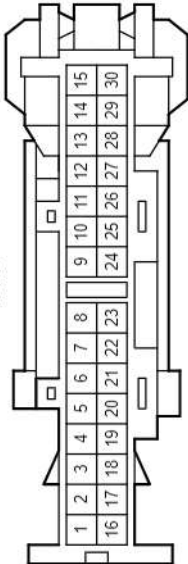


90980-12979

F61
White

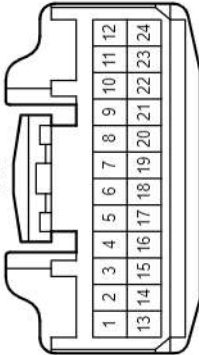


90980-12554

F64
White

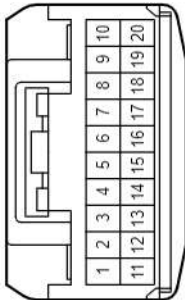


90980-12460

F65
White

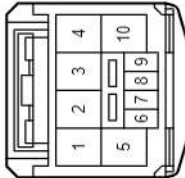


90980-12359

F66
White

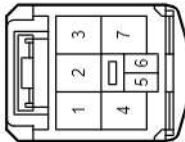


90980-12358

F68
White

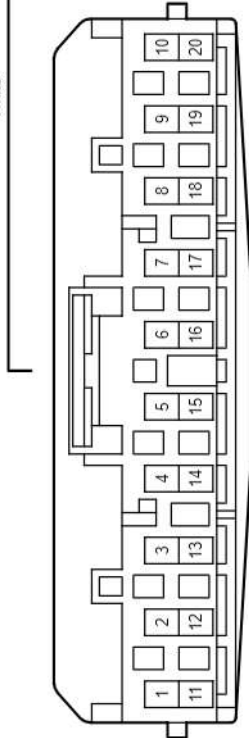


90980-12A58

F70
Black

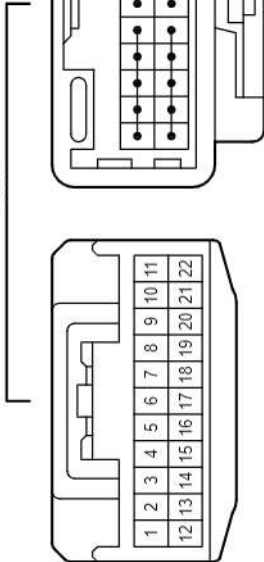


90980-12372

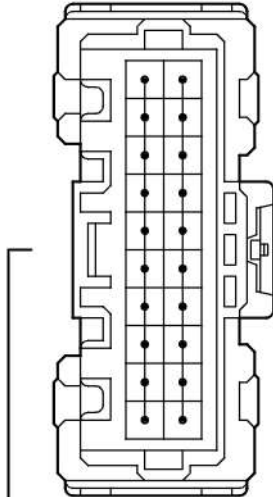


Position of Parts in Instrument Panel (RHD)

F72
Black

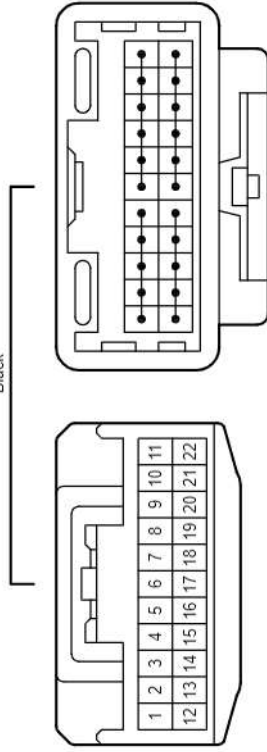


90980-12372

F73
Gray

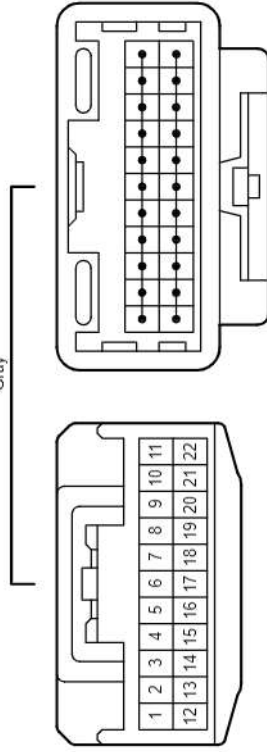


90980-12372

F74
Gray




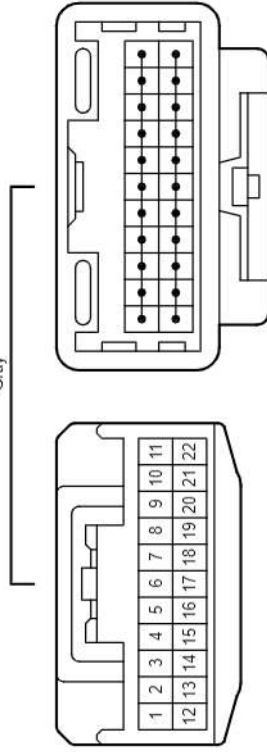


90980-12372
(RHD)





F74
White

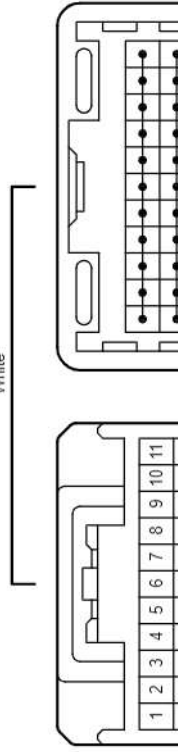

Position of Parts in Instrument Panel (RHD)

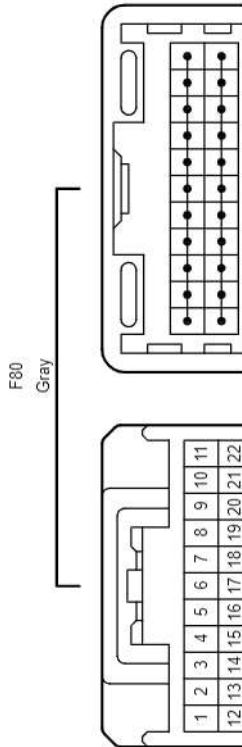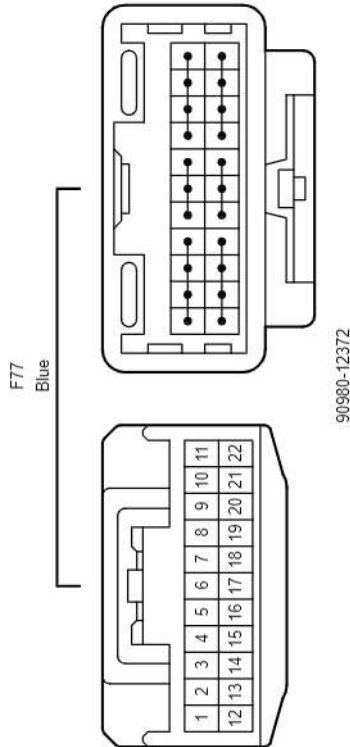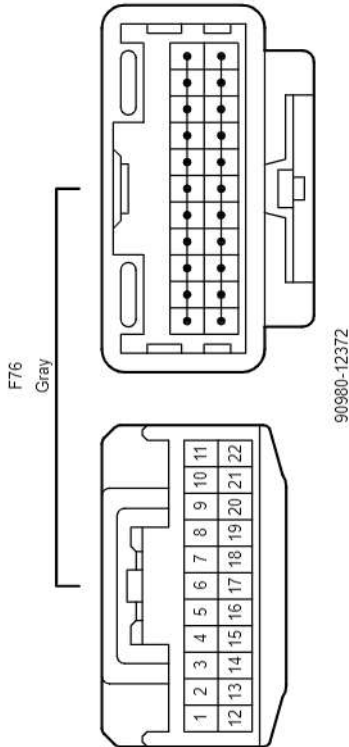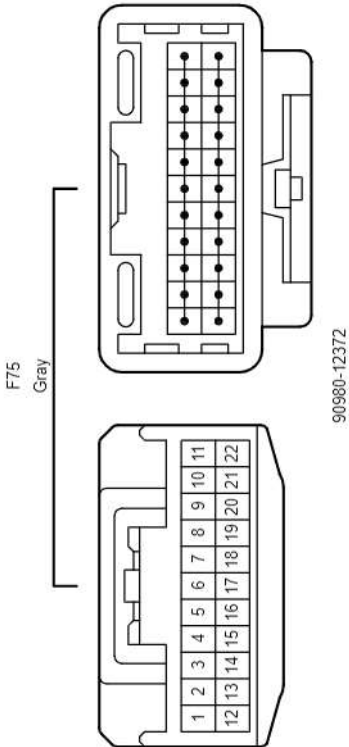


Position of Parts in Instrument Panel (RHD)

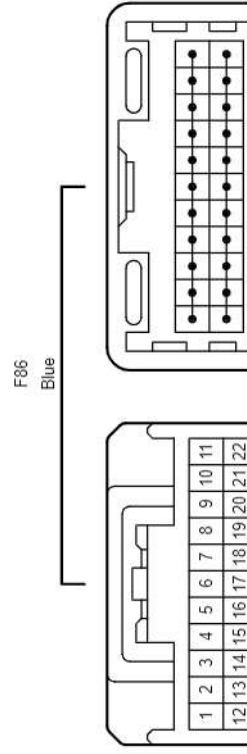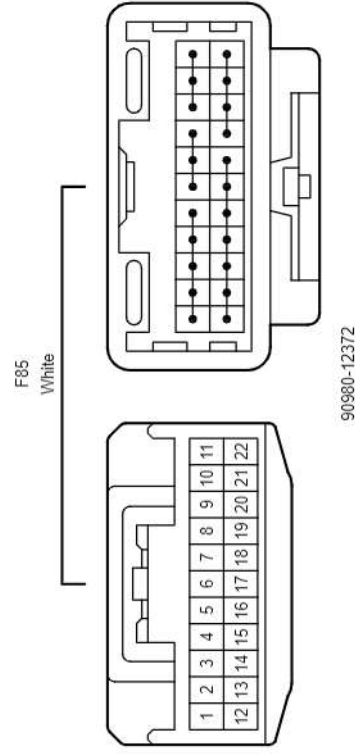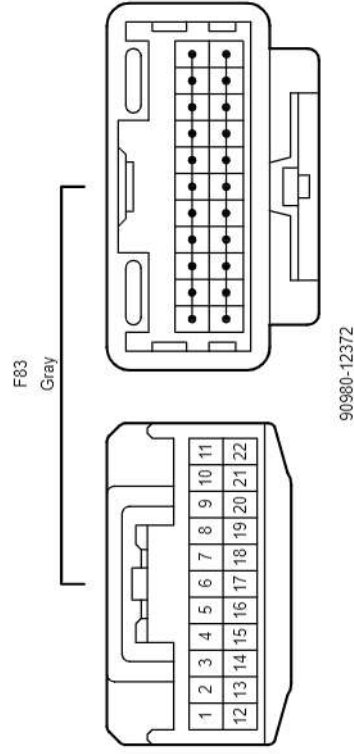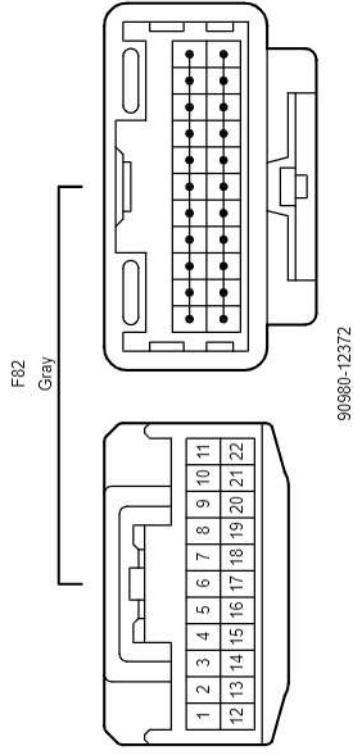


Position of Parts in Instrument Panel (RHD)


F87
White

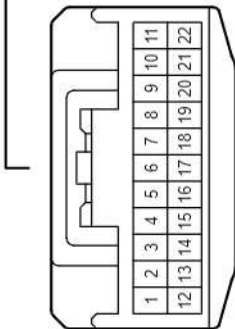


90980-12372

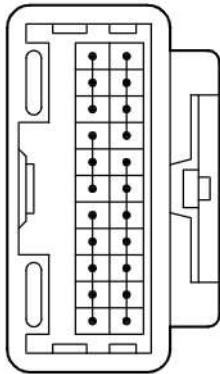


F89
Gray

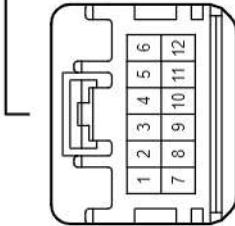

90980-12737

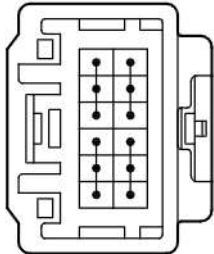


F90
White

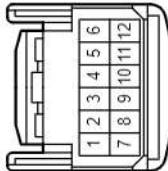


90980-12552

F91
Gray

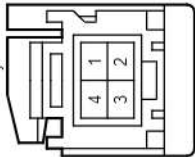


90980-12A52

F96
Gray

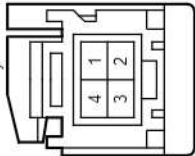

90980-12A52












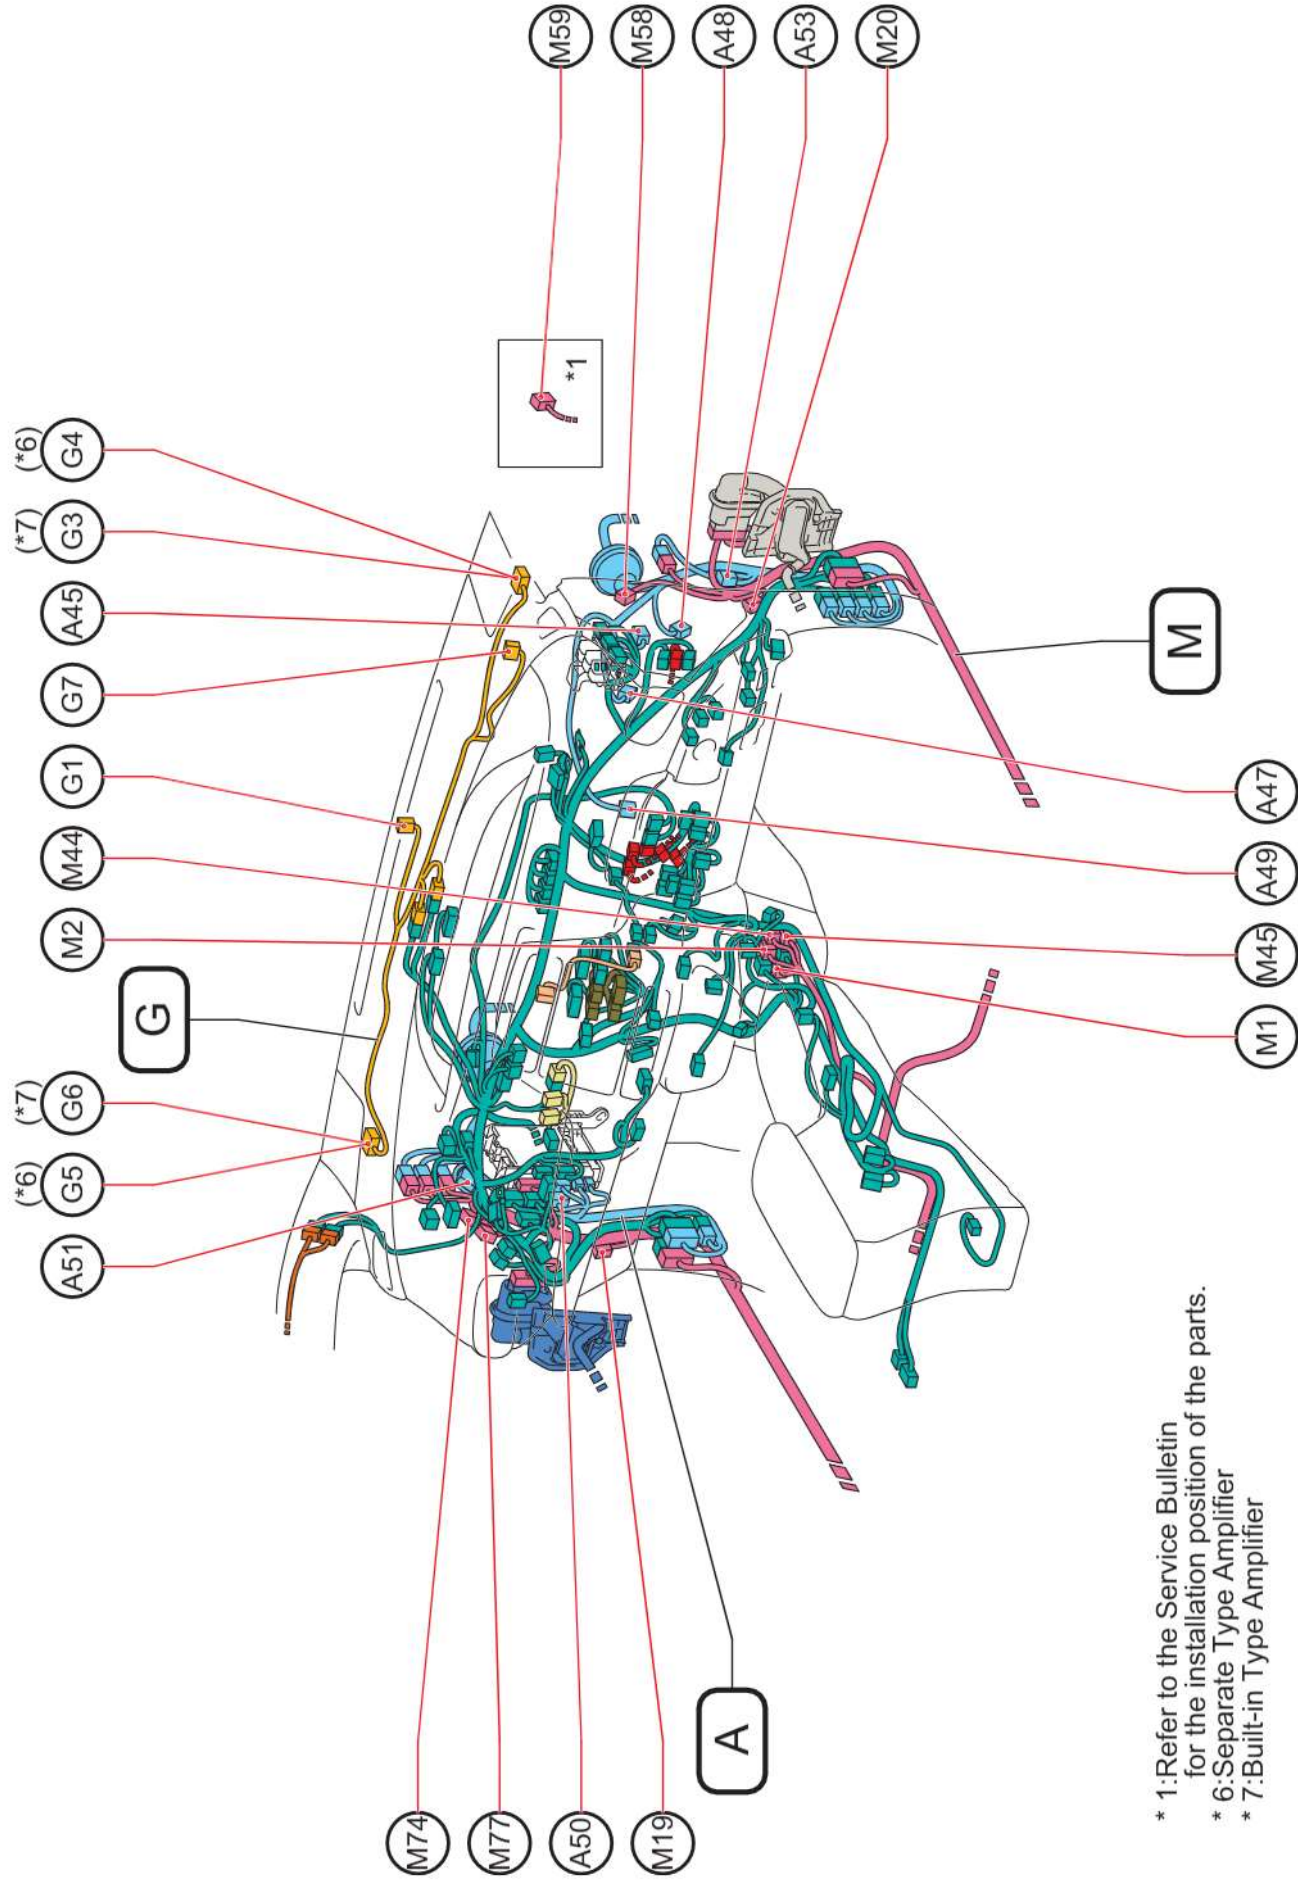


- * 1: Refer to the Service Bulletin for the installation position of the parts.
- * 6: Separate Type Amplifier
- * 7: Built-in Type Amplifier

Position of Parts in Instrument Panel (RHD)

A45	Brake Pedal Stroke Sensor Assembly
A47	Stop Light Switch Assembly
A48	Accelerator Pedal Sensor Assembly
A49	Parking Brake Switch Assembly
A50	Hybrid Vehicle Control ECU
A51	No. 1 Junction Connector
A53	No. 3 Junction Connector
G1	Automatic Light Control Sensor
G3	Front No. 2 Speaker Assembly RH
G4	Front No. 2 Speaker Assembly RH
G5	Front No. 2 Speaker Assembly LH
G6	Front No. 2 Speaker Assembly LH
G7	Combination Meter Mirror ECU
M1	Airbag ECU Assembly
M2	Airbag ECU Assembly
M19	Diode (Front Courtesy Light LH)
M20	Diode (Front Courtesy Light RH)
M44	Airbag ECU Assembly
M45	Airbag ECU Assembly
M58	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
M59	Certification ECU
M74	No. 22 Junction Connector
M77	No. 25 Junction Connector

Position of Parts in Instrument Panel (RHD)

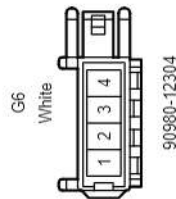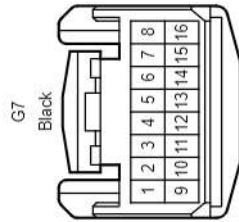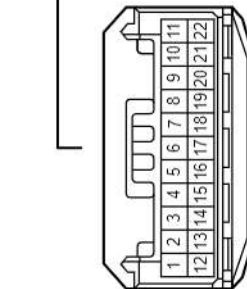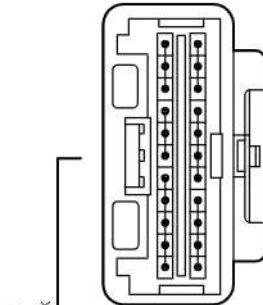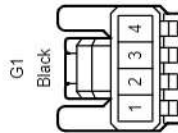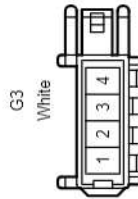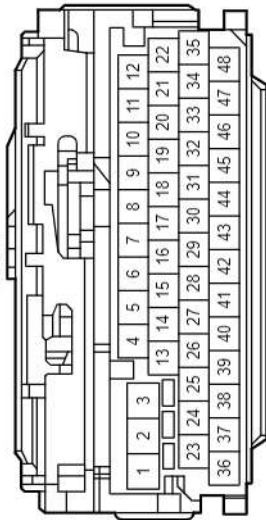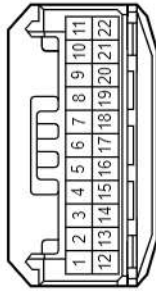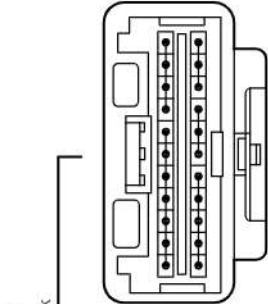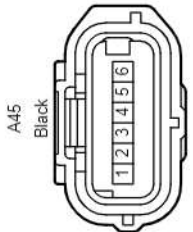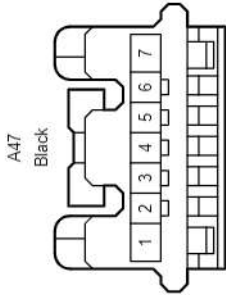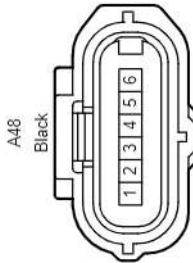

M44
Yellow


M20
Black

M19
Black

M2
Yellow

M1
Yellow


Position of Parts in Instrument Panel (RHD)

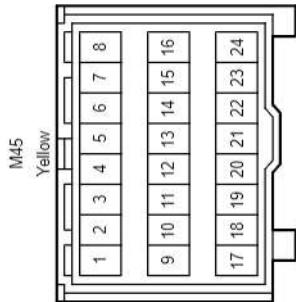

90980-12390




90980-11142

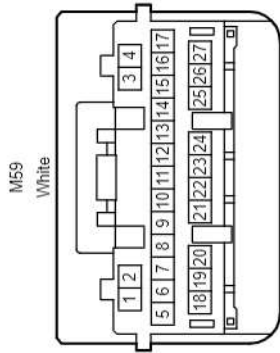


90980-12B77

M74
Black

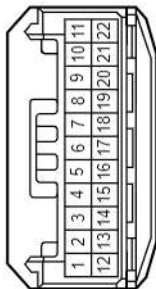



90980-12B54

M77
Black

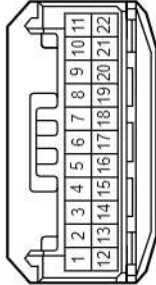

90980-12B54

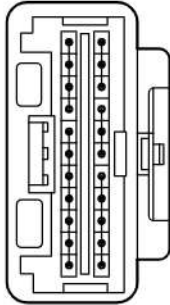















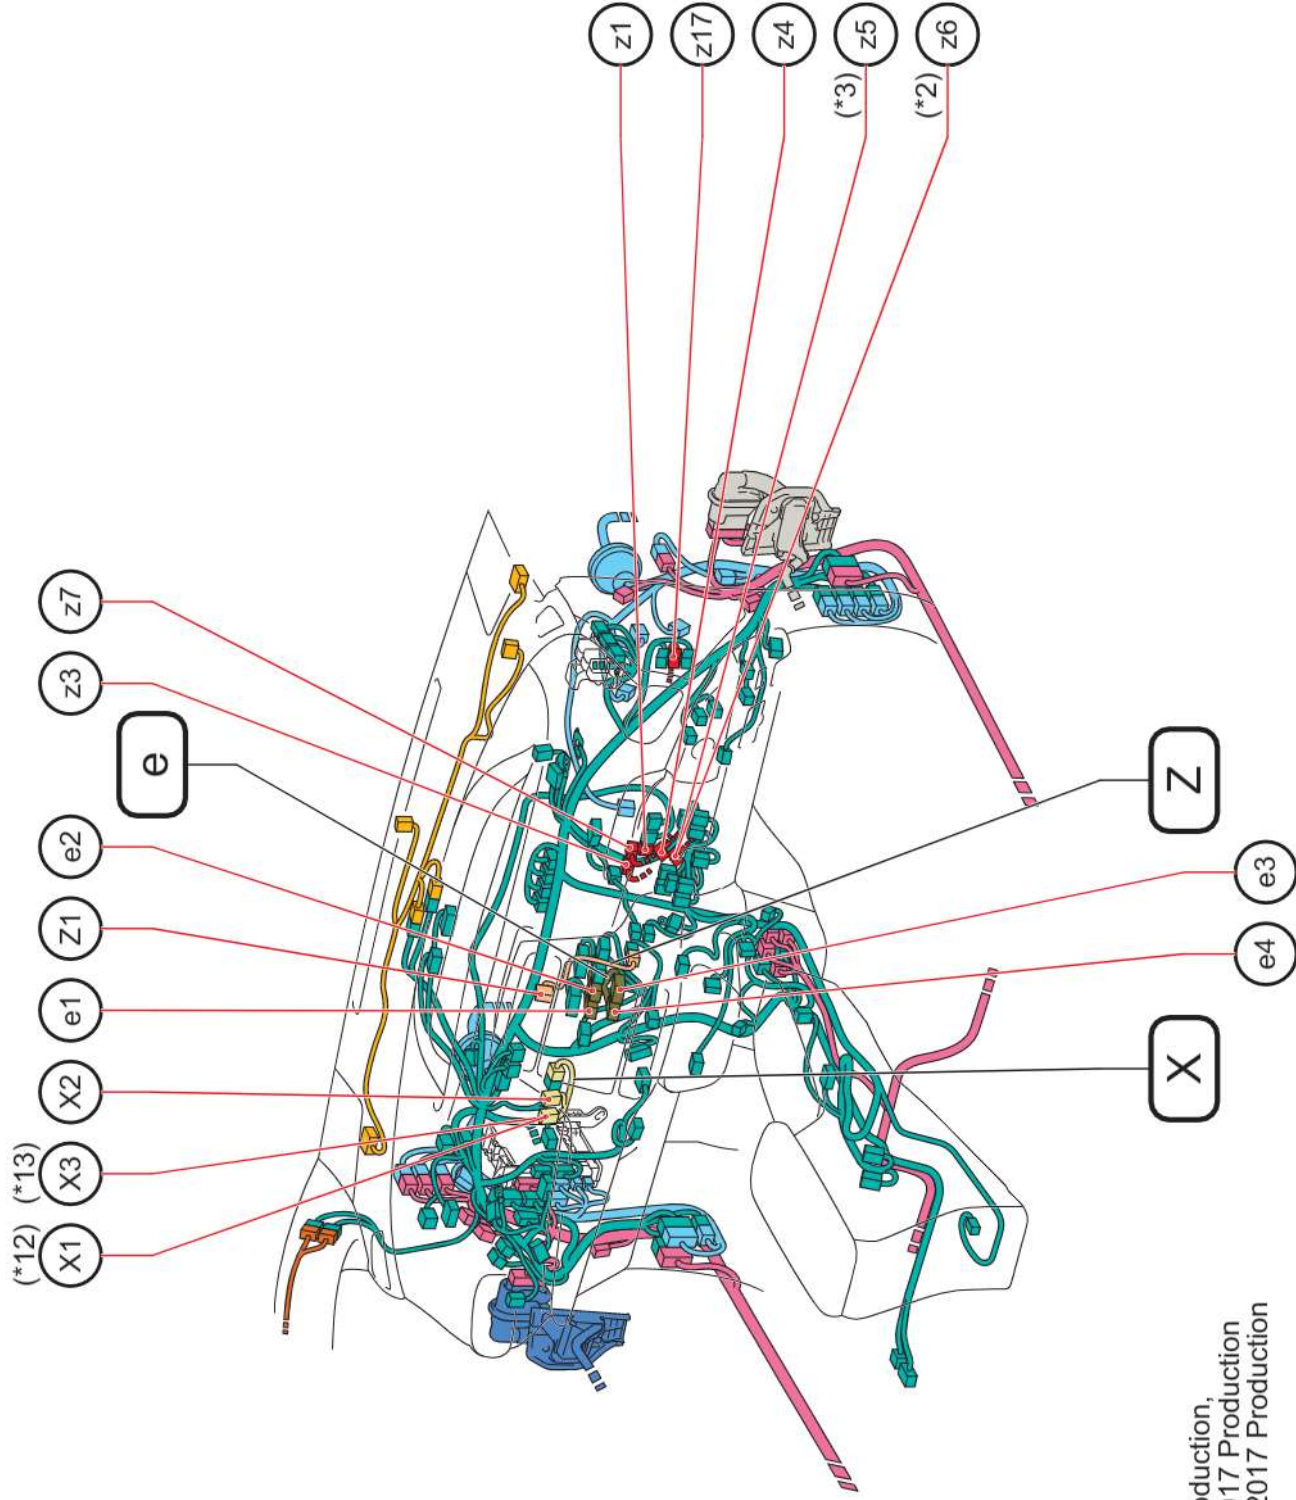


- * 2:Australia
- * 3:Europe
- * 12:Before May 2017 Production,
Europe From May 2017 Production
- * 13:Australia From May 2017 Production

Position of Parts in Instrument Panel (RHD)

X1	Instrument Panel Passenger Airbag without Door Assembly
X2	Instrument Panel Passenger Airbag without Door Assembly
X3	Instrument Panel Passenger Airbag without Door Assembly
Z1	Hazard Warning Signal Switch Assembly
e1	Radio & Display Receiver Assembly
e2	Radio & Display Receiver Assembly
e3	Navigation ECU
e4	Navigation ECU
z1	A/C Harness Assembly , A/C Amplifier Assembly
z3	Steering Pad Switch Assembly , Spiral Cable with Sensor Sub-Assembly
z4	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z5	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z6	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable with Sensor Sub-Assembly
z7	Cruise Control Switch Wire , Spiral Cable with Sensor Sub-Assembly
z17	Electric Power Steering Column Sub-Assembly , Power Steering ECU Assembly

  
 
Position of Parts in Instrument Panel (RHD)

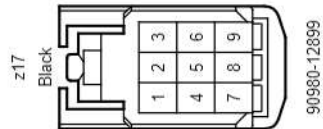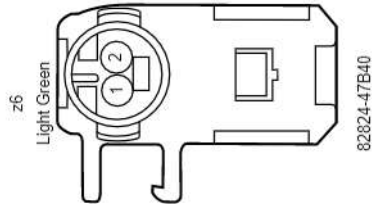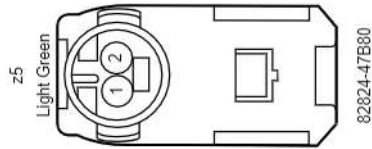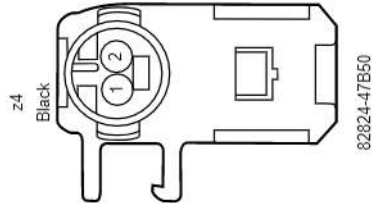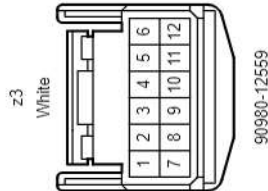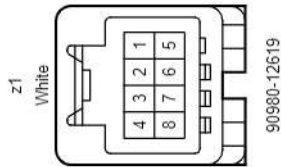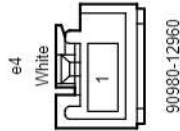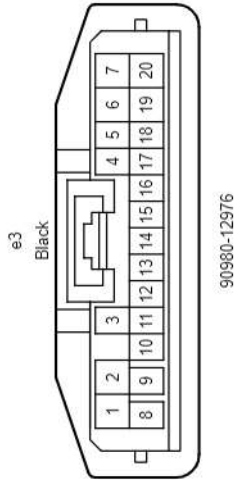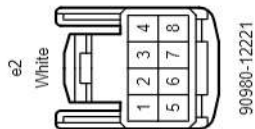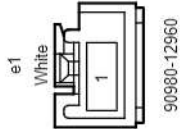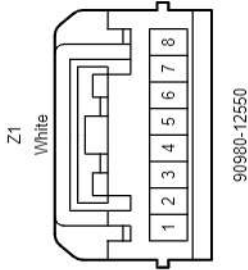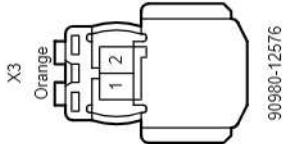





Wire and Wire in Instrument Panel (RHD)



AF1
Gray

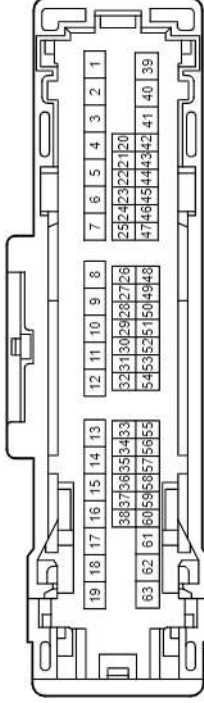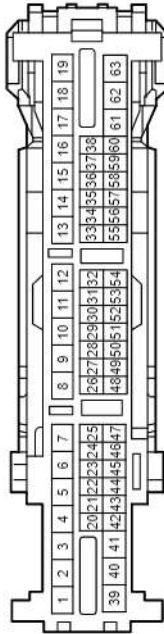



AF2
White

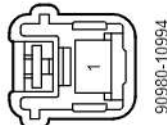 



AF3
White

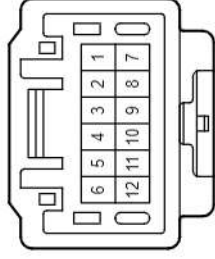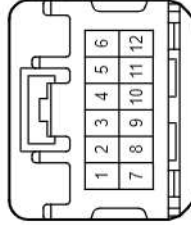


AF4
Gray

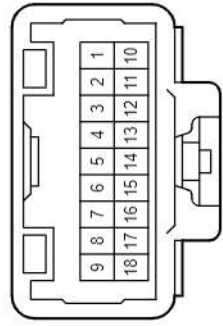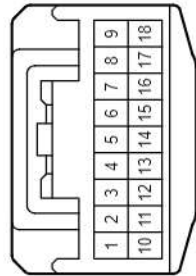



AF5
Yellow

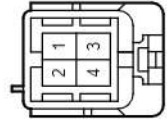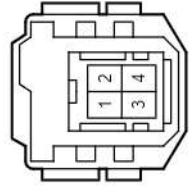


AF6
White

 

AM1
White

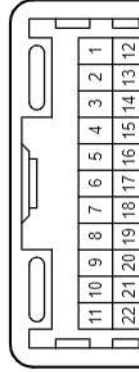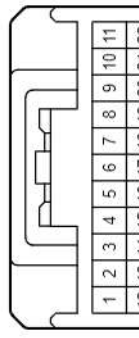


Wire and Wire in Instrument Panel (RHD)

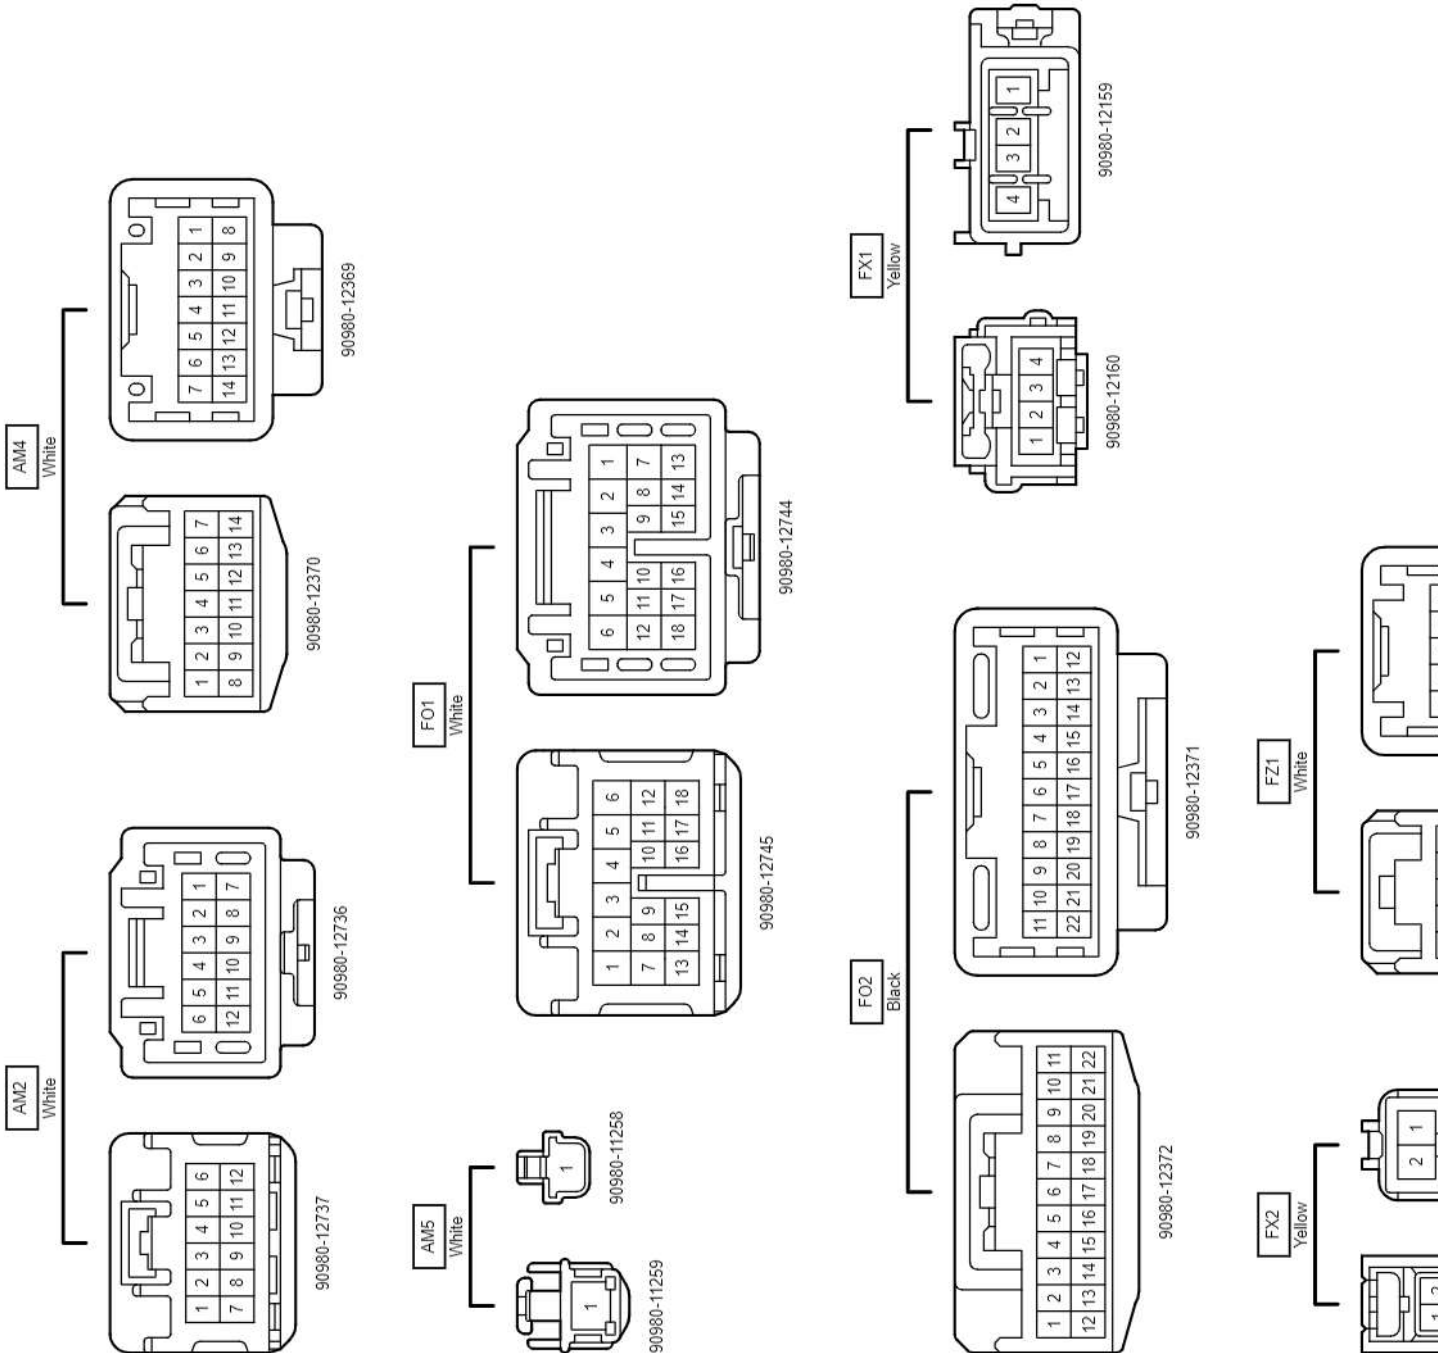


Wire and Wire in Instrument Panel (RHD)

GF1
White

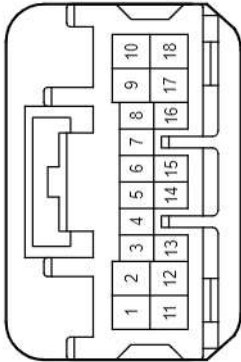


90980-12739

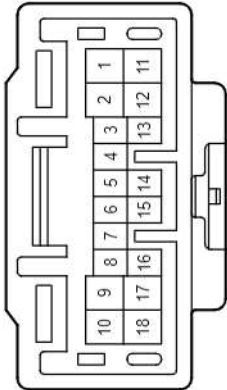


90980-12738

GF2
White

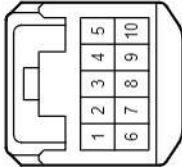


90980-12368

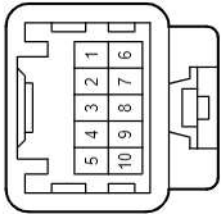


90980-12367

GF3
White

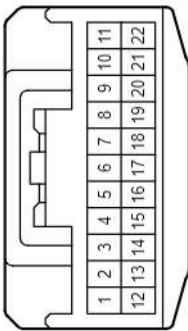


90980-12372

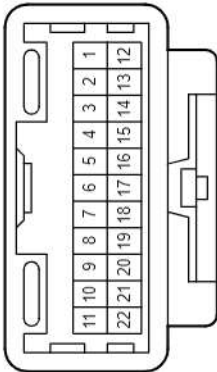


90980-12371

IM1
White

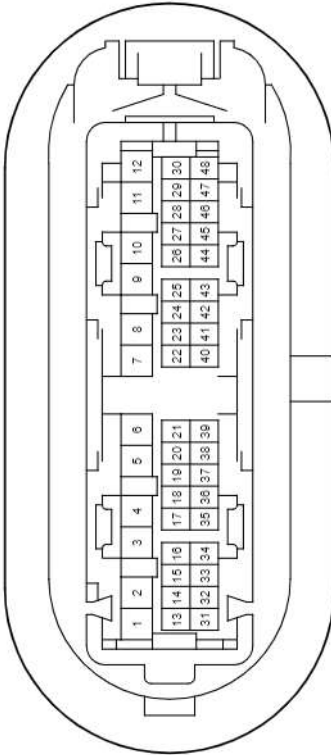

90980-12A09

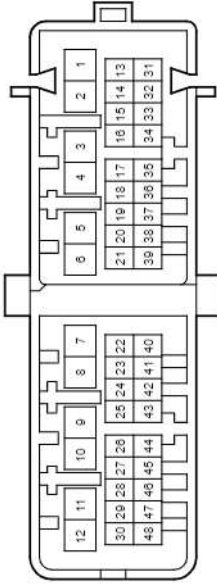


90980-12A06


JM1
White

Wire and Wire in Instrument Panel (RHD)

MF1
White

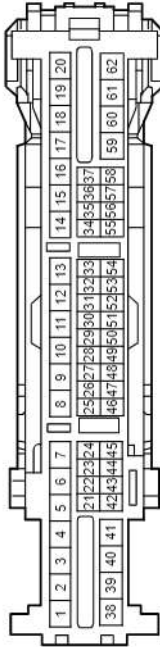


90980-12B22

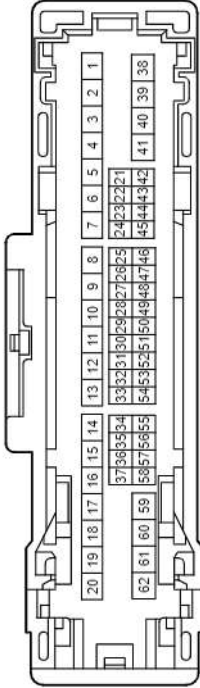


90980-12B21


MF2
White

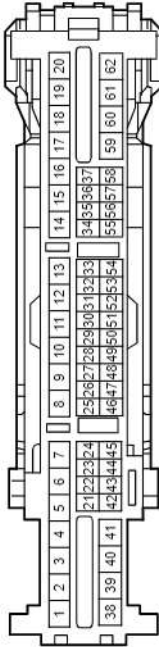

90980-12B22

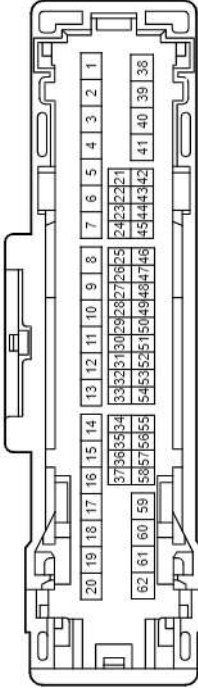




















90980-12B21

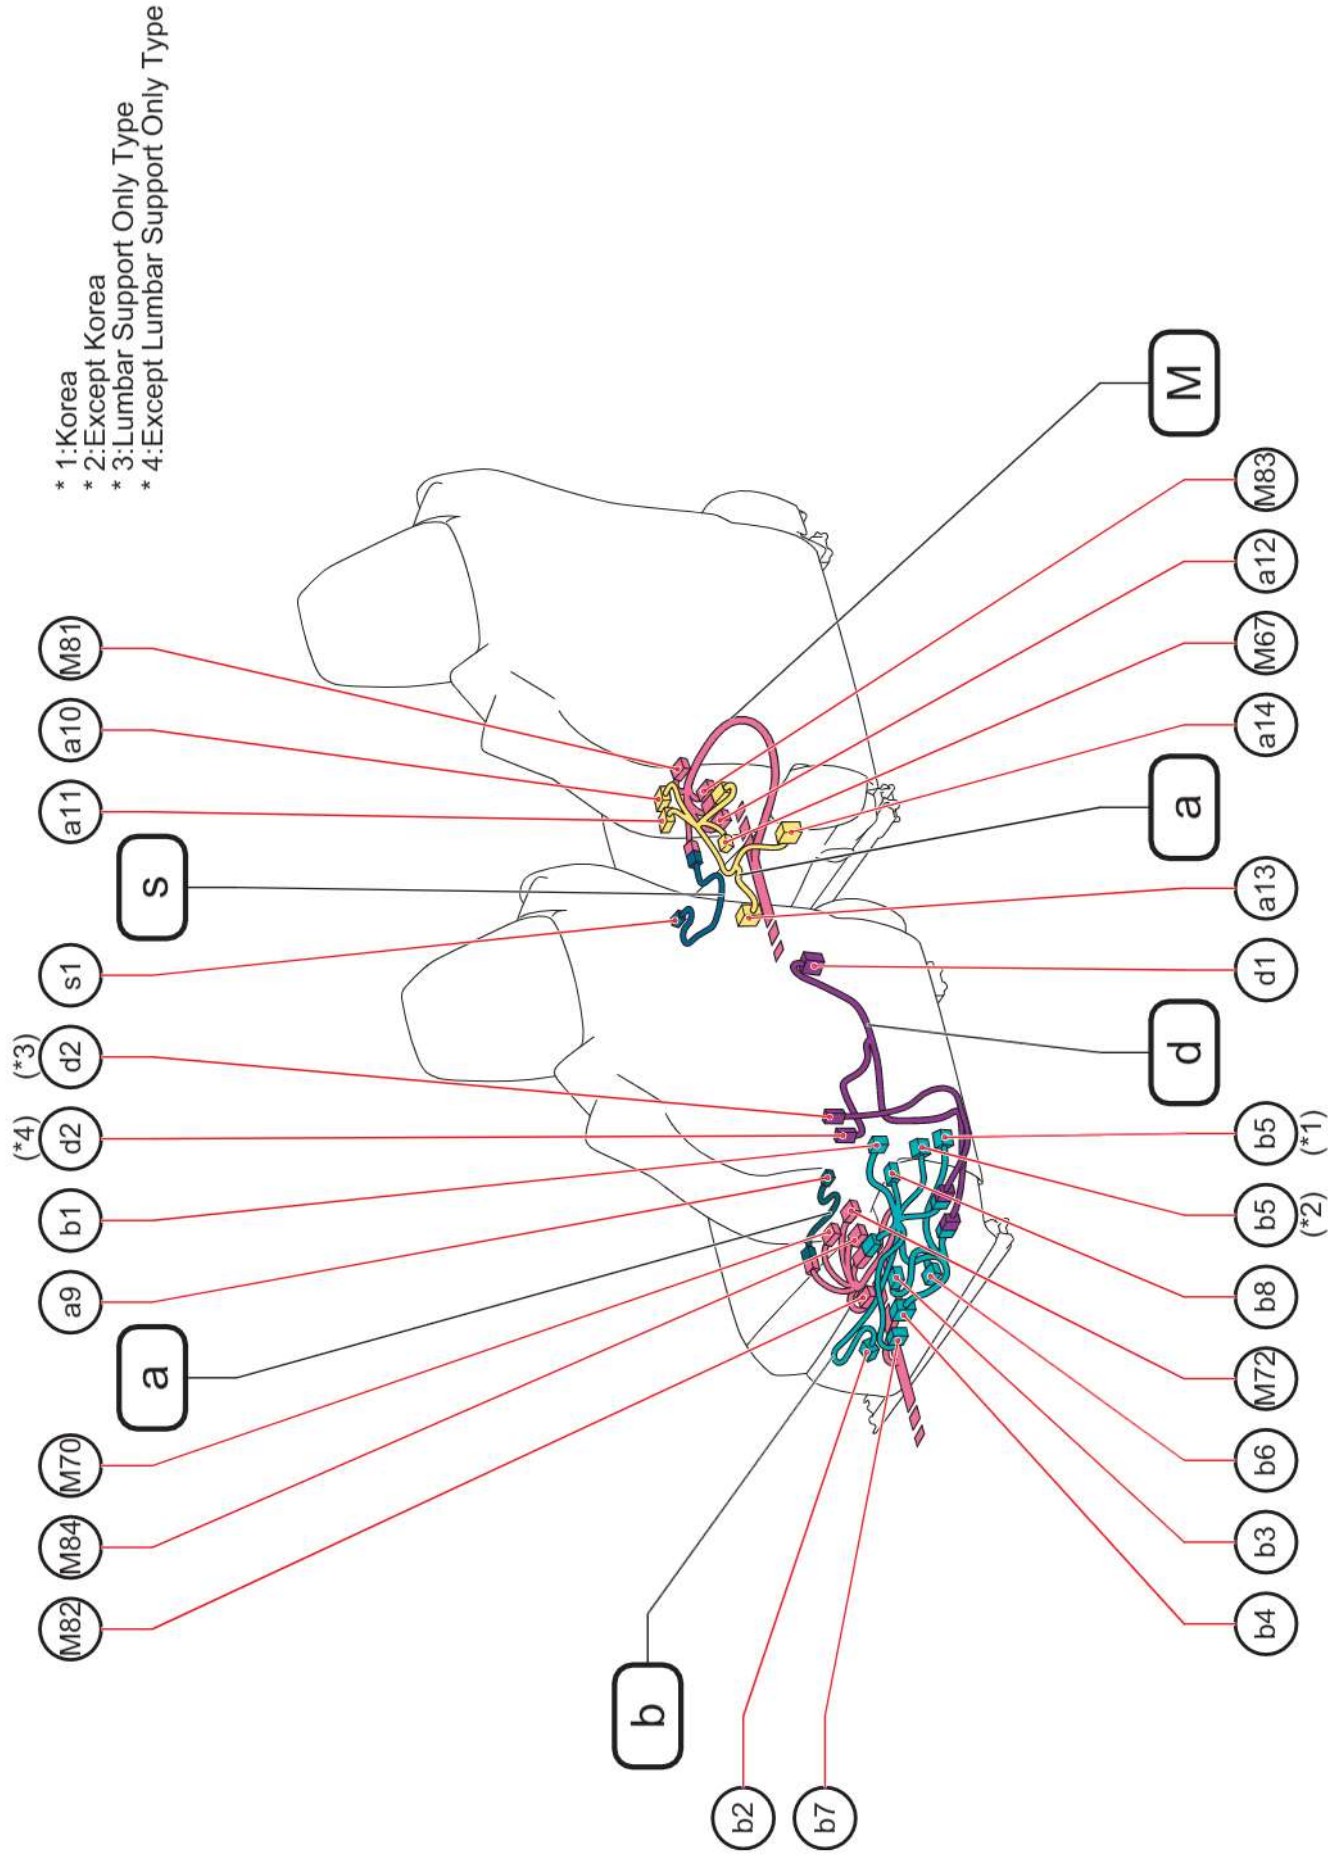


Position of Parts in Seat (LHD)


M67	Front Seat Inner Belt Assembly RH
M70	Front Seat Inner Belt Assembly LH
M72	Front Seat Inner Belt Assembly LH
M81	Front Seat Cushion Heater Assembly RH
M82	Front Seat Cushion Heater Assembly LH
M83	Front Seat Airbag Assembly RH
M84	Front Seat Airbag Assembly LH
a9	Seat Position Airbag Sensor
a10	Occupant Detection ECU
a11	Occupant Detection ECU
a12	Front Seat Inner Belt Assembly RH
a13	Front in Weight Detection Sensor Sub-Assembly
a14	Rear in Weight Detection Sensor Sub-Assembly
b1	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
b2	Front Power Seat Tilt Position Motor LH (Front Seat Adjuster Assembly LH)
b3	Front Power Seat Lift Position Motor LH (Front Seat Adjuster Assembly LH)
b4	Front Power Seat Switch LH
b5	Front Seat Cushion Heater Assembly LH
b6	No. 28 Junction Connector
b7	Front Lumbar Power Seat Switch LH
b8	Condenser
d1	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
d2	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
s1	Front Seat Cushion Airbag Assembly RH

    Position of Parts in Seat (LHD)

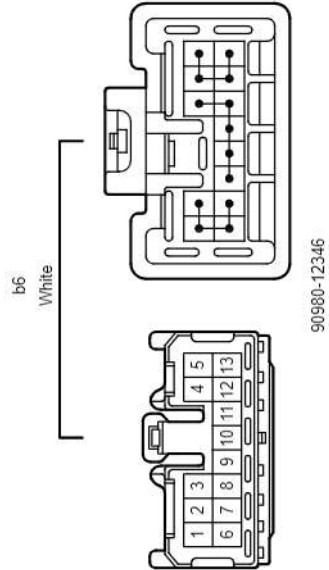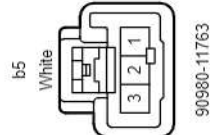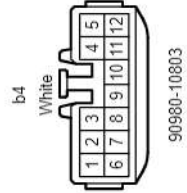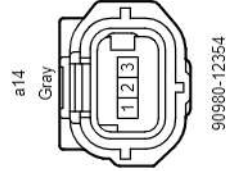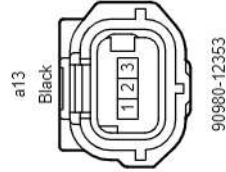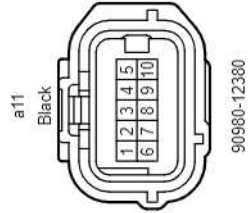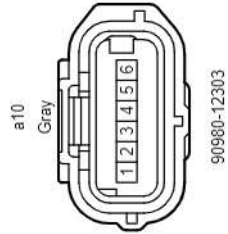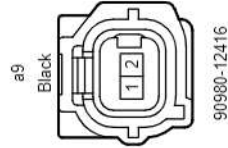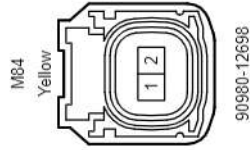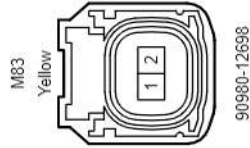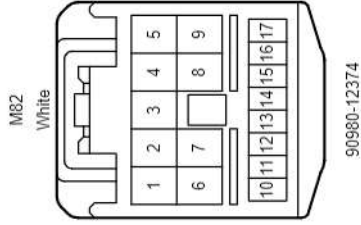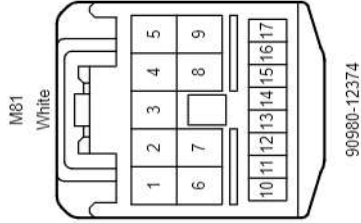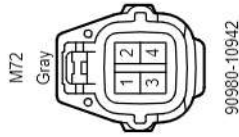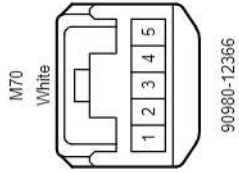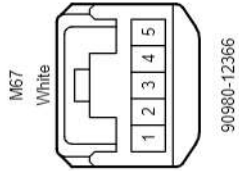


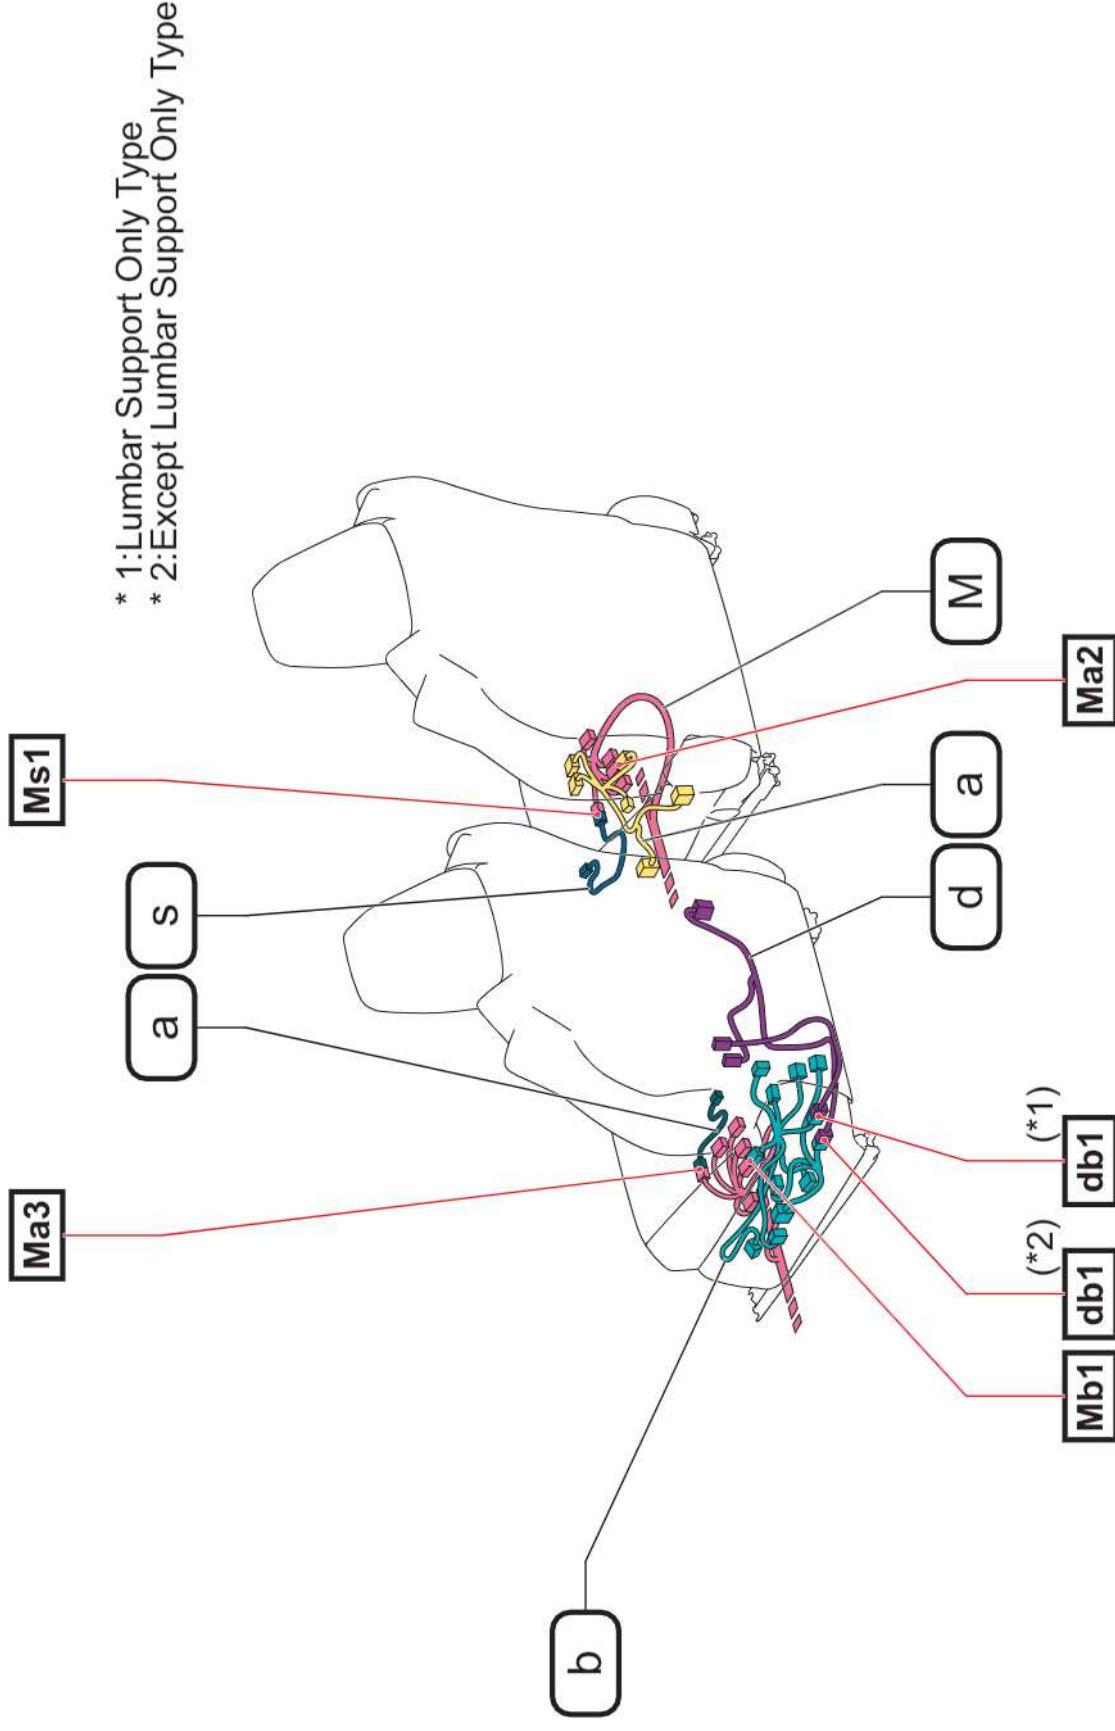

Wire and Wire in Seat (LHD)

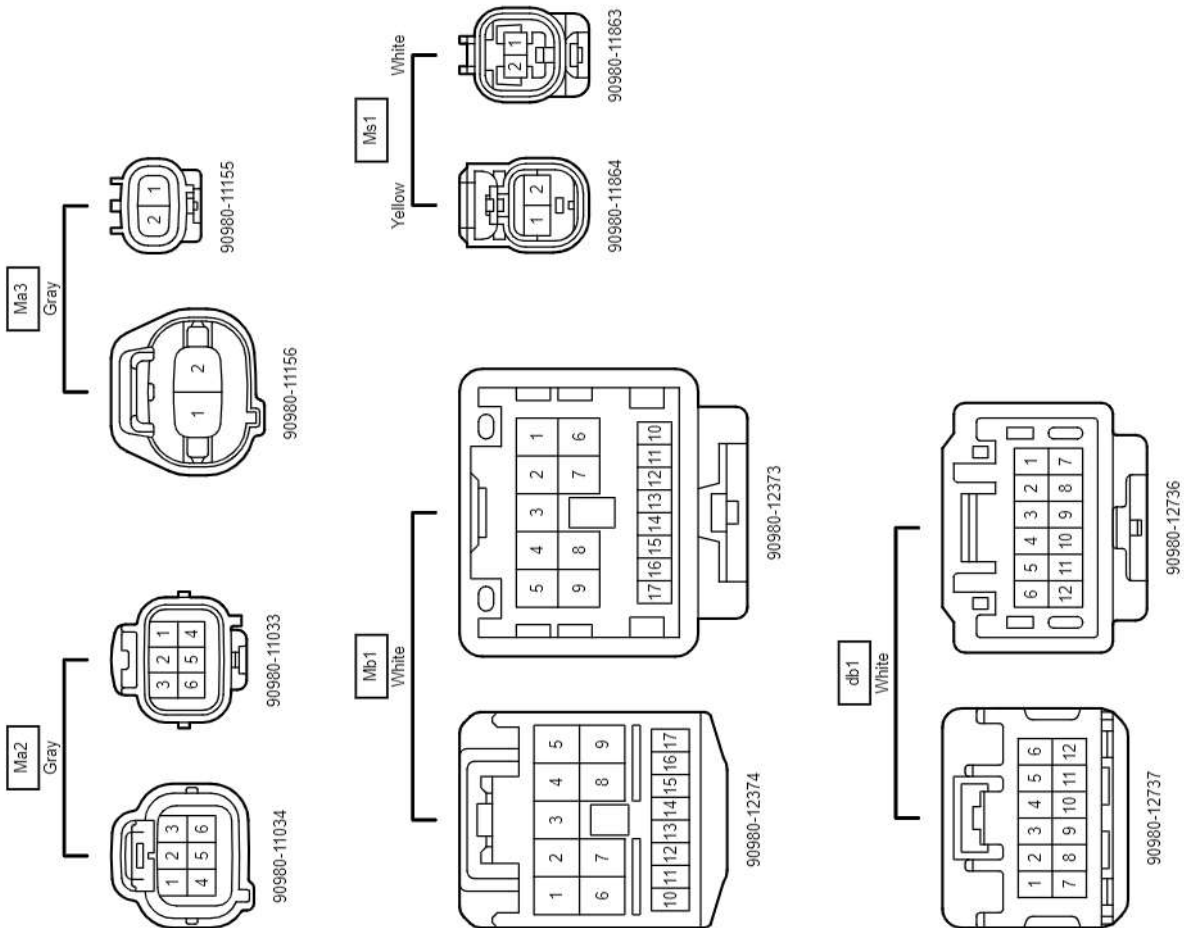

















- * 1:Europe
- * 2:Australia
- * 3:Lumbar Support Only Type
- * 4:Except Lumbar Support Only Type

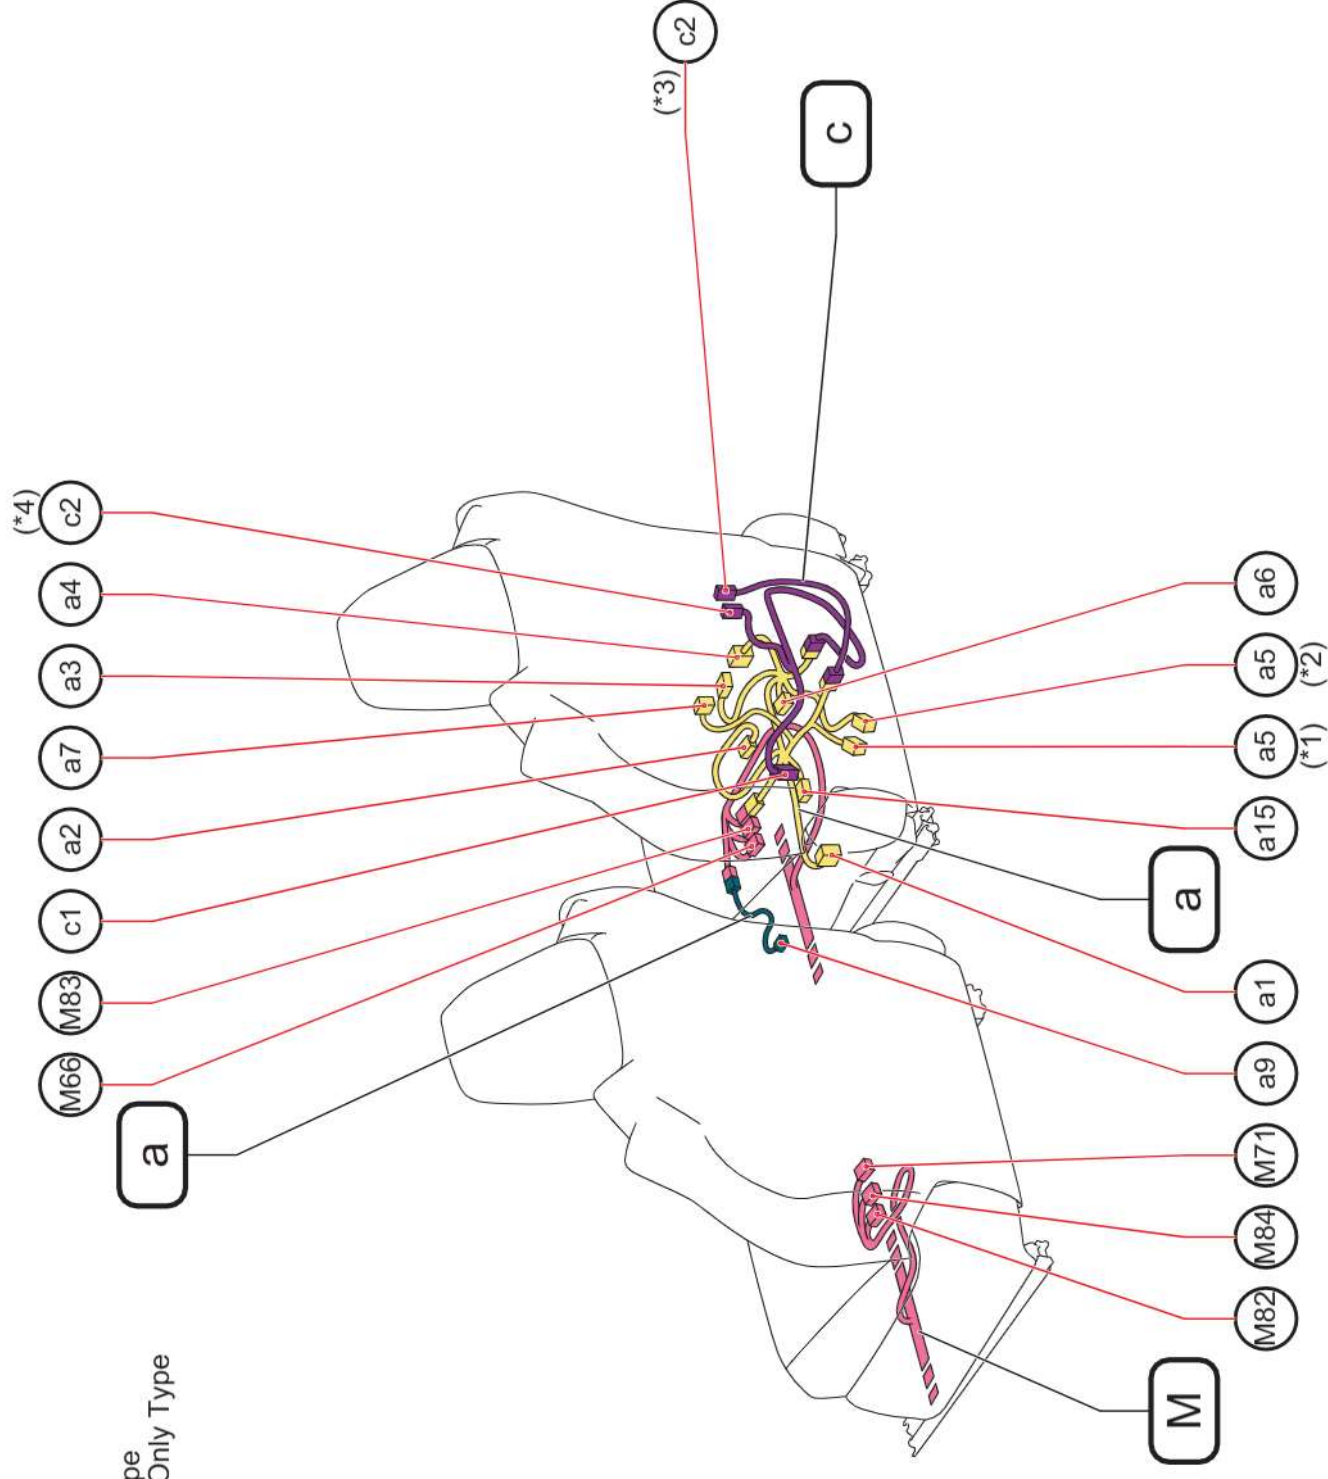


Position of Parts in Seat (RHD)

M66	Front Seat Inner Belt Assembly RH
M71	Front Seat Inner Belt Assembly LH
M82	Front Seat Cushion Heater Assembly LH
M83	Front Seat Airbag Assembly RH
M84	Front Seat Airbag Assembly LH
a1	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
a2	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
a3	Front Power Seat Slide Position Motor RH (Front Seat Adjuster Assembly RH)
a4	Front Power Seat Switch RH
a5	Front Seat Cushion Heater Assembly RH
a6	No. 27 Junction Connector
a7	Front Lumbar Power Seat Switch RH
a9	Seat Position Airbag Sensor
a15	Condenser
c1	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
c2	Front Power Seat Lumbar Support Motor RH (Lumbar Support Adjuster Assembly RH)

    Position of Parts in Seat (RHD)

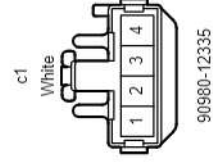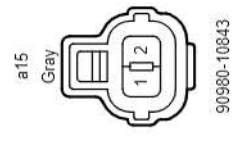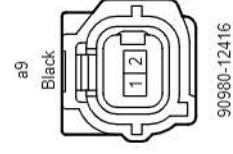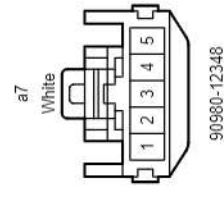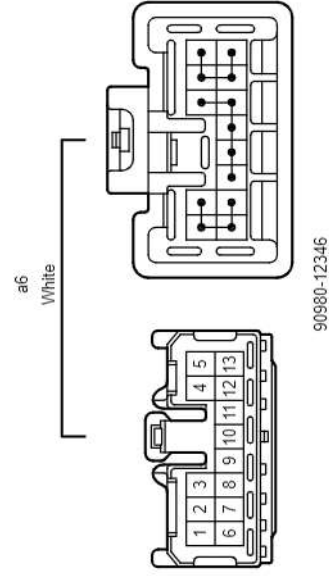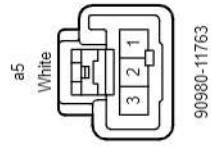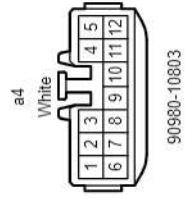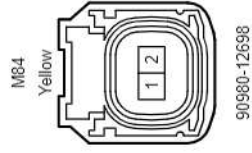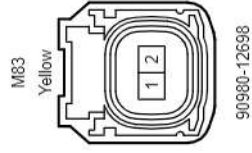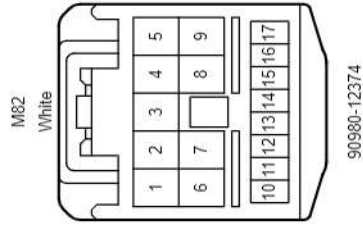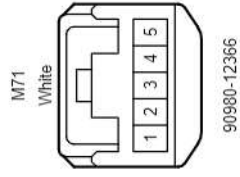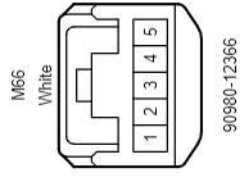

- * 1:Lumbar Support Only Type
- * 2:Except Lumbar Support Only Type

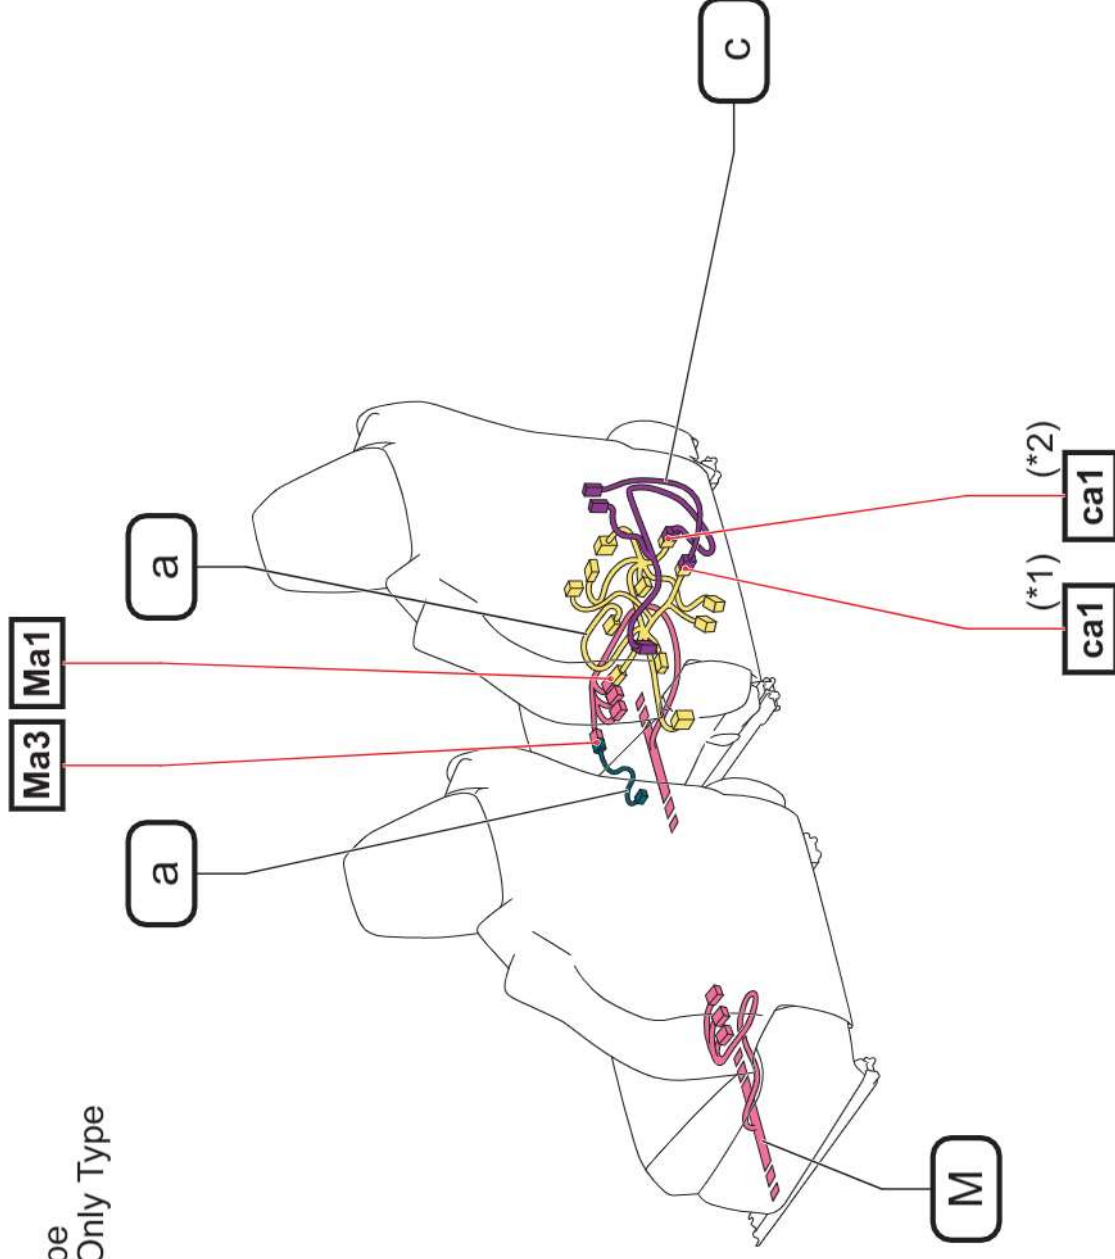

Wire and Wire in Seat (RHD)

