

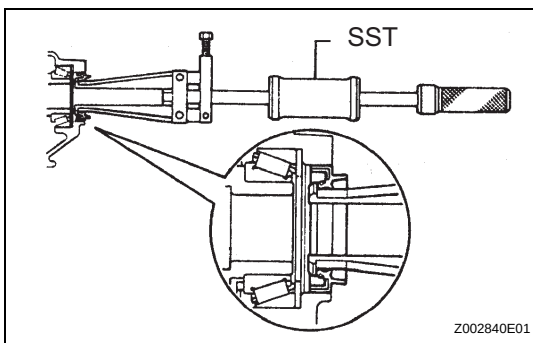


REMOVAL

1. REMOVE FRONT WHEELS
2. REMOVE ENGINE UNDER COVER RH
3. REMOVE ENGINE UNDER COVER LH
4. DRAIN AUTOMATIC TRANSAXLE FLUID
 - (a) Remove the drain plug, gasket and drain ATF.
 - (b) Install a new gasket and drain plug.
Torque: 18 N*m (180 kgf*cm, 13 ft.*lbf)
5. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH
HINT:
(See page [DS-5](#))
6. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH
HINT:
(See page [DS-5](#))
7. REMOVE TRANSAXLE HOUSING OIL SEAL (for RH Side)
 - (a) Using SST, pull out the oil seal.
SST 09308-00010

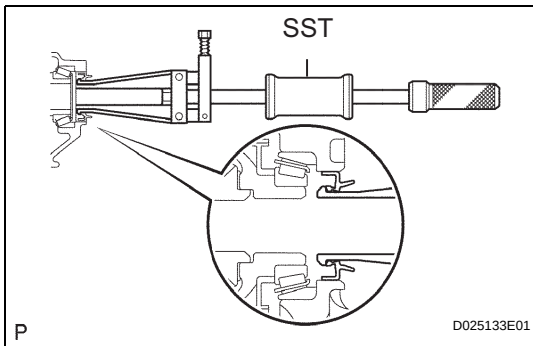


8. REMOVE TRANSAXLE CASE OIL SEAL (for LH Side)
 - (a) Using SST, pull out the oil seal.
SST 09308-00010

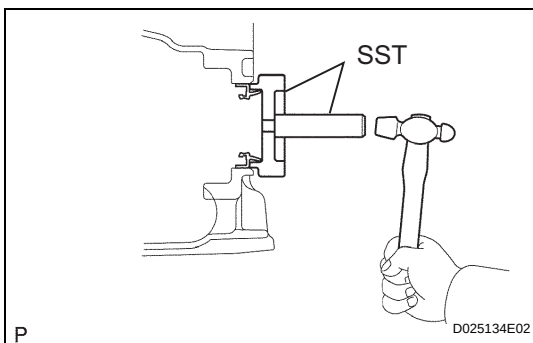

INSTALLATION

1. INSTALL TRANSAXLE HOUSING OIL SEAL (for RH Side)
 - (a) Using SST and a hemmer, drive in a new oil seal.
SST 09350-32014 (09351-32130, 09351-32150)
Oil seal drive in depth:
1.5 to 2.5 mm (0.059 to 0.098 in.)
 - (b) Coat the lip of the oil seal with MP grease.

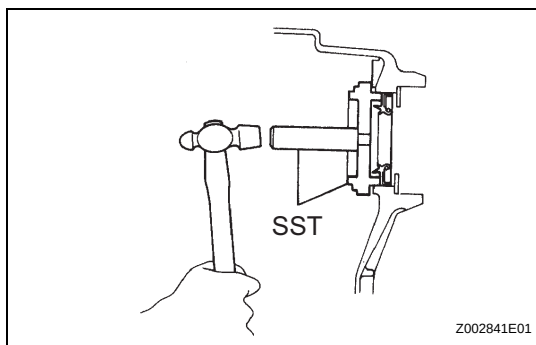

2. **INSTALL TRANSAXLE CASE OIL SEAL (for LH Side)**
 - (a) Using SST and a hammer, drive in a new oil seal.
SST 09350-32014 (09351-32111, 09351-32130)
Oil seal drive in depth:
4.8 to 5.8 mm (0.189 to 0.228 in.)
 - (b) Coat the lip of the oil seal with MP grease.
3. **INSTALL FRONT DRIVE SHAFT ASSEMBLY LH**
HINT:
(See page [DS-12](#))
4. **INSTALL FRONT DRIVE SHAFT ASSEMBLY RH**
HINT:
(See page [DS-12](#))
5. **INSTALL ENGINE UNDER COVER LH**
6. **INSTALL ENGINE UNDER COVER RH**
7. **INSTALL FRONT WHEELS**
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
8. **ADD AUTOMATIC TRANSAXLE FLUID**
Fluid type:
T-IV
Capacity:
3.0 liters (3.2 US qts, 2.6 Imp.qts)
9. **INSPECT AUTOMATIC TRANSAXLE FLUID**
HINT:
(See page [AX-71](#))
10. **INSPECT AND ADJUST FRONT WHEEL ALIGNMENT**
HINT:
(See page [SP-4](#))
11. **CHECK ABS SPEED SENSOR SIGNAL (w/ ABS)**
HINT:
 - with VSC (See page [BC-7](#))
 - without VSC (See page [BC-83](#))