


INTERMEDIATE SHAFT

COMPONENTS

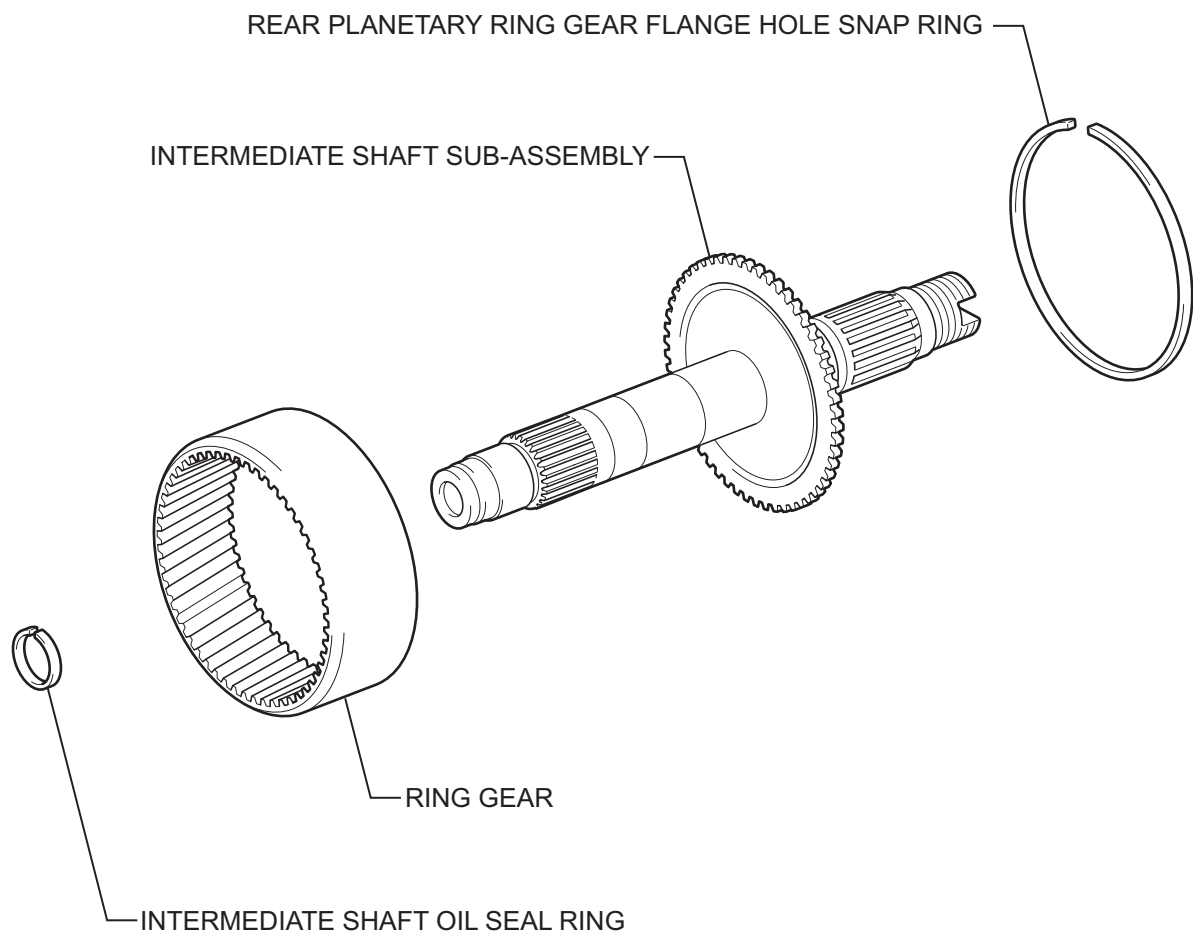


AX

DISASSEMBLY


1. REMOVE INTERMEDIATE SHAFT OIL SEAL RING

- (a) Remove the intermediate shaft oil seal ring from the intermediate shaft sub-assembly.

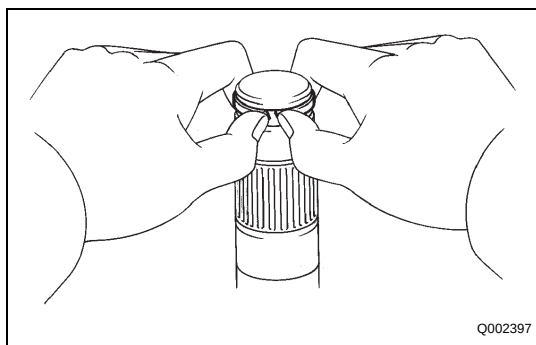


2. REMOVE REAR PLANETARY RING GEAR FLANGE HOLE SNAP RING

- (a) Using a screwdriver, remove the rear planetary ring gear flange hole snap ring from the intermediate shaft sub-assembly.

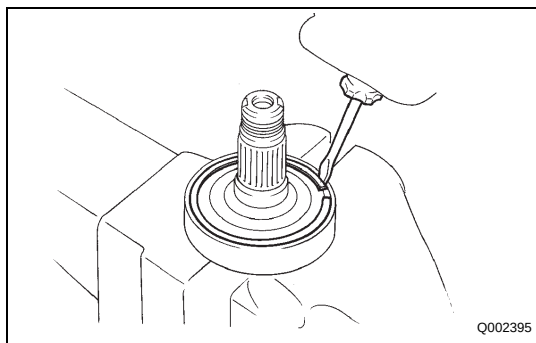

- (b) Remove the intermediate shaft from the ring gear.

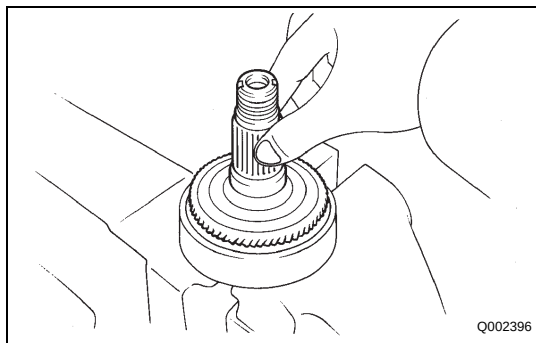


AX


REASSEMBLY


1. INSTALL REAR PLANETARY RING GEAR FLANGE HOLE SNAP RING

- (a) Install the intermediate shaft to the ring gear.

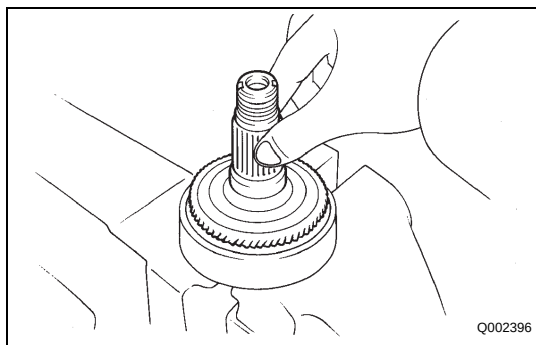

- (b) Using a screwdriver, install the rear planetary ring gear flange hole snap ring to the intermediate shaft sub-assembly.

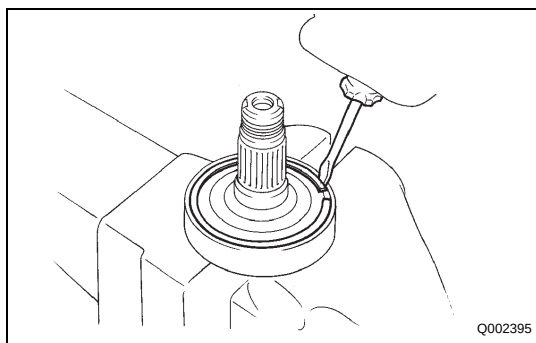

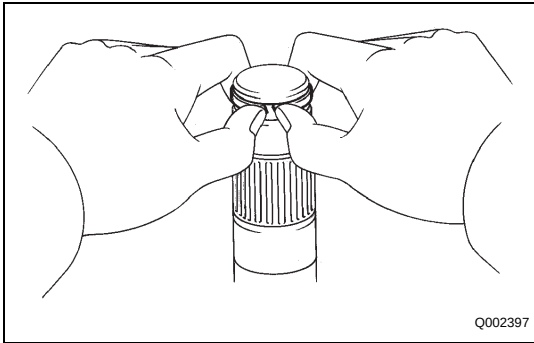**2. INSTALL INTERMEDIATE SHAFT OIL SEAL RING**

- (a) Install the intermediate shaft oil seal ring to the intermediate shaft sub-assembly.