

DIAGNOSTIC TROUBLE CODE CHART

1. DTCS FOR OCCUPANT CLASSIFICATION SYSTEM

If a trouble code is displayed during the DTC check, check the circuit listed for the code in the table below (proceed to the page listed for that circuit).

RS OCCUPANT CLASSIFICATION SYSTEM

DTC Code	Detection Item	Trouble Area	See page
B1771	Passenger Side Buckle Switch Circuit Malfunction	1. Front seat inner belt assembly RH (Buckle switch RH) 2. Occupant classification ECU 3. Floor wire (*1) 4. Instrument panel wire No. 3 (*2)	RS-199
B1780	Front Occupant Classification Sensor LH Circuit Malfunction	1. Front seat back assembly RH (front occupant classification sensor LH) 2. Occupant classification ECU 3. Front seat wire RH	RS-206
B1781	Front Occupant Classification Sensor RH Circuit Malfunction	1. Front seat back assembly RH (front occupant classification sensor RH) 2. Occupant classification ECU 3. Front seat wire RH	RS-213
B1782	Rear Occupant Classification Sensor LH Circuit Malfunction	1. Front seat back assembly RH (rear occupant classification sensor LH) 2. Occupant classification ECU 3. Front seat wire RH	RS-220
B1783	Rear Occupant Classification Sensor RH Circuit Malfunction	1. Front seat back assembly RH (front occupant classification sensor RH) 2. Occupant classification ECU 3. Front seat wire RH	RS-227
B1785	Front Occupant Classification Sensor LH Collision Detection	1. Front seat back assembly RH (front occupant classification sensor LH) 2. Occupant classification ECU	RS-234
B1786	Front Occupant Classification Sensor RH Collision Detection	1. Front seat back assembly RH (front occupant classification sensor RH) 2. Occupant classification ECU	RS-238
B1787	Rear Occupant Classification Sensor LH Collision Detection	1. Front seat back assembly RH (rear occupant classification sensor LH) 2. Occupant classification ECU	RS-242
B1788	Rear Occupant Classification Sensor RH Collision Detection	1. Front seat back assembly RH (rear occupant classification sensor RH) 2. Occupant classification ECU	RS-246
B1790	Center Airbag Sensor Assembly Communication Circuit Malfunction	1. Occupant classification ECU 2. Center airbag sensor assembly 3. Floor wire (*1) 4. Instrument panel wire No. 3 (*2)	RS-250
B1793	Occupant Classification Sensor Power Supply Circuit Malfunction	1. Occupant classification sensors 2. Occupant classification ECU 3. Front seat wire RH	RS-257

DTC Code	Detection Item	Trouble Area	See page
B1795	Occupant Classification ECU Malfunction	1. Battery 2. ECU-B Fuse 3. Floor wire (*1) 4. Instrument panel wire No. 3 (*2) 5. Front seat inner belt assembly RH (Buckle switch RH) 6. Occupant classification ECU	RS-264
B1796	Sleep Operation Failure of Occupant Classification ECU	1. Occupant classification ECU	RS-267

*1: with Side and curtain shield airbag

*2: without Side and curtain shield airbag