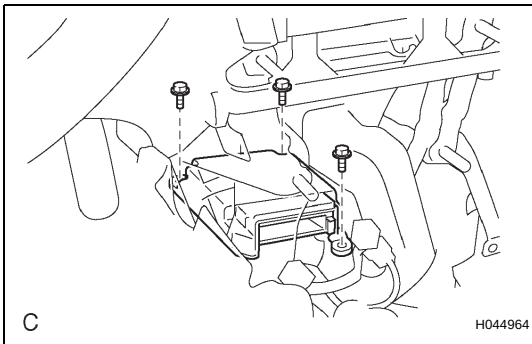


REMOVAL

1. **PRECAUTION**
CAUTION:
Be sure to read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent the airbag working.
3. **REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER** (See page [IP-9](#))
4. **REMOVE INSTRUMENT CLUSTER FINISH PANEL** (See page [IP-6](#))
5. **REMOVE INSTRUMENT PANEL BOX** (See page [IP-7](#))
6. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER** (See page [IP-7](#))
7. **REMOVE CENTER AIRBAG SENSOR ASSEMBLY**
 - (a) Disconnect the holder (with connectors).
 - (b) Remove the 3 bolts and the center airbag sensor assembly.

RS

RS

INSTALLATION

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

- (c) Temporarily install the center airbag sensor assembly with the 3 bolts.

NOTICE:

- If the center airbag sensor assembly has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the center airbag sensor assembly, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

- (d) Tighten the 3 bolts to the specified torque.
Torque: 17.5 N*m (179 kgf*cm, 13 ft.*lbf)
- (e) Check that there is no looseness in the installation parts of the center airbag sensor assembly.
- (f) Connect the holder (with connectors).
- (g) Check that the waterproof sheet is properly set.

2. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page [IP-15](#))

3. INSTALL INSTRUMENT PANEL BOX (See page [IP-15](#))

4. INSTALL INSTRUMENT CLUSTER FINISH PANEL (See page [IP-15](#))

5. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER (See page [IP-16](#))

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

7. INITIALIZATION

- (a) Perform initialization.

HINT:

Some systems need initialization when disconnecting the cable from the negative battery terminal.

8. INSPECT SRS WARNING LIGHT

- (a) Inspect the SRS warning light (See page [RS-26](#)).

