

## REMOVAL

1. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-5](#))
2. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-5](#))
3. REMOVE REAR DOOR OPENING TRIM RH
4. REMOVE REAR DOOR OPENING TRIM LH
5. REMOVE TONNEAU COVER ASSEMBLY
6. REMOVE DECK BOARD NO. 2
7. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-6](#))
8. REMOVE DECK FLOOR BOX REAR (See page [IR-6](#))
9. REMOVE LUGGAGE COMPARTMENT TRAY (See page [IR-6](#))
10. REMOVE BACK DOOR WEATHERSTRIP (See page [IR-7](#))
11. REMOVE DECK TRIM COVER REAR
12. REMOVE REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY

13. REMOVE REAR SEAT INNER BELT ASSEMBLY

## INSTALLATION

1. INSTALL REAR SEAT INNER BELT ASSEMBLY
  - (a) Install the floor anchor and rear seat belt assembly inner with the bolt, as shown in the illustration.  
**Torque: 41.2 N\*m (420 kgf\*cm, 30 ft.\*lbf)**  
**NOTICE:**  
 Do not make the anchor part run onto the protruding part of the floor panel.
2. INSTALL REAR SEAT CUSHION ASSEMBLY AND REAR SEATBACK ASSEMBLY
3. INSTALL DECK TRIM COVER REAR
4. INSTALL BACK DOOR WEATHERSTRIP
5. INSTALL LUGGAGE COMPARTMENT TRAY
6. INSTALL DECK FLOOR BOX REAR
7. INSTALL DECK BOARD SUB-ASSEMBLY
8. INSTALL DECK BOARD NO. 2
9. INSTALL TONNEAU COVER ASSEMBLY
10. INSTALL REAR DOOR OPENING TRIM LH
11. INSTALL REAR DOOR OPENING TRIM RH
12. INSTALL REAR DOOR SCUFF PLATE LH
13. INSTALL REAR DOOR SCUFF PLATE RH

