


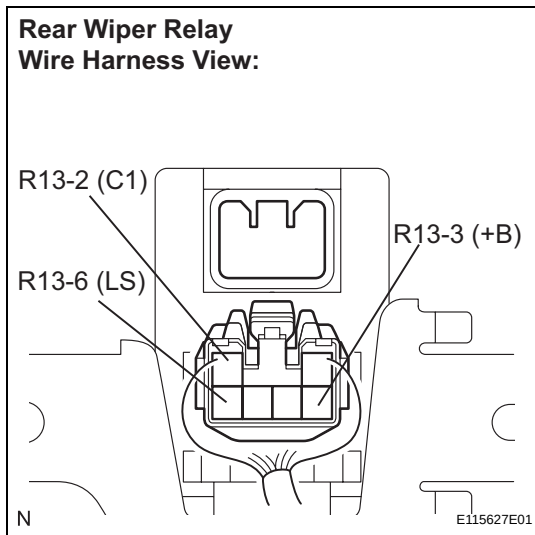

WIPER RELAY

ON-VEHICLE INSPECTION

1. INSPECT REAR WIPER RELAY ASSEMBLY

- Disconnect the rear wiper relay connector.
- Measure the voltage according to the values(s) in the table below.

Standard voltage

Tester Connection	Condition	Specified Condition
R13-3 (+B) - Body ground	Ignition switch OFF	Below 1 V
R13-3 (+B) - Body ground	Ignition switch ON	10 to 14 V

- Measure the resistance according to the values(s) in the table below.

Standard resistance

Tester Connection	Wiper Switch Position	Specified Condition
R13-6 (LS) - Body ground	LO (ON)	Below 1 Ω
R13-2 (C1) - Body ground	INT	Below 1 Ω

- Reconnect the rear wiper relay connector.
- Turn the ignition switch to the ON position.
- Make sure that the glass hatch is closed.
- Measure the voltage according to the values(s) in the table below.

Standard voltage

Tester Connection	Wiper Switch Position	Specified Condition
R13-6 (LS) - Body ground	OFF	9.5 V or higher
R13-3 (+B) - R13-4 (LM)	LO (ON)	Below 0.5 V
R13-6 (LS) - Body ground	LO (ON)	Below 0.5 V
R13-2 (C1) - Body ground	INT	Below 0.5 V
R13-4 (LM) - R13-5 (SM)	LO (ON) → OFF (during wiper operation)	Below 0.5 V

